

802.11g USB Wireless Adapter

Installation Guide

Notice to Users

©2005 2Wire, Inc. All rights reserved. This manual in whole or in part, may not be reproduced, translated, or reduced to any machine-readable form without prior written approval.

2WIRE PROVIDES NO WARRANTY WITH REGARD TO THIS MANUAL, THE SOFTWARE, OR OTHER INFORMATION CONTAINED HEREIN AND HEREBY EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH REGARD TO THIS MANUAL, THE SOFTWARE, OR SUCH OTHER INFORMATION, IN NO EVENT SHALL 2WIRE, INC. BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES, WHETHER BASED ON TORT, CONTRACT, OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL, THE SOFTWARE, OR OTHER INFORMATION CONTAINED HEREIN OR THE USE THEREOF.

2Wire, Inc. reserves the right to make any modification to this manual or the information contained herein at any time without notice. The software described herein is governed by the terms of a separate user license agreement.

2Wire, and the 2Wire logo are registered trademarks of 2Wire, Inc. All other trademarks are trademarks of their respective owners.

5100-000245-001 Rev B

2Wire 802.11g Wireless USB Adapter

2Wire's 802.11g Wireless USB Adapter is a wireless networking device that is connected to a USB port on your computer using a USB cable. Wireless networking provides the same connectivity as Ethernet without the wires. Expanding or redesigning your network is easy, and unlike cabled Ethernet, the 2Wire 802.11g Wireless USB Adapter allows users to roam throughout the home or office while remaining connected to the local area network (LAN).

Follow these steps to complete the adapter installation:

- Step 1 Install the 2Wire 802.11g Wireless USB Adapter.
- Step 2 Install the adapter driver from your 2Wire Wireless Installation CD.

The following sections give you detailed instructions for completing each step.

Step 1: Install the 2Wire 802.11g Wireless USB Adapter

The supplied USB cable has a different type of USB connector on each end.



Series A connector. The Series A USB connector plugs into the USB port on your computer.



Mini Series B connector. The Series B USB connector plugs into a USB device.

To install the 2Wire 802.11g Wireless USB Adapter, simply

connect the adapter to an available USB port on your computer using the supplied USB cable.



STEP 2: Install the 2Wire 802.11g Wireless USB Adapter Driver

Installing Drivers For Windows XP

- **1.** Power on your computer. Insert your 2Wire Wireless Installation CD into your CD-ROM drive.
- 2. When the Found New Hardware Wizard window opens, select Install the software automatically (Recommended) and click Next to continue.



3. The driver installs.

- **4.** When the Completing the Found New Hardware Wizard opens, click **Finish**.
- **5.** Continue to "Appendix A: Wireless Adapter Configuration" on page 12 to configure the adapter to work with your 2Wire gateway.



Installing Drivers for Windows 2000

1. Power on your computer. Insert your 2Wire Wireless Installation CD into the CD-ROM drive.

- 2. When the Found New Hardware Wizard window opens, click **Next** to continue.
- 3. The next window prompts you to install device drivers. Select Search for a suitable driver for my device (recommended), and click Next.



4. When the Locate Driver Files window opens, deselect the Floppy disk drives checkbox, select the CD-ROM drives checkbox, and click Next.

5. When the Driver Files Search Results window opens, click **Next**.

New Hor	rdware Wiza	ard				
	iver Files do you want W	/indows to searc	th for driver	files?		
						1
Seach	for driver files fi	or the following	hardware d	levice:		
Z.	USB Device					
		or suitable drive stional search los			e on your compute y.	s and in
		ick Next. If you a r CD before clic!		ng on a flop	py disk or CD-RC	M drive,
Optione	al search locati	ions:				
	Toppy gisk driv					
	D-ROM drives					
	jpecily a locati					
E 5						
				: <u>B</u> ack	Next>	Cancel
				: <u>R</u> ack	Next >	Cancel
				: Back	Next>	Cancel
	rdware Wiza			(<u>B</u> ack	Hext >	Cancel
iver File	s Search Re	nuk	_			Cancel
iver File	s Search Re		_			Cancel
iver File The wiz	s Search Re ard has finishe	esuits ed searching for	diver files l	or your han		Cancel
iver File The wiz	s Search Re ard has finishe ard found a dri	esults ad searching for iver for the follow	diver files l	or your han		Cancel
iver File The wiz	s Search Re ard has finishe	esults ad searching for iver for the follow	diver files l	or your han		Cancel
iver File The wiz	s Search Re ard has finishe ard found a dri	esults ad searching for iver for the follow	diver files l	or your han		Cancel
The niz	a Search Re ard has finishe ard found a dri USB Device	esuits of searching for iver for the follow	driver files I	ior your han		200
The niz	a Search Re ard has finishe ard found a dri USB Device	esuits of searching for iver for the follow	driver files I	ior your han	dware device.	242
The niz	s Search Re ard has finishe ard found a dri USB Device rs found a drive	esuits d searching for iver for the follow , er for this device	driver files I	ior your han	dware device.	200
The niz	a Search Re ard has finishe ard found a dri USB Device	esuits d searching for iver for the follow , er for this device	driver files I	ior your han	dware device.	247
The niz	s Search Re ard has finishe ard found a dri USB Device rs found a drive	esuits d searching for iver for the follow , er for this device	driver files I	ior your han	dware device.	247
The niz	s Search Re ard has finishe ard found a dri USB Device rs found a drive	esuits d searching for iver for the follow , er for this device	driver files I	ior your han	dware device.	200
The niz	s Search Re ard has finishe ard found a dri USB Device rs found a drive	esuits d searching for iver for the follow , er for this device	driver files I	ior your han	dware device.	200
The niz	s Search Re ard has finishe ard found a dri USB Device rs found a drive	esuits d searching for iver for the follow , er for this device	driver files I	ior your han	dware device.	200
The niz	s Search Re ard has finishe ard found a dri USB Device rs found a drive	esuits d searching for iver for the follow , er for this device	driver files I	ior your han	dware device.	242

- 6. When the Completing the Found New Hardware Wizard opens, click **Finish**. Your installation is complete.
- 7. Continue to "Appendix A: Wireless Adapter Configuration" on page 12 to configure the adapter to work with your 2Wire gateway.

Installing Drivers for Windows ME

- **1.** Power on your computer. Insert your 2Wire Wireless Installation CD into your CD-ROM drive.
- 2. When the Add New Hardware Wizard window opens, select Automatic search for a better driver (Recommended), and click Next.





3. After the driver files are copied, click **Finish**.

- **4.** If the System Settings Change window opens, click **Yes** to restart your computer. Your installation is complete.
- **5.** Continue to "Appendix A: Wireless Adapter Configuration" on page 12 to configure the adapter to work with your 2Wire gateway.

Add New Hardware Wo	2440 24/19 USB Weekss LAN Card
	< Back Finish Cancel
9	Amoge III Letting up your new hardware, you must restart your computer and to restart your computer new? Yes No

Installing Drivers for Windows 98 SE

- **1.** Power on your computer. Insert your 2Wire Wireless Installation CD into the CD-ROM drive.
- 2. When the Add New Hardware Wizard opens, click **Next** to continue.

3. When the next window opens, select Search for the best driver for your device (Recommended), and click Next.





4. Deselect the Floppy disk drives checkbox, select the CD-ROM drive checkbox, and click Next.

5. Windows locates the best driver for your device. Click **Next** to continue.





6. After the drivers are copied, click Finish.

- **7.** If the System Settings Change window opens, click **Yes** to restart your computer. Your installation is complete.
- 8. Continue to "Appendix A: Wireless Adapter Configuration" on page 12 to configure the adapter to work with your 2Wire gateway.

Add Hom Hardware Wi	2-2 2 2 Web 802.11g USB Webers LAN Card Wedwe has finished installing the software that your new hardware device regards.				
	CERS Finish Cancel				
System Settings Change					
9	tting up your new hardware, you must restart your computer. It to restart your computer now?				
	Ye: No				

Appendix A: Wireless Adapter Configuration

Now that you have installed the drivers for your wireless adapter, you must configure it to work with the 2Wire gateway. A wireless network requires a network name (SSID) and an encryption key to operate. Every 2Wire wireless gateway comes with a unique network name and encryption key printed on the bottom of the unit.

1. With the 2Wire Wireless Installation CD in your CD-ROM drive, click **Run** from the Windows Start button. In the Open field, enter D:\setup.exe and click **OK**.

If your CD-ROM drive is not located on D:, substitute the appropriate letter (for example, E:\setup.exe).

2. When the Driver and Utilities program page displays, click the **Configure 2Wire Wireless Adapter** button.

 Enter the serial number and encryption key from your 2Wire wireless gateway, then click the Begin Wireless Configuration button to configure your adapter.

2Wire Wireless Configuration Utility	×
Please enter the following two numbers located on the sticker on the bottom of your 2 wire gateway as shown and click. "Begin Wireless Configuration"	Bottom View of ZWire Gateway
Enter Serial Number	• 012345678099
Enter Wireless Encryption Key	• [98/8543210]
Begin Witeless Configuration	

Regulatory Information

FCC Statement

This device has been tested and complies with the specifications for a Class B digital device, pursuant to Part 15 of the FCC rules. These rules are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which is found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.