



AT&T IR U-verse TV Remote Control User Guide

Installing Batteries

The remote control requires two AA size (1.5V) Alkaline batteries to work.

Tips: replace the batteries every nine months for optimum performance.

1. On the back of the remote control, press the battery cover tab forward, lift and remove the battery cover.
2. Insert two (2) AA-size batteries, matching the + and - symbols with the battery pictures.
3. Put the battery cover back on and test the remote control by pressing the AT&T key. The AT&T key should light up to indicate that batteries are inserted properly.

Controlling Other Devices

In order to control other devices with your U-Verse TV Remote Control, you need to tell the remote control what types of devices you have. Section 1 guides you through the steps needed to do this. When you complete Section 1, the volume and channels will always work on the U-Verse TV Receiver no matter what mode you are in. If you want to change this or allow the POWER key to affect multiple devices then you can also follow the steps in Section 2. If you'd like to reset any of the settings then you can go to Sections 3 and 4.

1. Programming the remote to control other devices

To use the U-verse TV remote control for your other devices, you will need to program one or more of the TV, DVD or AUX buttons at the top of the re-

mote control. There are two ways to do this. If your device is listed in the Manufacture Code List at the end of this Manual, you can use section A. If your device is not listed, you will need to use section B.

Note:
The AUX button may be programmed to operate a VCR, Home Theater In A Box (HTIB), Receiver or Amplifier.

A. Manually

Use the following steps to program the TV, DVD or AUX mode keys:

1. Power on the device you want to program
2. Locate the 4-digit set-up code for the device you want to program from the Manufacture Code List for these devices there will be codes for all components of the combination unit. They can be distinguished as follows:
 - TV codes start with a "1"
 - DVD codes start with a "2"
 - AUX codes start with a "3"
3. For some combination devices, the original remote control may be required to switch between the components.

Note: If you are interrupted while you are programming, the remote control may time-out before you complete the code set-up and you will need to start over. This is indicated by a red flash of the mode keys.

Now that your devices are programmed, you can press the appropriate mode key on the remote control to work with the selected device. To use the remote control for your U-verse TV Receiver again, press the AT&T mode key.

Combination Devices Note: If you have an integrated or combination unit, such as a TV/DVD unit, each component of the unit needs to be programmed separately. In the Manufacture Code List for these devices there will be codes for all components of the combination unit. To use the remote control for your AT&T U-verse TV Receiver again, press the AT&T mode key.

Note:

- If any other key is pressed except PLAY, ENTER, POWER, EXIT, REW, FF, or number keys 1 to 4, the selected mode key will give a long red flash (error message) and the remote control will return to normal operation and you will need to start over.

- If you are interrupted while you are programming, the remote control may time-out before you complete the code set-up and you will need to start over. This is indicated by a red flash of the mode keys.

B. Using the Automatic Search

You can search the remote control memory for your 4 digit manufacture device code. You will need to use this function if the code for your device is not listed in the Manufacture Code List.

1. Turn on the device you wish to program
2. Point the remote control at the device

3. Press and hold the appropriate mode key you want to assign to this device (TV, DVD or AUX) on the remote control

- If the mode key flashes three times, then a correct code has been entered.
- If the mode key gives a long flash, then an invalid code has been entered. Start over at step 3.
- If all the mode keys give a long flash, then the remote control has timed-out. Start over at step 3

4. While holding the mode key, press the OK key

- All the mode keys should flash twice
- You'll now have 10 seconds to start step 6

5. Enter the appropriate 4-digit set-up code for your device (from the Manufacture Code List) by pressing the number keys (0-9) on the remote control

- If the mode key flashes three times, then a correct code has been entered.
- If the mode key gives a long flash, then an invalid code has been entered. Start over at step 3.
- If all the mode keys give a long flash, then the remote control has timed-out. Start over at step 3

6. Point the remote control at the programmed device and press the power key once

- The selected mode key will flash twice indicating correct entry
- The device should turn off
- If it does not turn off, repeat steps 2 through 6 trying each code for your brand until you find the correct code

7. Repeat steps 1 through 7 to program another device

1 for VCR
2 for Receiver/Tuner
3 for Amplifier

4 for Home Theater In A Box (HTIB)

- The AUX mode keys will flash twice indicating correct entry

5. Now press the FF button multiple times until the device turns off
6. Press the ENTER key (bottom right) to save the code on the remote control
7. Check to make sure the code works by pressing the mode key, then the power button, to turn the device back on. If this does not work, start again at step 2.

11. Now that your devices are programmed, you can press the appropriate mode key on the remote control to work with the selected device. To use the remote control for your U-verse TV Receiver again, press the AT&T mode key.

Note:

- If any other key is pressed except PLAY, ENTER, POWER, EXIT, REW, FF, or number keys 1 to 4, the selected mode key will give a long red flash (error message) and the remote control will return to normal operation and you will need to start over.

- If you are interrupted while you are programming, the remote control may time-out before you complete the code set-up and you will need to start over. This is indicated by a red flash of the mode keys.

2. Setting up your Volume, Channel and Power Options

The default for your power, volume and channel controls send the codes to the U-verse TV receiver no matter what mode you are in. Thus, in DVD mode, the volume still controls the U-verse TV receiver, etc. If you would like to change this, follow these instructions:

A. Volume Control Set-Up Options

The volume commands are always sent to the U-verse TV receiver until the TV mode key is programmed. Then the volume commands are sent to the TV from all mode keys.

If you'd like the volume commands to still be sent to just one device, but that it be a different device (for example a home theater setup) then follow the instructions in Section I. If you'd like the volume commands sent to different devices depending on which mode you are in then go to Section II.

There are two ways you can change this: I) Have channel commands always go to a single device other than the U-verse TV receiver; II) Have channel commands go to different devices when in different modes (e.g., When in TV mode the channel commands go to the TV, when in DVD

mode the channel commands go to the DVD player, etc.). See the appropriate section for each.

2. While holding the AT&T mode key, press the OK key
3. Release both the AT&T key and the OK key
 - All the mode keys will flash twice indicating programming mode

4. Now press the FF button multiple times until the device turns off
5. Press the ENTER key (bottom right) to save the code on the remote control

6. Check to make sure the code works by pressing the mode key, then the power button, to turn the device back on. If this does not work, start again at step 2.

7. Press the mode key that you want to always receive the volume commands

8. Enter 955 by pressing the number keys on the remote control

9. The volume commands will now go to the selected device no matter what mode you are in.

II. Volume Control Depends on Device Selected

The volume setting can also be re-configured to independently control the volume associated with each device. (e.g. In AUX mode the receiver controls the audio; In TV mode the TV controls the audio)

1. Press and hold the AT&T key on the remote control

2. While holding the AT&T mode key, press the OK key

3. Release both the AT&T key and the OK key

4. Enter 966 by pressing the number keys on the remote control

5. The volume commands will now go to the selected device no matter what mode you are in.

II. Channel Control Depends on Device Selected

1. Press and hold the AT&T key on the remote control

2. While holding the AT&T mode key, press the OK key

3. Release both the AT&T key and the OK key

4. Enter 977 by pressing the number keys on the remote control

5. The channel commands will now go to the selected device no matter what mode you are in.

B. Channel Selection Set-Up Option

By default the remote control will always send channel commands to the U-verse TV receiver until the TV mode key is programmed. Then the volume commands are sent to the TV from all mode keys.

If you'd like the volume commands to still be sent to just one device, but that it be a different device (for example a home theater setup) then follow the instructions in Section I. If you'd like the volume commands sent to different devices depending on which mode you are in then go to Section II.

C. Power Control Set-Up Options

By default, the POWER key only powers on or places your U-verse TV receiver in standby mode. Once you have programmed the TV mode key, the TV and U-verse TV receiver will both be powered on/off simultaneously. You also have the option to turn on/off TV, DVD and AUX mode devices individually by pressing the applicable mode key then the POWER key.

key on the remote control mode the channel commands go to the DVD player, etc.). See the appropriate section for each.

I. Channel Always Controls the Same Device

1. Press and hold the AT&T key on the remote control

2. While holding the AT&T mode key, press the OK key

3. Release both the AT&T key and the OK key
 - All the mode keys will flash twice indicating programming mode

4. Enter 955 by pressing the number keys on the remote control

5. The channel commands will now go to the selected device no matter what mode you are in.

I. To Have Multiple Devices Power Off with the Power Key

If you would like other devices to be powered on/off simultaneously with the POWER key, then follow these instructions for the additional devices (for a total of 4).

1. Press and hold the AT&T key on the remote control

2. While holding the AT&T mode key, press the OK key

3. Release both the AT&T key and the OK key
 - All the mode keys will flash twice indicating programming mode

4. Enter 966 by pressing the number keys on the remote control

5. The channel commands will now go to the selected device no matter what mode you are in.

II. Channel Control Depends on Device Selected

1. Press and hold the AT&T key on the remote control

2. While holding the AT&T mode key, press the OK key

3. Release both the AT&T key and the OK key
 - All the mode keys will flash twice indicating programming mode

4. Enter 977 by pressing the number keys on the remote control

5. The channel commands will now go to the selected device no matter what mode you are in.

B. Reassigning Your Mode Keys To Another Device

The TV, DVD and AUX keys are already set up to control specific devices:

TV key: TV & HDTV

DVD key: DVD

AUX key: VCR, Home

Theater In A Box (HTIB),

Receivers and Amplifiers

You may change these mode keys to operate another type of device. To do this, you must copy an existing mode key to the one you would like to change. For example, you have two DVD players and you'd like to use the AUX key for one of them. You would begin by programming one of the DVD players into the DVD mode key and then copy that to the AUX mode key. Then you reprogram the original DVD mode key to the other DVD player. Before beginning these steps, program the device you'd like to copy by following the steps in Section 1. Then use the steps below to copy the codes.

If you press any key other than the mode keys or ENTER, the AT&T key will give a long red flash and the remote control will return to normal operation. Should the remote control time-out before you complete the procedure you will need to start over.

If the devices that you have programmed to turn ON/OFF at the same time get out of sync so that some turn ON and others turn OFF, you will need to manually turn OFF the out of sync devices and then press the POWER key to turn them all back ON. It is important to point the remote directly toward the devices for this to work properly.

C. Power Control Set-Up Options

By default, the POWER key only powers on or places your U-verse TV receiver in standby mode. Once you have programmed the TV mode key, the TV and U-verse TV receiver will both be powered on/off simultaneously. You also have the option to turn on/off TV, DVD and AUX mode devices individually by pressing the applicable mode key then the POWER key.

simultaneously. You also have the option to turn on/off TV, DVD and AUX mode devices individually by pressing the applicable mode key then the POWER key.

S. Changing and Removing Codes

A. Mode Deactivation

To deactivate a mode key, follow these steps:

1. Press and hold the AT&T key on the remote control

2. While holding the AT&T mode key, press the OK key

3. Release both the AT&T key and the OK key
 - All the mode keys will flash twice indicating programming mode

4. Enter 966 by pressing the number keys on the remote control

5. The mode key that you want to always receive the volume commands

6. Enter 977 by pressing the number keys on the remote control

7. The mode key will flash three times indicating successful reassignment and return to normal operations

8. Press the AT&T key on the remote control

9. The mode key will flash three times indicating correct entry

10. Press the TV key on the remote control

11. The TV key will flash twice indicating correct entry

- 12

