 


## T760/T780 – CUSTOMIZING THE PRESET PROGRAMS

ASKO's EasyControl™ panel makes it simple to customize the preset programs to perfectly fit your laundry needs. You needn't worry about making an error

because you can easily restore the original program settings. (See page 9.)

### THE PRESET PROGRAMS



Before we tell you how to customize the preset programs, you need to review what these programs are. The table below lists the four preset programs and the pre-

programmed settings for each. To select a program, simply press one of the program buttons then press Start.

Preset Program	Dry Cycle	Dry Temp	Cooling Time	Buzzer	Anti-Crease
P1	Extra Dry	Normal	Normal <sup>(1)</sup>	On	1 hr.
P2	Dry	Normal	Normal	On	1 hr.
P3	Normal Dry	Normal	Normal	On	1 hr.
P4	Iron Dry	Normal <sup>(2)</sup>	Normal	On	1 hr.

NOTES: (1) The Normal cooling time is 20 minutes.


(2) Model T760 is preset for Low dry temperature.

**WARNING!** Some fabrics may not be able to withstand extremely hot temperatures. Please refer to the "Recommended Temperature Settings and Load Sizes" chart on page 4.

### CUSTOMIZING THE PROGRAMS

Below are the basic instructions for changing a preset program. The following page explains the menus and options and how to navigate through them.

1. Press the button for the preset program you want to change (P1–P4). The program you select will display in the lower left corner of the LED window.
2. Press MENU to display different program and option settings.
3. Press the Arrows to move forward or backward through the menu settings.
4. Press ENTER to choose your selection.

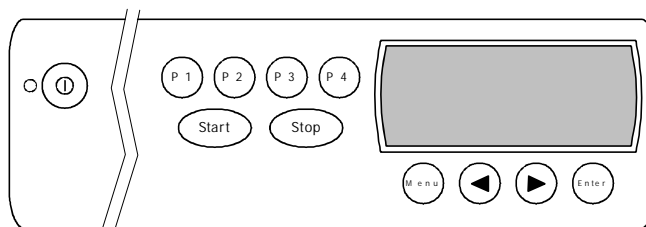

### THE PROGRAM MENU

The following table lists all of the programs on the Program menu as well as the settings and options available with each. It's a good idea to scan through the

menus a couple of times and familiarize yourself with the options before you make any changes. And remember, it's easy to restore the preset programs.

Programs	Available Options
Extra Dry	Normal Cooling (20 min.) or Quick Cooling (10 min.); Buzzer On/Off; 0–3 hr. Anti-crease; Normal or Low Temperature, 1–12 hr. Delay Start
Dry	Normal Cooling (20 min.) or Quick Cooling (10 min.); Buzzer On/Off; 0–3 hr. Anti-crease; Normal or Low Temperature, 1–12 hr. Delay Start
Normal Dry	Normal Cooling (20 min.) or Quick Cooling (10 min.); Buzzer On/Off; 0–3 hr. Anti-crease; Normal or Low Temperature, 1–12 hr. Delay Start
Iron Dry	Normal Cooling (20 min.) or Quick Cooling (10 min.); Buzzer On/Off; 0–3 hr. Anti-crease; Normal or Low Temperature, 1–12 hr. Delay Start
Air Fluff	5–90 min. cycle time; Buzzer On/Off; 0–3 hr. Anti-crease, 1–12 hr. Delay Start
Timed Dry	All drying programs; 5–90 min. cycle time; Normal Cooling (20 min.) or Quick Cooling (10 min.); Buzzer On/Off; 0–3 hr. Anti-crease; Normal or Low Temperature; 1–12 hr. Delay Start

## NAVIGATING THE MENUS

The following paragraphs explain how to navigate through the menus and change the preset programs. If you don't want to make changes in all of the menus, continue to press MENU until the one you do want to change displays.


To restore a preset program to its original settings, simply press the button for the preset program (P1–P4) you want to restore and hold it down while you press ENTER. The program will instantly revert to its original settings.

We recommend that you make two or three trial changes to understand how easy it is to customize these program.

**Remember, the first step to customizing a preset program is to press the button for the program you want to customize (P1–P4).**

### The Program Menu

The Program menu lets you set the dry program you prefer. You would also use this menu to set the machine for a Timed Dry or Air Fluff program. (See "Timed Dry and Air Fluff" on this page.)

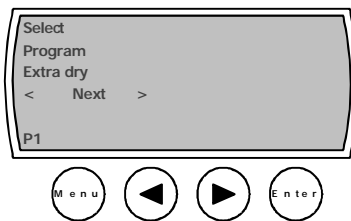


1. Use the Arrow buttons to move through the program choices (Extra Dry, Dry, Normal Dry, etc.)
2. When your preference displays, press ENTER. The LED will display the new program setting.

Press MENU to advance to the next menu or press START to begin the program.

### The Options Menu

This menu lets you set several options (such as, turning the buzzer off and on, setting the anti-crease run time, etc.) Only the options available with the program you selected will display. (See "The Program Menu" on page 7.)

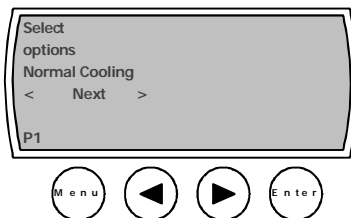


1. On this menu, you press ENTER to advance through the options, rather than pressing MENU.
2. Press an Arrow button to toggle between Off and On.
3. When your preference displays, press ENTER. The LED will display the new options.

Press MENU to advance to the next menu or press START to begin the program.

### The Temperature Menu


This menu lets you set the dry temperature. Only the temperatures available for the dry program you selected will display.

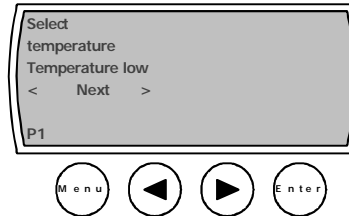

1. Use the Arrow buttons to toggle between the Normal and Low temperature settings.
2. When the setting you prefer displays, press ENTER. The LED will display the new temperature setting. Press MENU to advance to the next menu or press START to begin the program.


### Timed Dry and Air Fluff

When you select Timed Dry or Air Fluff on the program menu, the word "Time" and a number (of minutes) will flash in the upper right corner of the LED window. This indicates you must select a program time (5 to 90 minutes).

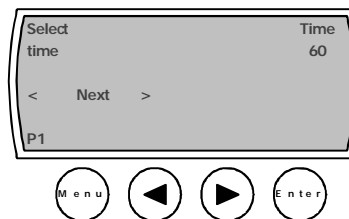

1. To change the number, simply press an Arrow button until the length of time you want the program to run displays.
2. Press ENTER to program your change.

Press MENU to advance to the next menu or press START to begin the program. When you press START, the time remaining for the program to run displays in the bottom right-hand corner of the LED window, as illustrated below:

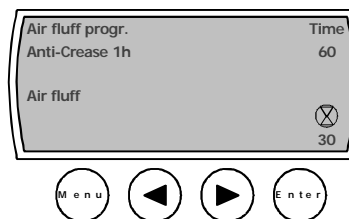


**NOTE:** The remaining time toggles between the minutes remaining (e.g., 23) and the hour(s) remaining (e.g., 1h).

## The Delayed Start Program

This program lets you delay starting the dryer for up to 12 hours. This feature is useful in areas where utility companies offer discount rates during certain hours.


When you select Delayed Start on the program menu, you must select a delay time (1 to 12 hours).

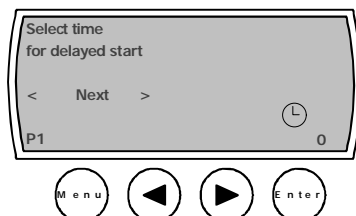

1. In the bottom right corner of the LED window, a clockface and a zero will flash. To change the zero, simply press an Arrow button until the number of hours you want to delay starting the program displays (1–12 hours).

2. Press ENTER to program your change.

Press MENU to advance to the next menu or press START to begin the program. When you press START, the clockface and the hours you set for the delay will display, as illustrated below:

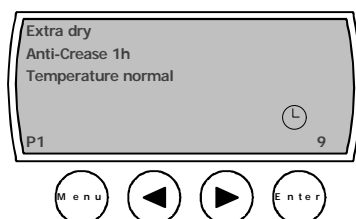

## RESTORING A PRESET PROGRAM

To restore a preset program to its original settings, simply press the button for the preset program you want to restore and hold it down while you press ENTER. The program will revert to its original settings.

## CHANGING THE LANGUAGE ON THE LED DISPLAY

There are eleven languages available for the LED window:

- ◆ English
- ◆ French
- ◆ Spanish
- ◆ Portuguese
- ◆ Italian
- ◆ German
- ◆ Swedish
- ◆ Danish
- ◆ Norwegian
- ◆ Netherlands
- ◆ Finnish

To change the language, follow the steps below:

1. Turn the machine off then on again.
2. Press **ENTER** five times in succession then press **P1** five times. (This must be done within 15 seconds.)
3. When the Language menu displays, press an Arrow button to advance through the menu to the desired language.
4. Once the correct language displays, press ENTER to program the LED window to display the language you selected.

## CHILD-SAFE START

As a safety measure, you can program the T760 and T780 not to start unless the Start button is held down for three seconds. To do this, follow the steps below:

1. Turn the machine off then on.
2. Press ENTER five times, then press P3 five times. (This must be done within 15 seconds.)
3. "Delayed start" displays with "0" flashing in the lower right corner. Press the right Arrow button to toggle the display to "3."

### Child-Safe Menu Button

Please note that when you set the child-safe Start button, the Menu button is *automatically* programmed to delay for three seconds before it becomes active. This prevents a child from accidentally changing the program settings.

When you want to change a program, press the Menu button for three seconds to activate the menus. The Menu button will work normally (without the 3-second delay) until you have completed your changes. If it is not pressed for two minutes, it will automatically revert back to the child-safe mode.

## ERROR MESSAGES – T760/T780

Error messages will display in the LED window if a fault occurs while a program is in progress. The table below defines each possible error message. If the

message still displays after you have checked the possible solutions, call a service technician.

ERROR MESSAGE	SOLUTION
Three hours	Make sure both fuses are intact. Clean the lint filter. Make sure exhaust hose is clear (T760). Clear message by turning the power off then on.
Overflow (T780)	Make sure the condensed water container is empty. If draining into a drain pipe, make sure the black rubber hose is not kinked or blocked. The drain should not be higher than 40 inches from the floor. Make sure the condensation pump is not blocked.
Sensor	This can appear if there are dry clothes in the drum when the unit is started. Cancel the error message by opening the door or turning the power off then on.
Thermistor	Call a service technician.