

carter's®

cuddle me™ musical bouncer

wildlife
instruction manual

81343

Please read the following instructions and warnings carefully before use of the bouncer seat. Keep this instruction manual for future reference.



Adult Assembly Required.

Vibration Unit requires 3 "AA" batteries (not included)

Tools required:

Phillips head screwdriver (not included)

For Technical Support Call 1-800-268-6237 or email at customerservice@summerinfant.com

For use with children from birth to 25lbs.

Keep small parts away from children



WARNING:

THIS PRODUCT SHOULD NOT REPLACE RESPONSIBLE ADULT SUPERVISION.

- Never leave child unattended.
- Never lift bouncer with your child in it.
- Always use restraint system.
- Never use for a child able to sit up unassisted.
- Fall Hazard:
 - Child's activity may move bouncer. Use only on floor. Never use on an elevated surface.
- Suffocation Hazard:
 - Never use on a soft surface (bed, sofa, cushion), as seat may tip over and cause suffocation.
- Do not use this infant bouncer seat if it is damaged or broken.
- Never place child in infant bouncer seat until frame is fully locked and secured.
- Never fold Bouncer with child in it.
- Never use the toybar to lift and carry bouncer while baby is in it.




BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Remove batteries when unit is stored for a long period of time or when batteries are exhausted.
- Dispose of exhausted batteries properly.


components:

hardware:





A | B



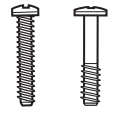


x2 | x2

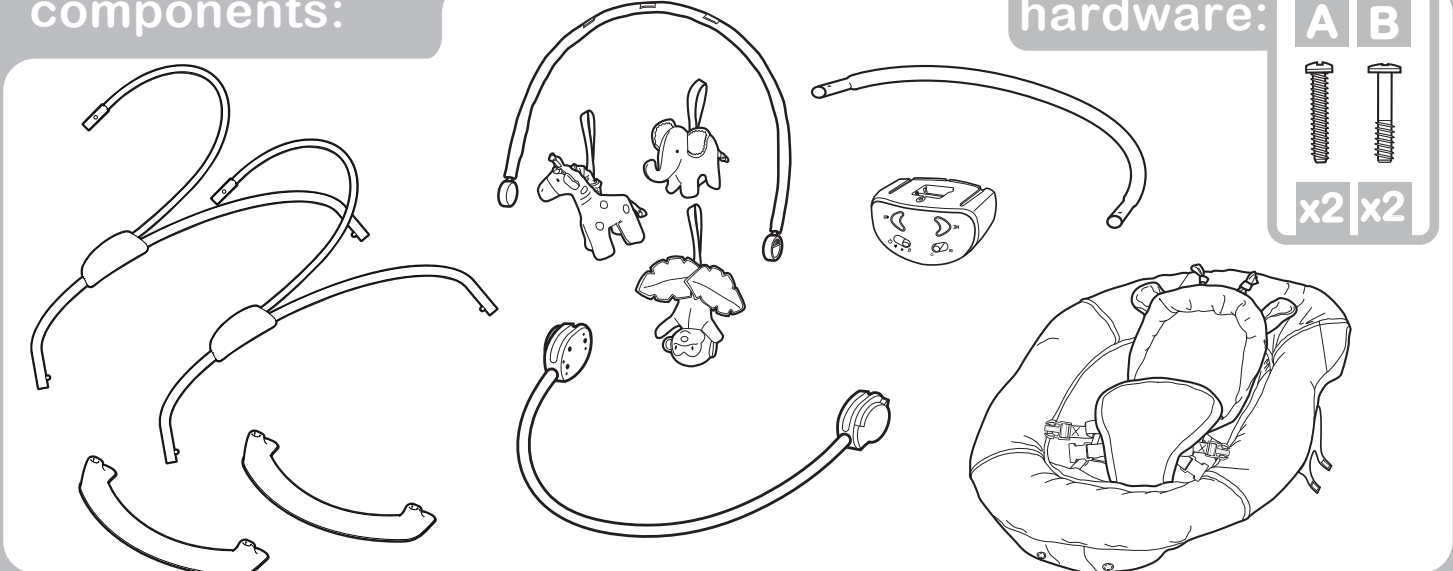





assembly instructions:

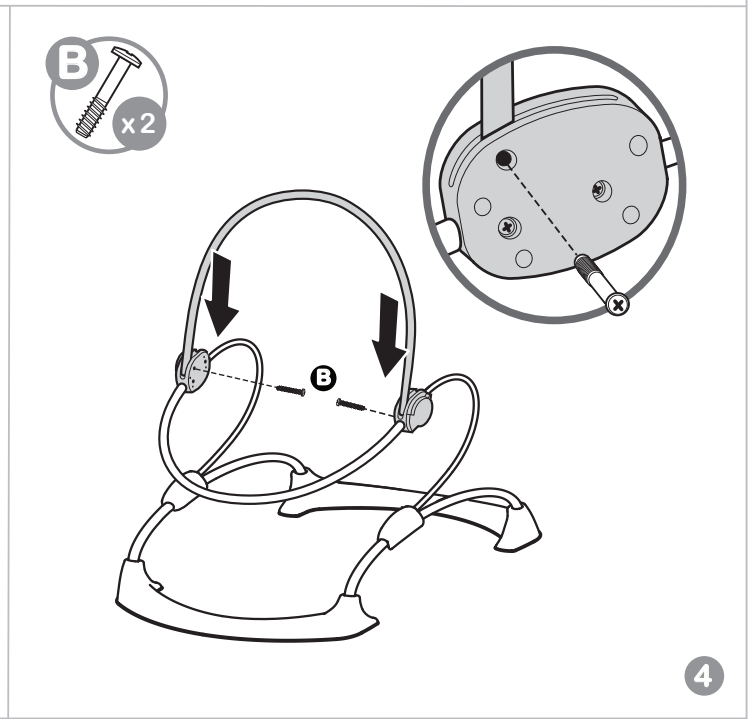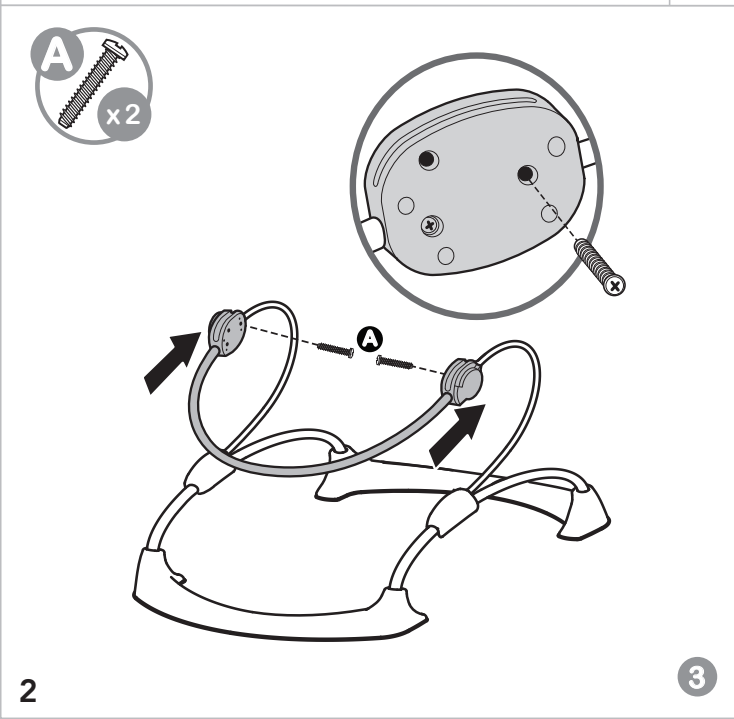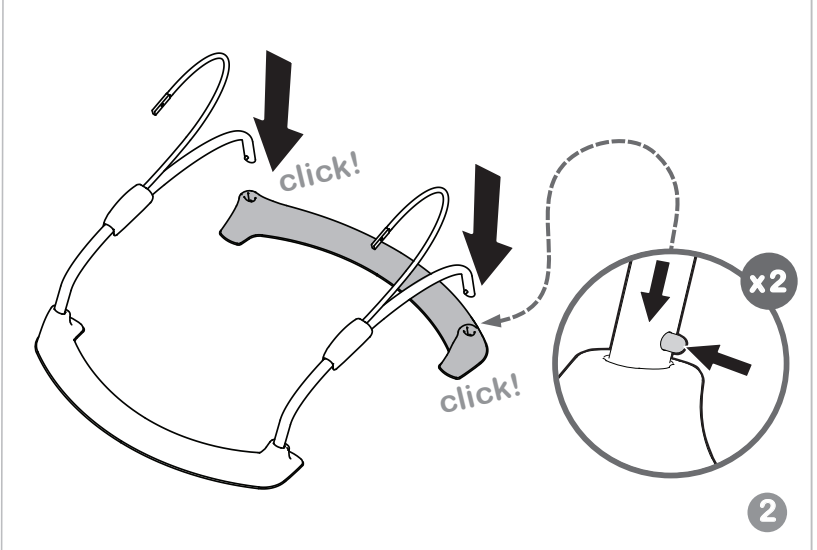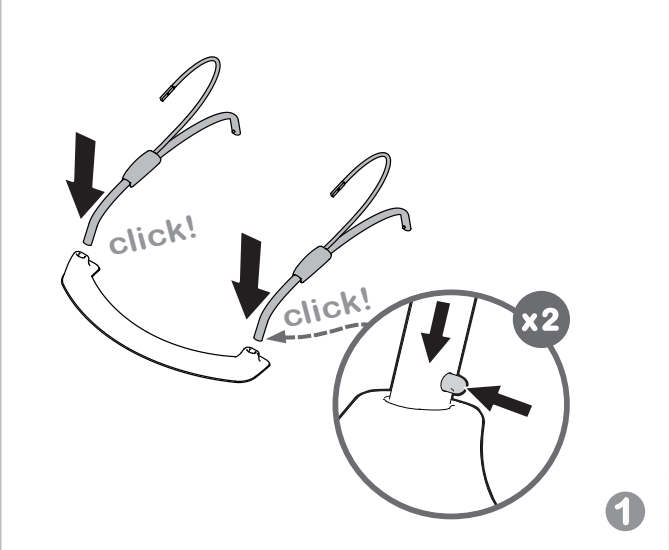

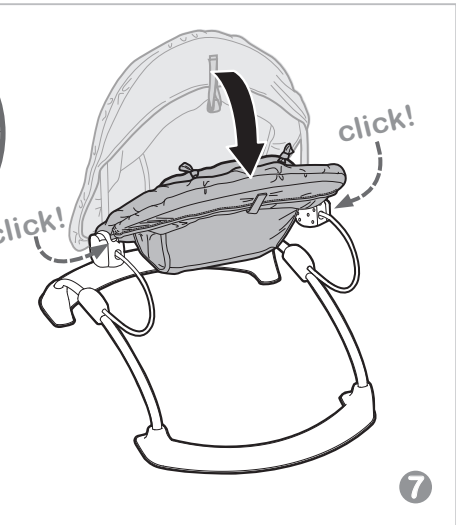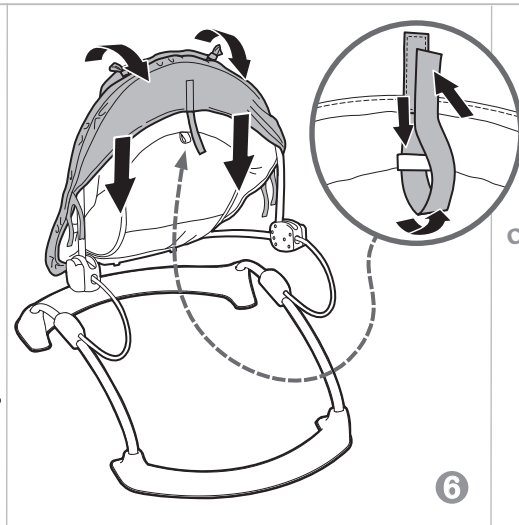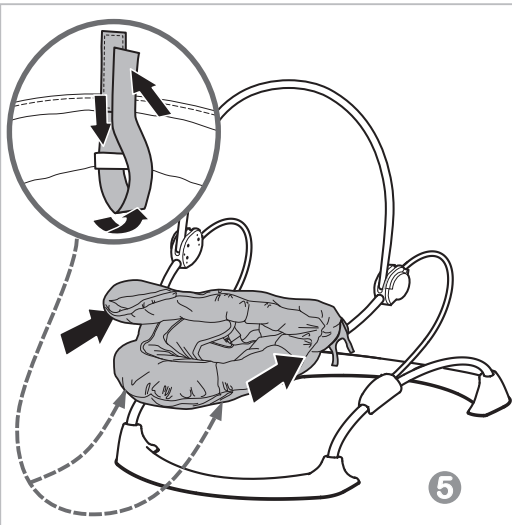

battery installation:

Vibration unit requires 3 "AA" batteries, (not included).

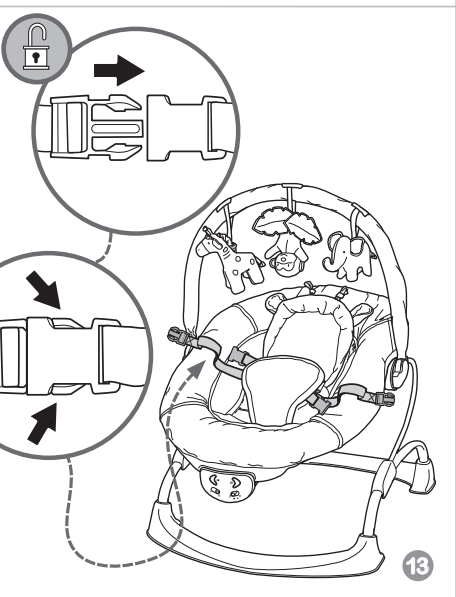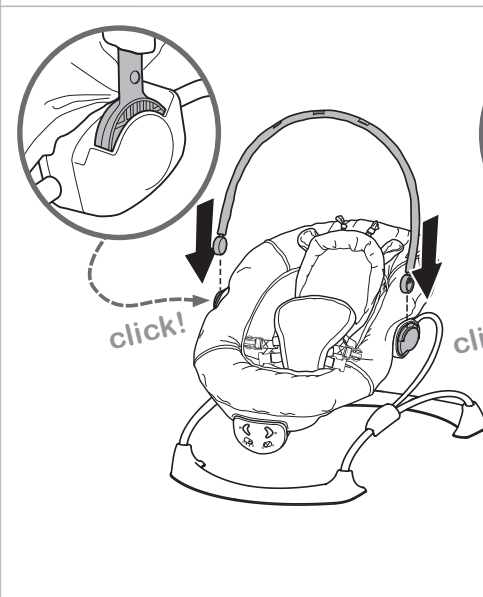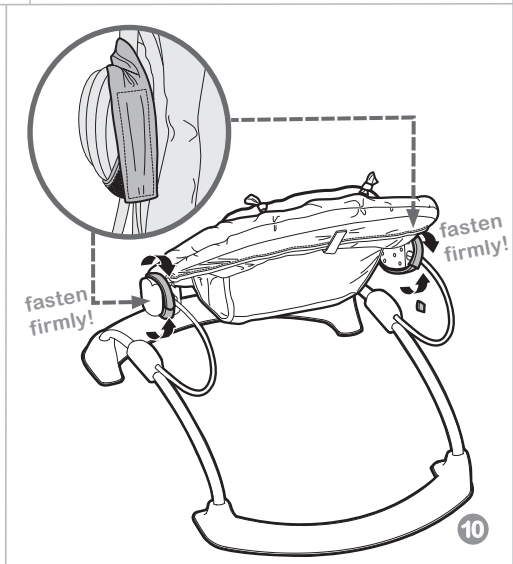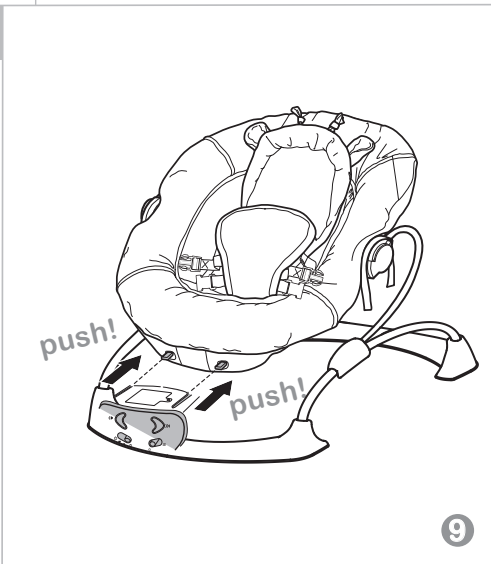


to use bouncer: **Read all warnings and instructions for use.**

Place baby in bouncer and position the restraining belt over baby's lap. Be sure to fasten both security clips and tighten by pulling straps.

Using Toybar:
 The toybar can be easily adjusted to be at desired distance from baby. You can position and adjust the toybar so the bend is arching towards baby for play or away from baby if he is resting. Toybar is also removable.

⚠ WARNING: Never use the toybar to lift or carry bouncer while baby is in it. **3**

sound and vibration unit:

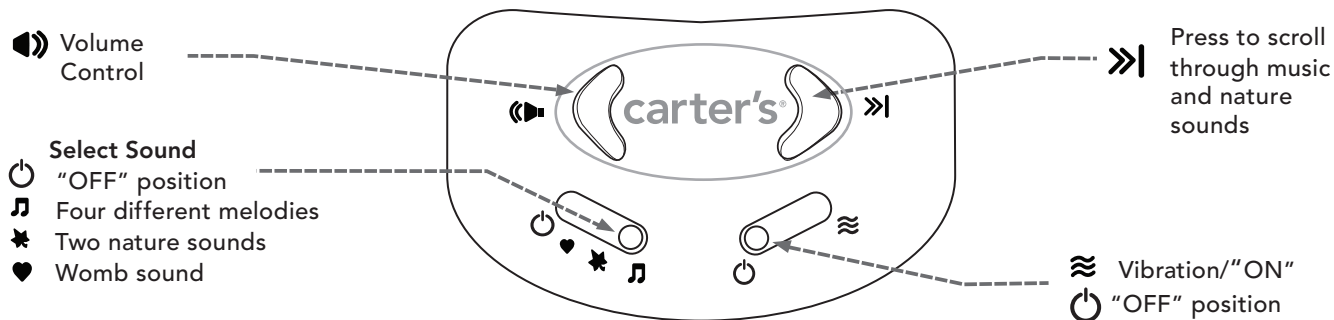

Select Sound:

Set the 4 position switch to hear music, nature or womb sounds.

NOTE: Sounds and music have an auto shut-off feature to conserve battery power. To restart music or sounds, slide to "OFF" position, then slide over to desired sound.

Adjust Volume:

Press to increase or decrease volume.

There are 4 volume settings: low, medium, medium high and high.

Select Vibration:

Select the vibration mode by moving the switch on the control panel to the right.

To shut off, slide to the "OFF" position.

NOTE: Vibration will automatically shut off after 20 minutes to conserve battery power.

to clean:

Step 1: Remove toybar and control unit. Remove the fabric cover by folding the footrest upwards and sliding off the seat.

Step 2: Machine wash cold, gentle cycle. Hang to dry. Do not bleach or tumble dry. Use warm iron - low setting, if desired.

maintenance:

Please check the following before each use: Make sure the screws that hold the frame together are tight and that none are missing.

radio and television interference:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

You may also find helpful the following booklet, prepared by the FCC: "How to Identify and Resolve Radio-TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402

Changes and Modifications not expressly approved by Summer Infant, Inc. can void your authority to operate this equipment under Federal Communications Commissions rules.

©2010 The William Carter Company.
All rights reserved.
Carter's is a registered trademark owned
and licensed by The William Carter Company.
call us at 888-782-9548 or visit carters.com

Manufactured under license
by Summer Infant, Inc.
1275 Park East Drive
Woonsocket RI 02895 USA
1-800-268-6237
www.summerinfant.com

Colors and styles may vary.
Please retain information
for future reference.
MADE IN CHINA.