

Model #CZ7007

COMFORT
ZONE®

Electric Oil Filled Radiator

Features:

- Adjustable Thermostat
- Three Heat Settings:
1500 watts
900 watts
600 watts
- Front Mounted Control Panel
- Power Indicator Light
- Oil Permanently Filled
- Convenient Cord Storage
- Durable Metal Housing
- 120V A.C. 60Hz., 12.5A, 5120 BTUs



Save These Instructions

INTENDED USE:

This product is intended for indoor residential and office use only, not for industrial or other commercial application. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions whether your wiring is adequate, consult a qualified electrician.

Use your heater only with a working smoke detector located in the vicinity of your heater.

While using your heater, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word **WARNING** to indicate the level of hazard: **WARNING** indicates a hazard which, if not avoided, could result in injury or death.

IMPORTANT INSTRUCTIONS

As with all electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons, including the following precautions:

- Read all the instructions before using this heater.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or damage to persons or property.
- Do not operate the heater with a damaged power cord or after the heater malfunctions, has been dropped in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment or repair.
- Do not leave heater unattended when in use. Use of extreme caution is necessary when any heater is used by or near children, disabled persons or pets.
- Do not place the heater on a small, unlevel, uneven or any surface which might allow heater to tip or fall.
- For proper operation, heater should be placed on a smooth, non-combustible surface. Do not place on rugs or carpet. Not for use outdoors or in wet areas.
- Always unplug heater when not in use.
- Do not operate the heater with heater guards or any safety device removed.
- Do not operate without legs and wheels installed.
- Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- To disconnect heater, turn controls off then remove plug from outlet.

WARNING: SHOCK HAZARD

Use your heater only in dry environments. This heater is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water container. Do not use heater outdoors. Do not use in damp environments such as flooded basements.

WARNING: HOT SURFACES

Do not touch body of heater when in use. This heater is hot when in use, to avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater.

WARNING: FIRE HAZARD

Heater has hot and arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. DO NOT USE in areas where gasoline, paint or flammable materials are used or stored. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (.9 M) from the front of the heater and keep them away from the sides and rear. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked. Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater. This heater contains flammable materials and if ignited will support and spread fires.

WARNING: ELECTRICAL SHOCK HAZARD

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code.

The supply cord has a polarized plug. As a safety feature this plug will fit in a polarized outlet only one way. To prevent electric shock, match wide blade of plug to wide slot, fully insert plug. If the plug does not fit contact a qualified electrician. Never use an extension cord unless plug can be fully inserted. DO NOT attempt to defeat this safety feature.

DO NOT run power cord under carpeting. DO NOT cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts. Do not use an extension cord unless the plug can be completely inserted into its receptacle. Unplug the heater when not in use. Do not operate heater with its ventilation obstructed.

Black border shows
page size and should
not print

USAGE:

HEATER OPERATION: Always operate the heater in the upright position following all instructions and recommendations listed in this manual **HEATER LOCATION:** Place the heater in the area of the room that is coldest. **HEATER CONNECTION:** Plug heater directly into 120 volt A.C., 60 Hz wall outlet. Be sure plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or heater. **NOTE:** To prevent overloading a circuit, do not plug the heater into a circuit that is servicing other electrical needs. Make sure heater is at least three (3) feet away from walls, furniture, and other obstacles.


TURNING HEATER ON: The heater has three heat settings: 600, 900 and 1500 watts. Use the 1500 watt setting to raise the room temperature quickly while thermostat control is at its highest setting. (During the heaters initial use, you may experience a slight odor or smoking. This is the result of residual lubrication on the steel "burning off". This is normal and will go away after a few minutes of use.) When desired temperature is reached, the 600 or 900 watt setting will be sufficient to maintain a comfortable temperature.

Switch 1: Low - provides 600 watts of heat output
Switch 2: Med - provides 900 watts of heat output
Switch 1+2: High - provides 1500 watts of heat output

The switches will light when activated to indicate power and output setting.

SETTING THERMOSTAT: After the unit has warmed up, slowly rotate the thermostat knob counter-clockwise until the thermostat shuts off. Leaving the thermostat at this setting will automatically maintain this temperature. For a lower temperature, rotate the knob further counter-clockwise.

TO TURN HEATER OFF: Turn off both switch 1 and switch 2. Unplug unit when not in use.

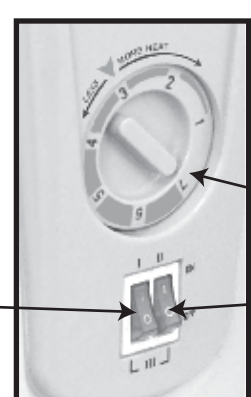

Thermostat Control
Switch 1
Switch 2

CARE AND MAINTENANCE

CLEANING: CAUTION-Before cleaning the heater be sure to disconnect power cord and allow the heater to cool completely. This heater should be cleaned at least once a year to maintain proper performance. Clean the outside surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners. DO NOT IMMERSE THE HEATER IN WATER. Allow heater to dry completely before use.

REPAIR: DO NOT OPERATE THE HEATER WITHOUT ANY OF THE SAFETY FEATURES IN PLACE. DO NOT USE THE HEATER IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

STORAGE: Keep original carton for storage of the heater. Store the power cord to avoid damage during storage.

REFUELING: This heater is factory sealed and never needs refueling.

WHEEL ASSEMBLY INSTRUCTIONS:

1. Turn the heater upside down.
2. The wheel brackets should be mounted to the far ends of the heater. Wrap "U" shaped bolt around the connector between the heater fins.
3. Slide the angled end of the "U" shaped bolt through one of the holes of the wheel bracket as shown in Fig. 1.
4. Place threaded second end of the "U" shaped bracket through the remaining hole and tighten down wing nut (see Fig 2).
5. Repeat the process for the second wheel bracket..



Fig. 1



Fig. 2

Black border shows
page size and should
not print

LIMITED WARRANTY

Products manufactured by Comfort Zone® are warranted to the original consumer to be free of defects in material and workmanship for twelve (12) months from the original date of purchase. The warranty does not cover products modified outside our factory, damage or failure caused by acts of God, abuse, misuse, abnormal usage, faulty installation, failure to follow suggested maintenance procedures enclosed with this product (as defined by Magnuson-Moss Warranty-Federal Trade Commission Improvement Act) This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, freight prepaid, to Comfort Zone® for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage due to accidents, operation on other than 120 volts, 60 hertz, AC, current, or any other abuse. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Manufactured by:
Comfort Zone®
324A Half Acre Rd.
Cranbury, NJ 08512 USA
800-221-6895
www.comfortzonefans.net