



Dell DJ™

Features



1. rewind/skip back button
2. back button
3. LCD screen
4. headphone connector
5. lock switch
6. power button
7. volume buttons
8. scroll dial/select
9. home button
10. fast forward/skip forward button
11. play/pause button
12. reset button
13. dock connector

CAUTION:

Before you set up and operate your Dell DJ™, read and follow the safety instructions in the *Product Information Guide*.

CAUTION:

While your Dell DJ is robust, do not subject it to excessive force or impact. This may damage the hard disk drive in your Dell DJ.

CAUTION:

Do not store or use in areas outside of this temperature range: 0°C - 40°C or 32°F - 104°F.

Doing so may cause your player to slow down or lock up.



OT6334A01

1 Charge the Battery and Turn On the Dell DJ



NOTICE: Do not connect your Dell DJ to the computer until the instructions prompt you to do so.

NOTICE: First charge the battery for at least 2.5 hours and appears on screen.

1. Connect the power cable to the AC adapter connector on your travel charger connector, and connect the travel charger connector to the Dell DJ as shown. Make Sure the Dell logo is facing upward on the travel charger connector. Then plug the other end of the power cable into a wall outlet.

NOTE: You can still use your Dell DJ when the battery is charging from the AC adapter.

NOTICE: To avoid damaging the connector, perform the following step before pulling the connector out of the Dell DJ.

2. After the battery is charged and when removing the travel charger connector, press the two buttons on the sides of the travel charger connector to release the self-lock structure as shown.
3. Press and hold the power button for two seconds to turn the Dell DJ on.

2 Install Software



NOTICE: Ensure that your Dell DJ is not connected to your computer during the software installation process.

NOTICE: Close all other applications while installing the software.

1. Insert the *Dell DJ™ / Dell Pocket DJ™ Product Software CD* into your CD drive.

The CD runs automatically, and the installation process begins.

If the CD *does not run automatically*:

- a. Using Windows® Explorer® or the **My Computer** icon, navigate to the drive where you loaded the *Dell DJ™ / Dell Pocket DJ™ Product Software CD*.
- b. Double-click **setup.exe**.

2. When the Dell DJ installation screen appears, click **OK** to start the software installation process. Follow the instructions on the screen and click **OK**, **Next**, or **Yes** when prompted.

NOTE: The software may determine that you have a newer version of Musicmatch® already on your computer. If so, you will be asked whether or not you would like to continue installing Musicmatch from the CD. Make your selection to proceed.

If you select "Yes", the installation process will continue. **Select "Yes" if you intend to use Musicmatch with your Dell DJ.**

If you select "No", you will be asked to confirm the selection. Select "Yes" to quit the installation.

3. After the software installation is complete, a message appears asking if you want to restart your computer now or later. Select **Yes** to restart your computer immediately or **No** if you will restart your computer later.

NOTE: The software is not enabled until after you restart your computer.



3 Connect Your Dell DJ



OR



USB synchronization cable

Connect the USB connector of the USB synchronization cable to your computer.

NOTE: To release the USB synchronization cable later, press the side buttons.

Cradle

1. Connect the larger end of the USB cable to your computer.
2. Align the dock connector on the bottom of your Dell DJ to the connector on the cradle, while facing the front of the Dell DJ toward the Dell logo, and insert the Dell DJ gently but firmly onto the connector.

4 Transfer Files

Using Musicmatch

NOTE: Musicmatch has the capability to 'rip' or convert music CDs to digital music files on your computer. Refer to the Musicmatch Help tutorial to create digital music files from your music CDs.

1. Start Musicmatch by clicking **Start** → **Programs** → **Musicmatch** → **Musicmatch Jukebox**. The Musicmatch main window appears.
2. Click **View** → **Portable Device Manager**.
3. With the Portable Device Manager (PDM) open, you can transfer tracks or playlists in a drag-and-drop or copy-and-paste operation from your computer's Musicmatch Jukebox playlists onto the Dell DJ.
4. To drag-and-drop, locate and click the track or playlist that you want to copy, then drag it to Dell DJ or one of its playlists.
5. To copy-and-paste, locate and right-click the track or playlist that you want to copy, then click **Copy**. Right-click **Dell DJ** or one of its playlists, then click **Paste**.

Using Dell DJ Explorer

NOTE: When transferring music tracks to your Dell DJ, be sure to transfer them to the Music Library folder of your Dell DJ. If you transfer music files from your computer to the Data Library folder of your Dell DJ, these music tracks will be stored as data files and will not be playable on your Dell DJ.

1. Connect the Dell DJ to your computer using the included USB synchronization cable or cradle.
 2. Select **Start** → **Programs** → **Dell** → **Dell DJ Explorer** → **Dell DJ Explorer**.
- or
- Open Microsoft Windows Explorer, then double-click **Dell DJ Explorer**.
3. With Dell DJ Explorer open, click **Folders** in the Dell DJ Explorer toolbar.
 4. Click **Dell DJ Explorer** in the left window to expand its contents.
 5. Click **Dell DJ** beneath **Dell DJ Explorer** in the left window to expand its contents.
 6. Click **Data Library** or **Music Library** beneath **Dell DJ** in the left window to expand its contents.
 7. Using Dell DJ Explorer, locate the track, file, or folder you want to copy.
 8. To drag-and-drop, locate the track, file, or folder that you want to copy, and drag it to the folder in which you want to place the track, file, or folder.
 9. To copy-and-paste, right-click the track, file, or folder you want to copy and click **Copy**. Locate and right-click the folder in which you want to place the copy, and then click **Paste**. A copy of the track, file, or folder is placed in the selected folder.

5 Play Digital Music



The Dell DJ can play tracks in MP3, WMA, or WAV file formats. The Dell DJ comes with a few sample MP3 tracks already loaded into the Music Library.

To play all music tracks:

1. Press the **Home** button on your Dell DJ.
2. Scroll-select **Music Library**.
3. Scroll-select **Play All Music Tracks**.

NOTE: Scroll-select means rotate and then press the scroll dial.







All tracks are added to the Selected Music list. Playback starts after all music tracks have been queued.

NOTE: In addition to playing digital music, you can also use your Dell DJ as a data storage device.

Be sure to check the *User's Guide* to learn about using these features.

Also, be sure to periodically check support.dell.com for software and documentation updates for your Dell DJ.

! Safety Precautions

-  Do not store or use in areas outside of this temperature range: 0°C - 40°C or 32°F - 104°F.
-  Do not expose to heat or incinerate.
-  Keep away from strong magnetic fields.
-  Do not subject to excessive force or impact.
-  Keep away from excessive moisture.
-  Do not dismantle.

Finding Information

- Dell DJ User's Guide—Setting up, and using your device. Install Adobe® Acrobat® Reader to view the file **manual.pdf** found in **d:\user's guide\dj\ <language>** (replace **d** with the drive letter of your CD-ROM/DVD-ROM drive and **<language>** with the language the document is in).
- Musicmatch Help—Click **Start** → **Programs** → **Musicmatch** → **Musicmatch Jukebox**. Click **Help** in Musicmatch.
- support.dell.com—Up-to-date information on your device including the latest software downloads, latest versions of the User's Guide, Getting Started Guide, and answers to the most Frequently Asked Questions.

Information in this document is subject to change without notice.
© 2005 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Dell, *Dell DJ*, and the *DELL* logo are trademarks of Dell Inc.; *Musicmatch* is a registered trademark of Musicmatch Inc.; Microsoft and Windows are registered trademarks of Microsoft Corporation. Dell Inc. disclaims any proprietary interest in the marks and names of others.

April 2005

Printed in Singapore

DELL™