

# FunTab pro

## Quick Start Guide



### Charging

Fully charge your FunTab Pro for 6 hours before the first use.




Use the included wall charger and USB cable.

The battery indicator will show that your device is charging.



### Screen Basics

Switch User Exit Kid Mode Tap to Switch Tab Tap the blue arrow for more games.

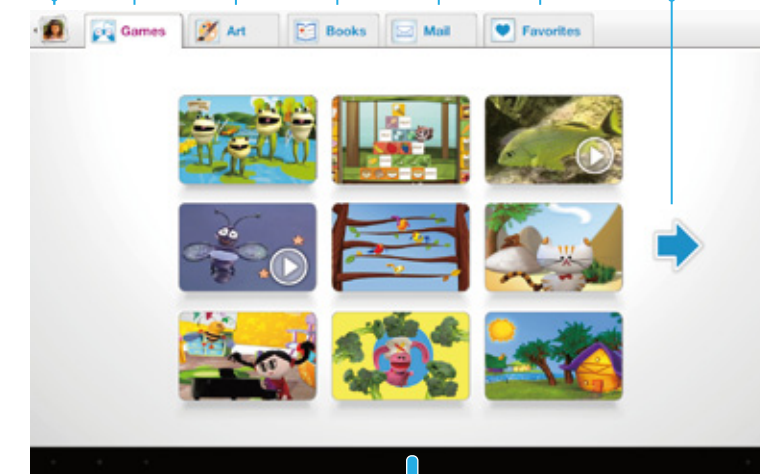

Back Home Multitasking Wi-Fi® Signal Battery  
Multitasking does not function in Kid Mode.

### Connecting to Wi-Fi®

- 1 First tap the clock, then tap the settings icon.
- 2 Tap Wi-Fi.
- 3 Slide OFF right to turn on Wi-Fi.
- 4 Tap to select your network.
- 5 Enter your password.
- 6 When connected tap back. (Located in the lower left corner)

If you accidentally exit Kid Mode during setup, tap the Kid Mode icon on the desktop to resume initial setup.

### User Setup

- 1 Tap Get Started!
- 2 Enter the e-mail and password you would like to use and tap save.
- 3 Tap edit photo to choose an avatar to represent your child or use your own photo later.

### Editing Available Apps

- 1 Children's Apps. All apps are available by default. Tap "Edit" to edit apps, or tap Save to skip.
- 2 I's Apps. Uncheck the apps you want to remove.
- 3 Tap Save.
- 4 What action is required to exit Kid Mode? Choose which action is required to exit Kid Mode. 4 digit PIN is the most secure.
- 5 You will need to remember this PIN to exit Kid Mode. Tap Continue.
- 6 Choose a 4-digit PIN. Enter your PIN and tap OK. You will then automatically enter Kid Mode.

### Turning on Child Lock

- 1 Tap Turn on Child Lock.
- 2 Tap Begin.
- 3 Complete action using Kid Mode Launcher. First, tap the check box. Then, tap Kid Mode.

### Downloading & Installing Apps

Apps can be downloaded in Kid Mode but you must exit Kid Mode to install the app.

- 1 Tap the App Mall icon.
- 1 Tap the app you want to download.
- 2 Tap Accept Permissions.
- 3 Exit Kid Mode.
- 4 Tap the App Mall icon.
- 5 Tap the My Account icon in the top right corner.
- 6 Tap Downloads to see the apps that have been downloaded but not installed.

Tap an app.

Tap install.

Tap Install.

Tap Install.

Tap Install.

Tap Install.

Tap Install.

Tap Install.

Tap Install.

Tap Install.

Tap Install.

Tap Install.


Tap Install.

Tap Install.

Tap Install.

### Uninstalling Apps

In parent mode, touch and hold an app in the app menu and drag to the trashcan Uninstall icon. You can also uninstall by tapping Apps in the settings app.

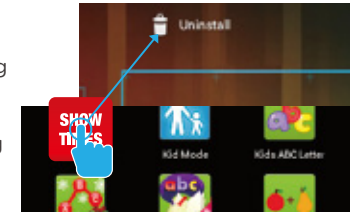


## Adding Safe Sites


The Kid-Safe Browser by Maxthon lets your child safely browse the internet by only giving them access to sites you approve.



Tap the + icon.

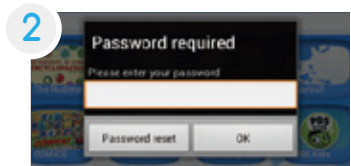


The first time you add a site you will be prompted to solve a math problem and create a password.

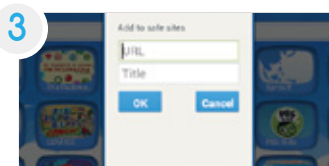


You can choose from recommended sites or enter your own URL.


## Deleting Sites

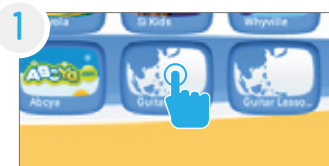

Touch and hold an icon.

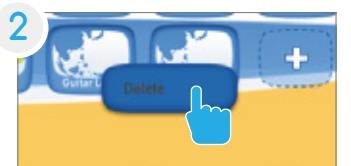

Tap the pop-up Delete button.

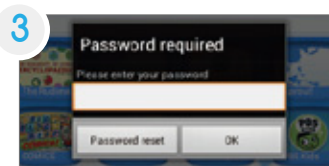


Enter your password.

## Connecting to a Computer




You must be in parent mode to connect to a computer.

Connect to your computer by USB.

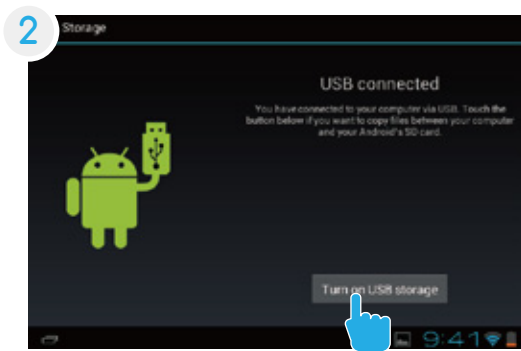


Turn on USB Storage.

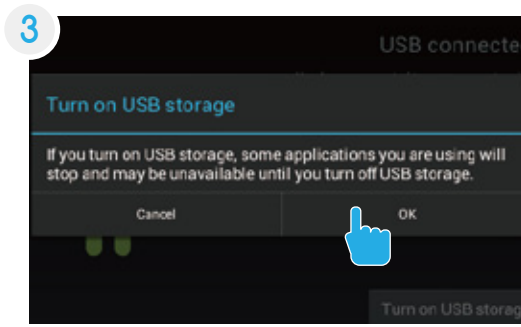


Tap OK to allow USB Storage.


## PC

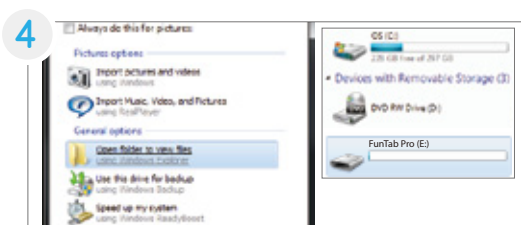

Choose open folder to view files or select the removable disk.

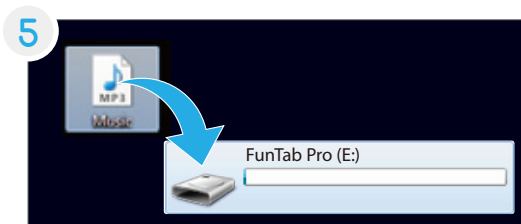

You will now be able to drag and drop files from your computer to your tablet just as you would with a USB flash drive.

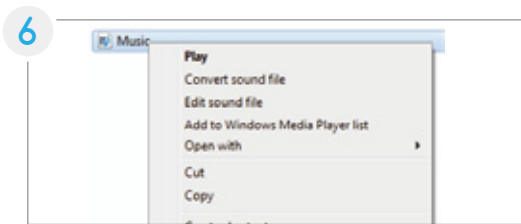

Right click on the file to compress, copy, move to trash or get info.

## Mac®


4 Use *Finder*® to go to *Devices* and choose FunTab Pro.

5 You will now be able to drag and drop files from your computer on to your tablet just as you would with a USB flash drive.

6 Control click on the file to compress, copy, move to trash or get info.

7 Control click on the device to eject.

## Factory Restore

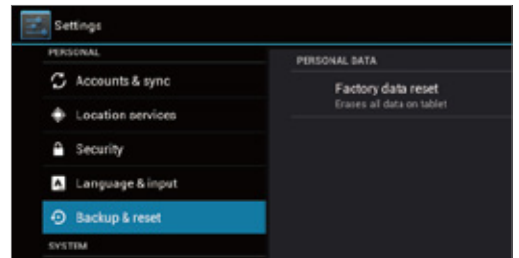


Select Backup & reset in the settings app to restore factory settings. This will erase all data on the tablet.

## Reset Device



The reset button is located on the top of the unit. Reset the device by pressing the button with a small object such as a paper clip.

## User Manual

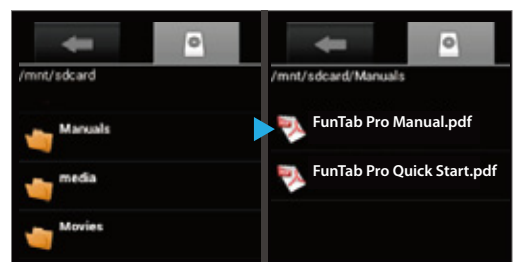

Use the File Manager app to locate the Manuals folder.



## Parent Dashboard



For more options exit Kid Mode and choose the Parent Dashboard app.



**Family:** Add additional children.



**Storybooks:** Record yourself reading a story, or buy more books.



 
**Apps:** Select the Android Apps available to play from inside Kid Mode.



**Child Lock:** Turn Child Lock on/off or choose which action is required to exit Kid Mode.



**Video Mail:** Turn Video Mail on/off. Go to [www.zoodles.com/parent](http://www.zoodles.com/parent) to send your child a video message, add family members to your account, and review all the message your child has sent and received.




**Art:** Save your favorite drawings by giving them a gold star.



**Settings:** Sign out, refresh content, or set maximum volume.

**Upgrade to premium to promote subjects, adjust violence filter, block characters, block sites, and more.**

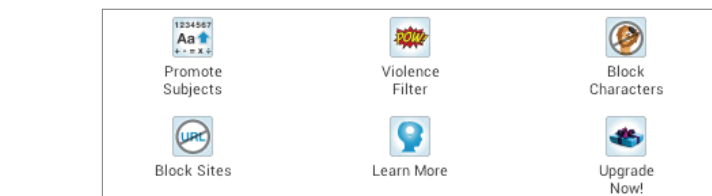

## zoodles.com

To track your child's progress go to [zoodles.com/parent](http://zoodles.com/parent) and login to your Zoodles account. Your login is the e-mail address and password from step 1 of user setup.

- Track Progress
- Record Storybooks
- Send Video Mail
- Add Family Members



## Parent Mode

Exiting Zoodles Kid Mode enables Parent Mode, allowing the FunTab Pro to function as a traditional tablet.

Use the Parent Dashboard app to add an additional child, change security settings, and add or remove apps.

## Customer Support


Visit [ematic.zendesk.com](http://ematic.zendesk.com) to stay updated with announcements, get answers from the community, and share your feature suggestions with us.

[Tips & Tricks](#)

[FAQs](#)

[Community Help](#)

You can also submit a request for assistance or send an email to [customerservice@ematic.us](mailto:customerservice@ematic.us).

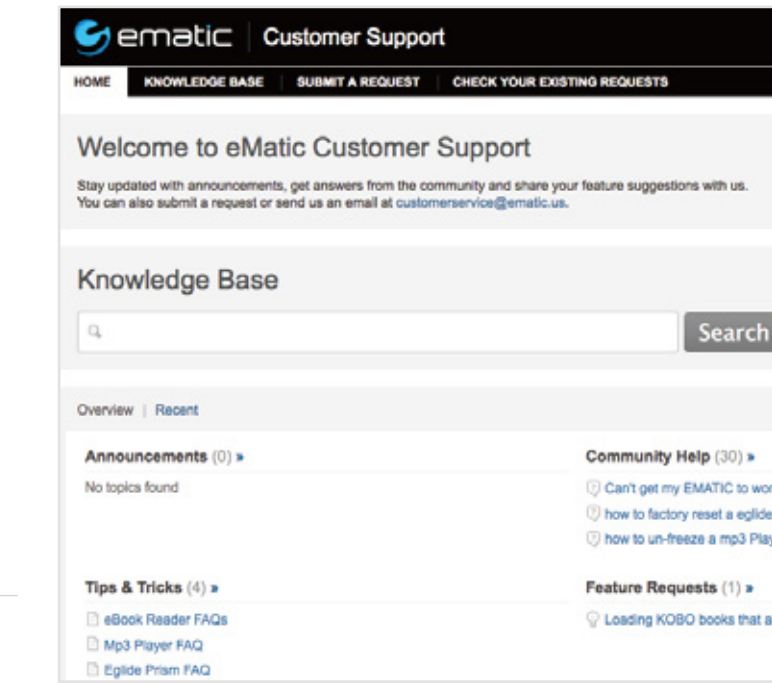

©2012 Ematic. Windows™ is a registered trademark of Microsoft Corp. in the United States and other countries; Mac® and Finder® are registered trademarks of Apple Inc.; Linux™ is a registered trademark of Linus Torvalds. Android is a trademark of Google Inc. The Android Robot logo is a trademark of Google Inc and used under a Creative Commons Attribution license. Ematic is not affiliated with Google Inc. Zoodles is a trademark of Inquisitive Minds, Inc and used by Ematic under a license. The term Wi-Fi® is a registered trademark of the Wi-Fi Alliance®. Ematic is not affiliated with Microsoft, Apple, Inc., Linux, or Google, Inc., (including Android). The Ematic brand and products are owned by Shaghal, Ltd.