



FARBERWARE®

4 SLICE TOASTER

Model Number: 103740

UPC: 681131037402

Customer Assistance

1-855-451-2897 (US)




Please consider the option to recycle the packaging material and donate any appliance you are no longer using.



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- **Read all instructions before use.**
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock do not immerse cord or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from wall outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Call our toll-free customer assistance number for information on examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injuries to persons.
- Do not use outdoors or in a damp area.
- Do not let power cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, press the **CANCEL**  button, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid contacting moving parts.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- **WARNING** - To prevent electric shock, unplug before cleaning.
- **CAUTION** - To ensure continued protection against risk of electric shock, connect to properly grounded outlets only.
- Do not immerse in water.

SAVE THESE INSTRUCTIONS!



ADDITIONAL SAFEGUARDS

- This appliance is for **household use only**.
- A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer extension cords are available and may be used if care is exercised in their use. If long detachable power-supply cord or extension is used:
 - The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance.
 - If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord; and
 - The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.


GROUNDING INSTRUCTIONS

This appliance must be grounded while in use.

CAUTION: To ensure continued protection against risk of electric shock, connect to properly ground outlets only.


GROUNDING INSTRUCTIONS – US ONLY

The appliance has a plug that looks like Figure A. An adaptor, as shown in Figure B, should be used for connecting a 3 -prong grounding plug to a 2-wire receptacle. The grounding tab, which extends from the adaptor, must be connected to a permanent ground such as a properly grounded receptacle as shown in Figure C, using a metal screw.

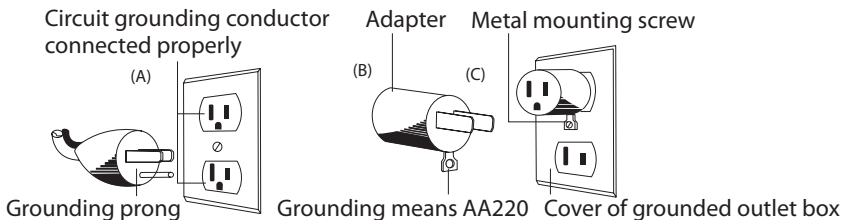












PARTS

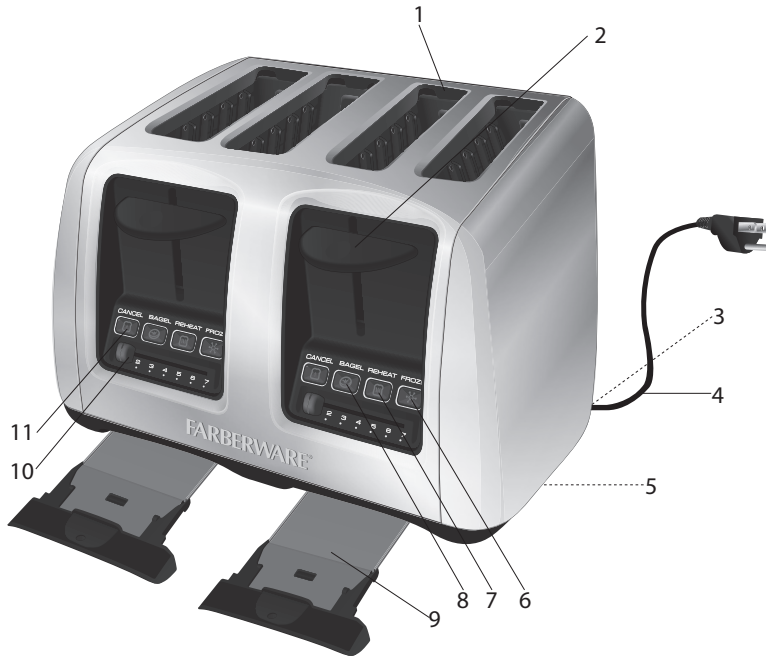

- 1. Toasting slots
- 2. Toasting lever
- 3. Cable cut-out
- 4. Power cord with plug
- 5. Cord storage
- 6. **FROZEN** button
- 7. **REHEAT** button
- 8. **BAGEL** button
- 9. Crumb tray
- 10. Browning control knob (browning level: 1 to 7)
- 11. **CANCEL** button



ILLUSTRATIONS

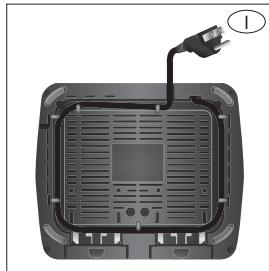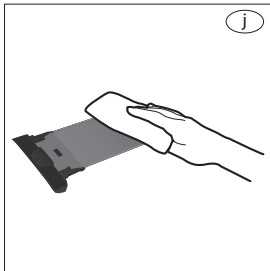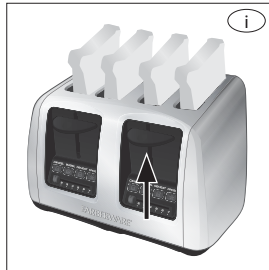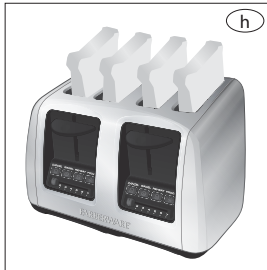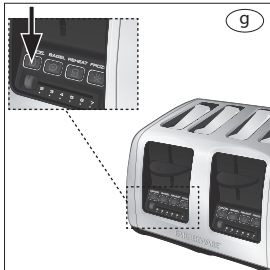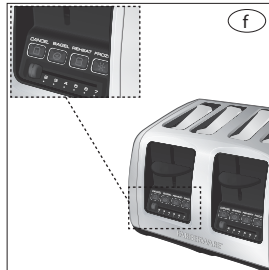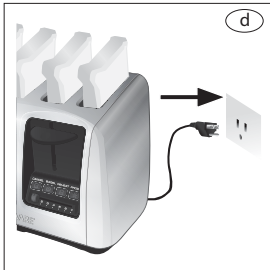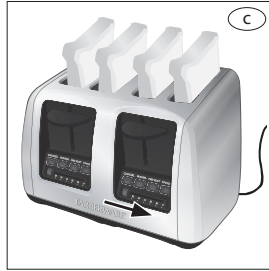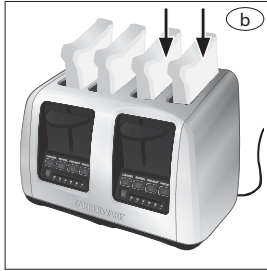



OPERATION

Before first use

- Remove all packaging materials, labels and/or stickers from your appliance.
- Check package contents for completeness and damage. Do not operate the appliance if package content is incomplete or appears damaged. Return it immediately to the dealer.

CAUTION: Danger of suffocation! Packaging materials are not toys. Always keep plastic bags, foils and Styrofoam parts away from babies and children. Packaging material could block nose and mouth and prevent breathing.

NOTE: Always use the appliance with the crumb tray **(9)** (ill. **(a)**)

- Place the appliance on a clean, flat and heat resistant surface.
- Connect the plug **(4)** to a suitable wall outlet (ill. **(d)**) (↳ Using the appliance).

NOTE: The appliance may produce an odor and emit smoke when switched on for the first time, as residues from the production process are eliminated. This is normal and does not indicate a defect or hazard.

- When using the appliance for the first time, it is recommended to operate it for at least 2 times on its highest setting (↳ Operation), until no odor or smoke is present. During use, ensure ample ventilation.

CAUTION: Never let the power cord **(5)** come in contact with the housing of the appliance during use.

- Let the appliance cool completely.
- Clean the appliance (↳ Cleaning).

Using the appliance

Use the appliance for toasting of fresh or frozen toast/bagels or to reheat previously toasted toast/bagels.

NOTE: The appliance has a rated power of 1600W. Before plugging it into the wall outlet, ensure that the electrical circuit is not overloaded with other appliances. This appliance should always be operated on a separate 120V ~ 60Hz wall outlet.

- Make sure no food or other objects are inside the toasting slots **(1)**.
- Place the power cord **(4)** in the cable cut-out **(3)** to ensure the appliance is level.
- Place the appliance on a flat, level, heat resistant surface.



OPERATION

- Make sure the crumb tray (9) is inserted properly (ill. (a)).
- Insert the power plug (4) into a suitable wall outlet (ill. (d)).
- Remove any protective wrappings from foods before placing them in the toasting slots (1). Do not toast torn food, as it may become lodged in the toasting slots (1).
- This appliance is equipped with a lift up function to assist in removing toasted/reheated food from the toasting slots (1). Pull the toasting lever (2) upwards to lift the toasted/reheated food slightly higher for easier removal (ill. (i)).
- Once you have finished toasting/reheating food, unplug the appliance from the wall outlet.

NOTE: The toasting lever (2) will not remain in the downward position, unless the appliance is connected to an energized wall outlet.

NOTE: The following instructions describe the use of one toasting unit, two slots (1), as the units can be used independently from each other.

CAUTION: Toasted/reheated food and toasting slots (1) get hot, pay attention when removing toasted/reheated food.

Switch on and off

- To switch the appliance on, push the toasting lever (2) downwards, until it locks in place.
- To switch the appliance off, press the **CANCEL** (f) button (11). The toasting lever (2) will be released and return to its up position.
- Do not force the toasting lever (2) up. Always use the **CANCEL** (f) button (11) to switch the toaster off.

Toasting function

- Place the bread slices into the toasting slots (1) (ill. (b)). Select the required browning level with the browning control knob (10). Choose between levels 1 to 7, according to your preferences (ill. (c)).
- Press down the toasting lever (2) (ill. (e)) until it locks in place. The toasting process begins.
- During the toasting cycle, the **CANCEL** (f) button (11) is illuminated.

NOTE: To stop or interrupt a toasting cycle, press the **CANCEL** (f) button (11) (ill. (g)), the contents of the toasting slots (1) will pop up and the appliance turns off. The **CANCEL** (f) button (11) will no longer be illuminated. Do not force the toasting lever (2) up. Always use the **CANCEL** (f) button (11) to switch the toaster off.




- The toasted food will pop up, once the toasting cycle has been completed (ill. (h)). The **CANCEL** (f) button (11) will no longer be illuminated.









OPERATION

Reheat function

Use the reheat function to reheat previously toasted food.

- Place the previously toasted food into the toasting slots **(1)** (ill. **(b)**).
- Press down the toasting lever **(2)** (ill. **(e)**) until it locks in place and press the **REHEAT**  button **(7)** (ill. **(f)**).
- During the reheat cycle, the **CANCEL**  **(11)** and **REHEAT**  **(7)** buttons are illuminated.




NOTE: To stop or interrupt a reheat cycle, press the **CANCEL**  button **(11)** (ill. **(g)**), the food in the toasting slots **(1)** will pop up and the appliance will turn off. Both **CANCEL**  **(11)** and **REHEAT**  **(7)** buttons will no longer be illuminated. Do not force the toasting lever **(2)** up. Always use the **CANCEL**  button **(11)** to switch the toaster off.





- The reheated food will pop up, once the reheat cycle has been completed (ill. **(h)**). The **CANCEL**  **(11)** and **REHEAT**  **(7)** buttons will no longer be illuminated.

NOTE: Changing the level of the browning control knob **(10)** has no impact on the duration of the reheat cycle.

Frozen food function



Use the frozen food function to toast food from the freezer.

- Place the frozen food into the toasting slots **(1)** (ill. **(b)**). Select the required browning level with the browning control knob **(10)**. Choose between levels **1** to **7**, according to your preferences (ill. **(c)**).
- Press down the toasting lever **(2)** (ill. **(e)**) until it locks in place and press the **FROZEN**  button **(6)** (ill. **(f)**).
- During the frozen food cycle, the **CANCEL**  **(11)** and **FROZEN**  **(6)** buttons are illuminated.

NOTE: To stop or interrupt a toasting cycle, press the **CANCEL**  button **(11)** (ill. **(g)**), the contents of the toasting slots **(1)** will pop up and the appliance turns off. The **CANCEL**  **(11)** and **FROZEN**  **(6)** buttons will no longer be illuminated. Do not force the toasting lever **(2)** up. Always use the **CANCEL**  button **(11)** to switch the toaster off.



OPERATION




- The toasted food will pop up, once the frozen food cycle has been completed (ill. (h)). The **CANCEL**  (11) and **FROZEN**  (6) buttons will no longer be illuminated.





Bagel function



Use the bagel function to toast bagels.

NOTE: Bagels have to be cut into half. Do not force them into the slots (1).




NOTE: When using the bagel function, place the inside of the bagel facing the center of the appliance. During the bagel function only the heating elements in the center of the appliance are used.

- Place the bagel halves into the toasting slots (1) (ill. (b)). Select the required browning level with the browning control knob (10). Choose between levels 1 to 7, according to your preferences (ill. (c)).
- Press down the toasting lever (2) (ill. (e)) until it locks in place and press the **BAGEL**  button (8) (ill. (f)).
- During the toasting cycle, the **CANCEL**  (11) and **BAGEL**  (8) buttons are illuminated.

NOTE: To stop or interrupt a toasting cycle, press the **CANCEL**  button (11) (ill. (g)), the contents of the toasting slots (1) will pop up and the appliance turns off. The **CANCEL**  (11) and **BAGEL**  (8) buttons will no longer be illuminated. Do not force the toasting lever (2) up. Always use the **CANCEL**  button (11) to switch the toaster off.







 
- The toasted food will pop up, once the toasting cycle has been completed (ill. (h)). The **CANCEL**  (11) and **BAGEL**  (8) buttons will no longer be illuminated.

Combining functions

It is possible to combine the bagel function with the frozen/reheat function. If the **BAGEL**  button (8) is pressed before or after the **REHEAT**  (7) or **FROZEN**  (6) button, the appliance will operate at a lower power setting, as it only uses the center heating elements.



OPERATION




	Reheat function	Frozen function
BAGEL	<ul style="list-style-type: none">Press down the toasting lever (2) (ill. ) until it locks in place and press the BAGEL  (8) and REHEAT  (7) buttons. Both buttons will be illuminated.Reheat function will start with a lower power setting.	<ul style="list-style-type: none">Select the required browning level with the browning control knob (10) (ill. )Press down the toasting lever (2) (ill. ) until it locks in place and press the BAGEL  (8) and FROZEN  (7) buttons. Both buttons will be illuminated.

CLEANING

Proper maintenance will ensure many years of service from your appliance. Clean the appliance after every use. The appliance contains no user serviceable parts and requires little maintenance. Leave any servicing or repairs to qualified personnel.

CAUTION: Always ensure the appliance is switched off. Disconnect the plug **(4)** from the wall outlet. Allow all parts of the appliance to cool down completely.

NOTE: Do not immerse the power cord with plug **(4)** or appliance into water or any other liquid. Do not use abrasive cleaners, steel wool or scouring pads. Dry all parts thoroughly after cleaning, before using or storing the appliance. Ensure that no water enters the appliance housing.

- Never use any metal utensils to remove lodged food, as this may result in personal injuries and damages (ill. )
- Clean the surface of the appliance with a soft damp cloth or sponge and a mild detergent.
- To clean the crumb tray **(9)**, pull it out of the appliance completely. Dispose of any crumbs. Rinse the crumb tray **(9)** with water and a little detergent. Dry thoroughly with a soft cloth (ill. )
- Reinsert the crumb tray **(9)** (ill. ) carefully.

Storage


- Before storage, always make sure the appliance is completely cool, clean and dry.
- It is recommended to store the appliance in a dry place.



CLEANING

- Store the power cord **(4)** in the cord storage **(5)** underneath the appliance (ill. ①).
- Store the appliance on a stable shelf or in a cupboard, preferably in its original packaging. To avoid accidents, ensure that both the appliance and its power cord are beyond reach of children or pets.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance is not operating	Appliance not plugged in	Insert the plug (10) into the wall outlet
	Wall outlet not energized	Check fuses and circuit breaker
Food stuck in the toasting slots (1)	Use of torn foods	Switch off the appliance. Allow to cool. Remove food with non-metal utensils.
	Use of food that is too large	Cut food to ensure an easy fit in the toasting slots (1)
Toasted food too dark or too light	Selected browning level too high or too low	Adjust the browning control knob (10)
Appliance emits smoke	Food type not suitable for toasting	Press the CANCEL  button (11) to stop the cycle and ensure food is suitable for toasting
	Browning level too high	Reduce the set browning level
Food ejects very quickly	Toasting lever (2) not locked in place	Push down the toasting lever (2) until it locks in place



TROUBLESHOOTING

If additional assistance is needed, please contact our Customer Assistance at 1-855-451-2897 (US).

TECHNICAL DATA

Rated voltage: 120V ~ 60Hz

Rated power input: 1600W

Rated current: 13.33A



CUSTOMER ASSISTANCE

If you have a claim under this warranty, please call our Customer Assistance Number. For faster service, please have the model number and product name ready for the operator to assist you. This number can be found on the bottom of your appliance and on the front page of this manual.

Model Number: _____ Product Name: _____

Customer Assistance Number 1-855-451-2897 (US)

Keep these numbers for future reference!

Two-year limited warranty

What does your warranty cover?

- Any defect in material or workmanship.

For how long after the original purchase?

- Two years.

What will we do?

- Provide you with a new one.
- For those items still under warranty but no longer available, WAL-MART reserves the right to replace with a similar FARBERWARE branded product of equal or greater value.

How do you make a warranty claim?

- Save your receipt.
- Properly pack your unit. We recommend using the original carton and packing materials.
- Return the product to your nearest WAL-MART store or call Customer Assistance at 1-855-451-2897 (US).

What does your warranty not cover?

- Parts subject to wear, including, without limitation, glass parts, glass containers, cutter/strainer, blades, seals, gaskets, clutches, motor brushes, and/or agitators, etc.
- Commercial use or any other use not found in printed directions.
- Damage from misuse, abuse, or neglect, including failure to clean product regularly in accordance with manufacturer's instructions.

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.
- This warranty is in lieu of any other warranty or condition, whether express or implied, written or oral, including, without limitation, any statutory warranty or condition of merchantability or fitness for a particular purpose.
- WAL-MART, FARBERWARE and the product manufacturer expressly disclaim all responsibility for special, incidental, and consequential damages or losses caused by use of this appliance. Any liability is expressly limited to an amount equal to the purchase price paid whether a claim, however instituted, is based on contract, indemnity, warranty, tort (including negligence), strict liability, or otherwise. Some states or provinces do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you.

What if you encounter a problem with this product while using it outside the country of purchase?

- The warranty is valid only in the country of purchase and if you follow the warranty claim procedure as noted.

FARBERWARE[®]

© 2012 Farberware Licensing Company, LLC. All Rights Reserved. Copyrights and Trademarks of Farberware Licensing Company, LLC, including FARBERWARE[®], are used under license from Farberware Licensing Company, LLC.