

FRIGIDAIRE®

All about the

Use & Care

of your Toaster Oven

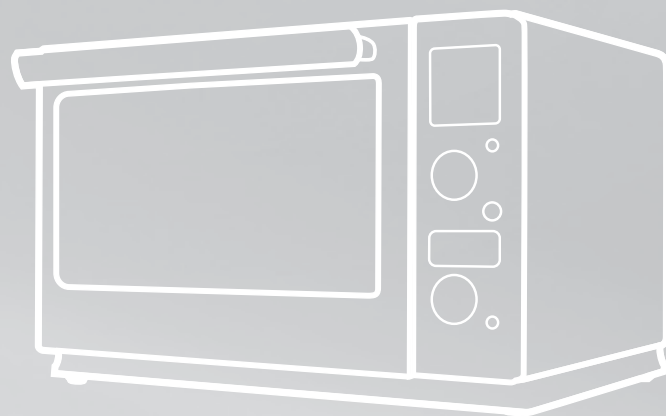


TABLE OF CONTENTS

Important Safeguards.....	2	Cooking with the Toaster Oven.....	8
Toaster Oven Safety Instructions	3	Cleaning Your Toaster Oven.....	12
Parts and Features	4	Troubleshooting	13
Prior To Using Your Toaster Oven.....	7	Warranty Information	14
Setting Cooking Rack Positions	7		

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 Read all instructions.
- 2 Do not touch hot surfaces. Use handles or knobs.
- 3 To protect against electric shock, do not place cord, plugs, or appliance in water or other liquid.
- 4 Close supervision is necessary when any appliance is used by or near children.
- 5 Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 6 Do not operate any appliance with a damaged cord, plug. If the appliance malfunctions, or has been damaged in any manner, return the appliance to the nearest authorized service center for inspection, repair, or adjustment.
- 7 Do not use outdoors.
- 8 Do not let cord touch hot surfaces or hang over edge of table or counter where it can be pulled on by children or tripped over unintentionally.
- 9 Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
- 10 Do not use this appliance for other than intended use.
- 11 Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
- 12 The use of accessory attachments not recommended by the appliance manufacturer may cause serious injuries.
- 13 When operating the oven keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
- 14 Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn the control to OFF, and then remove the cord by grasping and pulling out the plug. Never unplug by pulling on the cord.
- 15 Extreme caution must be used when moving an appliance containing hot oil, or other hot liquids.
- 16 Do not cover Crumb Tray or any part of the Oven with metal foil. This may cause overheating of the Oven.
- 17 Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
- 18 Oversized foods or metal utensils must not be inserted into the Toaster Oven, as they may create a fire or a risk of electric shock.
- 19 While in operation, a fire may occur if the oven is

covered or touching flammable material, including curtains, draperies, walls, and the like. Do not store, or lay any item on the oven during operation.

- 20 Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
- 21 Do not place any of the following materials in the Oven: cardboard, plastic, paper, or other flammable materials.
- 22 Do not store any materials, other than manufacturers recommended accessories, in this Oven when not in use.
- 23 Always wear protective, insulated oven mitts when inserting or removing items from the hot Oven.
- 24 This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching door surface or nicking edges. If the door has a scratch or nick, contact our toll-free consumer relations line before using the oven.
- 25 To turn off the Convection Toaster Oven, press the Start/Cancel button during operation. All eight preset functions will be visible on the display when the unit is turned off.

SAVE THESE INSTRUCTIONS

Consumer Safety Information

THIS UNIT IS FOR HOUSEHOLD USE ONLY.

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug and reinsert. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

CAUTION

Short Cord Instructions: Your Toaster Oven appliance is fitted with a short power supply cord as a safety precaution to prevent personal injury or property damage resulting from pulling, tripping or becoming entangled with a longer cord. Do not allow children to use or be near this appliance without close adult supervision. If an extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, (2) the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Electrical Power

If the electric circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electric circuit from other appliances.

Product Specifications

- ❑ Model Number FPTO06D7MS
- ❑ Rated Wattage 1500W
- ❑ Rated wattage of
 (upper) heating
 elements 900W
- ❑ Rated wattage of
 (lower) heating
 elements 600W
- ❑ Dimension Width 17.75" (450mm)
 Depth 16.7" (421mm)
 Height 11.6" (289mm)
- ❑ Cavity capacity 0.6 cu.ft. (17L)




WARNING

Electrical Shock Hazard

Plug the unit into a properly grounded electrical outlet.

Failure to follow these instructions can result in death, fire, or electrical shock.


PARTS AND FEATURES

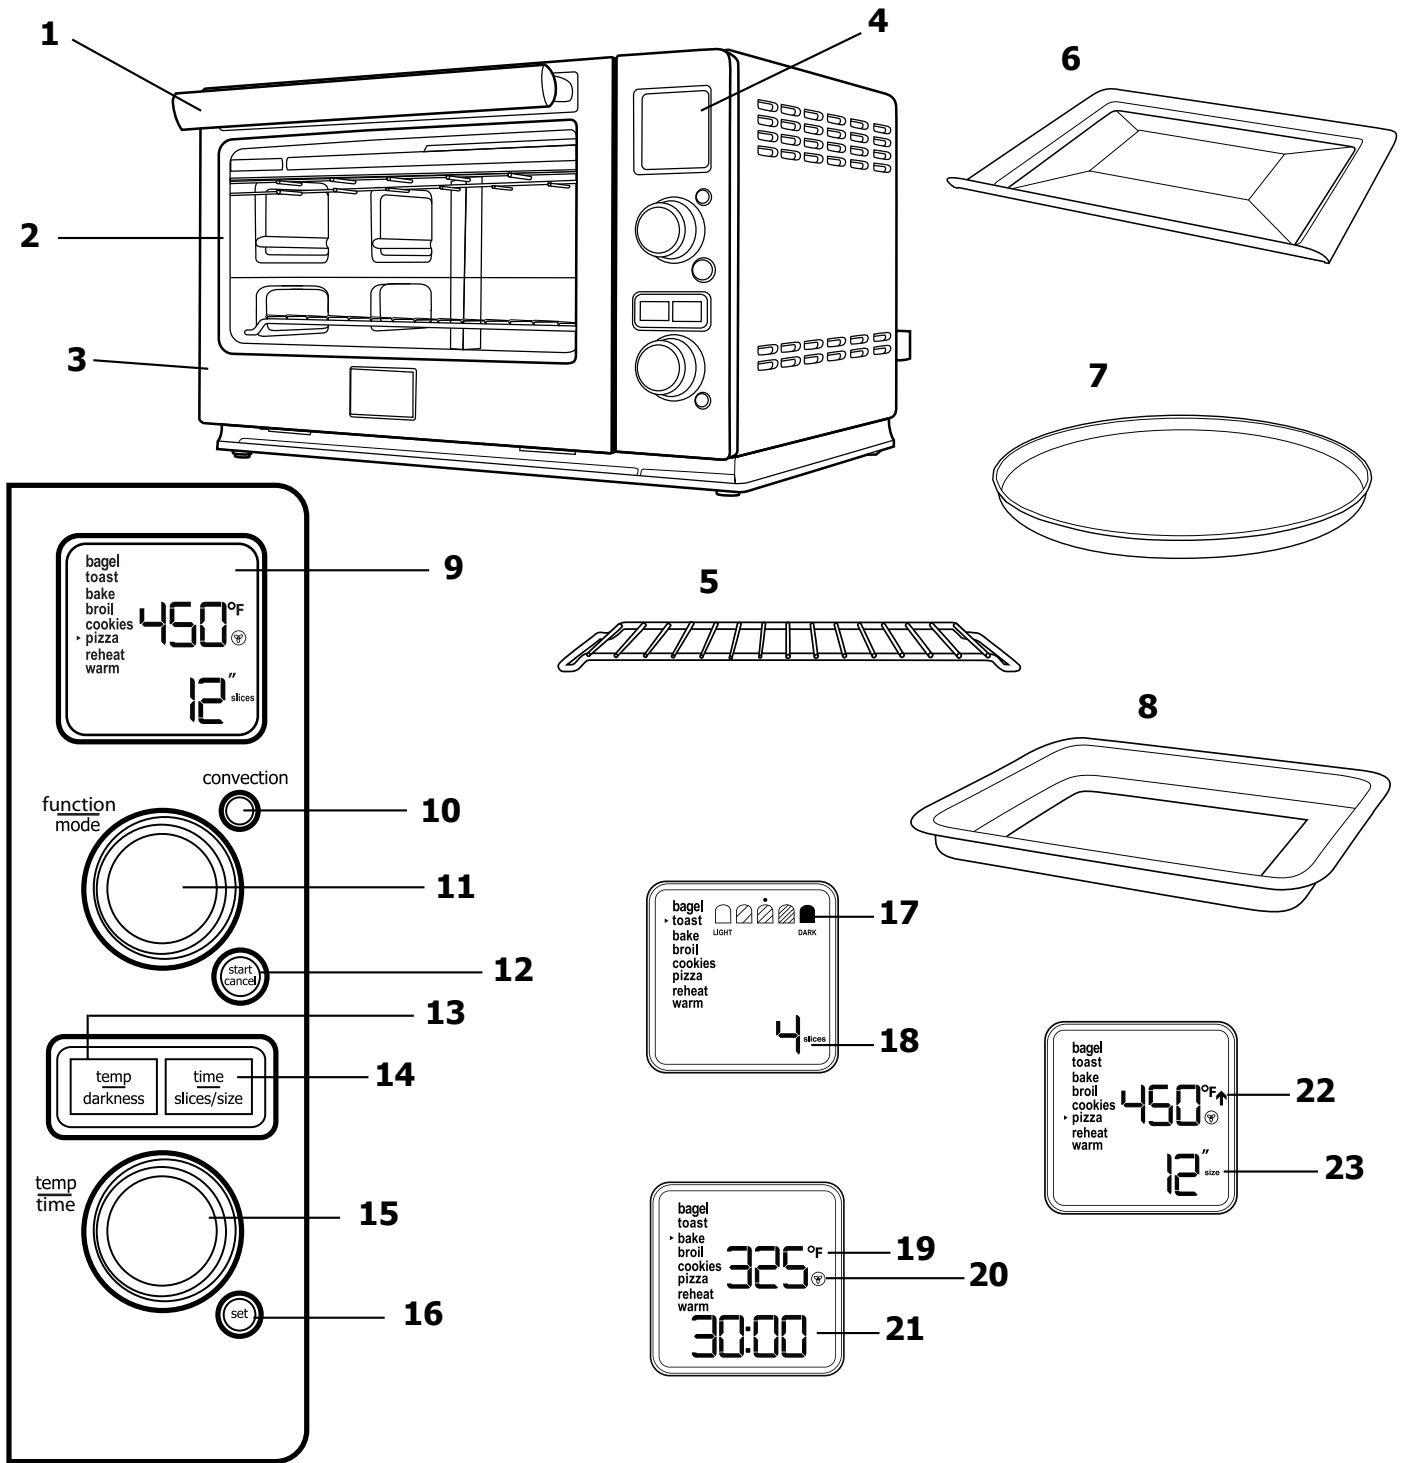

- | | | | |
|-------------------|------------------------------------|-------------------------|---------------------|
| 1 Door Handle | 7 Pizza Pan | 12 Start/Cancel | 18 Number of Slices |
| 2 Flat Glass Door | 8 Bake Pan | 13 Temp/Darkness | 19 Temperature |
| 3 Door Frame | 9 LCD Screen | 14 Time/Slices/Size | 20 Convection Icon |
| 4 Control Panel | 10 PowerPlus™
Convection System | 15 Temp/Timer | 21 Cook Time |
| 5 Cooking Rack | 11 Function/Mode Control | 16 Set | 22 Preheat Icon |
| 6 Crumb Tray | | 17 Toast/Bagel Darkness | 23 Pizza Size |


FEATURES AND ACCESSORIES

 Cooking Rack




May be positioned in the upper, lower, or middle Rack Support Guides. This option is useful for toasting, baking, and general cooking with casseroles and other cookware.

Bake Pan

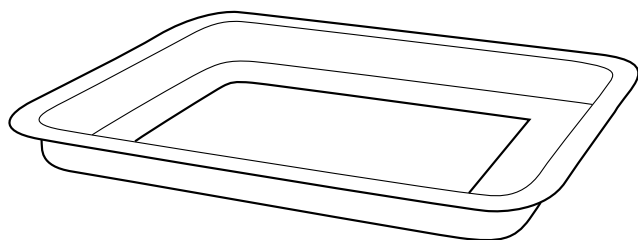

For use in broiling and baking meat, poultry, fish, and various other foods.

Pizza Pan

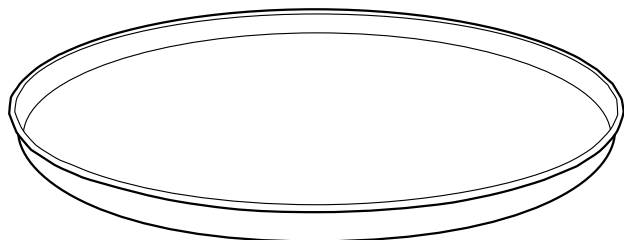

For use in broiling and baking up to a 12" pizza.

Function/Mode Control

Selects the cooking function.

PowerPlus™ Convection System

Turns convection fan on/off.

Start/Cancel

Starts and turns off the Toaster Oven cooking functions. When the Toaster Oven is turned on, only the selected cooking function will be displayed on the LCD. When the Toaster Oven is turned off, all cooking functions are visible.

Temp/Darkness

Used to enter the desired temperature or darkness setting.

Time/Slices/Size

Used to enter the desired time, slices, or size setting.

Temp/Timer


Used to select the temperature, darkness, time, slices, and size.

Set

Used to set the temperature, darkness, time, slices, and size.

TOASTER OVEN FEATURES

Toaster Oven Cooking Racks

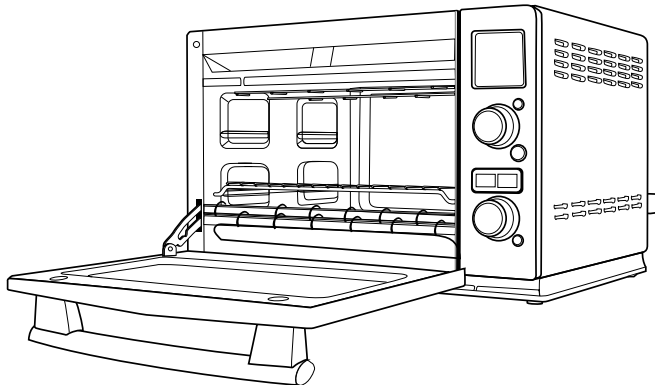


The convenient Cooking rack provides optimal cooking positions for up to 6 slices of toast, and the rack is reversible for optimal cooking heights.

Rack-Positioning Slots

Using the reversible Cooking Rack, the oven can accommodate up to 6 rack positions. There are upper, middle, and lower rack slots along the sides of the oven interior. The middle rack position slot contains a rack stop.

Removable Crumb Tray

The Crumb Tray can be accessed by opening the oven door, and is located at the bottom, inside the oven. The tray can be easily removed for cleaning. Hand washing is recommended. Allow oven to cool prior to removal.

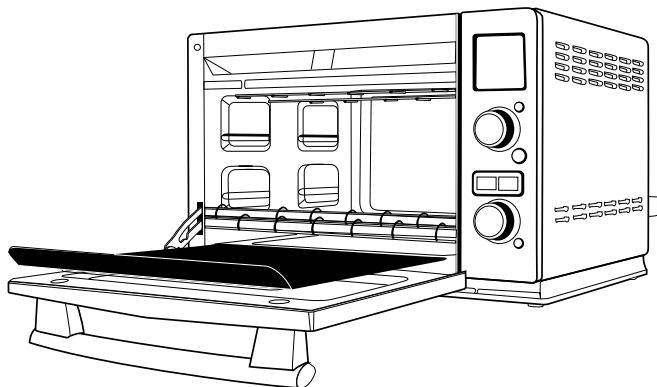

Convection System

Convection fan system that circulates air around the food for faster and more even cooking. It is activated by default for the bake, cookies, pizza, and reheat cooking functions. It can also be turned on during the warm cycle. The fan icon to the right of the temperature display will indicate when the convection fan is activated. Most recipes recommend reducing the temperature by 25°F when cooking with convection.

Always check the food 10 minutes before the suggested cooking time is reached to avoid overcooking. For optimum results, maximize airflow by placing items in the center of the rack, leaving the food uncovered, and using bakeware with lower sides when possible.

Advanced Cooking Technology

The heating elements utilize halogen and quartz infrared technology with a total power output of 1500 watts. These elements use infrared light waves to preheat the oven and cook foods faster than conventional ovens. The elements will cycle on and off during normal operation to cook food more evenly.

PowerPlus® Preheat

Due to the rapid heating of the infrared elements, preheat times are much shorter than toaster ovens with conventional heating elements. For example, the preheat phase for the bake function to reach 325°F with the convection fan on takes approximately 3 minutes. The preheat phase is indicated by the flashing up arrow to the right of the temperature display on the LCD.

Control Panel

The large, easy to read LCD display indicates the cooking functions and settings selected. The large knobs and control buttons provide easy navigation of the different cooking functions and settings.


Time Control

For toast and bagels, the timer will display the time remaining based on which of the 5 darkness levels was selected. For pizza, the timer will display the time remaining based on which size pizza was selected. Alternatively, the cook time for pizza can also be adjusted. For all other functions, the timer will allow the user to set the cook time and, during cooking operation, see the time remaining.

Non-Stick Toaster Oven Interior

The non-stick interior provides an easy to clean interior surface. The 0.6 cubic foot interior is large enough to cook a 12" pizza or make 6 slices of toast.

PRIOR TO USING YOUR TOASTER OVEN

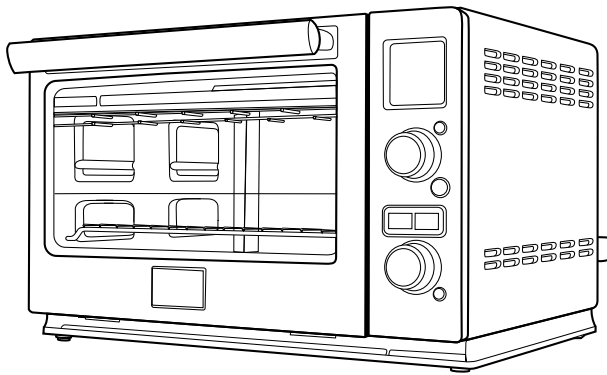

Prior To Using Your Toaster Oven

- 1 Carefully unpack the contents from the box and check to make sure all accessories are accounted for, and that the toaster oven and accessories appear to be free of any physical damage. If you discover any damage, or missing parts, please contact our customer service department at 1-888-845-7330 prior to plugging the unit in.
- 2 Remove any printed material or tape from the Toaster Oven, and then inspect the interior by opening the oven door and looking inside, insuring there are no packaging materials or foreign objects inside the Toaster Oven.
- 3 After inspection, place the Toaster Oven upright on a countertop or table.
- 4 Remove and wash all accessories in hot, soapy water and dry thoroughly before placing back in the oven.
- 5 Plug the Toaster Oven into a grounded electrical outlet. The Toaster Oven should be the only appliance operating on that circuit.
- 6 Set the oven to bake mode at 425°F for 15 minutes and press the start button.

NOTE

During this break-in process, the oven may produce light smoke. This is normal.


- 7 After this cycle completes, the Toaster Oven is now ready to use.

Each Time Before You Cook


- 1 Remove all items not required for the next cooking procedure.
- 2 Plug into a grounded electrical outlet. The Toaster Oven should be the only appliance operating on the circuit.
- 3 The Toaster Oven is now ready to use.

How to Set the Cooking Rack Positions


Top Slot-Rack UP

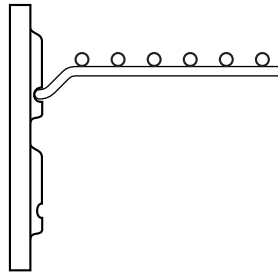


Top Slot-Rack DOWN

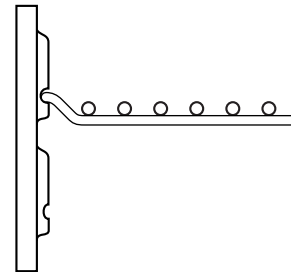


Mid Slot-Rack UP

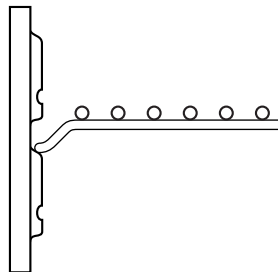


Mid Slot-Rack DOWN

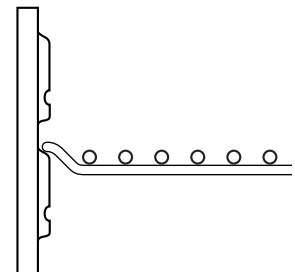

Bottom Slot-Rack UP

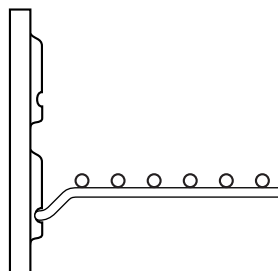

Bottom Slot-Rack DOWN

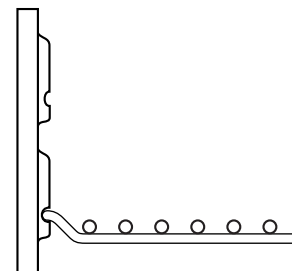

To ensure food cooks uniformly, it is important to use the correct rack height position. Always make sure that food is at least 1" (2.5 cm) away from the cooking elements and always monitor the food while cooking. It may be necessary to move the food to a lower rack position if the top is browning too much or move it to a higher rack position if the bottom is cooking too much.

COOKING WITH THE TOASTER OVEN

Bake Function

Food Position:

Center food on the cooking rack and adjust the rack height so the food is centered in the Toaster Oven. The lower slots with the rack in the up position is a good starting point. Be sure to account for foods that rise when cooked by placing them lower in the Toaster Oven. Because the top and bottom heating elements are activated during this function, adjusting the rack height up or down may be necessary for even cooking.

Convection Fan:

Turned on by default for faster, more even cooking. This will shorten cooking times for most foods by circulating air inside the Toaster Oven. Centering the food and using cookware that allows more circulation will provide the best results. This may be turned off by pressing the Convection button.

- 1 After centering the food in the Toaster Oven and closing the door, turn the Function/Mode control knob to BAKE.
- 2 Press the Temp/Darkness button, and then turn the Temp/Time control knob to the desired cooking temperature per recipe or packaging instructions and press the Set button. Pressing the Set button will select the current temperature (or darkness, Time/Size/Slice setting when adjusting those settings); however, pressing the Time/Size/Slice button or Start/Cancel button or simply waiting five seconds will also set the current temperature, darkness, time, size, or slice.
- 3 Press the Time/Size/Slice button, and turn the Temp/Time control knob to the desired cooking time.
- 4 Press the Start/Cancel button to begin cooking.
- 5 When the time has elapsed, the tone will sound and the oven will automatically shut off.
- 6 If food is to be removed before the cycle ends, simply press the Start/Cancel button to shut the oven off. Then, remove the food.



Broil Function

Food Position:

Broiling is typically used to cook food from the top down and promotes browning on top by only activating the top heating elements. Food will brown quicker the closer it is placed to the top heating elements by utilizing the middle or upper slots; however, food should always be at least 1" (2.5 cm) away from the heating elements. If food is browning too much then the rack height should be lowered or the temperature turned down.

- 1 Place the food to be broiled toward the center of the rack, and then close the oven door. The Toaster Oven does not have an open door feature, so the door must be closed during use.
- 2 Set the Function/Mode control knob to BROIL.
- 3 The default cooking temperature for broiling is preset to 400°F. If you would like to change the temperature setting, press the Temp/Darkness button, and then turn the Temp/Time control knob to select 300°F for low.
- 4 Press the Time/Slice/Size button, and then turn the Temp/Time control knob to the desired cooking time.
- 5 Press the Start/Cancel button to start the oven.
- 6 Monitor the broiling progress since browning with infrared elements can be achieved very quickly.
- 7 When broiling food on both sides, set the time for each side. When the tone sounds, the oven will automatically shut off, and you can then turn the food over and reset the oven for the other side.



NOTE

Food to be broiled should be at least 1" (2.5 cm) from the heating elements on the top of the oven. For foods such as fish or chicken, or where less browning is desired, place the rack in a lower position.

- 8 When the time elapses, a tone will sound and the oven will automatically shut off.
- 9 If food is to be removed before the cycle ends, simply press the Start/Cancel button to shut the Toaster Oven off. Then, remove the food.

CAUTION

Failure to follow these instructions can result in death, fire, or electrical shock.


COOKING WITH THE TOASTER OVEN

Toast Function

Food Position:

Regardless of the number of slices, bread should always be positioned directly on the cooking rack and as close to the center of it as possible for the most even toasting. Generally, the lower slots with the rack in the up position will provide the most even results as both the top and bottom heating elements are activated during this function. Adjust the cooking rack height as needed depending on the type of bread being toasted.

- 1 Place the bread to be toasted directly on the rack. Toast up to six slices of bread at once. When toasting only one or two slices, place the bread in the center of the cooking rack.
- 2 Close the Toaster Oven door.
- 3 Turn the Function/Mode control knob to the Toast setting.
- 4 Press the Temp/Darkness button and turn the Temp/Darkness control knob to the desired darkness setting on the LCD screen.
- 5 Press the Time/Slices/Size button, and then turn the Temp/Time control knob to select the number of slices that you are toasting. That number will be reflected on the LCD screen.
- 6 Press the Start/Cancel button to start the oven.
- 7 When the time elapses, a tone will sound and the oven will automatically shut off.
- 8 If food is to be removed before the cycle ends, simply press the Start/Cancel button to shut the Toaster Oven off. Then, remove the food.

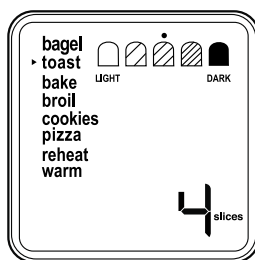

NOTE

It is normal for condensation to form on the glass when toasting moist or fresh breads.

IMPORTANT


When the Toaster Oven is set to the Toast function, the time is replaced by the Darkness and Slices settings. Time and heat can be managed using these settings.

Bagel Function

Food Position:

Bagels (and English muffins) should be sliced in half and placed cut side up. Regardless of the number of slices, bagels should always be positioned directly on the cooking rack and as close to the center of it as possible for the most even toasting. Generally, the lower slots with the rack in the up position will provide the most even results as both the top and bottom heating elements are activated during this function. Adjust the cooking rack height as needed depending on the type of bread products being toasted.

- 1 Place the bagel halves (or English muffin halves) to be toasted directly on the rack. Toast up to six halves at once. When toasting only two halves, place in the center of the cooking rack.
- 2 Close the Toaster Oven door.
- 3 Turn the Function/Mode control knob to the Bagel setting.
- 4 Press the Temp/Darkness button and turn the Temp/Darkness control knob to the desired darkness setting on the LCD screen.
- 5 Press the Time/Slices/Size button, and then turn the Temp/Time control knob to select the number of slices that you are toasting. That number will be reflected on the LCD screen.
- 6 Press the Start/Cancel button to start the oven.
- 7 When the time elapses, a tone will sound and the oven will automatically shut off.
- 8 If food is to be removed before the cycle ends, simply press the Start/Cancel button to shut the Toaster Oven off. Then, remove the food.

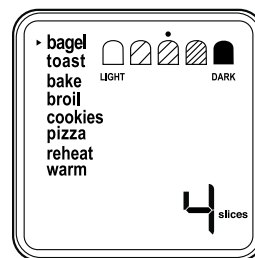

NOTE

It is normal for condensation to form on the glass when toasting moist or fresh bagels.

IMPORTANT

When the toaster Oven is set to Bagel function, the temperature and time is replaced by the Darkness and Slices settings. Temperature and time can be managed using these settings.

COOKING WITH THE TOASTER OVEN

Pizza Function

Food Position:

Pizza should be cooked in the supplied pizza pan and placed in the Toaster Oven so that it does not contact the door when the door is fully closed. The rack should be set in the middle slots in the rack down position.

Convection Fan:

Turned on by default for faster, more even cooking. This may be turned off by pressing the Convection button.

- 1 Using the supplied pizza pan, place the pizza in the pan and onto the cooking rack. (The Toaster Oven has presets for 6", 9", and 12" pizzas).
- 2 Close the Toaster Oven door.
- 3 Turn the Function/Control control knob to the Pizza setting.

- 4 The default temperature is preset to 450°F. To change the preset temperature, press the Temp/Darkness button and then turn the Temp/Time control knob to select the desired temperature.



- 5 Press the Time/Slices/Size button, and then turn the Temp/Time control knob to select the pizza size that you are baking. That number will be reflected on the LCD screen.
- 6 The default baking times are preset to 16 minutes for a 6", 18 minutes for a 9" and 20 minutes for a 12". To change the baking time, press the Time/Size/Slice button and turn the Temp/Time control knob to select desired time.
- 7 Press the Start/Cancel button to start the oven.
- 8 When the time elapses, a tone will sound and the oven will automatically shut off.
- 9 If food is to be removed before the cycle ends, simply press the Start/Cancel button to shut the Toaster Oven off. Then, remove the food.

Cookies Function

Food Position:

Place homemade or prepared cookie dough on the baking pan, pizza pan, or other oven safe bakeware that will not prevent the Toaster Oven door from completely closing. Place the rack in the middle slots in the rack down position as this will provide even cooking since both the top and bottom heating elements are activated during this function.

Convection Fan:

Turned on by default for faster, more even cooking. This may be turned off by pressing the Convection button.

- 1 Place the bakeware with the cookie dough on the cooking rack.
- 2 Close the Toaster Oven door.
- 3 Turn the Function/Mode control knob to the Cookies setting.
- 4 The default temperature is preset to 350°F. To change the preset temperature, press the Temp/Darkness button and then turn the Temp/Time control knob to select the desired temperature.
- 5 The default time is 11 minutes. To change the preset time, press the Time/Slices/Size button, and then turn the Temp/Time control knob to select desired time.
- 6 Press the Start/Cancel button to start the oven.
- 7 When the time elapses, a tone will sound and the oven will automatically shut off.
- 8 If food is to be removed before the cycle ends, simply press the Start/Cancel button to shut the Toaster Oven off. Then, remove the food.



Reheat Function

Food Position:

Ideal for quickly warming up foods, the top and bottom heating elements will activate during this function. Foods should be placed in the center of the Toaster Oven so the rack in the lower slots in the rack up position is generally a good starting point. Adjusting the rack height up or down may be necessary for even heating.

Convection Fan:

Turned on by default for faster, more even cooking. This may be turned off by pressing the Convection button.

- 1 After centering the food in the Toaster Oven and closing the door, turn the Function/Mode control knob to Reheat.
- 2 Press the Temp/Darkness button, and then turn the Temp/Time control knob to the desired reheating temperature.
- 3 Press the Time/Size/Slice button, and turn the Temp/Time control knob to the desired reheating time.
- 4 Press the Start/Cancel



COOKING WITH THE TOASTER OVEN

button to begin reheating.

- 5 When the time has elapsed, the tone will sound and the oven will automatically shut off.
- 6 If food is to be removed before the cycle ends, simply press the Start/Cancel button to shut the Toaster Oven off. Then, remove the food.

Warm Function

Food Position:

Ideal for keeping foods warm, the bottom heating elements will activate during this function. Foods should be placed in the center of the Toaster Oven so the rack in the lower slots in the rack up position is generally a good starting point. Adjusting the rack height up or down may be necessary for even warming.

Convection Fan:

Turned off by default. This may be turned on by pressing the Convection button.

- 1 After centering the food in the Toaster Oven and closing the door, turn the Function/Mode control knob to Warm.
- 2 Press the Temp/Darkness button, and then turn the Temp/Time control knob to the desired warming temperature.
- 3 Press the Time/Size/Slice button, and turn the Temp/Time control knob to the desired warming time.
- 4 Press the Start/Cancel button to begin the warming function.
- 5 When the time has elapsed, the tone will sound and the oven will automatically shut off.
- 6 If food is to be removed before the cycle ends, simply press the Start/Cancel button to shut the Toaster Oven off. Then, remove the food.



CLEANING YOUR TOASTER OVEN

- Prior to cleaning, turn the Toaster Oven off and unplug the unit from the electrical outlet.
- Make sure the Toaster Oven and all surfaces have had ample time to cool.
- For daily cleaning, wipe the outside surface with a clean, damp cloth. To further enhance the finish of the Stainless Steel exterior, Frigidaire recommends Ecosential Stainless Steel Cleaner, by Smart Choice™. You can order on line at: <http://frigidaire.stores.yahoo.net>, or by calling 1-800-599-7579.
- The cooking rack, pizza pan, bake pan, and Crumb Tray are dishwasher-safe, but must be washed in the top rack of the dishwasher. To clean by hand, wash in hot soapy water, rinse, and dry thoroughly before placing these items back in the toaster oven.
- The interior of the oven was manufactured with a nonstick surface. Wash only with cloth, or other soft-surface material. Do not use abrasive or metallic cleaners on the interior, as damage to the nonstick surface may occur.

NOTE

The cooking rack, bake pan and grill are dishwasher safe, and should be washed in the upper rack of the dishwasher.

- Do not use metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.
- Do not immerse the Toaster Oven in water or any other liquid.

TROUBLESHOOTING

Issue	Possible Solutions
The oven does not turn on.	<ul style="list-style-type: none"> • Check that the power plug is securely inserted into the outlet. • Insert the power plug into a different outlet. • Reset the circuit breaker if necessary.
The LCD display is not backlit.	<ul style="list-style-type: none"> • The display will go into standby mode after 60 seconds of not being used. Pressing any button will illuminate the display.
The time, temperature, size, slice, or darkness is not changing when turning the temp/time knob.	<ul style="list-style-type: none"> • The current setting of the time, temperature, size, slice, and darkness will be automatically selected after 5 seconds of inactivity. To adjust the setting, simply press the button for the setting that you wish to change and adjust to your preference.
The bottom heating elements are not glowing like the top heating elements.	<ul style="list-style-type: none"> • This is normal because the top heating elements are halogen infrared which emit a brilliant glow while the bottom heating elements are not.
The heating elements do not stay on during the entire cooking cycle.	<ul style="list-style-type: none"> • This is normal as the oven will regulate the temperature by pulsing the heating elements on and off during the cooking cycle.
Larger foods such as pizza are not cooking or browning uniformly.	<ul style="list-style-type: none"> • Larger items such as 12" pizzas may brown more evenly if they are rotated 90 degrees half way through the cooking time.
If after reading the entire Use and Care Guide you still have questions:	<ul style="list-style-type: none"> • Contact customer service at the phone number listed in the warranty section of this Use and Care Guide.

SMALL DOMESTIC APPLIANCE WARRANTY INFORMATION

Your appliance is covered by a **one year limited warranty**. For one year from your original date of purchase, Electrolux will repair or replace the appliance or parts, at Electrolux's option, that prove to be defective in materials or workmanship when the appliance is installed, used, and maintained in accordance with the provided instructions. Labor and all costs associated with returning the appliance or parts to us and our returning the appliance or parts to you are excluded under this warranty. As a matter of warranty policy, Electrolux will not refund the consumer's purchase price. If a product or part under warranty is no longer available, Electrolux will replace with a comparable product of equal or greater value.

Exclusions: This warranty does not cover the following:

- 1 Products with original serial numbers that have been removed, altered or cannot be readily determined.
- 2 Products that have been transferred from the original owner to another party or removed outside the USA or Canada.
- 3 Rust on the interior or exterior of the unit.
- 4 Products purchased "as-is".
- 5 Food loss due to product failure.
- 6 Products used in a commercial setting or anything but single family household use.
- 7 Labor or service visits under any circumstance.
- 8 Glass parts or containers, filters, non-stick surfaces.
- 9 Ordinary wear and tear.
- 10 Damages caused by improper use, installation, or service; use of parts other than genuine Electrolux parts; negligence; abuse; misuse; inadequate or excessive power supply; accidents; fires; or acts of God.

Keep your receipt or some other appropriate payment record to establish the warranty period. Should warranty service be required, you must show proof of purchase.

If You Need Service:

To obtain warranty service in the USA or Canada, call 1-888-845-7330. Please have the model number, serial number, and date of purchase information available.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES:

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE, AT ELECTROLUX'S SOLE DISCRETION, PRODUCT

OR PART REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

This warranty only applies to products purchased in the USA and CANADA. In the USA, your appliance is warranted by Electrolux Home Care Products, Inc. In Canada, your appliance is warranted by Electrolux Home Care Products Canada Inc. Electrolux authorizes no person to change or add to any obligations under this warranty. Product features or specifications as described or illustrated are subject to change without notice.

USA

1-888-845-7330

Electrolux Home Care Products, Inc.
10200 David Taylor Drive
Charlotte, NC 28262

CANADA

1-888-845-7330

Electrolux Home Care Products Canada Inc.
5855 Terry Fox Way
Mississauga, ON, Canada L5V 3E4