# FUJ¦FILM

# DIGITAL CAMERA FINEPIX F660EXR

# Owner's Manual

Thank you for your purchase of this product. This manual describes how to use your FUJIFILM digital camera and the supplied software. Be sure that you have read and understood its contents and the warnings in "For Your Safety" ( ii) before using the camera.

For information on related products, visit our website at http://www.fujifilm.com/products/digital\_cameras/index.html

First Steps	
Basic Photography and Playback	
More on Photography	
More on Playback	à
Movies	
Connections	Ì
Menus	
Technical Notes	
Troubleshooting	
Appendix	





**Before You Begin** 

# **IMPORTANT SAFETY INSTRUCTIONS**

- <u>Read Instructions</u>: All the safety and operating instructions should be read before the appliance is operated.
- <u>Retain Instructions</u>: The safety and operating instructions should be retained for future reference.
- <u>Heed Warnings</u>: All warnings on the appliance and in the operating instructions should be adhered to.
- Follow Instructions: All operating and use instructions should be followed.

#### Installation

Power Sources: This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

Grounding or Polarization: This video product is equipped with a polarized alternatingcurrent line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. Alternate Warnings: This video product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

**Overloading**: Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

Ventilation: Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface.

This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. This video product should never be placed near or over a radiator or heat register.

Attachments: Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

Water and Moisture: Do not use this video product near water—for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

Power-Cord Protection: Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

Accessories: Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.




### For Your Safety

#### Antennas

Duttoor Antenna Grounding: If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and builtup static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

#### EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

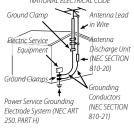

Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

### Use

Cleaning: Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Object and Liquid Entry: Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spiill liquid of any kind on the video product.

Lightning: For added protection for this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.

### Service

Servicing: Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Damage Requiring Service: Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the video product.
- If the video product has been exposed to rain or water.
- If the video product has been dropped or the cabinet has been damaged.

If the video product does not operate nor-

mally follow the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.

When the video product exhibits a distinct change in performance—this indicates a need for service.

Replacement Parts: When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

Safety Check: Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.

### Be sure to read these notes before use

### Safety Notes

- Make sure that you use your camera correctly. Read these safety notes and your Owner's Manual carefully before use.
- · After reading these safety notes, store them in a safe place.

### About the lcons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.



This icon indicates that death or serious injury can result if the information is ignored.

This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the instructions which are to be observed.



Triangular icons tell you that this information requires attention ("Important").

Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").

Filled circles with an exclamation mark indicate an action that must be performed ("Required").





If a problem arises, turn the camera off, remove the battery, and disconnect and unplug the AC power adapter. Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock. Contact your FUJIFILM dealer.



Do not allow water or foreign objects to enter the camera. If water or foreign objects get inside the camera, turn the camera off, remove the battery, and disconnect and unplug the AC power adapter. Continued use of the camera can cause a fire or electric shock. Contact your FUJIFILM dealer.

# 🕂 WARNING

#### Do not use the camera in the bathroom or shower. This can cause

Do not use in a fire or electric shock.



Never attempt to change or take apart the camera (never open the case). Failure to observe this precaution can cause fire or electric shock.



Should the case break open as the result of a fall or other accident, do not touch the exposed parts. Failure to observe this precaution could result in electric shock or in injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of purchase for consultation.



Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord. These actions could damage the cord and cause a fire or electric shock. If the cord is damaged, contact your FUJIFILM dealer.



**Do not place the camera on an unstable surface.** This can cause the camera to fall or tip over and cause injury.

**Never attempt to take pictures while in motion.** Do not use the camera while you are walking or driving a vehicle. This can result in you falling down or being involved in a traffic accident.



 
**Do not touch any metal parts of the camera during a thunderstorm.** This can cause an electric shock due to induced current from the lightning discharge.




**Do not use the battery except as specified.** Load the battery as shown by the indicator.

Do not heat, change or take apart the battery. Do not drop or subject the battery to impacts. Do not store the battery with metallic products. Any of these actions can cause the battery to burst or leak and cause fire or injury as a result.

Use only the battery or AC power adapters specified for use with this camera. Do not use voltages other than the power supply voltage shown. The use of other power sources can cause a fire.



### For Your Safety

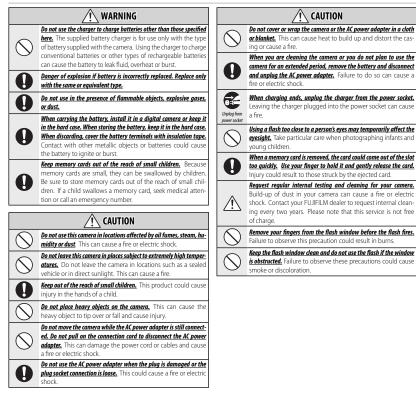

### The Battery and Power Supply

**Note:** Check the type of battery used in your camera and read the appropriate sections.

The following describes the proper use of batteries and how to prolong their life. Incorrect use can shorten battery life or cause leakage, overheating, fire, or explosion.

### Li-ion Batteries

Read this section if your camera uses a rechargeable Li-ion battery.

The battery is not charged at shipment. Charge the battery before use. Keep the battery in its case when not in use.

#### Notes on the Battery

The battery gradually loses its charge when not in use. Charge the battery one or two days before use.

Battery life can be extended by turning the camera off when not in use.

Battery capacity decreases at low temperatures; a depleted battery may not function at when cold. Keep a fully charged spare battery in a warm place and exchange as necessary, or keep the battery in your pocket or other warm place and insert it in the camera only when shooting. Do not place the battery in direct contact with hand warmers or other heating devices.

#### Charging the Battery

Charge the battery in the supplied battery charger. Charging times will increase at ambient temperatures below +10°C (+50°F) or above +35°C (+95°F). Do not attempt to charge the battery at temperatures above 40°C (+104°F); at temperatures below 0°C (+32°F), the battery will not charge.

Do not attempt to recharge a fully charged battery. The battery does not however need to be fully discharged before charging.

The battery may be warm to the touch immediately after charging or use. This is normal.

#### Battery Life

At normal temperatures, the battery can be recharged about 300 times. A noticeable decrease in the length of time the battery will hold a charge indicates that it has reached the end of its service life and should be replaced.

#### Storage

Performance may be impaired if the battery is left unused for extended periods when fully charged. Run the battery flat before storing it.

If the camera will not be used for an extended period, remove the battery and store it in a dry place with an ambient temperature of from  $+15^{\circ}C$  to  $+25^{\circ}C$  ( $+59^{\circ}F$  to  $+77^{\circ}F$ ). Do not store in locations exposed to extremes of temperature.

### Cautions: Handling the Battery

- Do not transport or store with metal objects such as necklaces or hairpins.
- · Do not expose to flame or heat.
- · Do not disassemble or modify.
- Use with designated chargers only.
- Do not drop or subject to strong physical shocks.
- · Do not expose to water.
- · Keep the terminals clean.
- The battery and camera body may become warm to the touch after extended use. This is normal.

#### AA Alkaline/Rechargeable Ni-MH Batteries

Read this section if your camera uses AA alkaline or rechargeable AA Ni-MH batteries. Information on compatible battery types may be found elsewhere in the camera manual.

#### Cautions: Handling the Batteries

- Do not expose to water, flame, or heat, or store in warm or humid conditions.
- Do not transport or store with metal objects such as necklaces or hairpins.
- Do not disassemble or modify the batteries or battery casing.
- · Do not subject to strong physical shocks.
- Do not use batteries that are leaking, deformed, or discolored.
- Keep out of reach of infants and small children.
- · Insert in the correct orientation.

- Do not mix old and new batteries, batteries with different charge levels, or batteries of different types.
- If the camera will not be used for an extended period, remove the batteries. Note that the camera clock will be reset.
- The batteries may be warm to the touch immediately after use. Turn the camera off and allow the batteries to cool before handling.
- Battery capacity tends to decrease at low temperatures. Keep spare batteries in a pocket or other warm place and exchange as necessary. Cold batteries may recover some of their charge when warmed.
- Fingerprints and other stains on the battery terminals can impair battery performance. Thoroughly clean the terminals with a soft, dry cloth before inserting them in the camera.



If the batteries leak, clean the battery compartment thoroughly before inserting new batteries.



If fluid from the battery comes into contact with skin or clothing, flush the affected area with water. If fluid enters your eyes, immediately flush the affected area with water and seek medical attention. Do not rub your eyes. Failure to observe this precaution could result in permanent visual impairment.

#### Ni-MH Batteries

The capacity of Ni-MH batteries may be temporarily reduced when new, after long periods of disuse, or if they are repeatedly recharged before being fully discharged. This is normal and does not indicate a malfunction. Capacity can be increased by repeatedly discharging the batteries using the discharge option in the camera setup menu and recharging them using a battery charger.

① CAUTION: Do not use the discharge option with alkaline batteries.

The camera draws a small amount of current even when off. Ni-MH batteries that have been left in the camera for an extended period may be drawn down to the point that they no longer hold a charge. Battery performance may also drop if the batteries are run down in a device such as a flashlight. Use the discharge option in the camera setup menu to discharge NI-MH batteries. Batteries that no longer hold a charge even after repeatedly being discharged and recharged have reached the end of their service life and must be replaced.

Ni-MH batteries can be recharged in a battery charger (sold separately). Batteries may become warm to the touch after charging. Refer to the instructions provided with the charger for more information. Use the charger with compatible batteries only.

Ni-MH batteries gradually lose their charge when not in use.

#### Disposal

Dispose of used batteries in accord with local regulations.

### AC Power Adapters (Available Separately)

This section applies to all camera models. Use only FUJIFILM AC power adapters designated for use with this camera. Other adapters could damage the camera.

- The AC power adapter is for indoor use only.
- Be sure the DC plug is securely connected to the camera.
- Turn the camera off before disconnecting the adapter. Disconnect the adapter by the plug, not the cable.
- · Do not use with other devices.
- Do not disassemble.
- · Do not expose to high heat and humidity.
- · Do not subject to strong physical shocks.
- The adapter may hum or become hot to the touch during use. This is normal.
- If the adapter causes radio interference, reorient or relocate the receiving antenna.

#### Using the Camera

Do not aim the camera at extremely bright light sources, such as the sun in a cloudless sky. Failure to observe this precaution could damage the camera image sensor.

### Take Test Shots

Before taking photographs on important occasions (such as at weddings or before taking the camera on a trip), take a test shot and view the result in the LCD monitor to ensure that the camera is functioning normally. FUJIFILM Corporation can not accept liability for damages or lost profits incurred as a result of product malfunction.

### Notes on Copyright

Unless intended solely for personal use, images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner. Note that some restrictions apply to the photographing of stage performances, entertainments, and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of memory cards containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

#### Handling

To ensure that images are recorded correctly, do not subject the camera to impact or physical shocks while images are being recorded.

### Liquid Crystal

In the event that the LCD monitor is damaged, care should be taken to avoid contact with liquid crystal. Take the urgent action indicated should any of the following situations arise:

- If liquid crystal comes in contact with your skin, clean the area with a cloth and then wash thoroughly with soap and running water.
- If liquid crystal enters your eyes, flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- If liquid crystal is swallowed, rinse your mouth thoroughly with water. Drink large quantities of water and induce vomiting, then seek medical assistance.

Although the display is manufactured using extremely high-precision technology, it may contain pixels that are always lit or that do not light. This is not a malfunction, and images recorded with the product are unaffected.

### Trademark Information

xD-Picture Card and *P* are trademarks of FUJIFILM Corporation. The typefaces included herein are solely developed by Dyna-Comware Taiwan Inc. Macintosh, OuickTime, and Mac OS are trademarks of Apple Inc. in the U.S.A. and other countries. Windows 7. Windows Vista, and the Windows logo are trademarks of the Microsoft group of companies. Adobe and Adobe Reader are either trademarks or registered trademarks of Adobe Systems Incorporated in the U.S.A. and/or other countries. The SDHC and SDXC logos are trademarks of SD-3C, LLC. The HDMI logo is a trademark. YouTube is a trademark of Google Inc. All other trade names mentioned in this manual are the trademarks or registered trademarks of their respective owners.

#### Electrical Interference

This camera may interfere with hospital or aviation equipment. Consult with hospital or airline staff before using the camera in a hospital or on an aircraft.

#### **Color Television Systems**

NTSC (National Television System Committee) is a color television telecasting specification adopted mainly in the U.S.A., Canada, and Japan. PAL (Phases Alternation by Line) is a color television system adopted mainly in European countries and China.

#### Exif Print (Exif Version 2.3)

Exif Print is a newly revised digital camera file format in which information stored with photographs is used for optimal color reproduction during printing.

### IMPORTANT NOTICE: Read Before Using the Software

Direct or indirect export, in whole or in part, of licensed software without the permission of the applicable governing bodies is prohibited.

# **About This Manual**

Before using the camera, read this manual and the warnings in "For Your Safety" (
ii). For information on specific topics, consult the sources below.

# Table of ContentsImage: Second se

*Warning Messages and Displays ...* III **118** Find out what's behind that flashing icon or error message in the display.

pal camera operations are listed here.

Troubleshooting ..... II 112

Having a specific problem with the camera? Find the answer here.


### Memory Cards

Pictures can be stored in the camera's internal memory or on optional SD, SDHC, and SDXC memory cards (🕮 12), referred to in this manual as "memory cards."

### Temperature Warning

The camera will turn off automatically before its temperature or the temperature of the battery rise above safe limits. Pictures taken when a temperature warning is displayed may exhibit higher levels of "noise" (mottling). Turn the camera off and wait for it to cool before turning it on again.

# Frequently-Used Buttons

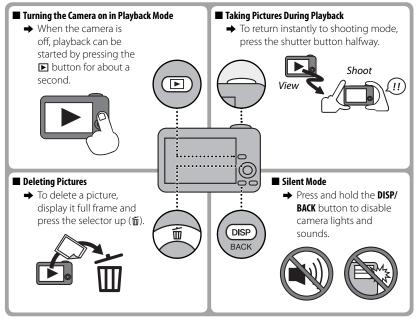

For Your Safety	ii
IMPORTANT SAFETY INSTRUCTIONS	
Safety Notes	iv
About This Manual	
Frequently-Used Buttons	X

### **Before You Begin**

Symbols and Conventions	······
Supplied Accessories	
Parts of the Camera	
Camera Displays	4
Shooting	
Playback	

# **First Steps**

Charging the Battery	7
Inserting the Battery and a Memory Card	
Compatible Memory Cards	12
Turning the Camera on and Off	14
Shooting Mode	
Playback Mode	
Basic Setup	

# **Basic Photography and Playback**

Taking Pictures in 🔛 (EXR AUTO) Mod	e17
Viewing Pictures	21

More on Photography	
Shooting Mode	22
EXR (EXR AUTO/EXR Priority)	23
EXR Priority	24
Adv. ADVANCED	
MOTION PANORAMA 360	25
PRO FOCUS	
💼 PRO LOW-LIGHT	29
MULTIPLE EXPOSURE	30
🔒 INDIVID. SHUTTER 3D	31
SP SCENE POSITION	33
M MANUAL	35
A APERTURE PRIORITY AE	35
S SHUTTER PRIORITY AE	
P PROGRAM AE	36
Focus Lock	37
Exposure Compensation	39
🕱 Macro Mode (Close-ups)	40
4 Using the Flash (Super-Intelligent Flash)	41
🖒 Using the Self-Timer	43
🕰 Intelligent Face Detection	44
🚇 Continuous Shooting	45
<b>O</b> TOP <i>n</i>	
💁 BEST FRAME CAPTURE	47
🖷 AE BKT	
FILM SIMULATION BKT	49
DYNAMIC RANGE BKT	49
🖾 Face Recognition	50
Adding New Faces	50
Viewing, Editing, and Deleting Existing Data	52
Adding Faces Automatically	52

# More on Playback

Playback Options	54
Continuous Shooting	54
★ Favorites: Rating Pictures	54
Playback Zoom	55
Multi-Frame Playback	56
Deleting Pictures	57
🐼 Image Search	58
PhotoBook Assist	59
Creating a PhotoBook	59
Viewing Photobooks	60
Editing and Deleting Photobooks	60
Viewing Panoramas	
Viewing Photo Information	

### Movies

Recording Movies	64
Movie Frame Size	
Viewing Movies	66

### Connections

Viewing Pictures on TV	67
Printing Pictures via USB	69
Printing the DPOF Print Order	71
Viewing Pictures on a Computer	73
Windows: Installing MyFinePix Studio	73
Macintosh: Installing FinePixViewer	76
Connecting the Camera	78

### Menus

Using the Menus: Shooting Mode	81
Using the 🗲 - Mode Menu	
🗲 - Mode Menu Options	81
ISO ISO	81
MAGE SIZE	
CONTINUOUS	
📾 ADVANCED ANTI BLUR	
FILM SIMULATION	
Using the Shooting Menu	
Shooting Menu Options	
EXR MODE	
Adv. MODE	
SCENE POSITION	
ISO	
IMAGE SIZE	
▲ IMAGE QUALITY	
DR00 DYNAMIC RANGE	
FILM SIMULATION	
WB WHITE BALANCE	
INTELLIGENT SHARPNESS	
ADVANCED ANTI BLUR	
FACE DETECTION	
D PHOTOMETRY	
AF MODE     AF MODE     EXTERNATION	
_	
MOVIE MODE	
STILL SHOOTING IN MOVIE	
AE DNIEV SIEPS	89

Using the Menus: Playback Mode	90
Using the F-Mode Menu	90
F-Mode Menu Options	90
PHOTOBOOK ASSIST	90
I SLIDE SHOW	90
Using the Playback Menu	91
Playback Menu Options	91
PHOTOBOOK ASSIST	
🐼 IMAGE SEARCH	91
💼 ERASE	91
🚳 MARK FOR UPLOAD TO	92
SLIDE SHOW	93
RED EYE REMOVAL	93
• PROTECT	93
🖾 CROP	94
🔚 RESIZE	94
IMAGE ROTATE	95
COPY COPY	95
VOICE MEMO	96
😭 ERASE FACE RECOG.	96
PRINT ORDER (DPOF)	96
📃 DISP ASPECT	97

The Setup Menu	98
Using the Setup Menu	98
Setup Menu Options	99
OATE/TIME	99
🔁 TIME DIFFERENCE	99
■ 言語/LANG	99
SILENT MODE	99
😪 RESET	100
🕞 FORMAT	100
🖃 IMAGE DISP	100
🖭 FRAME NO	
↔ ● OPERATION VOL	101
🗪 SHUTTER VOLUME	
SHUTTER SOUND	102
PLAYBACK VOLUME	102
LCD BRIGHTNESS	
MONITOR SUNLIGHT MODE	102
auto power off	
🐲 DUAL IS MODE	103
RED EYE REMOVAL	
INTELLIGENT DIGITAL ZOOM	
AF ILLUMINATOR	
■ SAVE ORG IMAGE	
AUTOROTATE PB	
BACKGROUND COLOR	
GUIDANCE DISPLAY	
NTSC VIDEO SYSTEM	
CT POWER MANAGEMENT	
DATE DATE STAMP	
START-UP SCREEN	
තුෂ WATERPROOF CASE	107

Technical Notes	
Optional Accessories	
Accessories from FUJIFILM	109
Caring for the Camera	110
Storage and Use	110
Cleaning	111
Traveling	111
Troubleshooting	

Problems and Solutions	112
Warning Messages and Displays	118

### Appendix

Internal Memory/Memory Card Capacity	122
Specifications	123

# **Before You Begin**

# Symbols and Conventions


The following symbols are used in this manual:

- $\ensuremath{\mathbbm O}$  : This information should be read before use to ensure correct operation.
- > : Additional information that may be helpful when using the camera.
- 🖽 : Other pages in this manual on which related information may be found.

Menus and other text in the displays are shown in **bold**. In the illustrations in this manual, displays may be simplified for explanatory purposes.


# Supplied Accessories

The following items are included with the camera:

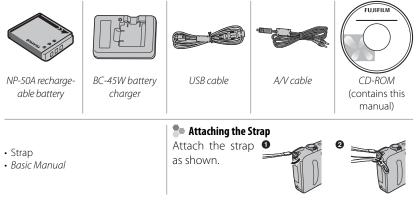

# Parts of the Camera

For more information, refer to the page listed to the right of each item.

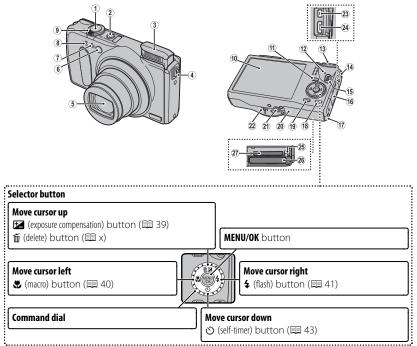

\* The illustrations in this manual have been simplified for explanatory purposes.

### Parts of the Camera

1 Shutter button	15 📌 (movie recording) button
<b>2 ON/OFF</b> button	16 Terminal cover
3 Flash	17 DC coupler cable cover 109
4 Flash pop-up button	18 <b>F</b> (photo mode) button81, 90
5 Lens and lens cover	Monitor sunlight mode <sup>1</sup> 6
	19 DISP (display)/BACK button6, 16
Self-timer lamp 43	silent mode) button <sup>2</sup> x
7 Microphone (R)64, 96	20 Battery-chamber cover
8 Microphone (L)64, 96	21 Tripod mount
9 Zoom control	22 Speaker
10 LCD monitor	23 USB multi-connector
11 ▶ (playback) button 21	
12 Indicator lamp (see below)	25 Battery latch9, 11
13 Mode dial 22	26 Battery chamber9
14 Strap eyelet 1	27 Memory card slot 10
1 Press and hold the $\mathbf{F}$ button for monitor sunlight mode.	

2 Press and hold the **DISP/BACK** button until 🙀 is displayed.

# The Indicator Lamp

The indicator lamp shows camera status as follows:

Indicator lamp	Camera status
Glows green	Focus locked.
Blinks green	Blur, focus, or exposure warning. Picture can be taken.
Blinks green and orange	Recording pictures. Additional pictures can be taken.
Glows orange	Recording pictures. No additional pictures can be taken at this time.
Blinks orange	Flash charging; flash will not fire when picture is taken.
Blinks red	Lens or memory error.

# <u>Camera Displays</u>


The following types of indicator may be displayed during shooting and playback. Indicators vary with camera settings.

# Shooting

	11       Number of available frames
20       +12/31/2050       10:00 AM         250       F3.5       E2       -1%         23       22       21       20       19         1 Shooting mode       22       21       20       19         2 Intelligent Face Detection indicator       44	18 Dual IS mode         103           19 Blur warning         42, 118           20 Focus warning         19, 118           21 Exposure compensation         39           22 Aperture         23 Shutter speed
3 Metering	24         Date and time

\* 🚯 : indicates that no memory card is inserted and that pictures will be stored in the camera's internal memory (💷 10).

# Playback

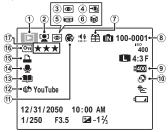

		24 54
Ľ	Playback mode indicator	
2	Intelligent Face Detection indicator	44, 93
3	Red-eye removal indicator	93
4	Pro focus mode, pro low-light mode	28, 29
5	Motion panorama 📾	61
6	3D image	31
7	Gift image	54
8	Frame number	101
9	Dynamic range	85
10	EXR mode	23
11	Portrait enhancer	33
12	Mark for upload to	92
13	Photobook assist	59
14	Voice memo indicator	96
15	DPOF print indicator	71
16	Protected image	93
_	Favorites	
_		

se Battery Level		
Battery level is shown as follows:		
Indicator Description		
(white)	Battery partially discharged.	
(white)	Battery more than half discharged.	
<b>4</b> (red)	Low battery. Charge as soon as possible.	
d (blinks red)	□ (blinks red) Battery exhausted. Turn camera off and charge battery.	

### Hiding and Viewing Indicators

Press DISP/BACK to cycle through shooting and playback indicators as follows:

- Shooting: Indicators displayed/indicators hidden/best framing/HD framing/histogram
- Playback: Indicators displayed/indicators hidden/★ favorites (🕮 54)/photo info (🕮 62)

### Bright Ambient Lighting

Reflections and glare caused by bright ambient lighting may make it hard to see the display in the monitor, particularly when the camera is used outdoors. This can be addressed by holding the *F* button to trigger outdoor mode. Outdoor mode can also be enabled using the **MONITOR SUNLIGHT MODE** option in the setup menu (■ 102).

# **First Steps**

 
# Charging the Battery

The battery is not charged at shipment. Charge the battery before use.

# 1 Place the battery in the supplied battery charger.

Insert the battery in the orientation indicated by the  $\ominus \oplus \oplus$  labels.

The camera uses an NP-50A rechargeable battery.



# 2 Plug the charger in.

Plug the charger into an indoor power outlet. The charging indicator will light.

# The Charging Indicator

The charging indicator shows battery charge status as follows:

Charging indicator	Battery status	Action
Off	Battery not inserted.	Insert the battery.
OII	Battery fully charged.	Remove the battery.
On	Battery charging.	
Blinks	Battery fault.	Unplug the charger and remove the battery.

# 3 Charge the battery.

Remove the battery when charging is complete. See the specifications (
127) for charging times (note that charging times increase at low temperatures).

 
① Unplug the charger when it is not in use.

# Inserting the Battery and a Memory Card

Although the camera can store pictures in internal memory, optional SD, SDHC, and SDXC *memory cards* (sold separately) can be used to store additional pictures. After charging the battery, insert the battery and memory card as described below.

# 1 Open the battery-chamber cover.

- Be sure the camera is off before opening the battery-chamber cover.
- ① Do not open the battery-chamber cover when the camera is on. Failure to observe this precaution could result in damage to image files or memory cards.



① Do not use excessive force when handling the battery-chamber cover.

# **2** Insert the battery.

Align the orange stripe on the battery with the orange battery latch and slide the battery into the camera, keeping the battery latch pressed to one side. Confirm that the battery is securely latched.

① Insert the battery in the correct orientation. Do NOT use force or attempt to insert the battery upside down or backwards. The battery will slide in easily in the correct orientation. Orange stripe

 


Battery latch


# 3 Insert the memory card.


Holding the memory card in the orientation shown at right, slide it in until it clicks into place at the back of the slot.

- ① Be sure card is in the correct orientation; do not insert at an angle or use force. If the memory card is not correctly inserted or no memory card is inserted, 1 will appear in the LCD monitor and internal memory will be used for recording and playback.
- ① SD/SDHC/SDXC memory cards can be locked, making it impossible to format the card or to record or delete images. Before inserting an SD/SDHC/SDXC memory card, slide the write-protect switch to the unlocked position.
- **4** Close the battery-chamber cover.



Click

 

 

Write-protect switch

# Using an AC Power Adapter

- The camera can be powered by an optional AC power adapter and DC coupler (sold separately). See the manuals provided with the AC power adapter and DC coupler for details.
- Depending on the country or region of sale, a demo mode slide show may start if the camera is turned on while powered by an AC power adapter. Press the shutter button to end the show.

# Removing the Battery and Memory Card

Before removing the battery or memory card, *turn the camera off* and open the battery-chamber cover.

To remove the battery, press the battery latch to the side, and slide the battery out of the camera as shown.

To remove the memory card, press it in and release it slowly. The card can then be removed by hand. When a memory card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card.



# Compatible Memory Cards

FUJIFILM and SanDisk SD, SDHC, and SDXC memory cards have been approved for use in the camera. A complete list of approved memory cards is available at *http://www.fujifilm.com/support/digital\_cameras/compatibility/*. Operation is not guaranteed with other cards. The camera can not be used with *xD-Picture Cards* or MultiMediaCard (MMC) devices.

### ① Memory Cards

- Do not turn the camera off or remove the memory card while the memory card is being formatted or data are being recorded to or deleted from the card. Failure to observe this precaution could damage the card.
- Format SD/SDHC/SDXC memory cards before first use, and be sure to reformat all memory cards after using them in a computer or other device. For more information on formatting memory cards, see " FORMAT" (E 100).
- Memory cards are small and can be swallowed; keep out of reach of children. If a child swallows a memory card, seek medical assistance immediately.
- miniSD or microSD adapters that are larger or smaller than the standard dimensions of an SD/SDHC/SDXC card may not eject normally; if the card does not eject, take the camera to an authorized service representative. Do not forcibly remove the card.
- Do not affix labels to memory cards. Peeling labels can cause camera malfunction.
- Movie recording may be interrupted with some types of SD/SDHC/SDXC memory card. Use a **CLASS** card or better when shooting HD or high-speed movies.

- The data in internal memory may be erased or corrupted when the camera is repaired. Please note that the repairer will be able to view pictures in internal memory.
- Formatting a memory card or internal memory in the camera creates a folder in which pictures are stored. Do not rename or delete this folder or use a computer or other device to edit, delete, or rename image files. Always use the camera to delete pictures from memory cards and internal memory; before editing or renaming files, copy them to a computer and edit or rename the copies, not the originals.

 
### ① Batteries

- Remove dirt from the battery terminals with a clean, dry cloth. Failure to observe this precaution could prevent the battery from charging.
- Do not affix stickers or other objects to the battery. Failure to observe this precaution could make it impossible to remove the battery from the camera.
- Do not short the battery terminals. The battery could overheat.
- Read the cautions in "The Battery and Power Supply" (🕮 vi).
- Use only battery chargers designated for use with the battery. Failure to observe this precaution could result in product malfunction.
- Do not remove the labels from the battery or attempt to split or peel the outer casing.
- The battery gradually loses its charge when not in use. Charge the battery one or two days before use.

# Turning the Camera on and Off

# Shooting Mode

Press the **ON/OFF** button to turn the camera on. The lens will extend automatically.






Press **ON/OFF** again to turn the camera off.

# Switching to Playback Mode

 Press the D button to start playback. Press the shutter button halfway to return to shooting mode.

# Playback Mode

To turn the camera on and begin playback, press the **D** button for about a second.



Press the **D** button again or press the **ON/OFF** button to turn the camera off.

# Switching to Shooting Mode

To exit to shooting mode, press the shutter button halfway. Press the **D** button to return to playback.

- ${\scriptstyle \oplus}\,$  Forcibly obstructing the lens could cause damage or product malfunction.
- ${\scriptstyle \oplus}\,$  Fingerprints and other marks on the lens can affect pictures. Keep the lens clean.
- ${\rm \textcircled{O}}$  The **ON/OFF** button does not completely end the supply of power to the camera.

### Auto Power Off

The camera will turn off automatically if no operations are performed for the length of time selected for  $\blacksquare$  **AUTO POWER OFF** ( $\blacksquare$  102).

# Basic Setup

 
A language-selection dialog is displayed the first time the camera is turned on. Set up the camera as described below (you can reset the clock or change languages at any time using the **O DATE/TIME** or **O 言語/LANG**. options in the setup menu; for information on displaying the setup menu, see page 99).

1 Highlight a language and press MENU/OK.

- Press DISP/BACK to skip the current step. Any steps you skip will be displayed the next time the camera is turned on.
- 2 The date and time will be displayed. Press the selector left or right to highlight the year, month, day, hour, or minute and press up or down to change. To change the order in which the year, month, and day are displayed, highlight the date format and press the selector up or down. Press **MENU/OK** when settings are complete.
- **3** Power management options will be displayed. Press the selector up or down to highlight one of the following options and then press **MENU/OK**:
  - Dia POWER SAVE: Save battery power.
  - 🗇 CLEAR DISPLAY: Choose for a brighter, higher quality display.

# The Camera Clock

If the battery is removed for an extended period, the camera clock will be reset and the language-selection dialog will be displayed when the camera is turned on.





# **Basic Photography and Playback**

# Taking Pictures in 🔛 (EXR AUTO) Mode

This section describes how to take pictures in 🔛 (EXR AUTO) mode.

# 1 Select EXR mode.

Turn the camera on and rotate the mode dial to **EXR**. The **SSS** display will appear in the LCD monitor.

# 🗣 The 🖺 Icon

In the camera continuously adjusts focus and searches for faces, increasing the drain on the battery.  $\square$  is displayed in the LCD monitor.




# Scene Icon (💷 23)

The camera automatically selects the appropriate scene.

- ♦ The camera analyses the scene and selects the preferred EXR mode when the shutter button is pressed halfway ( 24).
- To raise the flash when lighting is poor, press the flash pop-up button (🕮 41).

# 2 Frame the picture.

Use the zoom control to frame the picture in the display.

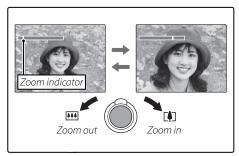

### Holding the Camera

Hold the camera steady with both hands and brace your elbows against your sides. Shaking or unsteady hands can blur your shots.



To prevent pictures that are out of focus or too dark (underexposed), keep your fingers and other objects away from the lens and flash.



# 3 Focus.

Press the shutter button halfway to focus.

The lens may make a noise when the camera focuses; this is normal. If the subject is poorly lit, the AF-assist illuminator may light; see" AFILLUMINATOR" (III 105) for information on disabling the illuminator.



If the camera is able to focus, it will beep twice and the indicator lamp will glow green.

If the camera is unable to focus, the focus frame will turn red, **!AF** will be displayed, and the indicator lamp will blink green. Change the composition or use focus lock (🖽 37).

# 4 Shoot.

Smoothly press the shutter button the rest of the way down to take the picture.



### The Shutter Button

The shutter button has two positions. Pressing the shutter button halfway sets focus and exposure; to shoot, press the shutter button the rest of the way down.

# **Viewing Pictures**

Pictures can be viewed in the LCD monitor. When taking important photographs, take a test shot and check the results.


# 1 Press the 🕨 button.


The most recent picture will be displayed.

# 2 View additional pictures.

Press the selector right to view pictures in the order recorded, left to view pictures in reverse order.

  Press the shutter button to exit to shooting mode.






# **Shooting Mode**

Choose a shooting mode according to the scene or type of subject. To select a shooting mode, align the mode icon with the mark next to the mode dial.



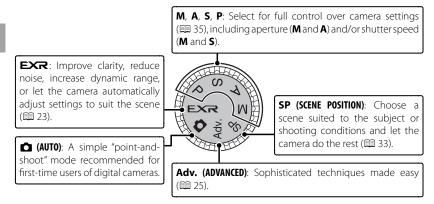

### EXR (EXR AUTO/EXR Priority)

Optimize settings for your current subject or improve clarity, reduce noise, or enhance dynamic range. Rotate the mode dial to **EXR** and choose one of the following **EXR** modes in the shooting menu.

# ∎ 🚟 (**EXR** AUTO)

The camera automatically selects the scene and **EXR** mode according to shooting conditions ( $\blacksquare$  17).

- If Imm is selected for Image SIZE in Image mode, the camera will automatically select the optimal image size.
- INTELLIGENT DIGITAL ZOOM is restricted to 2× (□ 104). Scene icon

NICUT

### The Scene Icon

The camera selects from the following scenes:

Case I AND

	scene		LAND-		וחטוא						UKEEN-	
Main subject	i	AUTO	SCAPE	NIGHT	(TRIPOD)	MACRO	BEACH	SUNSET	SNOW	SKY	ERY	GREENERY
Non-portrait		6	0	۰ ف	© <sup>*</sup>	Ø	۲	۲	0	0	0	Ø
Portrait	Normal	0	00	00°	00	_	00	00	00	00	00	00
	Backlit	6	60	_	_	—	99	60	60	6	60	69 60
Moving object		0	00	00	00	ØØ	00	⋑₿	00	00	00	00
Portrait and	Normal	0	00	00	00	—	00	00	00	00	00	00
motion	Backlit	0	00		_	_	89	<b>0</b> 0	00	80	00	80

\* If 💿 is displayed, the camera will take a series of shots (advanced anti-blur; 🕮 24).

① The mode selected may vary with shooting conditions. If the mode and subject do not match, select 
 ▲ mode (
 □ 22) or choose SP (
 □ 33) and select a scene manually.



CIVV 0



### Advanced Anti Blur

When 💿 is displayed, the camera will take a series of exposures and combine them to form a single image, reducing "noise" (mottling) and blur.

- Is available when ON is selected in the shooting menu (I 83) and the flash (I 41) is off or set to auto.
- $\oplus$  Some time may be required to combine the exposures into a single image. A single combined image may not be created if the subject or camera moves during shooting. Keep the camera steady during shooting and do not move the camera until shooting is complete.
- $\ensuremath{\textcircled{}}$  Frame coverage is reduced.

## The **EXR** lcon

When the shutter button is pressed halfway, the camera chooses the preferred  $\mathbf{EXR}$  mode:

- 🚯 (**RESOLUTION PRIORITY**): Produces crisp, clear shots.
- 🐼 (HIGH ISO & LOW NOISE): Reduces noise in pictures taken at high sensitivities.
- • (D-RANGE PRIORITY): Increases the amount of detail visible in highlights.

# EXR Priority

Select this mode to manually choose from the following **EXR** modes:

- 🚯 (**RESOLUTION PRIORITY**): Choose for crisp, clear shots.
- (HIGH ISO & LOW NOISE): Reduce noise in pictures taken at high sensitivities.

## Adv. ADVANCED

This mode combines "point-and-shoot" simplicity with sophisticated photographic techniques. The **Adv. MODE** option in the shooting menu can be used to choose from the following advanced modes:

 
## MOTION PANORAMA 360

Follow an on-screen guide to take photos that will automatically be joined to form a panorama. The camera zooms all the way out and remains fixed at the widest angle until shooting is complete.

- **1** To select the angle through which you will pan the camera while shooting, press the selector down. Press the selector left or right to highlight an angle and press **MENU/OK**.
- **2** Press the selector right to view a choice of pan directions. Press the selector left or right to highlight a pan direction and press **MENU/OK**.
- **3** Press the shutter button all the way down to start recording. There is no need to keep the shutter button pressed during recording.



**4** Pan the camera in the direction shown by the arrow. Shooting ends automatically when the progress bar is full and the panorama is complete.



Shooting ends if the shutter button is pressed all the way down during shooting. No panorama will be recorded if the shutter button is pressed before the camera has been panned through 120°.



- ① Panoramas are created from multiple frames. The camera may in some cases record an greater or lesser angle than selected or be unable to stitch the frames together perfectly. The last part of the panorama may not be recorded if shooting ends before the panorama is complete.
- ${\rm \oplus}\,$  Shooting may be interrupted if the camera is panned too quickly or too slowly. Panning the camera in a direction other than that shown cancels shooting.
- ① The desired results may not be achieved with moving subjects, subjects close to the camera, unvarying subjects such as the sky or a field of grass, subjects that are in constant motion, such as waves and waterfalls, or subjects that undergo marked changes in brightness. Panoramas may be blurred if the subject is poorly lit.

#### **•** 🖬

Choose 📾 for seamless 360 ° panoramas that can be played back in a loop (🕮 61).

- The SAVE ORG IMAGE option in the setup menu can be used to record a panorama in addition to a seamless im panorama (
  105).
- ① Depending on the subject and shooting conditions, the camera may produce distorted results or a panorama. The top and bottom of the area visible in the shooting display are cropped out and white strips may appear at the top and bottom of the display.

#### For Best Results

For best results, move the camera in a small circle at a steady speed, keeping the camera horizontal and being careful only to pan in the direction shown by the guides. If the desired results are not achieved, try panning at a different speed.

## 🔳 🌆 PRO FOCUS

The camera takes up to three shots each time the shutter button is pressed, softening the background to emphasize the main subject. The amount of softening can be adjusted before shooting by pressing the selector left or right. Use for portraits or photos of flowers similar to those produced by SLR cameras.



Softening can not be applied to background objects that are too close to the main subject. If a message stating that the camera can not create the effect is displayed when the camera focuses, try backing away from your subject and zooming in. The camera may also be unable to soften the background if the subject is moving; if prompted, check the results and try again.

## 🛛 🌆 PRO LOW-LIGHT

Each time the shutter button is pressed, the camera makes four exposures and combines them into a single photograph. Use to reduce noise and blur when photographing poorly lit subjects or static subjects at high zoom ratios.



A single combined photograph may not be created with some scenes or if the subject or camera moves during shooting. Do not move the camera until shooting is complete.

#### PRO FOCUS/PRO LOW-LIGHT

To save unprocessed copies of pictures taken in these modes, select **ON** for the **III SAVE ORG IMAGE** option in the setup menu (IIII 105).

- ① Keep the camera steady during shooting.
- ① Frame coverage is reduced.

### 🔳 🖬 MULTIPLE EXPOSURE

Create a photograph that combines two exposures.

 
- 1 Take the first shot.
- **2** Press **MENU/OK**. The first shot will be shown superimposed on the view through the lens as a guide to taking the second shot.
  - To return to Step 1 and retake the first shot, press the selector left. To save the first shot and exit without creating a multiple exposure, press DISP/BACK.
- 3 Take the second shot.
- **4** Press **MENU/OK** to create the multiple exposure, or press the selector left to return to Step 3 and retake the second shot.

## 🖬 🔒 INDIVID. SHUTTER 3D

More on Photography

Take two shots from different angles to create a 3D image.

- **1** To choose the order in which the pictures are taken, press the selector right to display the current order and then press the selector left or right to choose from the options below.
  - $\blacksquare \longrightarrow \blacksquare: Take the left shot first.$
  - 1 Take the right shot first.
- 2 Press the shutter button to take the first shot.
  - To exit without recording a picture, press DISP/BACK.
- **3** The first shot will be shown superimposed on the view through the lens. Using it as a guide, frame the second shot and press the shutter release button.
  - The 3D effect may not be visible with some subjects or under some shooting conditions. For best results, the distance the camera is moved between shots should be about 1/30th to 1/50th of the distance to the subject.
  - The camera will turn off automatically if no operations performed for the time selected for 
    automatically if no operations performed for the time selected for automatically if no operations will not be saved if the second shot is not taken before the camera turns off.





#### Viewing and Printing 3D Images

- The camera displays images in 2D. Press the selector down to toggle between the first and second shots.
- Devices equipped for 3D display, such as the FINEPIX REAL 3D V3 digital photo frame or FINEPIX REAL 3D W3 digital camera, will display the images in 3D.
- 3D prints can be ordered from http://www.fujifilm.com/3d/print/
- The supplied software displays 3D anaglyph images. 3D photos can also be viewed using other applications that support the MP format.
- **3D TVs** that support the MP format can display images in 3D. See the manual for your TV for details.
- ① Images are not output in 3D when printed directly from the camera.
- $\circledast$  3D images are displayed in 2D in slide shows and when output on a conventional TV.
- ${\scriptstyle \textcircled{O}}$  3D images can not be edited or retouched.

Note: The MP (Multi-Picture) format is a CIPA standard for files containing multiple still images. Files in MP format are referred to as "MP files" and have the extension "\*.MPO". The camera uses this format for 3D images.

## SP SCENE POSITION

The camera offers a choice of "scenes," each adapted to particular shooting conditions or a specific type of subject. Use the **SCENE POSITION** option in the shooting menu to choose the scene assigned to the **SP** position on the mode dial.



Scene	Description					
©‡ NATURAL & ‡	The camera takes two shots: one without the flash and one with.					
NATURAL LIGHT	Capture natural lighting under low-light conditions.					
PORTRAIT	Choose for portraits.					
PORTRAIT ENHANCER	Choose for a smooth skin effect when shooting portraits.					
<li>DOG</li>	Choose when photographing dogs.					
😂 CAT	Choose when photographing cats.					
LANDSCAPE	Choose for daylight shots of buildings and landscapes.					
🦎 SPORT	Choose when photographing moving subjects.					
C NIGHT	Choose this mode for poorly lit twilight or night scenes.					
& <sup>C*</sup> NIGHT (TRIPOD)	Choose this mode for slow shutter speeds when shooting at night.					
* FIREWORKS	Slow shutter speeds are used to capture the expanding burst of light from a firework.					
🛎 SUNSET	Choose this mode to record the vivid colors in sunrises and sunsets.					
×∰× SNOW	Choose for crisp, clear shots that capture the brightness of scenes dominated by shining white snow.					
▲Ĩ BEACH	Choose for crisp, clear shots that capture the brightness of sunlit beaches.					

Scene	Description				
✓ UNDERWATER	Choose for when using an optional waterproof case to take photographs				
	underwater.				
Y PARTY	Capture indoor background lighting under low-light conditions.				
✤ FLOWER	Choose for vivid close-ups of flowers.				
TEXT TEXT	Take clear pictures of text or drawings in print.				

### 🐌 🚯 DOG/ 😂 CAT

The camera focuses on the faces of dogs or cats that are facing the camera, and the self-timer menu offers a **C** AUTO RELEASE option that releases the shutter automatically when a pet is detected (■ 43). During playback, image search (■ 58) can be used to search for pictures taken in either mode.

Although camera can detect many different breeds of dogs and cats, results may vary with the breed and shooting conditions. The camera may fail to detect pets with dark-colored faces or long hair covering their entire face. If a dog or cat is not detected, the camera focuses on the subject at the center of the frame.

### M MANUAL

In this mode, you control both shutter speed and aperture.

Press the selector up () to highlight shutter speed or aperture and use the command dial to adjust the highlighted item. If desired, exposure can be altered from the value selected by the camera.

#### The Exposure Indicator

The amount the picture will be under- or over-exposed at current settings is shown by the exposure indicator.

### A APERTURE PRIORITY AE

You choose the aperture using the command dial, while the camera adjusts shutter speed for optimal exposure.

If the correct exposure can not be achieved at the selected aperture, shutter speed will be displayed in red. Adjust aperture until the correct exposure is achieved. If the subject is outside the metering range of the camera, the shutter speed display will show "---". Press the shutter button halfway to measure exposure again.







SETTING SHUTTER

М



# S SHUTTER PRIORITY AE

You choose the shutter speed using the command dial, while the camera adjusts aperture for optimal exposure.

## P PROGRAM AE

The camera sets exposure automatically.

If the subject is outside the metering range of the camera, the shutter speed and aperture displays will show "---". Press the shutter button halfway to measure exposure again.








# Focus Lock

To compose photographs with off-center subjects:

- **1 Focus:** Position the subject in the focus frame (((++))) and press the shutter button halfway to lock focus and exposure. Focus and exposure will remain locked while the shutter button is pressed halfway (AF/AE lock).
- **2 Recompose**: Keep the button pressed halfway.

**3 Shoot**: Press the button all the way down.

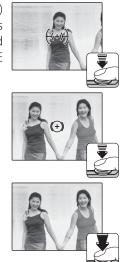

#### Focus Lock

### Autofocus


Although the camera boasts a high-precision autofocus system, it may be unable to focus on the subjects listed below. If the camera is unable to focus, focus on another subject at the same distance and use focus lock to recompose the photograph.

Very shiny subjects such as mirrors or car bodies.
 Fast-moving subjects.
 Subjects photographed through a window or other reflective object.
 Dark subjects and subjects that absorb rather than reflect light, such as hair or fur.
 Insubstantial subjects, such as smoke or flame.
 Subjects photographed through as smoke or flame.
 Subjects that show little contrast with the background (for example, subjects in clothing that is the same color as the background).
 Subjects positioned in front of or behind a high-contrast object that is also in the focus frame (for example, a subject photographed against a backdrop of highly contrasting elements).

# **Exposure Compensation**

To adjust exposure compensation when photographing very bright, very dark, or high-contrast subjects, press the selector up (12). Press the selector up or down or use the command dial to choose an exposure compen-

sation value and then press **MENU/OK**.

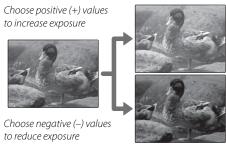

- A ☑ icon and exposure indicator are displayed at settings other than ±0. Exposure compensation is not reset when the camera is turned off; to restore normal exposure control, choose a value of ±0.
- Turn the flash off when using exposure compensation.


# 🗱 Macro Mode (Close-ups)

 For close-ups, press the selector left ( $\textcircled$ ) and select  $\oiint$ . When macro mode is in effect, the camera focuses on subjects near the center of the frame. Use the zoom control to compose pictures ( $\blacksquare$  18).

To exit macro mode, press the selector left (**S**) and select **OFF**.

- Use of a tripod is recommended to prevent blur caused by camera shake.
- The shadow cast by the lens may appear in photographs taken with the flash at very short ranges. Zoom out or increase the distance to the subject.





# 4 Using the Flash (Super-Intelligent Flash)

When the flash is used, the camera's *Super-Intelligent Flash* system instantly analyzes the scene based on such factors as the brightness of the subject, its position in the frame, and its distance from the camera. Flash output and sensitivity are adjusted to ensure that the main subject is correctly exposed while preserving the effects of ambient background lighting, even in dimly-lit indoor scenes. Use the flash when lighting is poor, for example when shooting at night or indoors under low light.

 
**1** Press the flash pop-up button to raise the flash.

If playback is in progress, return to shooting mode before raising the flash.



2 Press the selector right (4) and choose from the following flash modes:

Option	Description				
	The flash fires when required. Recommended in most				
AUTU/ AUTO	situations.				
	The flash fires whenever a picture is taken. Use for back- lit subjects or for natural coloration when shooting in				
<b>4</b> /@\$*	lit subjects or for natural coloration when shooting in				
	bright light.				
	Capture both the main subject and the background under low light (note that brightly lit scenes may be				
\$ <b>\$</b> /@*	under low light (note that brightly lit scenes may be				
	overexposed).				






\* • con indicates that Intelligent Face Detection and red-eye removal are on and will be used to minimize "*red-eye*" caused by the flash reflecting from the retinas of portrait subjects.

- Using the Flash (Super-Intelligent Flash)
- The flash is automatically lowered when the camera is turned off .
- Lower the flash where flash photography is prohibited or to capture natural lighting under dim light.
- If the flash will fire, 1 will be displayed when the shutter button is pressed halfway. At slow shutter speeds, 10 will appear in the display to warn that pictures may be blurred; use of a tripod is recommended.
- The flash may fire several times with each shot. Do not move the camera until shooting is complete.
- The flash may cause vignetting.

# 👏 Using the Self-Timer

 To use the self-timer, press the selector down ( $\circlearrowright$ ) and choose from the following options:






Option	Description			
SFF (OFF)	Self-timer off.			
〠(AUTO RELEASE)	The shutter is released automatically when the camera detects the face of a cat or dog (🕮 34).			
ර (AUTO RELEASE)	The shutter is released automatically when the camera detects a human portrait subject facing the camera. Use for portraits of babies.			
്പ (10 SEC)	The shutter is released ten seconds after the shutter button is pressed. Use for self-portraits. The self-timer lamp on the front of the camera lights when the timer starts and begins to blink shortly before the photo is taken.			
C2 (2 SEC) The shutter is released two seconds after the shutter button is pressed. U reduce blur caused by the camera moving when the shutter button is pr The self-timer lamp will blink as the timer counts down.				

# 🛛 🖾 Intelligent Face Detection

 Intelligent Face Detection sets focus and exposure for human faces anywhere in the frame, preventing the camera from focusing on the background in group portraits. Choose for shots that emphasize portrait subjects.

To use Intelligent Face Detection, press **MENU/OK** to display the shooting menu and select **ON** for **Parameters DETECTION**. Faces can be detected with the camera in vertical or horizontal orientation; if a face is detected, it will be indicated by a green border. If there is more than one face in the frame, the camera will select the face closest to the center; other faces are indicated by white borders.






- ${\rm I}$  If the subject moves as the shutter button is pressed, their face may not be in the area indicated by the green border when the picture is taken.

# Continuous Shooting

 To capture motion in a series of pictures, press **MENU/OK**, select **CONTINUOUS** in the shooting menu (**B** 87), and choose from the options listed in this section.



Option	
🔁 AE BKT	(🖽 49)
FILM SIMULATION BKT	(🖽 49)
DYNAMIC RANGE BKT	(📖 49)
<b>D TOP</b> <i>n</i>	(🖽 46)
ිතු BEST FRAME CAPTURE	(🖽 47)
OFF	_

- The flash turns off automatically. The previously selected flash mode is restored when OFF is selected for OFT CONTINUOUS.
- Frame rate varies with shutter speed.
- Focus and exposure are determined by the first frame in each series.
- The number of pictures that can be taken in a single burst varies with the scene and camera settings. The number of pictures that can be recorded depends on the memory available.

## 🔳 👜 TOP n

The camera takes photographs while the shutter button is pressed. To choose the frame rate:

- 1 Press the selector right when the camera is in shooting mode.
- 2 Press the selector up or down to choose a frame rate and press **MENU/OK** to select and return to shooting mode.



 
## BEST FRAME CAPTURE

The camera takes a series of pictures, starting before and ending after the shutter button is pressed.


- **1** Press the selector right when the camera is in shooting mode.
- **2** Highlight the current frame rate and press the selector right, then press selector up or down to choose a new value and press **MENU/OK** to select.

 ${\scriptstyle \textcircled{O}}$  Some frame rates may reduce the number of shots available.

**3** Highlight the number of shots and press the selector right. Press the selector up or down to choose the number of shots in each burst and left or right to choose their distribution (the number on the left is taken *before* and the number on the right *after* the shutter button is pressed). Press **MENU/OK** when settings are complete and press **DISP/BACK** to return to shooting mode.



 **4** Take photographs. The camera begins recording while the shutter button is pressed halfway, and completes the burst when the shutter button is pressed all the way down. The illustration shows a burst of eight shots, three before the shutter button is pressed and four after.



- ① If the shutter button is pressed all the way down before the number of frames selected for the "before" portion is recorded, the remaining frames will be taken after the shutter button is pressed all the way down.
- ${\rm I\!O}\,$  If the shutter button is pressed halfway for an extended period, the camera may record the burst before the shutter button is pressed all the way down.

## 🔳 🖻 AE BKT

Each time the shutter button is pressed, the camera takes three shots: one using the metered value for exposure, the second overexposed by the amount selected for AEBKT EV STEPS in the shooting menu (A), and the third underexposed by the same amount (the camera may not be able to use the selected bracketing increment if the amount of over- or under- exposure exceeds the limits of the exposure metering system).

### 🔳 💷 FILM SIMULATION BKT

Each time the shutter button is pressed, the camera takes one shot and processes it to create three copies with different T FILM SIMULATION settings (I 83): T PROVIA/STANDARD for the first, V Velvia/VIVID for the second, and F ASTIA/SOFT for the third.

#### 🔳 🖭 DYNAMIC RANGE BKT

Each time the shutter button is pressed, the camera takes three shots at different IM DYNAMIC RANGE settings (I 85): R IOO 100% for the first, R IOO 200% for the second, and R IOO 400% for the third (I ISO can not exceed 3200; values less than 400 are not available when I is selected for K IMAGE SIZE).

## B Face Recognition

The camera can store information on the face and personal details (name, relationship, and birth date) of portrait subjects and assign these subjects priority for Intelligent Face Detection or display their names and other information during playback.

## Adding New Faces

Follow the steps below to add faces to the face recognition database.

## 1 Select REGISTER.

Select **REGISTER** for **Image FACE RECOGNITION** in the shooting menu.

> To disable face recognition, select **OFF**.

### 2 Take a photograph.

After checking that the subject is facing the camera, frame the subject using the guides and take the photograph.

If an error is displayed, take the photograph again.





### 3 Enter face recognition data

Press **MENU/OK** to display face recognition data and enter the following information:

- NAME: Enter a name of up to 14 characters and press MENU/OK.
- BIRTHDAY: Enter the subject's date of birth and press MENU/OK.
- **CATEGORY**: Choose the option that describes your relationship to the subject and press **MENU/OK**.
- If you attempt to zoom in on the face of a person indicated by a green border in the face recognition database on their birthday, the camera will display their name and the message "Happy Birthday!"

### Viewing, Editing, and Deleting Existing Data

Follow the steps below to view, edit, or delete face recognition data.

## 1 Select VIEW & EDIT for I FACE RECOGNITION.

## **2** Select a face.

### **3** View or edit face recognition data.

The name, category, or birth date can be edited as described in Step 3 of "Adding New Faces" (🗐 51). To retake the photo, select **REPLACING IMAGE** and shoot a new portrait as described above.

> To delete face recognition data for the selected subject, select ERASE.

### Adding Faces Automatically

To automatically add frequently-photographed subjects to the face recognition database, select **ON** for **AUTO REGISTRATION** in the face recognition menu. If the camera detects a face that has been photographed many times without being added to the database, it will display a message prompting you to create a new face recognition entry. Press **MENU/OK** and enter face recognition data.

The camera may sometimes fail to recognize new faces automatically. If necessary, faces can be added manually using the **REGISTER** option.

### Face Recognition

The camera can store up to eight faces. If you attempt to add a ninth face, a confirmation dialog will be displayed; use **VIEW & EDIT** to make room for new faces by deleting existing data. **AUTO REGISTRATION** is disabled if there are already data for eight faces.

When Intelligent Face Detection (🕮 44) is on and the frame contains multiple subjects from the face recognition database, the camera displays the name of the subject that will be used to set focus and exposure (the subject shown by the green frame). If no name is entered, the camera will show "---". Subjects identified using face recognition but not used to set focus and exposure are shown by orange frames, other subjects by white frames.

① The camera may fail to identify subjects in the face recognition database if they are not facing the camera or are only partly in the frame, or if details of the subjects' faces or expressions differ markedly from those in the database.

# More on Playback

# Playback Options

To view the most recent picture in the LCD monitor, press the  $\blacktriangleright$  button.



Press the selector right to view pictures in the order recorded, left to view pictures in reverse order. Keep the selector pressed to scroll rapidly to the desired frame.

Pictures taken using other cameras are indicated by a # ("gift image") icon during playback.

### Continuous Shooting

In the case of pictures taken in continuous shooting mode, only the first frame of each series will be displayed. Press the selector down to view the other pictures in the series.

### ★ Favorites: Rating Pictures

To rate the picture currently displayed in full-frame playback, press **DISP/BACK** and press the selector up and down to select from zero to five stars.

### <u>Playback Zoom</u>

Select [1] to zoom in on pictures displayed in single-frame playback; select into zoom out. When the picture is zoomed in, the selector can be used to view areas of the image not currently visible in the display.



Zoom indicator


Navigation window shows portion of image currently displayed in LCD monitor

Press **DISP/BACK** to exit zoom.

- Rotate the command dial to view other pictures without changing the zoom ratio.
- The maximum zoom ratio varies with image size. Playback zoom is not available with cropped or resized copies saved at a size of M or smaller.

### Multi-Frame Playback

Selecting ••• when a picture is shown full-frame in the LCD monitor displays the current image with previous and following images in the background. Select ••• to increase the number of images displayed to two, nine, or one hundred, •• to view fewer images.

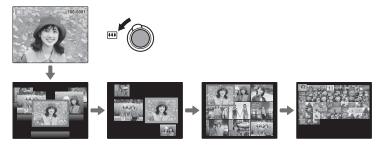

When two or more images are displayed, use the selector to highlight images and press **MENU/OK** to view the highlighted image full frame. In the nine- and hundred-frame displays, use the selector to view more pictures.

# Deleting Pictures

To delete individual pictures, multiple selected pictures, or all pictures, press **MENU/OK**, select **IIII ERASE** (IIII 91), and choose from the options below. *Note that deleted pictures can not be re*-





covered. Copy important pictures to a computer or other storage device before proceeding.

Option	Description				
FRAME	Press the selector left or right to scroll through pictures and press <b>MENU/OK</b> to delete the current picture (a confirmation dialog is not displayed).				
SELECTED FRAMES	Highlight pictures and press <b>MENU/OK</b> to select or deselect (pictures in photobooks or print orders are shown by <b>1</b> ). When the operation is complete, press <b>DISP/BACK</b> to display a confirmation dialog, then highlight <b>OK</b> and press <b>MENU/OK</b> to delete the selected pictures.				
ALL FRAMES	A confirmation dialog will be displayed; highlight <b>OK</b> and press <b>MENU/OK</b> to delete all unprotected pictures (if a memory card is inserted, only the pictures on the memory card will be affected; the pictures in internal memory are only deleted if no memory card is inserted). Pressing <b>DISP/BACK</b> cancels deletion; note that any pictures deleted before the button was pressed can not be recovered.				

If a message appears stating that the selected images are part of a DPOF print order, press MENU/OK to delete the pictures.

# 🐼 Image Search

Search for pictures.

- 1 Select 
  <sup>IMAGE SEARCH</sup> in the playback menu (■ 91), highlight one of the following search criteria, and press **MENU/OK**:
  - BY DATE: Search by date.
  - **BY FACE**: Search for faces from the face recognition database.
  - **BY ★ FAVORITES**: Search by rating.
  - BY SCENE: Search by scene.
  - BY TYPE OF DATA: Find all still pictures or all movies.
  - **BY UPLOAD MARK**: Find all pictures selected for upload to a specified destination.
- 2 Select a search condition. Only pictures that match the search condition will be displayed. To delete or protect selected pictures or to view the search results in a slide show, press MENU/OK and choose I ERASE (■ 91),
   I PROTECT (■ 93), or I SLIDE SHOW (■ 90).

# 🛄 PhotoBook Assist

Create books from your favorite photos.

# Creating a PhotoBook

- **1** Select **NEW BOOK** for **PHOTOBOOK ASSIST** in the playback menu (**1** 90) and choose from the following options:
  - SELECT FROM ALL: Choose from all available pictures.
  - SELECT BY IMAGE SEARCH: Choose from pictures matching selected search conditions (Ⅲ 58).
  - Movies, 3D photos, and photographs M or smaller can not be selected for photobooks.
- 2 Scroll through the images and press the selector up to select or deselect. To display the current image on the cover, press the selector down. Press MENU/OK to exit when the book is complete.
  - The first picture selected becomes the cover image. Press the selector down to select a different image for the cover.
- **3** Select **COMPLETE PHOTOBOOK** (to select all photos or all photos matching the specified search conditions for the book, choose **SELECT ALL**). The new book will be added to the list in the photobook assist menu.
- ① Books can contain up to 300 pictures.
- ${\ensuremath{\textcircled{}}}$  Books that contain no photos are automatically deleted.

# Viewing Photobooks

Highlight a book in the photobook assist menu and press **MENU/OK** to display the book, then press the selector left or right to scroll through the pictures.

### Editing and Deleting Photobooks

Display the photobook and press **MENU/OK**. The following options will be displayed; select the desired option and follow the on-screen instructions.

 
- EDIT: Edit the book as described in "Creating a PhotoBook" (🕮 59).
- ERASE: Delete the book.

### Photobooks

Photobooks can be copied to a computer using the supplied MyFinePix Studio software.

# **Viewing Panoramas**


If you press the selector down when a panorama is displayed full frame, the camera will play back the picture from left to right or from bottom to top. To pause playback, press the selector down; press the selector down again to resume. To exit to full-frame playback, press the selector up while panorama playback is in progress. Once displayed in full-frame playback, panoramas can be zoomed in or out using the zoom control or deleted by pressing the selector up ( $\hat{\mathbf{m}}$ ).



Impanoramas play back in an endless loop (Impanoramas play back in an endless loop (Impanoramas play back in an endless loop (Impanoramas playback direction can be controlled by pressing the selector left or right. The camera will not turn off automatically while playback is in progress (Impanoramas playback).

# Viewing Photo Information

 Photo information can be viewed by pressing **DISP/BACK** to cycle through indicators (🕮 6) until the following display appears:



Dynamic range
 Image size and quality
 Sensitivity
 Shutter speed/aperture
 Film simulation
 Flash mode
 White balance
 Exposure compensation
 Frame number
 Picture (overexposed areas blink on and off)
 Histogram

### Histograms

Histograms show the distribution of tones in the image. Brightness is shown by the horizontal axis, the number of pixels by the vertical axis.

Pixel brightness → Shadows Highlights

**Optimal exposure**: Pixels are distributed in an even curve throughout the tone range.

**Overexposed**: Pixels are clustered on the right side of the graph.

**Underexposed**: Pixels are clustered on the left side of the graph.

### Zooming in on the Focus Point

Press the selector down to zoom in on the focus point. Press **DISP/BACK** or **MENU/OK** to return to full-frame playback.



# Movies

 
# **Recording Movies**

Press 📽 to shoot a movie. During recording, the following indicators will be displayed and sound will be recorded via the built-in microphone (be careful not to cover the microphone during recording).

To end recording, press the 😤 button again. Recording ends automatically when the movie reaches maximum length or memory is full.

Zoom can be adjusted while recording is in progress.

- If the subject is poorly lit, the AF-assist lamp may light to assist the focus operation. To turn the AF-assist lamp off, select OFF for AF ILLUMINATOR in the setup menu (III 105).
- Focus, exposure, and white balance are adjusted automatically throughout recording. The color and brightness of the image may vary from that displayed before recording begins.
- Sounds made by the camera may be recorded.





### Taking Photographs During Recording

Press the shutter button to take a photograph during recording.

- See page 89 for information on choosing how photographs are recorded.
- The photo is saved separately from the movie and does not appear as part of the movie.
- ① Photos can not be taken while a high-speed movie is being recorded.
- $\ensuremath{\textcircled{}}$  The number of photos that can be taken is limited.
- ① The indicator lamp lights while movies are being recorded. Do not open the battery chamber during shooting or while the indicator lamp is lit. Failure to observe this precaution could prevent the movie from being played back.
- ① Vertical or horizontal streaks may appear in movies containing very bright subjects. This is normal and does not indicate a malfunction.

### **Movie Frame Size**

Before recording, select a frame size using the **MOVIE MODE** option in the shooting menu (**B** 89).

Option	Description	
<b>1920</b> (1920 × 1080)	Full HD (High Definition).	
<b>HD 1280</b> (1280×720)	High Definition.	
<b>640</b> (640 × 480)	Standard definition.	
<b>HS 640 × 480</b> (80 fps)	High speed movie. Sound is not recorded, and focus, exposure, and white	
	balance are not adjusted automatically. Black bands appear at the top and	
<b>320 × 112</b> (320 fps)	bottom of movies recorded at <b>IIS 320 × 112</b> .	

# Viewing Movies

Option

During playback, movies are displayed in the LCD monitor as shown at right. The following operations can be performed while a movie is displayed:

Description

Start/pause playback	<b>Press the selector down</b> to start playback. Press again to pause. While playback is paused, you can press the selector left or right to rewind or advance one frame at a time.	
End playback/ delete	Press the selector up to end playback.	
Adjust speed	Press the selector left or right to adjust playback speed dur- ing playback.	
Adjust volume	<b>Press MENU/OK</b> to pause playback and display volume con- trols. Press the selector up or down to adjust the volume and press <b>MENU/OK</b> to exit. Volume can also be adjusted from the setup menu.	

Playback Speed Press the selector left or right to adjust playback speed. Speed is Arrow shown by the number of arrows (► or ◄).

 ${\scriptstyle \textcircled{O}}$  Do not cover the speaker during playback.





# Connections

# Viewing Pictures on TV

Connect the camera to a TV to show pictures to a group.

- **1** Turn the camera off.
- 2 Connect the supplied A/V cable as shown below.


 


Image quality drops during movie playback.

### Connecting the Camera to High Definition (HD) TVs

An HDMI cable (available from third-party suppliers) can be used to connect the camera to High Definition (HD) devices (playback only). The USB and A/V cables can not be used while an HDMI cable is connected.

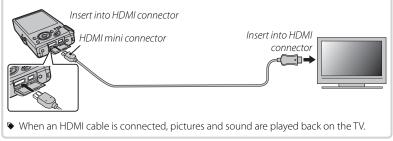

- $\ensuremath{\mathbbm O}$  When connecting cables, be sure the connectors are fully inserted.
- **3** Tune the television to the video or HDMI input channel. See the documentation supplied with the television for details.
- 4 Press the ▶ button for about a second to turn the camera on. The camera monitor turns off and pictures and movies are played back on the TV. Note that the camera volume controls have no effect on sounds played on the TV; use the television volume controls to adjust the volume.

# **Printing Pictures via USB**

If the printer supports PictBridge, the camera can be connected directly to the printer as shown below and pictures can be printed without first being copied to a computer. Note that depending on PictBridge the printer, not all the functions described below may be supported.

1 Connect the supplied USB cable as shown and turn the printer on.



- 2 Turn the camera on.
- **3** Press the selector left or right to display a picture you wish to print.
- 4 Press the selector up or down to choose the number of copies (up to 99).
- **5** Repeat steps 3–4 to select additional pictures. Press **MENU/OK** to display a confirmation dialog when settings are complete.

- 6 Press MENU/OK to start printing. Printing can be interrupted by pressing **DISP/BACK**, but note that some printers may not respond immediately. If the printer stops before printing is complete, turn the camera off and then on again.
- **7** After confirming that **PRINTING** has cleared from the camera display, turn the camera off and disconnect the USB csable.
- Pictures can be printed from internal memory or a memory card that has been formatted in the camera.
- If no pictures are selected, the camera will print one copy of the current picture.
- Page size, print quality, and border selections are made using the printer.

#### Printing the Date of Recording

To print the date of recording on pictures, press **DISP/BACK** in the PictBridge display and select **PRINT WITH DATE** in the PictBridge menu (to print pictures without the date of recording, select **PRINT WITHOUT DATE**). Some printers do not support date printing. See the printer manual for details.

# Printing the DPOF Print Order

The PRINT ORDER (DPOF) option in the playback menu can be used to create a digital "print order" for PictBridge-compatible printers (🕮 108) or devices that support DPOF.

# DPOF

DPOF (**D**igital **P**rint **O**rder **F**ormat) is a standard that allows pictures to be printed from "print orders" stored in internal memory or on a memory card. The information in the order includes the pictures to be printed and the number of copies of each picture.

- **1** Select playback mode and press **MENU/OK** to display the playback menu.
- 2 Highlight PRINT ORDER (DPOF) and press MENU/OK.
- 3 Highlight one of the following options and press MENU/OK:
  - WITH DATE C: Print the date of recording on pictures.
  - WITHOUT DATE: Do not print the date of recording on pictures.
  - Some printers do not support date printing. See the printer manual for details.
- **4** Press the selector left or right to display a picture you wish to add to or remove from the print order.



- **5** Press the selector up or down to choose the number of copies (up to 99). To remove a picture from the print order, press the selector down until the number of copies is zero.
- **6** Repeat Steps 4–5 to complete the print order and press **MENU/OK** when settings are complete.
- **7** A confirmation dialog will be displayed. Press **MENU/OK** to save the print order.
  - Remove the memory card to create or modify a print order for the pictures in internal memory.
  - Print orders can contain a maximum of 999 pictures.
  - If a memory card is inserted containing a print order created by another camera, a message will be displayed. Create a new print order as described above.

# Viewing Pictures on a Computer

The supplied software can be used to copy pictures to a computer, where they can be stored, viewed, organized, and printed. Before proceeding, install the software as described below. **Do NOT connect the camera to the computer until installation is complete**.

### Windows: Installing MyFinePix Studio

1 Confirm that the computer meets the following system requirements:

	Windows 7 (SP 1)/Windows Vista (SP 2) <sup>1</sup>	Windows XP (SP 3) <sup>1</sup>	
CPU	3 GHz Pentium 4 or better	2 GHz Pentium 4 or better	
CFU	(2.4 GHz Core 2 Duo or better) <sup>2</sup>	(2.4 GHz Core 2 Duo or better) <sup>2</sup>	
RAM	1.00	512 MB or more	
KAM	1 GB or more	(1 GB or more) <sup>2</sup>	
Free disk space	2 GB or more		
GPU	Supports DirectX 9 or later	Supports DirectX 7 or later	
GPU	(recommended)	(required; performance not guaranteed with other GPUs)	
Video	1,024×768 pixels or more with 24-bit color or better		
Built-in USB port recommended. Operation is not guaranteed with or			
	USB ports.		
041.00	.NET Framework 3.5 Service Pack 1 required when uploading images or us-		
Other	ing Map Viewer.		
	Internet connection (broadband recommended) required to install		
	.NET Framework (if necessary), to use auto update feature, and when per-		
	forming such tasks as sharing pictures on-line or via e-mail.		

1 Other versions of Windows are not supported. Only pre-installed operating systems are supported; operation is not guaranteed on home-built computers or computers that have been upgraded from earlier versions of Windows.

2 Recommended when displaying HD movies.

- **2** Start the computer. Log in to an account with administrator privileges before proceeding.
- **3** Exit any applications that may be running and insert the installer CD in a CD-ROM drive.

#### Windows 7/Windows Vista

If an AutoPlay dialog is displayed, click **SETUP.EXE**. A "User Account Control" dialog will then be displayed; click **Yes** (Windows 7) or **Allow** (Windows Vista).

The installer will start automatically; click **Install MyFinePix Studio** and follow the on-screen instructions to install MyFinePix Studio.

#### If the Installer Does Not Start Automatically

If the installer does not start automatically, select **Computer** or **My Computer** from the Start menu, then double-click the **FINEPIX** CD icon to open the FINEPIX CD window and double-click **setup** or **SETUP.EXE**.

- **4** If prompted to install Windows Media Player or DirectX, follow the onscreen instructions to complete installation.
- **5** Remove the installer CD from the CD-ROM drive when installation is complete. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software.

Installation is now complete. Proceed to "Connecting the Camera" (🕮 78).

### Macintosh: Installing FinePixViewer

1 Confirm that the computer meets the following system requirements:

CPU	PowerPC or Intel (Core 2 Duo or better)*	
OS	Pre-installed copies of Mac OS X version 10.3.9–10.6 (visit <i>http://www.fujifilm. com/support/digital_cameras/compatibility/</i> for more information). Mac OS X version 10.7 and later not supported.	
RAM	256 MB or more (1 GB or more)*	
Froo dick charo	A minimum of 200 MB required for installation with 400 MB available when FinePixViewer is running	
Video	$800 \times 600$ pixels or more with thousands of colors or better	
Other	Built-in USB port recommended. Operation is not guaranteed with other USB ports.	

\* Recommended when displaying HD movies.

- **2** After starting the computer and quitting any applications that may be running, insert the installer CD in a CD-ROM drive and double-click **Installer for Mac OS X**.
- **3** An installer dialog will be displayed; click **Installing FinePixViewer** to start installation. Enter an administrator name and password when prompted and click **OK**, then follow the on-screen instructions to install FinePixViewer. Click **Exit** to quit the installer when installation is complete.

 
- **4** Remove the installer CD from the CD-ROM drive. Note that you may be unable to remove the CD if Safari is running; if necessary, quit Safari before removing the CD. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software.
- 5 Mac OS X 10.5 or earlier: Open the "Applications" folder, start Image Capture, and select Preferences... from the Image Capture application menu. The Image Capture preferences dialog will be displayed; choose Other... in the When a camera is connected, open menu, then select FPVBridge in the "Applications/FinePixViewer" folder and click Open. Quit Image Capture.

Mac OS X 10.6: Connect the camera and turn it on. Open the "Applications" folder and start Image Capture. The camera will be listed under **DEVICES**; select the camera and choose **FPVBridge** from the **Connecting this camera opens** menu and click **Choose**. Quit Image Capture.

Installation is now complete. Proceed to "Connecting the Camera" (🕮 78).

# Connecting the Camera

- **1** If the pictures you wish to copy are stored on a memory card, insert the card into the camera.
  - Windows users may require the Windows CD when starting the software for the first time.
  - ${\rm \oplus}\,$  Loss of power during transfer could result in loss of data or damage to internal memory or the memory card. Charge the battery before connecting the camera.
- **2** Turn the camera off and connect the supplied USB cable as shown, making sure the connectors are fully inserted. Connect the camera directly to the computer; do not use a USB hub or keyboard.



**3** Press the **b** button for about a second to turn the camera on and follow the on-screen instructions to copy pictures to the computer. To exit without copying pictures, click **Cancel**.

For more information on using the supplied software, start the application and select the appropriate option from the **Help** menu.

- ① If a memory card containing a large number of images is inserted, there may be a delay before the software starts and you may be unable to import or save images. Use a memory card reader to transfer pictures.
- ① Make sure that the computer does not display a message stating that copying is in progress and that the indicator lamp is out before turning the camera off or disconnecting the USB cable (if the number of images copied is very large, the indicator lamp may remain lit after the message has cleared from the computer display). Failure to observe this precaution could result in loss of data or damage to internal memory or the memory card.
- ${\scriptstyle \textcircled{O}}$  Disconnect the camera before inserting or removing memory cards.
- $\oplus$  In some cases, it may not be possible to access pictures saved to a network server using the supplied software in the same way as on a standalone computer.

#### Disconnecting the Camera

After confirming that the indicator lamp is out, turn the camera off and disconnect the USB cable.

### Uninstalling the Supplied Software

Only uninstall the supplied software when it is no longer required or before beginning reinstallation. After quitting the software and disconnecting the camera, drag the "FinePixViewer" folder from "Applications" into the Trash and select **Empty Trash** in the **Finder** menu (Macintosh), or open the control panel and use "Programs and Features" (Windows 7/Windows Vista) or "Add or Remove Programs" (Windows XP) to uninstall MyFinePix Studio. Under Windows, one or more confirmation dialogs may be displayed; read the contents carefully before clicking **OK**.

# Menus

# Using the Menus: Shooting Mode

Use the  $\mathbf{F}$ -mode and shooting menus to adjust shooting settings. The options available vary with the shooting mode selected.

# <u>Using the F-Mode Menu</u>

 
To display  $\mathbf{F}$ -mode menu shooting options, press the *F* button in shooting mode. Highlight items and press the selector right to view options, then highlight an option and press MENU/OK. Press DISP/BACK to exit when set-


tings are complete.

# F-Mode Menu Options

🖾 ISO	(defaults to <b>AUTO</b> )	
	nsitivity to light. Higher values can reduce blur; note, however, that mot-	
tling may appear in pict	ures taken at high sensitivities.	
100	<b>↓ ISO</b> 12800	
Bright	← Scene → Dark	
Less noticeable	← Noise (mottling) → More noticeable	
Option	Description	
AUTO	Sensitivity is adjusted automatically in response to shooting conditions.	
AUTO (3200)/AUTO (1600)/	As above, except that sensitivity will not be raised above the value in	
AUTO (800) / AUTO (400)	parentheses.	
12800/6400/2200/1600/		

800/400/200/100	Sensitivity is set to the specified value, which is shown in the display.
12800/6400/3200/1600/	
AUTO (800) / AUTO (400)	parentheses.
AUTU (3200)/ AUTU (1000)/	As above, except that sensitivity will not be raised above the value in



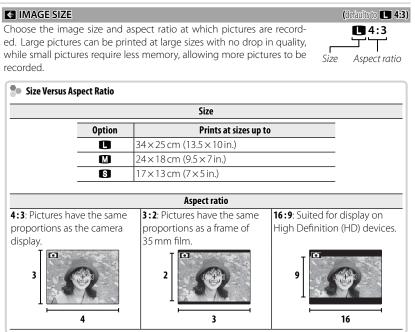

#### Using the Menus: Shooting Mode

### CONTINUOUS

Capture motion in a series of pictures (🕮 45).

#### ADVANCED ANTI BLUR

Select ON to enable advanced anti blur in 🔛 mode (🕮 24).

#### **FILM SIMULATION**

Simulate the effects of different types of film, including sepia and black-and-white.

Option	Description	
BE PROVIA/STANDARD	Standard color reproduction. Suited to a wide range of subjects, from	
SEP FROVIA/STANDARD	portraits to landscapes.	
💁 Velvia/VIVID	A high-contrast palette of saturated colors, suited to nature photographs.	
STIA/SOFT	A soft-toned palette of less saturated colors.	
∎∎ B&W	Take pictures in black and white.	
SEPIA	Take pictures in sepia.	

(defaults to OFF) (defaults to ON)

(defaults to 🔤

83

# <u>Using the Shooting Menu</u>

To display the shooting menu, press **MENU/OK** in shooting mode. Highlight items and press the selector right to view options, then highlight an option and press **MENU/OK**. Press **DISP/BACK** to exit when settings are complete.

<u>Shooting</u>	Menu	<u>Options</u>
-----------------	------	----------------

<u> </u>	
EXR MODE	(defaults to 🔛)
Choose an option for <b>EXR</b> mode (🕮 23).	
Adv. MODE	(defaults to 🔤 )
Choose an advanced shooting mode (🗐 25).	
SCENE POSITION	(defaults to 🗣 )
Choose a scene for <b>SP</b> mode (🕮 33).	
ISI ISO	(defaults to AUTO)
Control the camera's sensitivity to light (🗐 81).	
IMAGE SIZE	(defaults to 🔳 4:3)
Choose image size and aspect ratio (🗐 82).	
IMAGE QUALITY	(defaults to F)
Choose how much image files are compressed.	

Option	Description	
FINE	Low compression. Select for higher image quality.	
NORMAL	High compression. Select this option to store more pictures.	

#### DYNAMIC RANGE

Control contrast. Higher values are recommended for scenes that include both sunlight and deep shade or for increased contrast with such subjects as sunlight on water, brightly-lit autumn leaves, portraits taken against a blue sky, and white objects or people wearing white; note, however, that mottling may appear in pictures taken at higher values. If **AUTO** is selected, the camera will automatically select values between 100% and 400% in response to shooting conditions.

Option Description		Description	
	R100 100%	Increase contrast when shooting indoors or under overcast skies.	
AUTO	R200 200%	<u>ት</u>	
	R400 400%	↓ 公	
R <mark>800</mark> 800%		Reduce loss of detail in highlights and shadows when photographing	
R1600 16009	6	high-contrast scenes.	

\* 1600% and 100% are available only when D-RANGE PRIORITY is selected in EXR mode and an option other than the Velvia/VIVID or the ASTIA/SOFT is selected for The FILM SIMULATION.

FILM SIMULATIO	NC
----------------	----

Simulate the effects of different types of film (🕮 83).

#### (defaults to AUTO)

(defaults to stor

#### WHITE BALANCE

(defaults to AUTO)

If **AUTO** does not produce natural colors (for example, when taking close-ups), select **Q** and measure a value for white balance or choose the option that matches the light source.

Option	Description
AUTO	White balance adjusted automatically.
	Measure a value for white balance.
*	For subjects in direct sunlight.
*2	For subjects in the shade.
Ħ	Use under "daylight" fluorescent lights.
₩ź	Use under "warm white" fluorescent lights.
兴	Use under "cool white" fluorescent lights.
-Å-	Use under incandescent lighting.
	For underwater photography

#### 🐌 📮 : Custom White Balance

Choose 🖵 to adjust white balance for unusual lighting conditions. White balance measurement options will be displayed; frame a white object so that it fills the display and press the shutter button all the way down to measure white balance.

- If "COMPLETED!" is displayed, press MENU/OK to set white balance to the measured value.
- If "UNDER" is displayed, raise exposure compensation (🕮 39) and try again.
- If "OVER" is displayed, lower exposure compensation and try again.
- For greater precision, adjust T FILM SIMULATION, M ISO, and M DYNAMIC RANGE before measuring white balance.
- At settings other than 📮, auto white balance is used with the flash.
- Results vary with shooting conditions. Play pictures back after shooting to check colors in the display.

### ■ INTELLIGENT SHARPNESS

Select **ON** to process photos digitally for sharp, super high-resolution results.

- The time needed to record images increases.
- The effects are not visible in the display during shooting.
- Intelligent sharpness may turn off automatically in some modes.
- This option has no effect on photos taken in continuous mode.

### CONTINUOUS

Capture motion in a series of pictures (🕮 45).

#### ADVANCED ANTI BLUR

Select ON to enable advanced anti blur in 🔛 mode (🕮 24).

### FACE DETECTION

Choose whether the camera automatically detects and sets focus and exposure for human portrait subjects (🕮 44).

#### **D** PHOTOMETRY

Choose how the camera meters exposure when Intelligent Face Detection is off.

Option	Description
o Multi	Automatic scene recognition is used to adjust exposure for a wide range of shooting conditions.
• SPOT	The camera meters lighting conditions at the center of the frame. Recom- mended when the background is much brighter or darker than the main subject.
[] AVERAGE	Exposure is set to the average for the entire frame. Provides consistent expo- sure across multiple shots with the same lighting, and is particularly effective for landscapes and portraits of subjects dressed in black or white.

(defaults to OFF)

(defaults to OFF) (defaults to ON)

-----

(defaults to 🔘)

#### AF MODE

This option controls how the camera selects the focus area for photographs. Regardless of the option selected, the camera will focus on the subject in the center of the frame when macro mode is on.

Option	Description
CENTER	The camera focuses on the subject in the center of the frame.
🛨 MULTI	When the shutter button is pressed halfway, the camera detects high-contrast subjects near the center of the frame and selects the focus area automatically.
CONTINUOUS	The camera continuously adjusts focus to reflect changes in the distance to the subject in the focus frame.
🖳 TRACKING	Position the subject in the center focus area and press the selector left. Focus will track the subject as it moves through the frame.

- Note that in 
  and 
  modes, the camera focuses continuously, increasing the drain on the battery, and that the sound of the camera focusing may be audible.
- If a face is detected when is selected, a selected, a selected, a selected will be displayed and the camera will continuously adjust focus to maintain focus on the face.

#### FACE RECOGNITION

Add portrait subjects to the face recognition database. These subjects will be given priority during Intelligent Face Detection, and their names and other information can be viewed during playback (
\$\equiv 53\$).

### MOVIE AF MODE

This option controls how the camera selects the focus area for movies.

Option	Description
CENTER	The camera focuses on the subject in the center of the frame.
	The camera continuously adjusts focus to reflect changes in the distance to subjects near the center of the frame.

Note that in mu mode, the camera focuses continuously, increasing the drain on the battery, and that the sound of the camera focusing may be audible.

#### MOVIE MODE

Choose a frame size for movies (🕮 64).

#### **STILL SHOOTING IN MOVIE**

Choose how the camera records photographs taken during movie recording(🖽 65).

Option	Description
MOVIE PRIORITY	The camera takes a photograph without interrupting movie recording. Image size is determined by the option selected for 🖽 MOVIE MODE.
STILL IMAGE PRIORITY	The camera interrupts filming to take the photograph and resumes film- ing automatically when recording is complete. Image size is determined by the option selected for <b>(*) IMAGE SIZE</b> , but note that the photograph will be recorded at size <b>(M)</b> if <b>(L)</b> is selected.

#### AE BKT EV STEPS

Choose the size of the exposure bracketing increment used when **The BKT** is selected for **CONTINUOUS**. Select from increments of  $+1/_3$ EV,  $+2/_3$ EV, and +1EV (note that the camera may not be able to use the selected bracketing increment if the amount of over- or under-exposure exceeds the limits of the exposure metering system).

(defaults to 🗉)

(defaults to MOVIE PRIORITY)

(defaults to Ho

(defaults to ±1/3)

# Using the Menus: Playback Mode

The *F*-mode and playback menus are used to manage the pictures in internal memory or on the memory card.

# Using the F-Mode Menu

To display **F**-mode menu playback options, press the **F** button in playback mode. Highlight items and press the selector right to view options, then highlight an option and press **MENU/OK**. Press **DISP/BACK** to exit when settings are complete.

# F-Mode Menu Options

#### PHOTOBOOK ASSIST

Create books from your favorite photos (🕮 59).

### SLIDE SHOW

90

View pictures in an automated slide show. Choose the type of show and press **MENU/OK** to start. Press **DISP/BACK** at any time during the show to view on-screen help. The show can be ended at any time by pressing **MENU/OK**.

 
	Description
NORMAL	Press selector left or right to go back or skip ahead one frame. Select
FADE-IN	FADE-IN for fade transitions between frames.
NORMAL 😫	As above, except that camera automatically zooms in on faces selected
FADE-IN 😫	with Intelligent Face detection.
MULTIPLE	Display several pictures at once.

The camera will not turn off automatically while a slide show is in progress.

(defaults to **MULTIPLE**)

# <u>Using the Playback Menu</u>

To display the playback menu, press **MENU/OK** in playback mode. Highlight items and press the selector right to view options, then highlight an option and press **MENU/OK**. Press **DISP/BACK** to exit when settings are complete.



# Playback Menu Options

#### **PHOTOBOOK ASSIST**

Create books from your favorite photos (🕮 59).

#### IMAGE SEARCH

Search for pictures (🕮 58).

#### ERASE

Delete all or selected pictures (🕮 57).

#### MARK FOR UPLOAD TO

Select pictures for upload to YouTube or Facebook using MyFinePix Studio (Windows only).

#### Selecting Pictures for Upload

 
- 1 Select YouTube to choose movies for upload to YouTube, FACEBOOK to choose photos and movies for upload to Facebook.
- 2 Press the selector left or right to display pictures and press **MENU/OK** to select or deselect. Press **DISP/BACK** to exit when all the desired pictures are selected.
- Only movies can be selected for upload to YouTube.
- During playback, selected pictures are indicated by Marchaeler or Marchaeler FACEBOOK icons.

#### RESET ALL: Deselecting All Pictures

Choose **RESET ALL** to deselect all pictures. If the number of pictures affected is very large, a message will be displayed while the operation is in progress. Press **DISP/BACK** to exit before the operation is complete.

#### Uploading Pictures (Windows Only)

Selected pictures can be uploaded using the **YouTube/Facebook Upload** option in MyFinePix Studio.



For information on installing MyFinePix Studio and connecting the camera to a computer, see "Viewing Pictures on a Computer" (🗐 73).

### **SLIDE SHOW**

(defaults to MULTIPLE)

View pictures in an automated slide show (🕮 90).

### RED EYE REMOVAL

If the current picture is marked with a 🔄 icon to indicate that it was taken with Intelligent Face Detection, this option can be used to remove red-eye. The camera will analyze the image; if red-eye is detected, the image will be processed to create a copy with reduced red-eye.

- 1 Display the desired picture.
- 2 Select 🐼 RED EYE REMOVAL in the playback menu.

#### 3 Press MENU/OK.

- Red eye may not be removed if the camera is unable to detect a face or the face is in profile. Results may differ depending on the scene. Red eye can not be removed from pictures that have already been processed using red-eye removal or pictures created with other devices.
- The amount of time needed to process the image varies with the number of faces detected.
- Copies created with 🖸 **RED EYE REMOVAL** are indicated by a 💽 icon during playback.

#### **PROTECT**

Protect pictures from accidental deletion.

- 1 Select PROTECT in the playback menu.
- 2 Highlight one of the following options and press MENU/OK:
  - FRAME: Protect selected pictures. Press the selector left or right to view pictures and press MENU/OK to select or deselect. Press DISP/BACK when the operation is complete.
  - SET ALL: Protect all pictures.
  - **RESET ALL**: Remove protection from all pictures.

Using the Menus: Playback Mode

#### CROP

Create a cropped copy of the current picture.

- 1 Display the desired picture.
- 2 Select 🖾 CROP in the playback menu.
- **3** Use the zoom control to zoom in and out and use the selector to scroll the picture until the desired portion is displayed.
- 4 Press MENU/OK to display a confirmation dialog.
- 5 Press MENU/OK again to save the cropped copy to a separate file.
- Larger crops produce larger copies; all copies have an aspect ratio of 4:3. If the size of the final copy will be MO, OK will be displayed in yellow.

#### E RESIZE

Create a small copy of the current picture.

- 1 Display the desired picture.
- 2 Select 🔚 RESIZE in the playback menu.
- 3 Highlight a size and press MENU/OK to display a confirmation dialog.
- 4 Press MENU/OK to save the resized copy to a separate file.
- The sizes available vary with the size of the original image.

#### **IMAGE ROTATE**

Rotate pictures taken in tall orientation so that they are displayed in tall orientation in the LCD monitor.

- 1 Display the desired picture.
- 2 Select 🖸 IMAGE ROTATE in the playback menu.
- **3** Press the selector down to rotate the picture 90° clockwise, up to rotate it 90° counterclockwise.
- **4** Press **MENU/OK**. The picture automatically be displayed in the selected orientation whenever it is played back on the camera.
- Protected pictures can not be rotated. Remove protection before rotating pictures (🕮 93).
- The camera may not be able to rotate pictures created with other devices.

#### COPY

Copy pictures from internal memory to a memory card.

- **1** Select **COPY** in the playback menu.
- 2 Highlight one of the following options and press the selector right:
  - 🚯 INTERNAL MEMORY → 🖻 CARD: Copy pictures from internal memory to a memory card.
  - ☑ CARD → INTERNAL MEMORY: Copy pictures from a memory card to internal memory.
- 3 Highlight one of the following options and press MENU/OK:
  - FRAME: Copy selected pictures. Press the selector left or right to view pictures and press MENU/OK to copy the current picture.
  - ALL FRAMES: Copy all pictures.
- Copying ends when the destination is full.

#### **VOICE MEMO**

Add a voice memo to the current photograph. Holding the camera at a distance of about 20 cm, face the microphone and press **MENU/OK** to begin recording. Press **MENU/OK** again to end recording (recording ends automatically after 30 seconds).

- Voice memos can not be added to movies or protected pictures. Remove protection from pictures before recording voice memos.
- If a voice memo already exists for the current picture, the options will be displayed. Select RE-REC to replace the existing memo.

#### Playing Voice Memos

Pictures with voice memos are indicated by a icon during playback. To play the voice memo back, select **PLAY** for **voice MEMO** in the playback menu.

- The camera may not play voice memos recorded with other devices.
- Do not cover the speaker during playback.

#### RASE FACE RECOG.

Remove face recognition links from the current image. When this option is selected, the camera will zoom in on an area in the current picture that it has matched with a face in the face recognition database. If the match is not correct, press **MENU/OK** to remove the link to the face recognition database.

 
Face recognition links can not be removed from copies with a size of M or smaller.

 
#### PRINT ORDER (DPOF)

Select pictures for printing on DPOF- and PictBridge-compatible devices (🕮 71).

#### DISP ASPECT

Choose how High Definition (HD) devices display pictures with an aspect ratio of 4:3 (this option is available only when an HDMI cable is connected). Select **16:9** to display the image so that it fills the screen with its top and bottom cropped out, **4:3** to display the entire image with black bands at either side.





Photographs with an aspect ratio of 16:9 are displayed full screen, those with an aspect ratio of 3:2 in a black frame.

# The Setup Menu

 
## Using the Setup Menu

- 1 Display the setup menu.
  - **1.1** Press **MENU/OK** to display the menu for the current mode.
  - **1.2** Press the selector left to highlight the tab for the current menu.
  - **1.3** Press the selector down to highlight  $f_{\rm eff}$ .

1.4 Press the selector right to place the cursor in the setup menu.

# 2 Adjust settings.

Highlight items and press the selector right to view options, then highlight an option and press **MENU/OK**. Press **DISP/BACK** to exit when settings are complete.





## <u>Setup Menu Options</u>

#### DATE/TIME

Set the camera clock (🕮 16).

#### TIME DIFFERENCE

Switch the camera clock instantly from your home time zone to the local time at your destination when traveling. To specify the difference between local time and your home time zone:

**1** Highlight + LOCAL and press the selector right.

2 Use the selector to choose the time difference between local time and your home time zone.

#### 3 Press MENU/OK.

To switch between local time and your home time zone, highlight **+ LOCAL** or  **HOME** and press **MENU/OK**.

Option	Description	
合 HOME	Switch to the time currently selected for 🕑 DATE/TIME (see above).	
+ LOCAL	Switch to local time. If this option is selected, $+$ and the time and date will be displayed in yellow for three seconds each time the camera is turned on.	

#### ☑ 言語/LANG.

Choose a language.

#### SILENT MODE

(defaults to OFF)

Select **ON** to disable the speaker, flash, and AF-assist illuminator in situations in which camera sounds or lights may be unwelcome (note that the flash will still fire in **Φ**<sup>4</sup> mode).

(defaults to 仚)

#### RESET

Reset all settings except ( DATE/TIME, ( TIME DIFFERENCE, ) BACKGROUND COLOR, and ( VIDEO SYSTEM to default values.

- 1 Highlight G RESET and press the selector right to display a confirmation dialog.
- 2 Highlight OK and press MENU/OK.

#### FORMAT

If a memory card is inserted in the camera, this option will format the memory card. If no memory card is inserted, this option will format internal memory.

- ① All data—including protected pictures—will be deleted from the memory card or internal memory. Be sure important files have been copied to a computer or other storage device.
- ① Do not open the battery-chamber cover during formatting.

#### IMAGE DISP.

(defaults to 1.5 SEC)

Choose how long pictures are displayed in the LCD monitor after shooting.

Option	Description	
3 SEC	Pictures are displayed for three seconds ( <b>3 SEC</b> ) or 1.5 seconds ( <b>1.5 SEC</b> ).	
1.5 SEC	Colors may differ slightly from those in the final image.	
ZOOM (CONTINUOUS)	Pictures are displayed until the <b>MENU/OK</b> button is pressed.	
OFF	Pictures are not displayed after shooting.	

The Setup Menu

# FRAME NO. (defaults to CONT.) New pictures are stored in image files named using a four-digit file number assigned by adding one to the last file number used. The file number is displayed during playback as shown at right. Frame number is inserted or the current memory card or internal memory is formatted. Description

Option	Description	
CONTINUOUS	Numbering continues from the last file number used or the first available file number, whichever is higher. Choose this option to reduce the number of pictures with duplicate file names.	
RENEW	Numbering is reset to 0001 after formatting or when a new memory card is inserted.	

- ♦ If the frame number reaches 999-9999, the shutter release will be disabled (🕮 120).
- Selecting RESET (B 100) sets FRAME NO. to CONTINUOUS but does not reset the file number.
- Frame numbers for pictures taken with other cameras may differ.

# OPERATION VOL. (defaults to 📢 •1)

Adjust the volume of the sounds produced when camera controls are operated. Choose **4 OFF** (mute) to disable control sounds.

#### **SHUTTER VOLUME**

Menus

Adjust the volume of the sounds produced when the shutter is released. Choose **4 OFF** (mute) to disable the shutter sound.

(defaults to 📢 💵)

Menus

#### **SHUTTER SOUND**

Choose the sound made by the shutter.

#### PLAYBACK VOLUME

Adjust the volume for movie and voice memo playback.

#### LCD BRIGHTNESS

Control the brightness of the display.

#### MONITOR SUNLIGHT MODE

Select ON to make the display in the monitor easier to read in bright light (🕮 6).

#### AUTO POWER OFF

Choose the length of time before the camera turns off automatically when no operations are performed. Shorter times increase battery life; if **OFF** is selected, the camera must be turned off manually. Note that in some situations the camera turns off automatically even when **OFF** is selected.

(defaults to 🎝 1)

(defaults to **7**)

(defaults to **0**)

(defaults to OFF)

(defaults to 2 MIN)

#### DUAL IS MODE

(defaults to (♠)₁•>)

Choose from the following image stabilization options:

Option	Description	
$(\textcircled{1})_1 \bullet \gg \text{CONTINUOUS} + \text{MOTION}$	Image stabilization on. If + MOTION is selected, the camera will ad- just shutter speed to reduce motion blur when a moving objects	
	are detected.	
	As above, except that image stabilization is performed only whe	
( SHOOTING ONLY	the shutter button is pressed halfway or the shutter is released.	
OFF Image stabilization off. Choose this option when using a trip		

+ MOTION has no effect when sensitivity is set to a fixed value, and may also be unavailable at some other combinations of settings. The effect may vary with lighting conditions and the speed at which the object is moving.

#### RED EYE REMOVAL

(defaults to ON)


Choose **ON** to remove red-eye effects caused by the flash when shooting with Intelligent Face Detection.

Red-eye reduction is performed only when a face is detected.

#### INTELLIGENT DIGITAL ZOOM

(defaults to ON)

If **ON** is selected, selecting **(1**) at the maximum optical zoom position triggers intelligent digital zoom, further magnifying the image while processing it for sharp, high-resolution results.

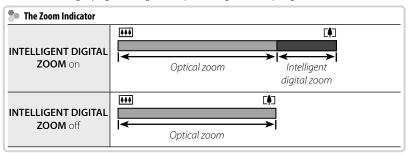

- Selecting another mode may end intelligent digital zoom and restore maximum optical zoom.
- In Image mode, the camera will match the EXR mode to the scene for zoom ratios of up to 30x when combined with optical zoom.
- Intelligent digital zoom may sometimes produce lower quality images than optical zoom.
- The time needed to record images increases.
- > The effects are not visible in the display during shooting.
- Intelligent digital zoom is not available in continuous mode or during movie recording.

#### The Setup Menu

AF ILLUMINATOR

If ON is selected, the AF-assist illuminator will light to assist autofocus.

- ① The camera may be unable to focus using the AF-assist illuminator in some cases. If the camera is unable to focus in macro mode, try increasing the distance to the subject.
- ① Avoid shining the AF-assist illuminator directly into your subject's eyes.

#### SAVE ORG IMAGE

Choose **ON** to save unprocessed copies of seamless **m** panoramas or pictures taken using **PRO EYE REMOVAL**, **m PRO LOW-LIGHT MODE**, or **m PRO FOCUS MODE**.

#### **AUTOROTATE PB**

Choose ON to automatically rotate "tall" (portrait-orientation) pictures during playback.

#### BACKGROUND COLOR

Choose a color scheme.

#### **GUIDANCE DISPLAY**

Choose whether to display tool tips.

#### **WIDEO SYSTEM**

Choose a video mode for connection to a TV.

Option	Description	
	Select this mode for connection to video devices in North America, the Carib-	
NIX	bean, parts of Latin America, and some East Asian countries.	
	Select this mode for connection to video devices in the United Kingdom and	
	much of Europe, Australia, New Zealand, and parts of Asia and Africa.	

(defaults to ON)

(defaults to OFF)

(defaults to ON)

(defaults to ON)

#### POWER MANAGEMENT

Optimize camera performance for increased battery life or display quality.

Option	Description	
	Reduces display refresh rate. The display dims to save power if no operations are performed for a short period, but can be restored by operating camera controls. Select this option to save power.	
🗇 CLEAR DISPLAY	Choose this option for a brighter, higher quality display and for a longer delay before the monitor dims to save power.	

POWER SAVE does not take effect when Intelligent Face Detection is on.

DATE STAMP	(defaults to <b>OFF</b> )
------------	---------------------------

Stamp the time and/or date of recording on photographs as they are taken.

Option	Description	
31+0	Stamp new photographs with the date and time of recording.	
31	Stamp new photographs with the date of recording.	
OFF	Do not stamp the time and date on new photographs.	

- ① Time and date stamps can not be deleted. Turn M DATE STAMP off to prevent time and date stamps appearing on new photographs.
- ① If the camera clock is not set, you will be prompted to set the clock to the current date and time ( □ 16).
- ① We recommend that you turn the DPOF "print date" option off when printing images with a time and date stamp (\$\$\equiv\$ 71).
- ${\scriptstyle \oplus}\,$  Time and date stamps do not appear on movies, panoramas, or 3D photos.

#### START-UP SCREEN

Choose whether the camera displays a splash screen at startup.

#### **WATERPROOF CASE**

Select **WHEN USE** when using the camera with an optional waterproof case. The lens will remain extended when the camera is turned off.

- If you will be using the flash under water, raise it before selecting WHEN USE.
- > The lens and flash will not retract during playback while WHEN USE is selected.
- Select WHEN NOT USE when the camera is not in a waterproof case. Failure to observe this precaution could result in product malfunction.

#### Exposure

Menus

Exposure can not be adjusted if mode  $\mathbf{M}$  is selected when the camera is in a waterproof case. In modes  $\mathbf{S}$  and  $\mathbf{A}$ , exposure can be adjusted by pressing the selector up to display exposure options. You can then press the selector left or right to choose shutter speed or aperture and up or down to adjust exposure compensation.


#### (defaults to OFF)

#### (defaults to WHEN NOT USE)

# **Technical Notes**

# **Optional Accessories**

The camera supports a wide range of accessories from FUJIFILM and other manufacturers.

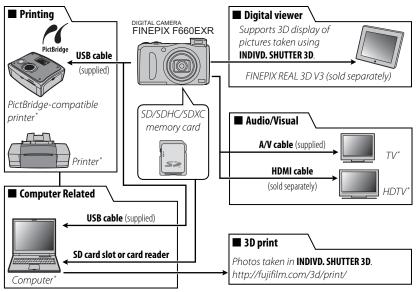

\* Available separately.

# Accessories from FUJIFILM

The following optional accessories are available from FUJIFILM. For the latest information on the accessories available in your region, check with your local FUJIFILM representative or visit *http://www.fujifilm.com/products/digital\_ cameras/index.html*.

Rechargeable Li-ion batteries	NP-50: Additional large-capacity NP-50 rechargeable bat- teries can be purchased as required. Note that the NP-50 may record fewer photos per charge than the NP-50A.	
Battery chargers	<b>BC-45W</b> : Replacement battery chargers can be purchased as required. The BC-45W charges an NP-50A/NP-50 battery in about 150 minutes at $+20$ °C (+68 °F).	
AC power adapters	<b>AC-SVX</b> (requires CP-50 DC coupler): Use for extended playback or when copying pictures to a computer (shape of adapter and plug vary with region of sale).	
DC couplers	<b>CP-50</b> : Connect the AC-5VX to the camera.	
Waterproof case	<b>WP-FXF500</b> : Allows the camera to be used at depths of up to 40 m (131 ft.).	
Digital viewer	FINEPIX REAL 3D V3: View 3D images without 3D glasses.	<u> </u>

# Caring for the Camera

To ensure continued enjoyment of the product, observe the following precautions.

## Storage and Use

If the camera will not be used for an extended period, remove the battery and memory card. Do not store or use the camera in locations that are:

- exposed to rain, steam, or smoke
- very humid or extremely dusty
- exposed to direct sunlight or very high temperatures, such as in a closed vehicle on a sunny day
- extremely cold
- subject to strong vibration
- exposed to strong magnetic fields, such as near a broadcasting antenna, power line, radar emitter, motor, transformer, or magnet
- in contact with volatile chemicals such as pesticides
- next to rubber or vinyl products

## Water and Sand

Exposure to water and sand can also damage the camera and its internal circuitry and mechanisms. When using the camera at the beach or seaside, avoid exposing the camera to water or sand. Do not place the camera on a wet surface.

## Condensation

Sudden increases in temperature, such as occur when entering a heated building on a cold day, can cause condensation inside the camera. If this occurs, turn the camera off and wait an hour before turning it on again. If condensation forms on the memory card, remove the card and wait for the condensation to dissipate.

## <u>Cleaning</u>

Use a blower to remove dust from the lens and LCD monitor, then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of FUJIFILM lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied. Care should be taken to avoid scratching the lens or LCD monitor. The camera body can be cleaned with a soft, dry cloth. Do not use alcohol, thinner, or other volatile chemicals.

## <u>Traveling</u>

Keep the camera in your carry-on baggage. Checked baggage may suffer violent shocks that could damage the camera.

# Troubleshooting

# **Problems and Solutions**

#### **Power and Battery**

Problem	Solution	
	• The battery is exhausted: Charge the battery or insert a fully-charged spare battery (💷 7).	
The camera does not turn on.	• The battery is inserted incorrectly: Reinsert in the correct orientation (💷 9).	
	• The battery-chamber cover is not latched: Latch the battery-chamber cover ( 🗐 9).	
tum on.	The AC power adapter and DC coupler are connected incorrectly: Reconnect the AC power	
	adapter and DC coupler.	
	• The battery is cold: Warm the battery by placing it in a pocket or other warm place and reinsert	
	it in the camera immediately before taking a picture.	
	There is dirt on the battery terminals: Clean the terminals with a soft, dry cloth.	
	CLEAR DISPLAY is selected for      POWER MANAGEMENT: Select      POWER	
	SAVE to reduce the drain on the battery (💷 106).	
The battery runs down	• ON is selected for MONITOR SUNLIGHT MODE: Select OFF to reduce the	
quickly.	drain on the battery (💷 6).	
	• Exercises is selected for shooting mode: Select 🗖 mode to reduce the drain on the battery (💷 22).	
	• CONTINUOUS or C TRACKING is selected for AF MODE: Select a dif-	
	ferent AF mode (💷 88).	
	• The battery has been charged many times: The battery has reached the end of its charging	
	life. Purchase a new battery.	
The camera turns off	• The battery is exhausted: Charge the battery or insert a fully-charged spare battery (💷 7).	
suddenly.	The AC power adapter or DC coupler has been disconnected: Reconnect the AC power	
Juduciny.	adapter and DC coupler.	

Problem	Solution	
Charging does not start.	einsert the battery in the correct orientation and make sure that the charger is plugged in (💷 7).	
Charging is slow.	Charge the battery at room temperature (💷 vi).	
The charging lamp lights, but the battery does not charge. • There is dirt on the battery terminals: Clean the terminals with a soft, dry cloth. • The battery has been charged many times: The battery has reached the end of its of life. Purchase a new battery. If the battery still fails to charge, contact your FUJIFILM de • The battery is too hot or too cold: Wait for the battery temperature to stabilize (Imperature to stabilize)		

#### **Menus and Displays**

Problem	Solution	
Menus and displays are	Select ENGLISH for 🔄 言語/LANG. (皐 16, 99).	
not in English.		

## Shooting

Problem	Solution				
	Memory is full: Insert a new memory card or delete pictures ( 💷 10, 57).				
	<ul> <li>Memory is not formatted: Format the memory card or internal memory (I 100).</li> </ul>				
No picture is taken when	• There is dirt on the memory card contacts: Clean the contacts with a soft, dry cloth.				
the shutter button is	• The memory card is damaged: Insert a new memory card (💷 10).				
	• The battery is exhausted: Charge the battery or insert a fully-charged spare battery (💷 7).				
pressed.	• The camera has turned off automatically: Turn the camera on (💷 14).				
	• The indicator lamp was orange when you attempted to record a panorama: Wait until the indicator lamps turns off (== 3).				
The LCD monitor goes	The LCD menitor may darken while the flack charges. Whit for the flack to charge ( == 11)				
dark after shooting.	The LCD monitor may darken while the flash charges. Wait for the flash to charge (🗐 41).				
3D images do not turn out as expected.	Use a tripod or change the distance the camera is moved between the first and second shots (😂 31)				

Problem	Solution				
The camera does not focus.	• The subject is close to the camera: Select macro mode (💷 40).				
	<ul> <li>The subject is far away from the camera: Cancel macro mode (</li></ul>				
locus.	<ul> <li>The subject is not suited to autofocus: Use focus lock (I Arrow 37).</li> </ul>				
Pictures are not the	If 💵 is selected for 🚺 IMAGE SIZE in 🔛 mode, the camera will optimize not only sensi-				
same size.	tivity and other settings, but also image size. To record all pictures at the same size, choose another				
same size.	shooting mode or select another option for 💽 IMAGE SIZE (💷 82).				
Macro mode is not	Choose a different shooting mode (🕮 22).				
available.					
Intelligent Face Detection Intelligent Face Detection is not available in the current shooting mode: Choose					
is not available.	ent shooting mode (🗐 22).				
	• The subject's face is obscured by sunglasses, a hat, long hair, or other objects: Remove				
	the obstructions.				
	• The subject's face occupies only a small area of the frame: Change the composition so that				
No face is detected.	the subject's face occupies a larger area of the frame (💷 37).				
	The subject's head is tilted or horizontal: Ask the subject to hold their head straight.				
	• The camera is tilted: Keep the camera level (💷 18).				
	The subject's face is poorly lit: Shoot in bright light.				
Wrong subject is	The selected subject is closer to the center of the frame than the main subject. Recompose the				
selected.	picture or turn face detection off and frame the picture using focus lock ( 🗐 37).				
	• The flash is not available in the current shooting mode: Choose a different shooting mode				
	(💷 22).				
The flash does not fire.	• The battery is exhausted: Charge the battery or insert a fully-charged spare battery (🕮 7).				
The hash uses not me.	• The camera is in continuous mode: Select OFF for 🔛 CONTINUOUS (🗐 45).				
	<ul> <li>The camera is in silent mode: Turn silent mode off (</li></ul>				
	<ul> <li>The flash is not raised: Raise the flash (IIII) 41).</li> </ul>				

Problem	Solution				
Some flash modes are not available.	<ul> <li>The desired flash mode is not available in the current shooting mode: Choose a different shooting mode (EQ 22).</li> <li>The camera is in silent mode: Turn silent mode off (EQ 99).</li> </ul>				
The flash does not fully light the subject.	<ul> <li>The subject is not in range of the flash: Position the subject in range of the flash (== 125).</li> <li>The flash window is obstructed: Hold the camera correctly (== 18).</li> <li>Fast shutter speed selected: Choose a slower shutter speed (== 35, 36).</li> </ul>				
Pictures are blurred.	<ul> <li>The lens is dirty: Clean the lens (== 111).</li> <li>The lens is blocked: Keep objects away from the lens (== 18).</li> <li>!AF is displayed during shooting and the focus frame is displayed in red: Check focus before shooting (== 118).</li> <li>!O" is displayed during shooting: Use the flash or a tripod (== 42).</li> </ul>				
Pictures are mottled.	<ul> <li>A slow shutter speed is selected at high temperatures: This is normal and does not indicated a malfunction.</li> <li>The camera has been used continuously at high temperatures or a temperature warning is displayed: Turn the camera off and wait for it to cool down.</li> </ul>				
Power was interrupted during shooting. Before connecting the AC power adapter or DC of Pictures are not recorded. turn the camera off. Leaving the camera on can result in corrupted files or damage to the m card or internal memory.					
Sounds made by the camera are recorded with movies.	() () () () () () () () () () () () () (				

## Playback

Problem	Solution		
Pictures are grainy.	The pictures were taken with a different make or model of camera.		
No sound in movie	• Playback volume is too low: Adjust playback volume (🗐 102).		
playback.	• The microphone was obstructed: Hold the camera correctly during recording (🕮 18, 41).		
ріаураск.	• The speaker is obstructed: Hold the camera correctly during playback (🗐 66).		
Selected pictures are not	Some of the pictures selected for deletion are protected. Remove protection using the device with		
deleted.	which it was originally applied (💷 93).		
File numbering is	The battery-chamber cover was opened while the camera was on. Turn the camera off before		
unexpectedly reset.	opening the battery-chamber cover ( 📖 14).		

#### **Connections/Miscellaneous**

Problem	Solution				
No picture or sound.	<ul> <li>The camera is not properly connected: Connect the camera properly (== 67).</li> <li>An A/V cable was connected during movie playback: Connect the camera once movie playback has ended.</li> <li>Input on the television is set to "TV": Set input to "VIDEO".</li> <li>The camera is not set to the correct video standard: Match the camera IMPO SYSTEM setting to the TV (== 105).</li> <li>The volume on the TV is too low: Adjust the volume.</li> </ul>				
No color	Match the camera 🚟 VIDEO SYSTEM setting to the TV (💷 105).				
The computer does not recognize the camera.	Be sure the camera and computer are correctly connected (🗐 78).				
Can not transfer RAW or JPEG files to computer.	Use the bundled software to transfer pictures (💷 73).				

Problem	Solution				
Pictures can not be printed.	<ul> <li>The camera is not properly connected: Connect the camera correctly (=== 69).</li> <li>The printer is off: Turn the printer on.</li> </ul>				
Only one copy is printed/ the date is not printed.	/ The printer is not PictBridge compatible.				
The camera is unre- sponsive.	<ul> <li>Temporary camera malfunction: Remove and reinsert the battery (== 9) or disconnect and reconnect the AC power adapter/DC coupler.</li> <li>The battery is exhausted: Charge the battery (== 7) or insert a fully-charged spare battery (== 9).</li> </ul>				
The camera does not function as expected.	Remove and reinsert the battery (🗐 9) or disconnect and reconnect the AC power adapter/DC coupler. If the problem persists, contact your FUJIFILM dealer.				
I want to use an AC power adapter and DC coupler overseas.	Check the label on the AC power adapter. The AC power adapter can be used with voltages of 100 – 240 V. Consult your travel agent for information on plug adapters.				
No sound.	Turn silent mode off (💷 99).				
Hue or content of display changes unexpectedly.	Choose OFF for 🎆 MONITOR SUNLIGHT MODE (🗐 6).				
Time and date stamps	<ul> <li>Time and date stamps are not correct: Set the camera clock (== 16).</li> <li>Time and date stamps appear on photographs: Time and date stamps can not be deleted. To prevent stamps appearing on new photographs, select OFF for IDATE STAMP (== 106).</li> </ul>				
FinePixViewer can not be installed or does not start.	FinePixViewer does not support Mac OS X version 10.7 or later. Use one of the applications supplied with Mac OS X or purchase other software.				
The lens does not retract when the camera is turned off.	Select WHEN NOT USE for 📷 WATERPROOF CASE (🗐 107).				

# Warning Messages and Displays

# The following warnings are displayed in the LCD monitor:

Warning	Description			
<b>⊈</b> (red)	Low battery. Charge the battery (💷 7) or insert a fully-charged spare battery (💷 9).			
d (blinks red)	Battery exhausted. Charge the battery (💷 7) or insert a fully-charged spare battery (💷			
Slow shutter speed. Pictures may be blurred; use the flash or a tripod.				
<b>?AF</b> (displayed in red with red focus frame)	<ul> <li>The camera can not focus. Try one of the following solutions:</li> <li>Use focus lock to focus on another subject at the same distance, then recompose the picture (1) 37).</li> <li>Use macro mode to focus when taking close-ups (1) 40).</li> </ul>			
Aperture or shutter speed displayed in red	The subject is too bright or too dark and the picture will be over- or under-exposed. If the subject is dark, use the flash (===== 41).			
FOCUS ERROR TURN OFF THE CAMERA AND TURN ON AGAIN LENS CONTROL ERROR	taking care not to touch the lens. If the message persists, contact a FUJIFILM dealer.			
CARD NOT INITIALIZED	<ul> <li>The memory card or internal memory is not formatted or the memory card was formatted in a computer or other device: Format the memory card or internal memory using the FORMAT option in the camera setup menu (FI 100).</li> <li>The memory card contacts require cleaning: Clean the contacts with a soft, dry cloth. If the message is repeated, format the card (FI 100). If the message persists, replace the card.</li> <li>Camera malfunction: Contact a FUJIFILM dealer.</li> </ul>			
PROTECTED CARD	The memory card is locked. Unlock the card (💷 10).			
BUSY	The memory card is incorrectly formatted. Use the camera to format the card (💷 100).			
!	Turn the camera off and wait for it to cool. If no action is taken, the camera will turn off auto- matically.			

Warning	Description				
	The memory card is not formatted for use in the camera. Format the card (🗐 100).				
	The memory card contacts require cleaning or the memory card is damaged. Clean the contacts				
CARD FRROR	with a soft, dry cloth. If the message is repeated, format the card (💷 100). If the message persists,				
Child Elinon	replace the card.				
	Incompatible memory card. Use a compatible card (🕮 12).				
	Camera malfunction. Contact a FUJIFILM dealer.				
MEMORY FULL					
SD MEMORY FULL	The memory card or internal memory is full and pictures can not be recorded or copied. Delete				
INTERNAL MEMORY IS	pictures or insert a memory card with more free space.				
FULL					
INSERT A NEW CARD					
	• Memory card error or connection error: Reinsert the card or turn the camera off and then				
	on again. If the message persists, contact a FUJIFILM dealer.				
WRITE ERROR	Not enough memory remaining to record additional pictures: Delete pictures or insert				
	a memory card with more free space.				
	• The memory card or internal memory is not formatted: Format the memory card or				
	internal memory (🕮 100).				
	The file is corrupt or was not created with the camera: The file can not be viewed.				
RFAD FRROR	• The memory card contacts require cleaning: Clean the contacts with a soft, dry cloth. If				
	the message is repeated, format the card (🕮 100). If the message persists, replace the card.				
	Camera malfunction: Contact a FUJIFILM dealer.				

Warning	Description			
FRAME NO. FULL	The camera has run out of frame numbers (current frame number is 999-9999). Format the memory card and select <b>RENEW</b> for <b>I FRAME NO</b> . Take a picture to reset frame numbering to 100-0001, then select <b>CONTINUOUS</b> for <b>I FRAME NO</b> . (IIII 101).			
PRESS AND HOLD THE DISP BUTTON TO DEACTIVATE SILENT MODE	An attempt was made to choose a flash mode or adjust the volume with the camera in silent mode. Exit silent mode before choosing a flash mode or adjusting the volume (🗐 99).			
TOO MANY FRAMES	<ul> <li>A search has returned more than 30,000 results: Choose a search that returns fewer results.</li> <li>More than 999 images are selected for deletion: Choose fewer images.</li> </ul>			
PROTECTED FRAME	An attempt was made to delete, rotate, or add a voice memo to a protected picture. Remove protection and try again (💷 93).			
640 CAN NOT CROP	🚳 pictures can not be cropped.			
CAN NOT CROP	The picture is damaged or was not created with the camera.			
M CANNOT EXECUTE				
S CANNOT EXECUTE	An attempt was made to create a resized copy at a size equal to or larger than the original. Choose a smaller size.			
640 CANNOT EXECUTE				
CAN NOT ROTATE	An attempt was made to rotate a picture that can not be rotated.			
😫 CAN NOT ROTATE	Movies can not be rotated.			
🛱 CANNOT EXECUTE	Red-eye removal can not be applied to the selected picture.			
😭 CANNOT EXECUTE	Red-eye removal can not be applied to movies.			
NO CARD	No memory card inserted when I COPY is selected. Insert a memory card.			

Warning	Description			
SD NO IMAGE	The source selected for IIII COPY contains no images. Select a different source.			
NO IMAGE				
! ERROR	The voice memo file is corrupt: The voice memo can not be played back.     Camera malfunction: Contact a FUJIFILM dealer.			
DPOF FILE ERROR	The DPOF print order on the current memory card contains more than 999 images. Copy the pictures to internal memory and create a new print order.			
CAN NOT SET DPOF	The picture can not be printed using DPOF.			
😫 CAN NOT SET DPOF	Movies can not be printed using DPOF.			
COMMUNICATION ERROR	A connection error occurred while pictures were being printed or copied to a computer or other device. Confirm that the device is turned on and that the USB cable is connected.			
PRINTER ERROR	Printer out of paper or ink, or other printer error. Check printer (see printer manual for details). To resume printing, turn the printer off and then turn it back on.			
PRINTER ERROR RESUME?	inner out of puper of million enter printer enter printer (see printer manual for actails).			
CANNOT BE PRINTED	An attempt was made to print a movie, a picture not created with the camera, or a picture in a format not supported by the printer. Movies and some pictures created with other devices can not be printed; if the picture is a still picture created with the camera, check the printer manual to confirm that the printer supports the JFIF-JPEG or Exif-JPEG format. If it does not, the pictures can not be printed.			

# Appendix

# Internal Memory/Memory Card Capacity

The following table shows the recording time or number of pictures available at different image sizes. All figures are approximate; file size varies with the scene recorded, producing wide variations in the number of files that can be stored, and the number of exposures or length remaining may not diminish at an even rate. A limited number of test pictures can be taken when no memory card is inserted.

Medium		Medium Internal memory					
<b>(</b>	(approx. 25 MB)		4 GB		8 G B		
		FINE	NORMAL	FINE	NORMAL	FINE	NORMAL
	4:3	3	6	620	990	1250	1990
₽	16:9	5	8	830	1310	1670	2640
ð	M 4:3	6	12	990	1930	1990	3880
Photographs	M 16:9	8	15	1300	2530	2620	5080
ъ,	<b>S</b> 4:3	12	23	1930	3640	3880	7320
	S 16:9	22	33	3540	5160	7110	10370
	1920 <sup>1</sup>	12 sec.		38 min.		76 min.	
	1280 <sup>1</sup>	1280 <sup>1</sup> 16 sec.		49	min.	98	min.
Movies	640 <sup>2</sup> 40 sec.		sec.	115	min.	232	min.
≦. g: 115 640 × 480		30	sec.	85 min.		172 min.	
	<b>15</b> 320 × 240 <sup>3</sup>	62	ec. 172 min.		min.	345 min.	
	<b>112</b> 320 × 112 <sup>3</sup>	31 :	sec.	86 min.		172 min.	

1 Use a **CASES** card or better. Individual movies can not exceed 29 minutes in length. 2 Individual movies can not exceed 120 minutes in length.

3 Use a CLASS Card or better. Individual movies can not exceed 30 seconds in length.

# Specifications

System					
Model	Digital Camera FinePix F660EXR				
Effective pixels	16 million				
Image sensor	$\frac{1}{2}$ -in., EXR CMOS with primary color filter				
Storage media	Internal memory (approx. 25 MB)     SD/SDHC/SDXC memory cards				
File system	Compliant with Design Rule for Camera File System (DCF), Exif 2.3, and Digital Print Order Format (DPOF)				
File format	Still pictures: Exif 2.3 JPEG (compressed)				
	Still pictures (3D): MPO				
	Movies: MOV (H.264)     Audio: WAV				
Image size (pixels)	• • • • • • • • • • • • • • • • • • •				
	• M 4:3: 3,264×2,448 • M 3:2: 3,264×2,176 • M 16:9: 3,264×1,840				
	• S 4:3:2,304×1,728 • S 3:2:2,304×1,536 • S 16:9:1,920×1,080				
	• 🔤 MOTION PANORAMA 📼: 1,624×11,520 (tall)/11,520×1,080 (wide)				
	• 🔤 MOTION PANORAMA 🔤 : 1,624 × 5,760 (tall)/5,760 × 1,080 (wide)				
	• 🖂 MOTION PANORAMA 🖭: 1,624×3,840 (tall)/3,840×1,080 (wide)				
	• 페 MOTION PANORAMA 📾 : 1,624 × 11,520 (tall)/11,520 × 1,080 (wide)				
Lens	Fujinon 15 × optical zoom lens, F3.5 (wide angle) – F5.3 (telephoto)				
Focal length	<b>f=4.4 mm-66.0 mm</b> (35-mm format equivalent: 24 mm-360 mm)				
Digital zoom	<b>Up to about 3.4</b> × with intelligent digital zoom (up to 51× when combined with optical zoom)				
Aperture	F3.5/F7.1/F10.0 (wide angle), F5.3/F11.0/F16.0 (telephoto); uses Neutral Density (ND) filter				

## Specifications

System	
Focus range	Approx. 45 cm (1.4 ft.)-infinity (wide angle); 2.5 m (8.2 ft.)-infinity (telephoto)
(distance from front of lens)	• Macro: approx. 5 cm–3.0 m/1.9 in.–9.8 ft. (wide angle); 1.2 m–3.0 m/3.9 ft.–9.8 ft. (telephoto)
Sensitivity	Standard output sensitivity equivalent to ISO 100, 200, 400, 800, 1600, 3200, 6400 (image size
	M or S), 12800 (image size S); AUTO, AUTO (400), AUTO (800), AUTO (1600), AUTO (3200)
Metering	256-segment through-the-lens ( $\Pi L$ ) metering; MULTI, SPOT, AVERAGE
Exposure control	Programmed AE; aperture-priority AE; shutter-priority AE; manual exposure
Exposure compensation	$-2 \text{ EV} - +2 \text{ EV}$ in increments of $\frac{1}{3} \text{ EV}$
Picture stabilization	Optical stabilization (image-sensor shift)
Shutter speed (combined	8 s-½,000 s
mechanical and electronic	・ C: ¼ s-¼,000 s ・ & : 3 s-½,000 s ・ ※: 4 s-½ s
shutter)	• S: 2 s - 1/2,000 s • Other modes: 1/4 s - 1/2,000 s
Continuous	<ul> <li>max. 200 frames; frame rate can be selected from 11, 8, 5, and 3 fps (The frame rate varies depending on the shooting conditions or numbers of frames in continuous shooting.)</li> </ul>
	• 🗣 : max. 16 frames; frame rate can be selected from 11, 8, 5, and 3 fps
Focus	Mode: Center AF, multi AF, continuous AF, tracking AF
	Autofocus system: Contrast-detect TTL AF
White balance	Custom, auto, direct sunlight, shade, daylight fluorescent, warm white fluorescent, cool white
	fluorescent, incandescent, underwater
Self-timer	Off, 2 sec., 10 sec.; auto shutter release (ℭℊ and ℭゐ)

System		
Flash		set to <b>AUTO</b> is approx. 15 cm—3.2 m/0.4 ft.—10.4 ft. ort ranges), <b>90 cm—1.9 m/2.9 ft.—6.2 ft.</b> (telephoto)
Flash mode	Auto, fill flash, off, slow sync (red-eye removal eye removal, off, slow sync with red-eye removal	off); auto with red-eye removal, fill flash with red- aval (red-eye removal on)
LCD monitor	3.0-in./7.6 cm, 460k-dot color LCD monitor; fi	rame coverage approx. 100%
Movies	H 1920: 1,920 × 1,080 (1080p), 30 fps     GOD: 640 × 480 (VGA), 30 fps     IS 320×240: 160 fps     Note: H, ID, and BO movies are recorded	<ul> <li>ID 1280: 1,280 × 720 (720p), 30 fps</li> <li>IS 640×480: 80 fps</li> <li>IS 320×112: 320 fps</li> <li>I with stereo sound.</li> </ul>
Input/output terminals		
A/V OUT (audio/video output)	NTSC or PAL output with monaural sound	
Digital input/output	USB 2.0 High-Speed; shares A/V OUT connected	or; MTP/PTP
HDMI output	HDMI mini connector	
Power supply/other		
Power supply	<ul> <li>NP-50A rechargeable battery</li> <li>AC-5VX AC power adapter and CP-50 DC could be added a second background bac</li></ul>	<b>ipler</b> (sold separately)

## Specifications

Battery type	Approximate number of frames									
NP-50A (type supplied with camera)	300									
CIPA standard, measured in 🗅 (auto) mode using battery supplied with camera and SD memory card.										
<b>Note</b> : Number of shots that can be taken with a decline at low temperatures.	battery varies with battery charge level and will									
103.5 mm $\times$ 59.2 mm $\times$ 32.6 mm/4.0 in. $\times$ 2.3 i	n. $ imes$ 1.2 in., excluding projections									
(minimum depth 22.9 mm/0.9 in.)										
Approx. 217 g/7.6 oz., including battery and me	mory card									
Approx. 196 g/6.9 oz., excluding battery, access	ories, and memory card									
• Temperature: 0 °C - +40 °C/+32 °F - +104	°F									
• Humidity: 10-80% (no condensation)										
	NP-50A (type supplied with camera) CIPA standard, measured in $\square$ (auto) mode using I Note: Number of shots that can be taken with I decline at low temperatures. 103.5 mm × 59.2 mm × 32.6 mm/4.0 in. × 2.3 i (minimum depth 22.9 mm/0.9 in.) Approx. 217 g/7.6 oz., including battery and me Approx. 196 g/6.9 oz., excluding battery, accesse • Temperature: 0 °C - +40 °C/+32 °F - +104									

NP-50A rechargeable bat	ttery
Nominal voltage	DC 3.7 V
Nominal capacity	1000 mAh
<b>Operating temperature</b>	0 °C - +40 °C/+32 °F - +104 °F
<b>Dimensions</b> ( $W \times H \times D$ )	$35.4 \text{ mm} \times 40.0 \text{ mm} \times 6.6 \text{ mm}/1.3 \text{ in.} \times 1.5 \text{ in.} \times 0.2 \text{ in.}$
Weight	Approx. 20 g/0.7 oz.
BC-45W battery charger	
Rated input	100 V-240 V AC, 50/60 Hz
Input capacity	• 100 V: 8.0 VA • 240 V: 12 VA
Rated output	4.2 V DC, 550 mA
Supported batteries	NP-50A rechargeable batteries
Charging time	Approx. 150 minutes (+20 °C/+68 °F)
<b>Dimensions</b> ( $W \times H \times D$ )	91 mm $\times$ 62 mm $\times$ 23 mm/3.5 in. $\times$ 2.4 in. $\times$ 0.9 in., excluding projections
Weight	Approx. 67 g/2.3 oz., excluding battery
Operating temperature	0 °C - +40 °C/+32 °F - +104 °F

Weight and dimensions vary with the country or region of sale.

## Notices

- Specifications subject to change without notice; for the latest information, visit *http://www.fujifilm.com/products/digital\_cameras/index.html*. FUJIFILM shall not be held liable for damages resulting from errors in this manual.
- Although the LCD monitor is manufactured using advanced high-precision technology, small bright points and anomalous colors may appear, particularly in the vicinity of text. This is normal for this type of LCD monitor and does not indicate a malfunction; images recorded with the camera are unaffected.
- Digital cameras may malfunction when exposed to strong radio interference (e.g., electric fields, static electricity, or line noise).
- Due to the type of lens used, some distortion may occur at the periphery of images. This is normal.

# FUJIFILM

# FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN http://www.fujifilm.com/products/digital\_cameras/index.html

# **Restrictions on Camera Settings**

## The options available in each shooting mode are listed below.

																	S	hoot	ting	Mod	le														
			İ	E)	R				-	٩dv							<u> </u>		-						S	Р									
İ.	Opt	tion	EXR	Ð	ଚ	ଡ	Ó		1		Ð	ŝ	м	A	s	P	Q4	0	9	6	Θ	8		*	C	<u>¢</u>	*	×	-8	٨ĩ	<b>م</b> له	Y	*	TEXT	, <b>**</b>
		\$ AUTO	~	~	~		~				~					~			~	~	~	~		~					~	~	~	<b>~</b> <sup>1</sup>			
	👁 OFF	4	~	~	~		~				~		~	~	~	~	<b>~</b> 1		~	~	~	~		~				~	~	~	~			~	
		S <b>\$</b>		~	~						~			~		~			~	~					~	~									
4		<b>O</b> AUTO	~	~	~		~				~					~			~	~									~	~		<b>1</b>			
	@ 0N	©\$	~	~	~		~				~		~	~	~	~	<b>~</b> 1		~	~								~	~	~					
		0 3.0		~	~						~			~		~			~	~					~	~									
		3	~	~	~	<b>~</b> 1	~	<b>1</b>	<b>1</b>	<b>~</b> 1	~	<b>1</b>	~	~	~	~		<b>1</b>	~	~	~	<u> </u>	<b>/</b> 1	~	~	~	<b>1</b>	~	r	~	~	_	· ·	~	
		්)(්	~	~	~	~	~		~	~	~	V	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	
	Ś	්ෂ	~	~	~	~	~		~	~			~	~	~	~	~	~	~	~					~	~		~	~	~		~			
		ಲ್ಲಿ																			~	~													
	۲	۲		~	~	~	~	~	~	~	~	r	~	~	~	~	~	~			~	~									~		<b>~</b> 1	<b>1</b>	
		OFF		~	~	~	~	~	~	~	~	~	~	~	~	~	~	~			~	~									~				
L	E	2		~	~	~		~	~	~	1	~		1	~	~	~	~	~	~	~	~		~	~	~		~	~	~	r	~			✓5
		AUTO	<b>1</b>					<b>1</b>	<b>~</b> 1	<b>/</b> 1							<b>/</b> 1	<b>1</b>	<b>√</b> ¹	<b>/</b> 1	<b>1</b>	<b>1</b>	<b>√</b> ¹	<b>~</b> 1	<b>~</b> 1	<b>1</b>	<b>~</b> 1	<b>/</b> 1	<b>/</b> 1	<b>/</b> 1	<b>1</b>	✓ <sup>1</sup>	<b>1</b>	<b>1</b>	
		AUTO (3200)			~	~	~				~	~		~	~	~																			
		AUTO (1600)			~	~	~				~	~		~	~	~																			
		AUTO (800)		~	~	~	~				4	~		~	~	~																			
		AUTO (400)		~	~	~	~			_	~	~		~	~	~													_						
	_	12800 <sup>2</sup> 6400 <sup>3</sup>								_	~		~	~		~													_						
	ISO						<u> </u>				~		2	~		~		<u> </u>			_	<u> </u>			_	<u> </u>				_					
		3200 1600			2 2				-		~		~	~		2 2					<u> </u>				_										_
		800		~	~					_	~		2	~		~													_						
		400		~	~						~		~	~		~													_						
		200		~	~					-	v		V	~		V													-						
		100	H	2	~		H			-	~		2	~		~													-	-					
		AUTO	~	Ľ	ľ					_	-		Ľ	Ľ		-													_	-					
	_  -		Ľ	~			~				V	V	V	~	V	V	~	~	V	v	~	V	V	V	V	V	V	~	r	v	v	~	~	~	
	ŧ	Ø	V	~	~	~	~		~	r	v	v	~	~	~	~	v	~	~	v	~	v	~	~	~	~	~	~	v	v	~	~	<u> </u>	v	
		S	v	v	v	v		<b>V</b> 4		v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	v	~	-	-	
F			v	V	v	v	v	~	~	v	v	v	1	v	v	v	v	V	~	v	v	v	V	v	v	v	v	V	v	v	v	~	~	~	
		-	<u> </u>	L	1°.	1.5	1.5	L	1.5	-			Ľ.	1.5	1.		1.5	1.			1.5	1.	· ·			1.		-	-			1 ·	- I	ل ف	

																S	hoot	ing	Mod	e														
			E)					-	٩dv															S	Ρ									
Opt			θ	ଚ				5				м	A	S	P		0		¢	Θ	æ		×	Ċ	۶¢	*	¥			4	Y		TEXT	<b>3</b>
		<b>~</b> 1			~	<b>1</b>	<b>~</b> 1	$\checkmark^1$	<b>~</b> 1		<b>1</b>		~		~	✓1	$\checkmark^1$	<b>1</b>	~	✓1	<b>~</b> <sup>1</sup>	<b>~</b> 1	<b>1</b>	✓1	<b>1</b>	<b>~</b> 1	<b>1</b>	<b>~</b> <sup>1</sup>	<b>1</b>	<b>~</b> 1	<b>1</b>	<b>~</b> 1	<b>1</b>	
	R100		~	<b>~</b> 1	~					~		~	~	~	~																			
DRea	R200				~							~	~		~																			
2000	R400				~							~	~		~																			
	1000 1000 1007 1007 1007 1007 1007 1007				~																													
	R 1600				~																													
	STD	2	2	~	~	~	~	٢	~	2	~	~	~	2	~	~	2	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	2	✓ <sup>5</sup>
	Ø <b>-</b>		~	~	~	~	~	~	~	~	~	~	~	~	~	r	~																	
	ġ,		~	~	~	~	~	~	r	V	~	~	~	~	~	~	~																	
	Đ-	~	~	~	~	~	~	<	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	✓5
	SERA	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	<b>√</b> <sup>5</sup>
0	В		~	~	~							~	~	~	~																			✓ <sup>5</sup>
	1	~	~	~	~	~						~	~	~	~		~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	
	đ		~	~	~							~	~	2	~																			
			~	~	~								~	~	~																			
9	DR				~								~		~																			
	ľ0j	~	~	~	~	~						~	~	~	~		~	~	~	~	~	~	~	~	~		~	~	~	~	~	~	~	
	ġ	~	~	~	~	~							~	~	~		~	~	~	~	~	~	~	~	~		~	~	~	~	~	~	~	
	OFF	~	~	~	~	~	<b>1</b>	5	<b>1</b>	<b>1</b>	<b>1</b>	~	~	~	~		~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	2	
6	- 1	~																																
Ø	OFF		~	~	~	~	<b>~</b> 1	~	~		<b>~</b> 1		~	~	~	~	~	~				<b>~</b> 1	<b>1</b>	~	~	<b>~</b> 1	~	~		<b>~</b> 1		<b>~</b> 1	<b>1</b>	<b>√</b> <sup>5</sup>
	ON	<b>1</b>	~	~	~	~		~	~	~		~	~	~	~	~	~	~	✓ 1		<b>1</b>			~	~		~	~	~		~			<b>√</b> <sup>5</sup>
	Ø	<b>~</b> 1	~	~	~	<b>~</b> 1	<b>~</b> <sup>1</sup>	$\checkmark^1$	<b>~</b> 1	~	<b>~</b> 1	~	~	~	~	<b>~</b> 1	$\mathbf{V}^1$	1	<b>~</b> 1	<b>~</b> 1	<b>1</b>	<b>~</b> 1	<b>1</b>	<b>~</b> 1	<b>1</b>	<b>~</b> 1	<b>1</b>	<b>~</b> <sup>1</sup>	<b>1</b>	<b>~</b> 1	<b>1</b>	<b>~</b> 1	<b>1</b>	$\checkmark^1$
Ø	•		~	~	~					~		~	~	~	~																			
	[]		V	~	~					V		~	~	V	~																			
	E		~	~	~	~	<b>1</b>	<b>1</b>	<b>1</b>	-	<b>~</b> 1		~	V	-	<b>~</b> 1	<b>1</b>	<b>1</b>	<b>/</b> <sup>1</sup>	<b>~</b> 1	<b>1</b>	<b>1</b>	<b>1</b>	<b>1</b>	<b>1</b>	1	<b>1</b>	<b>1</b>	<b>1</b>	<b>1</b>	<b>1</b>	<b>1</b>	<b>1</b>	
	+		~	~	~					~		~	~	~	~																			
68		<b>1</b>	~	~	~					V		~	~	V	~																			
	Ε,		~	~	~	2				~		~	~	~	~																			
0	91	~	~	~	~	~		~	~	V		~	~	V	~	~	~	~	~					~	~		~	~	~		~			
	ŧ																																	~
																																		~

#### Restrictions on Camera Settings

																S	hoot	ing	Mod	le														
			E)	R				1	٩dv	_														S	Р									
Op	tion		3	3	9	Ô	I	1		C	읆	м	Α	S	P	@4	0	9	¢	Θ	æ		×	Ċ	¢¢	*	ž	-8	\$¥	4	Y	*	TEXT	•
	1920																																	~
	1280																																	~
E	640																																	~
	<b>IIS</b> 640×480																																	~
	15 320×240																																	~
	320×112																																	~
6	ė.		~	~	~							~	~	~	~																			
f	•	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~
	(∰)₁●»	<b>v</b> <sup>1</sup>	~	~	~	~		~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~		~	~	~	~	~	~	~	~	~
	( <b>@</b> )1		~	~	~	~		~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~		~	~	~	~	~	~	~	~	~
0.00	(∰) <sub>2</sub> ●»		~	~	~	~		~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~		~	~	~	~	~	~	~	~	~
	( <b>0</b> )2		~	~	~	2	<b>1</b>	~	~	~	~	~	~	~	~	~	2	٢	~	~	~	~	~	~		~	~	~	~	~	~	~	~	~
	OFF		~	~	~	~		~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~		<b>~</b> 1	~	~	~	~	~	~	~	~	~
¢.	ON	~	~	~	~	~						~	~	~	~		2	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	
294 N	OFF	~	~	~	~	~			✓¹	✓ 1	<b>~</b> 1		~		~	✓ 1	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	✓1
۲	ON	~	~	~	~	~	~	~	r	~	~	~	~	~	~	~	~	r	~			~	~	~	~	~	~	~	~	~	~	~	~	~
	OFF	1	~	~	~	~	~	~	~	V	~	~	~	~	~	~	~	r	~	<b>1</b>	<b>1</b>	~	~	~	V	~	~	~	~	~	~	~	~	~
AF	ON	~	~	~	~	~		~	~	~	~	· ·	~		~	~	~	~	~	~	~			~	~			~	~	V			~	✓ <sup>5</sup>
145	OFF	~	~	~	~	~	<b>~</b> 1	~	~	~	~	~	~	~	~	~	2	~	~	~	~	~	<b>1</b>	~	~	<b>~</b> 1	<b>~</b> 1	~	~	~	~	<b>1</b>	2	<b>√</b> <sup>5</sup>
<b>D</b> ]	DÎ		~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~	~		~	V	~	~	~	~	~	~	~	~	
	Ó		1	~	V	V	1	V	~	V	1	~	~	1	1	~	1	~	~	1	~	~		~	~	1	V	~	~	~	~	~	~	

1 Automatically optimized for selected shooting mode.

2 Image sizes over S are set to S.

3 Image sizes over M are set to M.

4 Aspect ratio fixed at 4:3.

5 Fixed at settings before recording a movie.