

# G6 AVIATOR

FM/AM/Aircraft Band/Shortwave Radio with SSB

## OWNER'S MANUAL



# GRUNDIG



Grundig Radio Line By

# etón

re\_inventing radio  
www.etoncorp.com

---

## DO YOU NEED HELP?

If you need help, please contact us, Monday-Friday, 8:30 a.m.-4:00 p.m., North American Pacific Time. 1-800-872-2228 from the U.S; 1-800-637-1648 from Canada; 650-903-3866, worldwide; FAX: 650-903-3867; web site, [www.etoncorp.com](http://www.etoncorp.com); Etón Corporation, 1015 Corporation Way, Palo Alto, CA 94303, USA

### WARNING

- Do not expose this appliance to rain or moisture.
- Do not submerge or expose for extended period to water.
- Protect from high humidity and rain.
- Only operate within specified temperature range (0 °C to 40 °C).
- Unplug immediately if liquid has been spilled or objects have fallen into the apparatus.
- Clean only with a dry cloth. Do not use detergents or chemical solvents as this might damage the finish.
- Unplug and disconnect external antennas (not included) during lightning storms.
- Do not remove cover [or back].
- Refer servicing to qualified service personnel.

### ENVIRONMENT

---



#### Disposal

According to the European Directive 2002/96/EC all electrical and electronic products must be collected separately by a local collection system.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

## WHAT'S INCLUDED?

---

- Owner's manual
- Warranty card
- Carrying pouch
- Carrying strap (attached)
- Earphones
- AC adapter/charger.

## POWER SOURCES

---

Power the G6 by installing 2 AA alkaline (not included), lithium or Ni-MH batteries or by plugging in the AC adapter. A symbol appears in the upper right of the LCD, indicating battery or AC adapter power.


## PREVENTING BATTERY LEAKAGE

---

To minimize the possibility of battery acid leakage, only use high quality alkaline, lithium or rechargeable nickel-metal-hydride batteries. Never intermix old with new, or different brands or types of batteries. Damage caused by battery acid leakage is not covered by this product's warranty.

## TURNING THE G6 ON AND OFF WITHOUT/WITH THE SLEEP TIMER

---

Use a quick, short press of the POWER/SLEEP, , button to turn on the radio without the sleep timer. Use a long press (3 seconds) to turn it on with the sleep timer on.

## THE NUMERIC KEYPAD #1-8 DUAL-FUNCTION BUTTONS

---

Numeric keypad buttons #1-7 have dual functions, one function with the radio turned off and another with the radio turned on. These functions are described in the text.

## CHARGING NI-MH BATTERIES IN THE G6

---

With the optional AC adapter/charger connected, the G6 internally recharges 2 Ni-MH (nickel-metal-hydride) rechargeable batteries (not included). Note that the G6 can still play while the batteries are charging and the alarm functions will work.

To charge batteries:

1. With the G6 turned off, install 2 NI-MH batteries and connect the AC adapter/charger.
2. Press the battery charge button (numeric keypad #7) for about 3 seconds, or until CHG appears in the upper right of the display.
3. Use the tuning knob to select the charging time in hours (00-36) based on the mAh rating of your batteries: 11 hours for 1100 mAh rating; 23 hours for 2300 mAh rating; etc.
4. Press the PAGE/TIME button when finished. In the display, the battery symbol's segments continuously activate from left to right during charging. Battery charging terminates once the set charge time has been reached.

## SETTING UP AM AND FM OUTSIDE OF NORTH AMERICA

---

Your G6 has been set up at the factory for use in North America (U.S. or Canada), no changes to the initial factory settings are needed. If you're in another part of the world, follow the steps below to set it for your area.

## SETTING UP AM AND FM OUTSIDE OF NORTH AMERICA continued

---

In North America, the FM band begins at 87.5 MHz. In other parts of the world, it may begin at 87 MHz or 76 MHz.

1. With the G6 turned off press the #4 numeric keypad button for about 2 seconds. F87.5, F76 or F87 appears flashing in the display.
2. Press the #4 numeric keypad button sequentially to select the one that's correct for your area.
3. Immediately press the PAGE/TIME button.


In North America, AM stations are spaced by 10 KHz. In Europe and other areas, they are spaced by 9 KHz.

1. With the G6 turned off press the #5 numeric keypad button for about 2 seconds. 9 or 10 KHz appear flashing in the display.
2. Press the #5 numeric keypad button sequentially to select the one that's correct for your area.
3. Immediately press the PAGE/TIME button.

## USING THE SLEEP TIMER

---

The sleep timer enables the G6 to play for a specified number of minutes (00-99), then shut off.

1. To activate the sleep-timer turn the radio on with a 2 second press of the SLEEP button, ; 01-99 appears in the display.
2. Use the tuning knob to select the number of minutes, 01-99, you want it to play, or select ON with the tuning knob if you don't want to utilize the sleep timer.

## VOLUME CONTROL

---

With the G6 on or off, use the +/-VOL buttons to adjust to volume levels 0-31. The level number appears in the display.

## EARPHONE SOCKET AND USING EARPHONES (NOT INCLUDED)

---

Turn the volume down before wearing the earphones, then turn up the volume to your liking. Plug them into the earphone socket on the left side of the radio.

## SELECTING FM, AM, SHORTWAVE AND AIRCRAFT BAND

---

When listening to FM, shortwave or Aircraft Band, fully extend the telescopic antenna. It need not be extended when listening to AM stations (the AM ferrite-bar antenna is located inside the G6).

Turn on the G6. To go to the band of your choice press the FM BAND button, sequentially press the MW (AM)/LW/AIR button or sequentially press the METERBAND button to cycle through the SW meterbands.

## TUNING IN STATIONS

---

Turn on the G6. Stations are tuned with the AUTO ↑↓ Buttons, Tuning-Knob, Direct Frequency Entry and Auto-Search.



## MANUAL TUNING

---

Quick, short, sequential presses of the AUTO  $\uparrow\downarrow$  buttons enables tuning up or down frequency. Alternately, the TUNING knob can be used.

In Shortwave the tuning knob or manual tuning must be used to tune out of the broadcast bands.

## DIRECT FREQUENCY ENTRY

---

Turn on the G6. Use this method when the desired frequency of a radio station is known. AM, LW and SW frequencies are entered in kilohertz (KHz), e.g. 810 KHz, 162 KHz or 9475 KHz.; FM and Air Band frequencies are entered in megahertz (MHz), e.g. 102.9 MHz or 124.870 MHz, ignoring the decimal point.

1. Use the numeric keypad buttons to enter the frequency.
2. Within 3 seconds, press the AM button if it's an MW (AM), LW, SW or AIR frequency, or the FM button for FM frequencies.

## AUTO-SEARCH TUNING

---

With the G6 on, auto-search tuning starts by pressing either of the AUTO SEARCH buttons (AUTO  $\uparrow\downarrow$ ) for about 2 seconds. The G6 has 3 selectable auto-search modes: STOP, ATS or D-5. The factory programmed default mode is STOP. These are described below.

**STOP:** Auto-searching stops on the next encountered station.

**D-5:** Auto-searching stops for 5 seconds on each encountered station, then moves on.

**ATS:** (Auto Tuning Storage): Auto-searching automatically stores the strongest FM local stations into memories starting with page 99 and counting downward until all are stored, e.g. 98, 97, 96, etc. Tune to the FM band and perform auto-search.



## AUTO-SEARCH TUNING continued

---

After the ATS scan, press PAGE/TIME to enter the memo mode. Select page 99 or lower with the AUTO ↑ ↓ buttons, and the memory with the numeric keypad #1-7 buttons.

### To select an auto-search mode:

1. With the G6 turned off, hold down the numeric keypad #6 button for about 2 seconds, then release. Note that the last chosen mode flashes in the screen.
2. While the mode flashes, perform quick, short presses of the #6 button to select alternate modes.
3. Press the PAGE/TIME button when finished.

**NOTE:** auto tuning cannot be performed in air band.

## TUNING KNOB AND JOG BUTTON USE

---

Turn on the G5. Stations are tuned with the ↑ ↓ Buttons, Tuning-Knob, Direct Frequency Entry and Auto-Search. Quick, s hort, sequential presses of the ↑ ↓ buttons enables tuning up or down frequency. Alternately, the TUNING knob can be used. Continuous tuning in shortwave can only be done with the tuning knob and via direct frequency entry.

## SHORTWAVE LISTENING

---

To learn about shortwave we recommend the two publications below, published yearly and available from major booksellers. Additionally, the Internet is a great resource for learning about shortwave. Go to your favorite search engine and type in 'shortwave listening'.

## **SHORTWAVE LISTENING continued**

---

### **PASSPORT TO WORLD BAND RADIO**

Published by International Broadcasting Services (IBS); IBS North America, Box 300, Penn's Park PA 18943. Phone: (215) 598-9018. [www.passband.com](http://www.passband.com).

### **WORLD RADIO TV HANDBOOK**

Published in the USA by Watson-Guption Publications, 770 Broadway, 7th Floor, New York, NY 10003-9595. [www.watsonguption.com](http://www.watsonguption.com).

## **SHORTWAVE BROADCAST RECEPTION**

---

Shortwave enables listening to broadcasts over vast distances including other countries and continents. The following information will help you get the best results. Select appropriate SW meterbands with the METERBAND button.

- During the day, frequencies above 11000 KHz are usually best.
- At night, frequencies below 13000 KHz are usually best.
- Around sunset and sunrise, the entire shortwave range may be good.
- Getting very close to a window and holding the radio improves shortwave reception.

## **TUNING SSB (SINGLE SIDEBAND)**

---

SSB enables listening to shortwave two-way communications using the single-sideband mode, such as amateur radio, Morse code, weather-fax transmissions and other signals often referred to as 'utility' signals. The Internet and your local library are great resources to learn more.

## TUNING SSB (SINGLE SIDEBAND) continued

---

Turn on the G6. Tune to the shortwave frequency of your choice, using the methods described. To use SSB, turn on the SSB circuit by pressing the SSB button. Note that SSB appears in the display. Use the tuning knob to FAST-tune the SSB signal, then SLOW-tune with the tuning knob. Press the JOG button to change from 'Fast' to 'Slow' tuning. The SSB circuit allows tuning of both upper and lower sideband signals.

## STORING STATIONS INTO MEMORY

---

The G6 has 700 memories (also called presets), arranged in 100 pages (page 00-99), with each page holding 7 memories. Buttons #1-7 represent memory locations. All memories are randomly programmable, meaning that any kind of frequency can be stored into any memory. SSB selection is not stored.

Note that when storing into an already occupied memory position, its contents will be replaced with your new entry.

1. Turn on the G6.
2. Tune to the desired station.
3. Press the PAGE/TIME button to place the G6 into MEMO mode.
4. To select the desired memory page (00-99) use the AUTO **↑****↓** buttons.
5. Store the station by pressing one of the #1-7 buttons for about 2 seconds or until the square around the memory location in the LCD blinks.
6. To store another station, get out of memo mode by pressing PAGE/TIME and tune to the station; then repeat the steps above.
7. When finished storing stations, press the PAGE/TIME button to exit MEMO mode.

## ACCESSING STORED MEMORIES

---

1. Turn on the G6 and enter MEMO mode by pressing the PAGE/TIME button, causing MEMO to appear on the left side of the display.
2. Select the desired memory page with the AUTO  $\uparrow \downarrow$  buttons.
3. Select the desired memory with the numeric keypad buttons #1-7. The square around the selected memory blinks.

## DELETING ONE MEMORY

---

The only way to delete one memory location is to delete the entire memory page or simply store another frequency over it.

## DELETING THE CONTENTS OF A MEMORY PAGE

---

1. To delete a memory page turn the G6 off.
2. Press SSB until MEMO and PAGE appear in the display.
3. Use AUTO  $\uparrow \downarrow$  to select the page whose contents you wish to erase.
4. Press EDIT to erase the contents. Note that the squares disappear around the memory locations.

## COPY A MEMORY PAGE

---

This feature enables copying memory contents from one page to another.

1. Turn the G6 off.
2. Press SSB until MEMO and PAGE appear in the display.
3. Use AUTO  $\uparrow \downarrow$  to select the page whose contents you wish to copy.
4. Press/release SSB. COPY appears in the display.
5. Use AUTO  $\uparrow \downarrow$  to select the page to copy to.
6. Press/release EDIT to paste it.

## DELETING THE CONTENTS OF ALL MEMORY PAGES

---

1. Turn the G6 off.
2. Do a long press on the numeric keypad numbers 0, 9 and 0. RST appears in the display.
3. Press the RESET button with a paper clip.

## LABELING MEMORY PAGES

---

Memory pages can be uniquely labeled with four, intermixed digits or letters.

1. With the G6 turned on, select memory mode with the PAGE/TIME button. MEMO appears in the display.
2. Use the AUTO  $\uparrow\downarrow$  buttons to select the desired memory page.
3. Press the EDIT button until '\_' appears, blinking in the display (about 3 seconds).
4. Use the tuning knob to select the desired number, letter, quotation mark or symbol.
5. Press the PAGE/TIME button to select the next '\_'.
6. Repeat until 4 letters/numbers are selected.
7. Press PAGE/TIME when finished.

## SETTING THE TIME ZONE

---

**(Use this same procedure to change your time zone when traveling).**

1. With the G6 turned off, press the numeric keypad #8 button until you see a time zone abbreviation in the display and 'Tzone' appears on the left side.
2. Do quick, sequential presses on the 8 button, or use the tuning knob to tune to different time zones (see the chart below).
3. Press the PAGE/TIME button once you've selected your time zone or wait about 8 seconds and it will enter itself.

## SETTING THE TIME ZONE continued

---

### TIME ZONE ABBREVIATION LIST:

ANC-Anchorage	BEG-Beijing
BKK-Bangkok	CAI-Cairo
CCS-Caracas	CHI-Chicago
DAC-Dhaka	DEL- Delhi
DEN-Denver	DXB-Dubai
GMT-GMT	HKG-Hong Kong
HNL-Honolulu	JED-Jeddah
KHI-Kashi	LAX-Los Angeles
LON-London	NOU-Noumea
NYC-New York City	PAR-Paris
RIO-De Janeiro	SYD-Sydney
TYO-Tokyo	WLG-Wellington

## SETTING THE CLOCK AND WEEKDAY

---

The G6's clock is in 24-hour format. Turn off the G6.

1. With the G6 off, press the PAGE/TIME button for about 2 seconds or until the hour digits start flashing.
2. Within 3 seconds, press one of the 1-7 buttons to designate the day of the week you wish to use as the starting day, note that the number that you've selected appears highlighted in the display.
3. Use the tuning knob to set the correct hour; then press PAGE/TIME button.
4. The minute digits start flashing. Within 3 seconds, use the tuning knob to set the correct minutes, then press PAGE/TIME button.  
The clock is set

## SETTING ALARMS 1 THROUGH 3

---

The G6 has 3, independently programmable alarm timers (numeric keypad buttons #1-3) to turn it on at a specified time. Additionally, each timer can be programmed for a specific weekday, volume, playtime and memory location.

To set an alarm:

1. With the G6 turned off, press one of the alarm buttons for about 2 seconds (numeric keypad buttons #1-3), causing the hour to flash.
2. Press one, all or any of the #1-7 buttons to highlight the days of the week you want the alarm to turn on.
3. Use the tuning knob to set the hour; then press the PAGE/TIME button. The minutes flash.
4. Use the tuning knob to set the minutes; then press the PAGE/TIME button.
5. Use the tuning knob to set the wake-up volume level; it will show in the display.
6. Press the PAGE/TIME button.
7. Use the tuning knob to set the wake-up alarm's playing minutes, 01-99 minutes.
8. Press the PAGE/TIME button.
9. Use the tuning knob to set the page number, 00-99.
10. Press one of the #1-7 buttons to select the memory location on the selected page (the square flashes).
11. Press the PAGE/TIME button to finish the set-up.



## ACTIVATING AND DEACTIVATING THE ALARMS

---

For an alarm to turn on the radio, it must be activated. To activate the alarm to be used, turn off the G6 and press the appropriate alarm button, #1-3. Note the alarm symbol above the button. This causes the alarm activation symbol to appear in the display, activating the selected alarm. To deactivate the alarm, press the appropriate #1-3 button, causing the alarm activation symbol to disappear from the display.

## USING THE LIGHT

---

The light illuminates the display.

**Normal Mode:** Pressing any button activates the light. The light automatically turns off after 5 seconds.

**Manual Light-On/Off Mode:** If the light is off, pressing the LIGHT button activates the light for 5 seconds. Pressing it again within 5 seconds turns the light off.

**Always-On Mode:** When powered by its AC adapter and the light button is pressed, the light remains on when the G6 is turned on.

## EXTERNAL ANTENNA SOCKET

---

The external antenna socket is used to connect the G6 to advanced performance shortwave antennas using a 50 or 75-Ohm coaxial cable feed-line or to a long wire antenna. When using a 50 to 75 Ohm feedline, it may be necessary to attenuate the signal using an antenna tuner or other method.

## STEREO/MONO BUTTON

---

When listening to FM stations this switch selects stereo or monaural. Select stereo when using earphones. When not using earphones, it's OK to leave it on stereo. In either case, if the FM signal is poor, selecting mono may improve it. When this is turned on 'ST' appears in the display.

## MEGABASS-MUSIC/NEWS SWITCH

---

**AM/FM** – The MEGABASS-MUSIC position creates a 'brighter' music sound. The NEWS position creates a less 'bright' sound.

**Shortwave** – The MEGABASS-MUSIC position creates the best audio fidelity. The NEWS position helps to minimize interference from other stations.

## REAR FOLDING STAND

---

Pull the folding stand from the rear of the G6, allowing viewing at a comfortable angle.

## RESET BUTTON

---

The reset button is located inside the small hole labeled RESET. If the G6 operates erratically, poke a paper clip into the reset hole to reset its microprocessor. This does not erase memory, but does reset the clock to 00:00. To reset everything, including memory, turn the G6 off, do a long press on 0 9 0 and then press a paperclip into the RESET hole.

## USING THE HOLD FEATURE

---

With the G6 turned off, one press of the HOLD button (under the ON/OFF button) prevents unwanted turn-on. When it is turned on, one press of the HOLD button keeps it turned on, but prevents unwanted frequency changes. Deactivate HOLD with a long (about 2 second) press of the HOLD button.

## SIGNAL STRENGTH INDICATOR

---

The signal strength indicator is in the lower right side of the display and shows relative strength of signals. When signal strengths are somewhat weak, it is normal for the indicator's level to fluctuate.

## SIGNAL STRENGTH INDICATOR

---

The signal strength indicator is in the lower right side of the display and shows relative strength of signals. When signal strengths are somewhat weak, it is normal for the indicator's level to fluctuate.

## WARRANTY REGISTRATION

---

To ensure full warranty coverage or product updates, registration of your product should be completed as soon as possible after purchase or receipt. You may use one of the following options to register your product:

1. By visiting our website at <http://www.etoncorp.com>.
2. Mail in enclosed warranty card.
3. Mail your registration card or information to following address; include your name, full mailing address, phone number, email address, model purchased, date purchased, retail vendor name:

Etón Corporation  
1015 Corporation Way  
Palo Alto, CA 94303 USA

## LIMITED WARRANTY

---

Retain the warranty information from your warranty card with your proof of purchase or the Limited Warranty information can also be viewed at [www.etoncorp.com](http://www.etoncorp.com).

## SERVICE FOR YOUR PRODUCT

---

To obtain service for your product, we recommend first contacting an Etón service representative at 1-800-872-2228 US, 1-800-637-1648 Canada, (650) 903-3866 US, [customersvc@etoncorp.com](mailto:customersvc@etoncorp.com) or your respective country distributor in Europe (see enclosed list) for problem determination and trouble-shooting. If further service is required, the technical staff will instruct how to proceed based on whether the radio is still under warranty or needs non-warranty service.

**WARRANTY** – If your product is still in warranty and the Etón service representative determines warranty service is needed, a return authorization will be issued and instructions will be given. DO NOT ship your radio back without obtaining the return authorization.

**NON-WARRANTY** – If your product is no longer under warranty and requires service, the Etón service representative will refer you to the nearest repair facility that will best handle the repair.

For service outside North America, please refer to the distributor information included at time of purchase/receipt.

## FCC NOTE

---

The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.







Grundig Radio Line By

**eTón**  
re\_inventing radio  
[www.etoncorp.com](http://www.etoncorp.com)

### **Etón Corporation**

Corporate Headquarters  
1015 Corporation Way  
Palo Alto, California 94303 USA  
tel +1 650-903-3866  
tel +1 800-872-2228  
fax +1 650-903-3867

### **Etón Europe/Lextronix Germany**

Rosenstrasse 2  
D-10178 Berlin, Germany  
tel +49 [0]30 243102142

### **Etón Canada**

1 Yonge Street, Suite 1801  
Toronto, Ontario M5E 1W7 Canada  
tel +1 416-214-6885

# GRUNDIG

## Standard of Quality

Limited Warranty and Product Registration

### USA

Etón Corporation  
Corporate Headquarters  
1015 Corporation Way  
Palo Alto, CA 94303

[www.etoncorp.com](http://www.etoncorp.com)

### Germany

Etón Europe / Lextronix Germany  
Berlin Office  
Rosenstrasse 2  
D-10178 Berlin

[www.lextronixusa.de](http://www.lextronixusa.de)

### Canada

Etón Electronics Canada LTD  
Toronto Office  
1 Yonge Street, Suite 1801  
Toronto, Ontario M5E 1W7

[www.etoncorp.com](http://www.etoncorp.com)

Grundig Radio Line By

**etón**  
re\_inventing radio  
[www.etoncorp.com](http://www.etoncorp.com)  
1-800-793-6542

**LIMITED WARRANTY**

Etón Corporation (Etón) offers a limited warranty to the original customer against manufacturing defects in material and workmanship on this product. This warranty is valid only for the original purchaser and is not transferable.

**TWO (2) YEARS PARTS AND LABOR - Europe**  
**ONE (1) YEAR PARTS AND LABOR - North America**

This limited warranty begins on the original date of purchase, and is valid only on products purchased through an authorized Etón retailer. Warranty repairs must be performed by Etón or an authorized service center. To receive warranty service, the original dated bill of sale, or a copy, must be presented upon request as proof of purchase. Installation, removal or reinstallation of the product is not included under this warranty. Shipping to Etón or the authorized service center is the responsibility of the purchaser. For products purchased in Europe, please return to your dealer or the distributor of your country, which is listed on a sheet included in the packaging.

Etón will repair or replace this product, at our option and at no charge, with new or reconditioned parts if this product is found to be defective during the limited warranty period. To be eligible for warranty coverage, the product must be returned with shipping charges prepaid no later than 15 days after the expiration of the warranty period to Etón or the designated service center. Prior to returning any product

for warranty service, the purchaser must contact Etón or the designated service center for troubleshooting and service procedure instructions. Damaged parts or products become the property of Etón. Parts and products replaced by Etón assume the remaining original warranty, or ninety (90) days, whichever is longer.

This limited warranty covers manufacturing defects in material and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to: damage that occurs due to applications and uses for which the product was not intended; failures or problems that are caused by products or equipment not supplied by Etón; accidents, misuse, abuse, neglect, misapplication, fire, water, lightning, or other acts of nature; incorrect line voltage, fluctuations, or surges; damage caused by improper or faulty installation; damage caused by acid leakage from improperly installed or defective batteries; product alteration or modification; or use of unauthorized parts, supplies, accessories, or equipment that damage this product or result in service problems.

**SERVICE INFORMATION**

To obtain service for your Etón product, first contact an Etón service representative at 1-800-872-2228 US, 1-800-637-1648 Canada or your respective country distributor in Europe (see enclosed list) for troubleshooting. Many common questions and problems can be resolved over the phone.

**WARRANTY REGISTRATION**

To ensure full warranty coverage or product updates, registration of your product should be completed as soon as possible after purchase or receipt. You may use one of the following options to register your product:

- 1. By visiting our website at <http://www.etoncorp.com>.
- 2. Mail in enclosed warranty card.
- 3. Mail your registration card or information to following address; include your name, full mailing address, phone number, email address, model purchased, date purchased, retail vendor name:

Etón Corporation	Etón Europe
1015 Corporation Way	Rosenstrasse 2
Palo Alto, CA 94303 USA	D-10178 Berlin, Germany

**LIMITED WARRANTY**

Retain the warranty information from your warranty card with your proof of purchase or the Limited Warranty information can also be viewed at [www.etoncorp.com](http://www.etoncorp.com).

**SERVICE FOR YOUR PRODUCT**

To obtain service for your product, we recommend first contacting an Etón service representative at: 1-800-872-2228 US, 1-800-637-1648 Canada, 1-800-903-3866 or [customersvc@etoncorp.com](mailto:customersvc@etoncorp.com) for problem determination and trouble-shooting. If further service is required, the technical staff will instruct how to proceed based on whether the radio is still under warranty or needs non-warranty service.  
WARRANTY – If your product is still in warranty and the Etón service representative determines warranty

service is needed, a return authorization will be issued and instructions will be given. DO NOT ship your radio back without obtaining the return authorization.  
NON-WARRANTY – If your product is no longer under warranty and requires service, the Etón service representative will refer you to the nearest repair facility that will best handle the repair. For service outside North America, please refer to the distributor information included at time of purchase/receipt.

\*Denotes Required Field

## Etón Product Registration

Go to: [www.etoncorp.com/productregistration](http://www.etoncorp.com/productregistration), or mail this form today.

Cell Phone Model #:

Serial number\*:  
(located in the back of the unit)

Date of purchase\*:

Dealers name\*:

City\*:

Country/Territory\*:

Name\*:

Address\*:

City\*:

State/Province\*:

Postal Code/ZIP Code\*:

Country/Territory\*:

Telephone Number\*:

Email\*:

**1. Your annual income?**

- ☐ Under \$14,999
- ☐ \$15,000 to \$30,000
- ☐ \$30,001 to \$50,000
- ☐ \$50,001 to \$75,000
- ☐ \$75,001 to \$150,000
- ☐ Over \$150,001

**2. Your age?**

- ☐ Under 16
- ☐ 16–20
- ☐ 21–25
- ☐ 26–30
- ☐ 31–35
- ☐ 36–40
- ☐ 41–45
- ☐ 46–50
- ☐ 51–55
- ☐ 56–60
- ☐ 61 and over

**3. What are your listening interests? (Check all that apply)**

- ☐ Satellite Radio
- ☐ Local AM/FM
- ☐ Shortwave/International Broadcast

**4. Did you consider another unit before choosing this product?**

- ☐ Yes (Please Specify Model): \_\_\_\_\_
- ☐ No

**5. What is your occupation?** \_\_\_\_\_

**6. How did you hear about Etón?**

- ☐ Newspaper ad
- ☐ Radio ad
- ☐ Through a retailer
- ☐ Article
- ☐ Web Search
- ☐ Other \_\_\_\_\_

☐ **Yes!** I would like Etón to send me information on products including special offers, new product launches, and product updates/information:

- ☐ Email
- ☐ Mail

**etón**  
re.inventing radio  
[www.etoncorp.com](http://www.etoncorp.com)