

# home:pure



**CLOTHES & FABRIC STEAMER**

**Model GS7U**



## **CLOTHES & FABRIC STEAMER**

The home:pure clothes and fabric steamer helps care for your clothes and is extremely versatile in removing creases from fabrics in most locations, including curtains and upholstery. It makes dealing with large expanses of fabric such as tablecloths, sheets and bedding extremely easy.

This steamer has one setting which is suitable for all fabrics; it will not burn or scorch and provides a sheen-free finish. Safe to use on delicate fabrics like silk, chiffon and wool, the steamer is ideal for decorative detailing such as embroidery, buttons and beading.

### **Features:**

- 60 second fast heat up
- 1200w powerful steam generation
- Continuous steam distribution
- 1.5m steam hose
- Hanging pole
- Removable 2L water tank, provides 1 hour steam time
- Portable and lightweight
- 2.5m cord
- 2 year guarantee

**WARNING! HOT STEAM CAN SCALD. PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE.**

### **Attachments**

- Hanger attachment
- T-nozzle for general steaming

- Bristle brush to restore textured fabrics and remove lint
- 3ft extension wand to reach the top of curtains
- Concentrator nozzle for collars, seams and pleats
- Special pressing attachment for trousers, sleeves and collars

## **CLOTHES & FABRIC STEAMER ASSEMBLY**

### **STEP 1 - HANGING POLE**

- Fit the three parts of the hanging pole together.
- Attach the hanging pole to the steamer and turn the key lock to secure in place.
- Place the T-nozzle holder with hanger attachment on to the top of the hanging pole.

### **STEP 2 - ATTACHING THE HOSE**

- Attach the hose to the steamer, ensuring that the arrows line up.
- Twist clockwise to lock into place.

**Note:** Hose may be stiff at first, but will relax after initial use.

### **STEP 3 - FITTING ATTACHMENTS**

- Choose an attachment. (Use the T-nozzle for general steaming)
- Attach the T-nozzle/chosen attachment to the hose, ensuring that the arrows line up.
- Twist clockwise to lock into place.
- Rest the T-nozzle on the T-nozzle holder with hanger attachment.
- When changing attachments, ensure the steamer is switched off and unplugged from the mains, to avoid contact with hot steam.

### **STEP 4 - FILLING THE WATER TANK**

- Only use clean cold water in the water tank.
- We recommend the use of distilled water in areas of hard water.
- Remove the water tank from the steamer by the handle.
- Unscrew the valve cap on the base of the water tank.
- Fill with clean, cold water to the desired level. Do not overfill.
- Replace the valve cap.
- Fit the water tank back on the steamer, ensuring that it is securely seated.

## **INSTRUCTIONS FOR USE**

- **IMPORTANT!** Before use, always test fabric for colour fastness in an inconspicuous spot.
- Ensure the Clothes & Fabric Steamer is switched OFF “0”.
- Check that the hose is secure, the hanging pole is assembled and T-nozzle/chosen attachment is correctly fitted.
- Plug into a suitable mains supply.
- Switch the steamer ON “1”. The switch lights red to indicate power is on.
- The steamer will be ready to use in around 60 seconds.
- Steam will be produced from the T-nozzle when ready to use.
- Always rest the T-nozzle on the T-nozzle holder with hanger attachment while in use.

**Note:** During use, the hose or steamer may gurgle or make a noise, or produce less steam. This is a result of condensation collecting inside the hose. Simply lift the T-nozzle/chosen attachment upward to gently stretch the hose and allow any condensation to run back into the steamer till the gurgling noise stops. A normal amount of steam production will resume.

**NEVER LET THE STEAMER NOZZLE AND HOSE REST ON THE FLOOR FOR ANY LENGTH OF TIME WHILE IN USE, CONDENSATION MAY CAUSE OVERFLOW FROM THE RESERVOIR.**

## **HOW TO STEAM CLOTHES**

- Always test fabric for colour fastness in an inconspicuous spot.
- Do not touch / press the T-nozzle directly against delicate fabrics.
- Open the hanger attachment, and place your garment on the hanger, or if steaming trousers, keep the hanger attachment closed and hang the trouser hanger to the side of the hanger attachment.
- Hold the T-nozzle, with the steam jets facing away from you.
- Begin at the bottom of the fabric to allow the steam to rise, removing creases faster.

## **CAUTION - AVOID SCALDING YOUR HANDS WITH HOT STEAM**

- Slowly move the T-nozzle over the garment.
- The fibres of the fabric will relax, eliminating creases.

## **HOW TO STEAM SOFT FURNISHINGS AND FABRICS**

- Hang towels, sheets, duvet covers and tablecloths over a towel rail or airer whilst steaming - so that you can steam vertically.
- Steam curtains whilst they are in place (no need to take down to steam), starting at the bottom of the curtain and slowly moving to the top.
- You may need to change to the extension wand to reach the top of the curtains.
- Heavier fabrics may require repeated steaming.

**Note:** Always steam in an upright/vertical position.

## **AFTER USE - CLEANING AND STORING**

- Switch the Clothes & Fabric Steamer OFF “0” and unplug from the mains.
- Wait for the steamer and hose to cool completely for at least 30 minutes.
- Remove the hose. Turn counter clockwise and line up with arrows to release.
- Remove the water tank, and empty any unused water into a sink.
- Remove any water left in the reservoir of the steamer by using a tissue, or tipping the steamer over a sink, to pour any excess water away.
- Allow to dry thoroughly.
- Wrap the power cord around the cord wrap.

## **MAINTENANCE**

To maintain optimum performance it is recommended that you rinse out the water tank on a weekly basis while in use. Always ensure that the steamer is switched OFF “0” and unplugged before cleaning. Wait for it to cool down before cleaning. Wipe with a damp cloth and dry thoroughly before using or storing away.

## **REMOVING LIMESCALE**

If the Clothes & Fabric Steamer begins to produce steam more slowly than usual or stops producing steam you may need to remove limescale from your steamer. Limescale can build-up over time on the metal parts of the steamer. For best performance from your steamer, you should remove limescale from time to time. The frequency depends upon the hardness of your tap water and how often you use the steamer.

- To remove limescale, prepare a solution of 1/3 white vinegar and 2/3 cold water and add to the water tank.
- Replace the water tank.
- Plug into the mains, and switch ON “1”.
- Keep the steamer on and producing steam until half the amount of limescale removing solution has steamed (1 litre).
- Repeat the above procedure as many times as necessary until a normal steam rate returns. With each repeated cycle, use a fresh solution of vinegar and water.
- Remove the water tank and rinse out.
- Run one cycle of fresh, cold water through the steamer at the completion of limescale removal, before using the steamer to steam garments.
- Turn the steamer OFF “0” and unplug from the mains.

## **FREQUENTLY ASKED QUESTIONS**

### **Q1 - No steam produced.**

- The water level could be low. Switch the steamer OFF “0” and refill.

### **Q2 - Water is dripping from the T nozzle.**

- There is condensation in the hose. Hold the hose vertically and allow any water to drain back into the steamer.

### **Q3 - The steamer gurgles.**

- There is condensation in the hose. Hold the hose vertically and allow any water to drain back into the steamer

### **Q4 - Poor steam performance.**

- There could be limescale in the water tank. Follow the instructions on how to remove limescale. For further advice on using the Clothes & Fabric Steamer, contact the Conair Customer Care Line on

0870 5 133191 (09:00 to 17:00 Monday to Friday), or e-mail your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com)

## SAFETY CAUTIONS

**WARNING** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

- This appliance should only be used as described within this instruction booklet. Please retain for reference.
- Do not use the appliance in the bathroom.
- Do not use the appliance near water contained in basins, bathtubs or other vessels.
- Do not immerse the appliance in water or other liquids.
- **IMPORTANT** Whilst emitting steam, this appliance may cause burns if used incorrectly.
- **CAUTION:** The hose will be hot when in use. Avoid direct contact with the skin.
- Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- **IMPORTANT** Always unplug the appliance when not in use and before filling the water tank or cleaning the appliance.
- Take care when refilling the water tank. Ensure the steamer is switched off and unplugged from the mains whilst refilling.
- When changing attachments, ensure the steamer is switched off and unplugged from the mains, to avoid contact with hot steam.
- Always inspect the appliance before use for noticeable signs of damage, or if the appliance has been dropped.
- Do not use if the appliance or lead are damaged. In the event of damage, discontinue use immediately and contact the Conair Customer Care Line (refer to UK after Sales Service section for further information).
- In the event of a fault, discontinue use immediately and contact the Conair Customer Care Line (refer to UK after Sales Service section



for further information).

- Do not leave the appliance unattended when switched on or plugged in.
- Do not place the appliance or nozzle on any heat sensitive surface whilst in operation.
- Do not use any other attachments than those supplied with the product.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.
- Keep out of the reach of children.
- Allow the appliance to cool before storing away.
- Always empty the water tank before storage
- After use, do not coil the lead around the appliance as this may cause damage. Instead coil loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).

### **IMPORTANT!**

- **CAUTION - AVOID SCALDING YOUR SKIN WITH HOT STEAM.**
- **CAUTION:** Hose will be hot when in use. Avoid contact.
- Surfaces of this appliance may be hot when in use.
- Do not directly press the steam nozzle against delicate fabrics.
- Always test fabric for colour fastness in an inconspicuous spot.
- Always clean after use, and remove any water from the water tank.
- Read all instructions before using. Keep this instruction booklet for your reference.
- Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in - use the nozzle holder/hanger attachment provided.
- Whilst emitting steam, this appliance may cause burns if it is used



too closely to the skin or eyes, or if it is used incorrectly.

- Take care when refilling the water tank. Ensure the steamer is switched OFF “0” and unplugged from the mains whilst refilling.
- When changing attachments, ensure the steamer is switched OFF “0” and unplugged from the mains, to avoid contact with hot steam.

## **UK WIRING INSTRUCTIONS**

The wires in the main lead are coloured in accordance with the following code:

GREEN & YELLOW = EARTH

BLUE = NEUTRAL

BROWN = LIVE

As the colours of the wire may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.

- The wire which is coloured GREEN & YELLOW must be connected to the terminal in the plug which is marked with the letter E or  $\perp$  coloured green or green and yellow.
- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

With this appliance, if a 13 amp plug is used a 13 amp fuse should be fitted. If any other type of plug is used a 10 amp fuse must be fitted either in the plug or at the distribution board.

## **UK GUARANTEE**

This appliance is guaranteed for consumer use for 2 years.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture it will be repaired or replaced through the Conair UK After Sales Service. Conair reserve the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

## **UK AFTER SALES SERVICE**

For further advice on using the appliance, contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or alternatively email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com)

### **In guarantee**

Return the product to the Conair Service Centre at the following address:

Conair Service Centre  
PO Box 506  
WIGAN  
WN1 9AA

Enclose your name and address, together with proof of purchase and details of the fault.

Conair will either repair or replace the product as appropriate.

### **Out of Guarantee**

Contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com) for details of the standard repair or replacement charge. If you wish to proceed with the repair or replacement, return the product to the Conair Service Centre at the following address:

Conair Service Centre  
PO Box 506  
WIGAN  
WN1 9AA

Enclose your name and address, together with details of the fault and cheque made payable to The Conair Group Ltd.

For further help or advice on using this or any other BaByliss product call the Conair Customer Care Line telephone 0870 5133191 (09:00 - 17:00 Monday to Friday) or alternatively email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com)

