

TRIPLE S *Customs*

HONDA ACCORD 1985-2005 VEHICLE WIRING

WIRING INFORMATION: 1985 Honda Accord

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	WHITE or WHITE/BLACK	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
IGNITION	BLACK/YELLOW	Ignition Harness
ACCESSORY	YELLOW AND	Ignition Harness
SECOND ACCESSORY	BLUE/WHITE	Ignition Harness
POWER DOOR LOCK (-)	GREEN/WHITE	Driver Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Driver Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	At Light Switch
DOOR TRIGGER (-)	BLACK/WHITE	At Harness Above Fuse Box Or Green Plug To Right Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel or Light In Trunk
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Switch
HORN TRIGGER (-)	BLUE/RED	At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1986 Honda Accord

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	WHITE or WHITE/BLACK	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
IGNITION	BLACK/YELLOW	Ignition Harness
ACCESSORY	YELLOW AND	Ignition Harness
SECOND ACCESSORY	BLUE/WHITE	Ignition Harness
POWER DOOR LOCK (-)	GREEN/WHITE	Driver Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Driver Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	At Light Switch
DOOR TRIGGER (-)	BLACK/WHITE	At Harness Above Fuse Box Or Green Plug To Right Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel or Light In Trunk
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Switch
HORN TRIGGER (-)	BLUE/RED	At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1987 Honda Accord

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	WHITE or WHITE/BLACK	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
IGNITION	BLACK/YELLOW	Ignition Harness
ACCESSORY	YELLOW AND	Ignition Harness
SECOND ACCESSORY	BLUE/WHITE	Ignition Harness
POWER DOOR LOCK (-)	GREEN/WHITE	Driver Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Driver Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	At Light Switch
DOOR TRIGGER (-)	BLACK/WHITE	At Harness Above Fuse Box Or Green Plug To Right Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel or Light In Trunk
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Switch
HORN TRIGGER (-)	BLUE/RED	At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1988 Honda Accord

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	WHITE or WHITE/BLACK	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
IGNITION	BLACK/YELLOW	Ignition Harness
ACCESSORY	YELLOW AND	Ignition Harness
SECOND ACCESSORY	BLUE/WHITE	Ignition Harness
POWER DOOR LOCK (-)	GREEN/WHITE	Driver Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Driver Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	At Light Switch
DOOR TRIGGER (-)	BLACK/WHITE	At Harness Above Fuse Box Or Green Plug To Right Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel or Light In Trunk
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Switch
HORN TRIGGER (-)	BLUE/RED	At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1989 Honda Accord

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT	WHITE or WHITE/BLACK	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
IGNITION	BLACK/YELLOW	Ignition Harness
ACCESSORY	YELLOW AND	Ignition Harness
SECOND ACCESSORY	BLUE/WHITE	Ignition Harness
POWER DOOR LOCK (-)	GREEN/WHITE	Driver Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Driver Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	At Light Switch
DOOR TRIGGER (-)	BLACK/WHITE	At Harness Above Fuse Box Or Green Plug To Right Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel or Light In Trunk
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Switch
HORN TRIGGER (-)	BLUE/RED	At Steering Column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1990 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
12V ACCESSORY	YELLOW	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse box
POWER DOOR LOCK (-)	BLACK/WHITE	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	BLACK/RED	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
Wagon models use GREEN/WHITE for lock and YELLOW/WHITE for unlock. You can find these wires either in the drivers door harness or under the rear seat.		
DOOR TRIGGER (-)	BLACK/WHITE	Harness To Left Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness To Left Of Steering Column
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE	Harness At Steering column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1991 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
12V ACCESSORY	YELLOW	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse box
POWER DOOR LOCK (-)	BLACK/WHITE	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	BLACK/RED	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
Wagon models use GREEN/WHITE for lock and YELLOW/WHITE for unlock. You can find these wires either in the drivers door harness or under the rear seat.		
DOOR TRIGGER (-)	BLACK/WHITE	Harness To Left Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness To Left Of Steering Column
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE	Harness At Steering column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1992 Honda Accord




WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
12V ACCESSORY	YELLOW	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse box
POWER DOOR LOCK (-)	BLACK/WHITE	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	BLACK/RED	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
Wagon models use GREEN/WHITE for lock and YELLOW/WHITE for unlock. You can find these wires either in the drivers door harness or under the rear seat.		
DOOR TRIGGER (-)	BLACK/WHITE	Harness To Left Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness To Left Of Steering Column
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE	Harness At Steering column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1993 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
12V ACCESSORY	YELLOW	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse box
POWER DOOR LOCK (-)	BLACK/WHITE	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	BLACK/RED	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
Wagon models use GREEN/WHITE for lock and YELLOW/WHITE for unlock. You can find these wires either in the drivers door harness or under the rear seat.		
DOOR TRIGGER (-)	BLACK/WHITE	Harness To Left Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness To Left Of Steering Column
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE	Harness At Steering column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door




WIRING INFORMATION: 1994 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
12V ACCESSORY	YELLOW	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Blue Connector At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Gray Plug Above Fuse Box Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	ORANGE	Gray Plug Above Fuse Box Wrapped In Blue Tape
DOOR TRIGGER (-)	BLACK/WHITE	In Larger Gray Connector Right Of Steering Column
TRUNK TRIGGER (-)	ORANGE	In Larger Gray Connector Right Of Steering Column
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE or BLUE/RED	In Blue Connector High In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

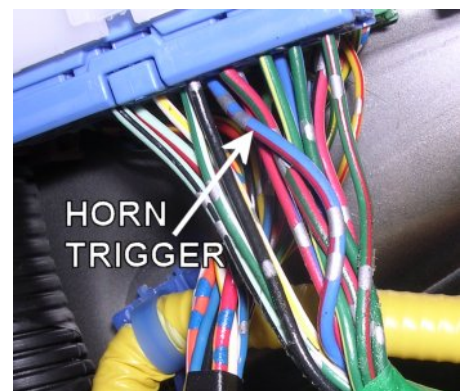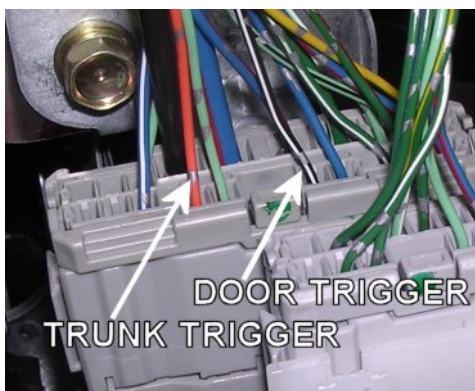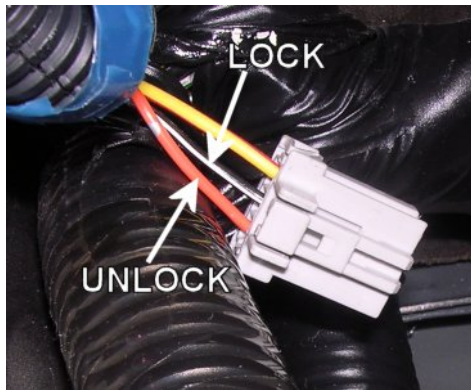





WIRING INFORMATION: 1995 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
12V ACCESSORY	YELLOW	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Blue Connector At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Gray Plug Above Fuse Box Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	ORANGE	Gray Plug Above Fuse Box Wrapped In Blue Tape
DOOR TRIGGER (-)	BLACK/WHITE	In Larger Gray Connector Right Of Steering Column
TRUNK TRIGGER (-)	ORANGE	In Larger Gray Connector Right Of Steering Column
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE or BLUE/RED	In Blue Connector High In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

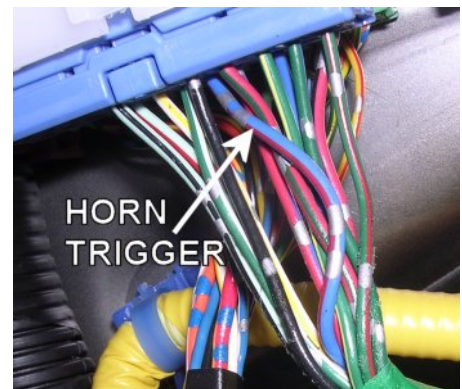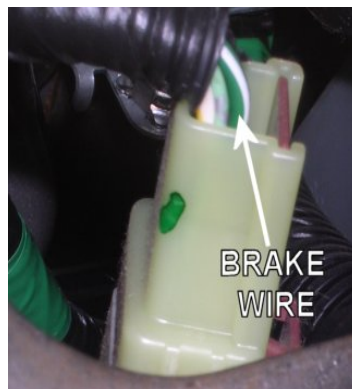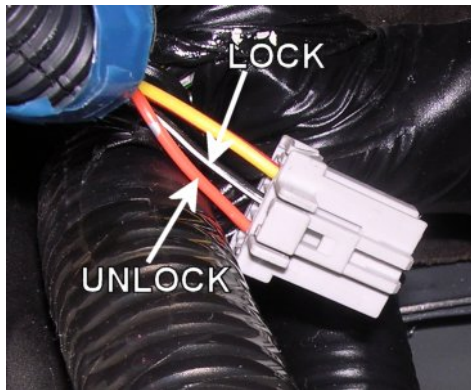





WIRING INFORMATION: 1996 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
12V ACCESSORY	YELLOW	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Blue Connector At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Gray Plug Above Fuse Box Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	ORANGE	Gray Plug Above Fuse Box Wrapped In Blue Tape
DOOR TRIGGER (-)	BLACK/WHITE	In Larger Gray Connector Right Of Steering Column
TRUNK TRIGGER (-)	ORANGE	In Larger Gray Connector Right Of Steering Column
FACTORY ALARM ARM (-)	RED/YELLOW	Harness In Passenger Kick Panel Or Factory Alarm Module
FACTORY ALARM DISARM (-)	RED/BLUE	Harness In Passenger Kick Panel Or Factory Alarm Module
The factory alarm module is located under the passenger front seat		
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE or BLUE/RED	In Blue Connector High In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

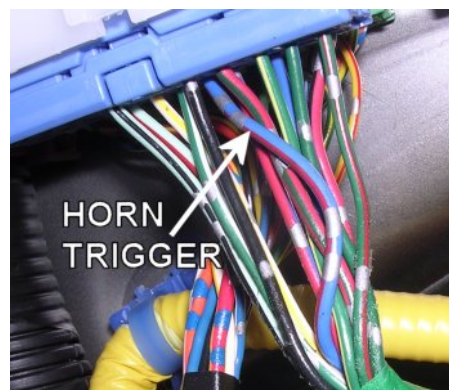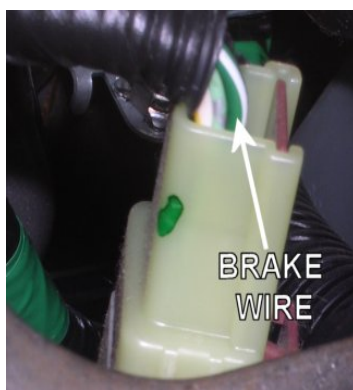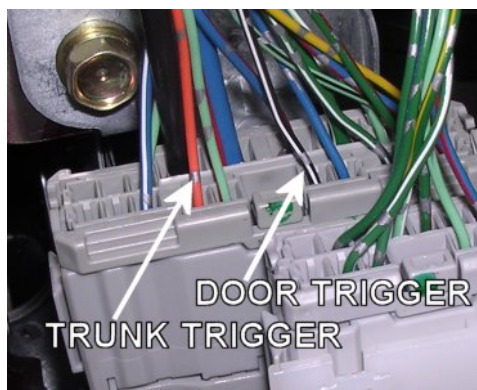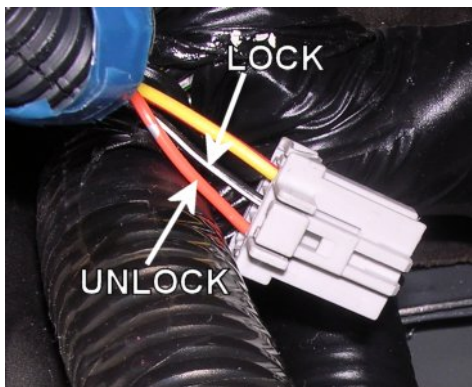


WIRING INFORMATION: 1997 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
12V ACCESSORY	YELLOW	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Blue Connector At Fuse Box
POWER DOOR LOCK (-)	BLACK/WHITE	Gray Plug Above Fuse Box Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	ORANGE	Gray Plug Above Fuse Box Wrapped In Blue Tape
DOOR TRIGGER (-)	BLACK/WHITE	In Larger Gray Connector Right Of Steering Column
TRUNK TRIGGER (-)	ORANGE	In Larger Gray Connector Right Of Steering Column
FACTORY ALARM ARM (-)	RED/YELLOW	Harness In Passenger Kick Panel Or Factory Alarm Module
FACTORY ALARM DISARM (-)	RED/BLUE	Harness In Passenger Kick Panel Or Factory Alarm Module
The factory alarm module is located under the passenger front seat		
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE or BLUE/RED	In Blue Connector High In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

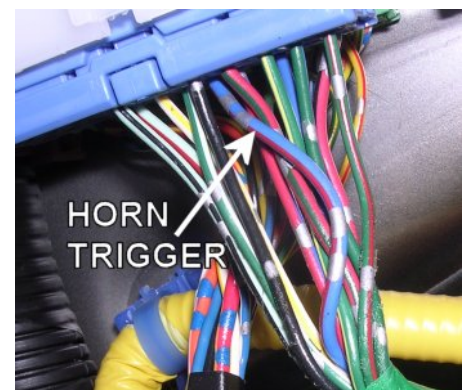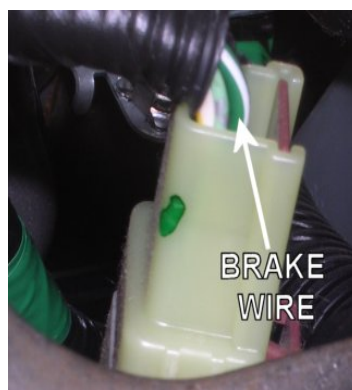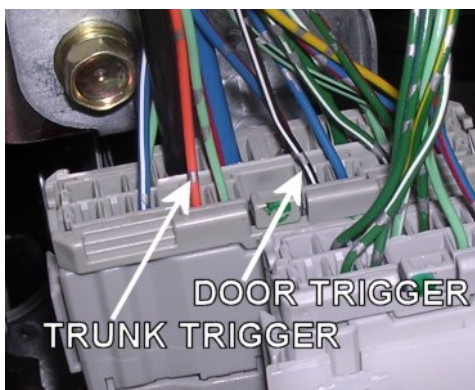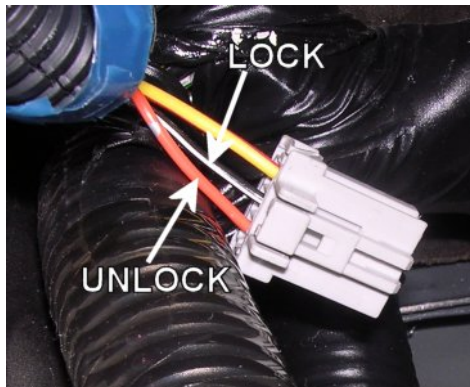


WIRING INFORMATION: 1998 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
SECOND 12V IGNITION	YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
If interrupting the starter wire for a starter kill, cut the wire between the ignition cylinder and fuse box. DO NOT INTERRUPT THE STARTER WIRE BETWEEN FUSE BOX AND STARTER or the check engine light will come on.		
12V ACCESSORY	WHITE/BLACK	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Driver Fuse Box
POWER LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
Use BLACK/WHITE for lock and GREEN/RED for unlock on LX models without factory security. These wires can be found in a 2-pin connector near the driver side fuse box. Test door locks using passenger door lock key switch.		
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
TRUNK TRIGGER (-)	ORANGE	Harness In Driver's kick panel
TRUNK RELEASE (+)	WHITE/RED	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Factory alarm arms and disarms with the door locks on EX models. The LX models arm only with the factory transmitter	
FACTORY ALARM DISARM		
FACTORY ALARM DISARM NO UNLOCK (-)	On EX models, to disarm the factory security without unlocking the doors give a negative pulse to a BLUE wire at the driver's power window switch inside the driver door. On LX models, the wire is at the factory keyless module attached to the drivers under dash panel.	
TACHOMETER WIRE	BLUE	At Distributor Or Test Connector
The test connector is located behind the battery on the 4 cylinder, and on a bracket attached to the drivers side strut tower on the 6-cylinder motor. The test connector is a white 2-pin connector, and may be covered by a black rubber boot.		
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	BLUE/RED or GREEN/BLUE	Harness At Steering column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/YELLOW	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	RED/BLUE	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/YELLOW	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/BLUE	At Right Rear Window Switch
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

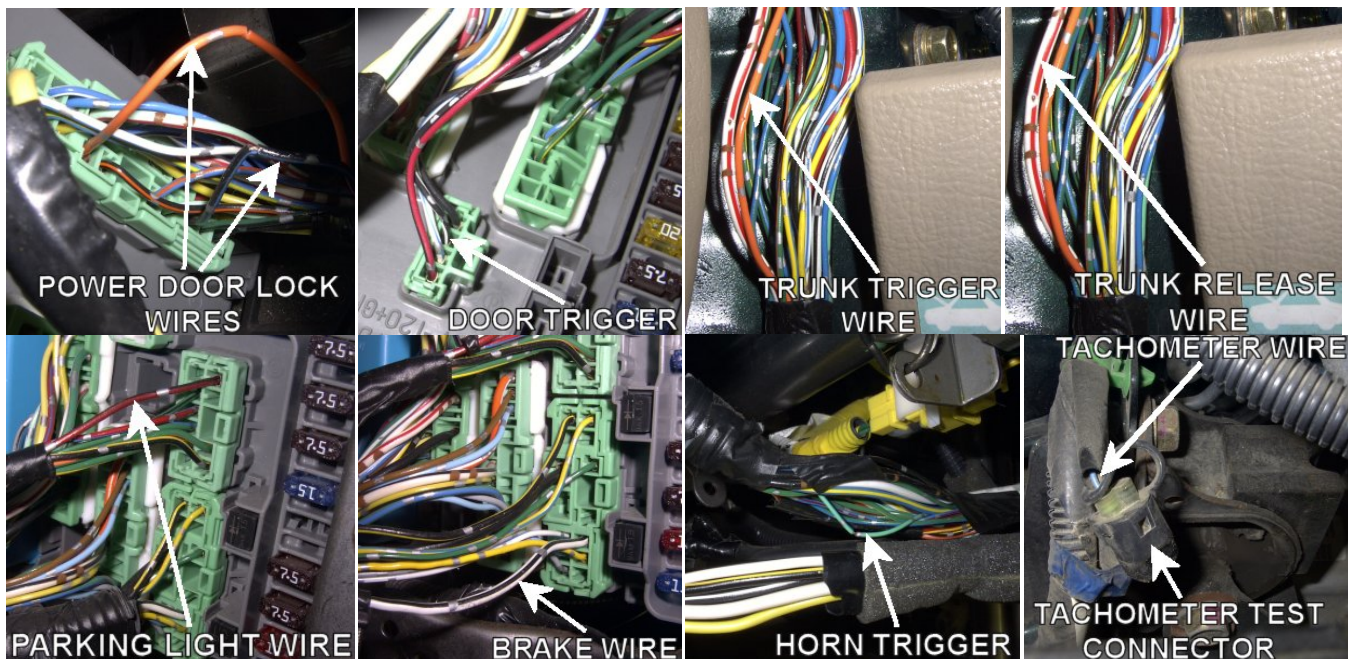


WIRING INFORMATION: 1999 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
SECOND 12V IGNITION	YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
If interrupting the starter wire for a starter kill, cut the wire between the ignition cylinder and fuse box. DO NOT INTERRUPT THE STARTER WIRE BETWEEN FUSE BOX AND STARTER or the check engine light will come on.		
12V ACCESSORY	WHITE/BLACK	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Driver Fuse Box
POWER LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
Use BLACK/WHITE for lock and GREEN/RED for unlock on LX models without factory security. These wires can be found in a 2-pin connector near the driver side fuse box. Test door locks using passenger door lock key switch.		
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
TRUNK TRIGGER (-)	ORANGE	Harness In Driver's kick panel
TRUNK RELEASE (+)	WHITE/RED	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Factory alarm arms and disarms with the door locks on EX models. The LX models arm only with the factory transmitter	
FACTORY ALARM DISARM		
FACTORY ALARM DISARM NO UNLOCK (-)	On EX models, to disarm the factory security without unlocking the doors give a negative pulse to a BLUE wire at the driver's power window switch inside the driver door. On LX models, the wire is at the factory keyless module attached to the drivers under dash panel.	
TACHOMETER WIRE	BLUE	At Distributor Or Test Connector
The test connector is located behind the battery on the 4 cylinder, and on a bracket attached to the drivers side strut tower on the 6-cylinder motor. The test connector is a white 2-pin connector, and may be covered by a black rubber boot.		
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	BLUE/RED or GREEN/BLUE	Harness At Steering column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/YELLOW	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	RED/BLUE	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/YELLOW	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/BLUE	At Right Rear Window Switch
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

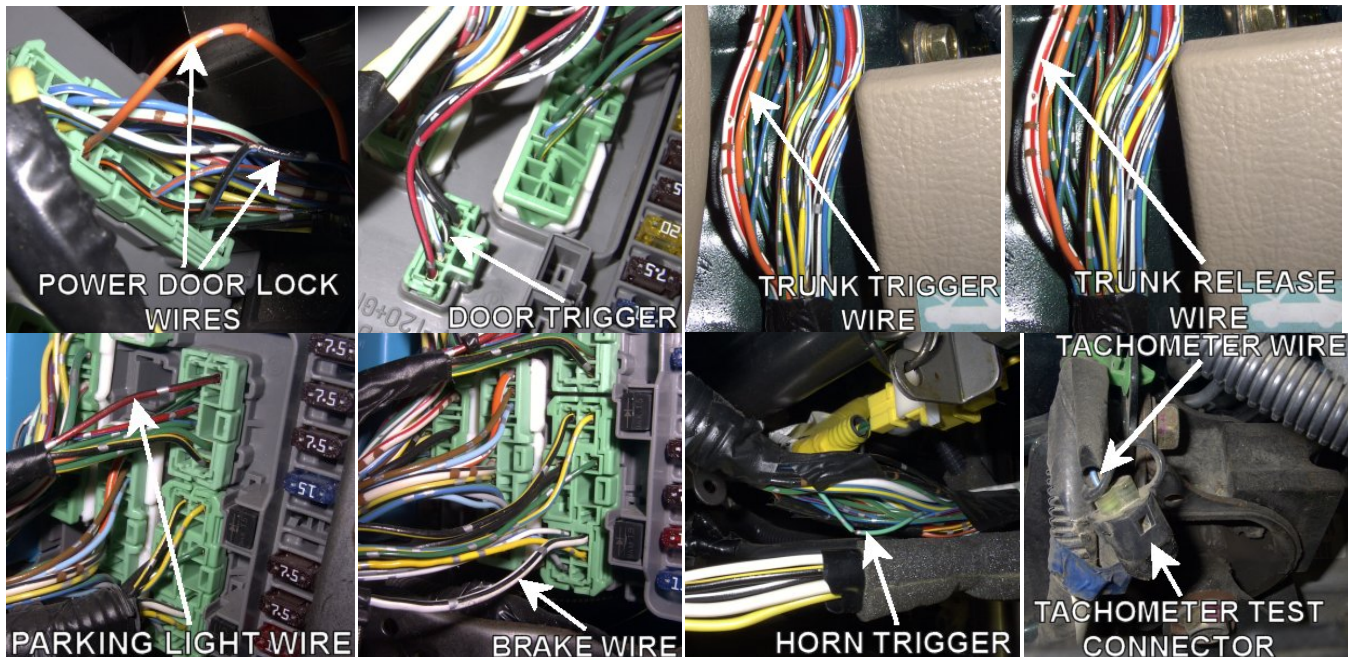


WIRING INFORMATION: 2000 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
SECOND 12V IGNITION	YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
If interrupting the starter wire for a starter kill, cut the wire between the ignition cylinder and fuse box. DO NOT INTERRUPT THE STARTER WIRE BETWEEN FUSE BOX AND STARTER or the check engine light will come on.		
12V ACCESSORY	WHITE/BLACK	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Driver Fuse Box
POWER LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
Use BLACK/WHITE for lock and GREEN/RED for unlock on LX models without factory security. These wires can be found in a 2-pin connector near the driver side fuse box. Test door locks using passenger door lock key switch.		
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
TRUNK TRIGGER (-)	ORANGE	Harness In Driver's kick panel
TRUNK RELEASE (+)	WHITE/RED	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Factory alarm arms and disarms with the door locks on EX models. The LX models arm only with the factory transmitter	
FACTORY ALARM DISARM		
FACTORY ALARM DISARM NO UNLOCK (-)	On EX models, to disarm the factory security without unlocking the doors give a negative pulse to a BLUE wire at the driver's power window switch inside the driver door. On LX models, the wire is at the factory keyless module attached to the drivers under dash panel.	
TACHOMETER WIRE	BLUE	At Distributor Or Test Connector
The test connector is located behind the battery on the 4 cylinder, and on a bracket attached to the drivers side strut tower on the 6-cylinder motor. The test connector is a white 2-pin connector, and may be covered by a black rubber boot.		
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	BLUE/RED or GREEN/BLUE	Harness At Steering column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/YELLOW	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	RED/BLUE	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/YELLOW	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/BLUE	At Right Rear Window Switch
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

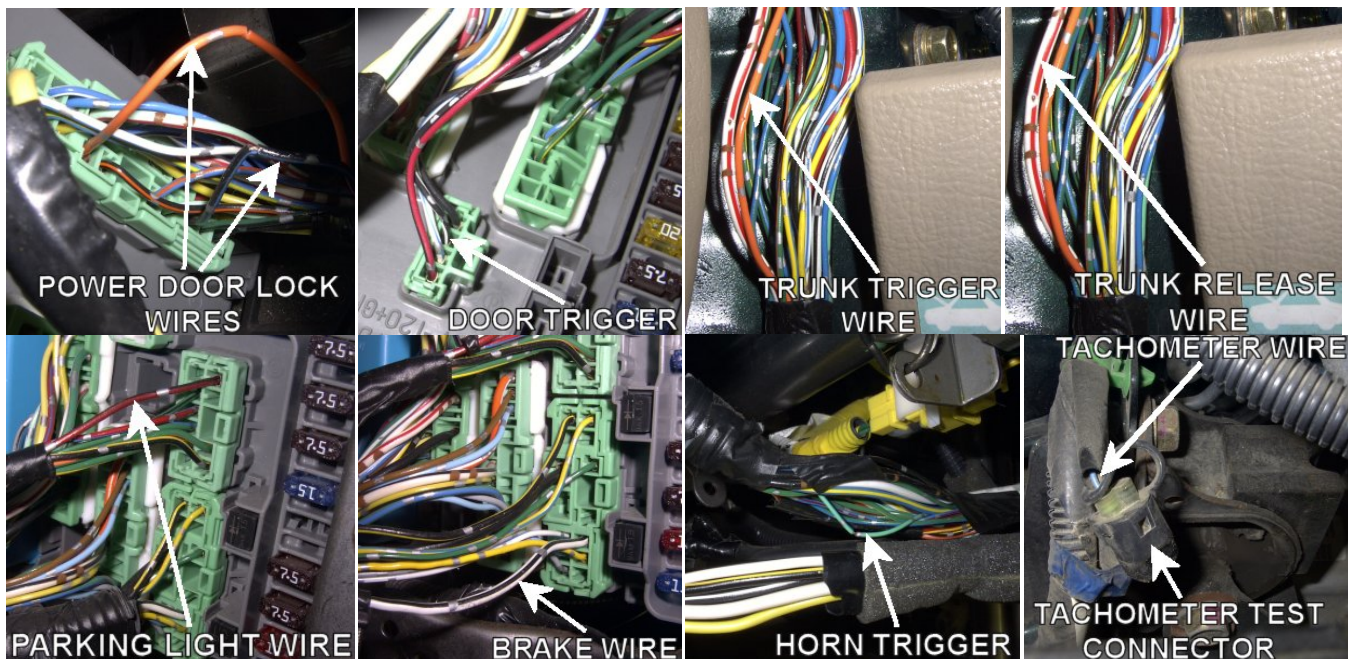


WIRING INFORMATION: 2001 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
SECOND 12V IGNITION	YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
If interrupting the starter wire for a starter kill, cut the wire between the ignition cylinder and fuse box. DO NOT INTERRUPT THE STARTER WIRE BETWEEN FUSE BOX AND STARTER or the check engine light will come on.		
12V ACCESSORY	WHITE/BLACK	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Driver Fuse Box
POWER LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
Use BLACK/WHITE for lock and GREEN/RED for unlock on LX models without factory security. These wires can be found in a 2-pin connector near the driver side fuse box. Test door locks using passenger door lock key switch.		
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
TRUNK TRIGGER (-)	ORANGE	Harness In Driver's kick panel
TRUNK RELEASE (+)	WHITE/RED	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Factory alarm arms and disarms with the door locks on EX models. The LX models arm only with the factory transmitter	
FACTORY ALARM DISARM		
FACTORY ALARM DISARM NO UNLOCK (-)	On EX models, to disarm the factory security without unlocking the doors give a negative pulse to a BLUE wire at the driver's power window switch inside the driver door. On LX models, the wire is at the factory keyless module attached to the drivers under dash panel.	
TACHOMETER WIRE	BLUE	At Distributor Or Test Connector
The test connector is located behind the battery on the 4 cylinder, and on a bracket attached to the drivers side strut tower on the 6-cylinder motor. The test connector is a white 2-pin connector, and may be covered by a black rubber boot.		
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	BLUE/RED or GREEN/BLUE	Harness At Steering column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/YELLOW	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	RED/BLUE	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/YELLOW	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/BLUE	At Right Rear Window Switch
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

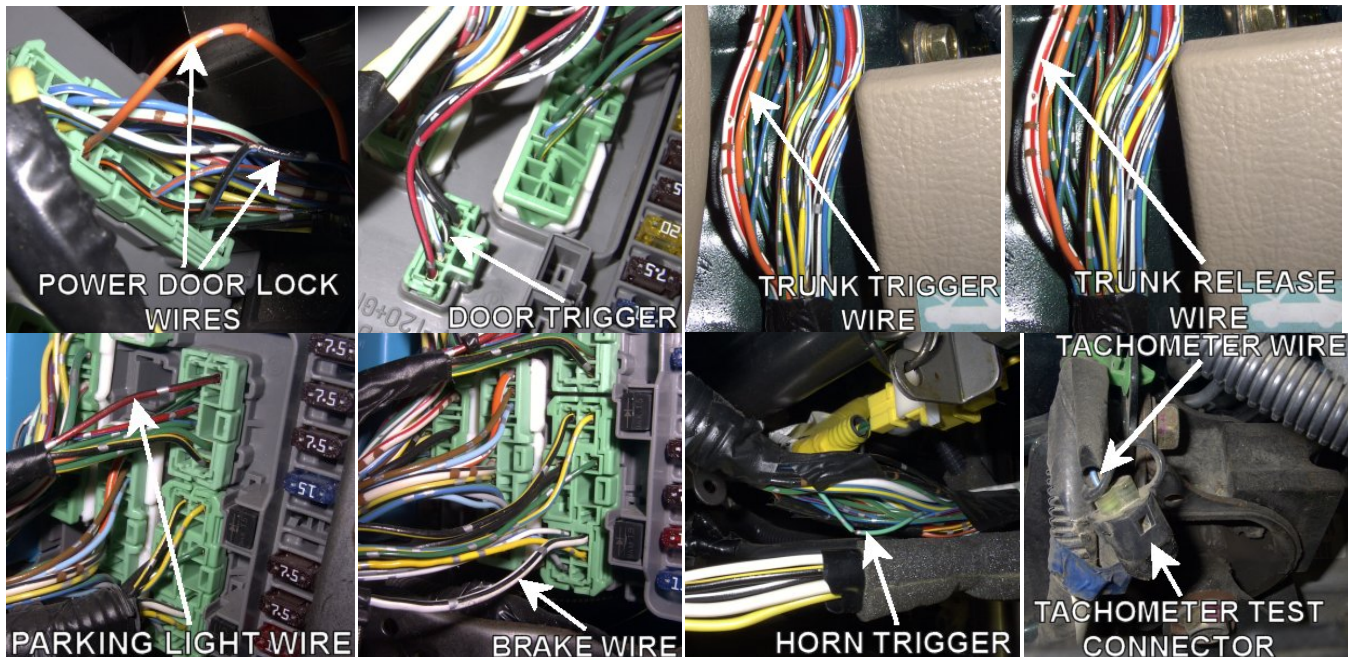

WIRING INFORMATION: 2002 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
SECOND 12V IGNITION	YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
If interrupting the starter wire for a starter kill, cut the wire between the ignition cylinder and fuse box. DO NOT INTERRUPT THE STARTER WIRE BETWEEN FUSE BOX AND STARTER or the check engine light will come on.		
12V ACCESSORY	WHITE/BLACK	Ignition harness
PARKING LIGHTS (+)	RED/BLACK	Harness At Driver Fuse Box
POWER LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
Use BLACK/WHITE for lock and GREEN/RED for unlock on LX models without factory security. These wires can be found in a 2-pin connector near the driver side fuse box. Test door locks using passenger door lock key switch.		
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
TRUNK TRIGGER (-)	ORANGE	Harness In Driver's kick panel
TRUNK RELEASE (+)	WHITE/RED	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Factory alarm arms and disarms with the door locks on EX models. The LX models arm only with the factory transmitter	
FACTORY ALARM DISARM		
FACTORY ALARM DISARM NO UNLOCK (-)	On EX models, to disarm the factory security without unlocking the doors give a negative pulse to a BLUE wire at the driver's power window switch inside the driver door. On LX models, the wire is at the factory keyless module attached to the drivers under dash panel.	
TACHOMETER WIRE	BLUE	At Distributor Or Test Connector
The test connector is located behind the battery on the 4 cylinder, and on a bracket attached to the drivers side strut tower on the 6-cylinder motor. The test connector is a white 2-pin connector, and may be covered by a black rubber boot.		
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	BLUE/RED or GREEN/BLUE	Harness At Steering column
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/YELLOW	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	RED/BLUE	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/YELLOW	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/BLUE	At Right Rear Window Switch
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

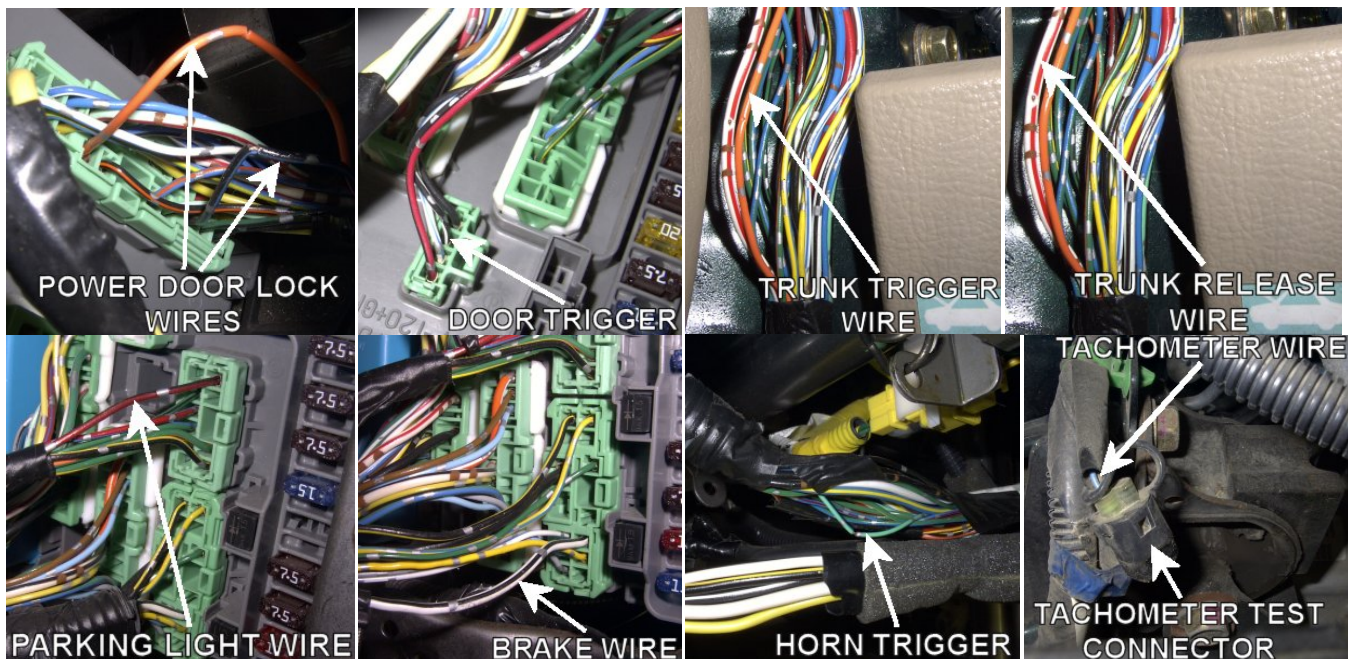

WIRING INFORMATION: 2003 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLACK/YELLOW	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
12V ACCESSORY	BLACK/RED	Ignition Harness
SECOND ACCESSORY	WHITE/RED	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Large Connector Above Fuse Box
POWER LOCK (-)	PINK/BLACK	Green Connector At Fuse Box
POWER UNLOCK (-)	PINK/BLUE	Same Connector As Power Lock
Test power door lock wires by using the passenger door lock switch.		
DOOR TRIGGER (-)	GREEN/RED	Small Green Connector Behind Fuse Box
TRUNK TRIGGER (-)	BLUE/BLACK	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
TRUNK RELEASE (+)	YELLOW/GREEN	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
FACTORY ALARM ARM (-)	WHITE/RED	Module Inside Driver's Door
FACTORY ALARM DISARM (-)	WHITE	Module Inside Driver's Door
TACHOMETER WIRE	BLUE or BLUE/RED	At Engine Control Module On Front Of Transmission Tunnel With Connectors On Passenger Side
BRAKE WIRE (+)	WHITE/BLACK	Brake Switch
HORN TRIGGER (-)	GREEN/YELLOW	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	RED	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/WHITE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2004 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLACK/YELLOW	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
12V ACCESSORY	BLACK/RED	Ignition Harness
SECOND ACCESSORY	WHITE/RED	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Large Connector Above Fuse Box
POWER LOCK (-)	PINK/BLACK	Green Connector At Fuse Box
POWER UNLOCK (-)	PINK/BLUE	Same Connector As Power Lock
Test power door lock wires by using the passenger door lock switch.		
DOOR TRIGGER (-)	GREEN/RED	Small Green Connector Behind Fuse Box
TRUNK TRIGGER (-)	BLUE/BLACK	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
TRUNK RELEASE (+)	YELLOW/GREEN	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
FACTORY ALARM ARM (-)	WHITE/RED	Module Inside Driver's Door
FACTORY ALARM DISARM (-)	WHITE	Module Inside Driver's Door
TACHOMETER WIRE	BLUE or BLUE/RED	At Engine Control Module On Front Of Transmission Tunnel With Connectors On Passenger Side
BRAKE WIRE (+)	WHITE/BLACK	Brake Switch
HORN TRIGGER (-)	GREEN/YELLOW	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	RED	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/WHITE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2005 Honda Accord

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLACK/YELLOW	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
12V ACCESSORY	BLACK/RED	Ignition Harness
SECOND ACCESSORY	WHITE/RED	Ignition Harness
PARKING LIGHTS (+)	RED/BLACK	Large Connector Above Fuse Box
POWER LOCK (-)	PINK/BLACK	Green Connector At Fuse Box
POWER UNLOCK (-)	PINK/BLUE	Same Connector As Power Lock
Test power door lock wires by using the passenger door lock switch.		
DOOR TRIGGER (-)	GREEN/RED	Small Green Connector Behind Fuse Box
TRUNK TRIGGER (-)	BLUE/BLACK	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
TRUNK RELEASE (+)	YELLOW/GREEN	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
FACTORY ALARM ARM (-)	WHITE/RED	Module Inside Driver's Door
FACTORY ALARM DISARM (-)	WHITE	Module Inside Driver's Door
TACHOMETER WIRE	BLUE or BLUE/RED	At Engine Control Module On Front Of Transmission Tunnel With Connectors On Passenger Side
BRAKE WIRE (+)	WHITE/BLACK	Brake Switch
HORN TRIGGER (-)	GREEN/YELLOW	Harness At Steering Column
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	RED	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/WHITE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
This vehicle is equipped with a factory Immobilizer system. This must be bypassed when installing a remote start system.		