



HOOVER®

Washing machine

Instructions for use

SIX.AAA WHISPER 1600 AAA 160

SIX.AAA WHISPER 1400 AAA 140

SIX.SPORTSWEAR 1300 AI 130



Introduction

Please read and follow these instructions carefully and operate the machine accordingly.

Keep all documentation in a safe place for future reference or for any future owners.

Note: this machine is solely for domestic use, i.e. to wash, rinse and spin dry household textiles and garments.

Notes on disposal

All packaging materials used are environmentally-friendly and recyclable. Please help dispose of the packaging via environmentally-friendly means.

Your retailer or local council will be able to give you details of current means of disposal.

Appliances that have reached the end of their useful life are not worthless rubbish! Valuable materials can be salvaged from an old appliance via scrap reprocessing.

Note: to ensure safety when disposing of an old washing machine disconnect the mains plug from the socket, cut the mains power cable and destroy this together with the plug. To prevent children shutting themselves in the machine break the door hinges or the door lock.

Contents

Page

| | |
|---|----|
| Introduction | 2 |
| General Delivery Notes | 4 |
| Safety Notes | 4 |
| Quick Start | 5 |
| Installation & Testing | 6 |
| Useful Washing Advice | 11 |
| Using Inter@ct for the first time | 12 |
| Description of Controls | 15 |
| Detergent Drawer | 19 |
| Detergents, washing aids & amounts to use | 20 |
| Programme Selector | 22 |
| Auto Half Load | 24 |
| Sorting the Laundry | 24 |
| Selecting the wash Programme | 26 |
| Consumption data | 27 |
| Programme Guide | 28 |
| Cleaning and Routine Maintenance | 30 |
| Trouble shooting | 32 |
| Power failure | 33 |
| Technical data | 34 |
| Customer service | 35 |

General delivery notes

Please check that the following items are delivered with the appliance:

- Instruction manual
- Guarantee card
- Blanking plug
- Inlet hoses & bracket
- Base panel and x2 push clips

Check that no damage has occurred during transit. If it has, call the manufactures service by GIAS (tel: 08705 400 600). Please see Customer Service.

Safety notes

Note: before carrying out any cleaning or maintenance of the washing machine.

- A) Disconnect the plug from the mains supply
- B) Turn off the water supply
- C) Ensure that the mains power supply is earthed, if not, seek assistance from a qualified electrician. This appliance must be earthed.
- D) Do not touch the appliance when hands or feet are wet or damp. Do not use the appliance with bare feet.
- E) The use of adapters, multiple connectors and/or extensions is not recommended.

F) Caution: water temperature can reach 90°C during the whites wash cycle and as a result the door glass may get very hot.

- G) Check there is no water visible in the drum before opening the door.
- H) Do not allow children or unauthorised persons to use the appliance without supervision.
- I) Do not pull the power cable or the appliance itself to remove the plug from the socket.
- J) The appliance must not be exposed to weather conditions (rain, direct sun, etc...)

- K) When moving the appliance never lift it by the controls, the detergent drawer, the hoses or the power cable.
To avoid damaging the door when moving the appliance never rest the door against objects e.g a trolley.
- L) **IMPORTANT!**
If the appliance is installed on a carpeted floor ensure that the ventilation through the base of the appliance is not obstructed.
- M) When lifting the machine always use two people to help avoid back injuries.
- N) If the appliance is not running properly or breaks down, switch it off, disconnect the plug from the socket, turn off the water supply and do not tamper with the appliance.
Consult GIAS Service (tel: 08705 400 600) for possible repair. Failure to comply with the above can compromise the safety of the appliance.
- O) If the appliance's power cable is damaged it must be replaced by a special cord which is only available from GIAS Service.
- P) After the machine has been installed, ensure that the mains plug and water supply valves are easily accessible.
- Q) Glass fibre curtains should never be put into this machine.
- R) Lint or fluff must not be allowed to collect on the floor around the outside of this machine.
- S) Always ensure that the door locked indicator neon has switched itself off before opening the door. By doing so the machine is allowed to cool down before the laundry is handled.
- T) Always ensure that the base panel is fitted to the machine.

Quick Start

Note: Please ensure that Inter@ct set-up, installation and testing has been completed before referring to the Quick Start.

Washing

- Open the door with the DOOR OPEN button
- Select laundry and put it in the machine
- Close the door
- Put detergent in the dispenser compartments, compartment I for speed wash (prog. 26) and compartment II for all other programmes.
- Select programme by turning the programme knob (Your desired programme may be seen on the display)
- Select any function buttons required and then press the Start/Pause button
- There may be a short time delay from pressing the start/pause button to the start of the programme, while the machine senses the water required and sets the parameters for the programme


After washing

- **Wait about two minutes (only if door locked indicator is ON) for the door locking device to disengage**
- **Switch off the machine by turning the control knob to the OFF position**
- **Open the door and remove the laundry**


Installation & Testing

Remove the machine from the packaging - close to where it will finally be positioned - and proceed as follows:
On the back of the machine


- 1) Remove the central screw A and side screws B and pull out the transit bracket C complete with the red spacer.

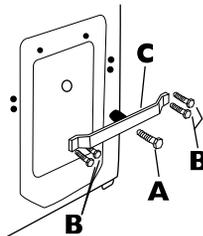


- 2) Tilt the machine forward and remove the polystyrene spacers .

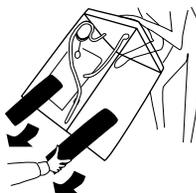


- 3) Cover the central hole using the cap enclosed in the instructions bag.

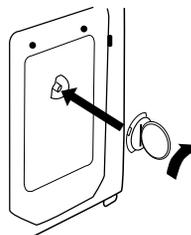

- 4) Adjust the two feet at the front to level the machine.

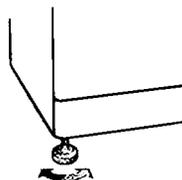

- 5) Tilt the machine forward and locate the base panel by ① removing the paper backing from the adhesive tape, ② locate the base panel in the front of the machine ③ offer the base panel up to the base of the washing machine and locate the two clips.

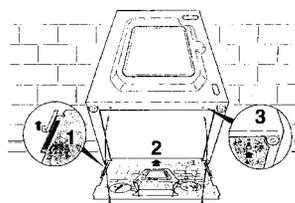


Note: we recommend you keep the transit bracket and screws to protect the machine for future transit. The Manufacturers will not be responsible for any damage to the machine caused by not following the instructions relating to releasing the transit protection. The user is responsible for all installation costs.

Connecting the fill hoses


This machine has inlet hoses with 19mm (3/4") threaded ferrules fitted to the ends to attach between the threaded connector on the appliance and the water supply.

Only use the new hoses supplied to connect the machine and ensure that the sealing washers are in place inside the hose connectors. Do not re-use old hoses which are attached to existing installations. Do not over-tighten the connections. Hand tight is sufficient. Do not trap or kink the hoses.

1. Connect the elbow end of hoses to the back of the machine: red connector (for hot water) to the red threaded inlet, the white connector (for the cold water) to the white threaded inlet.

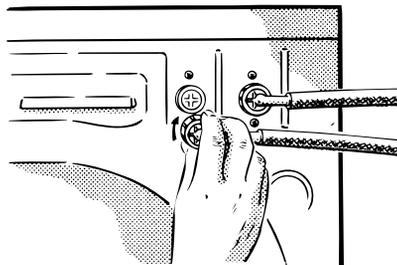

2. Connect the straight end of the hoses to the stop taps.

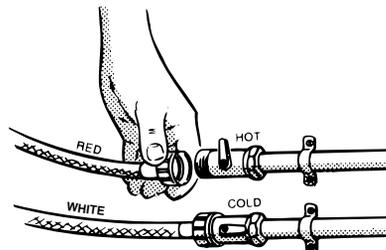

If the inlet hose's connection point is changed, check that the 3/4" threaded ferrule on the inlet hose is firmly attached to the electrovalve connector.


Water supply requirements

Connect the machine to the drainage system used by household sinks.

THIS MACHINE MUST BE CONNECTED IN ACCORDANCE WITH THE WATER SUPPLY REGULATIONS. WATER BYELAWS PROHIBIT CONNECTION TO A SURFACE WATER DRAIN.

No other appliance should be plumbed into the standpipe.

There are two possible arrangements which can be seen below :-

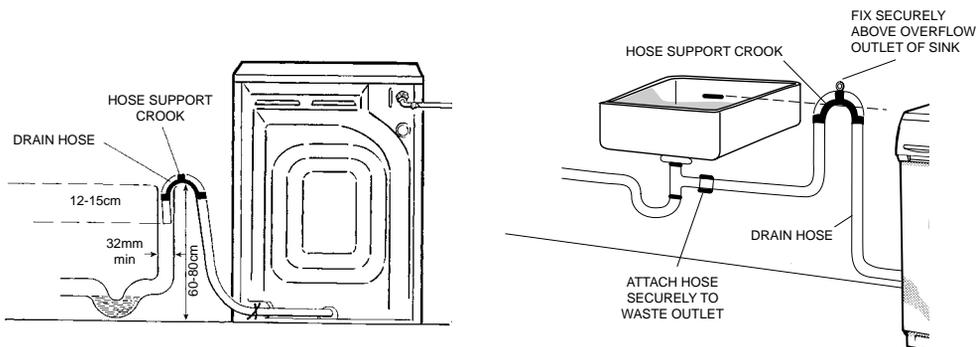

For the washing machine to function properly the outlet end of the drain hose must be at a minimum of 60 cm and a maximum of 80 cm from the ground.

Testing the installation

Refer to the programme guide for details of how to select programmes.

For stopping each programme before its completion, the programme must be cancelled by holding down the START/PAUSE button for five seconds. The display will inform you that the programme has been cancelled.

1. Turn on the water supply and check for leaks from fill hoses.
2. Switch on the electricity supply.
3. Select spin programme 29 and then press the Start button to start the machine. Allow the programme to continue for one minute and then cancel the programme (Please see 'Description of controls' section for cancelling the programme). This will remove any water remaining in the machine from factory testing.
4. To check for cold water filling to the machine:
Select a rinse programme and press the Start button to start the machine. Allow the tumble action to continue until the water has pumped out. Check that the drain outlet is not leaking or overflowing.
5. Switch off the machine at the end of the cycle by turning the control knob to the off position.
6. To check for hot water filling to the machine:
Select programme 2 and press the Start button to start the machine. Allow the wash action to continue for one minute, then cancel the programme.
Alternatively, both inlets can be connected to the cold water supply by using a suitable adaptor.
7. Select spin programme 29 and press the Start button to switch the machine on. If the machine takes longer than one minute to empty check the drain hoses for kinks.

Installation testing is now complete.

To ensure the drum is thoroughly clean after testing and storage, select programme 2 and run the machine for a complete cycle using only wash detergent and water.

If the machine is not to be used immediately, switch off the mains power supply and remove the plug from the power socket. We also recommend that the water stop taps are turned off.

Note: it is advisable to isolate the washing machine from the water and electricity supplies after each wash.

Electricity supply and safety advice

Washing machines are supplied to operate at a voltage of 240V, 50 Hz single-phase. Check that the conductor is powerful enough to supply at least 3.0 kW, then connect the plug to a 13A earthed socket.

Electricity can be extremely dangerous. This washing machine must be earthed.

The socket outlet and the plug on the appliance must be of the same type.

It is not advisable to use multiple adapters and/or extension leads.

The wires in the mains lead are coloured in accordance with the following codes:

| | | |
|---------------------------|---|----------------|
| Blue | – | NEUTRAL |
| Brown | – | LIVE |
| Green & Yellow | – | EARTH |

If the mains cord on this appliance is damaged, it must be replaced by a special cord which is only available from the Hoover spares service, GIAS (01204 556111).



Useful washing advice

Tips on using your appliance in the most environmentally-friendly and economical way.

Loading your washing machine

To make further reductions of energy, water and detergent consumption, we recommend that you put a full load into your machine. Energy savings of up to 50% can be achieved by washing one full load compared to two half loads.

When is prewashing really needed?

Only with particularly dirty loads!

Energy savings of 5 to 15% are made by not selecting the prewash option for less dirty laundry.

Which wash temperature should you choose?

Using stain removers before machine washing reduces the need to wash at temperatures over 60°C.

Energy savings of up to 50% can be made by using a 40°C wash temperature.

Heavily soiled laundry

To ensure the best performance when washing a particularly dirty load, we recommend that you reduce the amount of items to be put into the machine. If the drum is not crammed full, the items will circulate more freely and will wash cleaner.

ARIEL - Chosen and recommended by Hoover

When we produce a new washing machine we subject it to every test possible. And one of the most important tests is the one that enables our experts to identify the most suitable detergent for solving laundry problems. Ariel was able to meet our needs: to make the washing machine function efficiently, not compromise the machine's lifespan and produce the best wash results. Consistently excellent results, which was the main aim of the test we carried out, determined our choice and our recommendation. The prime function of a detergent that answers all washing requirements is to work with the water to remove dirt from fabrics, holding it in suspension until it is removed when the water is pumped out, and to control the amount of foam forming in the washing machine, without damaging the fibres of the items being washed. Ariel fully satisfies all these requirements, as it contains high quality elements, the result of the most advanced research, ensuring excellent results under all conditions.



Using Inter@ct for the first time

This machine will operate prior to programming the Inter@ct set up. However, this machine has Start Delay and Programme End functions and for these functions to work efficiently the Inter@ct set must be programmed. This is a simple operation and special care has been taken during manufacture to ensure that the user can operate this machine simply and effectively.

Programming the machine

Inter@ct needs to be programmed so that the correct clock setting, language and personal requirements are set.

When the machine is turned on and the programme dial is moved away from the “off” position to the programme selections a welcome message will appear.

**HOOVER INTER@CT
WELCOME 11:06**

This message is displayed for a short time while the machine recognises which programme has been selected. When the machine is ready, the programme details will appear on the display and from here you may now begin programming the machine.

Example

**1 WHITE COTTON
90° HEAVY 1600 RPM**

Enter the Menu

Prior to entering the Inter@ct menu please note you have 30 seconds per operation to make your selection. Should you run out of time the display will return to the start screen, and you simply have to re-enter the Inter@ct menu at continue with the programming.

From this stage the menu can be programmed. Hold down the “Express Wash” and the “Extra Rinse” buttons together for 5 seconds or until the beep sounds.

The menu options can be changed by pressing the “Extra Rinse” button.

To confirm and enter an option press the “Express Wash” button.

Setting the language (default setting – ENGLISH)

Your washing machine is automatically set to English. If you require another language (it is this language you will read when utilising the machine) follow this procedure:

Hold down the “Express Wash” and the “Extra Rinse” buttons together for 5 seconds or until the beep sounds to enter the Menu selection the display will then ask you to choose the desired language.

Release the “Extra Rinse” and “Express Wash” buttons and scroll through the language options by pressing the “Extra Rinse” button until you reach the language of your choice. Release the “Extra Rinse” button and press the “Express Wash” button to enter your selection.

When you have entered your chosen language, the display will then ask for the "Time-mode" to be set.

Setting the time mode (default setting – ABSOLUTE)

There are two ways to select the time mode.

The first is if you wish programme end or delay start to be programmed by starting the actual time you want the programme to end or begin, e.g., programme to end 08.00. This is called Absolute Time Mode. When utilising the programme end function (or start delay), an example can be seen below when the Absolute Time Mode has been selected in the menu set-up stage.

PROGRAMME END
08.00 14:00

Therefore, when setting the Programme end time the programme (as shown above) will end at 08.00.

The second is if you wish programme end time or delay start to be programmed by adding hours; e.g., programme to end in 1¹/₂ hours. This is called Relative Time Mode. When utilising the programme end function (or start delay) an example can be seen below when Relative Time Mode has been selected in the menu set-up stage.

PROGRAMME END
BY 1H 30M 14:00

Therefore, when setting the Programme end time the programme (as shown above) will end at 15:30.

 
Both options are very useful, but we feel that the Absolute Time Mode will be more beneficial and easier to use since there will be no need to calculate how many hours you will need to leave before you want the machine to end or start.

On reaching the set time mode you will be asked if you would like to select "Relative" time or – by scrolling through using the "Extra Rinse" button – "Absolute" time. Enter the preferred setting by pressing the "Express Wash" button.

When you have entered your preferred time-mode, the display will then ask for the Enable Final Beeping to be set.

Enable Final Beeping (default setting – YES)

Here you have the option to have a beeping alarm to let you know the wash cycle has finished. By pressing the "Extra Rinse" button you can scroll through the "yes" and "no" options.



To enter your selection press the “Express Wash” button and the screen will then move to the next stage and ask you to “Set New Time”

Set New Time

This function needs to be set for two reasons – firstly to display the current time of day on the screen and secondly for the programme end/delay start settings to work correctly.

You will notice in the display window that the hours on the clock will be flashing. Set the hours by continually pressing the “Extra Rinse” button and then press the “Express Wash” button to enter the hour. Next the minutes on the clock will begin to flash, again press the “Extra rinse” button until the required minutes are displayed and press “Express Wash” to input the selection.

When you have Set the New Time, the display will then ask if you wish to “Enable Memory”.

Enable Memory (default setting – NO)

This is a useful feature if you frequently wash laundry using the same programme. Selecting “Enable Memory” will tell the machine to remember the last programme/ functions used and set them in the memory. This function works only on cottons, delicates, synthetics and woollens programme. The memory does not retain settings within the special programme group.

 
Select “Yes” or “No” to this option by using the “Extra Rinse” and “Express Wash” buttons.

The display will then shown a message that asks if you require demo mode to be set. Please set this option to “No” if not done so already – as this is for SERVICE use only. If the demo mode option is not set on ‘NO’ when exiting the Inter@ct menu the wash programme WILL NOT commence. Demo Mode must be set at ‘NO’ for the wash cycle to commence. On entering “NO” via the “Express Wash” button you will then be asked if you wish to “Exit Menu”.

Exit Menu

If you are happy with the settings you have selected, you can now exit the menu by selecting “Yes” via the “Extra Rinse” and “Express Wash” buttons.

However, if you are not happy with any of the settings selected you must select “No” to the exit menu command and you can then commence the programming from the beginning. By pressing the “Express Wash” button you are able to enter and bypass each option individually until you reach the option you would like to re-set.



When you are completely satisfied with your menu selection, you may exit the menu and testing of the installation may now commence.

If, after the initial installation you may want to change of any of the menu at a later date, again run through the menu options from the beginning and change the options you want to reset. This may be useful to change the "Set New Time" when the clocks go forward or back.

Once set, the menu options will remain in the memory of the machine even if the machine is unplugged or if a power cut occurs.

DESCRIPTION OF CONTROLS

All of the buttons and dials on the washing machine control panel are listed below.

 
When you have selected the desired programme and any option buttons, the information you have selected will appear on the screen in the Inter@ct display panel.

When programmes and option buttons are compatible a bleeping sound will be heard and the light above the option button selected remain illuminated. If you select an option button that is not compatible with the programme you require (e.g. if you choose a cottons wash programme and try to select "Fast Iron" button) a buzzing sound will be heard and the button light will not illuminate. To select an option button press it once; to deselect an option button, press it again.

Carefully read the relevant descriptions detailed below:

Programme Selector Dial

Note: Do not press the start/pause button before selecting the programme. If this does happen, cancel the programme (that you have set accidentally) by pressing the start/pause button for five seconds (See programme cancelled description).



When you turn the programme selector dial and after the welcome message has disappeared, you will see a display showing the following details:

Reading from left to right:

1. The programme number
2. The programme name
3. The wash temperature
4. The degree of soiling (how dirty the wash load is)
5. The spin speed

Example:

**1 WHITE COTTON
90° HEAVY 1600 RPM**

Start/Pause Button

START

To start a programme press this button once. The door locked light will illuminate. The machine will now be sensing the wash load and ask you to please wait –

Example

**SETTING WASHING
PARAMETERS: PLS WAIT.**

The Inter@ct panel will then display the time to complete the programme and then the wash cycle will commence. Inter@ct calculates the time to the end of the selected programme based upon a standard 5 Kg load, during the cycle, Inter@ct corrects the time to that applicable to the size and composition of the load..

Example:

**TIME TO END 1H:50M
COLD PREWASH 19:30**

This display also shows the current phase of the cycle (eg, Currently in cold prewash) and in the bottom right hand corner, the current time is displayed.

 
This display will change throughout the wash programme as the cycle develops.

PAUSE

The programme may be paused at any time during the wash cycle by holding down the Start/Pause button for about two seconds and a beep will sound. A message will appear on the display to inform you that the programme has been paused. To restart the programme press the Start/Pause button once again. The display will inform you that the programme will continue.

Example:

**COLOURFAST COTTON
PROGRAMME PAUSED**



CANCEL

To cancel the programme the Start/Pause button must be pressed down for 5 seconds until the beep sounds. The display will inform you that the display has been paused and has then been cancelled.

Example:

PROGRAMME CANCELLED

Door open button:

A special safety device prevents the door from being operated immediately after the end of the cycle. "Door locked" indicator light is illuminated when the door is fully closed. Wait for 2 minutes after the wash cycle has finished before opening the door. The door locked neon will go out and the door may be opened. As a safety measure check that there is not water evident in the drum.

6kg Wash Button

This option can only be utilised for cotton programmes. Hoover has designed a special wash boost system specially for 6kg loads - by selecting the 6 kg option button, the volume of water within the selected wash cycle and the length of time of the programme is increased to improve the wash performance for the bigger load.

Express Wash button

This option can be utilised on cotton and synthetic programmes. By selecting the express wash option, the wash time may be reduced by up to 50 minutes, depending on the programme selected.

Pre-Wash button

 
This option is particularly useful for heavily soiled loads and can be used before selecting the main wash programme. Detergent for this programme should be added to the first compartment of the soap drawer labelled "I" (Please refer to Detergent Drawer Section of manual). We recommend you use only 20% of the recommended quantities shown on the detergent pack and fabric conditioner should not be used for this programme.

Extra Rinse Button

This option adds more water at the rinsing stage. This can help prevent skin irritation from detergent residue for people with particularly sensitive skin. Selecting the Extra rinse button is also recommended when washing heavily soiled fabrics which needs a lot of detergent, or when the wash load contains towelling fabrics that have a greater tendency to retain detergent.

Select Spin

On selecting the wash programme the display will inform you of the maximum spin speed permitted for that programme. By repeatedly pressing the select spin button the speed will decrease by increments of 100 rpm. The minimum speed permitted is 400 rpm, or by



continuously pressing the select spin option the spin may be cancelled if desired. On selecting the required spin speed the display will then inform you of the chosen programme, its temperature and the newly selected spin speed.

Programme Lock

This is a useful feature to prevent children playing with the option buttons and tampering with the programme you have set.

After you have set the programme and option buttons you require, press programme lock and then press start. This “locks” the control panel.

You may cancel this function by pressing the programme lock button briefly until you see the light above the button flash. While this light is flashing, press the “Fast Iron” button – the display will inform you that the options are no longer locked and further changes can now be made.

Set Programme End Time/Delay Start

The programme end time/delay start options can be used if you want the washing to be ready at a later time (but within 24 hours).

1. Set delay start

Press delay start/set end time button once and press the hours and minutes buttons (to the left and right) until the required time is set. The display returns to the programme option if the button is pressed within 5 seconds.

To cancel delay start, hold down the button for 5 seconds.

 
2. Programme end time

 
Press delay start/set end time button twice and press the hours and minutes buttons (to the left and right) until the required time is set. When entering the programme end option, the display will show the minimum time which you can set the programme to end by. This time may only be extended as you require.

NOTE: When using the delay start/set end time functions, only use detergents and laundry also via the dispenser drawer. Adding detergents etc. to the drum and then leaving them to stand for long period of time may damage your laundry.

Fast Iron Button

This option is available on Synthetics, Dedicates, Woollens and some Special Programmes (programmes 12-29). When this option is selected for Dedicates, Woollens or Handwash programmes the machine will stop and the load will be held within the water in the drum. This reduces the creasing thus enabling easier ironing. To continue with the wash cycle the Fast Iron button must be pressed and the programme will re-start. With the Fast Iron option selected within the synthetics cycle the programme is completed by a short, very low speed spin. The laundry may be left in the drum in this condition without the risk of excessive creasing. If a spin cycle is required select the appropriate spin (see Programme Guide) and then remove the laundry on completion of the programme.






Note: this model is fitted with an electronic “sensor” device that checks the load is balanced correctly. If the load is slightly unbalanced the machine will re-balance it automatically to then carry out the normal spin. If, after several attempts, balance is not restored a reduced spin speed will be used. If loads are seriously unbalanced the spin stage will be cancelled. This helps limit vibration, reduce noise and improve the washing machine’s reliability and life.

Detergent drawer


The detergent draw is split into 3 compartments:

- the first, labelled “I”, is for detergent utilised during Prewash or Speed Wash.
- the second, labelled “II”, is for detergent utilised during the main wash.
- the third, labelled “☼” is for special additives, fabric softeners, fragrances, starch, brighteners etc.

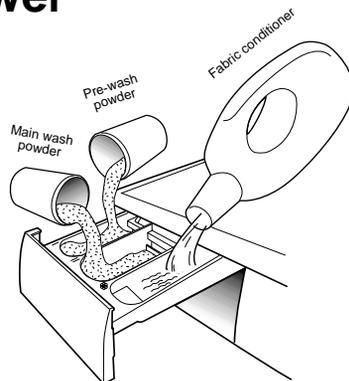

Note: some forms of detergents are difficult to dispense from the drawer e.g. concentrated powders. For these, we recommend you use the recommended dispenser which is placed inside the drum.

 This ensures that the liquid detergent is dispersed in the drum only when needed.



The machine is programmed to automatically take up additives during the final rinse stage for all wash cycles.

Note: only put special additives, fabric softeners, fragrances, starch, brighteners, etc., in the third compartment.

Detergents, washing aids and amounts to use

Choice of detergent

General purpose detergents

- **Powder detergents**, for a thorough wash, with bleaching agents, are particularly suitable for use in hot wash programmes (60°C and over), for heavily soiled and stained laundry.
- **Liquid detergents**, are particularly suitable for grease stains, such as greasy skin marks, cosmetics and oil.
These detergents are not suitable for washing stained laundry, as they do not contain bleach.
- **Biological detergents**, not all the products available give a really thorough

Special detergents

- **Detergents for coloureds and delicates**, without added bleach, also often without any optical brightening agents, to preserve the colour.
- **Detergents for a thorough wash**, without added bleach or enzymes, particularly suitable for handling woollen fibres.
- **Detergents for curtains** with optical brightening agents, resistant to light, to prevent yellowing from sunlight.
- **Special detergents** for programmed use of chemical substances, depending on fabric type, degree of soiling and water hardness.
Here basic detergents, softeners, bleaches/stain removers can be added separately.

Additional laundry aids

- **Water softener**, means less detergent can be used where water hardness is classed as hard to very hard.
- **Prewash substances**, for the programmed treatment of stains prior to the main wash.
Using them means the subsequent wash can be at a low temperature or with bleach-free detergents.

-
- **Fabric softener**, prevents static build-up in synthetic fabrics and softens fabrics.

If you own a tumble dryer, clothes are softened even without the use of a fabric softener.

Do not put solvents in the washing machine!

Keep detergents and other laundry products out of children's reach.

Before pouring in the detergent check that there are no foreign bodies in the detergent drawer.

Dosage details are usually shown on the detergent packaging. Follow those instructions!.

Dosages

Only use detergents which are suitable for use in a washing machine.

You will obtain the best results from your wash with the minimum use of chemical products and the best care for your laundry if you take into consideration the degree of soiling as well as the type of detergent to choose.

The amount of detergent to use depends on:

- water hardness, depending on the hardness of the water and the type of detergent used, it is possible to reduce the amount of detergent. The softer the water supply, the less detergent is required.
- the degree of soiling, it is possible to reduce the amount of detergent used depending on the degree of soiling. Use less detergent for less soiled items.
- amount of laundry, it is possible to reduce the amount of detergent when washing only a small amount of laundry. For smaller loads use less detergent.

The amounts shown on pack for detergents for washing delicates often already refer to a reduced wash size.

Follow the dosage instructions!

Dosage for powder detergent

For normal and low concentration detergents: for normally soiled laundry choose a programme without prewash.

Put the detergent in compartment II of the drawer.

For heavily soiled laundry, choose a programme with prewash.

Put 1/4 of the detergent in compartment I, 3/4 in compartment II of the drawer.

When using water softeners, first put in the detergent, then add the softener to compartment II.

For highly concentrated detergents not in single dose format, follow exactly what is shown on pack with regards to type and amount of dosage.

To avoid the difficulty of checking if the detergent has been taken up, use the dosage aids provided in the detergent packaging.

Liquid detergent dosage

Liquid detergents may be used in accordance with the instructions on the relevant packaging, for all programmes without prewash, by using the recommended dispenser which is placed in the drum.

Programme selector

The washing machine has 5 different programme groups according to type of wash, temperature, spin speeds and duration for handling the various types of fabric and their level of soiling (see wash programme guide on page 25/26).

1. COTTONS

The programmes are designed for maximum washing and rinsing. With spin cycles in between, they guarantee the laundry is rinsed perfectly. The final spin cycle ensures laundry is spun dry as much as possible up to the maximum speed.

2. SYNTHETICS and mixed fabrics

Washing and rinsing performance is optimised through drum rotation speeds and water levels. The delicate action spin (at 400 rpm) minimises creasing.

 
3. DELICATES

This is a new concept in washing, with a cycle that comprises of alternate periods of activity and pauses, particularly suitable for washing very delicate fabrics, such as Pure New Wool.

Wash and rinsing are carried out using a high water level to provide the best results.

4. WOOLLENS

The programmes are designed for maximum washing at the temperature most suitable to your woollen garments and their degree of soiling. Always read the wash advice label for the most suitable temperature.



5. SPECIAL PROGRAMMES – 29 minute Speed Wash, Handwash and Sportswear

SPEED WASH

This washing machine also has a SPEED WASH programme option (Programme 26). This programme allows a complete washing cycle to be carried out in approximately 29 minutes, with a maximum load of 2kg and is recommended for lightly soiled items. When selecting the Speed Wash programme, please note that we recommend you use only 20% of the recommended quantities shown on the detergent pack. The detergent should be placed in the pre-wash compartment labelled "I". Do not use fabric conditioner with this programme.

HAND WASH

This washing machine also has a gentle Hand Wash programme cycle (programme 25). This programme allows a complete washing cycle for garments specified as 'Hand Wash only' on the fabric care label.

The programme has a maximum temperature of 30°C and concludes with 2 rinses, one for fabric conditioner and a slow spin.

 
SPORTSWEAR

 
The washing machine has a unique Sportswear programme (programme 24).

It is specially designed to wash mixed sportswear fabrics that cannot be washed on hotter programmes and is designed to remove the soiled and staining created by participation in sports activities.

This programme starts with a cold prewash that breaks down and loosens any excess dirt and then washes at a cool 30°C, rinses twice (once is for fabric conditioner) and spins slowly for the best care of your heavily soiled, delicate garments.

Hoover has given sports items their own wash care programme.





Auto half load

The washing machine is fitted with a self adjusting water level system. This system enables the machine to use the optimum amount of water needed to wash and rinse the laundry in relation to the particular load. This results in a reduction of the water and electricity used without in any way compromising the washing and rinsing performance.

In fact, the amount of water and electricity used will always be appropriate for the clothes load.

The washing machine automatically ensures excellent washing results at minimum cost whilst respecting the environment.

Sorting the laundry

- It is recommended you wash only items which are washable with water and detergent and not dry-clean items.
- If you need to wash rugs, bedspreads or other heavy items, it is best not to spin them.
- Sort the laundry according to fabric type, degree of soiling and wash temperature: follow the labelling on the garments.

Examples:

Laundry for hot wash 

Coloured, easy-care materials   

Delicates and wool 

- Items labelled with the following symbols are not suitable for machine washing:

Dry clean

For very delicate items, such as net curtains, underwear, tights etc., you are advised to use a laundry net or wash bag.

 
- Woollen items must be labelled with the “Pure New Wool” symbol if they are to be washed in the machine, and must also be labelled “non-matting” or “machine washable”. Please check the laundry item for the label.
- Colour often leaks from new coloured items.

This can then colour other lighter items being washed.

We therefore recommend that coloured items should be washed for the first time separately .


For future washes, non colourfast items can only be washed with white laundry up to 40°C.

Do not wash 



Note: when sorting laundry

- check there are no metal objects in the laundry (such as paper clips, safety pins, pins, coins etc...); In the event of a machine failure during the warranty period and foreign objects are found to be the cause of the failure a labour charge may be made for the call out of an engineer.
- button up pillowcases, fasten zips, hook & eye fasteners, belts and long dressing gown cords;
- remove curtain hooks;
- pay close attention to the labels on items
- if you notice stubborn stains whilst sorting the laundry, remove them using a special detergent or a special stain remover.

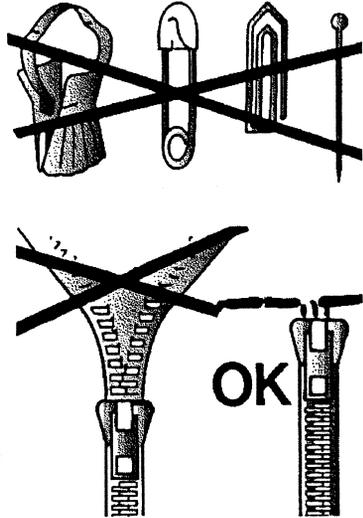

- We do not recommend washing a full load of just towelling items as they absorb a lot of water and may become too heavy for the drum.

The correct way to wash**Preparing the laundry**


- A) Select and sort the laundry according to the wash care labels found on each garment. Always check the care labels.

Loading the laundry

- B) Open the door.
- C) Put the laundry in the washing machine . Close the door again, ensuring that no items of laundry are obstructing the lock or door seal.

Putting detergent in machine

- D) Open the drawer, choose the detergent and put in the correct amount, according to the manufacturer's instructions and the detergent advice on page 19. Add any other laundry aids (see page 20). Close the drawer again. Liquid detergents that are to be placed directly into the drum should use the recommended dispensing device.

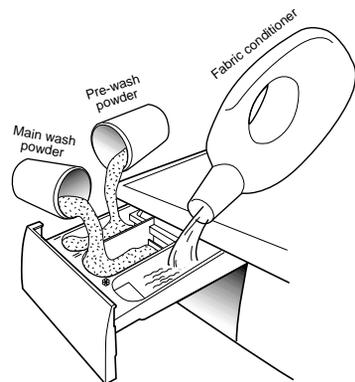



Selecting the wash programme

Refer to the programme guide or the programme descriptions on the front of the machine to select the most suitable programme.

The programme is selected by turning the programme selector clockwise and aligning the programme number with the indicator.

Check that the tap is turned on and that the discharge hose is positioned correctly.

 
 
 
Press additional function buttons if you require.

Press the start button. The door locked indicator illuminates and the programme will begin.

When the programme has finished:

- the door lock neon is lit and the display will read “DOOR LOCK ACTIVATED PLEASE WAIT TO OPEN”.
- the door lock neon goes out (door lock released) and the display will read “PROGRAMME COMPLETE UNLOAD THE LAUNDRY”.
- Switch off the machine by turning the control knob to the off position.
- Open the door and remove the laundry.

Disconnect the plug from the mains power supply and turn off the water supply after every use.



Water and electricity consumption and approximate length of programmes selected

| Program | Water consumption in litres | Electricity consumption kWh | Duration in mins* |
|---------------------------------|-----------------------------|-----------------------------|-------------------|
| Whites normal 90°C, full load | 58 | 2.0 | 120 |
| Coloureds fast 60°C, full load | 53 | 0.95 | 130 |
| Coloureds non-fast 3.5 kg load | 50 | 0.55 | 85 |
| Mixed fabrics 60°C; 2.0 kg load | 40 | 0.70 | 75 |
| Delicates 40°C; 2.0 kg load | 60 | 0.60 | 52 |
| Wool 40°C; 2.00 kg load | 40 | 0.40 | 40 |

The above results are based upon cold fill water (15°C) and maximum load capacities.

* Programme length is variable depending on the type of fabric in the loads, the weight of the load, the temperature and pressure of the water as it enters the machine. However, on selection of your programme the time duration will be displayed on the screen. During the cycle the Inter@ct corrects the time to that applicable to the size and composition of the load.

Programme guide

| PROGRAMME | | FABRIC TYPE | PROGRAMME FOR | LOAD | WATER TEMP °C | DETERGENT | | | |
|-----------|---|-----------------------|--|--|---------------|-----------|----|---|---|
| | | | | | | I | II |  | |
| 1 |  | Whites | Colourfast fabrics Cotton, linen, hemp | Intensive - heavily soiled | 5 up to 6 | 90° | * | * | * |
| 2 |  | Coloureds Fast | Cotton, mixed fabrics Colour Fast | Intensive - heavily soiled | 5 up to 6 | 60° | | * | * |
| 3 |  | Coloureds Fast | Cotton, mixed fabrics Colour Fast | Intensive - heavily soiled | 5 up to 6 | 50° | | * | * |
| 4 |  | Coloureds Fast | Cotton, mixed fabrics Colours Fast | Intensive - heavily soiled | 5 up to 6 | 40° | | * | * |
| 5 |  | Coloureds Fast | Cotton, mixed fabrics Colour Fast | Normal-Light soiling | 5 up to 6 | 60° | | * | * |
| 6 |  | Coloureds Fast | Cotton, mixed fabrics Colour Fast | Normal-Light soiling | 5 up to 6 | 50° | | * | * |
| 7 |  | Coloureds Non Fast | Cotton, mixed fabrics Coloureds Non Fast | Normal-Light soiling | 5 up to 6 | 40° | | * | * |
| 8 |  | Coloureds Non Fast | Cotton, mixed fabrics Coloureds Non Fast | Normal-Light soiling | 5 up to 6 | 30° | | * | * |
| 9 |  | Coloureds Non Fast | Cotton, mixed fabrics Coloureds Non Fast | Lightly soiled - delicate coloureds | 5 up to 6 | 40° | | * | * |
| 10 |  | Coloureds Non Fast | Cotton, mixed fabrics Coloureds Non Fast | Lightly soiled - delicate coloureds | 5 up to 6 | 30° | | * | * |
| 11 |  | Coloureds Non Fast | Cotton, mixed fabrics Coloureds Non Fast | Lightly soiled - delicate coloureds | 5 up to 6 | 15° | | * | * |
| 12 |  | Mixed Fabrics | Mixed synthetic fabrics Colour Fast mixed fabrics | Heavily soiling | 2.5 | 60° | | * | * |
| 13 |  | Coloureds | Mixed fabrics, Cotton, synthetics | Heavily soiling | 2.5 | 50° | | * | * |
| 14 |  | Coloureds | Mixed fabrics Cotton, synthetics | Heavily soiling | 2.5 | 40° | | * | * |
| 15 |  | Acrylics | Synthetics (Nylon) Coloured mixed fabrics | Normal-Light soiling | 2.5 | 40° | | * | * |

Programme guide

| PROGRAMME | | FABRIC TYPE | PROGRAMME FOR | LOAD | WATER TEMP °C | DETERGENT | | | |
|-----------|---|-------------------|---|---|---------------|---------------|----|---|---|
| | | | | | | I | II |  | |
| 16 |  | Acrylics | Synthetics (Nylon) Coloured mixed fabrics | Normal - Light soiling | 2.5 | 30° | | * | * |
| 17 |  | Acrylics | Synthetics (Nylon) Coloured mixed fabrics | Normal - Lighty soiling | 2.5 | 15° (cold) | | * | * |
| 18 |  | Delicates | Delicates Synthetics & mixed fabrics | Light soiling Delicate fabrics | 2.5 | 40° | | * | * |
| 19 |  | Delicates | Delicates Synthetics & mixed fabrics | Light soiling Delicate fabrics | 2.5 | 30° | | * | * |
| 20 |  | Delicates | Delicates Synthetics & mixed fabrics | Light soiling | 2.5 | 15° (Cold) | | * | * |
| 21 |  | Woollens | Machine washable Wool  , very delicate fabrics, synthetic knits | Normal soiling | 2 | 40° | | * | * |
| 22 |  | Woollens | | Light soiling | 2 | 30° | | * | * |
| 23 |  | Woollens | | Light soiling | 2 | 15° (Cold) | | * | * |
| 24 |  | Sportswear | Mixed fabrics | Thorough wash for small loads | 2 | 30° | | * | * |
| 25 |  | Hand Wash | Mixed fabrics "Hand Wash only" garments | Hand washing of delicate garments | 2 | 30° | | * | * |
| 26 |  | Speed Wash | Mixed fabrics | Rapid wash for lightly soiled garments | 2 | 50° | * | | |
| 27 | - | Woollens Rinse | Mixed fabrics | Woollens rinse | 2 | - | | * | * |
| 28 | - | Rinse Spin | Mixed fabrics | Rinse & Spin | 2 | - | | | * |
| 29 | - | Spin | Mixed fabrics | High Speed Spin | 2 | - | | | |

Points to consider:

When washing heavily soiled laundry it is recommended the load is reduced by about 1-1.5 kg. By doing so the laundry is allowed to circulate more freely.

Energy label data based on programme 3 tested in accordance with EN60456.

Cleaning and routine maintenance


Do not use alcohol-based scourers and /or thinners on the outside of your washing machine, just a wipe with a damp cloth will suffice. The washing machine needs very little maintenance:

- Cleaning the drawer compartments.
- Cleaning the filter.

Cleaning the drawer

Clean the compartments occasionally to remove detergents and additives.

- A) To do this you just need to pull the drawer out firmly from the machine, but without forcing it.
- B) Clean the compartments and the coloured syphon cap under running water.
- C) Replace the drawer.

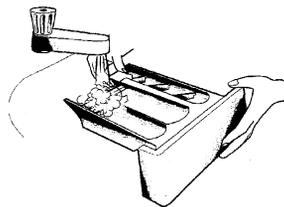

Cleaning the filter


The washing machine is fitted with a special filter to prevent items such as coins, buttons, etc. blocking the discharge hose. These may be retrieved by:

1. Removing the kickplate by gently pulling it from the bottom in an outwards and upwards direction.
2. Use the kickplate to collect the water still in the filter.
3. Use a screwdriver to loosen the screw holding the filter, turn the filter anticlockwise until it stops, remove it and clean it.

After cleaning it, reassemble following the above instructions in reverse order.

Replace the kickplate.

We recommend that the filter be cleaned frequently, at least once a month.

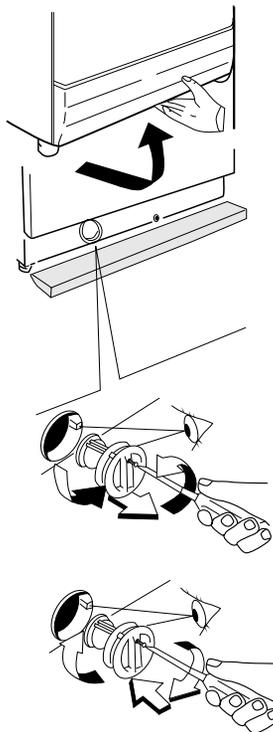


Transporting or storing the appliance for long periods when appliance is not in use

If the appliance is being transported or is out of use for long periods in unheated places, all remaining water must be completely removed from all hoses.

Ensure mains power plug is disconnected, then unclip the discharge hose and lower it into a basin on the floor until all the water has emptied out.

When transporting the appliance refit the transit bracket, central screw and side screws.

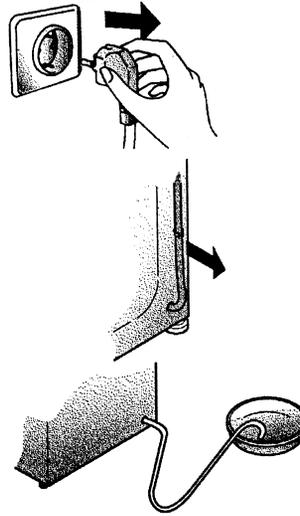

Trouble shooting

What might be the cause of...

Defects you can remedy yourself

Before calling GIAS Service for technical advice please run through the following checklist. A charge will be made if the machine is found to be working or has been installed incorrectly or used incorrectly. If the problem persists after completing the recommended checks, please call the GIAS Service (tel: 08705 400 600), they may be able to assist you over the telephone.

| PROBLEM | CAUSE | REMEDY |
|--|--|--|
| 1. Does not work on any programme | Plug not in socket. Not switched on. Power failure. Fuse blown. Door open. RCD tripped (trip switch) Has the Delay start been set. | Plug it in. Switch on. Check and refer to 'Power Failure' section. Check. Close door. Reset RCD. Check |
| 2. Does not fill with water | See cause 1. Water supply turned off. Programme selector not correctly positioned. | Check. Turn on water supply. Position programme selector correctly. |
| 3. Water does not drain away | Kink in discharge hose. Foreign bodies in filter. The machine has been plumbed in incorrectly. | Straighten discharge hose. See 'Cleaning and maintenance' section. Check installation. |
| 4. Water on floor around the washing machine | Leaking gasket between tap and water inlet hose. Strand of clothing or dirt between door rubber gasket and door glass. Incorrect plumbing. | Replace gasket and tighten connection. Re-load the machine and keep rubber door gasket/door glass clean. Check plumbing. |
| 5. Does not spin | Water has not yet drained away. 'Spin Cancel' option selected (certain models only). Unbalanced load. | Wait a few minutes for machine to empty. Check. Rearrange load evenly. |
| 6. Machine vibrates a lot during spin | Washing machine not completely level. Load not distributed evenly. Transit brackets not removed. | Adjust the special adjustable feet. Rearrange the laundry evenly. Remove transit brackets. See 'Installation' section). |
| 7. Door will not open | Two minutes have not elapsed since the programme finished. | Wait two minutes. |
| 8. Display reads error: 0,1,5,7,8,9 | — | Call service. |
| 9. Display reads error 2 | No water fill. | Check water supplies are on. |
| 10. Display reads error 3 | No pump out. | Check drain is clear. Check drain hose is not kinked. |
| 11. Display reads error 4 | Machine overfilled with water. | Turn off water supply to machine. Call service. |

It is unlikely that water will be visible in the drum! This is due to the latest technology that achieves the same standard of washing and rinsing but with far less water consumption.

Note:

The use of environmentally-friendly, phosphate-free detergents (check detergent information on pack) can have the following effects:

- waste water from rinsing may be cloudier because of the presence of a white powder (zeolites) held in suspension, without the rinse performance being adversely affected;
- presence of white powder on laundry after washing, which is not absorbed by the fabric and does not alter the colour of the fabric.
- The presence of foam in the final rinsing water is not necessarily an indication of poor rinsing.
- Carrying out more rinse cycles does not serve any purpose in such cases.

Power failure

If there is a power failure the wash cycle will be interrupted, the wash programme and functions will be suspended.

When the power is restored, the wash programme and functions will re-start from the same point and complete the programme.

The load can be removed from the machine during a power failure as follows:

The water can be drained from the machine by:

1. Switch off the machine by the control knob and at the mains power supply. Remove the plug from the mains power supply socket.
2. Carefully move the machine so the rear of the machine is accessible. Please follow the safety precautions which we recommend under the 'safety notes' section of this manual.
3. Unclip the drain hose from the rear panel of the machine and lower the hose into a bowl on the floor.

Important: the water may be very hot!

When the bowl is full raise the end of the drain pipe to a height higher than the top of the appliance to stop the flow of water. Empty and replace the bowl and continue draining the machine until empty.

4. Once the machine is fully drained of water, clip the hose to the rear of the machine. Press the door open button and remove the load.

The door can be opened approximately 2 minutes after the power failure by simply pressing the door open button. Do not force open the door.

Important: the water and the load may be very hot!

| Technical data | |
|----------------------------|--|
| ● Max. load of dry laundry | 5kg (6kg when option is selected) |
| ● Water pressure | (0.5-10 bar) 0.05-1 MPa |
| ● Spin speed | max. 1300 rpm (AI 130) 1400 rpm (AAA 140) 1600 rpm (AAA 160) |
| Measurements | |
| ● Width | 60cm |
| ● Depth | 60cm |
| ● Height | 85cm |

NB: For specifications regarding electrical data, see the data plate on the front of the washing machine (door area). You will also need to refer to the information on the data plate should you need to contact the GIAS Service for any advice.

Customer Service

The appliance is covered by a certificate of guarantee which allows you free use of the Hoover Technical Support Service (termed GIAS tel: 08705 400 600), except for the price of the call, for a period of one year from the date of purchase. Remember to send off the guarantee certificate for validation within 10 days of the date of purchase.

You should retain the receipt issued by the retailer when you purchased the machine to show to the call out engineer, should you need to consult one.

If your washing machine shows signs of a defect or is not working properly, before you contact GIAS Service we recommend you carry out the checks detailed on page 32 within the Trouble shooting section.

If the problem with the machine persists after completing all the recommended checks, please dial the GIAS Service number on the rear cover of this manual.

 
For the cost of a telephone call, you will be connected directly to GIAS. It is important you tell the GIAS advisor your product's model number and serial number, which you will find on the rating label (16 characters, beginning with the number 3), found on the front of the washing machine (door area). By doing this, your enquiry will be responded to more efficiently.

Your Guarantee

Hoover guarantees all parts of this product for 5 years from the date of purchase. During that time Hoover will replace or repair all defective parts free of charge, except for parts subject to fair wear and tear such as belts. The call out fee and labour costs are chargeable after the first 12 months. To qualify for benefits under the guarantee, you must be able to provide proof of date of purchase and the appliance must have been installed and used in accordance with the instructions described in this manual. Consequential losses and accidental damage to the machine is not covered by the guarantee.

Hoover cannot be responsible for the results of using this machine for any purposes other than those described in this manual.

This guarantee does not effect your statutory or common law rights.



For service and repairs please call our national number:

Hoover Technical - Tel:08705 400 600
Support Service [Eire 018301 666]

Always use genuine Hoover spares, available direct from GIAS Service:

Hoover Spares Service
Tel : 01204 556111

Hoovercare

To maintain your Hoover product in peak condition you may wish to take out a Hoovercare policy, which for an annual payment provides a comprehensive maintenance and repair scheme. For more information please call 08705 400 600.

The Hoovercare scheme is not available in Eire.

