

A) OPERATION

Telephone Settings

Before resetting the phone, please ensure the HANDS-FREE key is off (when the year, e.g. 2005, is shown above the keypad on the LCD screen).

- Press DELETE key to show the LCD in normal view.
- Press SET/SAVE key to enter setting mode.
- Press UP or DOWN to select function settings.
- Press SET/SAVE to confirm the desired function setting.
- Press UP or DOWN key to adjust the blinking setting to the correct value.
- Press SET/SAVE to save the desired value and toggle to the next setting.
- LCD-screen will return to normal view after 10 seconds of inactivity.
- Press DELETE to return to normal view.

1. Year/Month/Day/Time

Press SET/SAVE, "Set 1 Date" will appear on the LCD screen; press SET/SAVE again to confirm this mode. The year, e.g. 2003 will blink, press UP or DOWN to adjust the value. Press SET/SAVE to confirm, then it will toggle to month and blink. Repeat the same steps for month, day, 12/24 HR and time.

Step 1 - adjust blinking value using UP or DOWN buttons

Step 2 - confirm value by pressing SET/SAVE

Press DELETE to exit.

2. Local Area Code

This function is for this phone to recognize your pre-set local area code from the incoming calls. Local incoming calls phone number (without the area code) will appear and it enables the phone to perform redial function without the area code.

Press SET/SAVE, press UP to select "Set 2 Code". Confirm this mode by pressing SET/SAVE again. Screen will show "Code 1--". The blinking bar is available to be adjusted by pressing the UP or DOWN key. Press SET/SAVE to confirm and toggle to the next blinking bar and so on. Press DELETE key twice to return to LCD normal view.

3. Flash Time

This function allows this phone to follow your local telephone exchange hang up speed of the telephone line.

Press SET/SAVE, press UP to select "Set 3 Flash". Confirm this mode by pressing SET/SAVE again. Screen will show default setting at 600ms. Press UP or DOWN to select from: 1000ms, 600ms, 300ms and 100ms. Press SET/SAVE to confirm your selected setting.

4. Auto IP

Not applicable in the U.S.A. or U.K. market.

5. IP Number

Not applicable in the U.S.A. or U.K. market.

6. LCD Brightness

Press SET/SAVE, press UP to select "Set 6 LCD". Confirm this mode by pressing SET/SAVE again. Screen will show "LCD 1" and press UP or DOWN to select from Level 1 to 5 (brightest). Press SET/SAVE to confirm your selected setting.

7. Pause Time

This function allows this phone to skip the recorded messages in a phone call and can directly press the desired extension number after pressing "PAUSE". The Pause Time setting should follow your local telephone exchange system and will work only if it is available.

Press SET/SAVE, press UP to select "Set 7 PAUSE". Confirm this mode by pressing SET/SAVE again. Screen will show PAUSE & flashing "4.0" seconds (default setting). Press UP or DOWN to select from 0.5 to 4.0 seconds (at 0.5 second increment). Press SET/SAVE to confirm your selected setting.

B) FUNCTION KEYS

1. Incoming Call Number Review

Use UP or DOWN to review the incoming call numbers. Press DELETE will erase the phone number showing on the screen. Pressing DELETE key for over 2 seconds will delete all reviewed phone numbers.

2. Dialed Number Review

Press DIALED key to enter into dialed number reviewing mode; press UP or DOWN to review the dialed numbers. Press DELETE will erase the phone number showing on the screen. Pressing DELETE key for over 2 seconds will delete all reviewed numbers.

3. Set & Review VIP Incoming Number

This function allows the phone to save incoming calls phone number from very important people (VIP) and will not be deleted easily. When viewing the incoming phone numbers, press SET/SAVE to save this number as VIP number. To delete, press SET/SAVE again to erase this it. Press VIP key to view the VIP phone numbers, use UP or DOWN to select.

4. Redial

When viewing the incoming phone numbers or dialed numbers, press "REDIAL" to dial the selected number immediately in hands-free mode.

5. 12-digit Calculator

Press AC to use the calculation function. Press DELETE to exit and returning to normal viewing.

6. Auto Dial

When the dialed number is busy, press REDIAL after 3 busy beeps to activate automatic dialing function. The telephone will automatically switch to standby mode and AUTO DIAL will appear on the LCD screen, it will automatically redial every 10 seconds until connected. After 10 trials, it will stop redialing. This function is accessible only when using the speakerphone and pressing any key will stop the redialing.

7. Music on Hold

Press HOLD key while the phone is in use will activate Music on Hold function.

8. Save & Speed Dial

You can save up to 10 different telephone numbers using 0 to 9 as speed dial code.

Listen for dial tone using handset or hands free, press SET/SAVE + telephone number (including long distance code and prefix) + SET/SAVE + Speed Dial Code (0-9) to save a speed dial phone number.

Using speed dial to make an outgoing phone call, simply press AC + preset speed dial code (0 - 9).

9. Auto IP and IP Functions

Not applicable in the U.S.A. or U.K. market.

10. Pulse & Tone Dial

Pressing (*) for over 2 seconds, when "TONE DIAL" displays on screen, the telephone is in TONE dialing mode. When "PULSE DIAL" appears, the telephone is in PULSE dialing mode. You can select your preference by pressing (*) while in this mode. Press DELETE to exit and view normal screen.

11. Spy Prevention Function

This function prevents other telephone sets, using the same phone line, to share the line while it is in use. Pressing (#) for over 2 seconds, when "SPI ON" appears on the LCD screen, the pirate prevention function is ON and "SPI OFF" means the pirate prevention function is OFF. You can select your preference by pressing (#) while in this mode. Press DELETE to exit and view normal screen.

12. Loudness Control

Press HANDS-FREE once, and then press DELETE to select the Loudness level from 1 to 4. Press HANDS-FREE to confirm setting. Press DELETE to exit and view normal screen.

13. Nightlight

Slide the switch to ON position to turn on the light. Slide the switch to OFF when not in use to conserve battery power.

***IMPORTANT NOTE:** The nightlight and all LCD screen functions are powered by 3 "AA" batteries (not included), and not by the connected phone line.