

## Catalogue

Catalogue .....	I
Use tips .....	III
Cleaning equipment .....	III
1.Outlook description.....	1
2. Power button usage.....	2
3. Touch screen.....	2
4. Transfer connection .....	2
U Disk.....	2
5. TF card Usage .....	3
Support 32GB memory card .....	3
Cancel TF Card.....	3
6. Start to use .....	3
Battery charging.....	3
Battery management.....	3
Set-up .....	4
Wi-Fi network setting .....	4
3G settings.....	4
7. Desktop.....	6
8. Screen lock interface.....	7
9. Program .....	8
10. Menu.....	10
11. Application program.....	10
Install applications .....	10
Download applications from Internet .....	10
Connect to PC and save files .....	11
Uninstall application .....	11
12. Sound record .....	12
13. Clock.....	12
Alarm clock.....	12
Add new alarm clock .....	13
Disable alarm clock.....	13
Enable Alarm clock.....	13
Edit alarm clock .....	13
Delete alarm clock.....	13
14. Download applications and install.....	14
15. Browser .....	14
16. Calendar.....	15
New activities.....	15
17. Camera.....	15

---

<b>Take photos</b> .....	15
<b>Video recording</b> .....	16
<b>18. Calculator</b> .....	16
<b>19. E-mail</b> .....	16
<b>Add E-mail account</b> .....	16
<b>Inbox</b> .....	17
<b>Open E-mail</b> .....	17
<b>Compose New E-mail</b> .....	17
<b>Edit E-mail account</b> .....	17
<b>Delete E-mail Account</b> .....	18
<b>Sets the default email account</b> .....	18
<b>20. File explorer</b> .....	18
<b>Copy files from computer to tablet PC</b> .....	19
<b>Delete files</b> .....	19
<b>21. Music</b> .....	20
<b>Play music</b> .....	20
<b>Delete pictures and Dynamic switching wallpaper Settings</b> .....	21
<b>25. Local search</b> .....	22
<b>26. Android market</b> .....	22
<b>27. Setting</b> .....	23
<b>Appendix I Frequently Asked Questions</b> .....	25
<b>Appendix II 3G Support List</b> .....	27

## **Use tips**

---

When using your equipment please obey the following basic security matters need attention in order to reduce fire, electric shock and risk of injury.

- Don't let the product itself get wet in the rain or become damp.
- Please keep device away from direct sunlight and heat objects.
- Protect power cable. When connect the power cable, please don't let it be stepped on or above placed items, avoid to be extrusion. Pay special attention to protection of equipment connector.
- Please use the original power adapter for charging, using other charger will cause damage
- Don't dismantle the equipment or repair yourself.

## **Cleaning equipment**

---

Touch the screen gently. To clean the fingerprint or dust on the screen, it is better to use such as camera use soft cloth but not gauze to clear the dust.

## 1.Outlook description

---



## 2. Power button usage

---

**Starting up:** Long press the power button for 3 seconds.

**Power off:** Long press the power button for 3 seconds →click power off → click confirms.

**Screen off and on:** Short press power button to turn off or turn on screen

**Mandatory shutdown:** If the device has no response, long press the power button for 6 seconds to perform mandatory power off.

**Notice:** In case of no necessary conditions, it's better not use mandatory power off. Power off should be performed normally according to the standard steps.

**Reset button:** Press "reset" button to restart the equipment.

## 3. Touch screen

---

According to following user guide, and know how to use touch screen.

**Click:** Click an optional icon on screen as your choice.

**Longer press:** chose one icon and press longer, can drag then show the icon on desktop menu.

**Dragging:** Icons can be put into different screen interfaces by dragging the icon between different screen interfaces.

☆ To protect the screen, please don't put any objects above the screen surface.

## 4. Transfer connection

---

Before using USB device please connect transfer line to computer.



USB data line

### U Disk

Connect U disk with transfer line →insert USB OTG port with OTG

transfer line. When U disk is ready then you can use.

☆Please don't push U disk frequently ,or will damage the U disk.

 
## 5. TF card Usage

---

### Support 32GB memory card

Insert the memory into the card slot then the screen will display " SD card is in readying now ", when the words disappear, it means the TF card have been prepared that can use.

### Cancel TF Card

Close all programs or documents in the card .Click  → setting → TF card and internal memory → Uninstall TF card, press and popup a half of card then take it out.


☆ Please don't insert or push the card for more times or will damage the Card.

☆ Use brand card to avoid incompatible.

## 6. Start to use

---

### Battery charging

One port of the power adapter insert into socket, another port connect to DC interface of device to charge ,when the battery is in charging will display as:  When the battery is fully charged, battery

ICONS display as: .

☆Can use a USB cable to connect the PC to charge.

☆Can Use the device when it is in charging, but have to spend more time for charging.

### Battery management

The battery is not fully charged when packaged , advise you to make battery fully charging for 4 hours at least before you use the device.

Rechargeable battery life, generally depend on the times of charging and discharging. However, you can also play through the following Suggestions to extend the life of battery:

- To use the device at least once a week.
- Regularly for battery fully charge.
- Don't let the battery in long time no power.
- Always keep device and battery far away from heat objects.

## Set-up

Long press the power button for 5 seconds.

## Wi-Fi network setting


Since many functions need with Wi-Fi connected, set Wi-Fi network first before using.



1. Click  → setting → Wireless and network setting.

Choose and open Wi-Fi menu to enter Wi-Fi settings

Then all usable Wi-Fi networks can be automatic searched and displayed. If

showed as  among the Wi-Fi networks, then need to input password for connection.

2. Click the Wi-Fi network you need →If need password then input it →Click link.



 
3. Click  button to back desktop

☆ If the Wi-Fi set is hidden ,won't be searched out of itself. Need to click add Wi-Fi network, then input relevant information to add your Wi-Fi.

## 3G settings


1. Before connect 3G network, please choose the suitable 3G network card to support the tablet pc device, this model only support external USB dongle, the




dongle models can be found in search path  setting → wireless and network → more → 3G support model information is shown in the equipment as below :

2. 3G card loaded with SIM card then connect the 3G USB dongle to the table pc.




3. After connected 3G dongle, click  setting → wireless & network → more → mobile network, to set the 3G network.

4. Open mobile network: click data flow started → data wander to choose "Access Point Names", then click "Menu" button, then to set "New APN" Take Chinese WCDMA mobile operator as example to set the 3G network as below:  
Name: 3GWAP / APN:3gnet / Proxy: Not set/ Port: 80 / Username: Not set/  
Password: Not set/ Server: Not set/ MMSC: Not set / MMS proxy Not set/ MMS port: Not set / MCC:460/ MNC:01/ Authentication type: Not set/ APN type: Not set.

After setting finished, then 3G network is connected then will display , if this logo show as darker state it means it is searching of the network, if show as blue state means it has been connected with network, display means the date is under transmission.



## 7. Desktop

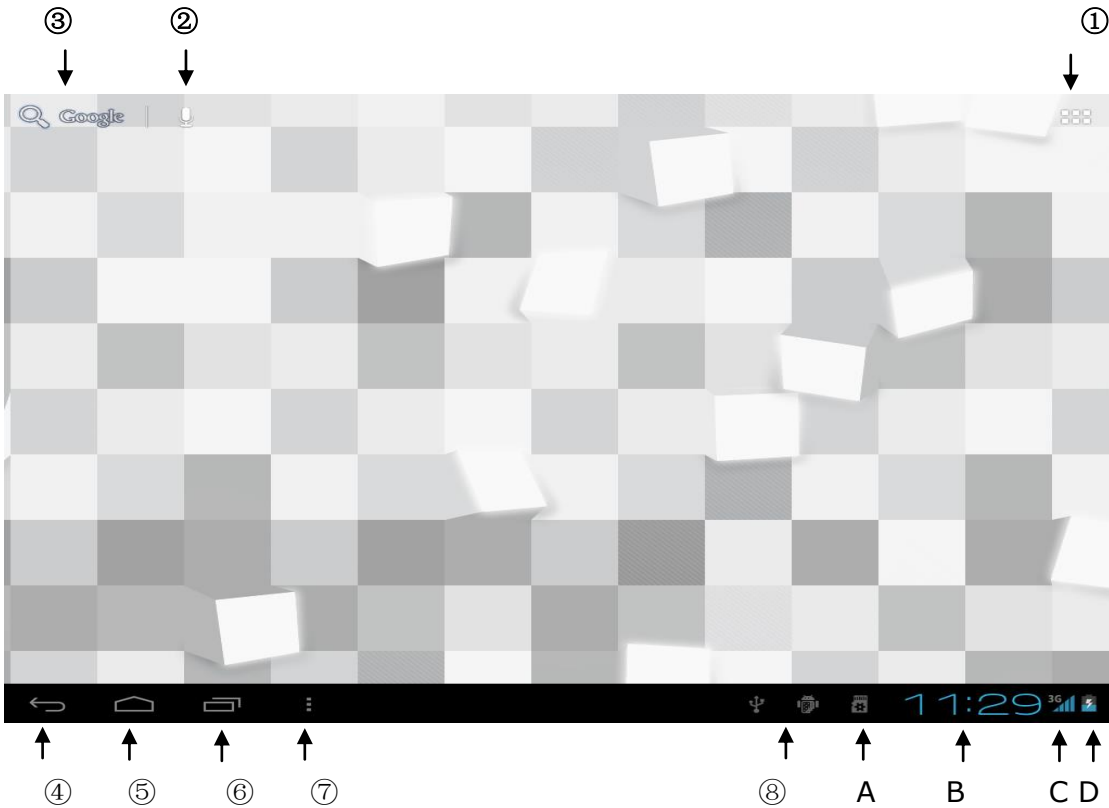 

- ①: **Click it to view all applications**
- ②: **Searching voice quickly function**
- ③ : **Quickly open browser interface**
- ④: **Return to the current operation**
- ⑤: **Back to desktop from app screen**
- ⑥: **Select key for multi-page**
- ⑦: **Menu function shortcut key**
- ⑧: **USB connection**
- A: TF Card sate of connection**
- B: Current time**
- C: 3G/WIFI sate of connection**
- D: Battery status**

☆Click on any program icon to run it.


☆Long press and drag icon, move it to other parts of the screen.

☆press longer and drag icon to cleanup.




move it from the desktop

## 8. Screen lock interface

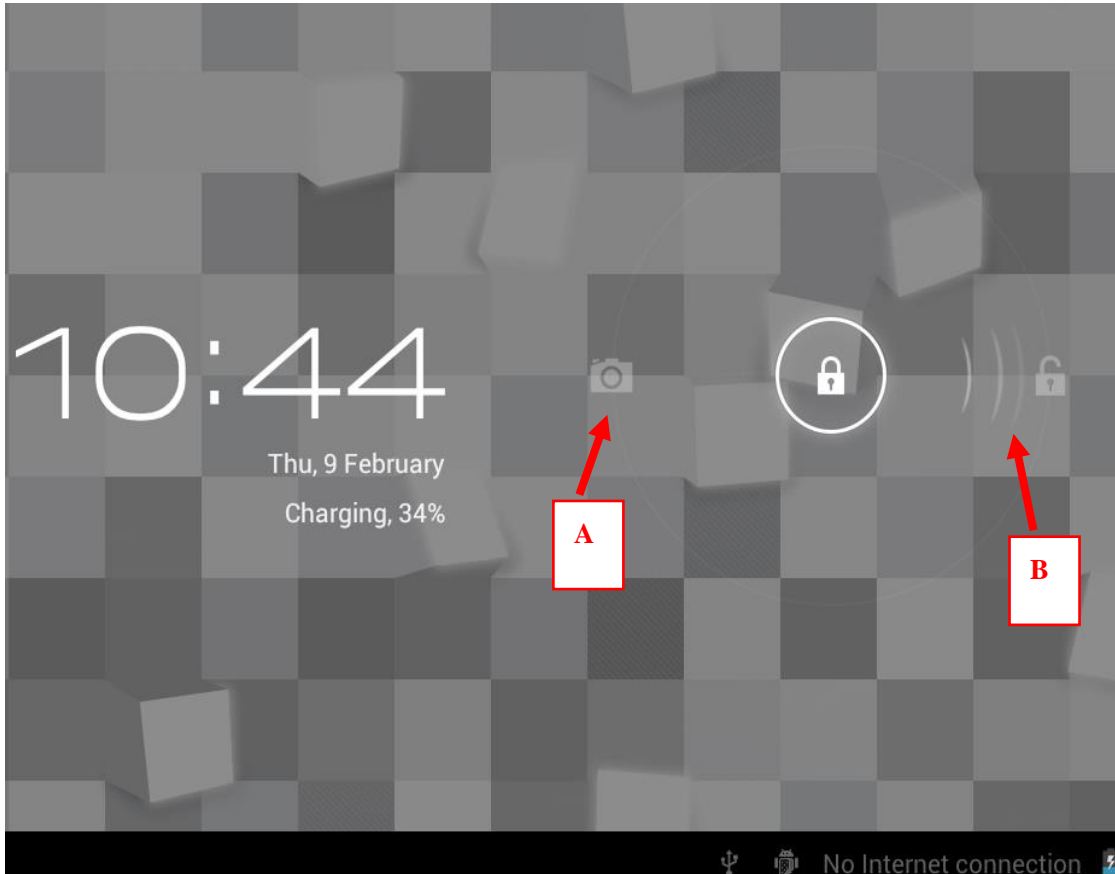 

Long time no using device or short press power button, the device will access to standby state. There are two states: first is deep sleeping standby, the device's screen is turned off, then need to press power button to enter standby screen, for example the above picture, press the red unlock.

Switch  it will display the point A\B as above picture, press A point for camera using ,press B for unlocking ,it show as B condition ,press unlock button to B will realize unlocking function ,press unlock button to A to use Camera function.

## 9. Program

---



### **Recorder**

Record outside sounds

---



### **Clock**

Show time and set time

 
---



### **Download**

Quick install the apk downloaded

---

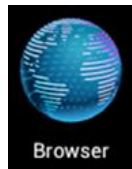

### **Browser**

Connect to Internet browser

---



### **Calendar**

Set calendar

---



### **Camera**

Take photos and video

---



### **Calculator**

For simple calculating

---



### **Email**

Receive and send email with existed email address

---



### **File viewer**

Check and manage files, install Android apps and backup SD files

---



 
## Music

Play and manage music files.




## My video

Play and manage my video files

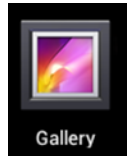

## My gallery

 View and manage my photo files

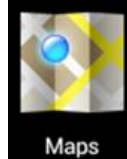

## Map

Check your local position when network connected



## Places

Connect with internet to check your location and relative places near your location.



## Google Market

Login to download applications ,games etc.



## Search

Search tool, search anything you need online.



## Setting

Set your system.

☆Long press to drag the icon.


☆Long press icon and drop in

 


to remove it from menu.

## 10. Menu

---

On the desktop, use the menu button  to display the menu

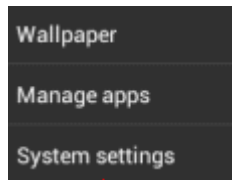

Function, at the same time can realize commonly used procedures setting in the desktop .The way of setting are pressing the procedures logo to desktop.


## 11. Application program

---

### Install applications

A lot of Free and interesting Applications are available on internet, you just need search by" Android applications" key words.



The Android Applications you downloaded are saved in , you can install it easily:

1. Copy the apk application to SD or USB device →Put the SD card into Tablet or connect USB device with Tablet.



2. Click .files browser logo.



3. Click  or  find the file with apk.

4. Click the APK application → Install.


After install successfully, the new application icon will show in Menu.

5. Click icon to run application or finish to return browser interface.

### Download applications from Internet

User could download any Android application from internet and install

 
it easily and fast.

1. Click  to search application in internet.
2. Input website address, click the download link to download the application.
3. After download finished, long press the application (saved in download history) → Click and open → install.

## Connect to PC and save files

1. Connect Tablet with PC by USB cable. One side is USB OTG port , another side connect PC USB port.

2. After connection, it will display image , choose  run it , then click Turn on USB device then user can exchange files between PC and Tablet device, as below:

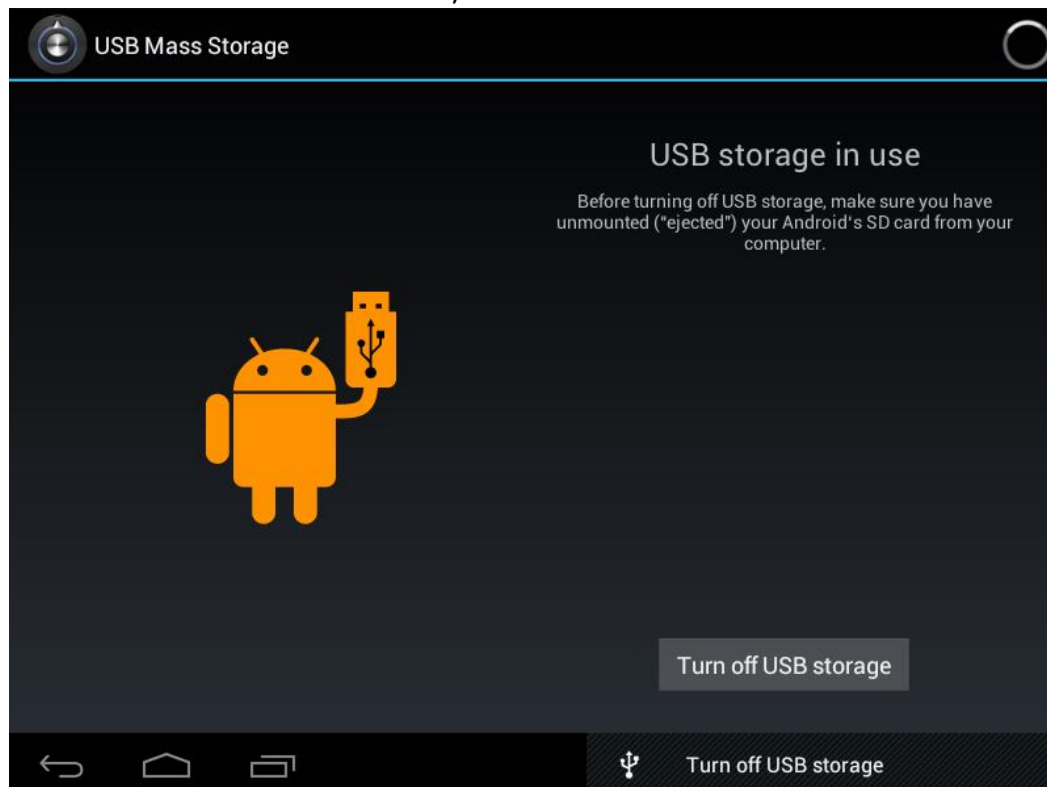

## Uninstall application

 
User can easily to uninstall Android applications as below:





1. Click Menu button→ setting → applications→ manage applications.
2. Choose the application → uninstall.
3. Click Yes to confirm uninstall.

## 12. Sound record

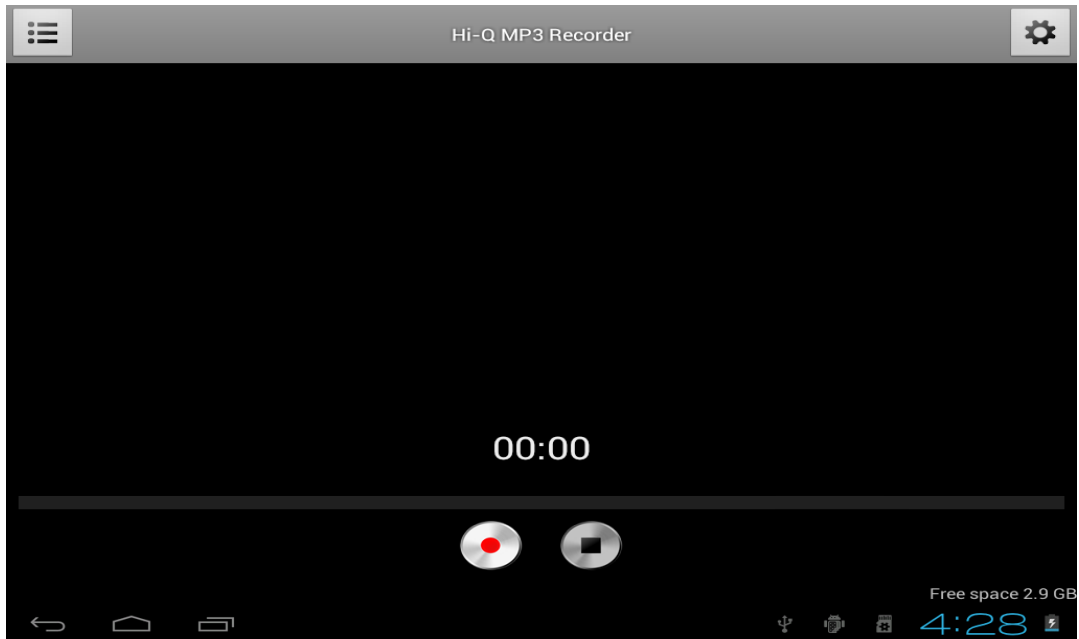

Click icon will display as below:



Click  start to record, click  to stop record, click  to view the record document and the documents will named according to the time you record. Click the record document to play record, click  to set the record you made.


## 13. Clock



☆Click icon, User can check current Date and time.

### Alarm clock

A few different alarm clock can exist in same Tablet.

When the icon  show in top of Screen, it means at least one alarm clock is working.

## Add new alarm clock



1. Click icon
2. Click menu button → add clock.
3. Set new alarm clock.

☆If you didn't set repeat, after alarm works on time, system will auto-delete the information.

☆Click to start use the new alarm clock.

4. Finish

## Disable alarm clock



When the alarm time on, a window with Clock will pops out.

If User need alarm again after 10mins,click Pause.

Click Cancel to stop alarm.

## Enable Alarm clock

Regarding the alarm clock which already set in repeat, Then usually User need suspense using it not delete it:

1. On interface of Clock, click icon  to suspend use this alarm clock.
2. Click  to resume.



## Edit alarm clock



1. Click  → click .
2. Entry the clock User need edit → reset.

## Delete alarm clock



1. Click icon  → click .
2. Open the alarm clock user need delete.
3. Choose delete it.



4. Click  return to desktop.



## 14. Download applications and install



 
1. Click icon .
2. User can check and install the available applications from PC.

## 15. Browser

User can reach to internet by browser.



Click icon to open internet:

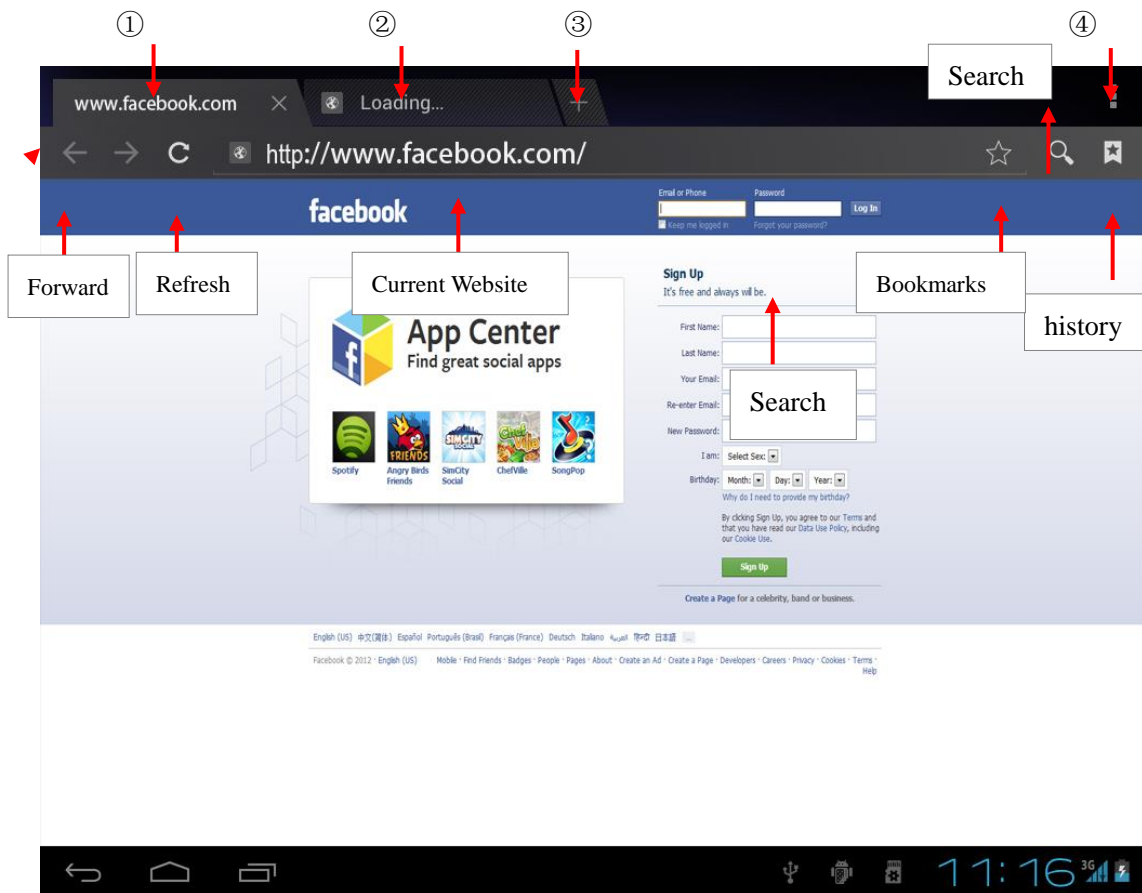

- ①: Visited web site; ②: Current web site; ③: Add web sites; ④: Menu

## 16. Calendar

---



Click  the calendar program icon.

First used calendar, need to add an exchange account. Input account email address and password. Click on next, according to the prompt complete account configuration, after that the calendar can be used.

### New activities


1. In the calendar interface, click new event dates you want to build.
2. Choose activity time - input relevant activity details in every field.
3. Click finish.

 
☆Color display for gray date mean there are agenda on the day.

## 17. Camera





---

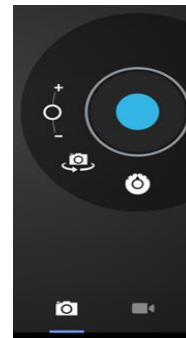







Click  to open camera then display icon



### Take photos

 1. Click  to take photos.
2. Pictures will be kept.
3. Click the thumbnail  to enter into my album to view pictures.
4. Click back icon  to return back to camera.
5. Click  to realize camera setting.

## Video recording


1. Click  switch to Video.
2. Click  to start recording, click  to pause recording. Video will be kept.
3. Click the thumbnail  to play the video. Click back icon to return back to camera.
4. Click  to quit camera and back to UI interface.
5. Click  to realize video recording setting.

**Note:** You can click  to switch front- camera and back- camera to take photos.

## 18. Calculator

---



1. Click  the calculator program icon.
2. Click numbers and operational symbol to start calculate.
3. Click remove to remove all display.

## 19. E-mail


---

☆ Supports POP3 and SMTP accounts

### Add E-mail account

You can enter one or more E-mail address on device to use



1. Click  E-mail program icon.
2. In your account interface, click next.
3. Click E-mail address options, → input your E-mail address.
4. In the password options, → enter your E-mail passwords.
5. Click finish


Manual Setup (Optional): Server setting can full in the E-mail provider (like gmail.com) according to your E-mail account .If you need to revise the server setting; you could click "manual setup" to make some change.

6. Click "Next Step".
7. Optional: Input account name.
8. Display the account name when send and receive E-mail, Click "Finish".

☆ After Settings, if you cannot connect to a free email account, please contact with your email providers to confirm if their server support (POP) and (SMTP) transmission agreement.

## Inbox



1. Click  E-mail program icon.
2. If only added one E-mail account, it will open promptly. If added several E-mail account, it will display the account list.
3. Click the E-mail account you intended to check→ Click "Inbox".

## Open E-mail


1. In the inbox, to click E-mail and open it.
2. As for attachment, Click "open" to start related application or click "Save" to save the attachment to SD card.
3. For reply, click "reply or reply all".
4. Click "delete" to delete E-mail.


## Compose New E-mail

1. Click→ "Compose" icon.
2. Click " To", then add the addressee's E-mail account.
3. If needed, Click "Menu" to add attachment.
4. E-mail finished, then click "send".

## Edit E-mail account




1. Click  E-mail program icon.
2. Choose "Account Setting" from "Menu".

3. After the completion of setting, then click .

## Delete E-mail Account

☆ If you have several accounts, and you deleted the default account in settings. The next E-mail account on the E-mail list will become the default account automatically




1. Click  E-mail program icon.
2. In inbox interface, click "Menu "to choose "account".
3. Click and hold the E-mail you intended to delete.
4. Then popup "Account options", click "Delete account".
5. Click "Confirm" icon.

## Sets the default email account

You must always have an account designated as the default account, thus if you have multiple E-mail account, you can choose any one as the default.




1. Click  E-mail program icon.
2. In your inbox interface click MENU →account Settings.
3. Click the default account to select.

☆ If you delete the setting default account, the list of within next E-mail account will automatically become the default account.

## 20. File explorer

---



Click  the icon "File Explorer" to check files in all storage device (Tablet PC internal storage, SD card, USB storage device), and you could conveniently and fast install the Android application to the tablet PC.

The "File Explorer "has following functions:



Setting Internal Storage



Your SD Card



 
USB Flash Disk (USB cable required)



Return to A last Folder



Create New Folder



Files setting






Pictures

## Copy files from computer to tablet PC

You could copy files to File Explorer from external storage device, computer. If you need to copy files to tablet PC, you are required to copy files to SD card and USB storage device in advance.

Tablet PC internal storage folder named "Local Disk", SD card named "SD card", USB storage device named "U disk"

Here is the instruction to copy files from SD Card and USB Storage device to tablet PC. You could use the same method to copy your files to SD card or USB Storage device, then connect your storage device to computer, then start copy file to the folder you need.

1. Click  or  to find the files in your storage device.
2. Click and hold the files or folder you intended to copy → then click "copy".
3. Click  to return to tablet PC internal storage → click the target folder → then click "Paste".

## Delete files





Press the file you need to delete → click delete button → click OK to delete.

 
## 21. Music

Support audio format: MP2, MP3, WAV, WMA, and AAC

### Play music



1. Click  my music program icon.
2. From all/album/artist/directory/my favorite/custom playlists of select you want to play music.
3. Click previous song → suspended → next song  icon to play.
4. To music while playing on an interface, can press Return  or press the HOME  returns to the desktop.  
Click on the right lower corner images into the music player, Interface shown below:

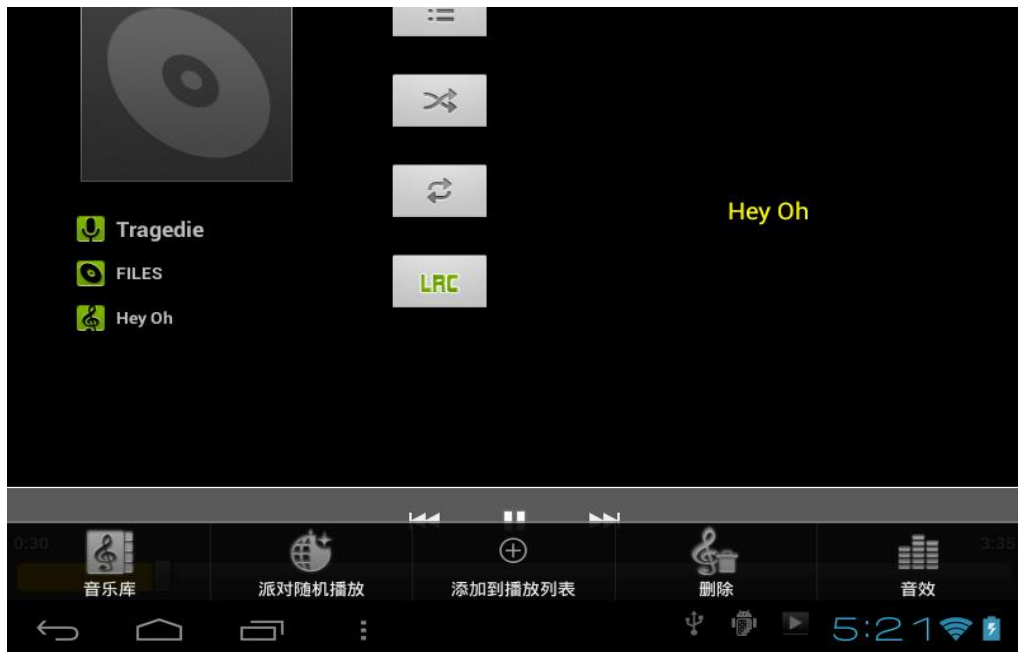


## 22. Video

☆ AVI、WMV、RM、RMVB、 3GP、MKV、MP4、ASF、VOB、MPG、MOV up to 1080P HD-Definition.



 
1. Click  icon → click on a video group.






2. Click the video you want to view.
3. Click the screen to video related regulation (include volume, stop/play and brightness etc.).
4. Press return key  to back the video player interface.

## 23. Photo gallery

---

 


JPEG、BMP、GIF、PNG



1. Click the  photo gallery program icon, enter the Gallery.
2. Choose photos groups to browse.
3. Press return key to back the photo gallery interface.
4. Click  to slideshow .slideshow mode: normal play ,classical, Passion. Romantic and fun
5. Click  to sort color for pictures
6. Click  to sort time for pictures
7. Click  to sort name for pictures

## Delete pictures and Dynamic switching wallpaper

 
### Settings

 
1.  Multiple choose
2.  Delete
3.  Dynamic switching wallpaper Settings




## 24. Maps

When Use this function, it must be determined computer connection with INTEL network state.



 After connected network, please click icon , can open current position map automatically; see below picture, you can find what you want by setting.

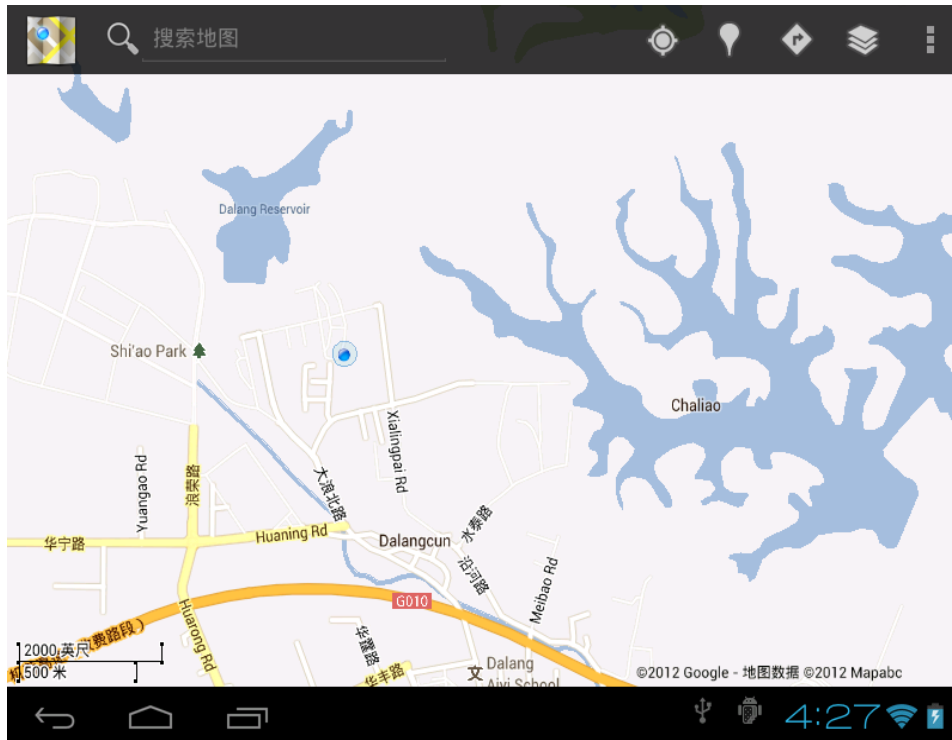



## 25. Local search

Same similar map functions, can select to store huge amounts of information.


## 26. Android market

To open android market, can inquiry apps programs download. First run android market, the system will require GMAIL E-mail accounts for landing (if have not Gmail email account, please apply it from <http://gmail.google.com>)

## 27. Setting

<b>Wireless and network</b>	Wi-Fi	Open Wi-Fi
	Wi-Fi settings	Setup and manage wireless access points
	Flight patterns	Disuse all wireless connection
	3G network settings	Set 3G network
<b>Ethernet network</b>		Configure Ethernet network.
<b>Select setting</b>		Select ADSL for network, input user name and passwords to connect
<b>USB</b>	Bulk memory	Configure USB for bulk memory
	ADB	Configure USB for ADB
<b>Voice</b>	Silent patterns	Except the media and the alarm clock sounds, all are set to mute
	Volume	Adjust media volume, alarm clock volume, and inform the volume. Click and remove  slider, and then click ok
	Inform ringtones	Select the desired inform rings
	Select operated sound	When selecting screens broadcasting sound
	Prompt screen lock	When locking and unlocking screen to playing sounds
<b>Display</b>	brightness	Click and remove slider  to adjust screen brightness, and then click OK
	Automatic rotating screen	When make checked, the screen will be automatically switch between screen and vertical screen according to equipment direction of rotation
	System dormant	Adjustment screen close ,system will delayed time for automatically dormant
	Screen overtime	Adjustment a delayed time for automatically locked screen
<b>Security</b>	Screen lock setting	Use icon .PIN or passwords to lock screen
	Passwords visual	Can passwords visual when input
	Select device manager	Add or delete device manager
	Use security certificate	Allow applications programs to visit security certificate and other certificate
	Install from TF card	Install cryptographic certificate from TF card
	Passwords setting	Set or revise certificate storage passwords
	delete storage	Delete all information of certificate storage and reset passwords

# KOCASO

<b>Applications</b>	Unknown sources	Allow to install the applications from the non-Android market
	Management application	Manage and delete installation applications
	Running services	Check and control the currently running services
	development	Setup application development options
<b>Privacy</b>	Recovery factory Settings	<p>Click will remove all the data on device. Click reset device will be reset, or click  to cancel and return to a screen.</p> <p>Warning! The following will delete all the data from equipment:</p> <ul style="list-style-type: none"> <li>—Google account</li> <li>—System and the application's data and Settings</li> <li>—To download applications</li> </ul> <p>The following won't because the reset to be delete:</p> <ul style="list-style-type: none"> <li>—The current system software and bind application</li> <li>—SD documents, such as music or photos</li> </ul>
<b>TF card and device memory</b>	Total capacity, capacity available	It will display when you insert TF
	Uninstall TF card	When insert TF card ,you can click uninstall TF card to uninstall
	Format TF card	Format(delete) TF card
<b>Language and keyboard</b>	Choose Language	According to your location select the corresponding language
	Android Keyboard	Screen keyboard Settings
	User dictionaries	User can add words to user dictionaries
<b>Date and time setting</b>	set date	Set date
	Select time zone	Select time zone
	Set time	Set time
	Using 24 hour format	Can choose to use 24 hours format or 12 hour format
	Choose the date format	User can choose the date format
<b>About tablet PC</b>		Check status messages, and power usage, legal information, model, Android version, kernel version and the version number
<b>Touch screen calibration</b>		Touch screen calibration

---

## **Appendix I Frequently Asked Questions**

---

### **Q: Why won't my device turn on?**

Make sure your tablet has been charged for at least four hours prior to use. When plugging in the cable, make sure you are not accidentally plugging it into the headphone jack. Also, the power button is on the side (for tablets) and not the one on the front of the touchscreen. The button on the front is for navigation.

### **Q: Why won't this unit connect to Ethernet?**

Assuming your unit does have the RJ45 port, you want to make sure that Wireless is turned off. If Wi-Fi is on, it will negate the Ethernet connection.

### **Q: Why does my unit have scratches/bubbles on the screen?**

These units ship with a very fine plastic film to protect the item in transit. This film is intended to be removed prior to use. Sometimes this takes a strong fingernail or some similar item to peel it off.

### **Q: Should I perform a Firmware Update?**

Not necessarily. This is actually intended if obscure issues with the tablet occur. Unless you are having issues with the tablet which a Factory Data Reset has not resolved, it is not advised that you perform this step.

However, if you are sure you wish to attempt this procedure, please visit the following link for available firmware downloads and the instructions on how to perform the update:

<http://mymidpad.com/firmware/>

### **Q: Why don't I see a firmware version for my model?**

We are always working on providing the latest and best firmware for all of our devices. If you don't see your specific model listed, please check back soon.

### **Q: I don't remember my password, what can I do?**

If you have previously added a Google account, you may be prompted for a password reminder if you fail the security 4 or 5 times. Otherwise, please refer to **Should I perform a Firmware Update?**

### **Q: How long should my battery last after charging?**

As for battery life, this depends on which model tablet you use. Our Android 2.2 tablets usually average around 1-4 hours. The Android 4.0 tablets approximately twice that. However, that is totally relative to factors such as how bright the screen is during use, how often it is using the wireless connection, what background processes are running, if you are using a Live Wallpaper, and more. It is very difficult to estimate the duration of a full charge in consideration of these issues. If this seems like abnormally poor performance, just let us know.

**Q: Why does my screen not respond properly when I use the touchscreen?**

This may be a couple of different things. If this only occurs when charging from a power supply, this may be due to noise from the power source not being adequately filtered out. You may wish to give the unit a full charge and then disconnect from power for use, or, if possible, charge with a USB cable instead. Otherwise, your screen calibration may be off. To correct this, check for Settings->Touchpad Calibration to see if you can recalibrate this to resolve the issue.

**Q: Why is my tablet stuck at boot up, and the Android screen will not go away?**

Please see above: **Should I perform a Firmware Update?**

## Appendix II 3G Support List

NO.	3G Model	Cellphone Model	NO.	3G Model	Cellphone Model
1	Huawei-E153	WCDMA	28	Huawei-MC509	CDMA2000
2	Huawei-E156G	WCDMA	29	Huawei-EC122	CDMA2000
3	Huawei-E160E	WCDMA	30	Huawei-EC150	CDMA2000
4	Huawei-K3520	WCDMA	31	Huawei-EC156	CDMA2000
5	Huawei-E170	WCDMA	32	Huawei-EC1270	CDMA2000
6	Huawei-E172	WCDMA	33	Huawei-EC167	CDMA2000
7	Huawei-E173	WCDMA	34	Huawei-EC189	CDMA2000
8	Huawei-E176G	WCDMA	35	ZTE-MC2716	CDMA2000
9	Huawei-E1782	WCDMA	36	ZTE-AC2736	CDMA2000
10	Huawei-E180	WCDMA	37	ZTE-AC2746	CDMA2000
11	Huawei-E220	WCDMA	38	ZTE-AC2766	CDMA2000
12	Huawei-E226	WCDMA	39	ZTE-AC560	CDMA2000
13	Huawei-E230	WCDMA	40	ZTE-AC580	CDMA2000
14	Huawei-E261	WCDMA	41	ZTE-AC581	CDMA2000
15	Huawei-E270	WCDMA	42	ZTE-AC590	CDMA2000
16	Huawei-E353	WCDMA	43	SEV759	CDMA2000
17	ZTE-MF110	WCDMA	44	ST804	CDMA2000
18	ZTE-MF637u	WCDMA	45	ST809	CDMA2000
19	ZTE-MF633BP+	WCDMA	46	E1916	CDMA2000
20	ZTE-MF170	WCDMA	47	WU830	CDMA2000
21	ZTE-MF190	WCDMA	48	SRT-E800	CDMA2000
22	SRT-H800	WCDMA	49	ASB C820	CDMA2000
23	WU-830	WCDMA	50	Huawei-ET127	TD-SCDMA
24	WU-930	WCDMA	51	Huawei-ET128	TD-SCDMA
25	Huawei-E1552	CDMA2000	52	Huawei-ET128-2	TD-SCDMA
26	Huawei-E1786	CDMA2000	53	ASB T920	TD-SCDMA
27	Huawei-EM660	CDMA2000			