## LA CROSSE TECHNOLOGY QUICK SET-UP INSTRUCTIONS

Please make sure that fresh batteries are installed properly in the receiver and the sensor.

IMPORTANT!! Do not set the time or press any other buttons until the display has communicated with the outdoor sensor for at least 10 minutes.

Use the "SET" button toggle through the menu options.

Use the "OUT/+" button to change the menu options when they are flashing.

- 1. Press and hold the SET button until LCD and a number appear on the display. Use the OUT/+ button to select the contrast for your display. The contrast goes from 1-7. Press and release the SET button once.
- 2. The Time Zone is flashing on the display. Use the OUT/+ button to select the correct time zone. Press and release the SET button once.
- 3. The DST is flashing on or OFF. Use the OUT/+ button to select if your location observes daylight savings time. Press and release the SET button once.
- 4. The RCC is flashing on or OFF. Use the OUT/+ button to select if you wish to use the radio controlled time. Press and release the SET button once.
- 5. 12h or 24h is flashing. Use the OUT/+ button to select 12-hour or 24-hour time. Press and release the SET button once.
- 6. The hour is flashing. Use the OUT/+ button to select the correct hour. NOTE: during pm hours, the PM will display to the left of the time. During the am hours, nothing is displayed. Press and release the SET button once
- 7. The minutes are flashing. Use the OUT/+ button to select the correct minute. Press and release the SET button once.
- 8. The year is flashing under the time. Use the OUT/+ button to change the year. Press and release the SET button once.
- 9. The month is flashing. Use the OUT/+ button to change the month. Press and release the SET button once.
- 10. The Day of the month is flashing. Use the OUT/+ button to change the Day of the month. Press and release the SET button once.
- 11. Either °F or °C is flashing. Use the OUT/+ button to select Fahrenheit or Celsius.
- 12. Press and release the SET button once.
- 13. inHg or hPa is flashing. Use the OUT/+ button to select you air pressure measuring unit. Press and release the SET button once.
- 14. The relative air pressure is flashing. Use the OUT/+ button to increase or IN button to decrease to select the desired measuring unit. Press and release the SET button once.
- 15. The weather sensitivity will be flashing in the upper left hand corner. Use the OUT/+ button to change the forecast sensitivity as follows:
  - 1 Coastline 2 Everything Else 3 Desert
- 16. Press and Release the SET button to exit the set-up.