




# SMOOCHIE POOCH™ INSTRUCTIONS


**Parents: Be sure to remove the pull tab from Smoochie Pooch to activate normal play mode.**

For best performance, use alkaline batteries.

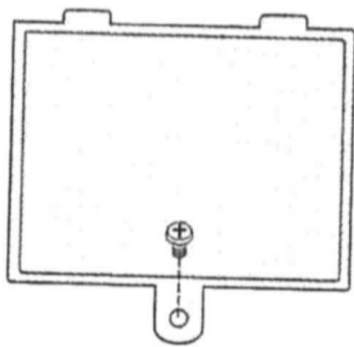

## BATTERY INSTALLATION

1. From time to time and with frequent use, you may need to replace the batteries. To do so, turn Smoochie Pooch over and find the battery compartment on his stomach.
2. Remove the battery compartment cover using a screwdriver (not included).
3. Insert 4 "C" batteries making sure to match the polarity direction of the batteries as indicated on the inside of the battery compartment.
4. Replace the battery cover.

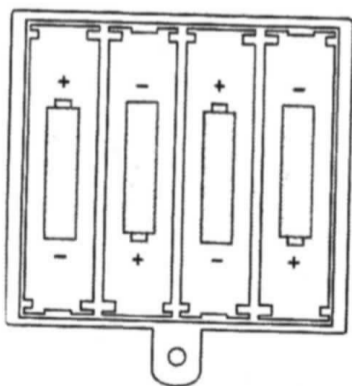

## IMPORTANT BATTERY INFORMATION CAUTION:

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the product before they are charged.
3. If removable rechargeable batteries are used, they are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old batteries and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
8. Exhausted batteries are to be removed from the product.
9. The supply terminals are not to be short-circuited.

**SURFACE WASHABLE ONLY**

Here's how to make  
SMOOCHIE POOCH love you back!



**Hug him once**  
and Smoochie Pooch sniffs!



**Hug him twice**  
and Smoochie Pooch barks!



**Hug him a third time**  
and he'll give sloppy kisses!



**Brush his head with his collar or pat his head**  
to hear his happy puppy sounds!

## 2 Year Limited Warranty

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Adjustment Center, 15930 E. Valley Boulevard, City of Industry, California 91744 for replacement or refund at our option. This warranty does not cover damage resulting from accident, misuse, or abuse. **Valid only in U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

## CONSUMER INFORMATION

**PRODUCT:** Smoochie Pooch™ Plush Toy  
**WARRANTY:** 2-year limited warranty.  
Valid only in U.S.A.  
**AGE GRADE:** Ages 4 and up.



**YOU CAN TELL IT'S MATTEL!** CALL us toll-free or write with any comments or questions about our toys or service. Monday - Thursday, 8:00 a.m. - 5:00 p.m. PST; 11:00 a.m. - 3:30 p.m. EST; Outside U.S.A., see telephone directory for Mattel listing. Consumer Affairs, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 USA

**1-800-524-TOYS**

**CE** CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

**We are dedicated to quality products.**

©1998 Mattel Inc., El Segundo, CA 90245 U.S.A.  
All Rights Reserved.

37522-0920G1

