

	the version number
Touch	
screen	Touch screen calibration
calibration	

Appendix. Suggested optional accessories and model

Accessories description	Accessories model NO		
	TD-SCDMA		
		huawei E230, E176G, E160E,	
	WCDMA	E182G, E1782, E1750	
		ZTE MF633BP-1, MF633,	
3G USB dongle list		MF637U.	
3d USB duligle list			
	EVDO	Huawei E150, EC1231,	
		EC122, EC156 EC1270,	
		ZTE AC580,ZTE AC2736,	
		AC2746.	

# Catalogue

Catalogue	1
User tips	2
1. Outlook desciption	2
2.Power button usage	4
3. Touch screen	4
4. Transfer line	4
5. TF card usage	5
6. Start to use	5
Battery charging	5
Battery management	5
turn off the device	5
Wi-Fi network settings	5
3G network settings	5
7. Desktop	6
8. Screen lock interface	7
9. Progam	
Download and install software	8
10. Desk meue functions	
11. Progam	
program installation	12
Download program directly from network	12
connect PC to store documents	
uninstall program	12
12. Recorder	13
13 .Clock	13
Alarm clock	13
14. Download and install software	
15. Browser	
16. Calendar	
New activities	
17. Camera	
take pictures	
Record video	
18. calculator	
19. E-mail	
20. File browser	
Copy files between computer and device	
documents cancel	18

21. My music	19
play music	
22. My video	
23. Photo gallery	
24. Map	
25. Local search	
26. Electronic market	2
27. Settings	
Accessories and model optional advice	

# Use tips

When using your equipment please obey the following basic security matters need attention in order to reduce fire, electric shock and risk of injury.

- Don't let the product itself get wet in the rain or become damp .
- Please keep device away from direct sunlight and heat objects
- Protect power cable. when connect the power cable, please don't let it be stepped
  on or above placed items, avoid to be extrusion. Pay special attention to
  protection of equipment connector.
- Please use the original power adapter for charging, using other charger will cause damage
- Don't dismantle the equipment or repair yourself.

### Cleaning equipment

Touch the screen gently. To clean the fingerprint or dust on the screen , it is better to use such as camera use soft cloth but not gauze to clear the dust .

	certificate	and other certificate	
		Install cryptographic	
	install from TF card	certificate from TF card	
	passwords setting	Set or revise certificate storage passwords	
		Delete all information of certificate storage and reset	
	delete storage	passwords	
		Allow to install the applications from the non-Android	
	Unknown sources	market	
	Management	Manage and delete installation applications	
Applications	application	Manage and delete installation applications	
	Running services	Check and control the currently running services.	
	development	Setup application development options	
Privacy	Recoveryfactory Settings	Click will remove all the data on device. Click reset device will be reset, or click to cancel and return to a screen  Warning! The following will delete all the data from equipment:  ~ Google account  ~ system and the application's data and Settings  ~To download applications  The following won't because the reset to be delete:  ~ the current system software and bind application  ~ SD documents, such as music or photos	
TF card and	Total capacity, capacity available	It will display when you insert TF	
device memory	Uninstall TF card	When insert TF card ,you can click uninstall TF card to uninstall	
	Format TF card	Format(delete) TF card	
		According to your location select the corresponding	
Language	choose Language	language	
and	Android		
keyboard	Keyboard	Screen keyboard Settings	
	User dictionaries	User can add words to user dictionaries	
	set date	Set date	
	Select time zone	Select time zone	
Date and time	Set time	Set time	
	Using 24 hour format	Can choose to use 24 hours format or 12 hour format	
	Choose the date		
	format	User can choose the date format	
About		Check status messages, and power usage, legal	
tablet PC		information, model, Android version, kernel version and	



# 27 Setting

	Wi-Fi	Open Wi-Fi	
Wireless	Wi-Fi settings	Setup and manage wireless access points	
and network	Flight patterns	Disuse all wireless connection	
network	3G network settings	Set 3G network	
Ethernet			
network		Configure Ethernet network.	
Select		Select ADSL for network, input user name and	
setting		passwords to connect	
USB	Bulk memory	configure USB for bulk memory	
USB	ADB	Configure USB for ADB	
		Except the media and the alarm clock sounds, all are	
	Silentpatterns	set to mute	
		Adjust media volume, alarm clock volume, and inform	
		the volume. Click and remove	
Voice	volume	slider and then click ok	
voice		slider, and then click ok	
	Inform ringtones	Select the desired inform rings.	
	Select operated		
	sound	When selecting screens broadcasting sound	
	Prompt screen lock	When locking and unlocking screen to playing sounds	
		Click and remove slider to adjust	
	brightness	•	
		screen brightness, and then click ok	
	Automatic rotating	When make checked, the screen will be	
	screen	automatically switch between screen and vertical	
		screen according to equipment direction of rotation	
	System dormant	Adjustment screen close ,system will delayed time for	
Display		automatically dormant	
	Screen overtime	Adjustment a delayed time for automatically locked	
		screen	
Security	Screen lock setting	Use icon .PIN or passwords to lock screen	
	passwords visua	Can passwords visual when input	
	select device	Add or delete device manager	
	manager		
	use security	Allow applications programs to visit security certificate	

# 1. Outlook description



# 2 Power button usage

Starting up: Long press the power button for 3 seconds.

**Power off:** Long press the power button for 3 seconds  $\rightarrow$ click power off  $\rightarrow$  click confirm

**Screen off and on**: Short press power button to turn off or turn on screen Mandatory shutdown: If the device has no response, long press the power button for 6 seconds to perform mandatory power off

**Notice:** In case of no necessary conditions, It's better not use mandatory power off . Power off should be performed normally according to the standard steps. Reset button: Press "reset" button to restart the equipment.

#### 3 Touch screen

According to following user guide, and know how to use touch screen.

Click: Click an optional icon on screen as your choice.

**Longer press:** chose one icon and press longer, can drag then show the icon on desktop menu.

**Dragging:** Icons can be put into different screen interfaces by dragging the icon between different screen interfaces.

☆ To protect the screen ,please don't put any objects above the screen surface.

# 4 transfer connection

Before using USB device please connect transfer line to computer




USB data line

#### U Disk

Connect U disk with transfer line ightharpoonup insert USB OTG port with OTG transfer line .When U disk is ready then can used .

☆ Please don't push U disk frequently, or will damage the U disk

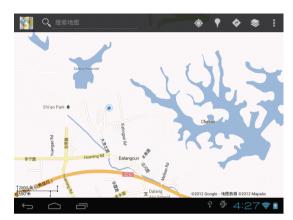



# 25 Local search

Same similar map functions .can select to store huge amounts of information



### 26 Android market

To open android market ,can inquiry apps programs download
First run android market , The system will require GMAIL E-mail accounts for landing(if have not
Gmail email account ,please apply it from http://qmail.google.com)

6.click to sort time for pictures

7.click to sort name for pictures

#### Delete pictures and Dynamic switching wallpaper Settings

multiple choose

Dynamic switching wallpaper Settings



### **24 MAPS**

When Use this function .it must be determined computer connection with INTEL network state..

After connected network ,please click icon ,can open current position map automatically; see below picture, you can find what you want by setting

# 5 TF card Usage

☆ Support 32GB memory card

Insert the memory into the card slot then the screen will display "SD card is in readying now ", when the words disappear . it means the TF card have been prepared that can use.

#### Cancel TF Card

Close all programs or documents in the card .Click setting → setting → TF card and

internal memory → Uninstall TF card, press and popup a half of card then take it out.

- ☆ Please don't insert or push the card for more times or will damage the Card .
- ☆ Use brand card to avoid incompatible .

#### 6 Start to use

### **Battery charging**

One port of the power adapter insert into socket, another port connect to DC interface of device to charge ,when the battery is in charging will display as:





- ☆ can use a USB cable to connect the PC to charge.
- A Can Use the device when it is in charging ,but have to spend more time for charging

# **Battery management**

The battery is not fully charged when packaged, advise you to make battery fully charging for 4 hours at least before you use the device.

Rechargeable battery life, generally depend on the times of charging and discharging . However, you can also play through the following Suggestions to extend the life of battery:

To use the device at least once a week

 
- Regularly for battery fully charge.
- Don't let the battery in long time no power
- Always keep device and battery far away from heat objects

### Set-up

Long press the power button for 5 seconds.

#### Wi-Fi network setting

Since many functions need with Wi-Fi connected, set Wi-Fi network first before using.




Choose and open Wi-Fi menu to enter Wi-Fi settings

Then all usable Wi-Fi networks can be automatic searched and displayed. If showed

- among the Wi-Fi networks, then need to input password for connection.
- 2. Click the Wi-Fi network you need →If need password then input it →Click link.
- button to back desktop
- \$\forall If the Wi-Fi set is hidden , wont be searched out of itself. Need to click add Wi -Fi network, then input relevant information to add your Wi -Fi.

### 3G settings

 1. Before connect 3G network, please choose the suitable 3G network card to support the tablet pc device, this model only support external USB dongle, the



network→ more →3G support model information is shown in the equipment as below:





### 22 Video

& AVI, WMV, RM, RMVB, 3GP, MKV, MP4, ASF, VOB, MPG, MOV up to 1080P HD-Definition



- icon → click on a video group
- 2. Click the video you want to view
- 3. Click the screen to video related regulation(include volume .stop/play and brightness etc)
  - to back the vedio player interface.



## 23 Photo Gallery

JPEG, BMP, GIF, PNG



- 1.Click the photo gallery program icon, enter the Gallery.
- 2. choose photos groups to browse.
- 3. Press return key to back the photo gallery interface.
- 4. click to slideshow .slideshow mode: normal play ,classical, Passion. Romantic and fun
- to sort color for pictures



#### 21. Music

support audio format: MP2, MP3, WAV, WMA, and AAC

### Play music

- 1. Click Music my music program icon.
- 2. From all/album/artist/directory/my favorite/custom playlists of select you want to play music.
- 3. Click previous song→ suspended →next song icon to play
- 4. To music while playing on an interface, can press Return or press the HOME returns to the desktoo.

Click on the right lower corner images into the music player, Interface shown below:




- 2. 3G card loaded with SIM card then connect the 3G USB dongle to the table pc.:
- 3. After connected 3G dongle, click setting → wireless & network →more→ mobile network, to set the 3G network.
- 4. Open mobile network: click data flow started → data wander to choose "Access Point Names", then click "Menu" button, then to set "New APN" Take Chinese WCDMA mobile operator as example to set the 3G network as below:

Name: 3GWAP / APN:3gnet / Proxy: Not set/ Port: 80 / Username: Not set/ Password: Not set/ Server: Not set/ MMSC: Not set / MMS proxy Not set/ MMS port: Not set / MCC:460/ MNC:01/Authentication type: Not set/ APN type:Not set/

After setting finished, then 3G network is connected then will display if this logo show as darker state it means it is the searching of network, if show as blue state means it has been connected with network, display means the date is under transmission.

# 7 Desktop

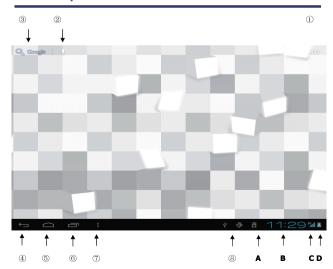

- ①: Click it to view all applications
- 2: Searching voice quickly function
- 3 : Quickly open browser interface
- (4): Return to the current operation
- (5): Back to desktop from app screen
- 8 : Select key for multi-page
- (7) : Menu function shortcut key
- (8): USB connection

#### A: TF Card sate of connection

B:Current time

#### C: 3G/WIFI sate of connection


#### D: Battery status

- ☆Click on any program icon to run it.
- ☆Long press and drag icon, move it to other parts of the screen ...
- ☆press longer and drag icon to cleanup.



move it from the desktop

# 8 Screen Lock interface

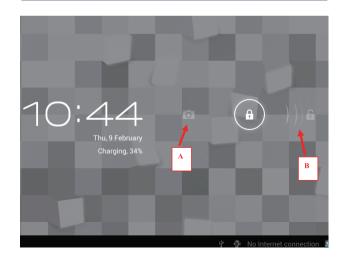



Setting Internal Storage



Your SD Card



USB Flash Disk (USB cable required)



Return to A last Folder



Create New Folder



Files setting



Pictures

### Copy files from computer to tablet PC

You could copy files to File Explorer from external storage device, computer. If you need to copy files to tablet PC, you are required to copy files to SD card and USB storage device in advance.

Tablet PC internal storage folder named "Local Disk", SD card named "SD card", USB storage device named "u disk"

Here is the instruction to copy files from SD Card and USB Storage device to tablet PC. You could use the same method to copy your files to SD card or USB Storage device, then connect your storage device to computer, then start copy file to the folder you need.

1.click or to find the files in your storage device.

2.Click and hold the files or folder you intended to copy → then click "copy"

to return to tablet PC internal storage  $\rightarrow$  click the target folder  $\rightarrow$  then click "Paste"

#### Delete files

Press the file you need to delete  $\rightarrow$ click delete button  $\rightarrow$ click ok to delete .

#### Delete E-mail Account

☆ If you have several accounts, and you deleted the default account in settings. The next E-mail account on the E-mail list will become the default account automatically



- 2.In inbox interface, click "Menu "to choose "account"
- 3.Click and hold the E-mail you intended to delete
- 4. Then popup "Account options", click "Delete account"
- 5.Click"Confirm"icon

#### Sets the default email account

You must always have an account designated as the default account, thus if you have multiple E-mail account, you can choose any one as the default.



- 1. Click Email E-mail program icon.
- 2. In your inbox interface click MENU →account Settings.
- 3. Click the default account to select.
- ☆ If you delete the setting default account, the list of within next E-mail account will
  automatically become the default account.



# 20 File Explorer

Click The Manage the icon "File Explorer" to check files in all storage device (Tablet PC internal storage, SD card, USB storage device), and you could conveniently and fast install the Android application to the tablet PC.

The "File Explorer "has following functions:

Long time no using device or short press power button, the device will access to standby state. There are two states: first is deep sleeping standby, the device's screen is turned off, then need to press power button to enter standby screen, for example the above picture, press the red unlock

Switch it will display the point A\B as above picture, press A point for camera using ,press B for unlocking ,it show as B condition ,press unlock button to B will realize unlocking function ,press unlock button to A to use Camera function .

### 9 Program

Hi-Q MP3 F	Recorder	Record outside sounds
Clock	Clock	Show time and set time
Downloads	Download	Quick install the apk downloaded
Browser	browser	Connect to Internet browser
Calendar	Calendar	Set calendar
Camera	Camera	Take photos and video

- + Calculator	Calculator	For simple calculating
Email	Email	Receive and send email with existed email address
File Manage	File viewer	Check and manage files, install Android apps and backup SD files
Music	Music	Play and manage music files.
Media Player	My video	Play and manage my video files
Gallery	My gallery	View and manage my photo files
Maps	Мар	Check your local position when network connected
Places	Places	Connect with internet to check your location and relative places near your location.
Market	Google market	Login to download applications ,games etc.
Search	Search	Search tool, search anything you need online.

- 2. In your account interface, click next.
- 3. Click E-mail address options, → input your E-mail address.
- 4. In the password options, → enter your E-mail passwords.
- 5. Click finish

Manual Setup (Optional):Server setting can full in the E-mail provider (like gmail.com)according to your E-mail account .If you need to revise the server setting, you could click "manual setup" to make some change

- 6. Click "Next Step".
- 7. Optional: Input account name.
- 8. Display the account name when send and receive E-mail ,Click "Finish"

☆ After Settings, if you cannot connect to a free email account, please contact with your email providers to confirm if their server support (POP) and (SMTP) transmission agreement.

#### Inbox



- 1. Click E-mail program icon.
- If only added one E-mail account, it will open promptly. If added several E-mail account, it will display the account list
- 3. Click the E-mail account you intended to check→ Click "Inbox"

### Open E-mail

- 1. In the inbox, to click E-mail and open it.
- 2. As for attachment, Click "open" to start related application or click "Save" to save the attachment to SD card
- 3. For reply, click "reply or reply all"
- 4. Click "delete" to delete E-mail

### Compose New E-mail

- Click→ "Compose" icon。
- 2. Click "To", then add the addressee's E-mail account
- 3. If needed, Click "Menu' to add attachment
- 3. E-mail finished, then click "send"

#### Edit E-mail account



- 1.Click E-mail program icon
- 2 Choose "Account Setting" from "Menu"
- 3.After the completion of setting, then click

- guit camera and back to UI interface.
- 7. Click to realize vedio recording setting .





### 18 Calculator



- 1. Click calculator program icon.
- Click numbers and operational symbol to start calculate.
- 3. Click remove to remove all display



## 19 E-mail

☆ Supports POP3 and SMTP accounts

#### Add E-mail account

You can enter one or more E-mail address on device to use







#### Setting

Set your system.

- ☆Long press to drag the icon.
- ALong press icon and drop in



to remove it from menu.

Wallpaper Manage apps

System settings

### 10 Menu



On the desktop, use the menu button to display the menu

function ,at the same time can realize commonly used procedures setting in the desktop .The way of setting is pressing the procedures logo to desktop.

# 11 Application program

### **Install applications:**

A lot of Free and interesting Applications are available on internet, you just need search by" Android applications" key words.



The Android Applications you downloaded are saved in easily:

1. Copy the. apk application to SD or USB device →Put the SD card into Tablet or connect USB device with Tablet.



2. Click File Manage .files browser logo .

- 3. Click or find the file with apk
- Click the APK application → Install
   After install successfully, the new application icon will show in Menu.
- 5. Click icon to run application or finish to return browser interface .

### **Download applications from Internet:**

User could download any Android application from internet and install it easily and fast.

- 1. Click Q Google
  - to search application in internet.
- 2. Input website address, click the download link to download the application.
- 3. After download finished, long press the application (saved in download history)  $\rightarrow$  Click and open  $\rightarrow$  install  $_\circ$

#### Connect to PC and save files.

- Connect Tablet with PC by USB cable. One side is USB OTG port , another side connect PC USB port.
- 2. After connection, it will display image





it ,then click Turn on USB device then user can exchange files between PC and Tablet device, as below:



**Uninstall application** 

- 2. Choose activity time input relevant activity details in every field
- 3. Click finish
- color display for gray date mean there are agenda on the day.



### 17 Camera



Click Camer

to open camera then display icon

# Take photos

- 1. Click to t
- 2. Pictures will be kept
- 3. Click the thumbnail to enter into my album to view pictures
- 4. Click back icon to return back to camera.
- 5. Click to realize camera setting .

### **Video Recording**

- 1. click switch to Video.
- 2. Click to start recording, click to pause recording.
- 3. Video will be kept.
- 4. Click the thumbnail to play the video.
- 5. Click back icon to return back to camera.



1): Visited web site: 2): Current web site: 3): Add web sites: 4): Menu



# 16 Calendar



First used calendar, need to add an exchange account. Input account email address and password. Click on next, according to the prompt complete account configuration, after that the calendar can be used

#### **New activities**

1. In the calendar interface, click new event dates you want to build.

User can easily to uninstall Android applications as below

- 1. Click Menu button→ setting → applications→ manage applications
- 2. Choose the application → uninstall
- 3. Click Yes to confirm uninstall.



#### 12 Sound Record

Click icon Hi-QMP3 F will displ

Click icon Hi-Q MP3 F will display as below:



Click start to record ,click to stop record ,click to view the record document and the documents will named according to the time you record .Click the record document to play record ,click to set the record you made .



### 13 Clock



User can check current Date and time.

### Alarm clock

A few different alarm clock can exist in same Tablet.

☆ When the icon show in top of Screen, it means at least one alarm clock is workina.

#### Add new alarm clock.



- 1. Click icon
- Click menu button→ add clock。
- 3. Set new alarm clock.
- ☆ If you didn't set repeat ,after alarm works on time, system will auto-delete the information.
- ☆ Click to start use the new alarm clock.
  - 4. Finish

# Disable alarm clock

When the alarm time on, a window with Clock will pops out.

If User need alarm again after 10mins, click Pause.

Click Cancel to stop alarm.

#### Enable Alarm clock.

Regarding the alarm clock which already set in repeat, Then usually User need suspense using it not delete it:

- On interface of Clock, click icon to suspend use this alarm clock.
- 2. Click to resume.

#### Edit alarm clock.





- Entry the clock User need edit → reset.

### Delete alarm clock.



- 2. Open the alarm clock user need delete.
- Choose delete it .



return to desktop.



# 14 Download applications and install.



- 1. Click icon
- 2. User can check and install the available applications from PC.



### 15 Browser

User can reach to internet by browser..



to open internet: