 


CD Playback (Basic)

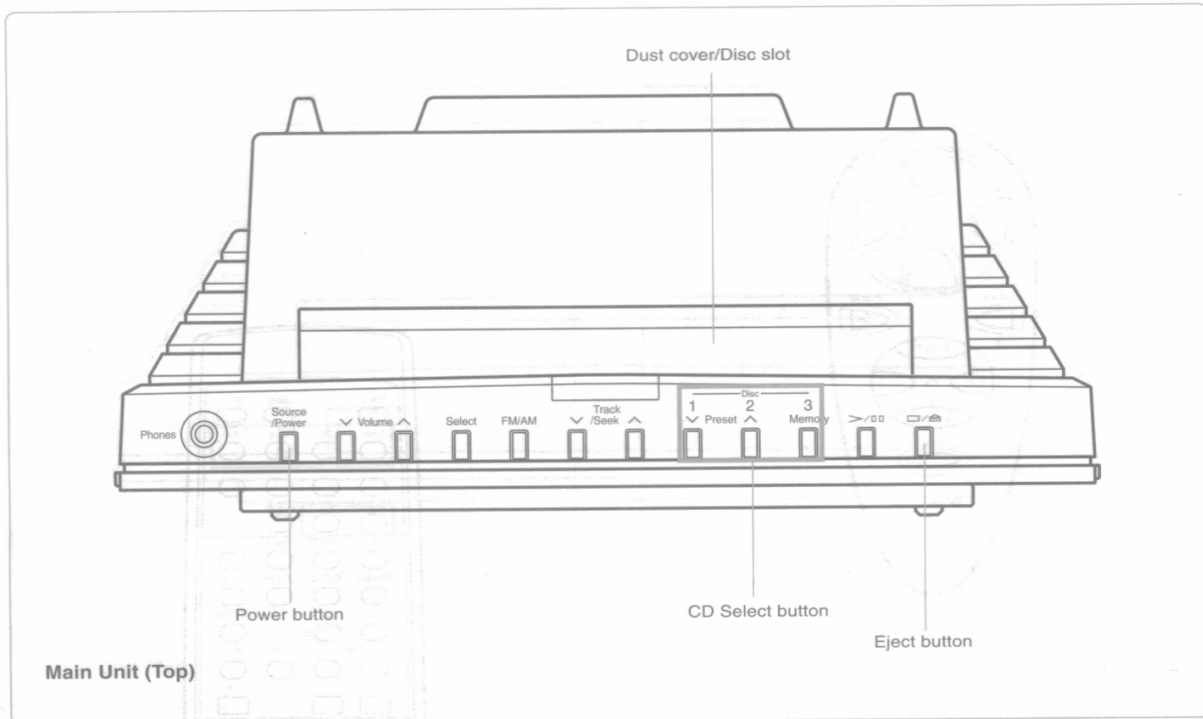

Loading the CD

Before loading the CD, press the Power button to switch on the power.

1. Press the CD Select button and select the disc number in which you wish to load the CD. (You cannot select a disc number in which no CD is loaded for CD playback. Stop playback before selecting a disc number.)
2. Press the Eject button to open the Dust cover.

CAUTION

Do not open the Dust cover by hand.

3. Gently place the disc in the Disc slot with the label side of the CD facing you. (The CD is automatically taken in, the Dust cover closes, and the Disc indicator lights.)

CAUTION

- Do not insert the 8-cm (3-inch) CDs (CD Singles).
- Do not insert discs which are not round, such as novelty discs with octagonal or heart shape.
- Do not use any commercially available CD accessories (such as adapters for 3-inch CDs, disc stabilizers, disc protectors, cleaning discs etc.).

Ejecting a CD

Before ejecting a CD, press the Power button to switch the power on. If you were playing back a CD, stop playback before ejecting the CD.

 
1. Press the CD Select button, then select the number of the disc that you wish to take out.
2. When you press the Eject button, the Dust cover opens and the CD is ejected.
3. Remove the CD.
4. Repeat Steps 1-3.
5. When you finish removing CDs, press the Eject button. (The Dust cover closes.)

CAUTION

Do not close the Dust cover by hand.


Stereo Music System

CD Playback (Basic)

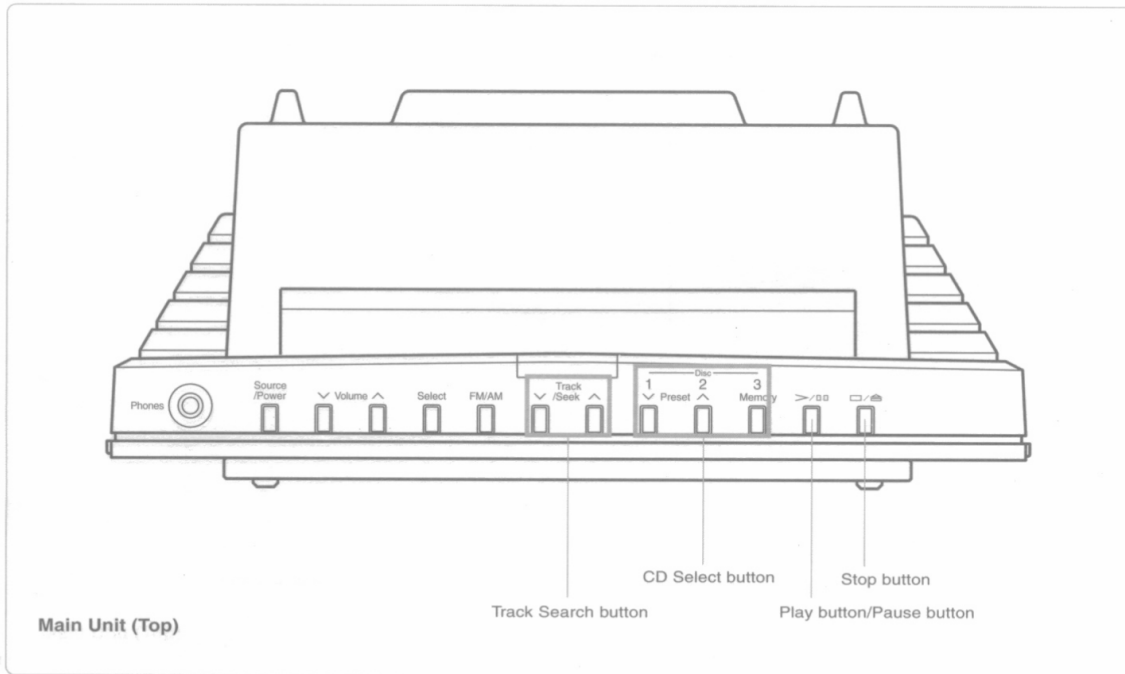

Playing back a CD

 1. Select the CD you wish to listen to with the CD Select button. (The selected disc number is displayed.)
2. Press the Play button.
 - If the contents of memory have not been erased, the system goes into memory play and normal playback is not possible.
 - The disc number, the track number, and the playing time are displayed. With each push of the Time button on the main remote control, the display cycles through the following modes.
 - Service mode is displayed for about 10 seconds, then the system automatically returns to time mode.

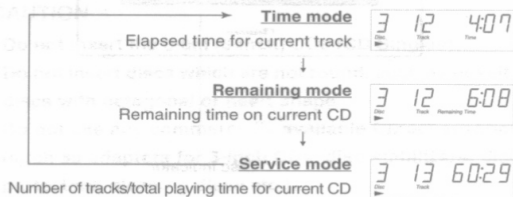

CD playback stop

Press the Stop button.

- To stop playback with the sub remote control, press and hold down the sub remote control Stop button (for at least about 1 second.)

CD playback pause

 
 
Press the Pause button.

- With playback paused, pressing the Play button resumes play where it paused.

Another CD playback

With the CD Select button, select the disc number you want to play back.

- During CD playback, you cannot select a disc number for which no CD is loaded.

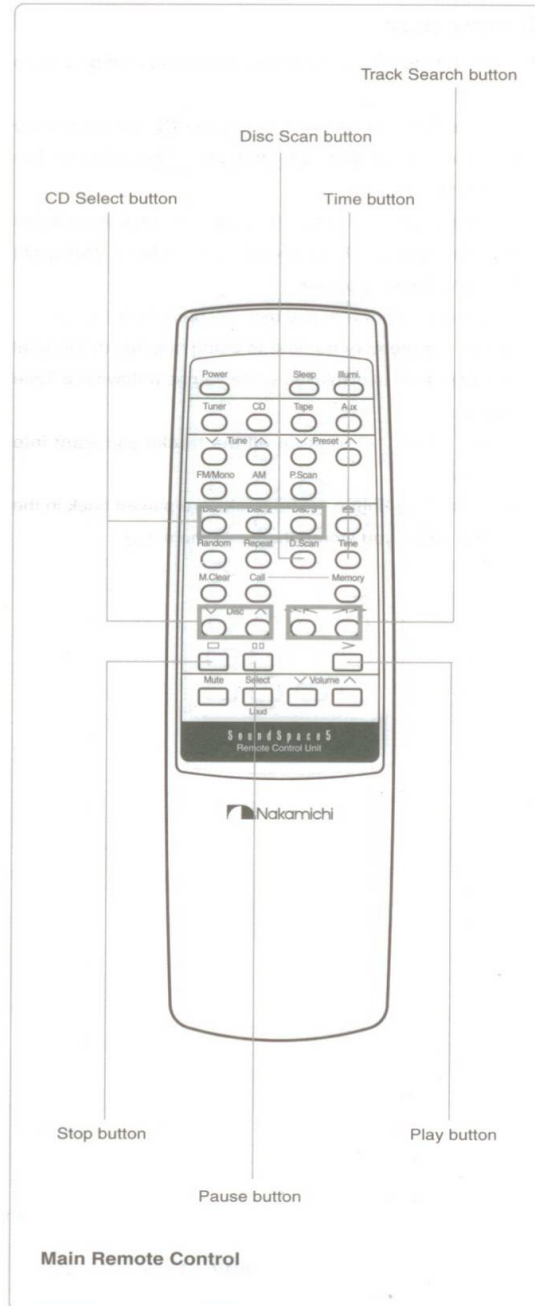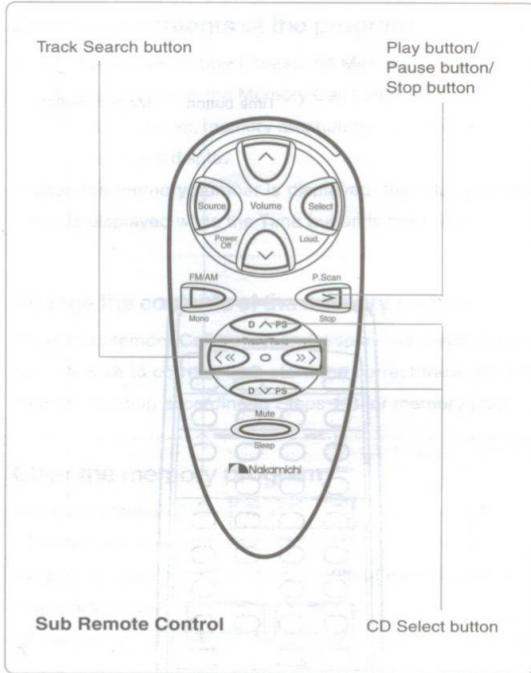

Another track playback

Select the track you want to listen to with the Track Search button.

Reverse cue/Forward cue

Press the Track Search button and hold it down (for at least about 1 second).

- Release the Track Search button to resume the playback.

Disc scan

If you press the Disc Scan button with CD playback stopped, the first approximately 8 seconds of the first track on each CD in the main unit is played back.

 
 
- When you find the disc you want, press the Disc Scan button again. That disc is played back normally.

CD Playback (Advanced)

Memory play

This unit can store up to 50 tracks in memory and play them back.

1. With the CD Select button, select the CD containing the track you wish to store into memory. (The selected disc number is displayed.)
2. With the Track Search button, select the track you want to store into memory. (The selected track number is displayed.)
3. Press the Memory button.
 - The Memory indicator and memory number are displayed.
 - When the memory number is being displayed, the total memory time is displayed while you hold down the Time button.
4. Repeat Steps 1-3 to store all the tracks you want into memory.
5. Press the Play button. (The tracks are played back in the order in which you stored them into memory.)

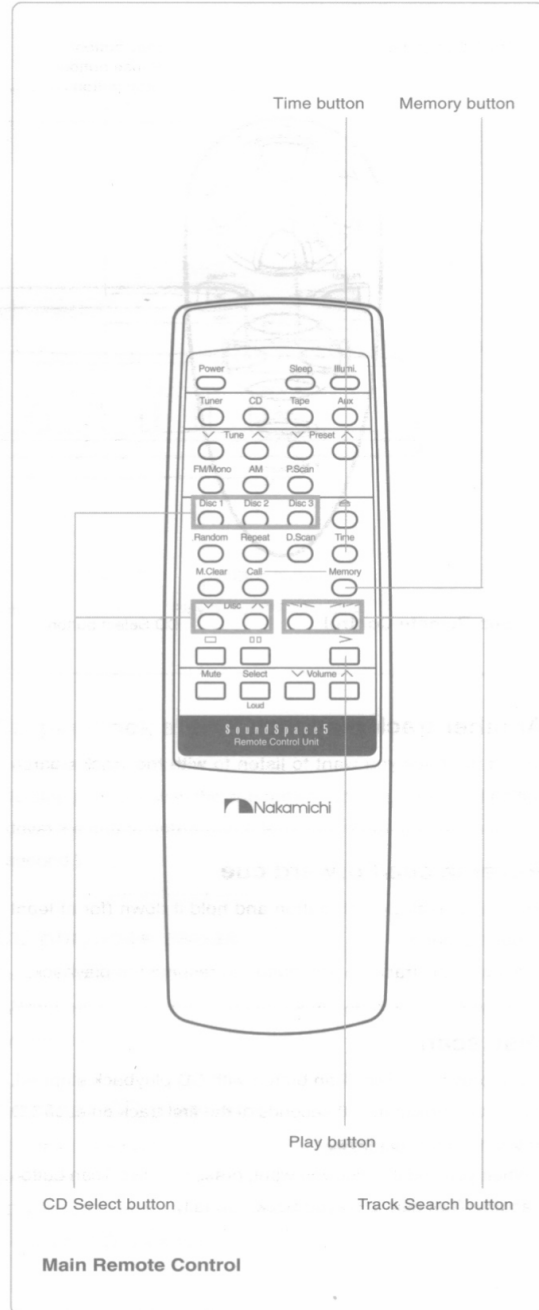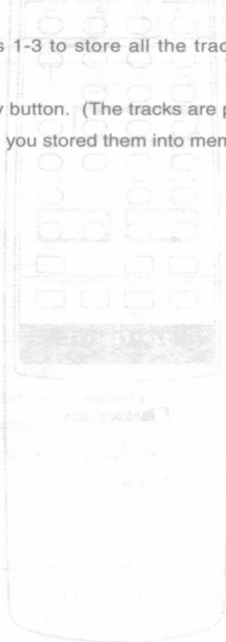

Check the contents of the program

With CD playback stopped, press the Memory Call button.

- Each time you press the Memory Call button, you can check the memory number, memory disc number, and memory track on the main unit display.
- When the memory number is displayed, the total time until then is displayed while the Time button is held down.

Change the contents of the memory number

Press the Memory Call button and display the memory number you wish to correct, then store the correct track into that memory location according to Steps 1-3 for memory play.

 
Clear the memory program

Press the Memory Clear button.

- The Memory indicator goes out.
- When you take out a CD, the contents of memory are automatically erased.
- If the contents of memory have not been erased, normal playback (Page 18), random play (Page 22), and all repeat play (Page 23) are not possible.

Checking the memory remaining time

During memory play, you can display the memory remaining time by pressing the Time button. To end this display, press the Time button until the display returns to time mode.

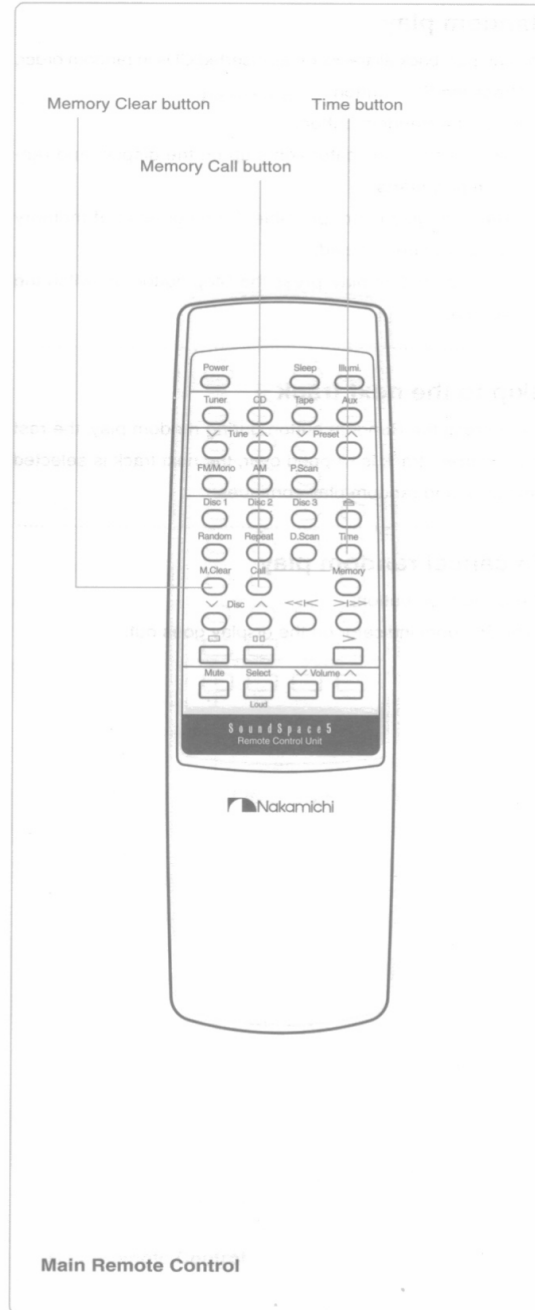

Stereo Music System

CD Playback (Advanced)

Random play

You can play back all tracks on all inserted CDs in random order.

1. Press the Stop button.
2. Press the Random button.
 - The Random indicator lights up on the display and random play starts.
 - Random play is not possible if the contents of memory have not been erased.
 - To stop random play, press the Stop button or switch the source.

 
 
Skip to the next track

If you press the Random button during random play, the rest of the current track is skipped over, the next track is selected randomly, and random play continues.

To cancel random play

Press the Stop button.

- The Random indicator on the display goes out.

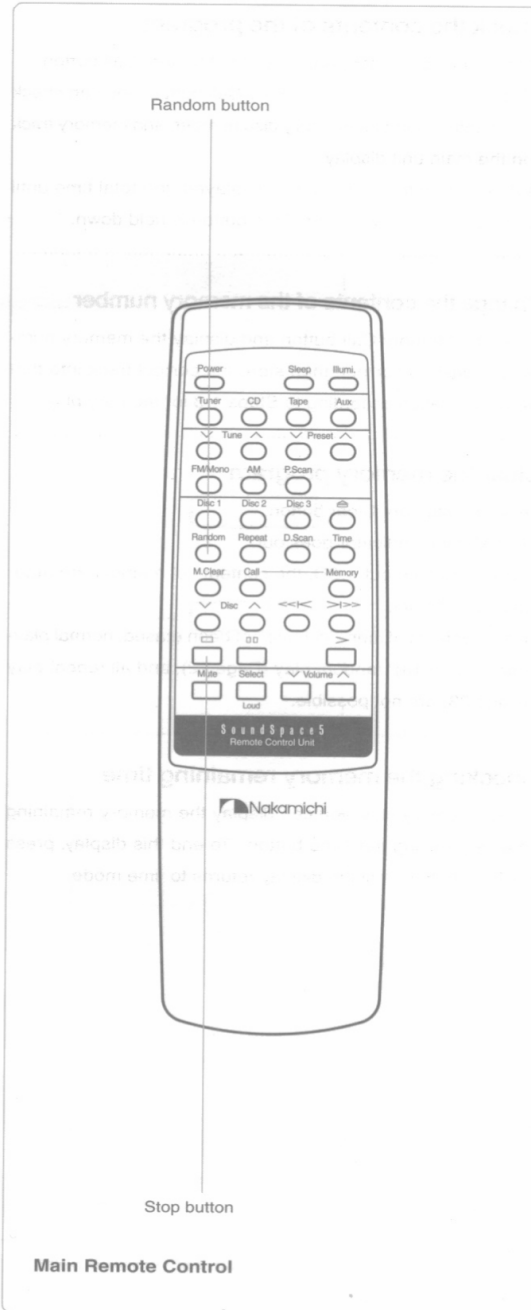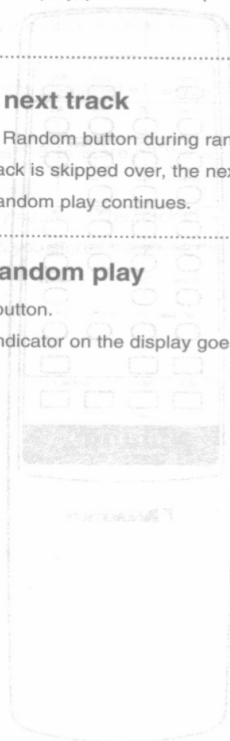

Track repeat play

The current track is played over and over.

1. Start normal playback (Page 18), memory play (Page 20), or random play (Page 22).
2. Press the Repeat button.
 - The Repeat indicator on the display lights up, the Track indicator flashes, and the current track is played back over and over.
3. To end repeat play, press the Repeat button.
 - The Repeat indicator on the display goes out and the Track indicator returns from flashing to being lit.

All repeat play

All the CDs loaded in this unit are played back over and over in order of disc number and track number.

1. Start normal playback (Page 18).
2. Press and hold down the Repeat button (for at least about 1 second).
 - The Repeat indicator lights up on the display and all repeat play starts.
3. To end all repeat play, press and hold down the Repeat button (for at least about 1 second).
 - The Repeat indicator on the display goes out.

Memory repeat play

The tracks already stored into memory are played back repeatedly.

1. Start memory play (Page 20).
2. Press and hold down the Repeat button (for at least about 1 second).
 - The Repeat indicator on the display lights up and memory repeat play starts.
3. To end memory repeat play, press and hold down the Repeat button (for at least about 1 second.)
 - The Repeat indicator on the display goes out.

