


Nikon

DIGITAL CAMERA

COOLPIX L610

Reference Manual

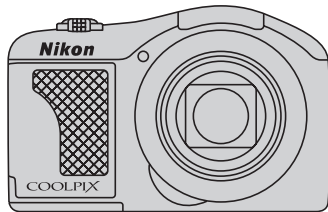

En



Feature Highlights of the COOLPIX L610

Let your camera take over

(Easy Auto) Mode **36**

Simply point the camera at the subject and your camera selects the appropriate scene mode.

Spend less time changing camera settings and more time taking pictures!

Add special effects to capture truly unique shots

Special Effects Mode **46**

Brighten, darken, or soften your pictures, or keep a specific color in the image and change the other colors to black and white.

Compose just the right shot

Target Finding AF **69**

Your camera can automatically detect the main subject in your pictures, and focus automatically on that subject.

There's no need to center the shot on your subject, allowing you to be creative with your composition.

Introduction

Parts of the Camera

The Basics of Shooting and Playback

Shooting Features

Playback Features

Recording and Playing Back Movies

General Camera Setup

Reference Section

Technical Notes and Index

Read This First

Thank you for purchasing the Nikon COOLPIX L610 digital camera. Before using the camera, please read the information in "For Your Safety" (📖 vii) and familiarize yourself with the information provided in this manual. After reading, please keep this manual handy and refer to it to enhance your enjoyment of your new camera.

Confirming the Package Contents

 
In the event that any items are missing, please contact the store where you purchased the camera.




COOLPIX L610
Digital Camera




Camera Strap



 LR6/L40 (AA-size)
alkaline batteries (x2)*



USB Cable UC-E6

 

Audio Video Cable
EG-CP16



ViewNX 2 CD



Reference Manual CD

- Warranty

- * The included batteries are for trial use only.
- A memory card is not included with the camera.

About This Manual






If you want to start using the camera right away, see “The Basics of Shooting and Playback” (📖 13).

To learn about the parts of the camera and information that is displayed in the monitor, see “Parts of the Camera” (📖 1).

Other Information

- Symbols and Conventions

To make it easier to find the information you need, the following symbols and conventions are used in this manual:

| Icon | Description |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | This icon indicates cautions and information that should be read before using the camera. |
|  | This icon indicates notes and information that should be read before using the camera. |
|  | These icons indicate other pages containing relevant information;  : “Reference Section”,  : “Technical Notes and Index.” |

- SD, SDHC, and SDXC memory cards are referred to as “memory cards” in this manual.
- The setting at the time of purchase is referred to as the “default setting.”
- The names of menu items displayed in the camera monitor, and the names of buttons or messages displayed on a computer monitor appear in bold.
- In this manual, images are sometimes omitted from monitor display samples so that monitor indicators can be more clearly shown.
- Illustrations and monitor content shown in this manual may differ from the actual product.

Information and Precautions

Life-Long Learning

As part of Nikon's "Life-Long Learning" commitment to ongoing product support and education, continually updated information is available online at the following sites:

- For users in the U.S.A.: <http://www.nikonusa.com/>
- For users in Europe and Africa: <http://www.europe-nikon.com/support/>
- For users in Asia, Oceania, and the Middle East: <http://www.nikon-asia.com/>

Visit these sites to keep up-to-date with the latest product information, tips, answers to frequently asked questions (FAQs), and general advice on digital imaging and photography. Additional information may be available from the Nikon representative in your area. Visit the site below for contact information:

<http://imaging.nikon.com/>

Use Only Nikon Brand Electronic Accessories

Nikon COOLPIX cameras are designed to the highest standards and include complex electronic circuitry. Only Nikon brand electronic accessories (including battery chargers, batteries, and AC adapters) certified by Nikon specifically for use with this Nikon digital camera are engineered and proven to operate within the operational and safety requirements of this electronic circuitry.

THE USE OF NON-NIKON ELECTRONIC ACCESSORIES COULD DAMAGE THE CAMERA AND MAY VOID YOUR NIKON WARRANTY.

For more information about Nikon brand accessories, contact a local authorized Nikon dealer.

Before Taking Important Pictures

Before taking pictures on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

About the Manuals

- No part of the manuals included with this product may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without Nikon's prior written permission.
- Nikon reserves the right to change the specifications of the hardware and software described in these manuals at any time and without prior notice.
- Nikon will not be held liable for any damages resulting from the use of this product.
- While every effort was made to ensure that the information in these manuals is accurate and complete, we would appreciate it were you to bring any errors or omissions to the attention of the Nikon representative in your area (address provided separately).

Notice Concerning Prohibition of Copying or Reproduction

Note that simply being in possession of material that was digitally copied or reproduced by means of a scanner, digital camera or other device may be punishable by law.

• **Items prohibited by law from being copied or reproduced**

Do not copy or reproduce paper money, coins, securities, government bonds or local government bonds, even if such copies or reproductions are stamped "Sample." The copying or reproduction of paper money, coins, or securities which are circulated in a foreign country is prohibited. Unless the prior permission of the government was obtained, the copying or reproduction of unused postage stamps or post cards issued by the government is prohibited.

The copying or reproduction of stamps issued by the government and of certified documents stipulated by law is prohibited.

• **Cautions on certain copies and reproductions**

The government has issued cautions on copies or reproductions of securities issued by private companies (shares, bills, checks, gift certificates, etc.), commuter passes, or coupon tickets, except when a minimum of necessary copies are to be provided for business use by a company. Also, do not copy or reproduce passports issued by the government, licenses issued by public agencies and private groups, ID cards and tickets, such as passes and meal coupons.

• **Comply with copyright notices**

The copying or reproduction of copyrighted creative works such as books, music, paintings, woodcut prints, maps, drawings, movies, and photographs is governed by national and international copyright laws. Do not use this product for the purpose of making illegal copies or to infringe copyright laws.

Disposing of Data Storage Devices

Please note that deleting images or formatting data storage devices such as memory cards or built-in camera memory does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, erase all data using commercial deletion software, or format the device and then completely refill it with images containing no private information (for example, pictures of empty sky). Be sure to also replace any pictures selected for the **Select an image** option in the **Welcome screen** setting (📖 98). Care should be taken to avoid injury or damage to property when physically destroying data storage devices.

For Your Safety

To prevent damage to your Nikon product or injury to yourself or to others, read the following safety precautions in their entirety before using this equipment. Keep these safety instructions where all those who use the product will read them.



This icon marks warnings, information that should be read before using this Nikon product, to prevent possible injury.

WARNINGS

Turn off in the event of malfunction

Should you notice smoke or an unusual smell coming from the camera or AC adapter, unplug the AC adapter and remove the batteries immediately, taking care to avoid burns. Continued operation could result in injury. After removing or disconnecting the power source, take the equipment to a Nikon-authorized service representative for inspection.

Do not disassemble

Touching the internal parts of the camera or AC adapter could result in injury. Repairs should be performed only by qualified technicians. Should the camera or AC adapter break open

as the result of a fall or other accident, take the product to a Nikon-authorized service representative for inspection, after unplugging the product and/or removing the batteries.

Do not use the camera or AC adapter in the presence of flammable gas


Do not use electronic equipment in the presence of flammable gas, as this could result in explosion or fire.

Handle the camera strap with care

Never place the strap around the neck of an infant or child.

 Keep out of reach of children


Particular care should be taken to prevent infants from putting the battery or other small parts into their mouths.

 Do not remain in contact with the camera, battery charger, or AC adapter for extended periods while the devices are on or in use

Parts of the devices become hot. Leaving the devices in direct contact with the skin for extended periods may result in low-temperature burns.

 Observe caution when handling batteries

Batteries may leak or explode if improperly handled. Observe the following precautions when handling batteries for use in this product:

- Before replacing the batteries, turn the product off. If you are using an AC adapter, be sure it is unplugged.
- Use only the batteries approved for use in this product ( 14). Do not combine old and new batteries or batteries of different makes or types.
- If Nikon rechargeable Ni-MH batteries EN-MH2 (EN-MH2-B2 or EN-MH2-B4) are purchased separately, charge and use each of them as a set. Do not combine batteries from different pairs.
- The EN-MH2 rechargeable batteries are for use with Nikon digital cameras only, and are compatible with COOLPIX L610.
- Insert batteries in the correct orientation.
- Do not short or disassemble batteries or attempt to remove or break battery insulation or casing.
- Do not expose batteries to flame or to excessive heat.
- Do not immerse in or expose to water.
- Do not transport or store with metal objects such as necklaces or hairpins.
- Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove the batteries when no charge remains.

- Discontinue use immediately should you notice any change in the batteries, such as discoloration or deformation.
- If liquid from damaged batteries comes in contact with clothing or skin, rinse immediately with plenty of water.

⚠ Observe the following precautions when handling the Battery Chargers (available separately)

- Keep dry. Failure to observe this precaution could result in fire or electric shock.
- Dust on or near the metal parts of the plug should be removed with a dry cloth. Continued use could result in fire.
- Do not handle the power cable or go near the battery charger during lightning storms. Failure to observe this precaution could result in electric shock.
- Do not damage, modify, forcibly tug or bend the power cable, place it under heavy objects, or expose it to heat or flame. Should the insulation be damaged and the wires become exposed, take it to a Nikon-

authorized service representative for inspection. Failure to observe these precautions could result in fire or electric shock.

- Do not handle the plug or battery charger with wet hands. Failure to observe this precaution could result in electric shock.
- Do not use with travel converters or adapters designed to convert from one voltage to another or with DC-to-AC inverters. Failure to observe this precaution could damage the product or result in overheating or fire.

⚠ Use appropriate cables

When connecting cables to the input and output jacks, use only the cables provided or sold by Nikon for the purpose, to maintain compliance with product regulations.

⚠ Handle moving parts with care

Be careful that your fingers or other objects are not pinched by the lens cover or other moving parts.

CD-ROMs

The CD-ROMs included with this device should not be played back on audio CD equipment. Playing CD-ROMs on an audio CD player could cause hearing loss or damage the equipment.

Observe caution when using the flash

Using the flash close to your subject's eyes could cause temporary visual impairment. Particular care should be observed if photographing infants, when the flash should be no less than 1 m (3 ft 4 in.) from the subject.

Do not operate the flash with the flash window touching a person or object

Failure to observe this precaution could result in burns or fire.

Avoid contact with liquid crystal

Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent liquid crystal from the monitor touching the skin or entering the eyes or mouth.

Turn the power off when using inside an airplane or the hospital

Turn the power off while inside the airplane during take off or landing. Follow the instructions of the hospital when using while in a hospital. The electromagnetic waves given out by this camera may disrupt the electronic systems of the airplane or the instruments of the hospital.

3D Images

Do not continuously view 3D images recorded with this device for extended periods, whether on a television, monitor, or other display.

In the case of children whose visual systems are still maturing, consult a pediatrician or ophthalmologist prior to use and follow their instructions. Prolonged viewing of 3D images may cause eye strain, nausea, or discomfort. Cease use should any of these symptoms occur and consult a physician if necessary.

Notices

Notice for Customers in the U.S.A.

Federal Communications Commission (FCC) Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.



Nikon

COOLPIX L610

CAUTIONS

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Interface Cables

Use the interface cables sold or provided by Nikon for your equipment. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules.

Notice for customers in the State of California

WARNING

Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm.

Wash hands after handling.

Nikon Inc.,
1300 Walt Whitman Road Melville,
New York 11747-3064 USA
Tel: 631-547-4200

Notice for customers in Canada

CAUTION

This Class B digital apparatus complies with Canadian ICES-003.

ATTENTION

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Symbol for Separate Collection in European Countries

This symbol indicates that this product is to be collected separately.



The following apply only to users in European countries:

- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.

This symbol on the battery indicates that the battery is to be collected separately.


















 







The following apply only to users in European countries:












 
 
- All batteries, whether marked with this symbol or not, are designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.

Table of Contents

| | | | |
|------------------------------------------------|-----------|-------------------------------------------------|-----------|
| Introduction | ii | Step 4 Focus and Shoot | 28 |
| Read This First | ii | The Shutter-release Button | 29 |
| Confirming the Package Contents | ii | Step 5 Play Back Images | 30 |
| About This Manual | iii | Step 6 Delete Images | 32 |
| Information and Precautions | iv | | |
| For Your Safety | vii | Shooting Features | 35 |
| WARNINGS | vii | 📷 (Easy Auto) Mode | 36 |
| Notices | xi | Scene Mode | |
| | | (Shooting Suited to Scenes) | 37 |
| Parts of the Camera | 1 | To View a Description of Each Scene | 38 |
| The Camera Body | 2 | Characteristics of Each Scene | 38 |
| Attaching the Camera Strap | 4 | Special Effects Mode | |
| Raising and Lowering the Flash | 5 | (Applying Effects When Shooting) | 46 |
| Using Menus (MENU Button) | 6 | Smart Portrait Mode | |
| The Monitor | 8 | (Capturing Smiling Faces) | 48 |
| Shooting Mode | 8 | Using Skin Softening | 50 |
| Playback Mode | 10 | 📷 (Auto) Mode | 51 |
| | | Features That Can Be Set Using the Multi | |
| The Basics of Shooting and Playback ... | 13 | Selector | 52 |
| Preparation 1 Insert the Batteries | 14 | Available Features | 52 |
| Applicable Batteries | 14 | Using the Flash (Flash Modes) | 53 |
| Preparation 2 Insert a Memory Card | 16 | Using the Self-timer | 56 |
| Internal Memory and Memory Cards | 17 | Using Macro Mode | 58 |
| Preparation 3 Set the Display Language, | | Adjusting Brightness | |
| Date, and Time | 18 | (Exposure Compensation) | 60 |
| Step 1 Turn the Camera On | 22 | Default Settings | 61 |
| Turning the Camera On and Off | 23 | Features That Can Be Set by Pressing the | |
| Step 2 Select a Shooting Mode | 24 | MENU Button (Shooting Menu) | 63 |
| Available Shooting Modes | 25 | Available Shooting Menus | 64 |
| Step 3 Frame a Picture | 26 | Features That Cannot Be Used | |
| Using the Zoom | 27 | Simultaneously | 65 |

| | | | |
|-------------------------------------------|----|-----------------------------------------|--------------------------------------------------------------------------------------|
| Focusing..... | 67 | Reference Section |  1 |
| Using Face Detection..... | 67 | Using Easy Panorama | |
| Target Finding AF..... | 69 | (Shooting and Playback) |  3 |
| Focus Lock..... | 71 | Shooting with Easy Panorama |  3 |
| Playback Features..... | 73 | Viewing Images Captured with Easy | |
| Playback Zoom | 74 | Panorama |  6 |
| Thumbnail Display, Calendar Display..... | 75 | Favorite Pictures Mode..... |  7 |
| Selecting Certain Types of Images for | | Adding Images to Albums..... |  7 |
| Playback | 76 | Playing Back Images in Albums..... |  8 |
| Available Playback Modes | 76 | Removing Images from Albums |  9 |
| Switching Between Playback Modes..... | 77 | Changing the Favorites Album Icon.... |  10 |
| Features That Can Be Set by Pressing the | | Auto Sort Mode |  11 |
| MENU Button (Playback Menu) | 78 | Auto Sort Mode Categories |  11 |
| Connecting the Camera to a TV, Computer, | | List by Date Mode..... |  13 |
| or Printer | 80 | Viewing and Deleting Images Captured | |
| Using ViewNX 2 | 82 | Continuously (Sequence)..... |  14 |
| Installing ViewNX 2 | 82 | Viewing Images in a Sequence..... |  14 |
| Transferring Images to the Computer | 85 | Deleting Images in a Sequence |  16 |
| Viewing Images..... | 87 | Editing Still Images..... |  17 |
| Recording and Playing Back Movies.... | 89 | Editing Features..... |  17 |
| Recording Movies | 90 | 🔍 Quick Retouch: Enhancing Contrast and | |
| Features That Can Be Set by Pressing the | | Saturation |  19 |
| MENU Button (Movie Menu)..... | 93 | 🔦 D-Lighting: Enhancing Brightness and | |
| Playing Back Movies | 94 | Contrast..... |  20 |
| General Camera Setup..... | 97 | 👤 Skin Softening: | |
| Features That Can Be Set by Pressing the | | Softening Skin Tones..... |  21 |
| MENU Button (Setup Menu) | 98 | 👓 Filter Effects: | |
| | | Applying Digital Filter Effects..... |  22 |
| | | 🖼️ Small Picture: | |
| | | Reducing the Size of an Image..... |  24 |
| | | 📏 Crop: Creating a Cropped Copy |  25 |

| | | | |
|----------------------------------------------------------------|----|------------------------------------------|----|
| Connecting the Camera to a TV (Viewing Images on a TV)..... | 27 | The Setup Menu | 69 |
| Connecting the Camera to a Printer (Direct Print)..... | 29 | Welcome Screen | 69 |
| Connecting the Camera to a Printer... | 30 | Time Zone and Date..... | 70 |
| Printing Individual Images..... | 32 | Monitor Settings | 73 |
| Printing Multiple Images | 34 | Print Date (Imprinting Date and Time)... | 75 |
| Editing Movies | 37 | Vibration Reduction..... | 76 |
| The Shooting Menu | | Motion Detection..... | 77 |
| (for (Auto) Mode)..... | 39 | AF Assist | 78 |
| Image Mode (Image Size and Quality)... | 39 | Digital Zoom | 79 |
| White Balance (Adjusting Hue) | 41 | Sound Settings..... | 80 |
| Continuous Shooting..... | 44 | Auto Off | 81 |
| ISO Sensitivity | 46 | Format Memory/Format Card..... | 82 |
| Color Options | 47 | Language..... | 83 |
| AF Area Mode..... | 48 | TV Settings..... | 84 |
| The Smart Portrait Menu..... | 49 | Blink Warning..... | 85 |
| Skin Softening | 49 | Eye-Fi Upload..... | 87 |
| Smile Timer | 50 | Reset All | 88 |
| Blink Proof..... | 50 | Battery Type | 92 |
| The Playback Menu | 51 | Firmware Version..... | 92 |
| Print Order (Creating a DPOF Print Order)..... | 51 | File and Folder Names..... | 93 |
| Slide Show | 55 | Optional Accessories | 95 |
| Protect..... | 56 | Attaching the AN-CP23 Camera Strap... | 96 |
| Rotate Image | 58 | Error Messages..... | 97 |
| Voice Memo..... | 59 | | |
| Copy (Copy Between Internal Memory and Memory Card) | 61 | | |
| Sequence Display Options | 63 | | |
| Choose Key Picture | 63 | | |
| The Movie Menu | 64 | | |
| Movie Options..... | 64 | | |
| Autofocus Mode..... | 68 | | |
| Wind Noise Reduction | 68 | | |

| | |
|----------------------------------------|--------------------------------------------------------------------------------------|
| Technical Notes and Index |  1 |
| Caring for the Product |  2 |
| The Camera..... |  2 |
| Batteries..... |  3 |
| Memory Cards..... |  5 |
| Cleaning and Storage |  6 |
| Cleaning..... |  6 |
| Storage |  7 |
| Troubleshooting |  8 |
| Specifications |  17 |
| Approved Memory Cards..... |  21 |
| Supported Standards..... |  21 |
| Index |  24 |




Parts of the Camera

This chapter describes the parts of the camera and explains information that is displayed in the monitor.


| | |
|----------------------------------------|----------|
| The Camera Body | 2 |
| Attaching the Camera Strap..... | 4 |
| Raising and Lowering the Flash..... | 5 |
| Using Menus (MENU Button) | 6 |
| The Monitor | 8 |
| Shooting Mode..... | 8 |
| Playback Mode..... | 10 |

➔ If you want to start using the camera right away, see “The Basics of Shooting and Playback” (📖 13).

The Camera Body

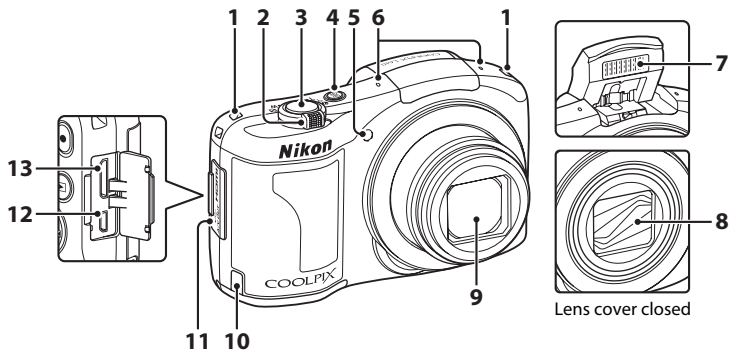

| | | | |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|-----------------------------------------------------------------------------------------|
| 1 | Eyelets for camera strap 4 | 6 | Microphone (stereo) 79, 90 |
| 2 | Zoom control 27 W : Wide-angle 27 T : Telephoto 27 : Thumbnail playback 75 : Playback zoom 74 : Help 38 | 7 | Flash 5, 53 |
| 3 | Shutter-release button 28 | 8 | Lens cover |
| 4 | Power switch/power-on lamp 22 | 9 | Lens |
| 5 | Self-timer lamp 56 AF-assist illuminator 98 | 10 | Power connector cover (for AC adapter available separately from Nikon) 15, 95 |
| | | 11 | Connector cover 80 |
| | | 12 | USB/audio/video output connector 80 |
| | | 13 | HDMI mini connector (Type C) 80 |

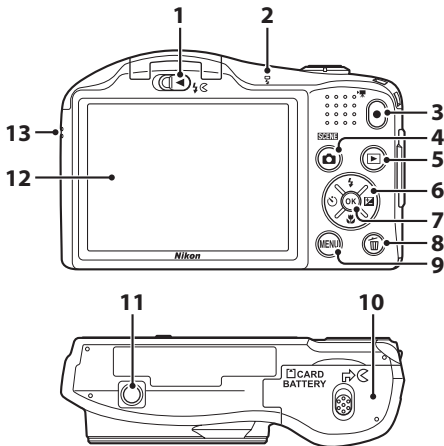


| | | |
|----------|---------------------------------|--------------------|
| 1 | (flash pop-up) control..... | 5, 53 |
| 2 | Flash lamp..... | 55 |
| 3 | (movie-record) button..... | 90 |
| 4 | (shooting mode) button | 36, 37, 46, 48, 51 |
| 5 | (playback) button..... | 30, 76 |
| 6 | Multi selector | |
| 7 | (apply selection) button | |


| | | |
|-----------|-------------------------------------------------|-------------------|
| 8 | (delete) button..... | 32 |
| 9 | MENU button | 6, 63, 78, 93, 98 |
| 10 | Battery-chamber/ memory card slot cover..... | 14, 16 |
| 11 | Tripod socket..... | 19 |
| 12 | Monitor..... | 8 |
| 13 | Speaker..... | 79, 94 |

Attaching the Camera Strap

Pass the strap through either the left or right strap eyelet and attach the strap.

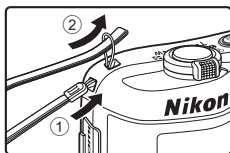

Raising and Lowering the Flash

Slide the  (flash pop-up) control to raise the flash.

- Flash settings → "Using the Flash (Flash Modes)" (📖 53)
- Push the flash down gently to lower the flash until it clicks into place when not in use.




Using Menus (MENU Button)

You can use the multi selector and the **OK** button to navigate the menus.


1 Press the **MENU** button.

- The menu is displayed.

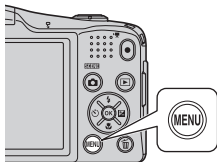


2 Press the multi selector **◀**.

- The current tab is displayed in yellow.

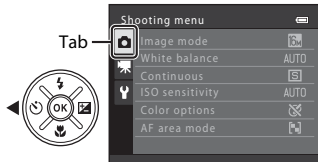


3 Press **▲** or **▼** to select another tab.

- The contents of the selected tab are displayed.

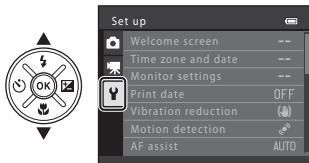


4 Press the **OK** button.


- You can now select items within the menu.

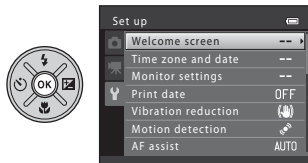


- 5** Press ▲ or ▼ to select an item in the menu.

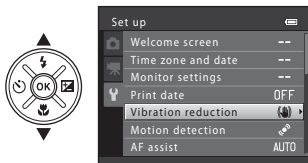

- 6** Press the **OK** button.
- The settings for the item you selected are displayed.

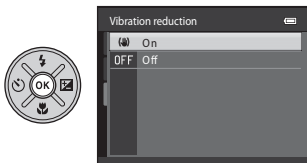



- 7** Press ▲ or ▼ to select a setting.

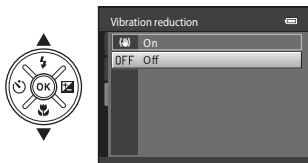

- 8** Press the **OK** button.
- The setting you selected is applied.
 - When you are finished using the menu, press the **MENU** button.



  
Notes About Setting Menu Items



- Certain menu items cannot be set depending on the current shooting mode or the state of the camera. Unavailable items are displayed in gray and cannot be selected.
- When a menu is displayed, you can switch to shooting mode by pressing the shutter-release button, the  (shooting mode) button, or the  (movie-record) button.

The Monitor


- The information that is displayed in the monitor during shooting and playback changes depending on the camera's settings and state of use.
By default, information is displayed when you turn on the camera and also when you operate the camera, and disappears after a few seconds (**Monitor settings** (📖 98) > **Photo info > Auto info**).

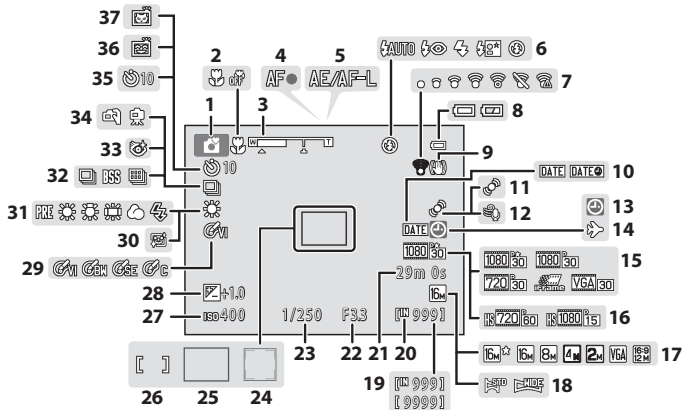







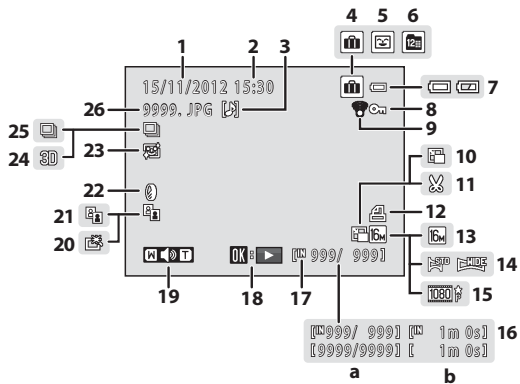



Shooting Mode











| | | | | | |
|-----------|------------------------------------------------------|----------------------------------------------------------------------------------------------|-----------|-----------------------------------------------------|------------|
| 1 | Shooting mode..... | 36, 37, 46, 48, 51 | 21 | Movie recording time..... | 92 |
| 2 | Macro mode | 58 | 22 | Aperture value | 29 |
| 3 | Zoom indicator | 27, 58 | 23 | Shutter speed..... | 29 |
| 4 | Focus indicator..... | 28 | 24 | Focus area (face detection, pet detection) | 28, 43, 48 |
| 5 | AE/AF-L indicator..... | 44 | 25 | Focus area (target finding AF)..... | 64, 69 |
| 6 | Flash mode..... | 53 | 26 | Focus area (center)..... | 28, 64 |
| 7 | Eye-Fi indicator | 99 | 27 | ISO sensitivity..... | 64 |
| 8 | Battery level indicator | 22 | 28 | Exposure compensation value | 60 |
| 9 | Vibration reduction icon..... | 98 | 29 | Color options..... | 64 |
| 10 | Print date | 98 | 30 | Skin softening..... | 64 |
| 11 | Motion detection icon | 98 | 31 | White balance | 64 |
| 12 | Wind noise reduction | 93 | 32 | Continuous shooting mode | 43, 64 |
| 13 | “Date not set” indicator..... | 21, 98,  97 | 33 | Blink proof icon | 64 |
| 14 | Travel destination indicator | 98 | 34 | Hand-held, tripod | 40 |
| 15 | Movie options (normal speed movies)... | 93 | 35 | Self-timer indicator | 56 |
| 16 | Movie options (HS movies)..... | 93 | 36 | Smile timer | 64 |
| 17 | Image mode | 64,  39 | 37 | Pet portrait auto release | 43 |
| 18 | Easy panorama..... | 42 | | | |
| 19 | Number of exposures remaining (still images)..... | 22 | | | |
| 20 | Internal memory indicator..... | 22 | | | |

Playback Mode



| | | |
|-----------|-----------------------------------------------------------|------------------------------------------------------------------------------------------|
| 1 | Date of recording | 18 |
| 2 | Time of recording | 18 |
| 3 | Voice memo indicator | 79,  59 |
| 4 | Album icon in favorite pictures mode | 76,  7 |
| 5 | Category icon in auto sort mode | 76,  11 |
| 6 | List by date icon | 76,  13 |
| 7 | Battery level indicator | 22 |
| 8 | Protect icon | 78,  56 |
| 9 | Eye-Fi indicator | 99,  87 |
| 10 | Small picture icon | 78,  24 |
| 11 | Cropped image icon | 74,  25 |
| 12 | Print order icon | 78,  51 |
| 13 | Image mode | 64,  39 |
| 14 | Easy panorama | 42,  3 |
| 15 | Movie options | 93,  64 |
| 16 | (a) Current image number/ total number of images | 30 |
| | (b) Movie recording time | 94 |

| | | |
|-----------|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| 17 | Internal memory indicator | 30 |
| | Easy panorama playback guide | 42,  6 |
| 18 | Sequence playback guide | 31,  14 |
| | Movie playback indicator | 94 |
| 19 | Volume indicator | 95 |
| 20 | Quick retouch icon | 78,  19 |
| 21 | D-Lighting icon | 78,  20 |
| 22 | Filter effects icon | 78,  22 |
| 23 | Skin softening icon | 78,  21 |
| 24 | 3D image indicator | 44 |
| 25 | Sequence display (when Individual pictures is selected) | 79,  63 |
| 26 | File number and type |  93 |



A series of ten horizontal dashed lines spanning the width of the page, intended for handwriting practice.



The Basics of Shooting and Playback

Preparation

| | |
|-------------------------------------------------------------|----|
| Preparation 1 Insert the Batteries | 14 |
| Preparation 2 Insert a Memory Card | 16 |
| Preparation 3 Set the Display Language, Date, and Time..... | 18 |



Shooting

| | |
|------------------------------------|----|
| Step 1 Turn the Camera On..... | 22 |
| Step 2 Select a Shooting Mode..... | 24 |
| Step 3 Frame a Picture | 26 |
| Step 4 Focus and Shoot..... | 28 |



Playback

| | |
|-------------------------------|----|
| Step 5 Play Back Images | 30 |
| Step 6 Delete Images..... | 32 |

Preparation 1 Insert the Batteries


1 Open the battery-chamber/memory card slot cover.

- Before opening the battery-chamber/memory card slot cover, hold the camera upside down to prevent the batteries from falling out.



2 Insert the batteries.

- Confirm that the positive (+) and negative (-) terminals are oriented correctly as described on the label at the entrance of the battery chamber, and insert the batteries.

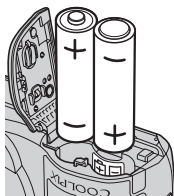

3 Close the battery-chamber/memory card slot cover.



Applicable Batteries

 
- LR6/L40 (AA-size) alkaline battery × 2 (included batteries)
- FR6/L91 (AA-size) lithium battery × 2
- EN-MH2 rechargeable Ni-MH (nickel metal hydride) battery × 2

✓ Removing the Batteries

- Turn the camera off and be sure that the power-on lamp and the monitor have turned off before opening the battery-chamber/memory card slot cover.
- The camera, batteries, or memory card may be hot immediately after using the camera. Observe caution when removing the batteries or memory card.

✓ Notes About the Batteries


- Be sure to read and follow the warnings for the battery on page viii and in “Batteries” (🔋3) before use.
- Do not combine old and new batteries or batteries of different makes or types.
- Batteries with the following defects cannot be used:



Batteries with peeling



 Batteries with insulation that does not cover the area around the negative terminal



Batteries with a flat negative terminal

✓ Battery Type

By setting **Battery type** in the setup menu (📖 99) to match the type of batteries inserted in the camera, the batteries can perform more efficiently.

The default setting is the type of battery included with purchase. When any other type of battery is used, turn the camera on and change the setting.

🔪 Alkaline Batteries

Performance of alkaline batteries may vary greatly depending on the manufacturer. Choose a reliable brand.

🔪 AC Power Source

- You can use the AC Adapter EH-65A (available separately; 📷95) to power the camera from an electrical outlet.
- Do not, under any circumstances, use another make or model of AC adapter other than the EH-65A. Failure to observe this precaution could result in overheating or in damage to the camera.

Preparation 2 Insert a Memory Card

1 Turn off the camera and open the battery-chamber/memory card slot cover.

- When the camera turns off, the power-on lamp and the monitor turn off.
- Before opening the battery-chamber/memory card slot cover, hold the camera upside down to prevent the batteries from falling out.




2 Insert a memory card.


- Slide the memory card in until it clicks into place.

Inserting a Memory Card

Inserting a memory card upside down or backwards could damage the camera and the memory card. Be sure to check that the memory card is in the correct orientation.

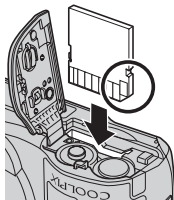

 3 Close the battery-chamber/memory card slot cover.



Formatting a Memory Card

- The first time you insert a memory card that has been used in another device into this camera, be sure to format it with this camera.
- **All data stored on a memory card is permanently deleted when the card is formatted.** Copy any data on the card that you wish to keep to a computer before formatting.
- To format a memory card, insert the card into the camera, press the **MENU** button, and select **Format card** (82) in the setup menu (98).


Notes About Memory Cards

See "Memory Cards" (5) and the documentation included with your memory card for more information.

Removing the Memory Card

Turn the camera off and be sure that the power-on lamp and the monitor have turned off before opening the battery-chamber/memory card slot cover.

Gently push the memory card into the camera (①) to partially eject the card, and then remove the card (②). Do not pull it at an angle.

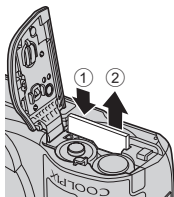

High Temperature Caution

The camera, batteries, and memory card may be hot immediately after using the camera. Observe caution when removing the batteries or memory card.

Internal Memory and Memory Cards


Camera data, including images and movies, can be saved either in the camera's internal memory (approx. 28 MB) or on a memory card. Remove the memory card to use the internal memory for image saving and playback.

Preparation 3 Set the Display Language, Date, and Time


When the camera is turned on for the first time, the language-selection screen and the date and time setting screen for the camera clock are displayed.

1 Press the power switch to turn on the camera.


- When the camera is turned on, the power-on lamp (green) lights and then the monitor turns on (the power-on lamp turns off when the monitor turns on).

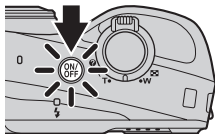

2 Press the multi selector ▲ or ▼ to select the desired language and then press the **OK** button.

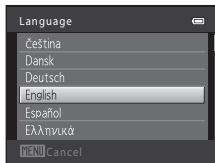

3 Press ▲ or ▼ to select **Yes** and then press the **OK** button.

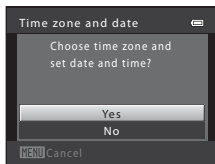


4 Press ◀ or ▶ to select your home time zone and then press the **OK** button.

- Press ▲ to enable daylight saving time. When the daylight saving time function is enabled, ☀ is displayed at the top of the monitor. Press ▼ to disable the daylight saving time function.




5 Press ▲ or ▼ to select the date format and then press the **OK** button.

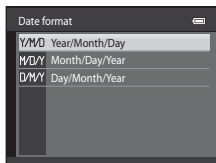


6 Press ▲, ▼, ◀, or ▶ to set the date and time, and then press the **OK** button.

- Select an item: Press ▶ or ◀ (changes between **D**, **M**, **Y**, hour, and minute).
- Edit the date and time: Press ▲ or ▼.
- Confirm the setting: Select the minute setting and then press the **OK** button.

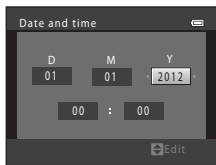


7 Press ▲ or ▼ to select **Yes** and then press the **OK** button.

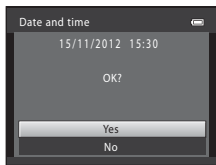




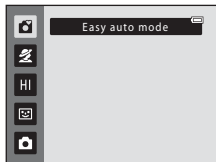
8 Press the button.

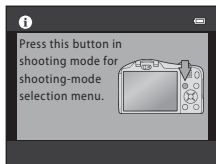- The lens extends and the shooting-mode selection screen is displayed.



9 When **Easy auto mode** is displayed, press the button.

- The camera enters the shooting mode and you can take pictures in Easy auto mode (📖 24).
- To switch to another shooting mode, press the multi selector  or  before pressing the  button.



Changing the Language Setting and the Date and Time Setting

- You can change these settings using the **Language** (🔍83) and **Time zone and date** (🔍70) settings in the **Y** setup menu (📖 98).
- You can enable and disable daylight saving time by selecting the **Y** setup menu > **Time zone and date** (🔍70) > **Time zone**. When enabled, the clock moves forward one hour; when disabled, the clock moves back one hour. When the travel destination (👉) is selected, the time difference between the travel destination and the home time zone (🏠) is automatically calculated and the date and time in the selected region are saved at the time of shooting.
- If you exit without setting the date and time, 🕒 flashes when the shooting screen is displayed. Use the **Time zone and date** setting in the setup menu to set the date and time (📖 98, 🔍70).

The Clock Battery



- The camera's clock is powered by a backup battery that is separate from the camera's main batteries.
- The backup battery charges when the main batteries are inserted into the camera or when the camera is connected to an optional AC adapter, and can provide several days of backup power after about 10 hours of charging.
- If the camera's backup battery becomes exhausted, the date and time setting screen is displayed when the camera is turned on. Set the date and time again. → Step 3 of "Preparation 3 Set the Display Language, Date, and Time" (📖 18)


Imprinting the Shooting Date in Printed Images

- Set the date and time before shooting.
- You can permanently imprint the shooting date in images as they are captured by setting **Print date** (🔍75) in the setup menu (📖 98).
- If you want the shooting date to be printed without using the **Print date** setting, print using the ViewNX 2 software (📖 82).

Step 1 Turn the Camera On



1 Press the power switch.

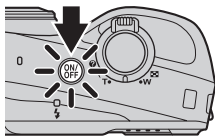- The lens extends and the monitor turns on.
- Slide the  (flash pop-up) control to raise the flash ( 5).




2 Check the battery level indicator and the number of exposures remaining.

Battery Level Indicator

| Display | Description |
|-----------------------------------------------------------------------------------|---------------------------------------------------------|
|  | Battery level high. |
|  | Battery level low. Prepare to replace the batteries. |
| Battery exhausted. | Cannot take pictures. Replace the batteries. |

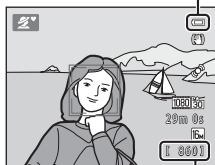


Battery level indicator




Number of exposures remaining

Number of Exposures Remaining


The number of pictures that can be taken is displayed.

-  is displayed when no memory card is inserted in the camera, and images are saved in the internal memory (approx. 28 MB).
- The number of exposures remaining depends on the amount of available memory in the internal memory or memory card, and also varies depending on the image quality and image size (determined by the image mode setting;  64,  40).

Notes About the Flash

The flash does not pop-up automatically. Raise the flash ( 5, 53) in situations where you want to use the flash, such as in dark locations or when the subject is backlit.

Turning the Camera On and Off





- When the camera is turned on, the power-on lamp (green) lights and then the monitor turns on (the power-on lamp turns off when the monitor turns on).
- To turn off the camera, press the power switch. When the camera turns off, the power-on lamp and the monitor turn off.
- You can press and hold the  (playback) button to turn on the camera and switch to playback mode. The lens does not extend.



Power Saving Function (Auto Off)

If no operations are performed for a while, the monitor turns off, the camera enters standby mode, and the power-on lamp flashes. If no operations are performed for approx. another three minutes, the camera turns off automatically.


While the camera is in standby mode, the monitor turns back on if you perform any of the following operations:

- Press the power switch, shutter-release button,  (shooting mode) button,  (playback) button, or  (movie-record) button
- The time that elapses before the camera enters standby mode can be changed using the **Auto off** setting in the setup menu ( 98).
- By default, the camera enters standby mode in about one minute when you are using shooting mode or playback mode.


Step 2 Select a Shooting Mode


1 Press the button.

- The shooting-mode selection menu, which allows you to select the desired shooting mode, is displayed.

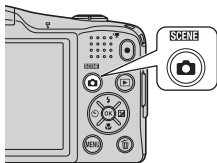



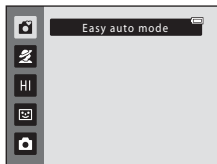


2 Press the multi selector or to select the desired shooting mode and then press the button.

-  (easy auto) mode is used in this example.
- The shooting mode setting is saved when the camera is turned off.



Available Shooting Modes

| | |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Easy auto mode (📖 36) | The camera automatically selects the optimum scene mode when you frame a picture. |
|  Scene (📖 37) | Camera settings are optimized according to the scene that you select. <ul style="list-style-type: none">• To select a scene, first display the shooting-mode selection menu and then press the multi selector ▶. Select the desired scene by pressing ▲, ▼, ◀, or ▶, and then press the OK button. |
|  Special effects (📖 46) | Effects can be applied to images when shooting. Four different effects are available. <ul style="list-style-type: none">• To select an effect, first display the shooting-mode selection menu and then press the multi selector ▶. Select the desired effect by pressing ▲, ▼, ◀, or ▶, and then press the OK button. |
|  Smart portrait (📖 48) | When the camera detects a smiling face, you can take a picture automatically without pressing the shutter-release button (smile timer). You can also use the skin softening option to smooth the skin tones in people's faces. |
|  Auto mode (📖 51) | Used for general shooting. Settings can be adjusted in the shooting menu (📖 63) to suit the shooting conditions and the type of picture you want to take. |



Changing Settings When Shooting

- Features That Can Be Set Using the Multi Selector → 📖 52
 - Using the flash → 📖 53
 - Using the self-timer → 📖 56
 - Using macro mode → 📖 58
 - Adjusting brightness (exposure compensation) → 📖 60
- Features That Can Be Set by Pressing the **MENU** Button (Shooting Menu) → 📖 63
- Features That Can Be Set by Pressing the **MENU** Button (Setup Menu) → 📖 98

Step 3 Frame a Picture

1 Hold the camera steady.


- Keep fingers, hair, the camera strap, and other objects away from the lens, flash, AF-assist illuminator, and microphone.

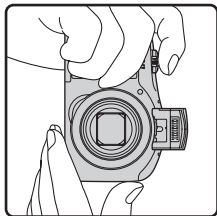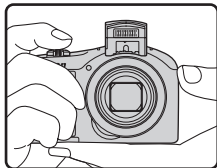

2 Frame the picture.

- Aim the camera at the desired subject.
- When the camera determines the scene mode, the shooting mode icon changes (📖 36).

Shooting mode icon

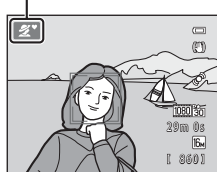

✓ Easy Auto Mode

- Depending upon shooting conditions, the camera may not select the desired scene mode. In this case, select another shooting mode (📖 37, 46, 48, 51).
- When the digital zoom is in effect, the scene mode changes to 📷.

📎 When Using a Tripod

 

- We recommend using a tripod to stabilize the camera in the following situations:
 - When shooting in dark conditions with the flash lowered, or when shooting in dark conditions using a shooting mode in which the flash does not fire
 - When zooming in on the subject
- Set **Vibration reduction** to **Off** in the setup menu (📖 98) when using a tripod.

Using the Zoom

Rotate the zoom control to activate optical zoom.

- To zoom in closer to the subject, rotate the zoom control to **T** (telephoto).
 - To zoom out and view a larger area, rotate the zoom control to **W** (wide-angle).
- When you turn the camera on, the zoom moves to the maximum wide-angle position.
- The zoom operates quickly when you rotate the zoom control fully, and operates slowly when you rotate the zoom control partially (except when recording movies).
 - A zoom indicator is displayed at the top of the monitor when the zoom control is rotated.
 - If you rotate the zoom control to **T** when the camera is zoomed in to the maximum optical zoom position, you can use the digital zoom to magnify the image by up to 2x.


Zoom out **W** **T** Zoom in

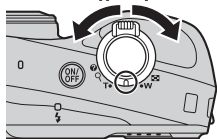

📎 Digital Zoom and Interpolation


When using the digital zoom, image quality deteriorates when zooming in past 📷 in the zoom indicator.

 The position of 📷 is more to the right when shooting smaller images; therefore, when the image size is smaller (as determined by the image mode setting; 📖 64, 📷 39), more digital zoom can be applied without image quality deterioration.



Step 4 Focus and Shoot

- 1 Press the shutter-release button halfway (📖 29).

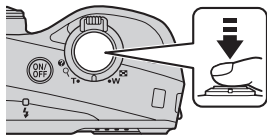

- When a face is detected:
The camera focuses on the face framed by the yellow double border (focus area). When the subject is in focus, the double border glows green.
- When no faces are detected:
The camera focuses on the subject in the center of the frame. When the camera has focused, the focus area glows green.
- When you are using digital zoom, the camera focuses on the subject in the center of the frame and the focus area is not displayed. When the camera has focused, the focus indicator (📖 8) glows green.
- While the shutter-release button is pressed halfway, the focus area or focus indicator may flash in red. This indicates that the camera is unable to focus. Modify the composition and then press the shutter-release button halfway again.





- 2 Press the shutter-release button the rest of the way down (📖 29).

- The shutter is released and the image is saved.



The Shutter-release Button

| | |
|------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Press halfway</p>  | <p>To set focus and exposure (shutter speed and aperture value), press the shutter-release button halfway, stopping when you feel resistance. Focus and exposure remain locked while the shutter-release button is pressed halfway.</p> |
| <p>Press all the way</p>  | <p>While pressing the shutter-release button halfway, press the shutter-release button the rest of the way down to release the shutter and take a picture. Do not use force when pressing the shutter-release button, as this may result in camera shake and blurred images. Press the button gently.</p> |



✓ Notes About Saving Data

After taking pictures or recording a movie, the number of exposures remaining or the remaining recording time flashes while images or movies are being saved. **Do not open the battery-chamber/memory card slot cover.** Image and movie data could be lost and the camera or memory card could be damaged.

✓ Notes About Focus

Subjects Not Suitable for Autofocus →  72

AF-assist Illuminator and Flash

If the subject is dimly lit, the AF-assist illuminator ( 98) may light when the shutter-release button is pressed halfway, and the flash ( 53) may fire when the shutter-release button is pressed all the way down.


To Make Sure You Do Not Miss a Shot

If you are concerned that you might miss a shot, press the shutter-release button all the way without first pressing it halfway.





Step 5 Play Back Images

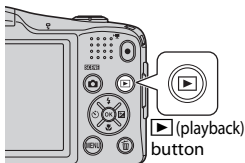1 Press the (playback) button.

 
- The camera switches to playback mode and the last image saved is displayed in full-frame playback mode.






2 Use the multi selector to select an image to display.


- Display the previous image:  or 
- Display the next image:  or 

Displays the previous image



Displays the next image

- Remove the memory card from the camera to play back images saved in the camera's internal memory.  is displayed near the current image number/total number of images.
- To return to shooting mode, press the  button, the shutter-release button, or the  button.

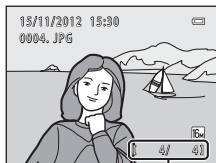

Current image number/
total number of images


Viewing Images


- Images may be displayed briefly at low resolution immediately after switching to the previous image or next image.
- When you play back images in which the face of a person (📖 67) or pet (📖 43) was detected at the time of shooting, depending on the orientation of the detected face, the images are automatically rotated for playback display.
- Each series of images captured using continuous shooting is saved in a sequence, and by default, only the first image in the sequence (key picture) is displayed to represent them (📖 79). Press the **OK** button to display them as individual images. Press **▲** to return to the key picture only display.




More Information


- Playback Zoom → 📖 74
- Thumbnail Display, Calendar Display → 📖 75
- Selecting Certain Types of Images for Playback → 📖 76
- Features That Can Be Set by Pressing the **MENU** Button (Playback Menu) → 📖 78


Step 6 Delete Images

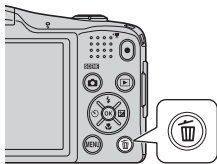- 1 Press the  button to delete the image currently displayed in the monitor.






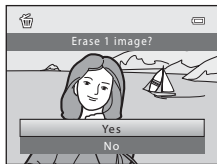
- 2 Press the multi selector  or  to select the desired deletion method and then press the  button.

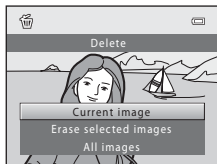- **Current image:** Only the current image is deleted.
- **Erase selected images:** Multiple images can be selected and deleted ( 33).
- **All images:** All images are deleted.
- To exit without deleting, press the **MENU** button.



- 3 Press  or  to select **Yes** and then press the  button.


- Deleted images cannot be recovered.
- To cancel, press  or  to select **No** and then press the  button.



Operating the Erase Selected Images Screen

1 Press the multi selector ◀ or ▶ to select an image to be deleted, and then press ▲ to display ✓.

- To undo the selection, press ▼ to remove ✓.
- Rotate the zoom control (📖 2) to **T** (📷) to switch back to full-frame playback or **W** (📖) to display thumbnails.

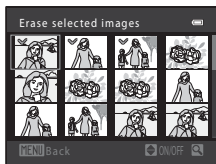

2 Add ✓ to all images that you want to delete and then press the **OK** button to confirm the selection.

- A confirmation dialog is displayed. Follow the instructions displayed in the monitor.

✓ Notes About Deletion

- Deleted images cannot be recovered. Copy important images to a computer before deleting them from the camera.
- Protected images (📖 78) cannot be deleted.

✓ Deleting Images in a Sequence

- If you press the 🗑️ button and delete a key picture while only key pictures are displayed for sequences of images (📖 30), all images in the sequence, including the key picture, are deleted.
- To delete individual images in a sequence, press the **OK** button to display them one at a time and then press the 🗑️ button.

🗑️ Deleting the Last Image Captured While in Shooting Mode

When using shooting mode, press the 🗑️ button to delete the last image that was saved.

🗑️ Selecting Certain Types of Images for Deletion

When using favorite pictures mode, auto sort mode, or list by date mode (📖 76), you can select images registered as favorites, images in a certain category, or images captured on a specific date for deletion.





A series of ten horizontal dashed lines spanning the width of the page, intended for handwriting practice.



Shooting Features




This chapter describes the camera's shooting modes and the features that are available when using each shooting mode.

You can adjust settings according to the shooting conditions and the kind of pictures you want to take.

| | |
|-----------------------------------------------------------------------------------------------------------------|-----------|
|  (Easy Auto) Mode | 36 |
| Scene Mode (Shooting Suited to Scenes) | 37 |
| Special Effects Mode (Applying Effects When Shooting) ... | 46 |
| Smart Portrait Mode (Capturing Smiling Faces) ... | 48 |
|  (Auto) Mode | 51 |
| Features That Can Be Set Using the Multi Selector | 52 |
| Using the Flash (Flash Modes) | 53 |
| Using the Self-timer | 56 |
| Using Macro Mode..... | 58 |
| Adjusting Brightness (Exposure Compensation)..... | 60 |
| Features That Can Be Set by Pressing the MENU Button (Shooting Menu) ... | 63 |
| Features That Cannot Be Used Simultaneously..... | 65 |
| Focusing | 67 |




(Easy Auto) Mode

The camera automatically selects the optimum scene mode when you frame a picture.

Enter shooting mode →  (shooting mode) button →  (easy auto) mode →  button

Automatic Scene Selection

The camera automatically selects one of the following scenes when you point the camera at a subject:









-  Portrait
-  Landscape
-  Night portrait
-  Night landscape
-  Close-up
-  Backlighting
-  Other scenes

Changing (Easy Auto) Mode Settings







































- Depending on the scene selected by the camera, you can press the multi selector ◀ (☺) or ▶ (☹) to set the corresponding features. → “Features That Can Be Set Using the Multi Selector” (📖 52), “Default Settings” (📖 61)
- Features that can be set by pressing the **MENU** button → Image mode (image size and quality; 📖 64, ⚙️ 39)

Scene Mode (Shooting Suited to Scenes)

When one of the following scenes is selected, camera settings are automatically optimized for the selected scene.

Enter shooting mode →  (shooting mode) button →  (second icon from the top*) →  → , , ,  → select a scene → 

* The last icon you selected is displayed.

| | | | |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Portrait (default setting;  38) |  Landscape ( 38) |  Sports ( 38) |  Night portrait ( 39) |
|  Party/indoor ( 39) |  Beach ( 39) |  Snow ( 39) |  Sunset ( 39) |
|  Dusk/dawn ( 39) |  Night landscape ( 40) |  Close-up ( 40) |  Food ( 41) |
|  Museum ( 41) |  Fireworks show ( 41) |  Black and white copy ( 41) |  Backlighting ( 42) |
|  Easy panorama ( 42) |  Pet portrait ( 43) |  3D 3D photography ( 44) | |

Changing Scene Mode Settings

- Depending on the scene, the multi selector , , , or  can be used to set the corresponding features. → “Features That Can Be Set Using the Multi Selector” ( 52), “Default Settings” ( 61)
- Features that can be set by pressing the **MENU** button → Image mode (image size and quality;  64,  39)

To View a Description of Each Scene

Select the desired scene from the scene selection screen and rotate the zoom control (📖 2) to **T** (🔍) to view a description of that scene. To return to the original screen, rotate the zoom control to **T** (🔍) again.



Characteristics of Each Scene

👤 Portrait

- When the camera detects a person's face, it focuses on that face (📖 67).
- The skin softening feature makes the skin tones in people's faces appear smoother (📖 50).
- If no faces are detected, the camera focuses on the subject in the center of the frame.
- Digital zoom cannot be used.
- The camera focuses even when the shutter-release button is not pressed halfway. You may hear the sound of the camera focusing.


🏞️ Landscape

- The focus area or focus indicator (📖 9) always glows green when the shutter-release button is pressed halfway.

🏃 Sports

- The camera focuses on the area in the center of the frame.
- If you continue to hold the shutter-release button all the way down, up to about 4 images are captured continuously at a rate of about 1.9 fps (when **Image mode** is set to 📷).
- The camera focuses even when the shutter-release button is not pressed halfway. You may hear the sound of the camera focusing.
- Focus, exposure, and hue are fixed at the values determined with the first image in each series.
- The frame rate with continuous shooting may vary depending upon the current image mode setting, the memory card used, or shooting condition.

📷: Shutter speed is reduced when using scene modes indicated with 📷; therefore, the use of a tripod is recommended. Set **Vibration reduction** to **Off** in the setup menu (📖 98) when shooting using a tripod to stabilize the camera.

 Night portrait

- The flash always fires. Raise the flash before shooting.
- When the camera detects a person's face, it focuses on that face (📖 67).
- The skin softening feature makes the skin tones in people's faces appear smoother (📖 50).
- If no faces are detected, the camera focuses on the subject in the center of the frame.
- Digital zoom cannot be used.

 Party/indoor

- The camera focuses on the area in the center of the frame.
- As images are easily affected by camera shake, hold the camera steadily. Set **Vibration reduction** to **Off** in the setup menu (📖 98) when shooting using a tripod to stabilize the camera.

 Beach


- The camera focuses on the area in the center of the frame.

 Snow

- The camera focuses on the area in the center of the frame.


 

 Sunset

- The camera focuses on the area in the center of the frame.



 Dusk/dawn




- The focus area or focus indicator (📖 9) always glows green when the shutter-release button is pressed halfway.

Night landscape

- After you select  **Night landscape**, select  **Hand-held** or  **Tripod** on the next screen.
-  **Hand-held** (default setting): Select this option to produce shots with reduced blurring and noise even when the camera is hand-held.
 - When the  icon in the upper left of the monitor lights in green, press the shutter-release button all the way to capture a series of images that will be combined and saved as a single image.
 - Once the shutter-release button is pressed all the way, hold the camera still until the captured image is displayed. After taking a picture, do not turn the camera off before the monitor switches to the shooting screen.
 - The angle of view (i.e., the area visible in the frame) seen in the saved image is narrower than that seen in the monitor at the time of shooting.
-  **Tripod**: Select this option when using a tripod or other means to stabilize the camera when shooting.
 - Vibration reduction is not used even if **Vibration reduction** ( 98) in the setup menu is set to **On**.
 - One image is captured at a slow shutter speed when the shutter-release button is pressed all the way.
- The focus area or focus indicator ( 9) always glows green when the shutter-release button is pressed halfway.
- Digital zoom cannot be used.


Close-up

- Macro mode ( 58) is enabled and the camera automatically zooms to the closest position at which it can shoot.
- The camera focuses on the area in the center of the frame. Use focus lock to frame the picture on an object not in the center of the frame ( 71).
- The camera focuses even when the shutter-release button is not pressed halfway. You may hear the sound of the camera focusing.

 Shutter speed is reduced when using scene modes indicated with ; therefore, the use of a tripod is recommended. Set **Vibration reduction** to **Off** in the setup menu ( 98) when shooting using a tripod to stabilize the camera.

Food

- Macro mode (📖 58) is enabled and the camera automatically zooms to the closest position at which it can shoot.
- You can adjust hue by pressing the multi selector ▲ or ▼. The hue setting is saved in the camera's memory even after the camera is turned off.
- The camera focuses on the area in the center of the frame. Use focus lock to frame the picture on an object not in the center of the frame (📖 71).
- The camera focuses even when the shutter-release button is not pressed halfway. You may hear the sound of the camera focusing.

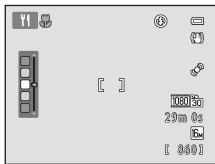


Museum

- The flash does not fire.
- The camera focuses on the area in the center of the frame.
- The camera captures a series of up to 10 images while the shutter-release button is held all the way down, and the sharpest image in the series is automatically selected and saved (best shot selector).

Fireworks show



- Shutter speed is fixed at 4 seconds.
- The camera focuses at infinity.
- When the shutter-release button is pressed halfway, the focus indicator (📖 9) always glows green.
- There are six positions available when using the optical zoom, as shown on the right.

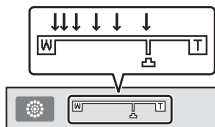




Black and white copy

- The camera focuses on the area in the center of the frame.
- Use together with macro mode (📖 58) when shooting subjects that are close to the camera.

Backlighting

- The flash always fires. Raise the flash before shooting.
- The camera focuses on the area in the center of the frame.

Easy panorama



- You can take a panorama picture simply by moving the camera in the desired direction.
 - After you select  **Easy panorama**, select the shooting range from **Normal (180°)** or **Wide (360°)** on the next screen.
 - Press the shutter-release button all the way down, remove your finger from the button, and then slowly pan the camera horizontally. Shooting automatically ends when the camera captures the specified shooting range.
 - The camera focuses on the area in the center of the frame when shooting starts.
 - The zoom position is fixed at the maximum wide-angle position.
 - If you press the  button when an image captured using easy panorama is displayed in full-frame playback mode, the image scrolls automatically.
- “Using Easy Panorama (Shooting and Playback)”  3

Notes About Printing Panorama Images




When printing panorama images, the entire image may not be able to be printed depending on the printer's settings. Additionally, printing may not be possible depending on the printer.

See the documentation provided with the printer or consult a digital photo lab for details.

Pet portrait

- When you aim the camera at the face of a dog or cat, the camera can detect the face and focus on it. By default, the camera automatically releases the shutter once it has focused (pet portrait auto release).
- After you select  **Pet portrait**, select **Single** or **Continuous** on the next screen.
 - **Single:** Images are captured one at a time.
 - **Continuous:** The camera captures 3 images continuously when it has focused on the detected face. If you want to shoot manually, the camera captures about 4 images while you hold the shutter-release button all the way down. Images are captured continuously at a rate of about 1.9 fps (when **Image mode** is set to  **4608x3456**).


Pet Portrait Auto Release

- To change **Pet portrait auto release** settings, press the multi selector  (Ⓞ).
 - : When the camera detects a pet's face, it focuses and then releases the shutter automatically.
 - **OFF:** The camera does not release the shutter automatically, even if a pet's face is detected. Press the shutter-release button to release the shutter. The camera also detects people's faces ( 67).
- If the camera detects a person's face and a pet's face in the same shot, it focuses on the pet's face.
- **Pet portrait auto release** turns off automatically when:
 - Five bursts have been taken.
 - Internal memory or the memory card is full.

To continue shooting with **Pet portrait auto release**, press the multi selector  (Ⓞ) to set again.

Focus Area

- When the camera detects a face, a yellow double border (focus area) is displayed around the face, and the double border turns green when the camera has focused.
- When the camera detects more than one dog or cat face (up to five can be detected), the face displayed largest in the monitor is framed by a double border and the others by single borders.
- If no pets' or people's faces are detected, the camera focuses on the subject in the center of the frame.

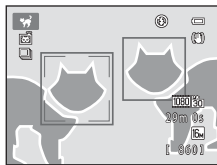


Notes About Pet Portrait

- Digital zoom cannot be used.
- Depending on the distance of the subject from the camera, the speed of the subject's movement, the direction that the subject is facing, the ambient brightness of the face, etc., pet faces may not be detected or other subjects may be framed by a border.

3D 3D photography

- The camera captures one image for each eye to simulate a 3D image on a 3D-compatible TV or monitor.
- After taking the first picture by pressing the shutter-release button, move the camera horizontally to the right so that the subject is aligned with the guide on the monitor. The camera automatically captures the second image when it detects that the subject is aligned with the guide.
- The camera focuses on the area in the center of the frame for the first shot.
- The focus, exposure, and white balance are locked after the first shot, and **AE/AF-L** is displayed on the monitor.
- The angle of view (i.e., the area visible in the frame) seen in the saved image is narrower than that seen in the monitor at the time of shooting.
- Images captured in this mode are saved at an image size of **1920x1080**.
- The two captured images are saved as a 3D image (MPO file). The first image (the left eye image) is also saved as a JPEG file.

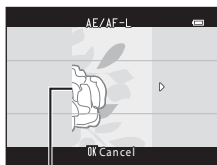

Guide

✓ Notes About Capturing 3D Images

- Moving subjects are not suited to 3D photography.
- 3D images have a less pronounced 3D feel as the distance between the camera and subject is increased.
- 3D images may have a less pronounced 3D feel when the subject is dark or when the second image is not aligned precisely.
- Images captured under dim lighting may appear grainy with noise.
- The telephoto zoom position is limited to the angle of view equivalent to that of up to a 134 mm lens in 35mm [135] format.
- If you press the **OK** button after capturing the first image, or if the camera does not detect that the subject is aligned with the guide within 10 seconds, shooting is canceled.
- If the camera does not capture the second image and cancels the shooting even when you align the guide with the subject, try manual shooting using the shutter-release button.
- Movies cannot be recorded in 3D.

✓ Playing Back 3D Images


 






- 3D images cannot be played back in 3D on the camera monitor. Only the left eye image of a 3D image is displayed during playback.
- To view 3D images in 3D, a 3D-compatible TV or monitor is required. Use a 3D-compatible HDMI cable to connect the camera and these devices (📖 80) for 3D viewing.
- When connecting the camera using an HDMI cable, set **TV settings** in the setup menu (📖 99) as follows:
 - **HDMI:** Set to **Auto** (default setting) or **1080i**.
 - **HDMI 3D output:** Set to **On** (default setting).
- When the camera is connected via HDMI and images are played back, it may take a while to display images when switching between 3D images and non-3D images. Playback zoom is not possible while images are played back in 3D.
- Refer to the documentation included with the TV or monitor for details on how to make the settings.

✓ Notes About Viewing 3D Images

When viewing 3D images on a 3D-compatible TV or monitor for an extended period of time, you may experience discomfort such as eye strain or nausea. Carefully read the documentation included with your TV or monitor to ensure proper use.

Special Effects Mode (Applying Effects When Shooting)





Effects can be applied to images when shooting.



Enter shooting mode →  (shooting mode) button →  (third icon from the top*) →
 , , ,  → select an effect →  button


* The last icon you selected is displayed.





The following four effects are available.




| Category | Description |
|--------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|
|  High key (default setting) | Gives the entire image a bright tone. |
|  Low key | Gives the entire image a dark tone. |
|  Soft | Softens the image by adding a slight blur to the entire image. |
|  Selective color | Creates a black and white image in which only the specified color remains. |

- The camera focuses on the area in the center of the frame.
- When **Selective color** is selected, press the multi selector  or  to select the desired color from the slider.

To change settings for any of the following functions, first press the  button to cancel color selection, then change the settings as desired.

- Flash mode ( 53)
- Self-timer ( 56)
- Macro mode ( 58)
- Exposure compensation ( 60)

To return to the color selection screen, press the  button again.

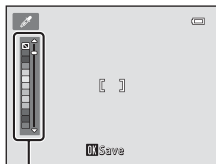




Slider

Changing Special Effects Mode Settings

- Features that can be set using the multi selector (📖 52) → Flash mode (📖 53), self-timer (📖 56), macro mode (📖 58), and exposure compensation (📖 60)
- Features that can be set by pressing the **MENU** button → Image mode (image size and quality; 📖 64, 📷39).

Smart Portrait Mode (Capturing Smiling Faces)

When the camera detects a smiling face, you can take a picture automatically without pressing the shutter-release button (smile timer). You can use the skin softening option to smooth the skin tones in people's faces.

Enter shooting mode →  (shooting mode) button →  Smart portrait mode →  button


1 Frame the picture.

- Raise the flash when using it (📖 5).
- "Using Face Detection" (📖 67)


2 Wait for the subject to smile. Do not press the shutter-release button.

- If the camera detects that the face framed by the double border is smiling, it automatically releases the shutter (**Smile timer**; 📖 64).
- After the camera releases the shutter, it continues to detect faces and smiles, and releases the shutter again if it detects a smiling face.


3 Shooting ends.

- To cancel smile detection and stop shooting, perform any of the following operations:
 - Turn the camera off.
 - Set **Smile timer** (📖 64, 🔄50) to **Off**.
 - Press the  button and select a different shooting mode.

✔ Notes About Smart Portrait Mode

- Digital zoom cannot be used.
- Under some shooting conditions, the camera may be unable to detect faces or detect smiles.
- “Using Face Detection” →  67

Auto Off When Using Smile Timer

When **Smile timer** is set to **On**, the auto off function ( 98) is activated and the camera turns off when either of the situations indicated below persists and no other operations are performed.

- The camera does not detect any faces.
- The camera detected a face, but cannot detect a smile.






When the Self-timer Lamp Flashes

When using smile timer, the self-timer lamp flashes when the camera detects a face and flashes quickly immediately after the shutter is released.

Releasing the Shutter Manually

The shutter can also be released by pressing the shutter-release button. If no faces are detected, the camera focuses on the subject in the center of the frame.

Changing Smart Portrait Mode Settings






- Features that can be set using the multi selector ( 52) → Flash mode ( 53), self-timer ( 56), and exposure compensation ( 60)
- Features that can be set by pressing the **MENU** button → Features That Can Be Set by Pressing the **MENU** Button (Shooting Menu) ( 63)


✔ Features That Cannot Be Used Simultaneously

Some settings cannot be used with other functions ( 65).

Using Skin Softening

When the shutter is released in one of the following shooting modes, the camera detects one or more person's faces (up to three), and processes the image to soften facial skin tones.

- **Portrait** or **Night portrait** in  (easy auto) mode ( 36)
- **Portrait** ( 38) or **Night portrait** ( 39) in scene mode
- Smart portrait mode ( 48)



Skin softening can also be applied to saved images ( 78,  21).

Notes About Skin Softening

- It may take more time than usual to save images after shooting.
- Under some shooting conditions, the desired skin softening results may not be achieved, or skin softening may be applied to areas of the image where there are no faces.

(Auto) Mode

Used for general shooting. Settings can be adjusted in the shooting menu (📖 63) to suit the shooting conditions and the type of picture you want to take.

Enter shooting mode →  (shooting mode) button →  (auto) mode →  button

- You can change how the camera selects the area of the frame to focus on by changing the **AF area mode** setting (📖 64). The default setting is **Target finding AF**.
When the camera detects the main subject, it focuses on that subject.
The camera has nine focus areas, and if the camera does not detect the main subject, it automatically selects the focus area containing the subject closest to the camera.
→ “Target Finding AF” (📖 69)

Changing (Auto) Mode Settings


- Features that can be set using the multi selector (📖 52) → Flash mode (📖 53), self-timer (📖 56), macro mode (📖 58), and exposure compensation (📖 60)
- Features that can be set by pressing the **MENU** button → Features That Can Be Set by Pressing the **MENU** Button (Shooting Menu) (📖 63)

Features That Cannot Be Used Simultaneously

Some settings cannot be used with other functions (📖 65).

Features That Can Be Set Using the Multi Selector

When shooting, the multi selector ▲, ▼, ◀, and ▶ can be used to set the following features.

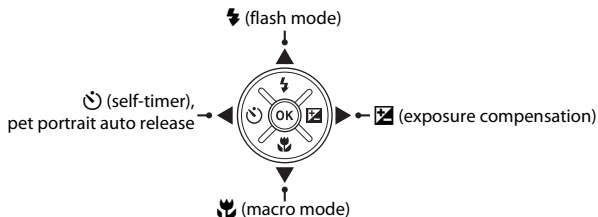

Available Features

The features that are available vary with the shooting mode, as shown below.

- See “Default Settings” (📖 61) for information about each mode’s default settings.

| | | 📷 (easy auto) | Scene | Special effects | Smart portrait | 📷 (auto) |
|---|----------------------------------|---------------|-------|-----------------|----------------|----------|
| ⚡ | Flash mode ¹ (📖 53) | – | 2 | ✓ | ✓ ³ | ✓ |
| ⌚ | Self-timer (📖 56) | ✓ | | ✓ | ✓ ³ | ✓ |
| | Pet portrait auto release (📖 43) | – | | – | – | – |
| 🌸 | Macro (📖 58) | – | | ✓ | – | ✓ |
| 📷 | Exposure compensation (📖 60) | ✓ | | ✓ | ✓ | ✓ |

¹ Can be set when the flash is raised. The flash does not fire while it is lowered.

² Varies by the scene. → “Default Settings” (📖 61)


³ Varies by the smart portrait menu setting. → “Default Settings” (📖 61)


Using the Flash (Flash Modes)

In dark locations or when the subject is backlit, you can take pictures with the flash by raising the flash.

When using  (auto) mode and other shooting modes, you can set the flash mode.

1 Slide the (flash pop-up) control.

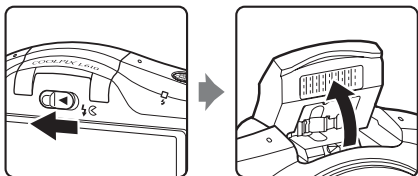


 


- The flash pops up.
- The flash does not fire while it is lowered.  is displayed to indicate that the flash does not fire.



2 Press the multi selector (flash mode).



3 Press or to select the desired mode and then press the button.

- Available Flash Modes →  54
- If a setting is not applied by pressing the  button within a few seconds, the selection is canceled.
- When  AUTO (auto) is applied,  AUTO is only displayed for a few seconds, regardless of **Monitor settings** ( 98,  73).



Available Flash Modes



Auto

The flash fires automatically when lighting is dim.



Auto with red-eye reduction

Reduces red-eye in portraits caused by the flash ( 55).



Fill flash

The flash fires whenever a picture is taken. Use to “fill-in” (illuminate) shadows and backlit subjects.



Slow sync

Auto flash mode is combined with slow shutter speed.

Suited to evening and night portraits that include background scenery. The flash illuminates main subject; slow shutter speeds are used to capture background at night or under dim lighting.

- Lower the flash when you do not want the flash to fire.

✓ Lowering the Flash

 
Push the flash down gently to lower the flash until it clicks into place when not in use (📖 5).

📎 The Flash Lamp

The flash lamp indicates the status of the flash when you press the shutter-release button halfway.

- On: The flash fires when a picture is taken.
- Flashing: The flash is charging. The camera cannot take pictures.
- Off: The flash does not fire when a picture is taken.

If the battery level is low, the monitor turns off while the flash is charging.



📎 The Flash Mode Setting

- The setting varies with the shooting mode.
 - “Available Features” (📖 52)
 - “Default Settings” (📖 61)
- Some settings cannot be used with other functions (📖 65).
- The flash mode setting applied in 📷 (auto) mode is saved in the camera’s memory even after the camera is turned off.

📎 Effective Range of the Flash

When ISO sensitivity is set to **Auto**, the flash has a range of approx. 0.5 to 6.0 m (1 ft 8 in. to 19 ft) at the maximum wide-angle zoom position and a range of approx. 1.5 to 3.2 m (5 ft to 10 ft) at the maximum telephoto zoom position.

📎 Red-eye Reduction

This camera uses “Advanced Red-Eye Reduction (In-Camera Red-Eye Fix).”

If the camera detects red eye while saving an image, the affected area is processed to reduce red-eye before the image is saved.

Note the following when shooting:

- More time than usual is required to save images.
- Red-eye reduction may not produce the desired results in all situations.
- In rare cases, areas of the image that are not affected by red-eye may be processed by red-eye reduction. In these cases, select another flash mode and take the picture again.

Using the Self-timer

The camera's self-timer can release the shutter about 10 seconds after you press the shutter-release button.

The self-timer is useful when you want to be in the picture you are taking, or when you want to avoid the effects of camera shake that occur when you press the shutter-release button.

When using the self-timer, use of a tripod is recommended. Set **Vibration reduction to Off** in the setup menu (📖 98) when shooting using a tripod to stabilize the camera.

1 Press the multi selector ◀ (🕒 self-timer).




2 Press ▲ or ▼ to select **ON** and then press the **OK** button.

- 🕒10 is displayed.
- If a setting is not applied by pressing the **OK** button within a few seconds, the selection is canceled.
- When **Pet portrait** is selected in scene mode, 📷 (pet portrait auto release) is displayed (📖 43). The self-timer cannot be used.




3 Frame the picture and then press the shutter-release button halfway.

- Focus and exposure are set.

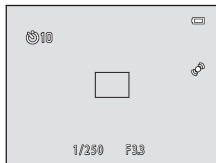

4 Press the shutter-release button the rest of the way down.

- The self-timer starts, and the number of seconds remaining before the shutter is released is displayed in the monitor. The self-timer lamp flashes while the timer is counting down. About one second before the shutter is released, the lamp stops flashing and glows steadily.
- When the shutter is released, the self-timer is set to **OFF**.
- To stop the timer before a picture is taken, press the shutter-release button again.

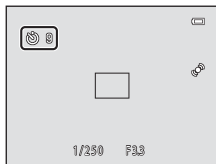

✓ Features That Cannot Be Used Simultaneously

Some settings cannot be used with other functions (📖 65).

Using Macro Mode

When using macro mode, the camera can focus on objects as close as about 1 cm (0.4 in.) from the lens.


This feature is useful when taking close-up pictures of flowers and other small subjects.

- 1 Press the multi selector ▼ (🌸 macro mode).



- 2 Press ▲ or ▼ to select **ON** and then press the **OK** button.

- The macro mode icon (🌸) is displayed.
- If a setting is not applied by pressing the **OK** button within a few seconds, the selection is canceled.

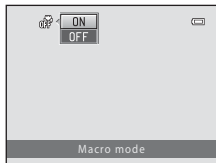

- 3 Use the zoom control to set the zoom to a position where 🌸 and the zoom indicator glow green.



- How close you can be to the subject when shooting depends on the zoom position. When the zoom is set to a position where 🌸 and the zoom indicator glow green, the camera can focus on subjects as close as about 10 cm (4 in.) from the lens. When the zoom position is set to a wide-angle position relative to ▲, the camera can focus on objects as close as about 1 cm (0.4 in.) from the lens.

Notes About Using the Flash


The flash may be unable to light the entire subject at distances of less than 50 cm (1 ft 8 in.).

Sound Made as the Camera Focuses When Using Macro Mode

When macro mode is set to **ON**, the camera may focus even when you do not press the shutter-release button halfway, depending on the shooting mode and other settings.

As a result, you may hear the sound of the camera focusing.

The Macro Mode Setting

- Macro mode cannot be used when using certain shooting modes. → “Default Settings” (📖 61)
- The macro mode setting applied in  (auto) mode is saved in the camera’s memory even after the camera is turned off.

Adjusting Brightness (Exposure Compensation)


You can adjust overall image brightness.

- 1 Press the multi selector ► (☒ exposure compensation).




- 2 Press ▲ or ▼ to select a compensation value.

- To make the image brighter, apply positive (+) exposure compensation.
- To make the image darker, apply negative (-) exposure compensation.

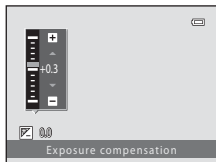

- 3 Press the **OK** button to apply the compensation value.

- If you do not press the **OK** button within a few seconds, the setting is applied and the menu disappears.
- When an exposure compensation value other than **0.0** is applied, the value is displayed with the ☒ indicator in the monitor.

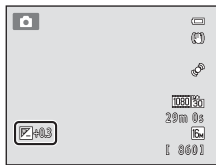

- 4 Press the shutter-release button to take a picture.





































- To turn off exposure compensation, return to step 1 and change the value to **0.0**.





Exposure Compensation Value

The exposure compensation value applied in  (auto) mode is saved in the camera's memory even after the camera is turned off.

Default Settings

Default settings for each shooting mode are described below.

| | Flash ¹ (📖 53) | Self-timer (📖 56) | Macro (📖 58) | Exposure compensation (📖 60) |
|------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|----------------------|------------------|---------------------------------|
|  (easy auto) (📖 36) | 🔌AUTO ² | Off | Off ³ | 0.0 |
|  (special effects) (📖 46) | 🔌AUTO | Off | Off | 0.0 |
|  (smart portrait) (📖 48) | 🔌AUTO ⁴ | Off ⁵ | Off ⁶ | 0.0 |
|  (auto) (📖 51) | 🔌AUTO | Off | Off | 0.0 |
| Scene | | | | |
|  (📖 38) |  | Off | Off ⁶ | 0.0 |
|  (📖 38) |  | Off | Off ⁶ | 0.0 |
|  (📖 38) |  | Off ⁶ | Off ⁶ | 0.0 |
|  (📖 39) |  | Off | Off ⁶ | 0.0 |
|  (📖 39) |  | Off | Off ⁶ | 0.0 |
|  (📖 39) | 🔌AUTO | Off | Off ⁶ | 0.0 |
|  (📖 39) | 🔌AUTO | Off | Off ⁶ | 0.0 |
|  (📖 39) |  | Off | Off ⁶ | 0.0 |
|  (📖 39) |  | Off | Off ⁶ | 0.0 |
|  (📖 40) |  | Off | Off ⁶ | 0.0 |
|  (📖 40) |  | Off | On ⁶ | 0.0 |
|  (📖 41) |  | Off | On ⁶ | 0.0 |
|  (📖 41) |  | Off | Off | 0.0 |
|  (📖 41) |  | Off ⁶ | Off ⁶ | 0.0 ⁶ |
|  (📖 41) |  | Off | Off | 0.0 |
|  (📖 42) |  | Off | Off ⁶ | 0.0 |
|  (📖 42) |  | Off ⁶ | Off ⁶ | 0.0 |

| | Flash ¹ (📖 53) | Self-timer (📖 56) | Macro (📖 58) | Exposure compensation (📖 60) |
|------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|-----------------|------------------------------------|
|  (📖 43) |  ⁶ |  ⁹ | Off | 0.0 |
| 3D (📖 44) |  ⁶ | Off ⁶ | Off | 0.0 |



- ¹ Setting is used when the flash is raised.
- ² The setting cannot be changed. The camera automatically selects the flash mode appropriate for the scene it has selected.
- ³ The setting cannot be changed. Automatically changes to macro mode when the camera selects **Close-up**.
- ⁴ Cannot be used when **Blink proof** is set to **On**.
- ⁵ Can be set when **Smile timer** is set to **Off**.
- ⁶ The setting cannot be changed.
- ⁷ The setting cannot be changed. The flash mode setting is fixed at fill flash with slow sync and red-eye reduction.
- ⁸ Slow sync with red-eye reduction flash mode may be used.
- ⁹ The self-timer cannot be used. You can turn the pet portrait auto release (📖 43) on and off.

Features That Cannot Be Used Simultaneously

Some settings cannot be used with other functions (📖 65).

Features That Can Be Set by Pressing the MENU Button (Shooting Menu)

When shooting, you can set the following features by pressing the **MENU** button.

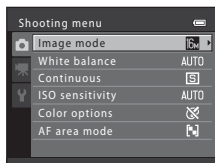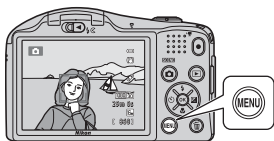











The features that are available vary with the shooting mode, as shown below.

| | Easy auto mode | Scene | Special effects | Smart portrait | Auto mode |
|-----------------|----------------|-------|-----------------|----------------|-----------|
| Image mode* | ✓ | ✓ | ✓ | ✓ | ✓ |
| White balance | - | - | - | - | ✓ |
| Continuous | - | - | - | - | ✓ |
| ISO sensitivity | - | - | - | - | ✓ |
| Color options | - | - | - | - | ✓ |
| AF area mode | - | - | - | - | ✓ |
| Skin softening | - | - | - | ✓ | - |
| Smile timer | - | - | - | ✓ | - |
| Blink proof | - | - | - | ✓ | - |

* If you change the image mode setting, the new setting is applied to all shooting modes.

Available Shooting Menus

| Option | Description |  |
|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Image mode | Allows you to select the combination of image size and image quality used when saving images. |  39 |
| White balance | Allows you to adjust white balance to suit the light source in order to make the colors in images match what you see with your eye. The available settings are Auto (default setting), Preset manual , Daylight , Incandescent , Fluorescent , Cloudy , and Flash . |  41 |
| Continuous | Allows you to capture a series of images. The available settings are Single (default setting), Continuous , BSS , and Multi-shot 16 . |  44 |
| ISO sensitivity | Allows you to control the camera's sensitivity to light. You can set sensitivity to Auto (default setting), or lock the setting at 125 , 200 , 400 , 800 , 1600 , or 3200 . When ISO sensitivity is set to Auto , the camera sets the ISO sensitivity automatically, and ISO is displayed while shooting when ISO sensitivity increases. |  46 |
| Color options | Allows you to change the color tones of images. The available settings are Standard color (default setting), Vivid color , Black-and-white , Sepia , and Cyanotype . |  47 |
| AF area mode | Allows you to determine how the camera selects the focus area that is used for autofocus; the available settings are Center and Target finding AF (default setting). |  48 |
| Skin softening | Enables skin softening. Makes the skin tones in people's faces smoother. The default setting is On . |  49 |
| Smile timer | When On (default setting) is selected, the camera detects people's faces and then automatically releases the shutter whenever a smile is detected. |  50 |
| Blink proof | When On is selected, the camera automatically releases the shutter twice each time a picture is taken. Of the two shots, the image in which the subject's eyes are more open compared to the other shot is saved. The flash cannot be used when On is selected. The default setting is Off . |  50 |

Features That Cannot Be Used Simultaneously

Some settings cannot be used with other functions ( 65).

Features That Cannot Be Used Simultaneously

Certain features cannot be used simultaneously.

| Restricted function | Option | Descriptions |
|---------------------|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Flash mode | Continuous (📖 64) | When a setting other than Single is selected, the flash cannot be used. |
| | Blink proof (📖 64) | When Blink proof is set to On , the flash cannot be used. |
| Self-timer | Smile timer (📖 64) | When Smile timer is used for shooting, the self-timer cannot be used. |
| Image mode | Continuous (📖 64) | When Multi-shot 16 is selected, the Image mode setting is fixed at 5M (image size: 2560 × 1920 pixels). |
| White balance | Color options (📖 64) | When using Black-and-white , Sepia , or Cyanotype , the White balance setting is fixed at Auto . |
| Continuous | Self-timer (📖 56) | When using the self-timer, images are not captured continuously even if Continuous or BSS is selected. |
| ISO sensitivity | Continuous (📖 64) | When Multi-shot 16 is selected, the ISO sensitivity setting is automatically specified according to the brightness. |
| AF area mode | White balance (📖 64) | When Target finding AF is selected and White balance is set to any setting other than Auto , the camera does not detect the main subject. |
| Motion detection | Continuous (📖 64) | When Continuous or Multi-shot 16 is selected, Motion detection is disabled. |
| | ISO sensitivity (📖 64) | When the ISO sensitivity is set to any setting other than Auto , Motion detection is disabled. |
| Digital zoom | Continuous (📖 64) | When Multi-shot 16 is selected, digital zoom cannot be used. |

| Restricted function | Option | Descriptions |
|---------------------|-------------------|--------------------------------------------------------------------------------------|
| Shutter sound | Continuous (📖 64) | When a setting other than Single is selected, the shutter sound is not heard. |

✔ Notes About Digital Zoom

- Depending on the shooting mode or the current settings, digital zoom may not be used (🔍 79).
- When digital zoom is in effect, the camera focuses in the center of the frame.


Focusing

This camera uses autofocus to focus automatically when shooting. The focus area varies depending on the shooting mode. Here, we will explain how to use focus areas and focus lock.

Using Face Detection

In the following shooting modes, the camera uses face detection to automatically focus on people's faces.

If the camera detects more than one face, a double border is displayed around the face that the camera focuses on, and single borders are displayed around the other faces.

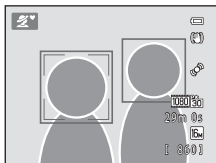


| Shooting mode | Number of faces that can be detected | Focus area (double border) |
|-------------------------------------------------------------------------------------------------------|--------------------------------------|---------------------------------------------|
| Portrait and Night portrait in ☑️ (easy auto) mode (📖 36) | Up to 12 | The face closest to the camera |
| Portrait (📖 38) and Night portrait (📖 39) in scene mode | | |
| Pet portrait (when Pet portrait auto release is set to OFF ; 📖 43) in scene mode | Up to 12 ¹ | The face closest to the camera ² |
| Smart portrait mode (📖 48) | Up to 3 | The face closest to the center of the frame |

¹ If the camera detects both people and pets in the same shot, the camera can detect up to 12 faces.

² If the camera detects a person's face and a pet's face in the same shot, it focuses on the pet's face.

- If no faces are detected when the shutter-release button is pressed halfway, the camera focuses on the subject in the center of the frame.
- You may hear the sound of the camera focusing.


Notes About Face Detection

- The camera's ability to detect faces depends on a variety of factors, including whether or not the subject is facing the camera. Additionally, the camera may be unable to detect faces in the following situations:
 - When faces are partially hidden by sunglasses or otherwise obstructed
 - When faces take up too much or too little of the frame
- When the frame includes more than one person's face, the faces detected by the camera and the face on which the camera focuses depend upon a variety of factors, including the direction in which the faces are looking.
- In some rare cases, such as those described in "Subjects Not Suitable for Autofocus" (📖 72), the subject may not be in focus even though the double border turns green. Should this occur, use another mode, such as  (auto) mode, and try focus lock shooting (📖 71) by focusing on another subject that is the same distance from the camera.

Target Finding AF


When **AF area mode** (📖 64) in 📷 (auto) mode is set to **Target finding AF**, the camera adjusts the focus during the following operations if you press the shutter-release button halfway:

- When the camera detects the main subject, it focuses on that subject.
When the subject is in focus, the focus area matches the size of the subject and glows in green.
When the camera detects a person's face, the camera focuses on it as a priority (face detection).

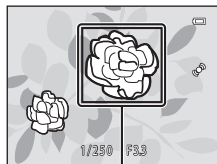

Focus area

- The camera has nine focus areas, and if it does not detect the main subject, it automatically selects the focus area containing the subject closest to the camera.
When the subject is in focus, the focus area that is in focus lights in green.

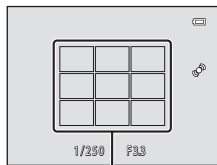


Focus area

Notes About Target Finding AF

- The subject that is detected as the main subject depends on the shooting conditions.
- When **White balance** is set to any setting other than **Auto**, the camera does not detect the main subject.
- The camera may not detect the main subject properly in the following situations:
 - When the area displayed in the monitor is very dark or very bright
 - When the main subject has no particular color
 - When the main subject is located on one of the edges of the area displayed in the monitor
 - When the main subject contains a repeating pattern

Focus Lock

When the camera focuses on an object in the center of the frame, you can use focus lock to focus on an off-center subject.

The following procedure describes how to use focus lock when using  (auto) mode with **AF area mode** ( 64) set to **Center**.

1 Aim the camera at the subject so that the subject is in the center of the frame.


2 Press the shutter-release button halfway.

- Confirm that the focus area glows green.
- Focus and exposure are locked.



3 Continue holding down the shutter-release button halfway and recompose the picture.

- Be sure to maintain the same distance between the camera and the subject while the shutter-release button is pressed halfway.

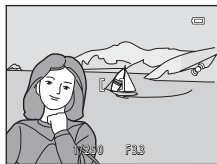



4 Press the shutter-release button the rest of the way down to take the picture.



Subjects Not Suitable for Autofocus


The camera may not focus as expected in the following situations. In some rare cases, the subject may not be in focus despite the fact that the focus area or the focus indicator glows green:

- Subject is very dark
- Objects of sharply differing brightness are included in the scene (e.g. the sun behind the subject makes that subject appear very dark)
- No contrast between the subject and surroundings (e.g. a portrait subject, wearing a white shirt, is standing in front of a white wall)
- Several objects are at different distances from the camera (e.g. an animal inside a cage)
- Subjects with repeating patterns (window blinds, buildings with multiple rows of similarly shaped windows, etc.)
- Subject is moving rapidly

In the situations noted above, try pressing the shutter-release button halfway to refocus several times, or select  (auto) mode and use focus lock ( 71) to take the picture by first focusing on an object that is the same distance from the camera as the desired subject.

Playback Features

This chapter describes the features that are available when playing back images.

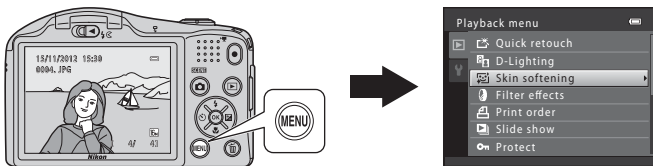

| | |
|---------------------------------------------------------------------------------|-----------|
| Playback Zoom | 74 |
| Thumbnail Display, Calendar Display..... | 75 |
| Selecting Certain Types of Images for Playback ... | 76 |
| Features That Can Be Set by Pressing the MENU Button (Playback Menu) ... | 78 |
| Connecting the Camera to a TV, Computer, or Printer ... | 80 |
| Using ViewNX 2..... | 82 |
| Installing ViewNX 2..... | 82 |
| Transferring Images to the Computer | 85 |
| Viewing Images..... | 87 |

Playback Zoom

Rotating the zoom control to **T** (Q) in full-frame playback mode (📖 30) zooms in on the center of the image displayed in the monitor.

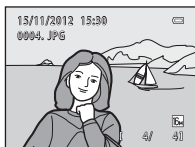


Image is displayed full-frame.



Image is zoomed in.

Displayed area guide

- You can change the zoom ratio by rotating the zoom control to **W** (📐) or **T** (Q). Images can be zoomed up to approx. 10x.
- To view a different area of the image, press the multi selector ▲, ▼, ◀, or ▶.
- If you are viewing an image that was captured using face detection (📖 67) or pet detection (📖 43), the camera zooms in on the face detected at the time of shooting. If the camera detected multiple faces when the image was captured, press ▲, ▼, ◀, or ▶ to display a different face. To zoom in on an area of the image where there are no faces, adjust the zoom ratio and then press ▲, ▼, ◀, or ▶.
- You can crop the image and save the displayed area of the image as a separate file by pressing the **MENU** button (📁 25).
- Press the **OK** button to return to full-frame playback mode.

Thumbnail Display, Calendar Display

Rotating the zoom control to **W** (🗨️) in full-frame playback mode (📖 30) displays images in “contact sheets” of thumbnail images.



- You can view several images on one screen, making it easy to find the image you want.
- You can change the number of thumbnails displayed by rotating the zoom control to **W** (🗨️) or **T** (📄).
- Press the multi selector ▲, ▼, ◀, or ▶ to select an image, and then press the **OK** button to display that image full-frame.
- When 16 thumbnails are displayed, rotate the zoom control to **W** (🗨️) to switch to calendar display.
- While using calendar display mode, press ▲, ▼, ◀, or ▶ to select a date and then press the **OK** button to display the first image captured on that day.

🗨️ Calendar Display

Images captured when the camera's date is not set are treated as images captured on January 1, 2012.

Selecting Certain Types of Images for Playback

You can change the playback mode according to the type of images you want to view.

Available Playback Modes



Play

30

All images are played back. When you switch from shooting mode to playback mode, this mode is selected.



Favorite pictures

7

Plays back images added to an album. You must add images to an album before you can select this mode (79).



Auto sort

11

Images are automatically sorted into categories, such as portraits, landscapes, and movies.




List by date


13




Images captured on the selected date are played back.


Switching Between Playback Modes


- 1 When viewing images in full-frame playback mode or thumbnail playback mode, press the  button.

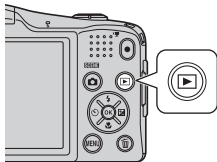
- The playback-mode selection menu is displayed, from which you can select one of the available playback modes.







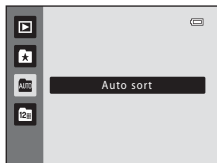

- 2 Press the multi selector  or  to select the desired mode and then press the  button.

- If you select **Play**, the playback screen is displayed.
- When an option other than **Play** is selected, the album, category, or shooting date selection screen is displayed.
- To return to the current playback mode without switching playback modes, press the  button.

























- 3 Select an album, category, or shooting date, and then press the  button.









 





-  Favorite pictures → 7
-  Auto sort → 11
-  List by date → 13
- Repeat from step 1 to select a different album, category, or shooting date.

Features That Can Be Set by Pressing the MENU Button (Playback Menu)


When viewing images in full-frame playback mode or thumbnail playback mode, you can configure the menu operations listed below by pressing the **MENU** button.


When using favorite pictures () , auto sort () , or list by date () mode, the menu for the current playback mode is displayed.


| Option | Description |  |
|-----------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|  Quick retouch ^{1,2} | Allows you to create retouched copies in which contrast and saturation have been enhanced. |  19 |
|  D-Lighting ^{1,2} | Allows you to create copies with enhanced brightness and contrast, brightening dark portions of an image. |  20 |
|  Skin softening ^{1,2} | The camera detects people's faces in images and creates a copy with softer facial skin tones. |  21 |
|  Filter effects ^{1,2} | Digital filter effects can be used to apply a variety of effects to images. Effect types include Soft , Selective color , Cross screen , Miniature effect , and Painting . |  22 |
|  Print order ^{3,4} | When using a printer to print images saved on the memory card, you can use the Print order function to select which images are printed, and how many copies of each image are printed. |  51 |
|  Slide show ³ | Allows you to view images saved in the internal memory or on a memory card in an automatic slide show. |  55 |
|  Protect ³ | Allows you to protect selected images from accidental deletion. |  56 |
|  Rotate image ^{2,4} | After shooting, you can change the orientation in which still images are displayed. |  58 |
|  Small picture ^{1,2} | Allows you to create a small copy of the current image. This feature is useful for creating copies for display on Web pages or e-mail attachments. |  24 |

| Option | Description |  |
|------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|  Voice memo ² | Allows you to use the camera's microphone to record voice memos and attach them to images. You can also play back and delete voice memos. |  59 |
|  Copy ⁵ | Allows you to copy images between the internal memory and a memory card. You can also copy movies. |  61 |
|  Sequence display options | Allows you to select whether to display only the key picture for a sequence of images captured continuously or to display the sequence as individual images. |  63 |
|  Choose key picture | Allows you to change the key picture for images captured in sequence (sequence of images;  31). When making this setting, first select an image from the sequence you want to change before pressing the MENU button. |  63 |
|  Favorite pictures | Allows you to add images to an album. This option is not displayed in favorite pictures mode. |  7 |
|  Remove from favorites | Allows you to remove images from an album. This option is displayed only in favorite pictures mode. |  9 |

¹ Images are edited and saved with a new file name. Certain restrictions apply (18). For example, images captured at an **Image mode** ( 64, 39) setting of **4608x2592** or images captured with **Easy panorama** ( 42) or **3D photography** ( 44) cannot be edited, and the same editing feature cannot be applied multiple times.

² This function is not available when only the key pictures are displayed for sequences of images. To use this function, press the  button to display the images in a sequence individually.

³ When using list by date mode, press the **MENU** button from the list of dates screen (13) to apply the same function to all images captured on the selected date.


⁴ Cannot be applied to images captured using **3D photography** ( 44) in scene mode.

⁵ This function is not displayed when using favorite pictures mode, auto sort mode, or list by date mode.

Connecting the Camera to a TV, Computer, or Printer


You can enhance your enjoyment of images and movies by connecting the camera to a TV, computer, or printer.

- Before connecting the camera to an external device, make sure the remaining battery level is sufficient and turn the camera off. For information about the connection methods and subsequent operations, refer to the documentation included with the device in addition to this document.

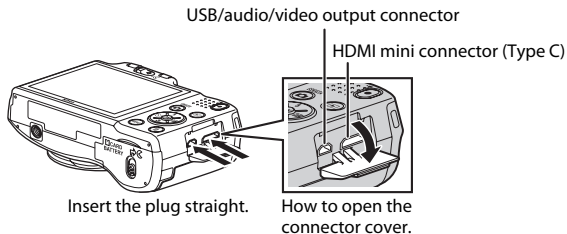

Viewing images on a TV

  27



You can view the camera's images and movies on a TV.
Connection method: Connect the video and audio plugs of the included audio/video cable to the TV's input jacks. Alternatively, connect a commercially available HDMI cable (Type C) to the TV's HDMI input jack.

Viewing and organizing images on a computer

 82



If you transfer images to a computer, you can perform simple retouching and manage image data in addition to playing back images and movies.

Connection method: Connect the camera to the computer's USB input jack with the included USB Cable.

- Before connecting to a computer, install ViewNX 2 on the computer using the included ViewNX 2 CD-ROM. For information about using the ViewNX 2 CD-ROM and transferring images to a computer, see page 82.

Printing images without using a computer

 30



If you connect the camera to a PictBridge-compatible printer, you can print images without using a computer.

Connection method: Connect the camera directly to the printer's USB input jack with the included USB Cable.

Using ViewNX 2

ViewNX 2 is an all-in-one software package which enables you to transfer, view, edit and share images.

Install ViewNX 2 using the included ViewNX 2 CD-ROM.



Installing ViewNX 2

- An Internet connection is required.

Compatible Operating Systems

Windows

- Windows 7 Home Basic/Home Premium/Professional/Enterprise/Ultimate (Service Pack 1)
- Windows Vista Home Basic/Home Premium/Business/Enterprise/Ultimate (Service Pack 2)
- Windows XP Home Edition/Professional (Service Pack 3)

Mac OS

- Mac OS X (version 10.6.8, 10.7.4)

Refer to the Nikon website for the latest information on operating system compatibility.

1 Start the computer and insert the ViewNX 2 CD-ROM into the CD-ROM drive.

- Mac OS: When the **ViewNX 2** window is displayed, double-click the **Welcome** icon.

2 Select a language in the language selection dialog to open the installation window.

- If the desired language is not available, click **Region Selection** to choose a different region and then choose the desired language (the **Region Selection** button is not available in the European release).
- Click **Next** to display the installation window.



3 Start the installer.

- We recommend clicking **Installation Guide** in the installation window to check the installation help information and system requirements before installing ViewNX 2.
- Click **Typical Installation (Recommended)** in the installation window.

4 Download the software.

- When the **Software Download** screen is displayed, click **I agree - Begin download**.
- Follow the on-screen instructions to install the software.

5 Exit the installer when the installation completion screen is displayed.

- Windows: Click **Yes**.
- Mac OS: Click **OK**.

The following software is installed:

- ViewNX 2 (consisting of the three modules below)
 - Nikon Transfer 2: For transferring images to the computer
 - ViewNX 2: For viewing, editing, and printing transferred images
 - Nikon Movie Editor: For basic editing of transferred movies
- Panorama Maker (for creating a single panorama image of a landscape, etc. from a series of images that each capture a separate portion of the subject)


6 Remove the ViewNX 2 CD-ROM from the CD-ROM drive.

Transferring Images to the Computer

1 Choose how images will be copied to the computer.

Choose one of the following methods:

- **Direct USB connection:** Turn the camera off and ensure that the memory card is inserted in the camera. Connect the camera to the computer using the included USB Cable. Turn the camera on. To transfer images that are saved in the camera's internal memory, remove the memory card from the camera before connecting it to the computer.

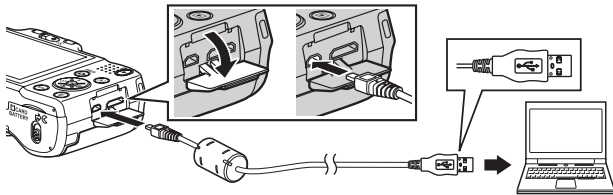

- **SD card slot:** If your computer is equipped with an SD card slot, the card can be inserted directly in the slot.
- **SD card reader:** Connect a card reader (available separately from third-party suppliers) to the computer and insert the memory card.

If a message is displayed prompting you to choose a program, select Nikon Transfer 2.

• When using Windows 7

If the dialog shown at right is displayed, follow the steps below to select Nikon Transfer 2.

- 1 Under **Import pictures and videos**, click **Change program**. A program selection dialog will be displayed; select **Import File using Nikon Transfer 2** and click **OK**.
- 2 Double-click **Import File**.




If the memory card contains a large number of images, it may take a while for Nikon Transfer 2 to start. Wait until Nikon Transfer 2 starts.

✓ Connecting the USB Cable

The connection may not be recognized if the camera is connected to the computer via a USB hub.

2 Transfer images to the computer.

- Confirm that the name of the connected camera or removable disk is displayed as the “Source” on the “Options” title bar of Nikon Transfer 2 (①).
- Click **Start Transfer** (②).

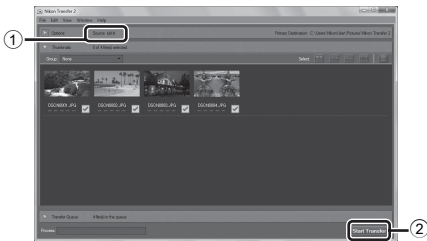

- At default settings, all the images on the memory card will be copied to the computer.

3 Terminate the connection.

- If the camera is connected to the computer, turn the camera off and disconnect the USB cable. If you are using a card reader or card slot, choose the appropriate option in the computer operating system to eject the removable disk corresponding to the memory card and then remove the card from the card reader or card slot.

Viewing Images

Start ViewNX 2.

- Images are displayed in ViewNX 2 when transfer is complete.
- Consult online help for more information on using ViewNX 2.




Starting ViewNX 2 Manually


- **Windows:** Double-click the **ViewNX 2** shortcut icon on the desktop.
- **Mac OS:** Click the **ViewNX 2** icon in the Dock.



A series of ten horizontal dashed lines spanning the width of the page, intended for handwriting practice.

Recording and Playing Back Movies

You can record movies by simply pressing the  movie-record) button.

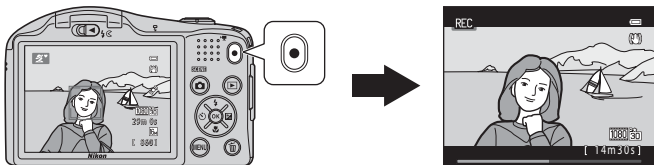


| | |
|---------------------------------|-----------|
| Recording Movies | 90 |
| Playing Back Movies..... | 94 |

Recording Movies

You can record movies by simply pressing the **●** (▶ movie-record) button.

1 Display the shooting screen.


- The icon for the selected movie option is displayed. The default setting is **1080p HD 1080p★ (1920×1080)** (▶ 93).

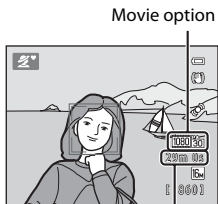

Maximum recording time

2 Press the **●** (▶ movie-record) button to start movie recording.

- The camera focuses on the subject in the center of the frame. Focus areas are not displayed during recording.
- When an option with 16:9 aspect ratio (width:length), such as **1080p HD 1080p★ (1920×1080)**, is selected for **Movie options**, the monitor display changes to an aspect ratio of 16:9 when recording movies.
- If **Photo info** in the **Monitor settings** (▶ 98) in the setup menu is set to **Movie frame+auto info**, the area that is visible in the movie can be confirmed before movie recording starts.
- ▶** is displayed while saving to the internal memory.

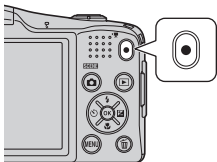

3 Press the **●** (▶ movie-record) button again to end recording.

✓ Notes About Saving Data


After taking pictures or recording a movie, the number of exposures remaining or the remaining recording time flashes while images or movies are being saved. **Do not open the battery-chamber/memory card slot cover.** Image and movie data could be lost and the camera or memory card could be damaged.

✓ Notes About Movie Recording

- Memory cards with an SD Speed Class rating of 6 or faster are recommended when recording movies (Ⓢ:21). Movie recording may stop unexpectedly when memory cards with a lower Speed Class rating are used.
- The optical zoom magnification ratio cannot be changed once recording starts.
- Use the zoom control to operate digital zoom while recording movies. The zoom range is between the optical zoom magnification ratio before recording a movie and up to 2X.
- Image quality degrades when digital zoom is used. When recording ends, digital zoom turns off.
- The sounds of zoom control operation, autofocus lens drive movement, vibration reduction, and aperture operation when brightness changes may be recorded.
- The following phenomena may be seen in the monitor while recording movies. These phenomena are saved in the recorded movies.
 - Banding may occur in images under fluorescent, mercury-vapor, or sodium-vapor lighting.
 - Subjects that move quickly from one side of the frame to the other, such as a moving train or car, may appear skewed.
 - The entire movie image may be skewed when the camera is panned.
 - Lighting or other bright areas may leave residual images when the camera is moved.

✓ Camera Temperature

- The camera may become warm when recording movies for an extended period of time or when the camera is used in a hot area.
- If the inside of the camera becomes too hot when recording movies, the camera may automatically stop recording after 10 seconds in order to prevent damage to the camera. The amount of time remaining until the camera stops recording (Ⓢ:10 s) is displayed. Five seconds after the camera stops recording, it turns itself off. Leave the camera off until the inside of the camera has cooled.

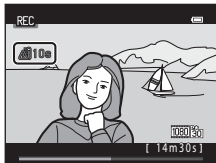






✓ Notes About Autofocus

Autofocus may not perform as expected (📖 72). Should this occur, try the following:

1. Set **Autofocus mode** in the movie menu to **AF-S Single AF** (default setting) before starting movie recording (📖 93, 🎛️ 68).
2. Frame another subject—positioned at the same distance from the camera as the intended subject—in the center of the frame, press the ● (🎥 movie-record) button to start recording, and then modify the composition.

 ✍ Maximum Movie Recording Time

| Movie options (📖 93) | Memory card (4 GB)* |
|---------------------------------------------------------------------------------------------------------------------------|---------------------|
|  HD 1080p★ (1920×1080) (default setting) | 29 min |
|  HD 1080p (1920×1080) | 30 min |
|  HD 720p (1280×720) | 55 min |
|  iFrame 540 (960×540) | 25 min |
|  VGA (640×480) | 2 h 15 min |

All figures are approximate. The maximum recording time may vary depending on the make of the memory card, even among memory cards of the same capacity.



To confirm the maximum length of a movie that can be recorded in the internal memory (approx. 28 MB), remove the memory card from the camera, and then check the maximum recording time displayed in the monitor when shooting.

* The maximum size for a single movie is 4 GB, and the maximum recording time for a single movie is 29 minutes, even when there is sufficient free space on the memory card. If the camera becomes hot, movie recording may stop before these limits are reached.


✍ Functions Available with Movie Recording





- The exposure compensation, white balance, and color options settings for the current shooting mode are also applied with movie recording. The tone that results from using scene mode (📖 37) or special effects mode (📖 46) is also applied to movies. When macro mode is enabled, movies of subjects closer to the camera can be recorded. Confirm settings before starting movie recording.
- The self-timer (📖 56) can be used. Set the self-timer and then press the ● (🎥 movie-record) button to start recording a movie after 10 seconds.
- The flash does not fire.
- Press the **MENU** button to select the 🎥 (movie) tab and adjust movie menu settings before starting movie recording (📖 93).

Features That Can Be Set by Pressing the MENU Button (Movie Menu)

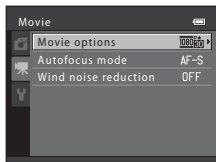
Enter shooting mode → MENU button →  tab →  button


The following settings can be changed.



| Option | Description |  |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Movie options | Select the movie type. Select either normal speed movies or HS (high speed) movies, which enable slow motion or fast motion playback. |  64 |
| Autofocus mode | When AF-S Single AF (default setting) is selected, focus is locked when movie recording begins. When AF-F Full-time AF is selected, the camera focuses continuously while recording. When AF-F Full-time AF is selected, the sound of the camera focusing may be heard in recorded movies. If you want to prevent the sound of the camera focusing from being recorded, select AF-S Single AF . |  68 |
| Wind noise reduction | Set whether or not to reduce wind noise during movie recording. |  68 |

Playing Back Movies

Press the  button to enter playback mode.





Movies are indicated by the movie options icon ( 93).

Press the  button to play back movies.



Movie options

Deleting Movies

To delete a movie, select the desired movie in full-frame playback mode ( 30) or thumbnail playback mode ( 75) and then press the  button ( 32).

Functions Available During Playback

Playback controls are displayed at the top of the monitor.

Press the multi selector ◀ or ▶ to select a control. The operations described below are available.



| Function | Icon | Description |
|----------|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Rewind | ◀ | Hold down the OK button to rewind the movie. |
| Advance | ▶ | Hold down the OK button to advance the movie. |
| Pause | ⏸ | Press the OK button to pause playback. The following operations can be performed while playback is paused using the controls displayed at the top in the monitor. |
| | | Press the OK button to rewind the movie. Hold down the OK button for continuous rewinding. |
| | | Press the OK button to advance the movie. Hold down the OK button for continuous advancing. |
| | | Press the OK button to resume playback. |
| | ✂ | Press the OK button to cut unwanted portions of a movie so that only the desired portions of a movie are saved (▶▶37). |
| End | ■ | Press the OK button to return to full-frame playback mode. |

Adjusting Volume

Rotate the zoom control to **T** or **W** (▶▶ 2) during playback.



Volume indicator

✓ Notes About Playing Back Movies


This camera cannot play back movies recorded with another make or model of digital camera.



A series of ten horizontal dashed lines spanning the width of the page, intended for handwriting practice.

General Camera Setup


This chapter describes the various settings available in the  setup menu.

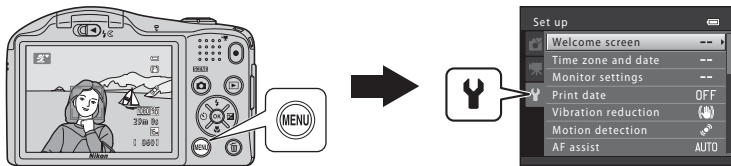







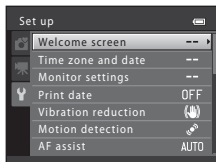













Features That Can Be Set by Pressing the MENU Button (Setup Menu)

Press the MENU button → Y (setup) tab → OK button

You can change the following settings when the menu is displayed by selecting the Y tab.



| Option | Description |  |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Welcome screen | Allows you to select whether or not a welcome screen is displayed when the camera is turned on. |  69 |
| Time zone and date | Allows you to set the camera clock. |  70 |
| Monitor settings | Allows you to adjust photo information display, post-shooting image review, and monitor brightness settings. |  73 |
| Print date | Allows you to imprint the shooting date and time on images. |  75 |
| Vibration reduction | Allows you to select the vibration reduction setting used when shooting. |  76 |
| Motion detection | Allows you to set whether or not the camera automatically increases the shutter speed to reduce blurring caused by camera shake when motion is detected when shooting still images. |  77 |
| AF assist | Allows you to enable and disable the AF-assist illuminator. |  78 |
| Digital zoom | Allows you to enable and disable digital zoom. |  79 |
| Sound settings | Allows you to adjust sound settings. |  80 |
| Auto off | Allows you to set the amount of time that passes before the monitor turns off to save power. |  81 |
| Format memory/ Format card | Allows you to format the internal memory or the memory card. |  82 |

| Option | Description |  |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Language | Allows you to change the camera's display language. |  83 |
| TV settings | Allows you to adjust TV-connection settings. |  84 |
| Blink warning | Allows you to set whether or not closed eyes are detected when taking pictures of people using face detection. |  85 |
| Eye-Fi upload | Allows you to set whether or not to enable the function for sending images to a computer using a commercially available Eye-Fi card. |  87 |
| Reset all | Allows you to reset the camera's settings to their default values. |  88 |
| Battery type | Change this setting to match the type of batteries that are inserted in the camera. |  92 |
| Firmware version | Allows you to confirm the camera's firmware version. |  92 |




A series of ten horizontal dashed lines spanning the width of the page, intended for handwriting practice.




Reference Section


The Reference Section provides detailed information and hints about using the camera.


Shooting

Using Easy Panorama (Shooting and Playback)  3


Playback

Favorite Pictures Mode.....  7


Auto Sort Mode  11

List by Date Mode  13


Viewing and Deleting Images Captured Continuously (Sequence)....  14

Editing Still Images  17







Connecting the Camera to a TV (Viewing Images on a TV).....  27

Connecting the Camera to a Printer (Direct Print)  29




Movies

Editing Movies  37

Menu










| | |
|----------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| The Shooting Menu (for  (Auto) Mode)..... |  39 |
| The Smart Portrait Menu..... |  49 |
| The Playback Menu..... |  51 |
| The Movie Menu |  64 |
| The Setup Menu..... |  69 |

Additional Information

| | |
|-----------------------------|--------------------------------------------------------------------------------------|
| File and Folder Names |  93 |
| Optional Accessories..... |  95 |
| Error Messages |  97 |

Using Easy Panorama (Shooting and Playback)


Shooting with Easy Panorama

Enter shooting mode →  (shooting mode) button →  (second icon from the top*) →  → , , ,  →  (easy panorama) →  button



* The last icon you selected is displayed.


1 Select **Normal (180°)** or **Wide (360°)** as the shooting range, and then press the button.

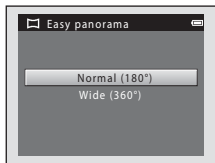- When the camera is readied in the horizontal position, the image size (width × height) is as follows:
 - Normal (180°)**: 3200 × 560 when moved horizontally, 1024 × 3200 when moved vertically
 - Wide (360°)**: 6400 × 560 when moved horizontally, 1024 × 6400 when moved vertically
- When the camera is readied in the vertical position, the direction and the width and height are switched.



2 Frame the first edge of the panorama scene, and then press the shutter-release button halfway to focus.

- The zoom position is fixed at the maximum wide-angle position.
- A grid is displayed in the monitor.
- The camera focuses on the subject in the center of the frame.
- Exposure compensation ( 60) can be set.
- If the focus and exposure are not correct, try using focus lock ( 71).

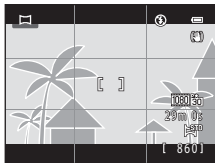

3 Press the shutter-release button all the way, and then remove your finger from the shutter-release button.

- ▷ is displayed to indicate the direction of camera movement.




4 Move the camera slowly in one of the four directions, and then begin shooting.

- When the camera detects which direction it is moving in, shooting begins.
- A guide indicating the current shooting position is displayed.
- When the shooting position guide reaches the edge, shooting ends.



Guide

Example of camera movement

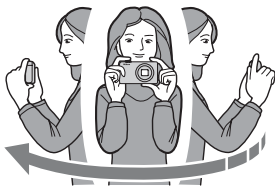

- The operator, without shifting position, moves the camera horizontally or vertically in an arc so that the guide travels from one edge to the other.
- Shooting stops if the guide does not reach the edge within about 15 seconds (when **Normal (180°)** is selected) or within about 30 seconds (when **Wide (360°)** is selected) after shooting starts.

Notes About Easy Panorama Shooting

- The range of the image seen in the saved image is narrower than that seen in the monitor at the time of shooting.
- If the camera is moved too quickly or shaken too much, or if the subject is too uniform (e.g. walls or darkness), an error may occur.
- If shooting is stopped before the camera reaches the half-way point in the panorama range, a panorama image is not saved.
- If more than half of the panorama range is captured but shooting ends before reaching the edge of the range, the range not captured is recorded and displayed in gray.


Viewing Images Captured with Easy Panorama

Switch to playback mode (📖 30), display an image captured using easy panorama in full-frame playback mode, and then press the **OK** button to display the short edge of the image using the entire monitor and automatically move (scroll) the displayed area.

- The image scrolls in the direction that was used when shooting.

Playback controls are displayed at the top of the monitor during playback.

Press the multi selector ◀ or ▶ to choose a control, and then press the **OK** button to perform the following operations.

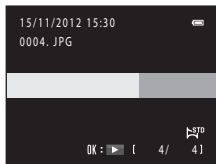

| Function | Icon | Description | |
|----------|------|----------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|
| Rewind | ◀◀ | Hold down the OK button to scroll backward quickly. | |
| Advance | ▶▶ | Hold down the OK button to scroll forward quickly. | |
| Pause | | The following operations can be performed while playback is paused using the controls displayed at the top in the monitor. | |
| | | ◀ | Hold down the OK button to rewind. |
| | | ▶ | Hold down the OK button to scroll. |
| | ▶ | Resumes automatic scrolling. | |
| End | ■ | Switches to full-frame playback mode. | |

📌 Notes About Easy Panorama Scroll Playback

This camera may not be able to scroll or zoom when viewing easy panorama images captured with another make or model of digital camera.

Favorite Pictures Mode

After shooting, you can add your favorite still images to albums; there are nine albums available. After you add images to an album, you can use favorite pictures mode to view those images easily.

- By creating albums for certain subjects or events, you can find your favorite images easily.
- The same image can be added to multiple albums.
- Up to 200 images can be added to each album.


Adding Images to Albums

Press the **▶** button (playback mode) → **MENU** button → **Favorite pictures** → **OK** button

- Images cannot be added to albums in favorite pictures playback mode.


1 Press the multi selector **◀** or **▶** to select the desired image and then press **▲** to display **♥**.

- You can add **♥** to multiple images. To remove **♥**, press **▼**.
- Rotate the zoom control (**2**) to **T** (**Q**) to switch to full-frame playback mode or **W** (**Q**) to 12-image thumbnail playback mode.
- Press the **OK** button to display the album selection screen.

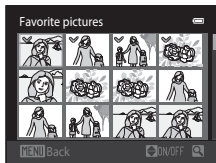

2 Use the multi selector to select the desired album, and then press the **OK** button.



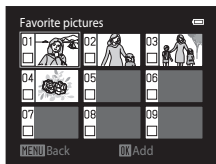

- The selected images are added and the camera switches to the playback menu.
- To add the same image to multiple albums, repeat from step 1.









✓ Notes About Favorite Pictures


When images are added to an album, they are not moved from the folder to which they were saved (0093) or copied to the album. Only the file names of the images are added to the album. When using favorite pictures mode, images are played back by retrieving the images that correspond to the file names added to the albums.

Playing Back Images in Albums

Press the  button (playback mode) →  button →  Favorite pictures →  button

Use the multi selector to select an album and then press the  button to play back the images that have been added to the selected album.

- The following operations are available from the album selection screen.
 -  button: Changes the album icon (10).
 -  button: Deletes all images in the selected album.
- When viewing images in full-frame playback mode or thumbnail playback mode, press the  button to select a feature from the favorite pictures menu ( 78).

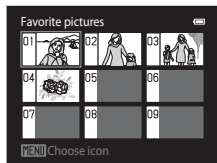

✓ Notes About Deletion

If an image is deleted while using favorite pictures mode, the image is not only removed from the album, but the corresponding image file is also permanently deleted from the internal memory or the memory card.

Removing Images from Albums

Enter **F** Favorite pictures mode → select the album containing the image you want to remove → **OK** button → **MENU** button → **F** Remove from favorites → **OK** button

1 Press the multi selector ◀ or ▶ to select the desired image and then press ▲ to display ♥.

- You can add ♥ to multiple images. To remove ♥, press ▼.
- Rotate the zoom control (📖 2) to **T** (🔍) to switch to full-frame playback mode or **W** (📐) to 12-image thumbnail playback mode.
- Press the **OK** button to display a removal confirmation screen.






2 Select **Yes** and then press the **OK** button.


- To cancel removal, select **No**.






Changing the Favorites Album Icon

Press the  button (playback mode) →  button →  Favorite pictures →  button

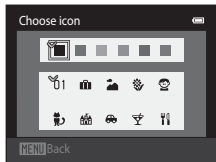
1 Use the multi selector to select an album, and then press the **MENU** button.

2 Press  or  to select an icon color and then press the  button.



3 Press , , , or  to select an icon and then press the  button.

- The icon changes and the monitor display returns to the list of albums screen.

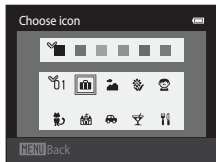






Notes About Favorites Album Icons



- Set the favorites album icons separately for the internal memory and for the memory card.
- To change the favorites album icons for the internal memory, first remove the memory card from the camera.
- The default setting for the icon is the number icon (black).

Auto Sort Mode

Images are automatically sorted into categories, such as portraits, landscapes, and movies.





 








Press the  button (playback mode) →  button →  Auto sort →  button


















Use the multi selector to select a category, and then press the  button to play back the images in the selected category.

- The following operation is available while the category selection screen is displayed.
 -  button: Deletes all images in the selected category.
- When viewing images in full-frame playback mode or thumbnail playback mode, press the **MENU** button to select a feature from the auto sort menu ( 78).






Auto Sort Mode Categories

| Option | Description |
|---------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Smile | Images captured in smart portrait mode ( 48) with Smile timer set to On |
|  Portraits | <ul style="list-style-type: none">• Images captured using Portrait, Night portrait, and Backlighting in  (easy auto) mode ( 36)• Images captured using Portrait, Night portrait, Party/indoor, and Backlighting in scene mode ( 37)• Images captured in smart portrait mode ( 48) with Smile timer set to Off |
|  Food | Images captured using Food in scene mode ( 37) |
|  Landscape | <ul style="list-style-type: none">• Images captured using Landscape in  (easy auto) mode ( 36)• Images captured using Landscape in scene mode ( 37) |


| Option | Description |
|----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Dusk to dawn | <ul style="list-style-type: none"> Images captured using Night landscape in  (easy auto) mode ( 36) Images captured using Night landscape, Sunset, Dusk/dawn, and Fireworks show in scene mode ( 37) |
|  Close-ups | <ul style="list-style-type: none"> Images captured using Close-up in  (easy auto) mode ( 36) Images captured using Close-up in scene mode ( 37) Images captured in  (auto) mode with macro mode ( 58) |
|  Pet portrait | Images captured using Pet portrait ( 37) in scene mode |
|  Movie | Movies ( 90) |
|  Retouched copies | Copies created using editing functions ( 17) |
|  Other scenes | All other images that cannot be defined by the categories described here |

 



Notes About Auto Sort Mode

- Up to 999 images and movie files can be sorted to each category in auto sort mode. If 999 images or movies have already been sorted to a specific category, new images and movies cannot be sorted to that category nor can they be displayed in auto sort mode. You can play back images and movies that could not be sorted to a category by using normal playback mode ( 30) or list by date mode ( 13).
- Images and movies copied from the internal memory to a memory card, or vice versa, cannot be played back in auto sort mode ( 61).
- Images or movies saved with another make or model of digital camera cannot be played back in auto sort mode.

List by Date Mode

Press the  button (playback mode) →  button →  List by date →  button

Use the multi selector to select a date and then press the  button to play back the images captured on the selected date.

- The first image that was captured on the selected date is displayed.
- The following operations are available while the shooting date selection screen is displayed.
 - **MENU** button: You can select one of the following functions in the list by date menu ( 78) and apply it to all images captured on the selected date.
 - Print order, slide show, protect
 -  button: Deletes all images captured on the selected date.
- When viewing images in full-frame playback mode or thumbnail playback mode, press the **MENU** button to select a feature from the list by date menu ( 78).
- Calendar display ( 75) cannot be used in list by date mode.



Notes About List by Date Mode

- Up to 29 dates can be selected. If images exist for more than 29 dates, all images saved earlier than most recent 29 dates are combined under **Others**.
- The 9000 most recent images can be displayed in list by date mode.
- Images captured when the camera's date is not set are treated as images captured on January 1, 2012.

Viewing and Deleting Images Captured Continuously (Sequence)

Viewing Images in a Sequence

Each series of images captured using the following settings is saved in a sequence.


- Scene mode (📖 37)
 - Sports
 - Pet portrait (when **Continuous** is selected)
- 📷 (auto) mode (📖 51)
 - Continuous

By default, only the first image of a sequence (key picture) is displayed to represent the images in the sequence in full-frame playback mode (📖 30) or thumbnail playback mode (📖 75).


- When only the key picture is displayed for a sequence, the picture cannot be zoomed in.

When only the key picture is displayed for a sequence, press the **OK** button to display each image in a sequence individually.

- To display the previous or next image, press the multi selector ◀ or ▶.
- To return to key picture only display, press the multi selector ▲.
- When displaying images individually, thumbnails are not displayed. To display images in a sequence as thumbnails, set **Sequence display options** to **Individual pictures** in the playback menu (📷63).

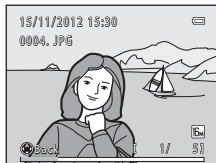

Sequence Display Options















- Select **Sequence display options** (63) in the playback menu to set all sequences to be displayed using their key pictures or to display them as individual images.
- Images captured continuously with another make or model of digital camera cannot be displayed as a sequence.

Changing Key Picture in Sequence

A sequence's key picture can be changed using **Choose key picture** (63) in the playback menu.

Playback Menu Options Available When Using Sequence

When the **MENU** button is pressed, the following menu operations are available for the images in that sequence.

- | | | | |
|-------------------------------|----------------------------------------------------------------------------------------|----------------------------------|----------------------------------------------------------------------------------------|
| • Quick retouch ¹ | →  19 | • D-Lighting ¹ | →  20 |
| • Skin softening ¹ | →  21 | • Filter effects ¹ | →  22 |
| • Print order ² | →  51 | • Slide show | →  55 |
| • Protect ² | →  56 | • Rotate image ¹ | →  58 |
| • Small picture ¹ | →  24 | • Voice memo ¹ | →  59 |
| • Copy ² | →  61 | • Sequence display options | →  63 |
| • Choose key picture | →  63 | • Favorite pictures ² | →  67 |

¹ This operation is not available when only a key picture is displayed. Display the images in the sequence individually and then press the **MENU** button.

² If the **MENU** button is pressed when only a key picture displayed, the same settings can be applied to all images in that sequence. Press the **MENU** button after displaying individual images to apply settings to each displayed image.

Deleting Images in a Sequence

If **Sequence display options** (🔍63) in the playback menu is set to **Key picture only**, images to be deleted vary as described below. To display the screen for selecting the deletion method, press the 🗑️ button.

- If only key pictures are displayed for sequences when the 🗑️ button is pressed:
 - **Current image:** When a key picture is selected, all images in that sequence are deleted.
 - **Erase selected images:** When a key picture is selected in the erase selected images screen (📖 33), all pictures in the sequence are deleted.
 - **All images:** All images are deleted, including the sequence represented by the currently displayed key picture.
- If the Ⓞ button has been pressed and each individual image in the sequence is displayed before pressing the 🗑️ button:

Deletion methods change as follows.

 - **Current image:** The image currently displayed is deleted.
 - **Erase selected images:** When multiple images in the sequence are selected in the erase selected images screen (📖 33), the selected images are deleted.
 - **Entire sequence:** All images in the sequence, including the image currently displayed, are deleted.




 




Editing Still Images

Editing Features

You can use the following features to edit your images. Edited images are saved as separate files (🔗93).

| Editing function | Description |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Quick retouch (🔗19) | Allows you to easily create retouched copies in which contrast and saturation have been enhanced. |
| D-Lighting (🔗20) | Allows you to create a copy of the current image with enhanced brightness and contrast, brightening dark portions of the image. |
| Skin softening (🔗21) | Allows you to make the skin tones in people's faces smoother. |
| Filter effects (🔗22) | Digital filter effects are available to apply a variety of effects to images. Effect types include Soft , Selective color , Cross screen , Miniature effect , and Painting . |
| Small picture (🔗24) | Allows you to create a small copy of images suitable for use as e-mail attachments. |
| Crop (🔗25) | Allows you to crop a portion of the image. Use to zoom in on a subject or arrange a composition. |


Notes About Image Editing

- Images captured at an **Image mode** () setting of  **4608x2592** cannot be edited.
- Images captured with another make or model of digital camera cannot be edited.
- Images captured using **Easy panorama** () 42) or **3D photography** () 44) cannot be edited.
- If no people's faces are detected in an image, a copy cannot be created using the skin softening function () 21).
- When using another make or model of digital camera, images edited with this camera may not be displayed properly and may not be able to be transferred to a computer.
- Editing functions are not available when there is not enough free space in the internal memory or on the memory card.
- To edit an individual image in a sequence of images () 14) when only the key picture is displayed, perform one of the following procedures:
 - Press the  button to display a sequence of images as individual images and select an image in the sequence.
 - Set **Sequence display options** () 63) in the playback menu to **Individual pictures** to display them as individual images and select an image.

Restrictions on Image Editing

When an edited copy is further modified with another editing function, check the following restrictions.

| Editing function used | Editing functions that can be added |
|-----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Quick retouch D-Lighting Filter effects | The skin softening, small picture, or crop function can be used. The quick retouch, D-Lighting, and filter effects functions cannot be used together. |
| Skin softening | The quick retouch, D-Lighting, filter effects, small picture, or crop function can be used. |
| Small picture Crop | Another editing function cannot be added. |


- Copies created with editing functions cannot be further edited with the same function used to create them.
- When combining the small picture or crop function and another editing function, use the small picture and crop functions after other editing functions have been applied.
- You can apply skin softening to images that were captured using skin softening () 49).


Original and Edited Images


- Copies created with editing functions are not deleted if the original images are deleted. The original images are not deleted if copies created with editing functions are deleted.
- Edited copies are saved with the same shooting date and time as the original.
- Print order (📄51) and protect settings (🔒56) do not remain effective in edited copies.

Quick Retouch: Enhancing Contrast and Saturation

Press the  button (playback mode) → MENU button →  Quick retouch →  button

Press the multi selector ▲ or ▼ to select the amount of effect applied and then press the  button.

- The original version is displayed on the left and an example of the edited version is displayed on the right.
- To exit without saving the copy, press ◀.
- Copies created with this feature are indicated by  displayed during playback.

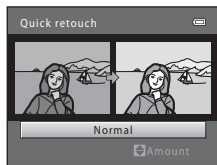


More Information


File and Folder Names → 📄93


D-Lighting: Enhancing Brightness and Contrast

Press the  button (playback mode) → MENU button →  D-Lighting →  button

You can create a copy of the current image with enhanced brightness and contrast, brightening dark portions of the image.

Press the multi selector ▲ or ▼ to select **OK** and then press the  button.

- The original version is displayed on the left and an example of the edited version is displayed on the right.
- A new, edited copy is saved as a separate image.
- Copies created with this feature are indicated by  displayed during playback.

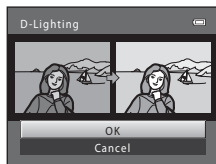




More Information


File and Folder Names → 93


Skin Softening: Softening Skin Tones


Press the  button (playback mode) → MENU button →  Skin softening →  button




The camera detects people's faces in images and creates a copy with softer facial skin tones.

1 Press the multi selector  or  to select the degree of softening and then press the  button.

- The confirmation dialog is displayed with the face to which the effect was applied enlarged at the center of the monitor.
- To exit without saving the copy, press .

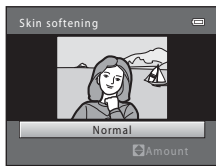

  2 Check the preview of the copy, and then press the  button.

- Skin tones of up to 12 faces, in the order of that closest to the center of the frame, are softened.
- If more than one face was processed, press the multi selector  or  to display a different face.
- Press the MENU button to adjust the degree of softening. The monitor display returns to that shown in step 1.
- Copies created with this feature are indicated by  displayed during playback.



Notes About Skin Softening



Depending upon the direction in which faces are looking, or the brightness of faces, the camera may be unable to accurately detect faces, or the skin softening function may not perform as expected.




More Information

File and Folder Names → 93


Filter Effects: Applying Digital Filter Effects

Press the  button (playback mode) → MENU button →  Filter effects →  button

| Type | Description |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Soft | Allows you to soften the image by adding a slight blur around the center of the image. In images captured using face detection ( 67) or pet detection ( 43), areas around faces are blurred. |
| Selective color | Allows you to keep one specified color in the image, and change the other colors to black and white. |
| Cross screen | Allows you to produce star-like rays of light that radiate outward from bright objects such as sunlight reflections or street lights. This effect is suitable for night scenes. |
| Miniature effect | Allows you to make an image look like a miniature scene captured in macro mode. This effect is well-suited for images captured from a high vantage point with the main subject at the center of the image. |
| Painting | Allows you to give images a hand-painted appearance. |

1 Press the multi selector  or  to select the filter effect type and then press the .

- When **Cross screen**, **Miniature effect**, or **Painting** is selected, proceed to step 3.

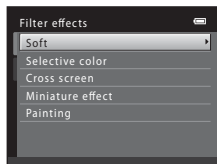


2 Adjust the effect and then press the **OK** button.


- When using **Soft**: Press ▲ or ▼ to select the range of the effect.
- When using **Selective color**: Press ▲ or ▼ to select the color to be retained.
- Press ◀ to return to the **Filter effects** selection screen without making any changes.



Example: **Soft**

3 Confirm the effect and then press the **OK** button.

- A new, edited copy is created.
- To exit without saving the copy, press ◀.
- Copies created with this feature are indicated by  displayed during playback.

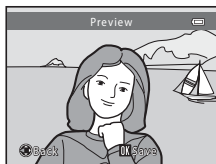




More Information


File and Folder Names → 93

Small Picture: Reducing the Size of an Image


Press the  button (playback mode) → MENU button →  Small picture →  button


You can create a small copy of the current image.

- 1 Press the multi selector  or  to select the desired copy size and then press the  button.

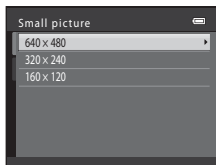

- 2 Select **Yes** and then press the  button.



- A new, edited copy is saved as a separate image with a compression ratio of 1:16.
- Copies created with this feature are smaller than other images when displayed during playback, and are indicated by the  icon.

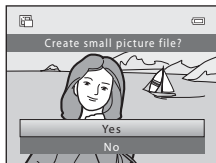


More Information


File and Folder Names →  93

  Crop: Creating a Cropped Copy

 

 



You can create a copy containing only the portion visible in the monitor when **MENU**  is displayed with playback zoom ( 74) enabled.

1 Rotate the zoom control to **T** () in full-frame playback mode (30) to zoom in on the image.

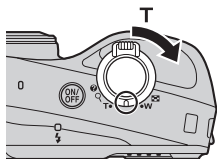- To crop an image displayed in “tall” (portrait) orientation, zoom in on the image until the black bars displayed on the both sides of the monitor disappear. The cropped image is displayed in landscape orientation. To crop the image in its current “tall” (portrait) orientation, first use the **Rotate image** option ( 58) to rotate the image so that it is displayed in landscape orientation. Next, enlarge the image for cropping, crop the image, and then rotate the cropped image back to “tall” (portrait) orientation.



 2 Refine copy composition.

- Rotate the zoom control to **T** () or **W** () to adjust the zoom ratio.
- Press the multi selector , , , or  to scroll the image so that only the portion to be copied is visible in the monitor.



3 Press the **MENU** button.

4 Use the multi selector to select **Yes**, and then press the **OK** button.


- A new, cropped copy is saved as a separate image.
- Copies created with this feature are indicated by  displayed during playback.



Image Size

- As the area to be saved is reduced, the image size (pixels) of the cropped copy is also reduced.
- Images cropped to an image size of 320 × 240 or 160 × 120 are smaller than other images when displayed during playback.



More Information

File and Folder Names → 93

Connecting the Camera to a TV (Viewing Images on a TV)

Connect the camera to a TV to play back images or movies on the TV.


If your TV is equipped with an HDMI jack, a commercially available HDMI cable can be used to connect the camera to the TV.

1 Turn off the camera.

2 Connect the camera to the TV.


When using the included audio/video cable

Connect the yellow plug to the video-in jack and the white and red plugs to the audio-in jacks on the TV.

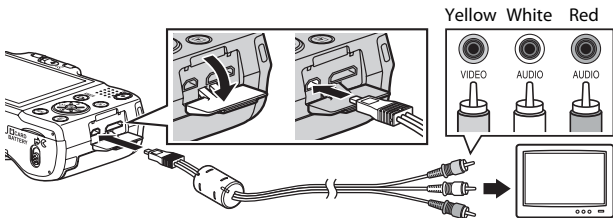

When using a commercially available HDMI cable

Connect the plug to the HDMI jack on the TV.

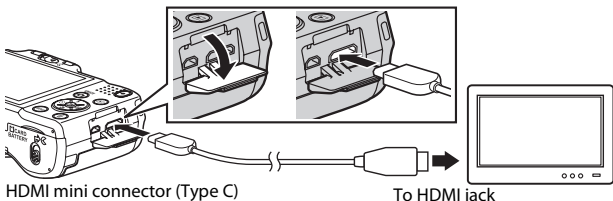


3 Set the TV's input to external video input.

- See your TV's documentation for details.

4 Hold down the button to turn on the camera.

- The camera enters playback mode and images are displayed on the TV.
- While connected to the TV, the camera monitor remains off.

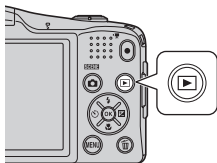


Notes About Connecting the HDMI Cable

An HDMI cable is not included. Use a commercially available HDMI cable to connect the camera to a TV. The output terminal on this camera is an HDMI mini connector (type C). When purchasing an HDMI cable, be sure that one end of the cable is an HDMI mini connector.

Notes About Connecting the Cable

- When connecting the cable, be sure that the camera connector is properly oriented, do not insert the cable at an angle, and do not use excessive force. When disconnecting the cable, do not pull the connector at an angle.
- Do not connect cables to the HDMI mini connector and to the USB/audio/video output connector simultaneously.


If the Images Are Not Displayed on the TV

Be sure that the camera's **TV settings** (84) in the setup menu matches the standard used by your TV.

Using a TV Remote Control (HDMI Device Control)


The remote control of an HDMI-CEC-compatible TV can be used to control playback.

It can be used instead of the camera's multi selector and zoom control to select images, start and pause movie playback, switch between full-screen playback mode and 4-image thumbnail playback mode, etc.

- Set the **HDMI device control** setting (84) of **TV settings** to **On** (default setting) and then connect the camera and TV using an HDMI cable.
- Aim the remote control at the TV when operating it.
- Refer to the TV's operating instructions for information about the TV's HDMI-CEC compatibility.

Connecting the Camera to a Printer (Direct Print)

Users of PictBridge-compatible (🔗22) printers can connect the camera directly to the printer and print images without using a computer. Follow the procedures below to print images.

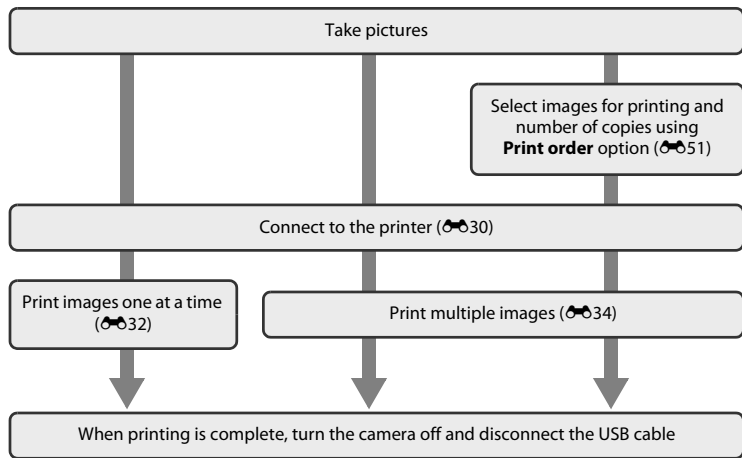



Notes About Power Source

- When connecting the camera to a printer, use batteries with a sufficient amount of charge remaining to prevent the camera from turning off unexpectedly.
- You can use the AC Adapter EH-65A (available separately) to power the camera from an electrical outlet. Do not use any other make or model of AC adapter as it may cause the camera to heat up or malfunction.



Printing Images

In addition to printing images transferred to a computer from your personal printer and printing over a direct camera-to-printer connection, the following options are also available for printing images saved on the memory card:

- Inserting the memory card into a DPOF-compatible printer's card slot
- Taking the memory card to a digital photo lab


When using these methods to print, you can use the **Print order** option in the playback menu to specify which images will be printed and how many copies of each image will be printed, and save these settings on the memory card (051).

Connecting the Camera to a Printer

- 1 Turn off the camera.
 - 2 Turn on the printer.
 - Check printer settings.
-


3 Connect the camera to the printer using the included USB cable.

- Be sure that connectors are properly oriented, do not insert the cable at an angle, and do not use excessive force. When disconnecting the cable, do not remove the cable at an angle.

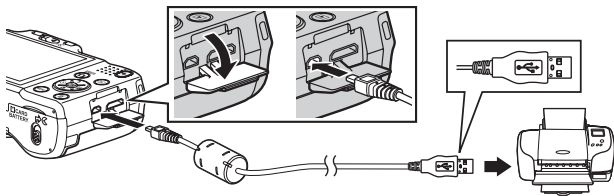

4 Turn on the camera.

- When properly connected, the **PictBridge** startup screen is displayed in the camera monitor, followed by the **Print selection** screen.

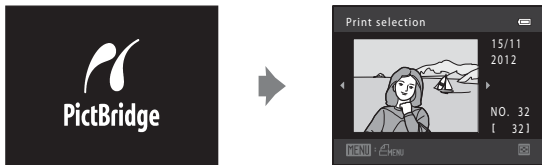


Printing Individual Images


After properly connecting the camera to the printer (030), follow the procedures described below to print an image.

1 Use the multi selector to select the desired image, and then press the **OK** button.


- To make it easier to select images, rotate the zoom control to **W** (12) to switch to 12-image thumbnail playback mode. Rotate the zoom control to **T** (9) to switch to full-frame playback mode.

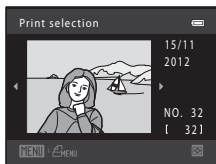


2 Select **Copies** and then press the **OK** button.

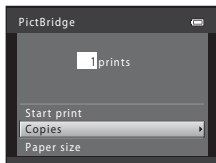

3 Press the multi selector **▲** or **▼** to select the desired number of copies (up to nine) and then press the **OK** button.

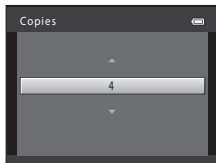


4 Select **Paper size** and then press the **OK** button.

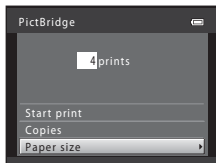


5 Select the desired paper size, and then press the **OK** button.

- To specify paper size using settings on the printer, select **Default** in the paper size option.

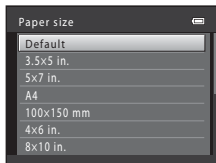


6 Select **Start print** and then press the **OK** button.

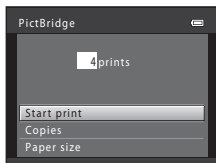

7 Printing begins.

- Monitor display returns to the print selection screen shown in step 1 when printing is complete.

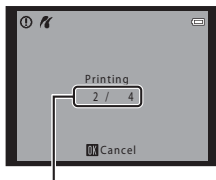

Current number of copies/
total number of copies


Printing Multiple Images

After properly connecting the camera to the printer (030), follow the procedures described below to print multiple images.

1 When the **Print selection** screen is displayed, press the **MENU** button.


2 Use the multi selector to select **Paper size**, and then press the **OK** button.

- To exit the print menu, press the **MENU** button.

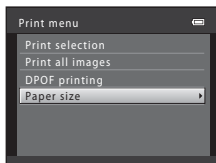


3 Select the desired paper size, and then press the **OK** button.

- To specify paper size using settings on the printer, select **Default** in the paper size option.

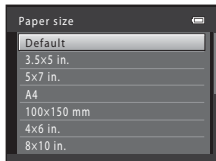


4 Select **Print selection**, **Print all images**, or **DPOF printing**, and then press the **OK** button.

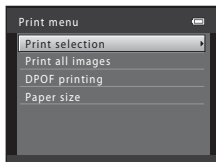

Print selection

Select which images will be printed (up to 99) and how many copies of each image will be printed (up to nine).


- Press the multi selector ◀ or ▶ to select images, and then press ▲ or ▼ to set the number of copies for each.
- Images selected for printing are indicated by ✓ and the numeral indicating the number of copies to be printed. If no copies have been specified for images, the selection is canceled.
- Rotate the zoom control to T (Q) to switch to full-frame playback mode. Rotate the zoom control to W (Q) to switch back to 12-image thumbnail playback mode.
- Press the OK button when setting is complete.
- When the screen shown on the right is displayed, select **Start print** and then press the OK button to start printing. Select **Cancel** and then press the OK button to return to the print menu.

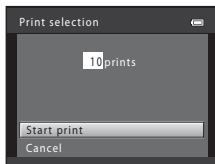

Print all images

One copy of each image saved in the internal memory, or on the memory card, is printed.


- When the screen shown on the right is displayed, select **Start print** and then press the OK button to start printing. Select **Cancel** and then press the OK button to return to the print menu.

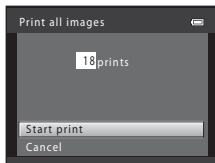

DPOF printing


Print images for which a print order was created using the **Print order** option (🔑51).

- When the screen shown on the right is displayed, select **Start print** and then press the **OK** button to start printing. Select **Cancel** and then press the **OK** button to return to the print menu.
- To view the current print order, select **View images** and then press the **OK** button. To print images, press the **OK** button again.

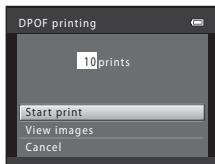

5 Printing begins.

- Monitor display returns to the print menu shown in step 2 when printing is complete.

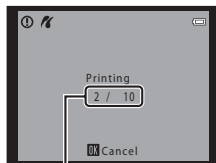

Current number of copies/
total number of copies

Paper Size

The camera supports the following paper sizes: **Default** (the default paper size for the printer connected to the camera), **3.5x5 in.**, **5x7 in.**, **100x150 mm**, **4x6 in.**, **8x10 in.**, **Letter**, **A3**, and **A4**. Only sizes supported by the printer are displayed.


Editing Movies

The desired portions of a recorded movie can be saved as a separate file (except movies recorded using **iFrame 540 (960x540)**; **6064**).

1 Play back the desired movie and pause playback (📖 95).


2 Press the multi selector ◀ or ▶ to select the **✂** control, and then press the **OK** button.

- The movie edit screen is displayed.

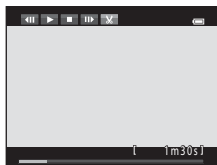


3 Press ▲ or ▼ to select the **✂** control (choose start point).

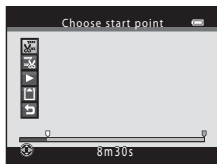

- When you start editing a movie, the frame displayed when the movie was paused is the start point of the edit.
- Press the multi selector ◀ or ▶ to move the start point to the point where you want the movie to start.
- To cancel editing, press ▲ or ▼ to select ↵ (return), and then press the **OK** button.



4 Press ▲ or ▼ to select **✂** (choose end point).

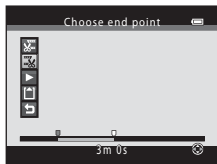
- Press ◀ or ▶ to move the end point on the right edge to the point where you want the movie to end.
- Select ▶ (preview) and then press the **OK** button to play back the specified portion of the movie that will be saved. While the preview is playing, rotate the zoom control to **T** or **W** to adjust the volume. While the preview is playing back, press the **OK** button again to stop playback.





- 5 When the settings are finished, press ▲ or ▼ to select  **Save** and then press the  button.

- 6 Select **Yes** and then press the  button.

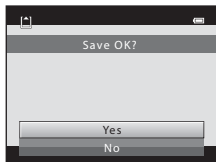- The edited movie is saved.



Notes About Movie Editing


- In the following situations,  is not displayed in the controls and editing is not possible.
 - When you try to trim a movie that was created by editing
 - A movie that was created by editing cannot be trimmed. To trim another area of the movie, select and edit the original movie.
 - When the battery level indicator is 
- Movies are trimmed in one-second intervals; therefore, the actual trimmed portion of the movie may differ slightly from the selected start and end points. Movies cannot be trimmed so that they are less than two seconds long.
- Editing functions are not available when there is not enough free space in the internal memory or on the memory card.

More Information

File and Folder Names →  93












The Shooting Menu (for (Auto) Mode)


Image Mode (Image Size and Quality)

Enter shooting mode → MENU button → Shooting menu → Image mode → 




You can select the combination of image size and image quality (i.e., image compression ratio) that is used when saving images.

Select the image mode best suited to the manner in which images are used and the capacity of the internal memory or memory card.

| Image mode* | Description |
|---------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  4608×3456 ★ | Images are higher quality than  . The compression ratio is approx. 1:4. |
|  4608×3456 (default setting) | Best choice in most situations. The compression ratio is approx. 1:8. |
|  3264×2448 | |
|  2272×1704 | |
|  1600×1200 | Smaller size than  ,  , and  and therefore allows more images to be saved. The compression ratio is approx. 1:8. |
|  640×480 | Suited to full-screen display on a TV with an aspect ratio (width:length) of 4:3, or distribution by e-mail. The compression ratio is approx. 1:8. |
|  4608×2592 | Images with an aspect ratio (width:length) of 16:9 are saved. The compression ratio is approx. 1:8. |

* The total number of pixels captured, and the number of pixels captured horizontally and vertically.
Example:  **4608×3456** = approx. 16 megapixels, 4608×3456 pixels








Notes About Image Mode

- The setting is also applied to other shooting modes.
- Some settings cannot be used with other functions ( 65).
- Image mode cannot be selected when using **Easy panorama** ( 42) or **3D photography** ( 44) in scene mode.

Number of Images That Can Be Saved

The following table lists the approximate number of images that can be saved on a 4 GB memory card. Note that due to JPEG compression, the number of images that can be saved varies greatly depending on the composition of the image. In addition, this number varies depending on the make of the memory card, even when the memory cards have the same specified capacity.

To confirm the number of images that can be saved in the internal memory (approx. 28 MB), remove the memory card from the camera, and then check the number of remaining exposures displayed in the monitor when shooting.

| Image mode | Memory card ¹ (4 GB) | Print size ² (cm/in.) |
|----------------------------------------------------------------------------------------------|---------------------------------|----------------------------------|
|  4608×3456★ | 470 | 39 × 29/15 × 11.5 |
|  4608×3456 | 860 | 39 × 29/15 × 11.5 |
|  3264×2448 | 1710 | 28 × 21/11 × 8 |
|  2272×1704 | 3600 | 19 × 14/7.5 × 5.6 |
|  1600×1200 | 6900 | 13 × 10/5.3 × 4 |
|  640×480 | 28500 | 5 × 4/2 × 1.5 |
|  4608×2592 | 1160 | 39 × 22/15 × 8.5 |

¹ If the number of exposures remaining is 10,000 or more, the number of exposures remaining display shows "9999".

² Print size at an output resolution of 300 dpi.







Print sizes are calculated by dividing the number of pixels by printer resolution (dpi) and multiplying by 2.54 cm (1 in.). However, at the same image size, images printed at higher resolutions will be printed smaller than the size indicated, and those printed at lower resolutions will be printed larger than the size indicated.


White Balance (Adjusting Hue)

Enter  (auto) mode → MENU button → White balance →  button

The color of light reflected from an object varies with the color of the light source. The human brain is able to adapt to changes in the color of the light source, with the result that white objects appear white whether seen in the shade, direct sunlight, or under incandescent lighting. Digital cameras can mimic this adjustment by processing images according to the color of the light source. This is known as “white balance.” For natural colors, select a white balance setting that matches the light source before shooting.

Although **Auto** (the default setting) can be used under most types of lighting, white balance can be adjusted to suit the sky conditions or light source and achieve more natural color tones in the image.

| Option | Description |
|------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| AUTO Auto (default setting) | White balance is automatically adjusted to suit lighting conditions. |
| PRE Preset manual | Use when shooting under unusual lighting ( 42). |
|  Daylight | Use when shooting outdoors in direct sunlight. |
|  Incandescent | Use when shooting under incandescent lighting. |
|  Fluorescent | Use when shooting under fluorescent lighting. |
|  Cloudy | Use when shooting under overcast skies. |
|  Flash | Use when shooting with the flash. |

The icon for the current setting is displayed in the monitor when the camera is in shooting mode ( 8). No icon is displayed when **Auto** is selected.

Using Preset Manual


Preset manual is used with mixed lighting or to compensate for light sources with a strong color cast when the desired effect has not been achieved with white balance settings like **Auto** and **Incandescent** (for example, to make images shot under a lamp with a red shade look as though they had been shot under white light).

Use the procedure below to measure the white balance value under the lighting used when shooting.

1 Prepare a white or gray-colored subject, and then place it under the lighting that is used when shooting.


2 Display the shooting menu (📖 63), use the multi selector to select **PRE Preset manual** in the **White balance** menu, and then press the **OK** button.

- The camera zooms in to the position for measuring white balance.

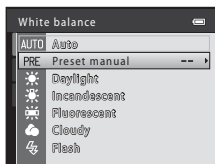


3 Select **Measure**.

- To apply the most recently measured white balance value, select **Cancel** and then press the **OK** button. The white balance setting is not measured again and the most recently measured value is set.

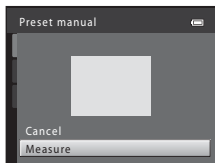

- 4 Frame the reference object in the measuring window.

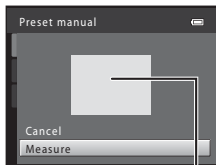

Measuring window

- 5 Press the **OK** button to measure a value for preset manual.
- The shutter is released and the new white-balance value is set. No image is saved.



✓ Notes About White Balance

- Some settings cannot be used with other functions (📖 65).
- When white balance is set to any setting other than **Auto** and **Flash**, lower the flash (📖 5).






✓ Notes About Preset Manual


A value for flash lighting cannot be measured with **Preset manual**. When shooting using the flash, set **White balance** to **Auto** or **Flash**.

Continuous Shooting

Enter  (auto) mode → MENU button → Continuous → 


You can change settings to continuous or BSS (best shot selector).

| Option | Description |
|---------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Single (default setting) | One picture is taken each time the shutter-release button is pressed. |
|  Continuous | While the shutter-release button is held all the way down, about 4 images are captured continuously at a rate of about 1.9 fps (when Image mode is set to  4608x3456). Shooting ends when the shutter-release button is released. |
| BSS BSS (best shot selector) | The “best shot selector” is recommended when shooting with the flash off or the camera zoomed in, or in other situations in which inadvertent motion can result in blurred images. When BSS is on, the camera captures up to 10 images while the shutter-release button is held down. The sharpest image in the series is automatically selected and saved. <ul style="list-style-type: none">• BSS is best suited to shooting subjects that are not moving. When shooting moving subjects or when the composition of the picture changes while shooting, the desired results may not be achieved. |
|  Multi-shot 16 | Each time the shutter-release button is pressed all the way down, the camera takes 16 shots at a rate of about 30 fps and arranges them in a single image. <ul style="list-style-type: none">• Images are captured with the Image mode fixed at  (image size is 2560 × 1920 pixels).• Digital zoom cannot be used. |

 


The icon for the current setting is displayed in the monitor when the camera is in shooting mode ( 8). No icon is displayed when **Single** is selected.



Notes About Continuous Shooting

- When a setting other than **Single** is selected, flash cannot be used. Focus, exposure, and white balance are fixed at the values determined with the first image in each series.
- It may take some time to save the images after shooting. The amount of time it takes to finish saving the images depends on the number of images, image mode, the write speed of the memory card, etc.
- When ISO sensitivity increases, noise may appear in captured images.
- The frame rate with continuous shooting may vary depending upon the current image mode setting, the memory card used, or shooting condition.
- When **Continuous** is set to **Multi-shot 16**, banding or variance in brightness or hue may occur in images that were captured under lighting that flickers at high speeds, such as fluorescent, mercury-vapor, or sodium-vapor lighting.
- Some settings cannot be used with other functions ( 65).

Images Captured Using “Continuous”

Each series of images captured is saved as a “sequence” ( 14).

More Information

- Subjects Not Suitable for Autofocus →  72
- Viewing and Deleting Images Captured Continuously (Sequence) →  14

ISO Sensitivity


Enter  (auto) mode → MENU button → ISO sensitivity →  button


When ISO sensitivity is increased, less light is needed when taking pictures.

Higher ISO sensitivity allows darker subjects to be captured. Additionally, even with subjects of similar brightness, pictures can be taken at faster shutter speeds, and blurring caused by camera shake and subject movement can be reduced.



- Although higher ISO sensitivity is effective when shooting darker subjects, shooting without the flash, shooting while using the zoom, etc., images may contain noise.

| Option | Description |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| AUTO Auto (default setting) | Sensitivity is ISO 125 when there is sufficient lighting; the camera compensates by raising sensitivity to a maximum of ISO 1600 when lighting is dim. |
| 125, 200, 400, 800, 1600, 3200 | Sensitivity is fixed at the specified value. |



The icon for the current setting is displayed in the monitor when the camera is in shooting mode ( 8).

- When **Auto** is selected, the  icon is not displayed at ISO 125, but is displayed if the ISO sensitivity automatically increases to more than 125.






Notes About ISO Sensitivity


- Some settings cannot be used with other functions ( 65).
- When ISO sensitivity is locked, **Motion detection** ( 77) does not function.

Color Options

Enter  (auto) mode → MENU button → Color options →  button

You can adjust the colors when images are saved.

| Option | Description |
|-----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
|  Standard color (default setting) | Use to achieve natural colors in your images. |
|  Vivid color | Use to achieve vivid colors in your images. |
|  Black-and-white | Use to save images in black-and-white. |
|  Sepia | Use to save images in sepia tones. |
|  Cyanotype | Use to save images in cyan-blue monochrome. |

The icon for the current setting is displayed in the monitor when the camera is in shooting mode ( 8). When **Standard color** is selected, no icon is displayed. Color tones shown in the monitor when shooting change according to the selected color option.


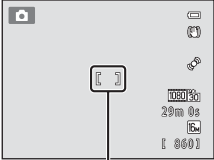

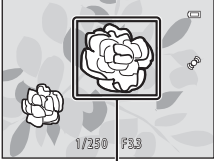
Notes About Color Options

Some settings cannot be used with other functions ( 65).

AF Area Mode

Enter  (auto) mode → MENU button → AF area mode →  button

You can set how the focus area is determined for autofocus.

| Option | Description |
|-----------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Center | <p>The camera focuses on the subject in the center of the frame. The focus area is always displayed in the center of the frame.</p>  <p>Focus area</p> |
|  Target finding AF (default setting) | <p>When the camera detects the main subject, it focuses on that subject. → “Target Finding AF” (📖 69)</p>  <p>Focus area</p> |

Notes About AF Area Mode

- When the digital zoom is in effect, the camera focuses on the subject in the center of the frame regardless of the applied **AF area mode** option.
- In some rare cases of shooting subjects for which autofocus does not perform as expected (📖 72), the subject may not be in focus.
- Some settings cannot be used with other functions (📖 65).
- When target finding AF is selected and the camera does not focus on the desired subject, set **AF area mode** to **Center**. You can also use focus lock (📖 71) and try shooting again.


The Smart Portrait Menu

- See “Image Mode (Image Size and Quality)” (📷39) for information about **Image mode**.

Skin Softening

Enter smart portrait mode → MENU button → Skin softening → OK button

You can change skin softening settings.


| Option | Description |
|---------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  On (default setting) | When the shutter is released, the camera detects one or more person's faces (up to three), and processes the image to soften facial skin tones before saving the image. |
| OFF Off | Turns skin softening off. |

The icon for the current setting is displayed in the monitor when the camera is in shooting mode (📖 8). No icon is displayed when **Off** is selected. The results of the effect cannot be confirmed when shooting. Check the degree of skin softening performed in playback mode.

Smile Timer

Enter smart portrait mode → MENU button → Smile timer → OK button

The camera detects people's faces and then automatically releases the shutter whenever a smile is detected.


| Option | Description |
|--------------------------------------------------------------------------------------------------------|----------------------------|
|  On (default setting) | Enables the smile timer. |
| OFF Off | Turns the smile timer off. |

The icon for the current setting is displayed in the monitor when the camera is in shooting mode (📖 8). No icon is displayed when **Off** is selected.

Blink Proof

Enter smart portrait mode → MENU button → Blink proof → OK button

The camera automatically releases the shutter twice each time a picture is taken. Of the two shots, the image in which the subject's eyes are more open compared to the other shot is saved.

| Option | Description |
|--------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  On | Enables the blink proof. Flash cannot be used when On is selected. If the camera saved an image in which the subjects eyes may have been closed, the dialog shown on the right is displayed for a few seconds. |
| OFF Off (default setting) | Turns the blink proof off. |



The icon for the current setting is displayed in the monitor when the camera is in shooting mode (📖 8). No icon is displayed when **Off** is selected.

The Playback Menu

- See “Editing Still Images” (📷17) for information about image editing features.
- See “Favorite Pictures Mode” (📷7) for information about **Favorite pictures** and **Remove from favorites**.

🖨️ Print Order (Creating a DPOF Print Order)


Press the  button (playback mode) → MENU button →  Print order →  button

When printing images saved on the memory card using any of the following methods, the **Print order** option in the playback menu is used to create digital “print orders.”

- Inserting the memory card into a DPOF-compatible (📷21) printer's card slot.
- Taking the memory card to a digital photo lab.
- Connecting the camera to a PictBridge-compatible (📷22) printer (📷29). A print order can also be created for images saved in the internal memory if the memory card is removed from the camera.

1 Use the multi selector to select **Select images**, and then press the button.

- In favorite pictures, auto sort, or list by date mode, the screen shown on the right is not displayed. Proceed to step 2.

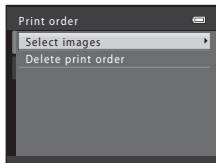


2 Select images (up to 99) and the number of copies (up to nine) of each.

- Press the multi selector ◀ or ▶ to select images, and then press ▲ or ▼ to set the number of copies for each.
- Images selected for printing are indicated by ♥ and the numeral indicating the number of copies to be printed. If no copies have been specified for images, the selection is canceled.
- Rotate the zoom control to **T** (🔍) to switch to full-frame playback mode. Rotate the zoom control to **W** (🖼️) to switch back to 12-image thumbnail playback mode.
- Press the **OK** button when setting is complete.




3 Select whether or not to print shooting date and shooting information.

- Select **Date** and press the **OK** button to print the shooting date on all images in the print order.
- Select **Info** and press the **OK** button to print shooting information (shutter speed and aperture value) on all images in the print order.
- Select **Done** and press the **OK** button to complete the print order.

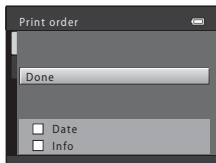

Images selected for printing are indicated by 🖨️ during playback.

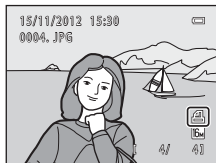

✓ Notes About Printing Shooting Date and Shooting Information


When the **Date** and **Info** settings are enabled in the print order option, shooting date and shooting information are printed on images when a DPOF-compatible printer (🔗:21) that supports printing of shooting date and shooting information is used.

- Shooting information cannot be printed when the camera is connected to a DPOF-compatible printer via the included USB cable (🔗:36).
- Note that **Date** and **Info** settings are reset each time the **Print order** option is displayed.
- The date printed is that saved when the image was captured. Changing the camera's date using the **Date and time** or **Time zone** in the **Time zone and date** option in the setup menu after an image has been captured has no effect on the date printed on the image.




✓ Notes About Print Order

- Print orders cannot be created for images captured using **3D photography** in scene mode.
- When a print order is created in favorite pictures mode, auto sort mode, or list by date mode, the screen shown below is displayed if images other than those in the selected album, category, or shooting date have been marked for printing.
 - If you select **Yes**, print order settings for other images are not changed and only the current print order settings are changed.
 - Select **No** to remove print marking from previously marked images and restrict the print order to images in the selected category or captured on the selected shooting date.

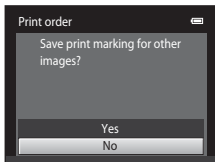


Favorite pictures mode or
auto sort mode

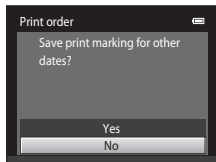


List by date mode

If the total number of the images in a print order exceeds 99, the screen shown below is displayed.

- Select **Yes** to remove images previously added from the print order and restrict the print order to images just marked.
- Select **Cancel** to remove the images just added from the print order and restrict the print order to images previously marked.

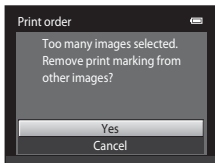

Favorite pictures mode or
auto sort mode

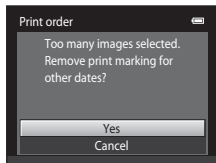


List by date mode

✂ Canceling Existing Print Order

Select **Delete print order** in step 1 (0051) of "Print Order (Creating a DPOF Print Order)" and then press the **OK** button to remove print marking from all images and cancel the print order.

Print Date

When shooting date and time are imprinted on images using the **Print date** option (75) in the setup menu, images are saved with shooting date and time imprinted on the image when they are captured. Images with the date imprinted on them can be printed from printers that do not support printing of the date on images.




Only the date and time imprinted on images with the print date option are printed, even if the **Print order** date option is enabled.


Slide Show

Press the  button (playback mode) → MENU button →  Slide show →  button




 

You can play back images, saved in the internal memory or on a memory card, one by one in an automated “slide show.”

1 Use the multi selector to select **Start**, and then press the button.

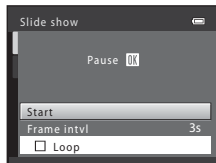- To change the interval between images, select **Frame interval**, select the desired interval time, and then press the  button before selecting **Start**.
- To repeat the slide show automatically, select **Loop** and then press the  button before selecting **Start**. The check mark () is added to the loop option when enabled.






2 The slide show begins.

- While the slide show is in progress, press the multi selector  or  to display the next image or  or  to display the previous image. Hold down either button to fast forward or rewind.
- To end or pause the slide show, press the  button.







3 End the slide show or restart it.

- The display at right appears when the last slide is displayed or the show is paused. Highlight  and press  to return to Step 1, or select  to restart the show.



Notes About Slide Show

- Only the first frame of movies is displayed.
- When **Key picture only** is selected as the method to display sequences (14), only the key picture is displayed.
- Images captured using easy panorama (42, 3) are displayed full-frame when played in a slide show. They do not scroll.
- The maximum playback time is up to about 30 minutes even if **Loop** is enabled (81).

Protect

Press the  button (playback mode) → MENU button →  Protect →  button

You can protect selected images from accidental deletion.

Select images to protect or cancel protection for previously protected images from the image selection screen.

→ “The Image Selection Screen” (57)

Note that formatting the camera’s internal memory or the memory card permanently deletes protected files (82).

Protected images are indicated by  during playback ( 11).

The Image Selection Screen

When using one of the following features, a screen like that shown on the right is displayed when selecting images.

- **Print order > Select images** (🔗51)
- **Protect** (🔗56)
- **Rotate image** (🔗58)
- **Copy > Selected images** (🔗61)
- **Choose key picture** (🔗63)
- **Favorite pictures** (🔗7)
- **Remove from favorites** (🔗9)
- **Welcome screen > Select an image** (🔗69)
- **Delete > Erase selected images** (📖33)



Follow the procedures described below to select images.

1 Press the multi selector ◀ or ▶ to select an image.

- Rotate the zoom control (📖2) to **T** (🔍) to switch to full-frame playback or **W** (📐) to switch to 12-thumbail display.
- Only one image can be selected for **Rotate image**, **Choose key picture**, and **Welcome screen**. Proceed to step 3.



2 Press ▲ or ▼ to select or deselect (or to specify the number of copies).

- When an image is selected, ✓ is displayed with the image. Repeat steps 1 and 2 to select additional images.



3 Press the (OK) button to apply image selection.




- When **Selected images** is selected, a confirmation dialog is displayed. Follow the instructions displayed in the monitor.


Rotate Image

Press the  button (playback mode) → MENU button →  Rotate image →  OK button


After shooting, you can specify the orientation (i.e., portrait or landscape) in which saved images are displayed.

Still images can be rotated 90 degrees clockwise or 90 degrees counterclockwise.

When you select an image you want to rotate in the image selection screen (57), the Rotate image screen is displayed. You can then rotate the image 90 degrees by pressing the multi selector  or .

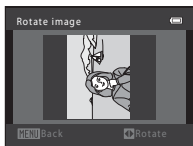

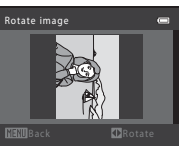

Rotate 90 degrees
counterclockwise






Rotate 90 degrees
clockwise

When you press the  OK button, the displayed orientation is applied, and the orientation information is saved with the image.


Notes About Image Rotation

- This camera cannot rotate images captured with another make or model of digital camera, or images captured with **3D photography** ( 44).
- Images captured in sequence cannot be rotated when only the key pictures are displayed for them. First display the images individually, and then rotate the desired image ( 14).


Voice Memo

Press the  button (playback mode) → select an image → **MENU** button →  Voice memo →  button



You can use the camera's microphone to record voice memos for images.


- The voice memo recording screen is displayed for images that do not have a voice memo, and the voice memo playback screen is displayed for images that have a voice memo (i.e., images that display  in full-frame playback mode).

Recording Voice Memos


- Press and hold the  button to record a voice memo (up to about 20 seconds).
- Do not touch the microphone during recording.




- During recording, **REC** and  flash in the monitor.
- When recording ends, the voice memo playback screen is displayed.
- Press the multi selector  before or after recording a voice memo to return to the playback menu. Press the **MENU** button to exit the playback menu.

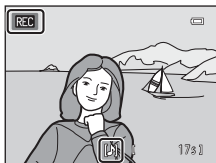


Playing Voice Memos

 is displayed for images with a voice memo when in full-frame playback mode.


- Press the **OK** button to play the voice memo. Press the button again to stop playback.
- Rotate the zoom control to **T** or **W** during playback to adjust playback volume.
- Press the multi selector  before or after playing back a voice memo to return to the playback menu. Press the **MENU** button to exit the playback menu.





Deleting Voice Memos

Press the  button while the screen in “Playing Voice Memos” is displayed.

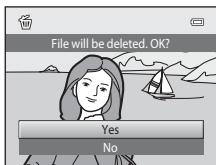Press the multi selector  or  to select **Yes**, and then press the **OK** button. Only the voice memo is deleted.






Notes About Voice Memos

- When an image with a voice memo attached is deleted, both the image and its voice memo are deleted.
- You cannot delete voice memos attached to protected images (56).
- Voice memos cannot be recorded for an image that already has a voice memo attached to it. The current voice memo must be deleted before a new voice memo can be recorded.
- This camera cannot attach voice memos to images captured with another make or model of digital camera.
- Voice memos cannot be recorded for images captured in sequence when only the key pictures are displayed for sequences of images. First display the images individually, and then record voice memos (14).


More Information

File and Folder Names → 93


Copy (Copy Between Internal Memory and Memory Card)


Press the  button (playback mode) → MENU button →  Copy →  button


You can copy images between the internal memory and a memory card. You can also copy movies.


1 Use the multi selector to select a destination option to which images are copied, and then press the  button.

- **Camera to card:** Copies images from internal memory to memory card.
- **Card to camera:** Copies images from memory card to internal memory.

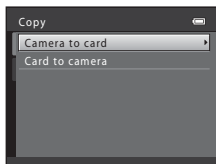

2 Select a copy option, and then press the  button.

- **Selected images:** Copies images selected from the image selection screen (57).
- **All images:** Copies all images.

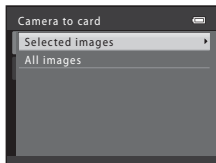

Notes About Copying Images

- JPEG, MOV, WAV, and MPO files can be copied.
- If voice memos (🔗59) are attached to images selected for copying, the voice memos are copied with the images.
- Operation is not guaranteed with images captured with another make of camera or that have been modified on a computer.
- When copying images for which **Print order** (🔗51) options are enabled, the print order settings are not copied. However, when copying images for which **Protect** (🔗56) is enabled, the protect setting is copied.
- Images or movies copied from the internal memory or a memory card cannot be displayed in auto sort mode (🔗11).
- If an image added to an album (🔗7) is copied, the copied image is not added to the album.

Notes About Copying Images in a Sequence

- If you select a key picture of a sequence in **Selected images** when only the key picture is displayed for the sequence (🔗14), all images in the sequence are copied.
- If you press the **MENU** button and select **Current sequence** after you press the **OK** button and display images in a sequence as individual images, all images in the sequence are copied.
- If you press the **OK** button and display images in a sequence as individual images, only **Card to camera** (memory card to internal memory) image copy is available.




If “Memory contains no images.” Is Displayed




If a memory card that contains no images is inserted into the camera, **Memory contains no images.** is displayed when the camera is switched to playback mode. Press the **MENU** button to display the copy options screen, and copy the images saved in the camera’s internal memory to the memory card.

More Information



File and Folder Names → 🔗93

Sequence Display Options

Press the  button (playback mode) → MENU button →  Sequence display options →  button



Select the method used to display a series of images shot continuously (sequence;  14) when viewing them in full-frame playback mode ( 30) or in thumbnail playback mode ( 75).


Settings are applied to all sequences, and the setting is saved in the camera's memory even if the camera is turned off.

| Option | Description |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Individual pictures | Set all pictures in all sequences to be displayed individually.  is displayed on the playback screen ( 10). |
| Key picture only (default setting) | Set all sequences to be displayed using their key pictures only. |

Choose Key Picture



Press the  button (playback mode) → select an image in a sequence → MENU button →  Choose key picture →  button

When **Sequence display options** is set to **Key picture only**, the key picture displayed in full-frame playback mode ( 30) and thumbnail playback mode ( 75) can be set for each sequence of images.

- When changing this setting, before pressing the MENU button, first select the desired sequence using full-frame playback mode or thumbnail playback mode.
- When the key picture selection screen is displayed, select an image. → "The Image Selection Screen" ( 57)



The Movie Menu

Movie Options




Enter shooting mode → MENU button →  tab → Movie options →  button




You can select the desired movie option for recording movies.

Larger image sizes and faster movie bitrates produce greater image quality and larger movie file sizes.

- The movie bitrate is the volume of movie data recorded per second. Variable bitrate (VBR) encoding is used to automatically adjust the bitrate depending on the subject being recorded. When recording movies of subjects with large amounts of motion, the file size increases.
- Maximum Movie Recording Time →  92
- When recording normal speed movies, select one of the normal speed movie options, and when recording in slow motion or fast motion, select one of the HS movie options (65).



Normal Speed Movie Options

| Option | Movie bitrate | Description |
|---------------------------------------------------------------------------------------------------------------------------------|-------------------|------------------------------------------------------------------|
|  HD 1080p★ (1920×1080) (default setting) | Approx. 18 Mbps | Movies with an aspect ratio (width:length) of 16:9 are recorded. |
|  HD 1080p (1920×1080) | Approx. 12.3 Mbps | Movies with an aspect ratio (width:length) of 16:9 are recorded. |
|  HD 720p (1280×720) | Approx. 9 Mbps | Movies with an aspect ratio (width:length) of 16:9 are recorded. |

| Option | Movie bitrate | Description |
|-----------------------------------------------------------------------------------------------------------|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  iFrame 540 (960×540) | Approx. 20.7 Mbps | Movies with an aspect ratio (width:length) of 16:9 are recorded. A format supported by Apple Inc. Movies cannot be edited ( 37). When recording movies to the internal memory, recording may stop unexpectedly in some shooting conditions. When recording movies of important events, recording to a memory card (class 6 or higher) is recommended. |
|  VGA (640×480) | Approx. 2.9 Mbps | Movies with an aspect ratio (width:length) of 4:3 are recorded. |

- The frame rate is approx. 30 frames per second for all options.

HS Movie Options



| Option | Movie bitrate | Description |
|------------------------------------------------------------------------------------------------------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  HS 60 fps (1280×720) | Approx. 6.1 Mbps | 1/2-speed slow motion movies with a 16:9 aspect ratio (width:length) are recorded. <ul style="list-style-type: none"> • Max. recording time: 30 seconds (playback time: one minute) |
|  HS 15 fps (1920×1080) | Approx. 12.3 Mbps | 2x speed fast motion movies with a 16:9 aspect ratio (width:length) are recorded. <ul style="list-style-type: none"> • Max. recording time: two minutes (playback time: one minute) |




 
 

More Information

File and Folder Names → 93


Recording Movies in Slow Motion and Fast Motion (HS Movie)


Enter shooting mode → MENU button →  tab → Movie options →  button

HS (high speed) movies can be recorded. Movies recorded using an HS movie option can be played back in slow motion at 1/2 of normal playback speed, or played back in fast motion at a speed two times faster than normal speed.

- 1 Press the multi selector  or  to select an HS movie option () and then press the  button.


- Press the **MENU** button after changing the settings and return to the shooting screen.

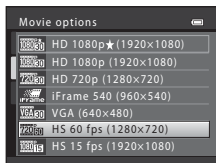

- 2 Press the  ( movie-record) button to start recording.


- Movie recording begins after the monitor briefly turns off.
- The maximum recording time display indicates the maximum recording time for HS movies.

HS movie options

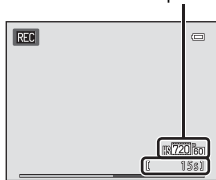

- 3 Press the  ( movie-record) button to end recording.

Notes About HS Movie

- Sound is not recorded.
- Zoom position, focus, exposure, and white balance are locked when you press the  (movie-record) button to start recording a movie.


HS Movie

Recorded movies are played back at about 30 frames per second.

When **Movie options** () is set to **720/60 HS 60 fps (1280×720)**, you can record movies that can be played back in slow motion. When set to **1080/15 HS 15 fps (1920×1080)**, movies that can be played back in fast motion at a speed two times faster than normal speed can be recorded.


When **720/60 HS 60 fps (1280×720)** is selected:

Movies are recorded at high speeds for up to 30 seconds, and are played back in slow motion at a speed two times slower than normal speed.

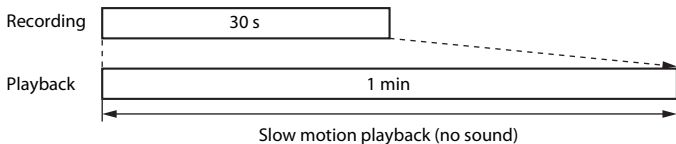

When **1080/15 HS 15 fps (1920×1080)** is selected:

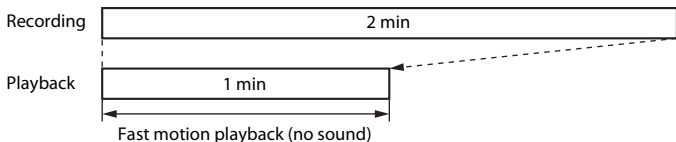

Movies of up to two minutes in length are recorded when recording for the purpose of high-speed playback. Movies are played back two times faster than normal speed.



Autofocus Mode

Enter shooting mode → MENU button →  tab → Autofocus mode →  button

You can select how the camera focuses in movie mode.


| Option | Description |
|--------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AF-S Single AF (default setting) | Focus is locked when the  ( movie-record) button is pressed to start recording. Select this option when the distance between the camera and the subject remains fairly consistent. |
| AF-F Full-time AF | Camera focuses continuously. Select this option when the distance between the camera and subject changes significantly during recording. The sound of the camera focusing may be heard in the recorded movie. Use of Single AF is recommended to prevent the sound of the camera focusing from interfering with recording. |


- When an HS movie option is selected in **Movie options**, the setting is fixed at **Single AF**.

Wind Noise Reduction

Enter shooting mode → MENU button →  tab → Wind noise reduction →  button

You can select the wind noise reduction setting used when recording movies.

| Option | Description |
|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  On | Reduces the sound heard when wind passes over the microphone. Use when recording movies in locations with strong winds. Other sounds may become difficult to hear during playback. |
| OFF Off (default setting) | Wind noise reduction is disabled. |



 
 

 


- The icon for the current setting is displayed in the monitor when the camera is in shooting mode ( 8). No icon is displayed when **Off** is selected.
- When an HS movie option is selected in **Movie options**, the setting is fixed at **Off**.

The Setup Menu

Welcome Screen

MENU button →  tab → Welcome screen →  button

You can configure the welcome screen that is displayed when you turn on the camera.


| Option | Description |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| None (default setting) | The camera enters shooting or playback mode without displaying the welcome screen. |
| COOLPIX | The camera displays a welcome screen and enters shooting or playback mode. |
| Select an image | <p>Displays an image selected for the welcome screen. When the image selection screen is displayed, select an image () and then press the .</p> <ul style="list-style-type: none">As the selected image is saved by the camera, it is displayed when the camera is turned on even if the original image is deleted.Images captured at an Image mode () setting of  4608x2592, images captured using Easy panorama () or 3D photography () 44), and images created by using small picture () or crop () that are 320 x 240 or smaller, cannot be selected. |

Time Zone and Date

MENU button → Y tab → Time zone and date → OK button


You can set the camera clock.

| Option | Description |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Date and time | <p>Allows you to set the camera's clock to the current date and time. Use the multi selector to set each item displayed on the screen.</p> <ul style="list-style-type: none">• Select an item: Press ► or ◀ (changes between D, M, Y, hour, minute).• Edit the highlighted item: Press ▲ or ▼.• Apply the setting: Select the minute setting and then press the OK button. |
| Date format | <p>The available date formats are Year/Month/Day, Month/Day/Year, and Day/Month/Year.</p> |
| Time zone | <p>Home time zone (🏠) can be specified and daylight saving time can be enabled or disabled. When the travel destination (📍) is selected, the time difference between the travel destination and the home time zone (🏠) is automatically calculated and the date and time in the selected region are saved. This can be useful when travelling.</p> |

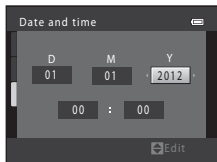


Selecting the Travel Destination Time Zone

- 1 Use the multi selector to select **Time zone**, and then press the **OK** button.

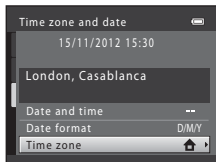


- 2 Select **Travel destination** and then press the **OK** button.

- The date and time displayed in the monitor changes according to the region currently selected.

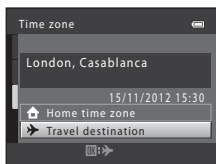



- 3 Press **▶**.

- The travel destination screen is displayed.

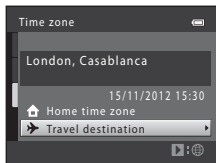



4 Press ◀ or ▶ to select the travel destination time zone.

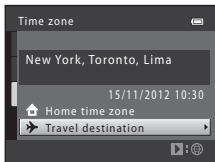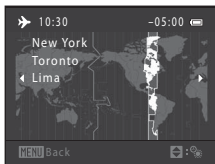- If daylight saving time is in effect, press ▲ to enable daylight saving time function. ☀ is displayed at the top of the monitor and the camera clock is advanced one hour. Press ▼ to disable the daylight saving time.
- Press the OK button to apply the travel destination time zone.
- For other time zones, set the camera clock to local time using the **Date and time** setting.
- While the travel destination time zone is selected, ⏸ is displayed in the monitor when the camera is in shooting mode.



Home Time Zone

- To switch to the home time zone, select  **Home time zone** in step 2, and then press the OK button.
- To change the home time zone, select  **Home time zone** in step 2, and then complete steps 3 and 4.



Daylight Saving Time

When daylight saving time starts or ends, turn the daylight saving time function on or off from the time zone selection screen displayed in step 4.

Imprinting Date on Images

Enable date imprint from the **Print date** option (📷75) in the setup menu after the date and time have been set. When the **Print date** option is enabled, images are saved with shooting date imprinted on them.

Monitor Settings





MENU button →  tab → Monitor settings →  button

You can set the options below.

| Option | Description |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Photo info | Select information displayed in the monitor during shooting and playback. |
| Image review | This setting determines whether or not the captured image is displayed immediately after shooting. The default setting is On . |
| Brightness | Select from 5 settings for monitor brightness. The default setting is 3 . |


Photo Info

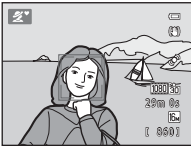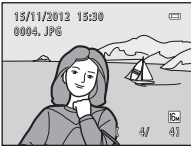You can select whether or not the photo information is displayed in the monitor.


| | Shooting mode | Playback mode |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Show info |  |  |
| Auto info (default setting) | The same information as in Show info is displayed. If no operations are performed after a few seconds, the display is the same as Hide info . The information is displayed again when an operation is performed. | |
| Hide info |  |  |

Shooting mode


Playback mode

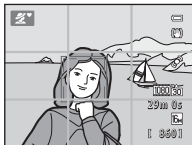Framing
grid+auto info

In addition to information shown with **Auto info**, a framing grid is displayed to help frame pictures. The framing grid is not displayed when recording movies.

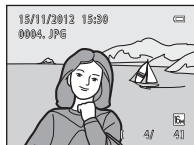

The same information as in **Auto info** is displayed.

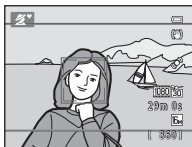Movie
frame+auto info

In addition to information shown with **Auto info**, a frame that represents the area that is captured when recording movies is displayed before recording begins. The movie frame is not displayed when recording movies.

The same information as in **Auto info** is displayed.

 **Battery Level**



When the battery level is low,  is always displayed regardless of the **Photo info** setting.

Print Date (Imprinting Date and Time)

MENU button → Y tab → Print date → OK button


The shooting date and time can be imprinted on the images when shooting, allowing the information to be printed even from printers that do not support date printing (👁️53).



| Option | Description |
|--------------------------------------------------------------------------------------------------------|--------------------------------------------|
|  Date | Date is imprinted on images. |
|  Date and time | Date and time are imprinted on images. |
| OFF (default setting) | Date and time are not imprinted on images. |

The icon for the current setting is displayed in the monitor when the camera is in shooting mode (📖 8). No icon is displayed when **Off** is selected.

 ✓ Notes About Print Date

- Imprinted dates form a permanent part of image data and cannot be deleted. The date and time cannot be imprinted on images after they have been captured.
- The date cannot be imprinted in the following situations:
 - When using **Night portrait** (when **Hand-held** is selected), **Easy panorama**, **Pet portrait** (when **Continuous** is selected), or **3D photography** in scene mode
 - When recording movies
- Dates imprinted at an **Image mode** setting (👁️39) of **VGA 640x480** may be difficult to read. Select an **Image mode** setting of  **1600x1200** or larger when using print date.
- The date is saved using the format selected in the setup menu's **Time zone and date** option (📖 18, 👁️70).

✍️ Print Date and Print Order


When printing with a DPOF-compatible printer that can print the shooting date and shooting information, you can use the **Print order** option (👁️51) to print this information in images, even if the **Print date** function was set to **Off** at the time of shooting.


Vibration Reduction

MENU button →  tab → Vibration reduction →  button

You can select the vibration reduction setting used when shooting. Vibration reduction allows you to reduce the effects of camera shake, which commonly occurs when shooting with zoom applied or when shooting at slow shutter speeds. The effects of camera shake are reduced when recording movies, in addition to when taking still pictures.

Set **Vibration reduction** to **Off** when shooting using a tripod to stabilize the camera.

| Option | Description |
|--------------------------------------------------------------------------------------------------------|----------------------------------|
|  On (default setting) | Vibration reduction is enabled. |
| OFF Off | Vibration reduction is disabled. |

The icon for the current setting is displayed in the monitor when the camera is in shooting mode ( 8). No icon is displayed when **Off** is selected.







 
 







Notes About Vibration Reduction


- After turning on the camera or after switching from playback mode to shooting mode, wait for the shooting mode screen to be displayed completely before taking pictures.
- Due to characteristics of the vibration reduction function, images displayed in the camera's monitor immediately after shooting may be displayed blurry.
- Vibration reduction may be unable to completely eliminate the effects of camera shake in some situations.
- When **Night landscape** in scene mode is set to **Tripod**, vibration reduction is not used even if **Vibration reduction** is set to **On**.

Motion Detection

MENU button →  tab → Motion detection →  button

You can select the motion detection setting—which reduces the effects of subject movement and camera shake—used when shooting still images.

| Option | Description |
|-------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Auto (default setting) | <p>When the camera detects subject movement or camera shake, the ISO sensitivity and shutter speed are automatically increased to reduce blurring. However, motion detection does not function in the following situations:</p> <ul style="list-style-type: none">• When the flash fires• In the following scene modes: Sports ( 38), Night portrait ( 39), Dusk/dawn ( 39), Night landscape ( 40), Museum ( 41), Fireworks show ( 41), Backlighting ( 42), Easy panorama ( 42), Pet portrait ( 43), and 3D photography ( 44)• When Continuous ( 44) is set to Continuous or Multi-shot 16 in  (auto) mode• When the ISO sensitivity option ( 46) is fixed at a particular value in  (auto) mode |
| OFF Off | Motion detection is disabled. |

The icon for the current setting is displayed in the monitor when the camera is in shooting mode ( 8).

When the camera detects camera shake or subject movement, it increases shutter speed and the motion detection icon turns green. No icon is displayed when **Off** is selected.



Notes About Motion Detection

- Motion detection may be unable to completely eliminate the effects of subject movement and camera shake in some situations.
- Motion detection may not function if the subject exhibits significant movement or is too dark.
- The images captured using motion detection may be somewhat “grainy” in appearance.

AF Assist

MENU button →  tab → AF assist →  button



You can enable or disable the AF-assist illuminator, which assists autofocus operation when the subject is dimly lit.

| Option | Description |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Auto (default setting) | The AF-assist illuminator lights automatically when the subject is dimly lit. The illuminator has a range of about 2.0 m (6 ft 7 in.) at the maximum wide-angle position and about 1.1 m (3 ft 7 in.) at the maximum telephoto position. Note that for some scene modes such as Museum ( 41) and Pet portrait ( 43), the AF-assist illuminator may not light even when Auto is selected. |
| Off | The AF-assist illuminator does not light. The camera may be unable to focus under dim lighting. |

Digital Zoom

MENU button →  tab → Digital zoom →  button



You can enable or disable digital zoom.

| Option | Description |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| On (default setting) | When the camera is zoomed in to the maximum optical zoom position, rotating the zoom control to T () triggers digital zoom ( 27). |
| Off | Digital zoom is not activated. |





Notes About Digital Zoom

- When digital zoom is in effect, the camera focuses on the center of the frame.
- Digital zoom cannot be used in the following situations:
 - When **Portrait, Night portrait, Night landscape, Easy panorama, Pet portrait, or 3D photography** is selected for scene mode
 - When smart portrait mode is selected
 - When **Continuous** is set to **Multi-shot 16**

Sound Settings

MENU button →  tab → Sound settings →  button



You can adjust the following sound settings.


| Option | Description |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Button sound | Select On (default setting) or Off . When On is selected, a beep sounds once when operations are completed successfully, two times when the focus has been locked, and three times when an error is detected, and welcome sound is played when the camera is turned on. |
| Shutter sound | Select On (default setting) or Off . Even when set to On , the shutter sound is not heard in the following situations: <ul style="list-style-type: none">• When Continuous is set to any setting other than Single ( 44)• When using Sports ( 38), Museum ( 41), or Pet portrait ( 43) in scene mode• When recording movies |

Notes About Sound Settings

Button sounds and the shutter sound are not heard when using **Pet portrait** in scene mode.

Auto Off




MENU button →  tab → Auto off →  button

If no operations are performed for a specified amount of time, the monitor turns off and the camera enters standby mode to save power ( 23).

This setting determines the amount of time that passes before the camera enters standby mode.

You can select **30 s**, **1 min** (default setting), **5 min**, or **30 min**.


When the Monitor Has Turned Off to Save Power

- When the camera is in standby mode, the power-on lamp flashes.
- If no operations are performed for approx. another three minutes, the camera turns off automatically.
- When the power-on lamp is flashing, pressing any of the following buttons turns the monitor back on:
 - Power switch, shutter-release button,  button,  button, or  (movie-record) button

Notes About Auto Off

- The time that passes before the camera enters standby mode is fixed in the following situations:
 - When a menu is displayed: Three minutes (when auto off is set to **30 s** or **1 min**)
 - During slide show playback: Up to 30 minutes
 - When the audio/video cable is connected: 30 minutes
 - When an HDMI cable is connected: 30 minutes
- The camera does not enter standby mode while the Eye-Fi card is uploading images.

Format Memory/Format Card


MENU button →  tab → Format memory/Format card →  button

Use this option to format the internal memory or a memory card.

Formatting the internal memory or memory cards permanently deletes all data. Data that has been deleted cannot be recovered. Be sure to transfer important data to a computer before formatting.


Formatting the Internal Memory

To format the internal memory, remove the memory card from the camera. The **Format memory** option is displayed in the setup menu.

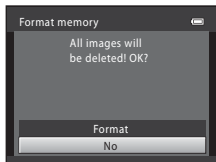


Formatting Memory Cards

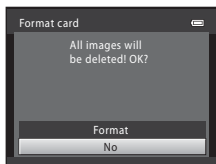

When a memory card is inserted in the camera, the **Format card** option is displayed in the setup menu.



Notes About Formatting Internal Memory and Memory Cards

- Favorites album icon settings () are reset to their default settings (number icons) when the internal memory or memory card is formatted.
- Do not turn the camera off or open the battery-chamber/memory card slot cover during formatting.
- The first time you insert a memory card that has been used in another device into this camera, be sure to format it with this camera.

Language

MENU button →  tab → Language →  button

You can select one of 31 languages for display of camera menus and messages.

| | |
|-----------------------|----------------------|
| Čeština | Czech |
| Dansk | Danish |
| Deutsch | German |
| English | (Default setting) |
| Español | Spanish |
| Ελληνικά | Greek |
| Français | French |
| Indonesia | Indonesian |
| Italiano | Italian |
| Magyar | Hungarian |
| Nederlands | Dutch |
| Norsk | Norwegian |
| Polski | Polish |
| Português (BR) | Brazilian Portuguese |
| Português (PT) | European Portuguese |
| Русский | Russian |

| | |
|-------------------|---------------------|
| Română | Romanian |
| Suomi | Finnish |
| Svenska | Swedish |
| Tiếng Việt | Vietnamese |
| Türkçe | Turkish |
| Українська | Ukrainian |
| عربي | Arabic |
| বাংলা | Bengali |
| 简体中文 | Simplified Chinese |
| 繁體中文 | Traditional Chinese |
| हिन्दी | Hindi |
| 日本語 | Japanese |
| 한글 | Korean |
| தமிழ் | Tamil |
| ภาษาไทย | Thai |

TV Settings

MENU button → Y tab → TV settings → OK button

You can adjust settings for connection to a TV.

| Option | Description |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Video mode | Select from NTSC and PAL . |
| HDMI | Select the HDMI output image resolution from Auto (default setting), 480p , 720p , or 1080i . When Auto is selected, the option best suited to the TV to which the camera is connected is automatically selected from 480p , 720p , or 1080i . |
| HDMI device control | Set whether or not the camera receives signals from an HDMI-CEC compatible television when connected with an HDMI cable. Select On (default setting) to use the television's remote control to perform playback operations. → "Using a TV Remote Control (HDMI Device Control)" (828) |
| HDMI 3D output | Set the method used to output 3D images to HDMI devices. Select On (default setting) to play back 3D images captured with this camera in 3D. |









HDMI and HDMI-CEC


"HDMI" is the abbreviation for High-Definition Multimedia Interface and is one type of multimedia interface. "HDMI-CEC" is the abbreviation for HDMI-Consumer Electronics Control, which enables compatible devices to control each other and allows the user to operate multiple devices with one remote control.

Blink Warning

MENU button →  tab → Blink warning →  button

You can select whether or not the camera detects human subjects that have blinked using face detection ( 67) when shooting in the following modes:

-  (easy auto) mode
- **Portrait** ( 38) or **Night portrait** ( 39) scene mode
-  (auto) mode (when **AF area mode** is set to **Target finding AF**;  69) (except when using continuous shooting)

| Option | Description |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| On | When the camera detects that one or more human subjects may have blinked in an image captured using face detection, the Did someone blink? screen is displayed in the monitor. The face of the human subject that may have blinked when the shutter was released is framed by a yellow border. Should this occur, check the image and determine whether or not another image should be captured ( 86). |
| Off (default setting) | Blink warning is disabled. |

The Blink Warning Screen

When the **Did someone blink?** screen shown on the right is displayed in the monitor, the operations described below are available.

If no operations are performed within a few seconds, the camera automatically returns to shooting mode.





| Function | Description |
|----------------------------------------|----------------------------------------------------------------------------------------|
| Enlarge the detected face that blinked | Rotate the zoom control to T (🔍). |
| Switch to full-frame playback | Rotate the zoom control to W (🖼️). |
| Select the face to be displayed | While zoomed in, press the multi selector ◀ or ▶ to switch to another face. |
| Delete the image | Press the 🗑️ button. |
| Switch to shooting mode | Press the ⏹ button, shutter-release button, 📷 button or the ⏻ (🎬 movie-record) button. |

Eye-Fi Upload

MENU button →  tab → Eye-Fi upload →  button

You can select whether or not the camera's Eye-Fi card (available from third-party manufacturers) sends images to your computer.






| Option | Description |
|----------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
|  Enable (default setting) | Images created with this camera are uploaded to the pre-determined computer. |
|  Disable | Images are not uploaded. |

Notes About Eye-Fi Cards

- Note that images are not uploaded if signal strength is insufficient even if **Enable** is selected.
- When using the camera in an area where wireless signal output is not permitted, set this feature to **Disable**.
- Refer to the instruction manual of your Eye-Fi card for more information. In the event of malfunction or if you have any questions, contact the card manufacturer.
- The camera can be used to turn Eye-Fi cards on and off, but may not support other Eye-Fi functions.
- The camera is not compatible with the Endless Memory function. When it is set on a computer, disable the function. If the Endless Memory function is enabled, the number of pictures taken may not be displayed correctly.
- The Eye-Fi upload feature is intended for use only in the country of purchase. Before using it in other countries, refer to laws and regulations of that country.
- When this setting is set to **Enable**, batteries are drained faster than normal.

Eye-Fi Upload Indicator

The upload status of the Eye-Fi card in the camera can be confirmed on the monitor ( 8, 10).

- : **Eye-Fi upload** is set to **Disable**.
-  (lights): Eye-Fi upload enabled; waiting for image upload.
-  (flashes): Eye-Fi upload enabled; uploading images.
- : Eye-Fi upload enabled but no images available for upload.
- : An error occurred. The camera cannot control the Eye-Fi card.

Reset All

MENU button → Y tab → Reset all → OK button

When **Reset** is selected, the camera's settings are restored to their default values.

Basic Shooting Functions

| Option | Default value |
|------------------------------|---------------|
| Flash mode (📖 53) | Auto |
| Self-timer (📖 56) | Off |
| Macro mode (📖 58) | Off |
| Exposure compensation (📖 60) | 0.0 |

Scene Mode

| Option | Default value |
|---------------------------------------------------------------|---------------|
| Scene mode setting in the shooting-mode selection menu (📖 37) | Portrait |
| Night landscape (📖 40) | Hand-held |
| Hue adjustment in Food mode (📖 41) | Center |
| Easy panorama (📖 42) | Normal (180°) |
| Continuous shooting in pet portrait mode (📖 43) | Continuous |
| Pet portrait auto release in pet portrait mode (📖 43) | On |

Special Effects Mode

| Option | Default value |
|-------------------------------------------------------------------------|---------------|
| Special effects mode setting in the shooting-mode selection menu (📖 46) | High key |

Smart Portrait Menu

| Option | Default value |
|-----------------------|---------------|
| Skin softening (Fn49) | On |
| Smile timer (Fn50) | On |
| Blink proof (Fn50) | Off |

Shooting Menu

| Option | Default value |
|------------------------|-------------------|
| Image mode (Fn39) | 4608x3456 |
| White balance (Fn41) | Auto |
| Continuous (Fn44) | Single |
| ISO sensitivity (Fn46) | Auto |
| Color options (Fn47) | Standard color |
| AF area mode (Fn48) | Target finding AF |

Movie Menu

| Option | Default value |
|-----------------------------|-----------------------|
| Movie options (Fn64) | HD 1080p★ (1920x1080) |
| Autofocus mode (Fn68) | Single AF |
| Wind noise reduction (Fn68) | Off |

Setup Menu

| Option | Default value |
|---------------------------|---------------|
| Welcome screen (🔍69) | None |
| Photo info (🔍73) | Auto info |
| Image review (🔍73) | On |
| Brightness (🔍73) | 3 |
| Print date (🔍75) | Off |
| Vibration reduction (🔍76) | On |
| Motion detection (🔍77) | Auto |
| AF assist (🔍78) | Auto |
| Digital zoom (🔍79) | On |
| Button sound (🔍80) | On |
| Shutter sound (🔍80) | On |
| Auto off (🔍81) | 1 min |
| HDMI (🔍84) | Auto |
| HDMI device control (🔍84) | On |
| HDMI 3D output (🔍84) | On |
| Blink warning (🔍85) | Off |
| Eye-Fi upload (🔍87) | Enable |


Others

| Option | Default value |
|-------------------------------------|------------------|
| Paper size (🔍33, 🔍34) | Default |
| Frame interval for Slide show (🔍55) | 3 s |
| Sequence display options (🔍63) | Key picture only |

- Selecting **Reset all** also resets the camera's file numbering (📷93). After a reset, the camera determines the largest file number in the internal memory or on the memory card and saves images using the next available file number. To reset file numbering to "0001", delete all images saved in the internal memory or on the memory card (📖 32) before selecting **Reset all**.
- The following menu settings remains unaffected when menus are reset with **Reset all**.
 - Shooting menu: Preset manual data (📷42) acquired for **White balance**
 - Playback menu: **Choose key picture** (📷63)
 - Setup menu: Settings for image registered for **Welcome screen** (📷69), **Time zone and date** (📷70), **Language** (📷83), **Video mode** for **TV settings** (📷84), and **Battery type** (📷92)
 - Others: Favorites album icons (📷10)

Battery Type

MENU button →  tab → Battery type →  button


To ensure that the camera shows the correct battery level ( 22), select the type that matches the batteries currently in use.

| Option | Description |
|----------------------------|------------------------------------------------------------------|
| Alkaline (default setting) | LR6/L40 (AA-size) alkaline batteries |
| COOLPIX (Ni-MH) | Nikon EN-MH2 rechargeable Ni-MH (nickel metal hydride) batteries |
| Lithium | FR6/L91 (AA-size) lithium batteries |

Firmware Version


MENU button →  tab → Firmware version →  button

You can view the current camera firmware version.

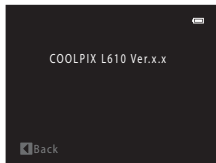

File and Folder Names


Images, movies, and voice memos are assigned file names as follows.

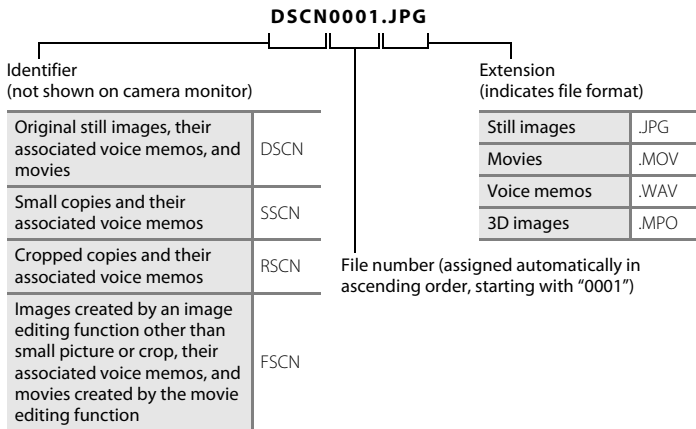

- Files are saved in folders named with a folder number followed by "NIKON" (e.g. "100NIKON"). A single folder can hold up to 200 images; if the current folder already contains 200 images, a new folder, named by adding one to the current folder name, is created the next time an image is captured (e.g. "100NIKON" → "101NIKON"). When the number of files within a folder reaches 9999, a new folder is created. File numbers are assigned automatically starting with "0001".
- Voice memo file names have the same identifier and file number as the image to which the voice memo is attached.








- Files copied using **Copy > Selected images** are copied to the current folder, where they are assigned new file numbers in ascending order starting from the largest file number in memory. **Copy > All images** copies all folders from the source medium; file names do not change but new folder numbers are assigned in ascending order, starting from the largest folder number on the destination medium (0061).
- If the current folder is numbered 999 and contains 200 images, or an image is numbered 9999, no further images can be captured until the internal memory or memory card is formatted (0082), or a new memory card is inserted.

Optional Accessories

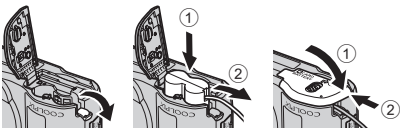




| | |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Rechargeable battery | Rechargeable Ni-MH batteries EN-MH2-B2 (set of two EN-MH2 batteries)* Rechargeable Ni-MH batteries EN-MH2-B4 (set of four EN-MH2 batteries)* |
| Battery charger | Battery Charger MH-72 (includes two EN-MH2 rechargeable Ni-MH batteries)* Battery Charger MH-73 (includes four EN-MH2 rechargeable Ni-MH batteries)* |
| AC adapter | AC Adapter EH-65A (connect as shown)  AC Adapter EH-62B cannot be used. |
| Camera strap | Strap AN-CP23 → "Attaching the AN-CP23 Camera Strap" (🔗96) |

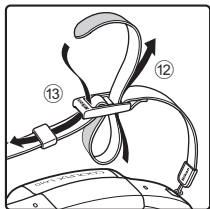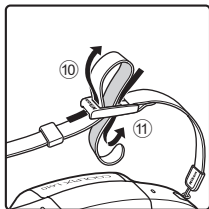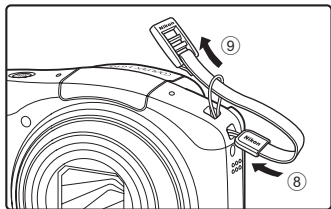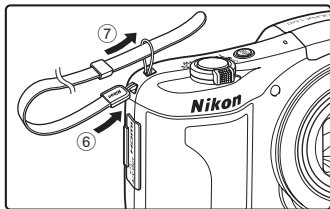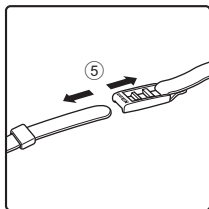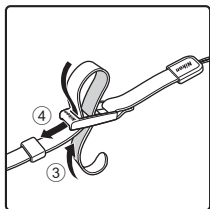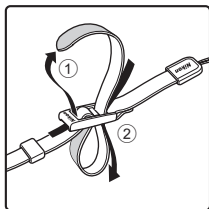







 

* To charge EN-MH2 batteries, use only Battery Charger MH-72 or MH-73. Do not use these battery chargers to charge any other type of battery.










Attaching the AN-CP23 Camera Strap














Error Messages





| Display | Cause/Solution |  |
|-------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|  (flashes) | Clock not set. Set date and time. |  70 |
| Battery exhausted. | Replace the batteries. | 14 |
| The camera will turn off to prevent overheating. | Inside of the camera has become hot. The camera turns off automatically. Allow the camera to cool down before turning it on again. | – |
|  (flashes in red) | Camera cannot focus. <ul style="list-style-type: none"> • Refocus. • Use focus lock. | 28, 72 71 |
| Please wait for the camera to finish recording. | Wait until the image is saved and the message disappears from the display. | – |
| Memory card is write protected. | Write-protect switch is in “lock” position. Slide write-protect switch to “write” position. | – |
| Not available if Eye-Fi card is locked. | Eye-Fi card write-protect switch is in “lock” position. Slide write-protect switch to “write” position. | – |
| | Error accessing Eye-Fi card. <ul style="list-style-type: none"> • Check that terminals are clean. • Confirm that the card is correctly inserted. | 16 16 |
| This card cannot be used. | Error accessing memory card. <ul style="list-style-type: none"> • Use approved card. |  21 |
| This card cannot be read. | <ul style="list-style-type: none"> • Check that terminals are clean. • Confirm that the card is correctly inserted. | 16 16 |

| Display | Cause/Solution |  |
|-----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Card is not formatted. Format card? Yes No | Memory card has not been formatted for use in the camera. Formatting deletes all data saved on the memory card. Be sure to select No and make copies of any images which need to be kept before formatting the memory card. Select Yes and then press the  |  5 |
| Out of memory. | Memory card is full. <ul style="list-style-type: none"> • Select smaller image size. • Delete images. • Insert new memory card. • Remove memory card and use internal memory. |  39 32, 94 16 17 |
| Image cannot be saved. | Error occurred while saving image. Format internal memory or memory card. |  82 |
| | Camera has run out of file numbers. Insert a new memory card or format internal memory or memory card. |  93 |
| | Image cannot be used for welcome screen. The following images cannot be registered as welcome screen. <ul style="list-style-type: none"> • Images captured at an Image mode setting of  4608x2592 • Images captured using Easy panorama or 3D photography • Images reduced to 320 x 240 size or smaller with cropping or small picture editing |  69 |
| | Insufficient space to save a copy. Delete images from destination. | 32 |
| Album is full. No further pictures can be added. | 200 images have already been added to album. <ul style="list-style-type: none"> • Remove some images from album. • Add to other album. |  9  7 |

| Display | Cause/Solution |  |
|-------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Sound file cannot be saved. | A voice memo cannot be attached to this file. <ul style="list-style-type: none"> Voice memos cannot be attached to movies. Select an image captured with this camera. | -  60 |
| A blink was detected in the picture just taken. | One or more portrait subjects may have blinked when the picture was taken. Check the image in playback mode. | 30,  50 |
| Image cannot be modified. | Cannot edit selected image. <ul style="list-style-type: none"> Select images that support editing function. Movies cannot be edited. |  18 - |
| Cannot record movie. | Time out error while saving movie on the memory card. Select a memory card with faster write speed. | 16 |
| Memory contains no images. | No images in the internal memory or memory card. <ul style="list-style-type: none"> Remove the memory card from the camera to play back images saved in the camera's internal memory. To copy the images saved in the camera's internal memory to the memory card, press the MENU button to select Copy in the playback menu. | 17  61 |
| | No images have been added to the selected album. <ul style="list-style-type: none"> Add images to the album. Select an album to which images are added. |  7  8 |
| | No images are contained in the category selected in auto sort mode. Select the category containing the sorted images. |  11 |
| File contains no image data. | File not created with this camera. File cannot be viewed on this camera. | - |
| This file cannot be played back. | View file using a computer or the device used to create or edit this file. | - |
| All images are hidden. | No images available for a slide show. |  55 |

| Display | Cause/Solution |  |
|------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| This image cannot be deleted. | Image is protected. Disable protection. |  56 |
| Travel destination is in the current time zone. | Home and destination are in the same time zone. |  71 |
| Raise the flash. | The flash is lowered. Raise the flash when shooting using Night portrait or Backlighting in scene mode. When using  (easy auto) mode, you can take pictures without raising the flash but the flash does not fire. | 39, 42, 53 |
| Unable to create panorama. | Could not shoot using easy panorama. |  3 |
| Unable to create panorama. Pan the camera in one direction only. | Shooting with easy panorama may not be possible in the following situations. <ul style="list-style-type: none"> • When shooting does not end after a certain amount of time. • When the camera is moved too fast. • When the camera is not moved properly in the panorama direction. | |
| Unable to create panorama. Pan the camera more slowly. | | |
| Shooting failed | When capturing 3D images, the first image could not be captured. <ul style="list-style-type: none"> • Try shooting again. • In some shooting conditions, such as when the subject is moving, dark, or low in contrast, shooting may not be possible. | 44 |
| Failed to take second shot | When capturing 3D images, the second shot could not be successfully taken after the first shot. <ul style="list-style-type: none"> • Try shooting again. After capturing the first image, move the camera horizontally and frame the subject so that it is aligned with the guide. • In some shooting conditions, such as when the subject is moving, dark, or low in contrast, the second image may not be captured. | 44 – |

| Display | Cause/Solution |  |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Failed to save 3D image | <p>The camera failed to save the 3D image.</p> <ul style="list-style-type: none"> • Try shooting again. • Delete images. • 3D images may not be able to be created and saved depending on the shooting conditions, such as when the subject is moving, dark, or low in contrast. | 44 32 – |
| Lens error | <p>Lens is not operating properly.</p> <p>Turn camera off and then on again. If error persists, contact retailer or Nikon-authorized service representative.</p> | 22 |
| Communications error | <p>Error occurred during communication with printer.</p> <p>Turn camera off and reconnect USB cable.</p> |  30 |
| System error | <p>Error has occurred in camera's internal circuitry.</p> <p>Turn camera off, remove and reinsert batteries, and turn camera on. If error persists, contact retailer or Nikon-authorized service representative.</p> | 14, 23 |
| Printer error: check printer status. | <p>Printer error.</p> <p>Check printer. After solving the problem, select Resume and then press the  button to resume printing.*</p> | – |
| Printer error: check paper | <p>Specified size of paper is not loaded in printer.</p> <p>Load the specified size of paper, select Resume, and then press the  button to resume printing.*</p> | – |
| Printer error: paper jam | <p>Paper has jammed in printer.</p> <p>Remove the jammed paper, select Resume, and then press the  button to resume printing.*</p> | – |
| Printer error: out of paper | <p>No paper is loaded in printer.</p> <p>Load the specified size of paper, select Resume, and then press the  button to resume printing.*</p> | – |

| Display | Cause/Solution |  |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
| Printer error: check ink | Ink error. Check ink, select Resume , and then press the  button to resume printing.* | – |
| Printer error: out of ink | Running out of ink or ink cartridge is empty. Replace ink cartridge, select Resume , and then press the  button to resume printing.* | – |
| Printer error: file corrupt | An error caused by the image file has occurred. Select Cancel and then press the  button to cancel printing. | – |

* See the documentation provided with your printer for further guidance and information.



Technical Notes and Index

| | |
|-------------------------------------|-----------|
| Caring for the Product | 2 |
| The Camera..... | 2 |
| Batteries..... | 3 |
| Memory Cards..... | 5 |
| Cleaning and Storage | 6 |
| Cleaning..... | 6 |
| Storage..... | 7 |
| Troubleshooting | 8 |
| Specifications | 17 |
| Approved Memory Cards..... | 21 |
| Supported Standards..... | 21 |
| Index | 24 |

Caring for the Product

The Camera

To ensure safe and continued enjoyment of your Nikon camera, observe the following precautions and the precautions noted in "For Your Safety" (📖 vii-xii) when using or storing your camera.

✔ **Do Not Subject the Product to Strong Shocks**

The product may malfunction if dropped or struck. Additionally, do not touch or apply force to the lens or lens cover.

✔ **Keep Dry**

If water enters the camera, internal components may rust or otherwise become damaged, and repairing the camera may be expensive or even impossible.

✔ **Avoid Sudden Changes in Temperature**

Sudden changes in temperature, such as when entering or leaving a heated building on a cold day, can cause condensation to form inside the device. To prevent condensation, place the device in a carrying case or a plastic bag before exposing it to sudden changes in temperature.

✔ **Keep away from Strong Magnetic Fields**

Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Strong static charge or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, damage data saved on the memory card, or affect the product's internal circuitry.

✔ **Do Not Point the Lens at Strong Light Sources for Extended Periods**

Avoid pointing the lens at the sun or other strong light sources for extended periods when using or storing the camera. Intense light may damage the image sensor or other components, producing a white blur effect in photographs.

Turn the Camera off Before Removing the Batteries, AC Adapter, or Memory Card

Removing the batteries, AC adapter, or memory card while the camera is on could damage the camera or memory card. If removed while the camera is saving or deleting data, data may be lost and the camera's memory or the memory card may be damaged.

Notes on the Monitor

- Monitors and electronic viewfinders are constructed with extremely high precision; at least 99.99% of pixels are effective, with no more than 0.01% being missing or defective. Hence while these displays may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is not a malfunction and has no effect on images recorded with the device.
- Scraping or pressing on the surface of the monitor may result in damage or malfunction. Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent the liquid crystal from the display touching the skin or entering the eyes or mouth.
- Images in the monitor may be difficult to see under bright lighting.
- The monitor is lit by an LED backlight. Should the monitor begin to dim or flicker, contact your Nikon-authorized service representative.

Batteries

Be sure to read and follow the warnings noted in "For Your Safety" ( vii-xii) before use.

Notes About Using Batteries

- Used batteries may overheat. Handle with caution.
- Do not use batteries beyond their recommended expiration date.
- Do not turn the camera on and off repeatedly if discharged batteries are inserted in the camera.

Spare Batteries

We recommend carrying spare batteries depending on where you are shooting. It may be difficult to purchase batteries in certain areas.

Charging Batteries



If using optional rechargeable batteries, charge the batteries before taking pictures. Batteries are not charged at the time of purchase.

Be sure to read and follow the warnings noted in the operating instructions included with the battery charger.

Charging Rechargeable Batteries

- Do not mix batteries with different amounts of charge remaining, or batteries of a different make or model.
- When using EN-MH2 batteries with the COOLPIX L610, charge two batteries at a time using Battery Charger MH-72. When using Battery Charger MH-73, charge two or four batteries at a time. Use only Battery Charger MH-72 or MH-73 to charge EN-MH2 batteries.
- When using Battery Charger MH-72 or MH-73, only charge EN-MH2 batteries.

Notes About EN-MH1 Rechargeable Batteries and Battery Charger MH-70/71

- You can also use EN-MH1 Ni-MH rechargeable batteries with this camera.
- Use only Battery Charger MH-70 or MH-71 to charge EN-MH1 batteries.
- When using Battery Charger MH-70 or MH-71, only charge EN-MH1 batteries.
- Set **Battery type** ( 99,  92) to **COOLPIX (Ni-MH)**.

Notes About Rechargeable Ni-MH Batteries

- If you repeatedly charge rechargeable Ni-MH batteries while they still have some charge remaining, the message **Battery exhausted.** may be displayed prematurely when using the batteries. This is due to the “memory effect,” in which the amount of charge the batteries can hold decreases temporarily. Use the batteries until there is no charge remaining and they will return to their normal behavior.
- Rechargeable Ni-MH batteries discharge even when not being used. We recommend charging the batteries just before using them.

Cold Environment Usage

Battery performance decreases in cold environments. When using the camera in cold environments, try not to let the camera and batteries become too cold. The camera may not function if you use discharged batteries in cold environments. Keep spare batteries warm and alternate between two sets of batteries. Batteries that cannot be used because they have become too cold can often be used again when they have been warmed up.

Battery Terminals

Dirt on the battery terminals can prevent the camera from functioning. Remove dirt from the terminals using a dry cloth.



Remaining Battery Charge

If you insert discharged batteries into the camera, the camera may indicate that the batteries have adequate charge remaining. This is a characteristic of batteries.

Recycling

Used batteries are a valuable resource. Please recycle used batteries in accordance with local regulations. Cover the battery terminals with plastic tape when recycling.

Memory Cards

- Use only Secure Digital memory cards. Approved memory cards → :21
- Observe the precautions noted in the documentation included with your memory card.
- Do not affix labels or stickers to the memory card.
- Do not format the memory card using a computer.
- Before using a memory card with this camera, format the card using this camera if the card has been used with another device. Before using a new memory card, we recommend using this camera to format the card.
- Note that **formatting a memory card permanently deletes all images and other data on the memory card**. If there is data saved on the memory card that you wish to keep, copy that data to a computer before formatting.
- If the message **Card is not formatted. Format card?** is displayed when you insert a memory card, the memory card must be formatted. If there is data on the memory card that you do not want to delete, select **No**. Copy that data to a computer before formatting. To format the memory card, select **Yes** and then press the  button.
- Observe the following precautions while formatting the memory card, saving and deleting images, and copying images to a computer, otherwise data or the memory card itself may be damaged.
 - Do not open the battery-chamber/memory card slot cover or remove the memory card or batteries.
 - Do not turn off the camera
 - Do not disconnect the AC adapter

Cleaning and Storage

Cleaning

Do not use alcohol, thinner, or other volatile chemicals.

| | |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Lens | When cleaning the lens, avoid touching it directly with your fingers. Remove dust or lint with a blower. To remove fingerprints, oil, or other grime that cannot be removed with a blower, wipe the lens with a soft, dry cloth or an eyeglass cleaning cloth, using a gentle spiral motion that starts in the center and moves toward the edges. Do not wipe forcefully or wipe with a rough cloth, otherwise the camera may be damaged or malfunction. If you still cannot remove the grime, wet a soft cloth with a commercial liquid lens cleaner and gently wipe off the grime. |
| Monitor | Remove dust or lint with a blower. To remove fingerprints, oil, or other grime, wipe the area with a soft, dry cloth or an eyeglass cleaning cloth. Do not wipe forcefully or wipe with a rough cloth, otherwise the camera may be damaged or malfunction. |
| Body | <ul style="list-style-type: none">• Remove dust or lint with a blower. Wipe with a soft, dry cloth.• After using the camera at the beach or other sandy or dusty environment, wipe off any sand, dust, or salt with a dry cloth lightly dampened with fresh water and dry thoroughly. <p>Note that foreign matter inside the camera could cause damage not covered by the warranty.</p> |

Storage









Remove the batteries if the camera will not be used for an extended period. To prevent mold or malfunction and to ensure long, trouble-free use of the camera, we recommend you insert the batteries and operate the camera approximately once a month. Do not store the camera with naphtha or camphor moth balls, or in any of the following locations:








- Next to equipment that produces strong electromagnetic fields, such as televisions or radios
- Places that are exposed to temperatures below $-10\text{ }^{\circ}\text{C}$ ($14\text{ }^{\circ}\text{F}$) or above $50\text{ }^{\circ}\text{C}$ ($122\text{ }^{\circ}\text{F}$)
- Places that are poorly ventilated or subject to humidity of over 60%

Troubleshooting








If the camera fails to function as expected, check the list of common problems below before consulting your retailer or Nikon-authorized service representative.









Power, Display, Settings Issues









| Problem | Cause/Solution |  |
|----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The camera is on but does not respond. | <ul style="list-style-type: none">• Wait for recording to end.• If the problem persists, turn the camera off. If the camera does not turn off, remove and reinsert the battery or batteries or, if you are using an AC adapter, disconnect and reconnect the AC adapter. Note that although any data currently being recorded will be lost, data that have already been recorded will not be affected by removing or disconnecting the power source. | – 14, 15, 23,  95 |
| Camera turns off without warning. | <ul style="list-style-type: none">• Battery is exhausted.• Camera has turned off automatically to save power.• The camera and batteries have become too cold and cannot operate properly. | 22 98,  81  4 |
| Monitor is blank. | <ul style="list-style-type: none">• Camera is off.• Battery is exhausted.• Standby mode for saving power: press the power switch, the shutter-release button,  button,  button, or  (movie-record) button.• The flash lamp flashes while the flash is charging. Wait for the flash to charge.• Camera and computer are connected via USB cable.• Camera and TV are connected via audio/video cable or HDMI cable. | 23 22 2, 23 55 80, 85 80,  27 |








| Problem | Cause/Solution |  |
|------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Monitor is hard to read. | <ul style="list-style-type: none"> Adjust monitor brightness. Monitor is dirty. Clean monitor. | 98,  73  6 |
| Date and time of recording are not correct. | <ul style="list-style-type: none"> If camera clock has not been set, "Date not set" indicator flashes when shooting images and recording movies. Images and movies saved before clock is set are dated "00/00/0000 00:00" or "01/01/2012 00:00" respectively. Set the correct time and date using Time zone and date in the setup menu. Check camera clock regularly against more accurate timepieces and reset as required. | 18, 98,  70 |
| No indicators displayed in monitor. | Hide info is selected for Photo info . Select Show info . | 98,  73 |
| Print date not available. | Time zone and date in the setup menu has not been set. | 18, 98,  70 |
| Date not imprinted on images even when Print date is enabled. | <ul style="list-style-type: none"> The current shooting mode is one that does not support Print date. The date cannot be imprinted on movies. | 98,  75 |
| Screen for setting time zone and date is displayed when camera is turned on. | Clock battery is exhausted; all settings were restored to their default values. | 18, 21 |
| Camera settings reset. | | |
| Camera becomes hot. | The camera may become hot when recording movies or uploading images from an Eye-Fi card for an extended period of time, or when the camera is used in a hot area; this is not a malfunction. | - |

Shooting Issues









| Problem | Cause/Solution |  |
|---------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cannot switch to shooting mode. | Disconnect the HDMI cable or USB cable. | 80, 85,  27,  30 |
| No image captured when the shutter-release button is pressed. | <ul style="list-style-type: none">• When camera is in playback mode, press the  button, the shutter-release button, or the  ( movie-record) button.• When menus are displayed, press the MENU button.• Battery is exhausted.• When flash lamp flashes, flash is charging. | 30 3 22 55 |
| Cannot capture 3D image. | In some shooting conditions, such as when the subject is dark or low in contrast, the second image may not be captured or the 3D image may not be saved. | — |
| Camera cannot focus. | <ul style="list-style-type: none">• Subject is too close. Try shooting using easy auto mode, Close-up in scene mode, or macro mode.• The intended subject is one with which autofocus does not perform well.• Set AF assist in the setup menu to Auto.• Turn camera off and then on again. | 36, 40, 58 72 98,  78 23 |








| Problem | Cause/Solution |  |
|-----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Images are blurred. | <ul style="list-style-type: none"> • Use flash. • Increase the ISO sensitivity value. • Enable vibration reduction or motion detection. • Use BSS (best shot selector). • Use tripod and self-timer. | 53 64,  46 98,  76,  77 41, 64,  44 56 |
| Bright specks appear in images captured with flash. | Flash is reflecting off particles in air. Lower the flash. | 5, 54 |
| Flash does not fire. | <ul style="list-style-type: none"> • The flash is lowered. • Scene mode with which the flash does not fire is selected. • On is selected for Blink proof in smart portrait menu. • Another function that restricts flash is enabled. | 5, 53 61 64,  50 65 |
| Digital zoom cannot be used. | <ul style="list-style-type: none"> • Off is selected for Digital zoom in the setup menu. • Digital zoom cannot be used in the following situations. <ul style="list-style-type: none"> - When Portrait, Night portrait, Night landscape, Easy panorama, Pet portrait, or 3D photography is selected for scene mode - When smart portrait mode is selected - When Continuous in the shooting menu is set to Multi-shot 16 | 98,  79 38, 39, 40, 42, 43, 44 48 64,  44 |
| Image mode not available. | Another function that restricts the Image mode option is enabled. | 65 |




| Problem | Cause/Solution |  |
|----------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| No sound when shutter is released. | <ul style="list-style-type: none"> • Off is selected for Sound settings > Shutter sound in the setup menu. No sound is heard with some shooting modes and settings, even when On is selected. • Do not block the speaker. | 98,  80 3 |
| AF-assist illuminator does not light. | Off is selected for AF assist in the setup menu. AF-assist illuminator may not light depending on the current scene mode, even when Auto is selected. | 98,  78 |
| Images appear smeared. | Lens is dirty. Clean lens. |  6 |
| Colors are unnatural. | White balance or hue is not adjusted properly. | 41, 64,  41 |
| Randomly spaced bright pixels ("noise") appear in image. | The subject is dark, so shutter speed is too slow or ISO sensitivity is too high. Noise can be reduced by: <ul style="list-style-type: none"> • Using flash. • Specifying a lower ISO sensitivity setting. | 53 64,  46 |
| Images are too dark (underexposed). | <ul style="list-style-type: none"> • The flash is lowered or a shooting mode in which the flash does not fire is selected. • Flash window is blocked. • Subject is beyond flash range. • Adjust exposure compensation. • Increase ISO sensitivity. • Subject is backlit. Select Backlighting in scene mode, or raise the flash and set the flash mode to  (fill flash). | 5, 53, 61 26 53 60 64,  46 42, 53 |
| Images are too bright (overexposed). | Adjust exposure compensation. | 60 |

| Problem | Cause/Solution |  |
|-------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| Unexpected results when flash set to  (auto with red-eye reduction). | When taking pictures with  (auto with red-eye reduction), or when taking pictures with Night portrait (either in easy auto mode or in scene mode) and the fill flash with slow sync and red-eye reduction is used, red-eye reduction may be applied, in rare cases, to areas not affected by red-eye. Use auto mode or any scene mode other than Night portrait , and change the flash mode to any setting other than  (auto with red-eye reduction) and try taking a picture again. | 39, 53 |
| Skin tones are not softened. | <ul style="list-style-type: none"> • In some shooting conditions, facial skin tones may not be smoothed. • Use Skin softening in the playback menu for images containing four or more faces. | 49 78,  21 |
| Saving images takes time. | It may take more time to save images in the following situations. <ul style="list-style-type: none"> • When the noise reduction function is in operation, such as when shooting in a dark environment • When the flash mode is set to  (auto with red-eye reduction) • When shooting using Night landscape in scene mode • When the skin softening function is applied while shooting • When using continuous shooting | – 55 40 38, 39, 64 64,  44 |

Playback Issues


| Problem | Cause/Solution |  |
|-----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| File cannot be played back. | <ul style="list-style-type: none"> • File or folder was overwritten or renamed by computer or other make of camera. • This camera cannot play back movies recorded with another make or model of digital camera. | <p>–</p> <p>95</p> |
| Cannot zoom in on image. | <ul style="list-style-type: none"> • Playback zoom cannot be used with movies, small pictures, or images that have been cropped to a size of 320 × 240 or smaller. • This camera may not be able to zoom in on images captured with another make or model of digital camera. • 3D images cannot be enlarged when the camera is connected via HDMI and they are played back in 3D. | <p>–</p> <p>–</p> <p>44</p> |
| Cannot record voice memos. | <ul style="list-style-type: none"> • Voice memos cannot be attached to movies. • Voice memos cannot be attached to images captured with another make or model of digital camera. Voice memos attached to images using another camera cannot be played back on this camera. | <p>–</p> <p>79, 59</p> |
| Cannot use quick retouch, D-Lighting, skin softening, filter effects, small picture, or crop. | <ul style="list-style-type: none"> • These options cannot be used with movies. • Images captured at an Image mode setting of  4608×2592 and images captured using Easy panorama or 3D photography cannot be edited, and the same editing feature cannot be applied multiple times. • This camera cannot edit images captured with another make or model of digital camera. | <p>–</p> <p>78, 17, 18</p> <p>78, 17, 18</p> |
| Cannot rotate image. | This camera cannot rotate images captured with another make or model of digital camera, or images captured using 3D photography . | 44 |
| Cannot edit movie. | <ul style="list-style-type: none"> • Edited movies cannot be edited again. • Movies cannot be trimmed so that they are less than two seconds long. • Editing functions are not available when there is not enough free space in the internal memory or on the memory card, or when the battery level indicator is . | – |

| Problem | Cause/Solution |  |
|----------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Images are not displayed on TV.</p> | <ul style="list-style-type: none"> • Video mode or HDMI in the TV settings in the setup menu is not correctly set. • Cables are connected to the HDMI mini connector (Type C) and to the USB/audio/video output connector simultaneously. • Memory card contains no images. Replace the memory card. Remove the memory card to play back images from the internal memory. | <p>99, 84</p> <p>80, 85, 27, 30 16</p> |
| <p>Album icons are reset to their default icons, images added to albums cannot be displayed in favorite pictures mode.</p> | <p>Data saved in the internal memory or on the memory card may not be played back correctly if overwritten by a computer.</p> | <p>–</p> |
| <p>The saved images are not displayed in auto sort mode.</p> | <ul style="list-style-type: none"> • The desired image was sorted to a category other than the category currently displayed. • Images saved with another make or model of digital camera, or images copied using the Copy option cannot be played back in auto sort mode. • Images saved in the internal memory or on the memory card may not be played back correctly if overwritten by a computer. • Up to 999 images and movies in total can be added to each category. If the desired category already contains 999 images or movies in total, new images or movies cannot be added. | <p>76, 11</p> <p>76, 11</p> <p>–</p> <p>76, 11</p> |

| Problem | Cause/Solution |  |
|-----------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Nikon Transfer 2 does not start when camera is connected. | <ul style="list-style-type: none"> • Camera is off. • Battery is exhausted. • USB cable is not correctly connected. • Camera is not recognized by the computer. • Confirm system requirements. • Computer is not set to start Nikon Transfer 2 automatically. For more information about Nikon Transfer 2, refer to help information contained in ViewNX 2. | 23 22 80, 85 – 82 85 |
| Images to be printed are not displayed. | <ul style="list-style-type: none"> • Memory card contains no images. Replace the memory card. • Remove the memory card to print images from the internal memory. • Images captured using 3D photography in scene mode cannot be printed. | 16 16 44 |
| Cannot select paper size with camera. | <p>Paper size cannot be selected from the camera in the following situations, even when printing from a PictBridge-compatible printer. Use the printer to select paper size.</p> <ul style="list-style-type: none"> • The printer does not support the paper sizes specified by the camera. • The printer automatically selects the paper size. | 80,  33,  34 – |

Specifications

Nikon COOLPIX L610 Digital Camera



| | |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Type | Compact digital camera |
| Number of effective pixels | 16.0 million |
| Image sensor | $\frac{1}{2.3}$ -in. type CMOS; approx. 16.79 million total pixels |
| Lens | 14x optical zoom, NIKKOR lens |
| Focal length | 4.5–63.0 mm (angle of view equivalent to that of 25–350 mm lens in 35mm [135] format) |
| f/-number | f/3.3–5.9 |
| Construction | 11 elements in 10 groups (2 ED lens elements) |
| Digital zoom magnification | Up to 2x (angle of view equivalent to that of approx. 700 mm lens in 35mm [135] format) |
| Vibration reduction | Lens shift |
| Motion blur reduction | Motion detection (still pictures) |
| Autofocus (AF) | Contrast-detect AF |
| Focus range | <ul style="list-style-type: none">• [W]: Approx. 50 cm (1 ft 8 in.)–∞, [T]: Approx. 1.0 m (3 ft 4 in.)–∞• Macro mode: Approx. 1 cm (0.4 in.) (wide-angle position relative to –∞) (All distances measured from center of front surface of lens) |
| Focus-area selection | Center, face detection, target finding AF |
| Monitor | 7.5 cm (3-in.), approx. 460k-dot, TFT LCD with anti-reflection coating and 5-level brightness adjustment |
| Frame coverage (shooting mode) | Approx. 96% horizontal and 96% vertical (compared to actual picture) |
| Frame coverage (playback mode) | Approx. 96% horizontal and 96% vertical (compared to actual picture) |

| | |
|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Storage | |
| Media | Internal memory (approx. 28 MB), SD/SDHC/SDXC memory card |
| File system | DCF, Exif 2.3, DPOF, and MPF compliant |
| File formats | Still pictures: JPEG 3D images: MPO Sound files (voice memo): WAV Movies: MOV (Video: H.264/MPEG-4 AVC, Audio: AAC stereo) |
| Image size (pixels) | <ul style="list-style-type: none"> • 16M (High) [4608 × 3456★] • 16M [4608 × 3456] • 8M [3264 × 2448] • 4M [2272 × 1704] • 2M [1600 × 1200] • VGA [640 × 480] • 16:9 [4608 × 2592] |
| ISO sensitivity (Standard output sensitivity) | <ul style="list-style-type: none"> • ISO 125–1600 • ISO 3200 (available when using Auto mode) |
| Exposure | |
| Metering mode | 256-segment matrix, center-weighted (digital zoom less than 2×), spot (digital zoom 2×) |
| Exposure control | Programmed auto exposure and exposure compensation (–2.0 – +2.0 EV in steps of $\frac{1}{3}$ EV) |
| Shutter | |
| Speed | <ul style="list-style-type: none"> • $\frac{1}{1600}$–1 s • 4 s (when scene mode is set to Fireworks show) |
| Aperture | |
| Range | Electronically-controlled ND filter (–2 AV) selection 2 steps (f/3.3 and f/6.6 [W]) |
| Self-timer | Approx. 10 s |

| | |
|---------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Built-in flash | |
| Range (ISO sensitivity: Auto) | [W]: Approx. 0.5–6.0 m (1 ft 8 in.–19 ft) [T]: Approx. 1.5–3.2 m (5 ft–10 ft) |
| Flash control | TTL auto flash with monitor preflashes |
| Interface | Hi-Speed USB |
| Data transfer protocol | MTP, PTP |
| Video output | Can be selected from NTSC and PAL |
| HDMI output | Can be selected from Auto, 480p, 720p, and 1080i |
| I/O terminal | Audio/video (A/V) output; digital I/O (USB) HDMI mini connector (Type C) (HDMI output) |
| Supported languages | Arabic, Bengali, Chinese (Simplified and Traditional), Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hindi, Hungarian, Indonesian, Italian, Japanese, Korean, Norwegian, Polish, Portuguese (European and Brazilian), Romanian, Russian, Spanish, Swedish, Tamil, Thai, Turkish, Ukrainian, Vietnamese |
| Power sources | <ul style="list-style-type: none"> • LR6/L40 (AA-size) alkaline battery × 2 • FR6/L91 (AA-size) lithium battery × 2 • EN-MH2 rechargeable Ni-MH battery (available separately) × 2 • AC Adapter EH-65A (available separately) |
| Battery life¹ | |
| Still pictures | <ul style="list-style-type: none"> • Approx. 120 shots when using alkaline batteries • Approx. 470 shots when using lithium batteries • Approx. 330 shots when using EN-MH2 batteries |
| Movies (actual battery life for recording) ² | <ul style="list-style-type: none"> • Approx. 11 min when using alkaline batteries • Approx. 1 h 20 min when using lithium batteries • Approx. 50 min when using EN-MH2 batteries |
| Tripod socket | 1/4 (ISO 1222) |
| Dimensions (W × H × D) | Approx. 108.0 × 68.4 × 34.1 mm (4.3 × 2.7 × 1.4 in.) (excluding projections) |
| Weight | Approx. 240 g (8.5 oz) (including batteries and a memory card) |

Operating environment

| | |
|-------------|-------------------------------|
| Temperature | 0°C–40°C (32°F–104°F) |
| Humidity | 85% or less (no condensation) |

- Unless otherwise stated, all figures are based on an ambient temperature of 23 ±3°C (73.4 ±5.4°F), as specified by the Camera and Imaging Products Association (CIPA), and the use of LR6/L40 (AA-size) alkaline batteries.
- ¹ Based on Camera and Imaging Products Association (CIPA) standards for measuring battery life. For still pictures, zoom is adjusted for each shot, the flash is fired for every other shot, and Image mode is set to  **4608×3456**. For movies, the Movie options setting is set to  **HD 1080p★ (1920×1080)**. Battery life may vary based on factors such as battery condition, interval between shots, and the amount of time menus and images are displayed. The included batteries are for trial use only. Figures listed for lithium batteries are measured using commercially-available FR6/L91 (AA-size) Energizer(R) Ultimate Lithium batteries.
 - ² The maximum size for a single movie is 4 GB, and the maximum recording time for a single movie is 29 minutes, even when there is sufficient free space on the memory card. If the camera becomes hot, movie recording may stop before these limits are reached.

Specifications

- Nikon will not be held liable for any errors this manual may contain.
- The appearance of this product and its specifications are subject to change without notice.

Approved Memory Cards

The following Secure Digital (SD) memory cards have been tested and approved for use in this camera.

- Memory cards with an SD Speed Class rating of 6 or faster are recommended for recording movies. When using a memory card with a lower Speed Class rating, movie recording may stop unexpectedly.

| | SD memory card | SDHC memory card ² | SDXC memory card ³ |
|-----------|-------------------|-------------------------------|-------------------------------|
| SanDisk | 2 GB ¹ | 4 GB, 8 GB, 16 GB, 32 GB | 64 GB, 128 GB |
| TOSHIBA | 2 GB ¹ | 4 GB, 8 GB, 16 GB, 32 GB | 64 GB |
| Panasonic | 2 GB ¹ | 4 GB, 8 GB, 16 GB, 32 GB | 64 GB |
| Lexar | – | 4 GB, 8 GB, 16 GB, 32 GB | 64 GB, 128 GB |

¹ If the memory card is used with a card reader or similar device, make sure that the device supports 2 GB cards.

² SDHC compliant.

If the memory card is used with a card reader or similar device, make sure that the device supports SDHC.



³ SDXC compliant.

If the memory card is used with a card reader or similar device, make sure that the device supports SDXC.



- Contact the manufacturer for details on the above cards. We cannot guarantee camera performance when using memory cards made by other manufacturers.

Supported Standards

- **DCF:** Design Rule for Camera File System is a standard widely used in the digital camera industry to ensure compatibility among different makes of camera.
- **DPOF:** Digital Print Order Format is an industry-wide standard that allows images to be printed from print orders saved on memory cards.
- **Exif version 2.3:** Exchangeable image file format (Exif) version 2.3 for digital still cameras is a standard that allows information saved with photographs to be used for optimal color reproduction when images are output from Exif-compliant printers.

- **PictBridge:** A standard developed cooperatively by the digital camera and printer industries, allowing photographs to be output directly to a printer without connecting the camera to a computer.

AVC Patent Portfolio License

This product is licensed under the AVC Patent Portfolio License for the personal and noncommercial use of a consumer to (i) encode video in compliance with the AVC standard ("AVC video") and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC video.

No license is granted or shall be implied for any other use.

Additional information may be obtained from MPEG LA, L.L.C.

See **<http://www.mpegla.com>**.

Trademark Information

- Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh, Mac OS, and QuickTime are trademarks of Apple Inc., registered in the U.S. and other countries. The iFrame logo and the iFrame symbol are trademarks of Apple Inc.
- Adobe and Acrobat are registered trademarks of Adobe Systems Inc.
- SDXC, SDHC and SD Logos are trademarks of SD-3C, LLC.
- PictBridge is a trademark.
- HDMI, **HDMI** logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- All other trade names mentioned in this manual or the other documentation provided with your Nikon product are trademarks or registered trademarks of their respective holders.

FreeType License (FreeType2)

Portions of this software are copyright © 2012 The FreeType Project (["www.freetype.org"](http://www.freetype.org)). All rights reserved.

MIT License (Harfbuzz)

Portions of this software are copyright © 2012 The Harfbuzz Project (["http://www.freedesktop.org/wiki/Software/HarfBuzz"](http://www.freedesktop.org/wiki/Software/HarfBuzz)). All rights reserved.










Index

Symbols










| | |
|--------------------------------------|----------------------|
| AE/AF-L | 44 |
| T Telephoto | 27 |
| W Wide-angle | 27 |
| Playback zoom | 74 |
| Thumbnail playback | 75 |
| Easy auto mode | 36 |
| Scene mode | 37 |
| HI Special effects mode | 46 |
| Smart portrait mode | 48 |
| Auto mode | 51 |
| Playback mode | 30, 76 |
| Favorite pictures mode | 76, |
| Auto sort mode | 76, |
| List by date mode | 76, |
| Setup menu | 98 |
| Apply selection button | 3 |
| Shooting mode button | 3 |
| Movie-record button | 3 |
| Playback button | 3, 30 |
| Delete button | 3, 32 |
| MENU button | 3, 6, 63, 78, 93, 98 |
| Flash pop-up control | 3, 5, 53 |
| Flash mode | 53 |
| Self-timer | 56 |
| Macro mode | 58 |
| Exposure compensation | 60 |
| Help | 38 |

Numerics









| | |
|----------------------------------------------|---------|
| 3D images | 44, |
| 3D photography 3D | 44 |
| A | |
| AC adapter | 15, |
| AF area mode | 64, |
| AF-assist illuminator | 2, 98, |
| Album | |
| Alkaline batteries | 14 |
| Aperture value | 29 |
| Audio/video cable | 81, |
| Audio/video-in jack | 81, |
| Auto flash | 54 |
| Auto mode | 51 |
| Auto off | 23, 98, |
| Auto sort menu | 78, |
| Auto sort mode | 76, |
| Autofocus | 59, 72 |
| Autofocus mode | 93, |
| B | |
| Backlighting | 42 |
| Battery | 14, 21 |
| Battery charger | |
| Battery level | 22 |
| Battery type | 99, |
| Battery-chamber/memory card slot cover | 3, 16 |


| | |
|-------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| Beach  | 39 |
| Best shot selector..... | 41,  44 |
| Black and white copy  | 41 |
| Black-and-white..... | 64,  47 |
| Blink proof..... | 64,  50 |
| Blink warning..... | 99,  85 |
| Brightness..... |  73 |
| BSS..... | 41,  44 |
| Button sound..... |  80 |

C










| | |
|--------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Calendar display..... | 75 |
| Choose key picture..... | 79,  14,  63 |
| Close-up  | 40 |
| Color options..... | 64,  47 |
| Compression ratio..... |  39 |
| Computer..... | 81, 85 |
| Connector cover..... | 2 |
| Continuous shooting..... | 64,  44 |
| Copy..... | 79,  61 |
| Crop..... | 74,  25 |
| Cyanotype..... | 64,  47 |

D









| | |
|---------------------------|----------------------------------------------------------------------------------------------|
| Date and time..... | 18, 98,  70 |
| Date format..... | 19,  70 |
| Daylight saving time..... | 19,  72 |
| Delete..... | 32 |
| Digital zoom..... | 27, 98,  79 |
| Direct print..... | 81,  29 |
| D-Lighting..... | 78,  20 |
| DPOF..... |  21 |
| DPOF print..... |  36 |

| | |
|-------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| DSCN..... |  93 |
| Dusk/dawn  | 39 |

E

| | |
|-------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Easy auto mode..... | 36 |
| Easy panorama  | 42,  3 |
| Easy panorama playback..... | 42,  6 |
| Editing movies..... |  37 |
| EN-MH1..... |  4 |
| EN-MH2..... |  95,  3 |
| Exposure compensation..... | 60 |
| Extension..... |  93 |
| Eye-Fi upload..... | 99,  87 |
| Eyelets for camera strap..... | 2 |

F

| | |
|--------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| Face detection..... | 67 |
| Favorite pictures..... | 79,  7 |
| Favorite pictures menu..... | 78,  8 |
| Favorite pictures mode..... | 76,  7 |
| File name..... |  93 |
| Fill flash..... | 54 |
| Filter effects..... | 78,  22 |
| Fireworks show  | 41 |
| Firmware version..... | 99,  92 |
| Flash..... | 2, 5, 53 |
| Flash lamp..... | 3, 55 |
| Flash mode..... | 53 |
| Flash pop-up control..... | 3, 5, 53 |
| Focus..... | 28, 67,  48 |
| Focus area..... | 28 |
| Focus indicator..... | 9 |
| Focus lock..... | 71 |

| | | | |
|--------------------------------|--------------|-------------------------------|------------|
| Folder name | 93 | List by date menu | 78, 13 |
| Food | 41 | List by date mode | 76, 13 |
| Format internal memory | 98, 82 | Lithium batteries | 14 |
| Format memory cards | 16, 98, 82 | Low key | 46 |
| Formatting | 16, 98, 82 | M | |
| FSCN | 93 | Macro mode | 58 |
| Full-frame playback | 30 | Memory capacity | 22 |
| Full-time AF | 93, 68 | Memory card | 16, 21 |
| H | | Memory card slot | 16 |
| HDMI | 84 | Microphone (stereo) | 2 |
| HDMI 3D output | 84 | Monitor | 3, 8, 6 |
| HDMI cable | 81, 27 | Monitor settings | 98, 73 |
| HDMI device control | 84 | Motion detection | 98, 77 |
| HDMI mini connector | 2 | MOV | 93 |
| Help | 38 | Movie menu | 93 |
| High key | 46 | Movie options | 93, 64 |
| HS movie | 93, 65, 66 | Movie playback | 94 |
| I | | Movie recording | 90 |
| Identifier | 93 | Movie recording time | 92 |
| Image mode | 64, 39 | Movie-record button | 3 |
| Image review | 73 | MPO | 93 |
| Imprinting date and time | 21, 75 | Multi selector | 3 |
| Internal memory | 17 | Multi-shot 16 | 44 |
| ISO sensitivity | 64, 46 | Museum | 41 |
| J | | N | |
| JPG | 93 | Night landscape | 40 |
| L | | Night portrait | 39 |
| Landscape | 38 | Nikon Transfer 2 | 82, 84, 86 |
| Language | 99, 83 | Number of exposures remaining | |
| Lens | 2, 17 | | 22, 40 |
| Lens cover | 2 | | |

O

- Optical zoom 27
- Optional accessories 95

P

- Panorama Maker..... 84
- Paper size 33, 34
- Party/indoor 39
- Pet portrait auto release 43
- Pet portrait 43
- Photo info 73
- PictBridge..... 81, 29, 22
- Playback..... 30, 94
- Playback button..... 3, 30
- Playback menu 78, 51
- Playback mode 30, 76
- Playback zoom..... 74
- Portrait 38
- Power..... 22, 23
- Power switch/power-on lamp... 2, 22, 23
- Preset manual 42
- Pressing halfway..... 29
- Print 78, 81, 32, 34, 51
- Print date..... 21, 98, 75
- Print order..... 78, 51
- Print order option 21, 52, 53
- Printer 81, 29
- Protect..... 78, 56

Q

- Quick retouch..... 78, 19

R

- Rechargeable battery 95
 - Rechargeable nickel-metal hydride
batteries 14
 - Recording movies 90
 - Recording slow motion movies
..... 93, 65, 66
 - Red-eye reduction..... 54, 55
 - Remove from favorites 79, 9
 - Reset all 99, 88
 - Rotate image..... 78, 58
 - RSCN..... 93
- ## S
- Scene mode 37
 - Selective color 46
 - Self-timer 56
 - Self-timer lamp..... 2, 57
 - Sepia..... 64, 47
 - Sequence display options
..... 79, 14, 63
 - Setup menu..... 98
 - Shooting..... 22, 26, 28
 - Shooting menu 63, 39
 - Shooting mode button 3
 - Shutter sound..... 80
 - Shutter speed..... 29
 - Shutter-release button 2, 28
 - Single AF..... 93, 68
 - Single-frame shooting 64, 44
 - Skin softening..... 64, 78, 21, 49

| | | |
|----------------------------|-----|----|
| Slide show | 78, | 55 |
| Slow sync | | 54 |
| Small picture | 78, | 24 |
| Smart portrait menu | 63, | 49 |
| Smart portrait mode | | 48 |
| Smile timer | 64, | 50 |
| Snow | | 39 |
| Soft SO | | 46 |
| Sound settings | 98, | 80 |
| Speaker | | 3 |
| Special effects mode | | 46 |
| Sports | | 38 |
| SSCN | | 93 |
| Standard color | 64, | 47 |
| Strap | 4, | 96 |
| Sunset | | 39 |

I

| | | |
|--------------------------|---------|----|
| Thumbnail display | | 75 |
| Time difference | | 71 |
| Time zone | 19, | 70 |
| Time zone and date | 18, 98, | 70 |
| Tripod socket | 3, | 19 |
| TV | 81, | 27 |
| TV settings | 99, | 84 |

U

| | | | |
|-------------------------------------------|------------|-----|----|
| USB cable | 81, 85, | 31 | |
| USB/audio/video output connector | 2, 80, 85, | 27, | 29 |

V

| | | |
|---------------------------|-----|----|
| Vibration reduction | 98, | 76 |
| Video mode | | 84 |

| | | |
|-------------------|-----|--------|
| ViewNX 2 | | 82, 84 |
| Vivid color | 64, | 47 |
| Voice memo | 79, | 59 |
| Volume | 95, | 59 |

W

| | | |
|----------------------------|-----|----|
| WAV | | 93 |
| Welcome screen | 98, | 69 |
| White balance | 64, | 41 |
| Wind noise reduction | 93, | 68 |

Z

| | | |
|--------------------|-------|----|
| Zoom | | 27 |
| Zoom control | 2, 27 | |
| Zoom in | | 27 |
| Zoom out | | 27 |



A series of ten horizontal dashed lines spanning the width of the page, intended for handwriting practice.



A series of ten horizontal dashed lines spanning the width of the page, intended for handwriting practice.

No reproduction in any form of this manual, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION.

NIKON CORPORATION

© 2012 Nikon Corporation



CT2H02(11)
6MNA8611-02