





Cyberbike™

Cycling Sports

USER INSTRUCTIONS

NOTICE D'UTILISATION

BEDIENUNGSANLEITUNG

 
GEbruikSAANWIJZING

MANUAL DE UTILIZACIÓN


MANUALE D'USO

MANUAL DO UTILIZADOR

(Picture B)

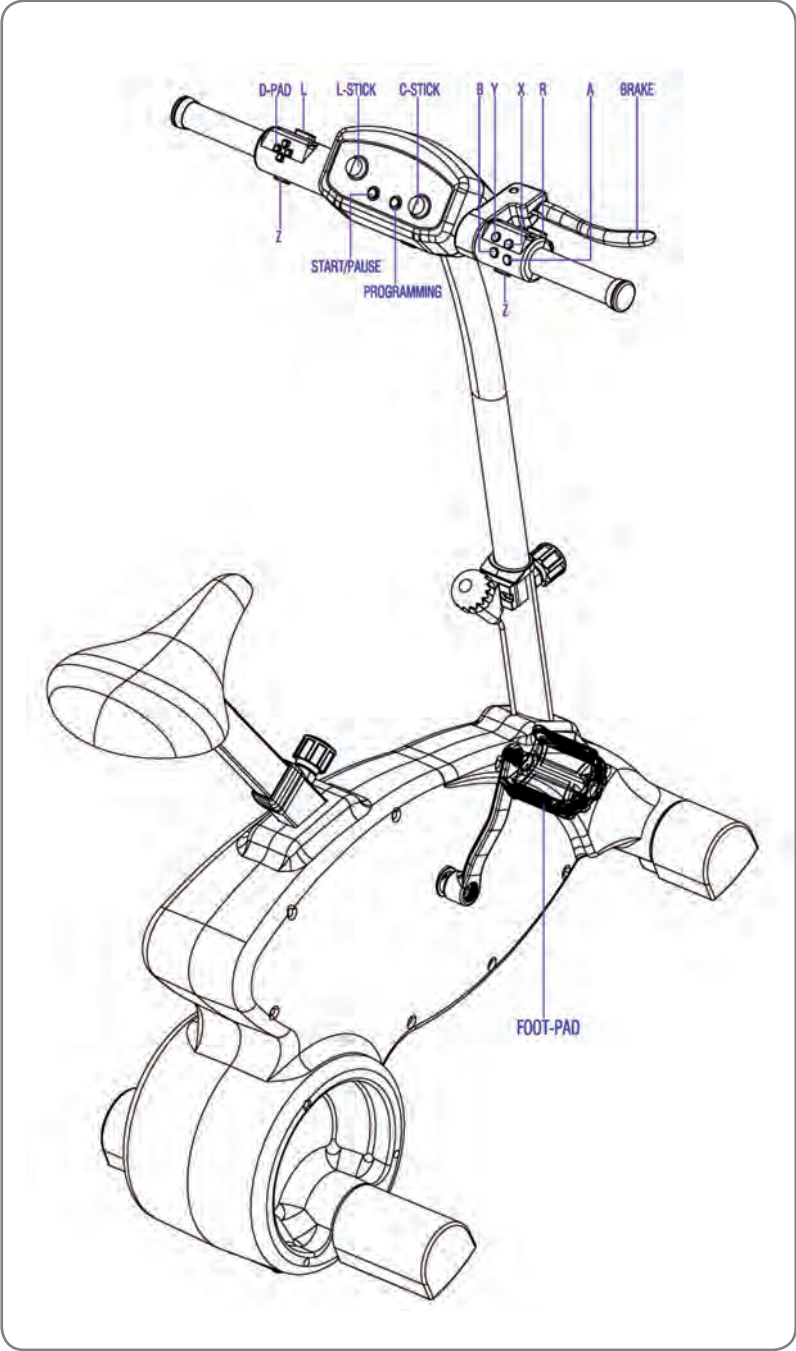

(Picture A)

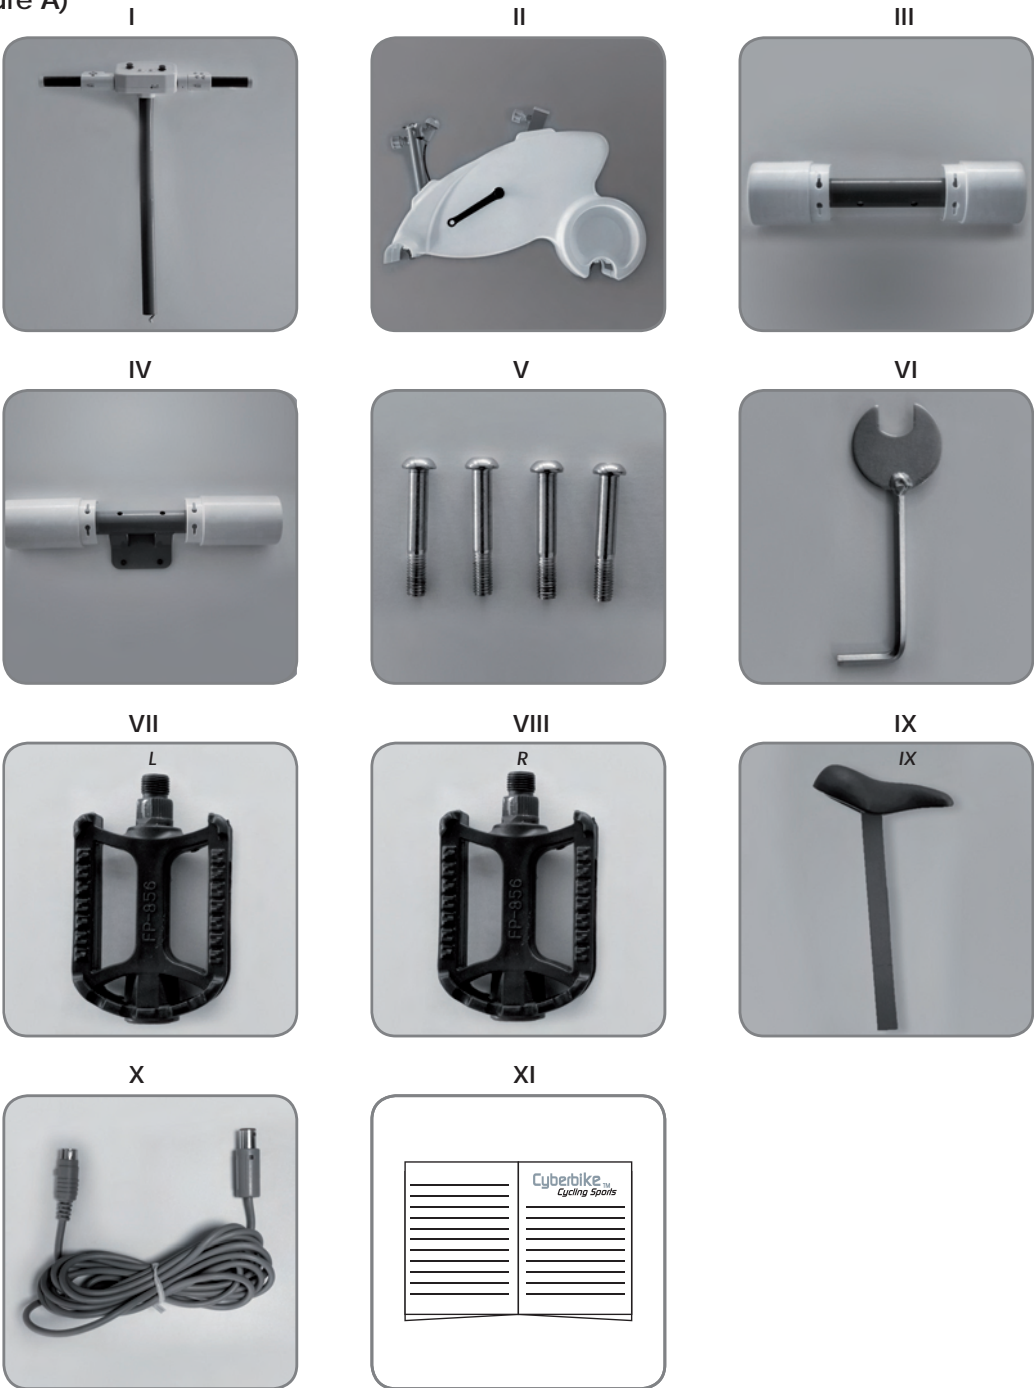 

Help us to protect the environment! Do not dispose of electronic items in household rubbish. Aidez-nous à protéger l'environnement ! Respectez les réglementations locales en vigueur : déposez votre appareil électrique hors d'usage dans un centre de collecte approprié. Helfen Sie die Umwelt zu schützen! Bitte halten Sie sich an folgende Vorschrift: Bringen Sie ihre alten Elektro Artikel zum Recycling Center. Help ons het milieu te beschermen! Respecteer de locale regels die van kracht zijn : deponeer uw defect elektronisch apparaat in een inzamel centrum hiervoor geschikt. Ayúdenos a proteger el medio ambiente Respete las normativas locales vigentes: deposite su aparato eléctrico fuera de uso en un centro de recogida apropiado. Aiutaci a rispettare ! Rispetta le regole menzionate: deposita le parti elettroniche usate nei centri di raccolta Ajuda-nos a proteger o ambiente ! Respeita as regulamentações locais em vigor: pode depositar o seu aparelho eléctrico fora de uso num centro de recolha adequada.

CHOKING HAZARD - WARNING! Not suitable for children under 3 years of age, due to small parts, the cord can coil around the neck - RISQUE D'ÉTOUFFEMENT - ATTENTION ! Ne convient pas aux enfants de moins de 3 ans, présence de petites pièces susceptibles d'être ingérées, le câble peut s'enrouler autour du cou - ERSTICKUNGSGEFAHR - WARNUNG! Nicht geeignet für Kinder unter 3 Jahren, da Kleinteile verschluckt werden können, das Kabel kann sich um den Hals schnüren - VERSTIKKINGSGEVAAR - WAARSCHUWING! Niet geschikt voor kinderen onder de 3 jaar, het snoer kan zich rond de nek wikkelen - PELIGRO DE ASFIXIA - PRECAUCIÓN! No recomendado para niños menores de 3 años. Contiene piezas pequeñas que pueden ser ingeridas, el cable puede enrollarse en el cuello - PERICOLO DI SOFFOCAMENTO - AVVERTENZA! Non appropriato per bambini al di sotto dei 3 anni dovuto a piccole parti, il cavo potrebbe attorcigliarsi intorno al collo - PERIGO DE ENGASGAMENTO - PRECAUÇÃO! Não recomendado a crianças menores de 3 anos. Contém peças pequenas que podem ser ingeridas, o fio poderá enrolar-se à volta do pescoço.

This product is not licenced, authorized or endorsed by Nintendo. Ce produit n'est ni licencié, ni autorisé, ni approuvé par Nintendo. Dieses Produkt wird NICHT von Nintendo gefördert, unterstützt oder genehmigt. Dit product is niet gelicentieerd, toegestaan of erkend door Nintendo. Este producto no está licenciado, autorizado o aprobado por Nintendo. Questo prodotto non ha ottenuto licenza, autorizzazione o approvazione da Nintendo. Este Produto não foi licenciado, autorizado ou aprovado pela Nintendo.



IMPORTANT: Before using this product, please read all accompanying documentation as well as the instructions for your gaming system, paying special attention to any health and safety information. You should take particular care to read the warnings listed at the end of this document.

CONTENTS:

1. Introduction
 - a. Contents
 - b. Features
 - c. Cyberbike™ overview
2. Assembling the Cyberbike™
 - a. Assembling the parts
 - b. Connecting the Cyberbike™
3. Using the Cyberbike™
 - a. Adjustments
 - b. Using the Cyberbike™
4. Advanced functions
 - a. Programming
 - I. How to programme the buttons
 - II. Cancelling programming
 - III. Cancelling all programming
 - b. Calibrating the handlebar
 - c. Gamecube™ / Cyberbike™ modes
 - I. Gamecube™ mode
 - II. Cyberbike™ mode
5. Diagnosing problems
6. Warning
7. Sales Warranty / Support helpline

1.INTRODUCTION

Thank you for buying this Cyberbike™. This accessory enables you to exercise and play at the same time. The Cyberbike™ is compatible with Wii™ and Gamecube™ consoles. It can be adapted to suit all sizes, with adjustable seat and handlebars. Please read these user instructions and keep them in a safe place for future reference.

Please note that this product is a video game accessory and not dedicated stationary exercise equipment.

1.a. Contents:

- 1 x handlebar (I)
- 1 x Cyberbike™ main frame (II)
- 1 x front support (III)
- 1 x rear support (IV)
- 4 x support fixing screws (V)
- 1 x assembly key (VI)
- 1 x left pedal (VII)
- 1 x right pedal (VIII)
- 1 x seat (IX)
- 1 x cable with Gamecube™ connector (X)
- 1 x user instructions (XI)


(Picture B)

1.b. Features:

- Cable: 3m
- Two game modes: Cyberbike™ or Gamecube™
- Button programming system
- Handlebar calibration system
- Full Gamecube™ controls for compatibility with Gamecube™ and Wii™ games.
- Two Z buttons
- Adjustable pedal resistance
- Forward and reverse pedalling
- Handlebar can be adjusted to three different heights
- Seat can be adjusted to seven different heights
- Front and rear stabilisers
- Maximum weight limit: 95kg/209lbs.

1.c. Cyberbike™ overview:

(Picture A)

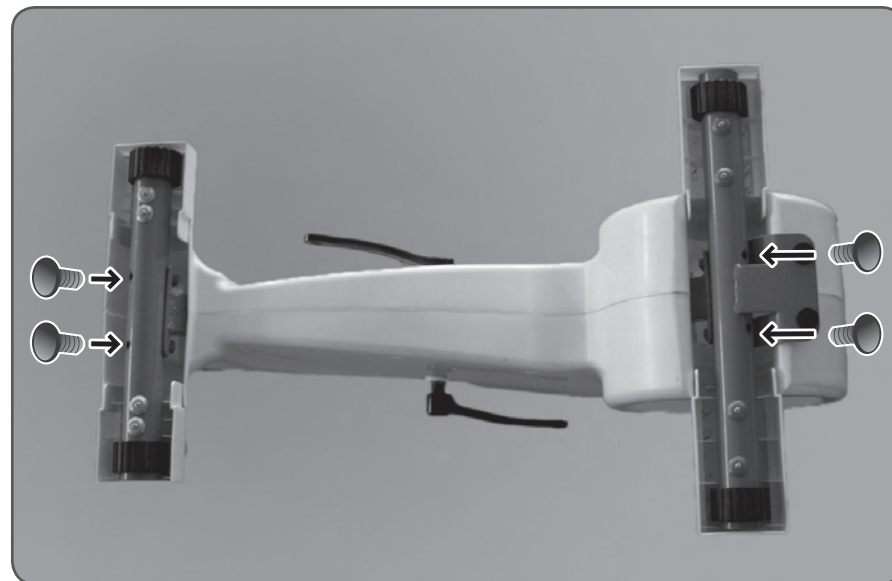

2. ASSEMBLING THE CYBERBIKE™

The Cyberbike™ should only be assembled by an adult. When assembling the bike, no force should be applied when inserting parts. In case of difficulty, you should refer to the assembly diagrams or contact the helpline (see paragraph 7).

2.a. Assembling the parts



Front and rear supports: Turn the Cyberbike™ upside down and attach the feet as described below. Position the screws and tighten using the assembly key provided.


Seat: Insert the tube supporting the seat into the Cyberbike™ main frame (see diagram below).

Handlebar: Connect the cable inside the tubes before inserting the tube into the Cyberbike™ base. Insert the handlebar tube into the Cyberbike™ main frame (see diagram below).

Pedals: Each pedal is marked as left and right. It is essential that you insert the correct pedal to each side. Tighten the pedals with the tool provided.

Cable with Gamecube™ connector: Connect the cable to the connector located on the front of the Cyberbike™ (see diagram below). Ensure that the connector is fitted the right way round.

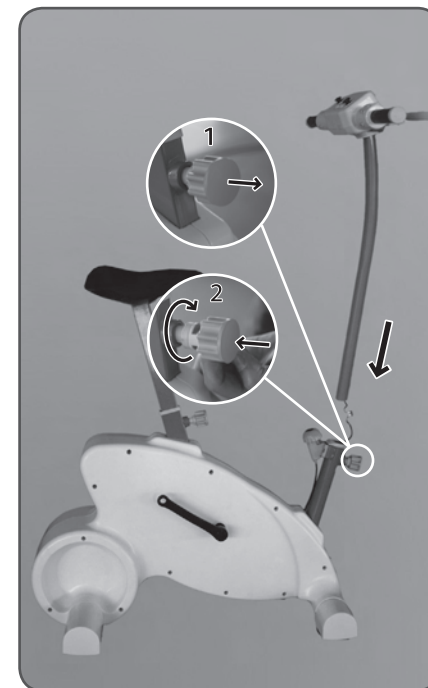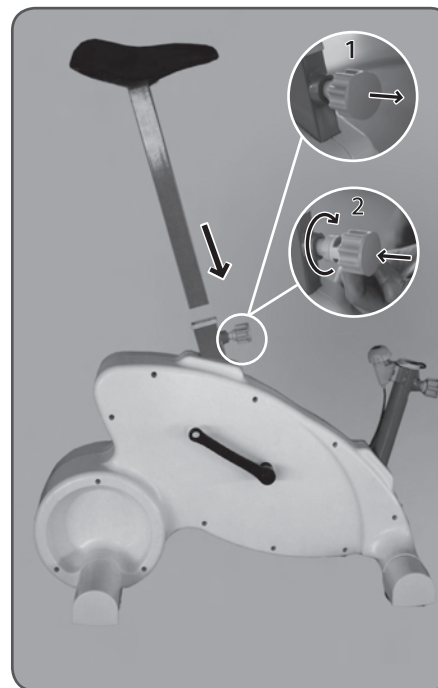

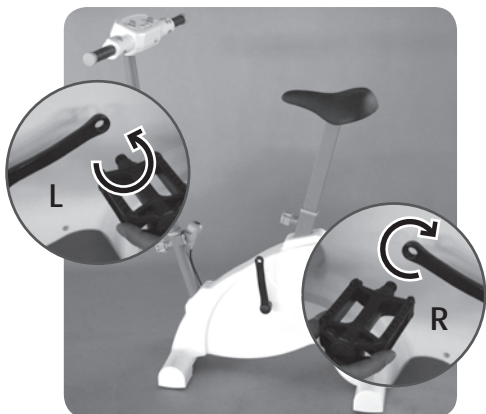

2.b. Connecting the Cyberbike™

- Check that your Wii™ or Gamecube™ console is switched off.
- Connect the Cyberbike™ cable to the first Gamecube™ connector on your console.
- Check that your handlebar is correctly centred. Switch on your console.

3. USING THE CYBERBIKE™

3.a. Adjustments

Adjusting the seat

The height of the seat should enable your knees to be slightly bent when the pedals are at their lowest point. To adjust the height of the seat:

- Hold the seat
- Do not remove the knob; you loosen it and then pull so you can move the seat post.
- Position your seat at the desired height
- Release the knob and then tighten it
- The seat must not exceed the maximum height indicated on the seat post.



Adjusting the handlebar

The handlebar height should enable you to sit with a perfectly straight back. Do not hunch or arch your back. Adjust the handlebar if necessary. To adjust the handlebar:


- Hold the handlebar
- Do not remove the knob; you loosen it and then pull it so you can move the seat post
- Position the handlebar at the correct height
- Release the knob and then tighten it.
- The handlebar must not exceed the maximum height indicated on the handlebar stem.



Warning: Do not sit on the Cyberbike™ when adjusting the height of the seat or the handlebar

Ensuring bike stability

Should your bike wobble during use, rotate one of the plastic end caps on either the front or back support until it becomes perfectly stable.

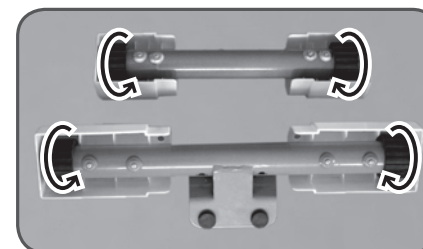

3.b. Using the Cyberbike™


Cyberbike provides an excellent cardiovascular workout and can help to burn calories and improve your endurance levels whilst having fun. (When combined with a healthy eating plan exercise can also help to reduce weight loss). Do not use Cyberbike if you suffer from any heart or respiratory conditions or you have any underlying medical condition that prevents you from exercising. If you are unsure contact your GP (Doctor) for advice.

This product is designed for persons 7 years and over. Adult supervision is recommended when using Cyberbike™

Adjusting pedal resistance

You can adjust the pedal resistance on your Cyberbike™ using the knob located at the base of the handlebar tube.

- Rotate the knob in an anti-clockwise direction (towards the “-”) to decrease resistance when pedalling.
- Rotate the knob in a clockwise direction (towards the “+”) to increase resistance when pedalling.
- Pedal resistance can also be adjusted when pedalling.

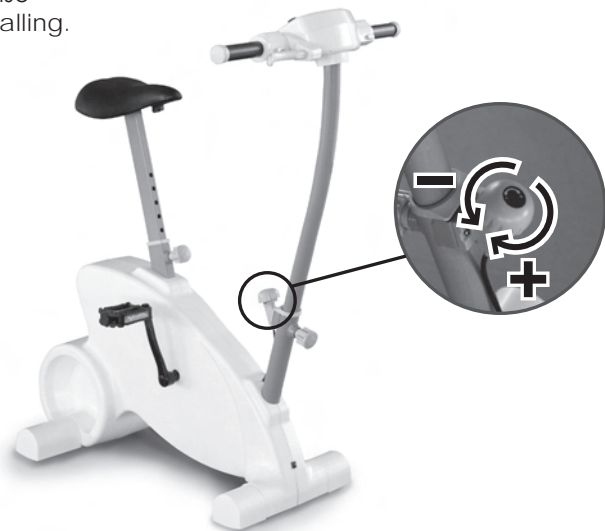

4. ADVANCED FUNCTIONS

4.a. Programming:

4.a.I. How to programme the buttons:

- Press the “PROGRAM” button. The LED underneath this button will come on.
- Press the button or the direction that you wish to assign to another button (e.g. the A button). The LED will start to flash steadily.
- Press the button that you now wish to use (e.g. the B button). The LED will flash rapidly for 2 seconds before going off.
- Pressing the B button will now carry out the action previously assigned to the A button.

You can then reprogram any other button or direction as you wish.

4.a.II. Cancelling programming:

- Press the “PROGRAM” button once. The LED will come on.
- Press the programmed button (e.g. the B button). The LED will start to flash steadily.
- Press the programmed button again (or the “PROGRAM” button). The LED will flash rapidly for 2 seconds before going off.
- The B button has now reverted to its original function.

4.a.III. Cancelling all programming:

- Press the “START/PAUSE” and “PROGRAM» buttons at the same time and hold down for 3 seconds. The LED located below the «PROGRAM” button will flash for 3 seconds.


4.b. Calibrating the handlebar

- Press the «PROGRAM” button + the “Y” button for 3 seconds. The LED located below the “PROGRAM” button will flash.
- Centre the handlebar.
- Press the “Y” button. The LED located below the “PROGRAM” button will now flash more rapidly. The central position of the handlebar has now been set.
- Turn the handlebar to the left or right as far as it will go.
- Press the «Y” button. The LED located below the “PROGRAM” button will flash for 3 seconds before going off. The handlebar calibration process is now complete.

Restoring the manufacturer’s calibration (default setting):

- Press the “START/PAUSE” + “PROGRAM” buttons and hold down for 3 seconds. The LED will flash for 3 seconds. The handlebar calibration will revert to its default setting and any previous programming will be deleted.

4.c. Gamecube™ / Cyberbike™ modes

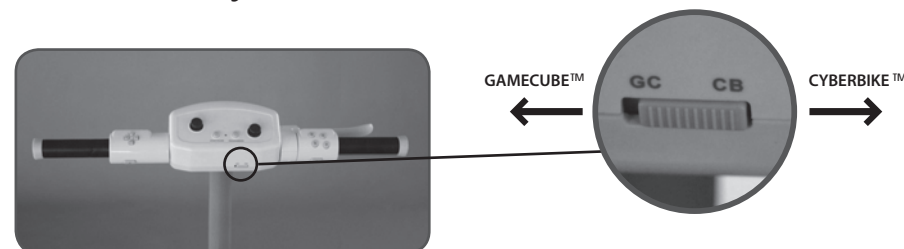

Use the Gamecube™ mode when you want to play with a Gamecube™/ Wii™ game. When you want to play with your Cyberbike™ game use the Cyberbike™ mode.

CONFIGURATION:

The A / B / X / Y / L / R / Z buttons, the directional pad and analog joysticks carry out the same actions as those on a traditional Gamecube™ controller. Brake lever: the brake lever sends back the signal from the «B» button, and can also be reprogrammed.

4.c.I. Gamecube™ mode

In Gamecube™ mode, FORWARD pedalling is the same as pressing the A button.

In Gamecube™ mode, REVERSE pedalling is the same as pressing the B button.

It is also possible to reprogramme these forward and reverse pedalling actions (see paragraph 4.a).

4.c.II. Cyberbike™ mode

In Cyberbike™ mode, FORWARD pedalling has the same positive values as the Y (vertical) direction of the C-Stick on a Gamecube™ controller. The faster you pedal, the greater the value.

In Cyberbike™ mode, REVERSE pedalling has the same negative values as the Y (vertical) direction of the C-Stick on a Gamecube™ controller. The faster you pedal, the greater the negative value.

It is also possible to reprogram these forward and reverse pedalling actions (see paragraph 4.a).

5. DIAGNOSING ERRORS

The vehicle/character fails to move on the screen when you are pedalling on the Cyberbike™.

- Check that all cables are properly connected
- Check that the Gamecube™ / Cyberbike™ mode switch is in the desired mode.

The vehicle/character fails to respond when you apply the Cyberbike™ brake.

- Check that all cables are properly connected
- Check that the Gamecube™ / Cyberbike™ mode switch is in the desired mode.

The vehicle/character turns, although the handlebars are centred.

- Cancel all programming
- Restore manufacturer's calibration

The game fails to respond to your Cyberbike™ signals.

- Check that all cables are properly connected
- Check that the Cyberbike™ Gamecube connector is properly connected to the n°. 1 controller connector.

6. WARNING


1. Read the enclosed instructions carefully before using the product. The product should only be used as described in these instructions. Keep these instructions in a safe place.
2. This equipment complies with European standards governing fitness equipment for non therapeutic, home use.
3. This equipment should be assembled by an adult. Care should always be taken when assembling and disassembling the Cyberbike™.
4. All small parts and plastic bags should be kept out of reach of children. Ensure that plastic bags are disposed of appropriately.
5. The equipment owner must ensure that anyone using this product has been informed of all safety measures. Children should be given adequate instructions by an adult on how to use the equipment. Children should always use the equipment

under adult supervision.

6. Help your child to adjust the handlebar and seat to the correct height.
7. Delta Reference / Bigben Interactive accept no responsibility for any injury or damage inflicted on any person or any property as a result of improper use of the product by the purchaser or a third party.
8. Not suitable for children or adults weighing more than 95kg/209lbs.
9. This product is designed for home use only. This product should not be used for any public, commercial or rental purposes.
10. This product should be used and stored indoors, in a dry, dust-free place, on a firm, flat surface with ample room for manoeuvre. Ensure that you have adequate room to access and move around your Cyberbike™ safely. If necessary, a mat can be placed underneath the Cyberbike™ to protect the floor. Keep all liquids well away from the equipment to avoid the risk of fire or electrocution.
11. The user is responsible for maintaining the Cyberbike™ in good condition. After assembly and before each use, check that all parts and fixings are properly secure with no protruding elements. You should regularly check parts and fixings for signs of wear.
12. The equipment should be protected from bumps and knocks, which could damage your equipment or cause it to malfunction.
13. Should your Cyberbike™ become damaged, stop using the equipment and contact technical support. See paragraph 7.
14. Never use the Cyberbike™ near stairs, a steep slope, a road, a swimming pool or water.
15. Shoes should always be worn during use to protect your feet. Avoid wearing baggy, loose fitting clothing that may become caught up in the equipment. Remove all jewellery before using the equipment.
16. Warning: the flashing LEDs and lights could induce an epileptic fit or loss of consciousness in a susceptible person. This effect could also be caused by watching the TV or playing certain games. Those never having previously suffered from epilepsy may also be at risk. If you or any member of your family has suffered from similar symptoms to epilepsy in the past, such as a fit or loss of consciousness when exposed to flashing lights, we would advise you to consult a doctor before using the Cyberbike™. We advise parents to supervise any children using the Cyberbike™. Should either you or your child display any of the following symptoms whilst playing, you should immediately switch off the game and consult a doctor: dizziness, impaired vision, facial or ocular twitching, loss of consciousness, disorientation, involuntary spasms or convulsions.
17. You should consult your doctor before using this equipment. You should consult your child's doctor before letting him/her use this equipment.
18. Excessive or incorrect use of this equipment could cause injury.
19. For medical reasons, you are advised to avoid intensive use of the Cyberbike™. You are also advised not to use the equipment when you are over-tired.
20. Should you feel pain, dizzy or nauseous or display motion sickness symptoms when using the Cyberbike™, you should stop immediately and lie down. Consult your doctor should the symptoms persist or reappear.
21. Ensure that the area is properly lit. You are advised not to sit too near to the TV. You should take a break at least every 5 to 10 minutes if your eyes feel tired or dry or if you experience discomfort of any kind.

22. You are advised to take one 15 minute break per hour when playing for extended periods of time.
23. Never leave children to use the equipment alone.
24. Always keep pets away from the equipment.
25. The Cyberbike™ can only accommodate one person at a time.
26. Do not attempt to repair the Cyberbike™ yourself.
27. Ensure that your back is straight when using the Cyberbike™ (do not arch).
28. Always hold onto the handlebar when mounting and dismounting the equipment; likewise during use.
29. When finishing your Cyberbike™ session, you should reduce your pedalling speed gradually until the pedals come to a complete stop.
30. The equipment should be cleaned using a damp sponge. The equipment should be properly rinsed and dried.
31. In the interests of safety, you should only ever use the cable provided.
32. The use of solvents may cause irreversible damage to the product.
33. There is sufficient space around the bike to avoid any damage
34. That the handlebars and seat should be adjusted correctly to avoid any parts of the body hitting the bike. EG: If you set the handlebars too low you can hit them with your knees.
35. This product is not recommended if you suffer from any of the following conditions: heart, respiratory, back or lumber, etc.
36. Cyberbike requires physical exercise. If you suffer from any medical condition that prevents any type of exercise then do not use this product.
37. If you feel delirious, faint or short of breath stop immediately. Seek medical advice if the symptoms persist.
38. Cyberbike is intended for INTERNAL use only.

The labels illustrated here have been affixed to the product in the positions shown below: In the event of a missing or illegible label, please contact Delta Reference / Bigben Interactive, to order a free replacement label. Replace the label on the product in the position shown.

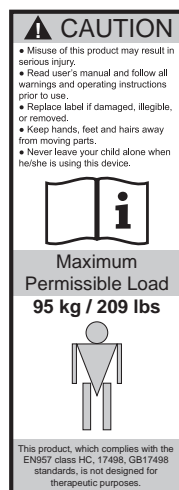

7.SALES WARRANTY / SUPPORT HELPLINE

Warranty

Bigben Interactive gives the purchaser a product guarantee against any manufacturing or parts defect for a period of one year from the date of purchase. Should a product defect be noted during the guarantee period, please contact the technical support service immediately (see «Helpline» paragraph). You will then be informed of the procedure to follow. Should the defect be confirmed, the product should be returned to the place where it was purchased or to an alternative place specified by the technical support service, together with proof of purchase. Under the terms of this guarantee, any faulty Cyberbike™ is repaired or replaced, at the discretion of the technical support service. In accordance with current legislation, the total responsibility of Delta Reference / Bigben Interactive (including responsibility for indirect damage) is limited to repairing or replacing the Cyberbike™. In accordance with current legislation governing the sale of consumer products, this guarantee does not in any way affect your statutory consumer rights. This guarantee is only valid in countries where the product is marketed by Delta Reference / Bigben Interactive or by an approved dealer.

This warranty is invalidated:

- If the product has been adapted, modified or opened, or if the Cyberbike™ has been damaged as a result of improper or careless use, negligence, an accident, normal wear and tear or any other cause not linked to a manufacturing or part defect.
- If the product has not been used exclusively for home use, and has been used for public, commercial or rental purposes.
- If the instructions provided by the technical support service have not been followed.

Help us to protect the environment! Do not dispose of electronic items in household rubbish.

Technical Helpline Information

The Technical Helpline is a live one-to-one service

UK: 0905 710 0015

Hours: 10:00am till 5:00pm, Monday to Friday

(All calls are charged at 30 pence per minute. All callers must be over 16 years of age. Permission must be obtained from the person paying the bill. Parental supervision is recommended).

Eire: 154 056 3001

Hours: 10:00am till 5:00pm, Monday to Friday

(All calls are charged at 60 euro cents per minute. All callers must be over 16 years of age. Permission must be obtained from the person paying the bill. Parental supervision is recommended).

To ensure that your call is handled quickly and effectively please ensure that you have the model number and any other relevant information regarding your product.

Calls may be recorded for training purposes

Wii™ is a registered trademark of Nintendo Inc. This product is not licensed, authorised or approved by Nintendo.