



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for NOKIA 6500 SLIDE. You'll find the answers to all your questions on the NOKIA 6500 SLIDE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual NOKIA 6500 SLIDE
User guide NOKIA 6500 SLIDE
Operating instructions NOKIA 6500 SLIDE
Instructions for use NOKIA 6500 SLIDE
Instruction manual NOKIA 6500 SLIDE

Nokia 6500 slide User Guide

9201259
Issue 1



[Your user manual](#)
[NOKIA 6500 SLIDE](#)

Manual abstract:

9 Enhancements 10 Access codes . 10 Software updates. 11 Download content. 11 Nokia support . 12 E-mail application . 22 Instant messaging 23 Voice messages. 24 Message settings 24 5. Contacts . 26 Save names and phone numbers . 26 Add contact details 27 Search for a contact 27 Copy or move contacts. 27 Edit contacts 27 Groups . 27 Business cards. 27 Contact settings . 28 1. Get started 12 Install SIM card and battery . Charge the battery Switch the phone on and off . Set the time, zone, and date Configuration settings service . Antenna Wrist strap. Keys and parts microSD memory card Standby mode Flight profile Make a voice call. Answer or reject a voice call Speed dialling . Enhanced voice dialling . Options during a call Make a video call. 12 12 13 13 13 14 14 14 15 16 17 17 18 18 18 19 19 6. Log 28 7. Settings 28 Profiles 28 Themes 29 Tones 29 Display. 29 Date and time . 30 My shortcuts 30 Sync and backup 30 Connectivity. 31 Call . 33 Phone. 34 Enhancements. 34 Configuration 35 Restore factory settings . 35 Phone software updates. 35 2. Calls. 17 3. Write text . 20 Traditional text input . 20 Predictive text input . 20 8. Operator menu. 36 Info messages 36 Service commands . 36 4. Messaging. 21 Write and send a text message . Write and send a multimedia message . Read and reply to a message . Nokia Xpress audio messaging Flash messages. 21 21 21 22 22 9. Gallery 36 Digital rights management . 36 TV-out mode 37 Print images. 38 10. Media 38 Camera 38 4 Video Music player Radio . Voice recorder. Equaliser. Stereo widening . 39 39 40 41 42 42 15. Web . 46 Connect to a service 46 Browse pages 47 Bookmarks 47 Appearance settings 47 Security settings. 47 Service inbox . 48 Browser security. 48 11. Push to talk. 42 12. Organiser . 42 Alarm clock Calendar . To-do list Notes . Calculator. Countdown timer. Stopwatch 42 43 43 44 44 44 44 16. PC connectivity. 49 Nokia PC Suite 49 Data communication applications 49 17. Battery and charger information 50 Nokia battery authentication guidelines . 51 13. Applications 45 Launch a game . 45 Launch an application 45 Application options. 45 Care and maintenance. 52 Additional safety information 53 Index . 57 14. SIM services 45 5 SAFETY Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information. SWITCH ON SAFELY Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger. ROAD SAFETY COMES FIRST Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety. INTERFERENCE All wireless devices may be susceptible to interference, which could affect performance. SWITCH OFF IN RESTRICTED AREAS Follow any restrictions. Switch the device off in aircraft, near medical equipment, fuel, chemicals, or blasting areas. QUALIFIED SERVICE Only qualified personnel may install or repair this product. ENHANCEMENTS AND BATTERIES Use only approved enhancements and batteries. Do not connect incompatible products. WATER-RESISTANCE Your device is not water-resistant. Keep it dry. 6 SAFETY General information I Helpful hints Before taking your phone to a service point Q: What can I do to resolve operation issues with my phone? A: Try the following: · Power off the phone and remove and replace the battery. · Restore the factory settings. Select Menu] Settings] Rest. factory sett The names and phone numbers saved in Contacts are not deleted. · Update the phone with Nokia Software Updater if available. Visit www.nokia.com/softwareupdate or your local Nokia website. Access codes Q: What is my password for the lock, PIN, or PUK codes? A: The default lock code is 12345. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your service provider. Bluetooth connectivity Q: Why can't I find a Bluetooth device? A: Try the following: · Check that both devices have activated Bluetooth connectivity. · Check that the distance between the two devices is not over 10 meters (33 feet) and that there are no walls or other obstructions between the devices..



[Your user manual](#)
[NOKIA 6500 SLIDE](#)