

# OPTIMUS™

## 9" Digital Photo Frame *User's Guide*

16-665

Thank you for purchasing your 9" Digital Photo Frame from **RadioShack**. Please read this user's guide before installing, setting up, or using your digital frame.



### What's Included


- Digital photo frame
- Remote control
- AC adapter
- User's guide

### Positioning Your Frame

Keep the frame away from strong magnets, heat sources, direct sunlight, or excessive dust.

#### Hanging Slots

Hang your frame vertically or horizontally.

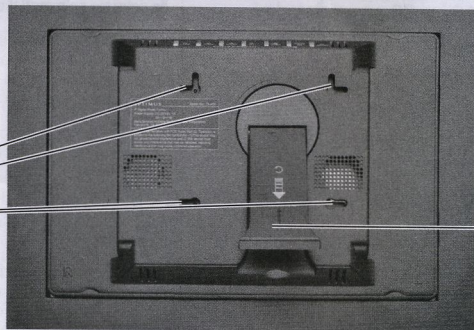

#### Adjustable Stand

Pull down and rotate the stand to position the frame vertically or horizontally.


### Powering Your Frame

Connect your provided adapter to the DC 9V jack. Connect the other end to the power source.

#### DC 9V 1A jack

Plug in the AC adapter.

#### AC adapter

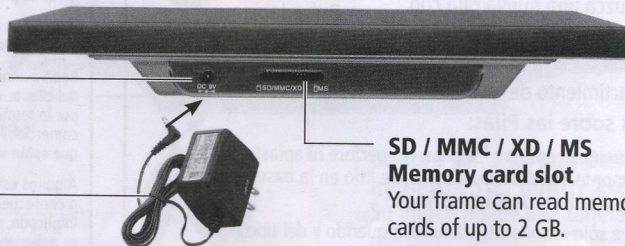

#### SD / MMC / XD / MS Memory card slot

Your frame can read memory cards of up to 2 GB.

### Cautions and Warnings

- To avoid damaging your photo frame, use only the provided power adapter or an adapter with the same specifications.
- Do not push any objects into the frame through openings; do not spill or spray any liquids on or in the frame (this may result in a fire or electric shock). Do not place anything heavy on the frame.
- To ensure proper ventilation and proper operation, never cover or block slots or openings. Keep the frame away from open flames, such as fires or candles.
- When cleaning, make sure the frame is unplugged from the power source. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the housing only.