

# Panasonic®

## Basic Owner's Manual

Digital Camera

Model No. **DMC-LX100**



# LUMIX

Please read these instructions carefully before using this product, and save this manual for future use.

More detailed instructions on the operation of this camera are contained in "Owner's Manual for advanced features (PDF format)" in the supplied disc. Install it on your PC to read it.



Register online at [www.panasonic.com/register](http://www.panasonic.com/register) (U.S. customers only)

If you have any questions, visit:

USA : [www.panasonic.com/support](http://www.panasonic.com/support)

Canada : [www.panasonic.ca/english/support](http://www.panasonic.ca/english/support)



SQT0359  
M0914KZ0

**Dear Customer,**  
**Thank you for choosing Panasonic!**

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, we're sure it will bring you and your family years of enjoyment. Please take time to fill in the information below. The serial number is on the tag located on the underside of your camera. Be sure to **retain this manual** as your convenient camera information source.

Date of Purchase	Dealer Phone No.
Dealer Purchased From	Model No.
Dealer Address	Serial No.

Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in this Owner's Manual.

**Carefully observe copyright laws.**

- Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

### **WARNING:**

To reduce the risk of fire, electric shock or product damage,

- Do not expose this unit to rain, moisture, dripping or splashing.
- Use only the recommended accessories.
- Do not remove covers.
- Do not repair this unit by yourself. Refer servicing to qualified service personnel.

The socket outlet shall be installed near the equipment and shall be easily accessible.

### ■ Product identification marking

Product	Location
Digital camera	Bottom
Battery charger	Bottom

## THE FOLLOWING APPLIES ONLY IN THE U.S.A.

### FCC Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** To assure continued compliance, follow the attached installation instructions and use only shielded interface cables with ferrite core when connecting to computer or peripheral devices.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

### Declaration of Conformity

**Trade Name:** Panasonic

**Model No.:** DMC-LX100

**Responsible Party:** Panasonic Corporation of North America  
Two Riverfront Plaza, Newark, NJ 07102-5490

**Support Contact:** <http://www.panasonic.com/contactinfo>

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



## THE FOLLOWING APPLIES ONLY IN THE U.S.A.

### **Certification and Compliance**

See Camera for the certification and compliance mark specific to that device.

- 1 Select [Wi-Fi] in the [Setup] menu**
- 2 Select [Wi-Fi Setup] in the [Wi-Fi]**
- 3 Press ▲ ▼ to select [Approved Regulations], and press [MENU/SET]**

Contains FCC ID : VPYLBXN604

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption ratio (SAR).

## THE FOLLOWING APPLIES ONLY IN CANADA.

CAN ICES-3(B)/NMB-3(B)

This device complies with RSS-210 of the IC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference,  
(2) This device must accept any interference received, including interference that may cause undesired operation of the device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption ratio (SAR).

## ■ About the battery pack

### CAUTION

Battery pack (Lithium ion battery pack)

- Use the specified unit to recharge the battery pack.
- Do not use the battery pack with equipment other than the specified unit.
- Do not get dirt, sand, liquids, or other foreign matter on the terminals.
- Do not touch the plug terminals (+ and -) with metal objects.
- Do not disassemble, remodel, heat or throw into fire.

If any electrolyte should come into contact with your hands or clothes, wash it off thoroughly with water.

If any electrolyte should come into contact with your eyes, never rub the eyes. Rinse eyes thoroughly with water, and then consult a doctor.

### CAUTION

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.

- Do not heat or expose to flame.
- Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.

### Warning

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C (140 °F) or incinerate.

## ■ About the battery charger

### CAUTION!

To reduce the risk of fire, electric shock or product damage,

- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.

### Battery charger

This battery charger operates on AC between 110V and 240V.

But

- In the U.S.A. and Canada, the battery charger must be connected to a 120V AC power supply only.
- When connecting to an AC supply outside of the U.S.A. or Canada, use a plug adaptor to suit the AC outlet configuration.

## ■ Cautions for Use

- Do not use any other USB connection cables except the supplied one or a genuine Panasonic USB connection cable (DMW-USBC1: optional).
- Always use a genuine Panasonic AV cable (DMW-AVC1: optional).
- Use a "High Speed HDMI micro cable" with the HDMI logo. Cables that do not comply with the HDMI standards will not work.  
"High Speed HDMI micro cable" (Type D-Type A plug, up to 2 m (6.6 feet) long)

### **Keep this unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).**

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation may adversely affect this unit, disturbing the pictures and/or sound.
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor (DMW-AC10PP: optional). Then reinsert the battery or reconnect AC adaptor and turn this unit on.

### **Do not use this unit near radio transmitters or high-voltage lines.**

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.

## **-If you see this symbol-**



### **Information on Disposal in other Countries outside the European Union**

This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

# Contents

## Information for Your Safety ..... 3

## Preparations

- **Before use** ..... 10
- **Standard accessories** ..... 11
- **Names and Functions of Main Parts** ..... 13
- **Preparations** ..... 16
  - Attaching the lens cap and shoulder strap ..... 16
  - Charging the battery ..... 17
  - Inserting and removing the battery/ the card (optional) ..... 19
  - Formatting the card (initialization) ..... 20
  - Recording capacity guidelines (pictures/recording time) ..... 20
  - Setting the clock ..... 22

## Basics

- **Setting the menu** ..... 23
  - Calling frequently-used menus instantly (Quick Menu) ..... 24
  - Assigning frequently used functions to the buttons (Function buttons) ..... 24
- **Changing settings using the control ring** ..... 25
  - Changing the settings assigned to the control ring ..... 26
- **Holding the camera** ..... 27
- **Recording pictures using the viewfinder** ..... 27
- **Taking pictures** ..... 28
- **Taking pictures with automatic settings [Intelligent Auto] Mode** ..... 29
- **Taking pictures after setting the aperture value and shutter speed** ..... 31
  - Taking pictures after automatically setting the aperture value and shutter speed ([Program AE] Mode) ..... 32
  - Taking pictures by setting the aperture value ([Aperture-Priority] Mode) ..... 33
  - Taking pictures by setting the shutter speed ([Shutter-Priority] Mode) ..... 33
  - Taking pictures by setting the aperture value and shutter speed ([Manual Exposure] Mode) ..... 34

- Checking the effects of the aperture value and shutter speed ([Preview] Mode) ..... 35
- Registering a combination of settings to be used during recording (Custom Set) ..... 36

- **Switching the display information on the recording screen** ..... 37
- **Viewing your pictures** ..... 38
- **Deleting pictures** ..... 38

## Motion picture

- **Recording motion pictures** ..... 39
  - Setting the format, picture size and recording frame rate ..... 40
  - Viewing motion pictures ..... 41
- **Recording 4K motion pictures** ..... 42
  - Creating a high-resolution still picture from a 4K motion picture [4K PHOTO] ..... 42

## Advanced Recording Functions

- **Taking pictures using picture effects (Filter)** ..... 44
- **Adjusting the White Balance** ..... 44
- **Setting the picture quality and size** ..... 45
  - Changing the aspect ratio of the still pictures ..... 45
  - Setting the picture size ..... 45
  - Setting the compression rate of pictures ([Quality]) ..... 46
- **Taking pictures with Auto Focus** ..... 47
- **Taking close-up pictures (Macro recording)** ..... 48
- **Taking pictures with Manual Focus** ..... 48
- **Taking pictures by locking the focus and/or exposure [AF/AE Lock]** ..... 49
- **Taking pictures with Exposure Compensation** ..... 50
- **Setting the ISO Sensitivity** ..... 50
- **Setting the metering mode** ..... 51



■ <b>Setting the Shutter Type</b> .....	51
■ <b>Selecting a Drive Mode</b> .....	52
Burst function .....	53
Recording while exposure is changed automatically [Auto Bracket] .....	54
Automatically changing the aspect ratio while taking pictures [Aspect Bracket] .....	54
Taking pictures with self-timer .....	55
Recording panorama pictures .....	55
■ <b>Using Zoom</b> .....	57
■ <b>Taking pictures using the flash (supplied)</b> .....	59
Attaching the flash .....	59
Changing Flash Mode .....	60




## Wi-Fi

■ <b>Wi-Fi® Function and NFC Function</b> .....	61
■ <b>Operating the camera by connecting it to a smartphone</b> .....	62
Installing the smartphone/tablet app "Panasonic Image App" .....	62
Connecting to a smartphone .....	63
Taking pictures via a smartphone (remote recording) .....	65
Playing back pictures in the camera on a smartphone .....	66
Saving pictures in the camera to the smartphone .....	66
Sending pictures in the camera to social networking services .....	67
■ <b>When sending images to WEB service</b> .....	68
Quickly sending pictures in the camera to WEB services .....	68
■ <b>Sending pictures to a PC with the Wi-Fi function</b> .....	69



## Others

■ <b>Viewing on TV screen</b> .....	72
■ <b>Storing recorded still pictures and motion pictures on your PC</b> .....	73
About supplied software .....	73
Installing supplied software .....	74
Copying still pictures and motion pictures .....	75
■ <b>List of monitor/viewfinder displays</b> .....	76
■ <b>Message displays</b> .....	79
■ <b>Menu list</b> .....	81
■ <b>Q&amp;A Troubleshooting</b> .....	88
■ <b>Specifications</b> .....	91
■ <b>Digital Camera Accessory System</b> .....	94
■ <b>Reading the Owner's Manual (PDF format)</b> .....	95
■ <b>Digital Camera Accessory Order Form (For USA Customers)</b> .....	96
■ <b>Limited Warranty (ONLY FOR U.S.A.)</b> .....	97
■ <b>Limited Warranty (ONLY FOR CANADA)</b> .....	101

## ■ About the symbols in the text

- MENU** Indicates that the menu can be set by pressing [MENU/SET] button.
- Wi-Fi** Indicates that the Wi-Fi setting can be made by pressing [Wi-Fi] button.
-  Configurations that can be performed in the [Custom] menu.
-  Tips for skillful use and points for recording.
-  Conditions in which a particular function cannot be used.

In this Owner's Manual, steps for setting a menu item are described as follows:

**MENU** →  [Rec] → [Quality] → []

# Before use

### ■ Camera handling

- Keep the camera away from excessive vibration, force, or pressure.
- The camera is not dust resistant, splash resistant, or waterproof. Avoid using the camera in places with excessive dust or sand, or where water can come into contact with the camera.
- Do not allow camera to come into contact with pesticides or volatile substances (can cause surface damage or coating to peel).

### ■ Condensation (When the lens, the monitor or the viewfinder is fogged up)






 



- Condensation may occur when the camera is exposed to sudden changes of temperature or humidity. Avoid these conditions, which may make the lens, the monitor or the viewfinder dirty, cause mold, or damage the camera.
- If condensation does occur, turn off the camera and wait about two hours before using it. Once the camera adjusts to the surrounding temperature, the fogging will clear naturally.

### ■ Caring for your camera

- Before cleaning the camera, remove the battery or the DC coupler (DMW-DCC11: optional), or disconnect the power plug from the outlet.
- Do not press the monitor with excessive force.
- Do not press the lens with excessive force.
- Do not keep rubber or plastic products in contact with the camera for a long period of time.
- Do not use solvents such as benzine, thinner, alcohol, kitchen detergents, etc., to clean the camera, since it may deteriorate the external case or the coating may peel off.
- Do not leave the camera with the lens facing the sun, as rays of light from the sun may cause it to malfunction.
- Do not extend the supplied cord or cable.
- While the camera is accessing the card (for an operation such as picture writing, reading, deletion, or formatting), do not turn off the camera or remove the battery, card, AC adaptor (DMW-AC10PP: optional) or DC coupler (DMW-DCC11: optional).
- The data on the card may be damaged or lost due to electromagnetic waves, static electricity or breakdown of the camera or the card. We recommend storing important data on a PC etc.
- Do not format the card on your PC or other equipment. Format it on the camera only to ensure proper operation.

## Standard accessories

Check that all the accessories are supplied before using the camera. Part numbers are as of September 2014. These may be subject to change.

<input type="checkbox"/> <b>Battery pack</b> DMW-BLG10PP <ul style="list-style-type: none"> <li>• Charge the battery before use.</li> </ul> Battery pack is indicated as battery pack or battery in the text. 	<input type="checkbox"/> <b>DVD</b> SFM0038 <ul style="list-style-type: none"> <li>• Software: Use it to install the software on your PC.</li> <li>• Owner's Manual for advanced features</li> </ul> 
<input type="checkbox"/> <b>Battery charger</b> DE-A99B  Battery charger is indicated as battery charger or charger in the text. 	<input type="checkbox"/> <b>Hot shoe cover*</b> VKF5259 (Black model) SKF0043S (Silver model) 
<input type="checkbox"/> <b>Shoulder strap</b> VFC5137  	<input type="checkbox"/> <b>Flash</b> VEK0V37Z1-A (Black model) VEK0V37Z1-B (Silver model) 
<input type="checkbox"/> <b>USB connection cable</b> K1HY08YY0031  	<input type="checkbox"/> <b>Soft case</b> VFC5140 Keep the flash in the soft case when not in use.  <input type="checkbox"/> <b>Lens cap*</b> SXQ0155 (Black model) SXQ0156 (Silver model) 
	<input type="checkbox"/> <b>Lens cap string</b> VFC4366  

\* Already attached to the camera at the time of purchase.

- **Cards are optional.**
- SD Memory Card, SDHC Memory Card and SDXC Memory Card are indicated as card in the text.
- For information about optional accessories, refer to the “Digital Camera Accessory System”.


### **(For U.S.A. only)**

- If accessories are lost, customers can visit us at [www.panasonic.com/support](http://www.panasonic.com/support) for further information about obtaining replacement parts.

### **(For Canada only)**


- If any accessories are lost, customers in Canada should visit our support page at [www.panasonic.ca/english/support](http://www.panasonic.ca/english/support) for further information about obtaining replacement parts.
- Please dispose of all packaging appropriately.
- Keep small parts in a safe place out of the reach of children.
- The illustrations and screens in this manual may differ from the actual product.

## Names and Functions of Main Parts

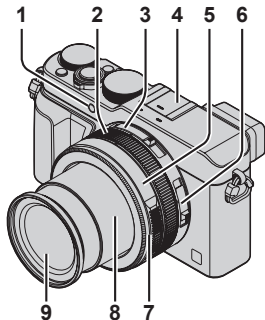



- 1 Self-timer indicator (→55) / AF Assist Lamp
- 2 Control ring (→25)
- 3 Aspect ratio selector switch (→45)
- 4 Hot shoe (Hot shoe cover) (→59)
  - The hot shoe cover is already attached to the hot shoe at the time of purchase.
  - Keep the hot shoe cover out of reach of children to prevent swallowing.
- 5 Aperture ring (→31)
- 6 Focus selector switch (→47, 48)
- 7 Lens front ring  
To attach the auto lens cap (optional) (→94), remove the lens front ring.
- 8 Lens barrel
- 9 Lens (Filter diameter  $\Phi$ 43 mm)

(Top)

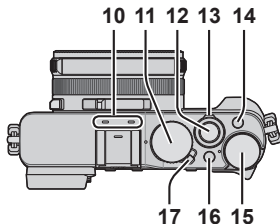

- 10 Stereo microphone  
Be careful not to cover the microphone with your finger. Doing so may make sound difficult to record.
- 11 Shutter speed dial (→31)
- 12 Shutter button
- 13 Zoom lever (→57)
- 14 [FILTER] button (→44)
- 15 Exposure compensation dial (→50)
- 16 [iA] button (→29)
- 17 Camera [ON/OFF] switch

(Bottom)

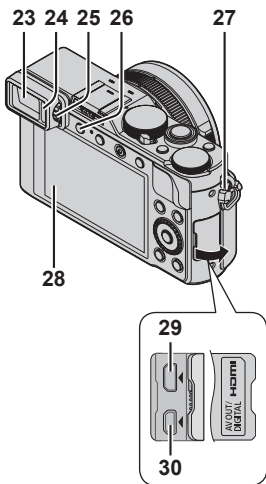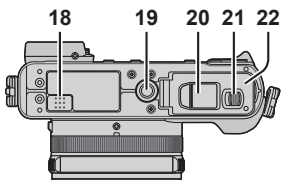

**18 Speaker**

Be careful not to cover the speaker with your finger. Doing so may make sound difficult to hear.

**19 Tripod mount**

Do not attach to a tripod with a 5.5 mm (0.22 inch) or longer screw. Doing so may damage this unit.

It may not be possible to attach certain types of tripods properly.

**20 DC coupler cover**

- Open this cover to use an AC adaptor (optional) and DC coupler (optional) in place of the battery.
- Always use a genuine Panasonic AC adaptor (DMW-AC10PP: optional).
- When using an AC adaptor (DMW-AC10PP: optional), ensure that the Panasonic DC coupler (DMW-DCC11: optional) and AC adaptor are used.

**21 Release lever (→19)**

**22 Card/Battery door (→19)**

**23 Viewfinder (LVF) (→27)**

In this manual, “viewfinder” is used to indicate the LVF.

**24 Eye Sensor (→27)**

**25 Diopter adjustment dial (→27)**

**26 [LVF] button (→27) /**


**[Fn3] button (→24)**

**27 Strap eyelet (→16)**

**28 Monitor**


**29 [HDMI] socket (→72)**

**30 [AV OUT/DIGITAL] socket (→72, 75)**

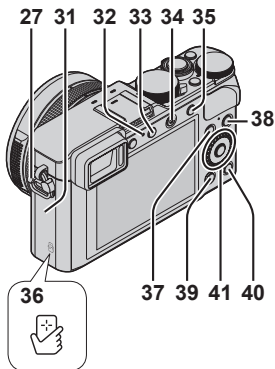

- 27** Strap eyelet (→16)
- 31** Wi-Fi® antenna
- 32** Wi-Fi connection lamp (→61)
- 33** [Wi-Fi] button (→61) / [Fn2] button (→24)
- 34** Motion picture button (→39)
- 35** [AF/AE LOCK] button (→49)
- 36** NFC antenna (→64)
- 37** [Q.MENU] button (→24)
- 38** Playback button
- 39** [Fn1] button (→24) / [🗑️/↵] (Delete/Cancel) button (→38)
- 40** [DISP.] button (→37)  
Each time this is pressed, the display on the screen is switched.

#### **41** [MENU/SET] button / Cursor button / Control dial

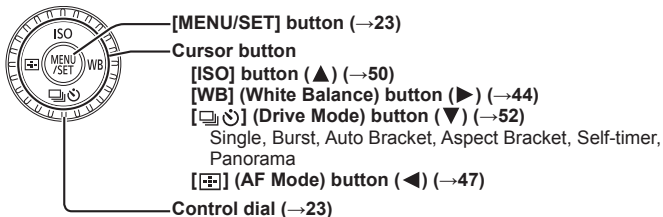

- In this manual, the button that is to be used is indicated by ▲ ▼ ◀ ▶.



#### **Disabling the button and dial operation (while recording)**

 
 
When the [Cursor Button Lock] is assigned to the function button, operation of the [MENU/SET] button, cursor button, and control dial is disabled. For details, refer to "Owner's Manual for advanced features (PDF format)".

# Preparations

## Attaching the lens cap and shoulder strap

Cover the lens with the lens cap to protect it when you are not taking pictures. We recommend attaching the lens cap to the camera using the lens cap string to prevent loss of the lens cap. We also recommend attaching the shoulder strap to prevent the camera from being dropped.

### 1 Use the lens cap string (supplied) to attach the lens cap to the camera







Make sure that the thicker portion of the string is not hanging over the lens cap or the shoulder strap eyelet.

### 2 Attach the lens cap

- To attach and remove the lens cap, press the areas shown by arrows in the illustration.



### 3 Attach the shoulder strap

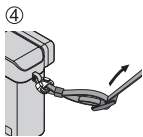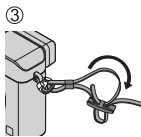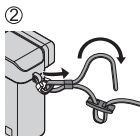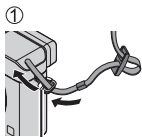

Shoulder strap  
eyelet

- Attach the other end of the shoulder strap.



## Charging the battery

The battery that can be used with this unit is DMW-BLG10PP.

The battery is not charged when the camera is shipped. Charge the battery before use.

- Use the dedicated charger and battery.

- 1 Attach the battery paying attention to the direction of the battery



- 2 Connect the charger to the electrical outlet


### Charging light ([CHARGE])

**On:** Charging in progress

**Off:** Charging complete

#### If light is flashing:

- Battery temperature is too high or too low. We recommend charging in a location where the ambient temperature is between 10 °C and 30 °C (50 °F to 86 °F).
- Battery/charger connector is dirty. Clean with a dry cloth.

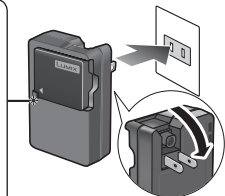

- Charge the battery with the charger indoors.

- 3 Detach the battery after charging is completed

Charging time	Approx. 190 min
<ul style="list-style-type: none"> <li>• The charging time indicated above is the time required for charging in case when the battery is completely used up. The time required for charging differs depending on conditions of battery usage. Charging takes longer in cases when temperatures are either high or low and when the battery has not been used for a long period of time.</li> </ul>	

### ■ Guidelines for number of recordable pictures and operating time

#### Recording still pictures (When using monitor)

 
Number of recordable pictures	Approx. 350 pictures (Approx. 300 pictures)
Recording time	Approx. 175 min (Approx. 150 min)

- The values when the flash (supplied) is used are provided in parentheses.




 
#### Recording motion pictures (When using monitor)

[Rec Format]	[AVCHD]	[MP4]	[MP4]
[Rec Quality]	[FHD/17M/60i]	[FHD/20M/30p]	[4K/100M/30p]
Available recording time	Approx. 125 min	Approx. 135 min	Approx. 90 min
Actual available recording time*	Approx. 60 min	Approx. 65 min	Approx. 45 min

\*The time you can actually record when repeatedly turning the camera on and off, starting and stopping recording and using zoom.



**Remaining battery** (only when using battery)





(flashes red)


If the battery mark flashes red, recharge or replace a fully charged battery.

- The battery is a rechargeable lithium ion battery. If the temperature is too high or too low, the operating time of the battery will become shorter.
- The battery becomes warm after using and during and after charging. The camera also becomes warm during use. This is not a malfunction.
- **Do not leave any metal items (such as clips) near the contact areas of the power plug or near the batteries.**
- Store the battery in a cool and dry place with a relatively stable temperature. (Recommended temperature: 15 °C to 25 °C (59 °F to 77 °F), Recommended humidity: 40%RH to 60%RH)
- **Do not store the battery for a long time while fully charged.** When storing the battery for a long period of time, we recommend charging it once a year. Remove the battery from the camera and store it again after it has completely discharged.

## Inserting and removing the battery/the card (optional)

 - Always use genuine Panasonic batteries (DMW-BLG10PP).
- If you use other batteries, we cannot guarantee the quality of this product.

**1** Slide the release lever to the [OPEN] position and open the card/battery door



**2** (Battery)

Insert the battery all the way firmly until a locking sound is heard, and check that the lever is hooked over the battery.

(Card)

Insert the card all the way firmly until it clicks.




**3** Close the card/battery door and slide the release lever to the [LOCK] position

### ■ To remove

 
#### • To remove battery:

Move lever in direction of arrow.



#### • To remove card:

 Press the center of the card.



### ■ About the Card




The following SD standard-based cards (Panasonic brand recommended) can be used.

Type of Card	Capacity
SD Memory Cards	8 MB – 2 GB
SDHC Memory Cards	4 GB – 32 GB
SDXC Memory Cards	48 GB, 64 GB

- Keep the Memory Card out of reach of children to prevent swallowing.

### ■ About the motion picture recording and speed class

According to the [Rec Format] (→40) and [Rec Quality] (→40) of a motion picture, the required card differs. Use a card that meets the following ratings of the SD Speed Class or UHS Speed Class. Confirm the SD speed by checking the card label or other card related materials.

[Rec Format]	[Rec Quality]	Speed class	Label example
[AVCHD]	All	Class 4 or higher	CLASS  
[MP4]	FHD/HD/VGA		
[MP4]	4K	UHS Speed Class 3	

- Latest information:  
<http://panasonic.jp/support/global/cs/dsc/>  
 (This site is available in English only.)

### Formatting the card (initialization)

Format the card before recording a picture with this unit. **Since data cannot be recovered after formatting, make sure to back up necessary data in advance.**

#### 1 Set the menu (→23)

**MENU** →  [Setup] → [Format]

- A confirmation screen is displayed. If you select [Yes], the operation is executed.

### Recording capacity guidelines (pictures/recording time)

#### ■ Recording picture capacity (still pictures)

When aspect ratio is set to [4:3] and [Quality] is set to 

[Picture Size]	16 GB	64 GB
L (12.5M)	2200	8820

## ■ Recording time capacity (motion pictures)

([h], [m] and [s] indicate “hour”, “minute” and “second”.)


- The recordable time is the total time of all the motion pictures which have been recorded.

When [Rec Format] is [AVCHD]

[Rec Quality]	16 GB	64 GB
[FHD/28M/60p]	1h15m00s	5h00m00s
[FHD/17M/60i]	2h00m00s	8h15m00s

When [Rec Format] is [MP4]

[Rec Quality]	16 GB	64 GB
[4K/100M/30p]	20m00s	1h20m00s
[FHD/28M/60p]	1h15m00s	5h00m00s

- If the surrounding temperature is high, or a motion picture is recorded continuously, [] is displayed and recording may be stopped halfway through to protect the camera.
- [AVCHD] motion pictures: Recording stops when the continuous recording time exceeds 29 minutes and 59 seconds.
- Motion pictures with their file size set to [FHD], [HD] or [VGA] in [MP4]: Recording stops when the continuous recording time exceeds 29 minutes and 59 seconds or the file size exceeds 4 GB.
  - Since the file size becomes larger with [FHD], recording with [FHD] will stop before 29 minutes 59 seconds.
- Motion pictures with their file size set to [4K] in [MP4]: Recording stops when the continuous recording time exceeds 15 minutes. (You can continue recording without interruption even if the file exceeds 4 GB, but the motion picture file will be recorded and played back in separate files.)
- **The maximum available continuous recording time is displayed on the screen.**

## Setting the clock

 
The clock is not set when the camera is shipped.

- 1 Turn the camera on
- 2 Press [MENU/SET]
- 3 Press ◀▶ to select the items (year, month, day, hour, minute), and press ▲▼ to set
  - To cancel → Press [🗑️/↵] button.


### To set the display order or time display format

- Select [Style] and press [MENU/SET] to display the setting screen for display order and time display format.

- 4 Press [MENU/SET]
  - A confirmation screen is displayed.
  - Press [MENU/SET].
- 5 When [Please set the home area] is displayed, press [MENU/SET]
- 6 Press ◀▶ to set your home area and press [MENU/SET]




🏠: Home time  
✈️: Destination time

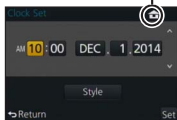

 
 



# Setting the menu

Example: To change the [Quality] setting from [L] to [S] in the [Rec] menu

## 1 Press [MENU/SET] to bring up the menu




 [Rec] (→81)	You can perform settings for picture size and the flash.
 [Motion Picture] (→83)	You can select the recording format and picture quality and other settings.
 [Custom] (→83)	Operation of the unit, such as displaying of the screen and button operations, can be set up according to your preferences. Also, it is possible to register the modified settings.
 [Setup] (→86)	You can perform settings that make usage more convenient, such as the changing the clock settings and beep volume. You can also perform Wi-Fi function-related settings.
 [Playback] (→87)	You can specify picture protection, cropping, print settings, and other settings for pictures you have taken.

## 2 Press ▲▼ to select the menu item and press [MENU/SET]

- Items can also be selected by turning the control dial.

## 3 Press ▲▼ to select the setting and press [MENU/SET]

- Items can also be selected by turning the control dial.

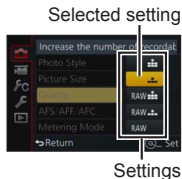

## 4 Press the [⏏/⏏] button repeatedly until the recording or playback screen reappears

- During recording, the menu screen can also be exited by pressing the shutter button halfway.

### ■ Switching menu type

**Example:** Switching to the [Setup] menu from [Rec] menu

1 Press ◀

2 Press ▲ ▼ to select a menu switch icon [↶]

- Items can also be selected by turning the control dial.

3 Press [MENU/SET]

- Select the menu item and perform the setting.

- The menu types and items that are displayed vary according to the mode.
- The setting methods vary depending on the menu item.

## Calling frequently-used menus instantly (Quick Menu)

You can easily call some of the menu items and set them.

- The menu items and setting items that are displayed differ depending on the recording mode and settings during recording.

1 Press [Q.MENU] button to display the Quick menu



2 Turn the control dial to select the menu item, and press ▼ or ▲

- The menu item can also be selected by pressing ◀▶.

3 Turn the control dial to select the setting

- The setting can also be selected with ◀▶.

4 Press [Q.MENU] button to close the Quick menu



## Assigning frequently used functions to the buttons (Function buttons)

You can assign frequently-used functions to particular buttons.

1 Set the menu

[MENU] → [Fn] [Custom] → [Fn Button Set]

2 Press ▲ ▼ to select the function button you want to assign a function to and press [MENU/SET]

3 Press ▲ ▼ to select the function you want to assign and press [MENU/SET]



## Changing settings using the control ring

You can use the control ring to change the settings of the unit.

Items that can be set by the control ring vary depending on recording modes.

Following are the pre-assigned settings.



Recording mode	Setting
<b>iA</b> [Intelligent Auto] Mode	<b>Q</b> Step Zoom (→58)
<b>P</b> [Program AE] Mode	<b>Q</b> Step Zoom (→58)
<b>A</b> [Aperture-Priority] Mode	<b>Q</b> Step Zoom (→58)
<b>S</b> [Shutter-Priority] Mode	<b>SS+</b> Shutter speed adjustment* (→33, 34)
<b>M</b> [Manual Exposure] Mode	<b>SS+</b> Shutter speed adjustment* (→34)

\* You can use the control ring to change the following settings values, which cannot be set using the shutter speed dial.

- Higher speed than 1/4000 seconds (electronic shutter (→51))
- Slower speed than 1 second (mechanical shutter (→51))
- Setting in 1/3 EV steps
- The control ring is assigned to selecting the picture effect (Filter) when you are recording a panorama picture. (→56)
- When Manual Focus is set, focus adjustment is assigned to the control ring. (→48)

## Changing the settings assigned to the control ring

Changes the settings assigned to the control ring.

### 1 Set the menu


**MENU** → **Ⓕ** [Custom] → [Control Ring]

### 2 Use ▲ ▼ to select the setting and press [MENU/SET]

- [DEFLT] [Normal]
  - **Q** [Step Zoom] (→58)
  - **WB** [White Balance] (→44)
  - [OFF] [Not Set]
  - **Q** [Zoom] (→57)
  - **ISO** [Sensitivity] (→50)
  - **Ⓕ** [Filter Select] (→44)
- To return to the default setting, select [Normal].
  - If you do not use the control ring, select [OFF] ([Not Set]).
  - The assigned function setting applies to all the Recording Modes. The function assigned to the control ring may not work in some combinations of Recording Mode or settings used for recording (panorama picture recording, Filter setting, etc.).
  - When Manual Focus is set, the control ring is fixed to the function for adjusting the focus. You cannot use the settings assigned using the [Control Ring]. (→48)

## Holding the camera

- To avoid camera shake, hold it with both hands keeping your arms close to your body while standing with your feet slightly apart.
- Do not touch the lens.
- Do not block the microphone when recording motion pictures.
- Do not block the AF Assist Lamp, or the flash when you take a picture using it. Do not look at it from close range.
- Make sure that the camera does not move at the moment the shutter button is pressed.
- We recommend using the supplied shoulder strap to avoid dropping the camera.

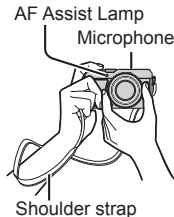


## Recording pictures using the viewfinder


### Switching between the monitor and viewfinder

#### 1 Press [LVF] button

- The display is switched as shown below.

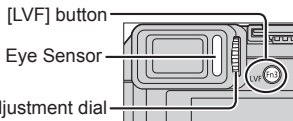

Automatic switching between viewfinder and monitor\*

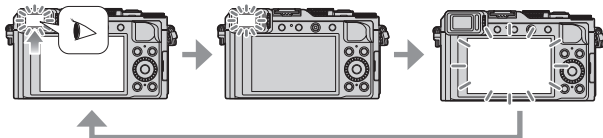


- \* For automatic switching between the viewfinder and monitor, the eye sensor automatically switches the display to viewfinder when your eye or an object moves close to the viewfinder.

### About diopter adjustment

Turn the diopter adjustment dial to adjust until you are able to clearly see the characters displayed in the viewfinder.

# Taking pictures

- Press the  button (▼) to set the drive mode to  ([Single]).

## 1 Select the recording mode

- Each time you press the **[iA]** button, the recording mode will switch between **iA** and **P / A / S / M**.

### **iA** [Intelligent Auto] Mode (→29)

Take pictures with automatic settings.

### **P** [Program AE] Mode (→32)

Record pictures with the aperture value and shutter speed settings automatically adjusted.

### **A** [Aperture-Priority] Mode (→33)

Determine aperture, then record pictures.

### **S** [Shutter-Priority] Mode (→33)

Determine shutter speed, then record pictures.

### **M** [Manual Exposure] Mode (→34)

Determine the aperture value and shutter speed respectively, and then record pictures.

## 2 Adjust focus according to subject

- The aperture value and shutter speed are displayed. (If the aperture value and shutter speed are shown in red and flashing, you do not have the appropriate exposure, unless you are using the flash.)



Press halfway

### AF area

(When focus is aligned: green)



### Focus display

(When focus is aligned: illuminated  
When focus is not aligned: flashing)

Aperture value  
Shutter speed

## 3 Take a picture



Press fully

- The focus display flashes and beep sounds when focus is not aligned.  
Use the focus range displayed in red as a reference.



Focus range

# Taking pictures with automatic settings

[Intelligent Auto] Mode

## Recording mode: **iA P A S M**

This mode is recommended for those who want to point and shoot as the camera optimizes settings to match the subject and recording environment.

 
The camera optimizes the settings and the following functions are activated automatically.

- Automatic Scene Detection / Backlight Compensation / [Face/Eye Detection] / Auto White Balance / Intelligent ISO sensitivity control / [Red-Eye Removal] / [i.Zoom] / [i.Resolution] / [Stabilizer] / [i.Dynamic] / [Long Shtr NR] / [Quick AF] / [AF Assist Lamp]

### 1 Press [iA] button

The camera switches to [Intelligent Auto] Mode.

- When you press the [iA] button again, the recording mode is switched to one that is set using the aperture ring and shutter speed dial.



### 2 Point the camera at the subject

- When the camera identifies the optimal scene, the icon for each scene turns blue for 2 seconds and then changes to the normal red indication.
- When you press ◀ and press the shutter button halfway, AF Tracking is activated. (→47)



## ■ Automatic Scene Detection

### When taking pictures

[i-Portrait]	[i-Scenery]	[i-Macro]	[i-Night Portrait]*1
[i-Night Scenery]	[i-Handheld Night Shot]*2	[i-Food]	[i-Baby]*3
[i-Sunset]	When scene does not correspond to any of the above		

\*1 When the flash (supplied/optional) is used.

\*2 When [iHandheld Night Shot] is [ON]. (→30)

\*3 When children (that are registered in the camera with Face Recognition) under 3 years old are recognized.

### When recording motion pictures

[i-Portrait]	[i-Scenery]	[i-Low Light]	[i-Macro]
When scene does not correspond to any of the above			

■ **Flash**

When the [ON/OFF] switch for the flash (supplied/optional) is set to [OFF], the flash is set to [☹] (Forced Flash Off). When the [ON/OFF] switch is set to [ON], the flash is set to [iA] (AUTO).

When the flash is turned on, the camera automatically sets [iA], [iA], (Auto/Red-Eye Reduction), [iS], or [iS] based on the type of subject and brightness.

■ **Available menus**

You can set only the following menus.

Menu	Item
[Rec]	[Picture Size] / [Quality] / [AFS/AFF/AFC] / [Burst Rate] / [Self Timer] / [iHandheld Night Shot] / [iHDR] / [Time Lapse Shot] / [Stop Motion Animation] / [Face Recog.]
[Motion Picture]	[Rec Format] / [Rec Quality] / [AFS/AFF/AFC]
[Custom]	[Silent Mode] / [Guide Line] / [Remaining Disp.]
[Setup]	All menu items can be set.

**Taking pictures using a handheld camera  
([iHandheld Night Shot])**

If a night scene is detected automatically while the unit is being handheld, [iHandheld Night Shot] can record a still picture with less jitter and less noise without using a tripod by combining a burst of pictures.


**MENU** →  [Rec] → [iHandheld Night Shot] → [ON] / [OFF]

- The flash is fixed to the [☹] (Forced Flash Off) setting.

**Combining pictures into a single still picture with rich gradation  
([iHDR])**

When there is, for example, strong contrast between the background and the subject, [iHDR] records multiple still pictures with differing exposures and combines them to create a single still picture rich in gradation.

[iHDR] is activated when required. When activated, [HDR] will be displayed on the screen.

**MENU** →  [Rec] → [iHDR] → [ON] / [OFF]


## Taking pictures after setting the aperture value and shutter speed

### Recording mode: **iA P A S M**

You can set the exposure using the aperture ring and shutter speed dial settings. Using the [Rec] menu to change settings and set up your own recording environment.

You can also record pictures by applying picture effects. (→44)

### 1 Turn the aperture ring and shutter speed dial to set your preferred recording mode

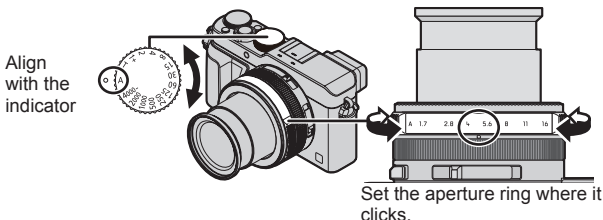

Recording mode	Aperture ring	Shutter speed dial
<b>P</b> [Program AE] Mode (→32)	[A] (AUTO)	[A] (AUTO)
<b>A</b> [Aperture-Priority] Mode (→33)	Your preferred settings	[A] (AUTO)
<b>S</b> [Shutter-Priority] Mode (→33)	[A] (AUTO)	Your preferred settings
<b>M</b> [Manual Exposure] Mode (→34)	Your preferred settings	Your preferred settings

- In [Aperture-Priority] Mode, [Shutter-Priority] Mode, and [Manual Exposure] Mode, the effect of the aperture value and shutter speed you have set is not applied to the recording screen. To check the effect on the recording screen, use [Preview] Mode. (→35)

The brightness of the screen may vary from the actual pictures recorded. Check the brightness of pictures using the playback screen.

A faster shutter speed than the set shutter speed may be used when you record a motion picture.

## Taking pictures after automatically setting the aperture value and shutter speed ([Program AE] Mode)

Take pictures using automatic aperture values and shutter speed settings in accordance with the brightness of a subject.


### 1 Turn the aperture ring to select [A] (AUTO)

### 2 Turn the shutter speed dial to select [A] (AUTO)

[Program AE] Mode is set and the recording mode icon changes to [P].

### 3 Press the shutter button halfway

- If the aperture value and shutter speed flash red, you do not have the correct exposure.

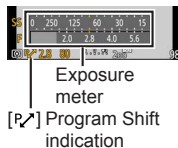

### 4 While the numeric values are displayed in yellow (approximately 10 seconds), turn the control dial to change the values using Program Shift

- To cancel Program Shift, either turn off the camera or turn the control dial until the Program Shift indication turns off.
- To correct the exposure, use the exposure compensation dial to adjust the compensation value. (→50)



## Enabling/disabling the exposure meter display

**MENU** → **fC [Custom]** → **[Expo.Meter]** → **[ON] / [OFF]**

- When you set this function to [ON], an exposure meter is displayed during Program Shift, aperture setting, and shutter speed operation.
- Proper exposure is not possible in the range indicated in red.
- If the exposure meter is not displayed, press the [DISP.] button to switch the display of the monitor.
- The exposure meter will turn off if no operation is performed for approximately 4 seconds.



## Taking pictures by setting the aperture value ([Aperture-Priority] Mode)


When the aperture value is increased, the range of depth in focus expands, and the picture shows up clearly from the position of the camera to the background. When the aperture value is reduced, the range of depth in focus shrinks, and the background can get blurry.

### 1 Turn the shutter speed dial to select [A] (AUTO)

### 2 Turn the aperture ring to select the aperture value

[Aperture-Priority] Mode is set and the recording mode icon changes to [A].

- To correct the exposure, use the exposure compensation dial to adjust the compensation value. (→50)

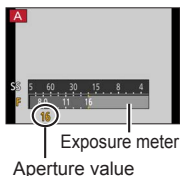

Aperture values that can be set*	Shutter speed set (seconds)
F1.7 - F16	60 - 1/4000 (When the mechanical shutter is used) 1 - 1/16000 (When the electronic shutter is used)

\* You may not be able to select some values depending on zoom position.

## Taking pictures by setting the shutter speed ([Shutter-Priority] Mode)


When you increase the shutter speed, you can reduce jitter when recording a subject. When you decrease the shutter speed, the subject's movement is shown.

### 1 Turn the aperture ring to select [A] (AUTO)

### 2 Turn the shutter speed dial to select the shutter speed

[Shutter-Priority] Mode is set and the recording mode icon changes to [S].

- To correct the exposure, use the exposure compensation dial to adjust the compensation value. (→50)

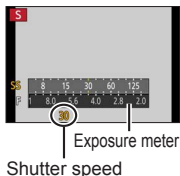

Shutter speeds that can be set* (seconds)	Aperture value set
60 - 1/4000 (When the mechanical shutter is used) 1 - 1/16000 (When the electronic shutter is used)	F1.7 - F16

\* Setting the shutter speed to values not provided on the shutter speed dial (→34)

### ■ Setting the shutter speed to values not provided on the shutter speed dial

- Higher speed than 1/4000 seconds or slower shutter speed than 1 second
  - ① Turn the shutter speed dial to select [4000-] or [1+]
  - ② Turn the control ring or control dial to select the shutter speed
- Shutter speed setting in 1/3 EV steps  
You can set the shutter speed from the setting value of the shutter speed dial in the range of  $\pm 2/3$  steps.  
Example: To set the shutter speed to 1/400 seconds
  - ① Turn the shutter speed dial to select [500]
  - ② Turn the control ring or control dial to select [400]
- Check the shutter speed on the screen.
- For details on setting the shutter method, refer to (→51).


### Taking pictures by setting the aperture value and shutter speed ([Manual Exposure] Mode)

Determine the exposure by manually setting the aperture value and the shutter speed.

The Manual Exposure Assist appears on the lower portion of the screen to indicate the exposure.

- 1 Turn the aperture ring to select the aperture value
- 2 Turn the shutter speed dial to select the shutter speed

[Manual Exposure] Mode is set and the recording mode icon changes to [M].

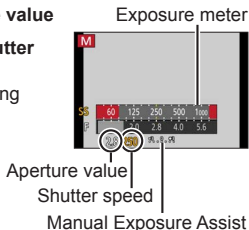

Aperture values that can be set*1	Shutter speeds that can be set*2 (seconds)
F1.7 - F16	T (Time), 60 - 1/4000 (When the mechanical shutter is used) 1 - 1/16000 (When the electronic shutter is used)

\*1 You may not be able to select some values depending on zoom position.

\*2 You may not be able to select some shutter speeds depending on the aperture value.

Setting the shutter speed to values not provided on the shutter speed dial (→34)

## About T (time)

When you set the shutter speed to T (time) and fully press the shutter button, the shutter opens. (Approximately up to 120 seconds)

When you press the shutter button again, the shutter closes. Use this function when you want to keep the shutter open for an extended period, for example, to record pictures of fireworks or night scenes.

- You cannot use this function when the electronic shutter is used.
- You can use this function only in [Manual Exposure] Mode.



- When you take pictures with the shutter speed set to T (time), we recommend using remote recording with a tripod or smartphone as a remote shutter release (→65), in order to prevent jitter.
- When you take still pictures with the shutter speed set to T (time), the pictures may have higher noise levels. If you want to suppress noise, we recommend taking pictures by setting [Long Shtr NR] to [ON] in the [Rec] menu.

## Checking the effects of the aperture value and shutter speed ([Preview] Mode)

 
Recording mode: **[iA] P A S M**

### 1 Assign [Preview] to the function button (→24)

- The following step is an example of assigning [Preview] to the [Fn1] button.

### 2 Press the [Fn1] button to switch the confirmation screen

- Every time you press the [Fn1] button, the screen switches.



## Registering a combination of settings to be used during recording (Custom Set)

**Recording mode:**  **P A S M**

You can register up to three combinations of your preferred menu settings.

### ■ Registering the custom set


- ① Set your preferred menu settings such as [Rec] menu, [Motion Picture] menu, and [Custom] menu
- ② Set the menu

**MENU** →  **[Custom]** → **[Cust.Set Mem.]**

- ③ Use **▲▼** to select custom set (C1-C3) for registration and press **[MENU/SET]**
  - A confirmation screen is displayed. If you select [Yes], the operation is executed.

### ■ Using the custom set

- ① Set the menu

**MENU** →  **[Custom]** → **[Utilize Custom Set feature]**

- ② Use **▲▼** to select custom set
- ③ Press **[MENU/SET]**
  - The settings are switched to those settings you selected for the custom set.



### Using the function button to call up the custom settings

Setting the function button to [Utilize Custom Set feature] allows you to switch quickly to your preferred settings by pressing the function button.

- ① Assign [Utilize Custom Set feature] to your preferred function button using [Fn Button Set] in the [Custom] menu (→24)
- ② Press the function button to which [Utilize Custom Set feature] is assigned. Use **◀▶** to select custom set and press **[MENU/SET]**


# Switching the display information on the recording screen

## 1 Press [DISP.] button to switch the display



- You can use [Monitor Disp. Style] and [LVF Disp. Style] in the [Custom] menu to select either [ ] (Monitor style display layout) or [ ] (Live View Finder style display layout) for the display screen of the monitor and viewfinder.

### ■ [ ] Monitor style display layout (Example of monitor style display)

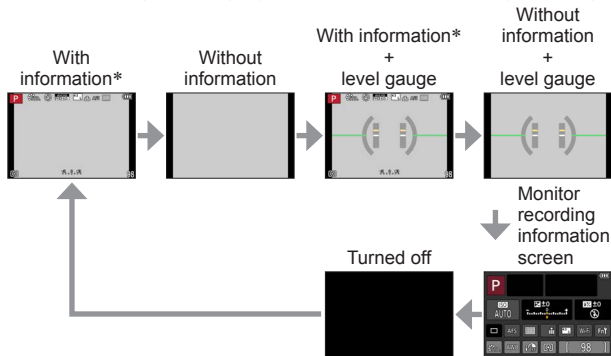


\* When [Histogram] in the [Custom] menu is set to [ON], a histogram is displayed.

- If you do not perform any operation for approximately 1 minute or longer, some of the information on the screen is turned off. To display the information again, press the [DISP.] button.

## Viewing your pictures

 - 1 Press the **Playback** button
- 2 Press **◀▶** or turn the control dial to select the picture to be displayed



### ■ Ending Playback

Press the Playback button again or press the Motion picture button.  
The Playback can also be ended by pressing the shutter button halfway.

### ■ Zooming in and viewing “Playback Zoom”

- Each time you move the zoom lever toward the T side, the magnification increases through four levels: 2x, 4x, 8x, and 16x.

### ■ Viewing a list of pictures “Multi Playback”

- Move the zoom lever toward the W side and you can switch the display methods in the following order: 1-picture screen (full-screen) → 12-picture screen → 30-picture screen → Calendar screen. (Move the lever to the T side to return.)



 
### Sending pictures to the WEB services

If you press **▼** while a single picture is being displayed, you can send the picture to the WEB service quickly. (→68)

## Deleting pictures

Deleted pictures cannot be recovered.

- 1 Press **[🗑️/↶]** button to delete displayed picture



- 2 Use **▲** to select [Delete Single] and press [MENU/SET]

- A confirmation screen is displayed. Select [Yes] and press [MENU/SET].



## Recording motion pictures

You can record full high-definition quality images that comply with the AVCHD standard, as well as motion pictures recorded in MP4. You can also record a 4K motion picture in MP4. (→42)

Audio is recorded in stereo.

You can record motion pictures by manually setting the aperture value and shutter speed. (→31)


The camera automatically sets the aperture value and shutter speed and identifies the optimal scene to record motion pictures in [Intelligent Auto] Mode. (→29)

### 1 Press the motion picture button to start recording

- Immediately release the motion picture button after pressing it.
- While you are recording motion pictures, the recording status indicator (red) will flash.
- Do not block the microphones when recording motion pictures.
- You can also use zoom while recording motion pictures.
  - The operating sounds of the zoom lever or control ring may be recorded in some cases.
- If you press the shutter button down fully, you can take still pictures while recording motion pictures.



Recording state indicator

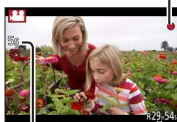

Elapsed recording time

Remaining recording time (approx.)

### 2 Press the motion picture button again to end recording

- If Extended optical zoom is used before pressing the motion picture button, these settings will be cleared, and the recordable area will be changed significantly.

## Setting the format, picture size and recording frame rate

Recording mode: **[iA]** **[P]** **[A]** **[S]** **[M]**

### 1 Set the menu

**[MENU]** →  **[Motion Picture]** → **[Rec Format]**

### 2 Use ▲ ▼ to select the item and press **[MENU/SET]**

<b>[AVCHD]</b>	This is a data format suitable for playback on high-definition TVs.
<b>[MP4]</b>	This data format is suited for playing back motion pictures on a computer and other such devices.

### 3 Use ▲ ▼ to select **[Rec Quality]** and press **[MENU/SET]**

### 4 Use ▲ ▼ to select the item and press **[MENU/SET]**

- Exit the menu after it is executed.

#### When **[AVCHD]** is selected

Item	Picture size	Recording frame rate	Bit rate (approx.)
<b>[FHD/28M/60p]*1</b>	1920×1080	60p	28 Mbps
<b>[FHD/17M/60i]</b>	1920×1080	60i	17 Mbps
<b>[FHD/24M/30p]</b>	1920×1080	60i*2	24 Mbps
<b>[FHD/24M/24p]</b>	1920×1080	24p	24 Mbps

\*1 AVCHD Progressive

\*2 30 fps for the sensor output

#### When **[MP4]** is selected

Item	Picture size	Recording frame rate	Bit rate (approx.)
<b>[4K/100M/30p]</b>	3840×2160	30p	100 Mbps
<b>[4K/100M/24p]</b>	3840×2160	24p	100 Mbps
<b>[FHD/28M/60p]</b>	1920×1080	60p	28 Mbps
<b>[FHD/20M/30p]</b>	1920×1080	30p	20 Mbps
<b>[HD/10M/30p]</b>	1280×720	30p	10 Mbps
<b>[VGA/4M/30p]</b>	640×480	30p	4 Mbps



## Viewing motion pictures

This unit was designed to play motion pictures using the AVCHD and MP4 formats.

### 1 Select a picture with the motion picture icon ([) in playback mode, and press **▲** to start playback

- After playback starts, the elapsed playback time is displayed on the screen.
- Some information will not be displayed for motion pictures recorded in [AVCHD].



Motion picture recording time

Example: 29 minutes and 30 seconds: [29m30s]

### Operations during motion picture playback

**▲** : Pause/play

**▼** : Stop

**◀** : Fast rewind (2 steps)/Single-frame rewind\* (while paused)

**▶** : Fast forward (2 steps)/Single-frame forward (while paused)

Control dial (counterclockwise): Volume down

Control dial (clockwise): Volume up

[MENU/SET]: Capturing still pictures from motion pictures (while paused)

\* Motion pictures recorded in [AVCHD] are rewound frame by frame approximately every 0.5 seconds.

## Recording 4K motion pictures

**Recording mode:** **[IA] [P] [A] [S] [M]**

You can record high-resolution 4K motion pictures by setting [Rec Quality] to [4K].

- To record 4K motion pictures, use a UHS Speed Class 3 card. (→20)
- When you record 4K motion pictures, the angle of view will be narrower than motion pictures of other sizes.

### ■ To record 4K motion pictures

- ① Select the recording mode (→28)
- ② Set the [Rec Format] in the [Motion Picture] menu to [MP4] (→40)
- ③ Set [Rec Quality] in the [Motion Picture] menu to [4K/100M/30p] or [4K/100M/24p] (→40)
- ④ Press the motion picture button to start recording
- ⑤ Press the motion picture button again to end recording

## Creating a high-resolution still picture from a 4K motion picture [4K PHOTO]

You can create a still picture with approximately 8 megapixel resolution from a 4K motion picture recorded by setting [4K PHOTO]. You can create a still picture that captures a moment, similar to high-speed burst recording. This setting is not available in [Intelligent Auto] Mode.

### Recording 4K motion pictures

#### 1 Set the menu

**[MENU]** → **[Motion Picture]** → **[4K PHOTO]**

#### 2 Press **▲ ▼** to select [ON] and press [MENU/SET]

A confirmation screen is displayed. Select [Yes] and press [MENU/SET].

 


- The appropriate motion picture mode for capturing a still picture from a 4K motion picture is selected and the motion picture can be recorded using still picture quality.
- Since the camera puts higher priority on the focus of a still picture captured from a 4K motion picture, focusing movement during motion picture recording may be noticeable.

The camera will automatically perform the following setting items.

Menu	Item
[Rec Format]	[MP4]
[Rec Quality]	[4K/100M/30p]

#### 3 Press **[ ]** button to display the recording screen

- 4 Turn the aperture ring and shutter speed dial to set the recording mode**
- We recommend setting [Shutter-Priority] Mode and setting the shutter speed to 1/1000 seconds or higher to minimize subject blur. To record a subject that is moving quickly, set the shutter speed to 1/2000 seconds or higher.
- 5 Operate the aspect ratio selector switch to set the aspect ratio for a motion picture**
- 
- The aspect ratio of a still picture captured from a 4K motion picture is the same as the aspect ratio of the motion picture.
- 6 Press the motion picture button to start recording**
- When you record 4K motion pictures, the angle of view will be narrower than motion pictures of other sizes.



### Setting a marker

- When you press the [Fn2] button while recording, you can add a marker to the motion picture.
  - When you create still pictures from a motion picture, you can quickly move to a marker position you want to capture as a still picture.
  - You can add up to 40 markers in a single motion picture.
- 7 Press the motion picture button again to end recording**
- Motion picture recording can also be started or finished by pressing the shutter button.

## Creating still pictures from a motion picture

- 1 Display the picture that you want to capture as a still picture by pressing  $\blacktriangle$  to pause a motion picture being played back on the camera**

- You can press  $\blacktriangleleft$  to perform single-frame forward/rewind operations.



- When you press the [Fn2] button and press  $\blacktriangleright$ , you can quickly move to the marker position you set while recording the motion picture. (You can perform the same operation even during motion picture playback.) If you press the [Fn2] button again, you can perform single-frame forward/rewind operations by pressing  $\blacktriangleleft$ .

- 2 Press [MENU/SET]**

 
- A confirmation screen is displayed. Select [Yes] and press [MENU/SET].

## Taking pictures using picture effects (Filter)

Recording mode: **IA P A S M**


You can select your own settings from various effects and take pictures while confirming these effects on the screen.

**1 Press [FILTER] button**



**2 Press ▲▼ or turn the control dial to select the picture effect (Filter)**

 **3 Press [MENU/SET]**



● The flash is set to [☹] (Forced Flash Off).

### Switching the display of a selection screen for applying picture effects (Filter)

**1 Press the [DISP.] button to switch the display**

- Every time you press the [DISP.] button, the screen for which picture effects are selected changes.
- When you switch the screen to the guide display, a description of the picture effects appears.

## Adjusting the White Balance

Recording mode: **IA P A S M**

In sunlight, under incandescent lights or in other such conditions where the color of white takes on a reddish or bluish tinge, this item adjusts to the color of white which is closest to what is seen by the eye in accordance with the light source.

**1 Press [WB] button (▶)**

**2 Turn the control dial to select the White Balance and press [MENU/SET]**

[AWB] / [☀] / [☁] / [🏠]\*1 / [☀-]\*2 / [🔍]\*3 / [📷] [📷] [📷] [📷]\*4 / [K]\*5

\*1 Adjust to the color in the shade.

\*2 Adjust to the color under incandescent lights.

\*3 Adjust to the color that is optimal for taking pictures using the flash. The [AWB] setting is applied when recording motion pictures.

\*4 Use the White Balance value that was set manually.

\*5 Use the preset color temperature setting.


# Setting the picture quality and size

## Changing the aspect ratio of the still pictures

Recording mode: **iA** **P** **A** **S** **M**

### 1 Switching the aspect ratio selector switch

[4:3]	Aspect ratio of a 4:3 TV
[1:1]	Aspect ratio of a square image
[16:9]	Aspect ratio of high-definition TV, etc.
[3:2]	Aspect ratio of standard film cameras

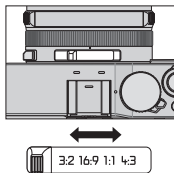

## Setting the picture size

Recording mode: **iA** **P** **A** **S** **M**

The higher the numbers of pixels, the finer the detail of the pictures will appear even when they are printed onto large sheets.

**MENU** → **[Rec]** → **[Picture Size]**



 

Aspect ratio	4:3	1:1	16:9	3:2
[Picture Size]	[L] 12.5M 4112×3088	[L] 10M 3088×3088	[L] 11M 4480×2520	[L] 12M 4272×2856
	[EX M] 6.5M 2976×2232	[EX M] 5M 2240×2240	[EX M] 8M 3840×2160	[EX M] 6.5M 3120×2080
	[EX S] 3M 2048×1536	[EX S] 2.5M 1536×1536	[EX S] 2M 1920×1080	[EX S] 3M 2112×1408

## Setting the compression rate of pictures ([Quality])

Recording mode: **iA** **P** **A** **S** **M**

Set the compression rate used for storing pictures.

**MENU** →  **[Rec]** → **[Quality]**

	Gives priority to picture quality and saves pictures in JPEG file format.
	Saves pictures in JPEG file format using standard picture quality. This setting is useful when you want to increase the number of recordable pictures without changing the number of pixels.
<b>[RAW]</b> 	Saves pictures in JPEG file format in addition to the RAW file format.*1
<b>[RAW]</b> 	Saves pictures in the RAW file format.*2

\*1 If you delete a RAW file from the camera, the corresponding JPEG file is also deleted.

\*2 The picture size is fixed to the maximum recordable pixels for each image aspect ratio ([L]).



### About RAW file

In RAW file format the data is saved without any picture processing by the camera. This format delivers a higher picture quality than the JPEG format, but the amount of data is greater. To play back and edit RAW file pictures, you must use this unit or dedicated software. You can perform advanced editing of RAW file pictures, such as correcting the White Balance of pictures recorded previously, and save the pictures in file formats that can be displayed on a PC.

- You can develop the RAW file pictures using [RAW Processing] in the [Playback] menu. For details, refer to “Owner’s Manual for advanced features (PDF format)”.
- To develop and edit RAW file pictures on a PC, use the supplied DVD software (Ichikawa Soft Laboratory’s “SILKYPIX Developer Studio”).

## Taking pictures with Auto Focus

Recording mode: **iA P A S M**

This allows the focusing method that suits the positions and number of the subjects to be selected.

### 1 Switch the focus selector switch to [AF] or [AF $\leftarrow$ ]









Align with the indicator.

### Switching [AF Mode]

#### 1 Press [ $\leftarrow$ ] button ( $\blacktriangleleft$ )

#### 2 Press $\blacktriangleleft$ $\blacktriangleright$ to select Auto Focus mode and press [MENU/SET]

 (Face/Eye Detection)	The camera automatically detects the faces and eyes of subjects.
 (AF Tracking)	You can adjust the focus and exposure of a specific subject. The camera will continue to adjust focus and exposure even if the subject moves.
 (49-area-focusing)	Focuses on the subject in the wide range area (up to 49-area-focusing) on the recording screen.
 , etc. (Custom Multi)	You can set the preferred shape of an AF area by selecting 49 points in the AF area, based on the subject.
 (1-area-focusing)	Focuses on AF area in center of picture. (Recommended when focus is difficult to align)
 (Pinpoint-focusing)	Enables more precise focusing on a smaller point than [ $\blacksquare$ ] (1-area-focusing).

- If you press  $\blacktriangledown$  when [ $\leftarrow$ ], [ $\blacksquare$ ], [ $\blacksquare$ ], or [ $\oplus$ ] is selected, the AF area setting screen appears. For details on operation of the AF area setting screen, refer to “Owner’s Manual for advanced features (PDF format)”.

## Taking close-up pictures (Macro recording)

Recording mode: **iA P A S M**

When you want to enlarge the subject, setting to [AF $\updownarrow$ ] (AF Macro) enables you to take pictures at an even closer distance than the normal focus range (up to 3 cm (0.098 feet) for max. Wide).

### 1 Switch the focus selector switch to [AF $\updownarrow$ ]

- Focus range is displayed when operating the zoom, etc. (→57)



Align with the indicator.

## Taking pictures with Manual Focus

Recording mode: **iA P A S M**

Manual Focus is convenient when you want to lock the focus to take pictures or when it is difficult to adjust focus using Auto Focus.

### 1 Switch the focus selector switch to [MF]

### 2 Press [MF Assist] button (◀)

### 3 Press ▲▼◀▶ to determine the area to be enlarged, and press [MENU/SET]

- The screen changes to the assist screen and an enlarged display appears. (MF Assist)
- If you press [DISP.] button, the area to be enlarged will be reset to the center.



Align with the indicator.

### 4 Turn the control ring to adjust focus

Turning the control ring to the right:


Focusing on a nearby subject

Turning the control ring to the left:

Focusing on a distant subject

- Color is added to the portions of the image that are in focus. (Peaking)
- You can confirm the direction of focus adjustment toward the close distance side or far distance side. (MF Guide)

**MF Assist  
(Enlarged screen)  
Peaking**

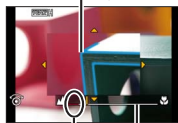

MF Guide  
Indicator for ∞ (infinity)



## ■ Displaying the MF Assist

- Turn the control ring to display MF Assist.
- You can also display MF Assist by pressing ◀ to display the setting screen, pressing the cursor button to set the position to be enlarged, and then pressing [MENU/SET].

## ■ Closing the MF Assist

- To exit MF Assist, press the shutter button halfway.
- You can also exit MF Assist by pressing [MENU/SET].
- When you display MF Assist by turning the control ring, MF Assist is automatically ended approximately 10 seconds after you finish the operation.

# Taking pictures by locking the focus and/or exposure [AF/AE Lock]

Recording mode: **iA P A S M**

The AF/AE Lock function is convenient, for example, when there is too much contrast with the subject and you cannot get appropriate exposure (AE Lock) or when you want to take a still picture composed with the subject outside the AF area (AF Lock).

### 1 Point the camera at the subject

### 2 Lock the focus and/or exposure while you press and hold the [AF/AE LOCK] button



- When you release the [AF/AE LOCK] button, the focus and/or exposure lock is canceled.
- Only the exposure is locked at the time of purchase.

### 3 While you press and hold the [AF/AE LOCK] button, move the camera to compose the picture you want to take and fully press the shutter button

- When [AE LOCK] is set, press the shutter button halfway to focus, then press it fully.



## Setting the function of the [AF/AE LOCK] button

**MENU** → **fC [Custom]** → **[AF/AE Lock]**


[AE LOCK]	Locks exposure only.
[AF LOCK]	Locks focus only.
[AF/AE LOCK]	Locks focus and exposure.
[AF-ON]	Auto Focus is activated.

## Taking pictures with Exposure Compensation

Recording mode: **[A]** **P** **A** **S** **M**

Corrects the exposure when there is a backlight or when the subject is too dark or too bright.

### 1 Turn the exposure compensation dial to select the compensation value

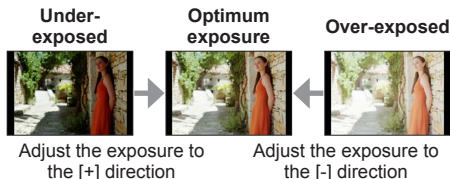

## Setting the ISO Sensitivity

Recording mode: **[A]** **P** **A** **S** **M**

Set ISO Sensitivity (sensitivity to lighting) manually.

We recommend higher settings to take clear pictures in darker locations.

### 1 Press [ISO] button (▲)

### 2 Turn the control dial to select ISO Sensitivity and press [MENU/SET]

<b>AUTO</b>	ISO Sensitivity is automatically set in a range up to 3200*1 depending on the brightness of a subject.
<b>[ISO]</b> <b>(Intelligent ISO)</b>	ISO Sensitivity is automatically set in a range up to 3200*1 depending on the movement and brightness of a subject.
<b>100*2/200/400/800/ 1600/3200/6400/ 12800/25600</b>	ISO Sensitivity is fixed at the selected setting. • When [ISO Increments] is set to [1/3EV], more ISO Sensitivity settings can be selected.

\*1 When [ISO Limit Set] in the [Rec] menu is set to other than [OFF], the ISO Sensitivity is automatically set in the range up to the [ISO Limit Set] setting value.

\*2 Only when [Extended ISO] is [ON].

## Setting the metering mode

Recording mode: **P** **A** **S** **M**

MENU → [Rec] → [Metering Mode]

[Metering Mode]	Brightness measurement position	Conditions
(Multiple)	Whole screen	Normal usage (produces balanced pictures)
(Center weighted)	Center and surrounding area	Subject in center
(Spot)	Center of [+] (spot metering target)	Great difference between brightness of subject and background (e.g. person in spotlight on stage, backlighting)

## Setting the Shutter Type

Recording mode: **P** **A** **S** **M**

	Mechanical shutter	Electronic shutter
Description	Starts the exposure electronically and ends the exposure using the mechanical shutter.	Starts and ends the exposure electronically.
Flash	○	—
Shutter Speed (seconds)	60 - 1/4000	1*1 - 1/16000
Shutter sound	Mechanical shutter sound*2 + Electronic shutter sound	Electronic shutter sound

\*1 You can set ISO Sensitivity up to [ISO 3200]. When ISO Sensitivity is higher than [ISO 3200], the shutter speed will be faster than 1 second.

\*2 You cannot turn off the mechanical shutter sound.

### 1 Set the menu

MENU → [Rec] → [Shutter Type]

[AUTO] / [MSHTR] / [ESHTR]






- When you take a picture under a fluorescent or LED lighting fixture using the electronic shutter, the recorded picture may have horizontal stripes. If you use a slower shutter speed, the horizontal stripes may be reduced.

## Selecting a Drive Mode



You can switch the operation to be performed when you press the shutter button.

**1** Press [] button (▼)

**2** Press ◀▶ to select the drive mode and press [MENU/SET]

 [Single]	When the shutter button is pressed, only one picture is recorded.
 [Burst] (→53)	The pictures are recorded in succession while the shutter button is pressed.
$3 \cdot 1/3$ [Auto Bracket]* (→54)	Each time the shutter button is pressed, the pictures are recorded with different exposure settings based on the Exposure Compensation range.
 [Aspect Bracket]* (→54)	When the shutter button is pressed, 4 pictures with 4 different aspect ratios are automatically recorded.
 [Self Timer] (→55)	When the shutter button is pressed, recording takes place after the set time has elapsed.
 [Panorama Shot]* (→55)	The pictures are recorded in succession while you press the shutter button and move the camera horizontally or vertically, and then the camera combines the pictures into a single panorama picture.

\* Cannot be set when using [Intelligent Auto] Mode.

- The icons in the above table are just examples.
- To cancel drive mode, select [] ([Single]) or [] ([Shutter Off]). The recording is switched to "Single".
- When you press ▲, you can change the settings of each drive mode. Note, however, that you cannot change the settings of [Single] and [Aspect Bracket].

## Burst function

Recording mode: **iA P A S M**

The pictures are recorded in succession while the shutter button is pressed.

- Pictures that are taken while the [Burst Rate] is set to [SH] are recorded together as a single burst group.

- 1 Press [] button (▼)
- 2 Press ◀▶ to select the burst icon ([], etc.) and press ▲
- 3 Press ◀▶ to select the burst speed and press [MENU/SET]

		[SH] (Super high speed)*	[H] (High speed)	[M] (Middle speed)	[L] (Low speed)
Speed (pictures/ sec.)	[AFS]	40	11	7	2
	[AFF]/[AFC]	—	6.5	6.5	2
Live View during burst recording		None	None	Available	Available
No. of pictures	With RAW files	—	20	20	20
	Without RAW files	60	Depends on the capacity of the card		

\* The electronic shutter will be activated.


- 4 **Focus on the subject and take a picture**
  - Hold down the shutter button fully to activate the Burst Mode.

## Recording while exposure is changed automatically [Auto Bracket]

Recording mode: **iA P A S M**

Each time the shutter button is pressed, recordings are made of up to 7 pictures with different exposure settings based on the Exposure Compensation range.

Example of Auto Bracket recording when [Step] is set to [3·1/3] and [Sequence] is set to [0/-/+]

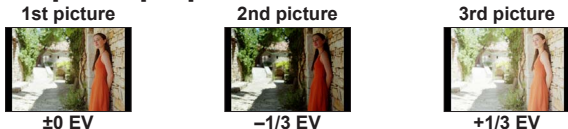


- 1 Press [ ] button (▼)
- 2 Press ◀▶ to select the Auto Bracket icon ([3·1/3], etc.) and press ▲
- 3 Press ◀▶ to select the compensation range and press [MENU/SET]
- 4 Focus on the subject and take a picture
  - If you press and hold the shutter button, a burst of pictures can be recorded.

## Automatically changing the aspect ratio while taking pictures [Aspect Bracket]

Recording mode: **iA P A S M**

When you press the shutter button once, the camera automatically takes four pictures with four types of aspect ratios (4:3, 3:2, 16:9, and 1:1). (The shutter sounds only once.)

- 1 Press [ ] button (▼)
- 2 Press ◀▶ to select the aspect bracket icon ([]) and press [MENU/SET]
- 3 Focus on the subject and take a picture

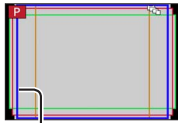

The range that can be recorded for each aspect ratio is displayed.

## Taking pictures with self-timer

Recording mode: **iA P A S M**

We recommend using a tripod. This is also effective for preventing jitter when pressing the shutter button, by setting the self-timer to 2 seconds.

- 1 Press [] button (▼)
- 2 Press ◀▶ to select the self-timer icon ([], etc.) and press ▲
- 3 Press ◀▶ to select the self-timer operation setting and press [MENU/SET]

	The shutter is activated after 10 seconds.
	The shutter is activated after 10 seconds and three pictures are taken at intervals of approximately 2 seconds.
	The shutter is activated after 2 seconds.

- 4 Press the shutter button halfway to focus, then press it fully to start recording
  - The focus and exposure are fixed when the shutter button is pressed halfway.
  - After the self-timer indicator flashes, recording will start.



## Recording panorama pictures

Recording mode: **iA P A S M**

You can easily record a panorama picture by panning the camera towards the direction you want to record, and automatically combining the burst of pictures taken during that time.

- 1 Press [] button (▼)
- 2 Press ◀▶ to select the panorama icon ([], etc.) and press ▲
- 3 Press ◀▶ to select the recording direction and then press [MENU/SET]

[] (Left → Right) / [] (Right → Left) / [] (Down → Up) / [] (Up → Down)

- You can also select the recording direction using [Panorama Direction] in the [Rec] menu.



## Applying a picture effect (Filter)

- 1 Press the [FILTER] button to select a picture effect (→44)

- Ⓐ Recording direction    Ⓑ Picture effects
- [Toy Effect], [Toy Pop], [Miniature Effect], and [Sunshine] are not available.

- 2 Press [MENU/SET]




### 4 Press the shutter button halfway to focus

### 5 Press the shutter button fully and pan the camera in a small circular motion to the recording direction to start recording

#### Taking pictures from left to right



Recording direction and progress status (approximate)

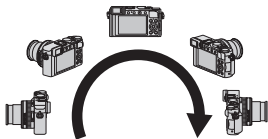

### 6 Press the shutter button fully again to end recording


 
- You can also end recording if you stop panning the camera while taking pictures.
  - Recording can also be ended by moving the camera to the end of the guide.
- Since the aperture value and shutter speed are automatically controlled during panorama picture recording, settings made by the aperture ring or shutter speed dial are disabled.




## Using Zoom

**Recording mode:** **[iA] [P] [A] [S] [M]**

You can adjust the area of a picture to be taken using zoom.

Zoom lever	Control ring
<p>① Move the zoom lever</p> 	<p>① Turn the control ring*</p> 
<p>T side: Telephoto, Enlarge the subject W side: Wide-angle, Capture a wider area</p>	<p>Clockwise: Telephoto, Enlarge the subject Counterclockwise: Wide-angle, Capture a wider area</p>

 \* You can perform zoom operation by assigning the [Zoom] setting to the control ring. (→26)



The illustration is an example of when using Optical Zoom, [i.Zoom], and [Digital Zoom] in [Program AE] Mode.

- Ⓐ Focus range
- Ⓑ Optical Zoom range
- Ⓒ i.Zoom range
- Ⓓ Digital Zoom range
- Ⓔ Current zoom position (Focal lengths the same as those of a 35 mm film camera)

### Optical Zoom

You can zoom in without degrading the picture quality.

**Maximum magnification: 3.1x**

### Extended optical zoom

This function works when picture sizes with [EX] have been selected in [Picture Size] (→45). Extended optical zoom allows you to zoom in using a higher zoom ratio than Optical Zoom, without degrading the picture quality.

**Maximum magnification: 6.2x (Including the optical zoom ratio. This maximum zoom ratio varies depending on the picture size.)**

### [i.Zoom]

**Recording mode:**

You can use the camera's Intelligent Resolution technology to increase the zoom ratio up to 2x higher than the original zoom ratio with limited deterioration of picture quality.

**MENU** → [Rec] / [Motion Picture] → [i.Zoom] → [ON] / [OFF]

### [Digital Zoom]

**Recording mode:**

Zoom 4x further than Optical/Extended optical zoom. Note that, with Digital Zoom, enlarging will decrease picture quality.

**MENU** → [Rec] / [Motion Picture] → [Digital Zoom] → [ON] / [OFF]

- When [Digital Zoom] is used simultaneously with [i.Zoom], you can only increase the zoom ratio up to 2x.

### [Step Zoom]

**Recording mode:**

You can set the zoom operation to allow easy visualization of the angle of view (picture angle) for the focal length of a regular fixed focal length lens (as with a 35 mm film camera). When using the [Step Zoom], you can operate the zoom ratio as easily as changing the camera lens.

#### ■ Using the zoom lever for [Step Zoom]

You can use the zoom lever for [Step Zoom] by setting [Zoom lever] to [Step Zoom] in the [Custom] menu.

## Taking pictures using the flash (supplied)

Recording mode: **iA P A S M**

This section describes how to take a picture using the flash (supplied).

### Attaching the flash

 
The hot shoe cover is already attached to the hot shoe at the time of purchase. Attach the flash to the hot shoe after removing the hot shoe cover.

#### Removing the hot shoe cover

- Make sure that the Camera [ON/OFF] switch is set to [OFF].


- 1 Remove the hot shoe cover by pulling it in the direction indicated by arrow ② while pressing it in the direction indicated by arrow ①

- Be sure to attach the hot shoe cover when the hot shoe is not in use.
- Keep the hot shoe cover safely after removing it so that you do not lose it. (→11)



#### Attaching the flash

- 1 Turn off the flash
  - 2 Firmly insert the flash into the hot shoe of this unit until it clicks
    - Set the Camera [ON/OFF] switch to [ON] and turn on the flash when you take a picture.
- Do not carry the camera holding by the flash when the flash is mounted on the camera.

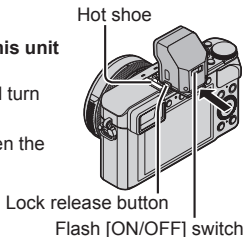

#### Removing the flash

- ① Turn off the camera and the flash
- ② Press and hold the lock release button and pull the flash in the direction indicated by the arrow to detach the flash
  - When detaching the flash, do so slowly and carefully.
  - Attach the hot shoe cover to the hot shoe of the camera.
  - Store the detached flash in its soft case.

**About [Forced Flash Off] ([🚫])**

[🚫] (Forced Flash Off) will appear on the recording screen and the flash will not fire in the following cases.

Communication light emission with a wireless flash is also disabled.

- When the flash is not attached to the camera
- When the flash [ON/OFF] switch is set to [OFF] even if the flash is attached
- When the flash cannot be used to take pictures, for example, when recording motion pictures

**Changing Flash Mode**

Recording mode:

**1 Set the menu**

**MENU** → [Rec] → [Flash] → [Flash Mode]

**2 Press ▲ ▼ to select the item and press [MENU/SET]**

: [Forced Flash On] : [Forced On/Red-Eye]*	Always takes pictures using the flash. • <b>Ideal for taking pictures with a backlight or when a subject is located under bright lighting such as a fluorescent light.</b>
: [Slow Sync.] : [Slow Sync./Red-Eye]*	Takes brighter pictures such as pictures of subjects against a nightscape by decreasing the shutter speed when firing a flash. • <b>Ideal for taking pictures of people against a nightscape.</b>
: [Forced Flash Off]	Always takes pictures without flash under all recording conditions. • <b>Ideal for taking pictures where the use of flash is prohibited.</b>

\* This is available only when [Wireless] in the [Flash] is set to [OFF] and [Firing Mode] is set to [TTL].

**Two flashes will be emitted. Do not move until after the second flash. Interval between flashes varies according to brightness of subject.**

- The red-eye reduction effect varies depending on the subject and is affected by factors such as distance from the subject and whether the subject is looking at the camera during the preliminary flash. In some cases, red-eye reduction may be negligible.

- [Flash] settings cannot be performed unless flash is attached properly. (→59)

# Wi-Fi® Function and NFC Function

## ■ About the Wi-Fi connection lamp

Wi-Fi connection lamp

Lit blue: When the Wi-Fi function is ON

Blinking blue: When sending data



## ■ About the [Wi-Fi] button

**You can operate the [Wi-Fi]/[Fn2] button in two ways, using it either as the [Wi-Fi] button or as a function button [Fn2]. It is set to [Wi-Fi] at the time of purchase. (→24)**

- Before a Wi-Fi connection is established, press and hold the [Wi-Fi] button to display the information (QR Code, SSID, password) you will need to connect the smartphone/tablet directly to the camera.
  - After the second time, the screen for the previously used connection method will appear.
  - The same screen can be displayed by selecting items from the menu as follows.

**[Wi-Fi] → [New Connection] → [Remote Shooting & View]**

- Before a Wi-Fi connection is established, press the [Wi-Fi] button to perform the following operations.

[New Connection]

[Select a destination from History]

[Select a destination from Favorite]

(This manual provides information on the process when [New Connection] is selected.)

- Pressing the [Wi-Fi] button during a Wi-Fi connection enables the following operation.

[Terminate the Connection]

[Change the Destination]\*1

[Change Settings for Sending Images]\*2

[Register the Current Destination to Favorite]\*1

[Network Address]

\*1 This item will not be displayed if you press ▼ to send pictures to WEB services while the pictures are displayed (→68).

\*2 This item will not be displayed if the destination for [Remote Shooting & View], [Playback on TV] or [Send Images Stored in the Camera] is set to [Printer].

- We strongly recommend that you enable encryption in the settings of your wireless access point to ensure information security.

- When downloading the app or sending images on a mobile network, high packet communication fees may be incurred depending on the details of your contract.
- Hereafter, this manual uses the term “smartphone” for both smartphones and tablets unless it is necessary to distinguish between them.

## Operating the camera by connecting it to a smartphone

### Installing the smartphone/tablet app “Panasonic Image App”

The “Image App” is an application provided by Panasonic that allows your smartphone to perform the following operations of a Wi-Fi-compatible LUMIX.


#### • Supported OS

Android™: Android 2.3.3 or later\*1

iOS: iOS 6.0 or later\*2

\*1 To connect this unit with [Wi-Fi Direct], Android OS 4.0 or above is required and the device must be compatible with Wi-Fi Direct™.

\*2 iPhone 3GS is not supported.

- 1 Connect the smartphone to a network
- 2 (Android) Select “Google Play™ Store”  
(iOS) Select “App Store<sup>SM</sup>”
- 3 Enter “Panasonic Image App” or “LUMIX” to search for the app
- 4 Select “Panasonic Image App”  and install it

- Use the latest version.
- Supported OS versions as of September 2014. Supported OS versions may be changed without prior notice.
- Some of the screens and information provided in this document may be different depending on the supported operating system and “Image App” version.
- The service may not be able to be used properly depending on the type of smartphone being used.
- For details about the operating procedure, etc., refer to [Help] in the “Image App” menu.
- For the latest information on the “Image App”, refer to the support site below.

<http://panasonic.jp/support/global/cs/dsc/>

(This site is available in English only.)

## Connecting to a smartphone

If you are using an iOS device  
(iPhone, iPod touch,  
iPad)

Use a QR code to make  
settings easily (→63)

If you are using an Android device

Is your device equipped with an NFC function?

Yes

No

Use the NFC function  
to connect (→64)

Read a QR code to  
connect (→64)

- You can also connect by manually entering the password. (→64, 65)

### If you are using an iOS device (iPhone, iPod touch, iPad)

#### ■ When reading a QR Code to connect

(Steps ② to ⑥ are not necessary when reconnecting.)

**(On the camera)**

① Press and hold the [Wi-Fi] button

**(On your smartphone)**

② Start "Image App"

③ Select [QR Code] → [OK]

④ Read the QR Code displayed on this unit with "Image App"

(When you press [MENU/SET] on the camera, the QR code is displayed in an enlarged size.)

⑤ Install the IMAGE APP profile



Select [Install]\*, then select [Install Now]\* → [Done]\*.

- The message is displayed in the Web browser.
- If a passcode is required to unlock the smartphone, you will have to input the passcode.

⑥ Press the home button to close the Web browser

⑦ Select [Wi-Fi]\* under [Settings]\* on the smartphone



⑧ Turn on [Wi-Fi]\* and select the SSID displayed on this unit

⑨ Return to the home screen and start "Image App"

\*The display may differ depending on the system language setting.

## ■ When connecting with SSID and password

### (On the camera)

- ① Press and hold the [Wi-Fi] button

### (On your smartphone)

- ② Select [Wi-Fi]\* under [Settings]\* on the smartphone
- ③ Turn on [Wi-Fi]\* and select the SSID displayed on this unit
- ④ Enter the password displayed on this unit (First time connecting only)
- ⑤ Return to the home screen and start "Image App"


\*The display may differ depending on the system language setting.

## If you are using an Android device

### ■ Connecting to a smartphone using NFC function

- This function can be used with NFC compatible devices with Android (2.3.3 or above). (Not available in certain models)

- ① Start "Image App" on your smartphone
- ② While the [NFC] is displayed on the connection screen of the "Image App", hold the smartphone close to the camera
- ③ Use ◀ to select [Yes] and press [MENU/SET]
- ④ Hold the smartphone close to this area of the unit again

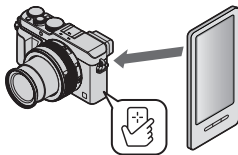

- From the next time and on, you can connect by performing steps ① and ②.
- See the operating instructions of your NFC-compatible smartphone for more information about smartphone operation and settings.

### ■ When reading a QR Code to connect

#### (On the camera)

- ① Press and hold the [Wi-Fi] button

#### (On your smartphone)

- ② Start "Image App"
- ③ Select [QR Code]
- ④ Read the QR Code displayed on this unit with "Image App"  
(When you press [MENU/SET] on the camera, the QR code is displayed in an enlarged size.)



## ■ When connecting with SSID and password

### (On the camera)

① Press and hold the [Wi-Fi] button

### (On your smartphone)

② Start “Image App”

③ Select [Wi-Fi]

④ Select the SSID displayed on this unit


⑤ Enter the password displayed on this unit (First time connecting only)

- If you check the item to display the password, you can confirm the password as you enter it.

## Closing the connection

### (On the camera)

① Press [Wi-Fi] button

(On the recording standby screen, you can also close the connection by pressing **MENU** →  [Setup] → [Wi-Fi] → [Wi-Fi Function] → [Yes].)

② Select [Terminate the Connection]

- A confirmation screen is displayed. Select [Yes] and press [MENU/SET].

### (On your smartphone)

③ Close “Image App”

#### <Using an iOS device>

From the “Image App” screen, press the home button on the smartphone to close the app

#### <Using an Android device>

From the “Image App” screen, press the back button on the smartphone twice to close the app

## Taking pictures via a smartphone (remote recording)

**1** Connect to a smartphone (→63)

**2** Select [] from “Image App”

**3** Take pictures


- The recorded images are saved in the camera.
- When using zoom, the camera could tilt when the lens barrel extends. Make sure to secure the camera in place with a tripod or by other means.
- Some settings are not available.

## Playing back pictures in the camera on a smartphone

### 1 Connect to a smartphone (→63)

### 2 Select [▶] from “Image App”

- The images captured by the camera are displayed on the smartphone.
- You can switch a picture to be displayed using the icon at the top left on the screen. Select [LUMIX] to display a picture saved in the camera.
- When the picture is touched, it is played back at a larger size.

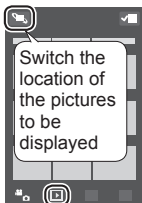

## Saving pictures in the camera to the smartphone

### 1 Connect to a smartphone (→63)

### 2 Select [▶] from “Image App”

### 3 Press and hold the picture and drag it to save it on the smartphone

- The picture is saved on the smartphone.
- Functions can be assigned to the top, bottom, left and right as you wish.



### ⊘ Not available in the following case:


- You cannot save still pictures in RAW format, AVCHD motion pictures, or MP4 motion pictures with [Rec Quality] of [4K].


## ■ Easily transferring pictures in the camera using the NFC function

This function can be used with NFC compatible devices with Android (2.3.3 or above). (Not available in certain models)


You can establish a Wi-Fi connection using the NFC function and easily transfer over Wi-Fi the picture on display simply by holding the smartphone close to the camera.

① Set [Touch Sharing] to [ON]

**MENU** →  [Setup] → [Wi-Fi] → [Wi-Fi Function] → [Touch Sharing] → [ON]

- ② On the camera, play back the picture you wish to transfer to a smartphone
- ③ Start "Image App" on the smartphone you are transferring the picture to
- ④ While the  is displayed on the connection screen of the "Image App", hold the smartphone close to the camera
  - It will be transferred to the smartphone.
  - If you are transferring multiple pictures, repeat steps ② and ④. (Multiple pictures cannot be transferred in one batch.)

## Sending pictures in the camera to social networking services

- 1 Connect to a smartphone (→63)
- 2 Select [] from "Image App"
- 3 Press and hold the picture and drag it to send it to the social networking service, etc.
  - The picture will be sent to the social networking service or other WEB services.
  - Functions can be assigned to the top, bottom, left and right as you wish.



## When sending images to WEB service

Through “LUMIX CLUB”, you can send still pictures and motion pictures to social networking services, etc.



When sending images to WEB services, the WEB service being used must be registered on the WEB service link settings with the “LUMIX CLUB”.

### ■ Refer to the “LUMIX CLUB” site for details

<http://lumixclub.panasonic.net/eng/c/>

Login by entering the login ID and password already registered with your device.

**MENU** → [Setup] → [Wi-Fi] → [Wi-Fi Setup] → [LUMIX CLUB] → [Set/Add Account] → [New account]

## Quickly sending pictures in the camera to WEB services

- 1 Display the picture (→38)
- 2 Use ◀▶ to select [Yes] after pressing ▼  
(When a group picture is being displayed, select [Upload(Wi-Fi)] → [Yes])

- The camera is connected to the previously used wireless access point and the pictures are sent to the WEB service.\*

\* When no connection history is available for the wireless access point, proceed to the connection method selection screen. Select the connection method and connect the camera to a wireless access point.



**Performing the operation for the first time**

After you select [Yes] in step 2 (→68), the WEB service selection screen appears.

- 1 Use ▲▼◀▶ to select WEB services and press [MENU/SET]
  - 2 Check the setting on the confirmation screen for the transmission setting and press [MENU/SET]
    - To change the transmission setting for the picture, press the [DISP.] button.
    - After the second time, the pictures are sent using the same WEB service and the same picture transmission settings as before.
- For details, refer to “Owner’s Manual for advanced features (PDF format)”.

## Sending pictures to a PC with the Wi-Fi function

Still pictures and motion pictures recorded by the camera can be sent to a PC.

### ■ Sending method, and pictures that can be sent

	JPEG	RAW	MP4	AVCHD*
[Send Images While Recording] (→70)	○	○	×	×
[Send Images Stored in the Camera] (→70)	○	○	○	○

\*Motion pictures recorded in [AVCHD] can be sent in file sizes of up to 4 GB. Files larger than 4 GB cannot be sent.

#### Preparations

- Turn the computer on.
- Prepare folders for receiving images on the PC before sending a picture to the PC.
- If the standard settings are changed for the workgroup on the connected PC, you must change settings in [PC Connection] on this unit.

### To create a folder that receives images

- Create a PC user account (account name (up to 254 characters) and password (up to 32 characters)) consisting of alphanumeric characters. An attempt to create a receive folder may fail if the account includes non-alphanumeric characters.

■ **When using “PHOTOfunSTUDIO”**

- ① Install “PHOTOfunSTUDIO” on the PC (→74)
  - “PHOTOfunSTUDIO” is not compatible with Mac.
- ② Create a folder that receives images with “PHOTOfunSTUDIO”
  - To create the folder automatically, select [Auto-create]. To specify a folder, create a new folder, or set a password to the folder, select [Create manually].
  - For details, refer to the operating instructions of “PHOTOfunSTUDIO” (PDF).

■ **When not using “PHOTOfunSTUDIO”**

(For Windows) Supported OS:

Windows 8.1 / Windows 8 / Windows 7 / Windows Vista

Example: Windows 7

- ① Select a folder you intend to use for receiving, then right-click
- ② Select [Properties], then enable sharing of the folder
  - For details, refer to the operating instructions of your PC or Help on the operating system.

(For Mac) Supported OS: OS X v10.5 to v10.9

Example: OS X v10.8

- ① Select a folder you intend to use for receiving, then click on the items in the following order ([File] → [Get Info])
- ② Enable sharing of the folder
  - For details, refer to the operating instructions of your PC or Help on the operating system.

## Sending pictures to a PC

### 1 Set the menu

**Wi-Fi** → [New Connection] → [Send Images While Recording] /  
[Send Images Stored in the Camera] → [PC]

### 2 Select [Via Network] or [Direct] to connect

**[Via Network]:** Connects through a wireless access point.

**[Direct]:** Your equipment connects directly to the camera.

(Example) Connecting this unit to a wireless access point using [WPS (Push-Button)] in the [Via Network] menu

- ① Connect your PC to a wireless access point
- ② Connect this unit to a wireless access point  
Use ▲▼ on this unit to select [Via Network] → [WPS (Push-Button)]
- ③ Hold down the wireless access point WPS button until it switches to WPS Mode
  - For details, refer to “Owner’s Manual for advanced features (PDF format)”.

---

**3 Select the PC you want to connect to**

- If the PC you want to connect to is not displayed, select [Manual Input], then enter the computer name (for Mac, enter the NetBIOS name).


**4 Select the folder you want to send to**

- When the connection is established, the confirmation screen for the transmission setting is displayed. Check the setting and press [MENU/SET]. To change the send setting, press [DISP.] button.

**5 Perform the camera operation (specific to your purpose)**

---

**■ [Send Images While Recording]****Take still pictures**

- To change the setting or disconnect, press [Wi-Fi] button. (→61)  
You cannot change the settings while sending still pictures. Wait until sending is complete.  
(You can also close the connection by pressing **MENU** →  [Setup] → [Wi-Fi] → [Wi-Fi Function] → [Yes].)

---

**■ [Send Images Stored in the Camera]****Select [Single Select] or [Multi Select] to select the picture that you want to send**

- A confirmation screen is displayed. If you select [Yes], the operation is executed.
  - To change the send setting, press [DISP.] button.
  - To close the connection, select [Exit].
- 

- Folders sorted by the sent date are created in the specified folder, and pictures are saved in those folders.
- If the screen for a user account and password entry appears, enter the one you set on your PC.
- If the computer name (for Mac, the NetBIOS name) contains spaces, etc., the name may not be properly recognized. If you cannot connect, we recommend changing the computer name (for Mac, the NetBIOS name) to a combination of 15 or less alphanumeric characters only.

## Viewing on TV screen

You can view pictures on a TV screen by connecting your camera to your TV with the HDMI micro cable or AV cable (DMW-AVC1: optional).

### Preparation


Turn off both camera and TV.

## 1 Connect camera to TV

Check the plug direction and insert it straight in. (If the cable is inserted in the wrong direction, the plug could become deformed and cause faulty operation) Also, do not insert into the wrong socket. Doing so may cause damage to this unit.

### ■ To connect with an HDMI micro cable

Align the marks, and insert.

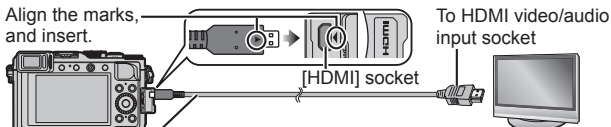


HDMI micro cable

- Use a “High Speed HDMI micro cable” with the HDMI logo. Cables that do not comply with the HDMI standards will not work.  
“High Speed HDMI micro cable” (Type D-Type A plug, up to 2 m (6.6 feet) long)
- To play back 24p motion pictures, set [HDMI Mode] to [AUTO]. Otherwise, the picture is not output at 24 frames per second.
- Audio output is stereo.

### ■ To connect with an AV cable (optional)

Align the marks, and insert.

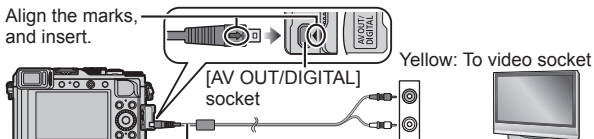

AV cable

- Always use a genuine Panasonic AV cable (DMW-AVC1: optional).

Yellow: To video socket

White: To audio socket\*  
\* Monaural audio output.

## 2 Turn on the TV and switch the TV input source to match the connection socket

## 3 Turn on the camera and press the playback button

- Read the operating instructions for the TV.



# Storing recorded still pictures and motion pictures on your PC

## About supplied software

The supplied DVD contains the following software.

Install the software on your computer before using.

For details about operating environment and usage, please read "Owner's Manual for advanced features" (PDF format) or the manuals for each software.

### PHOTOfunSTUDIO 9.6 PE

You can capture still pictures or motion pictures to your PC, or organize captured pictures by categorizing by recording date, model name of the digital camera used to record, etc. You can also correct still pictures, edit motion pictures, or write to DVD. You can read the Operating Instructions (PDF format) after launching the software.

- Supported OS: Windows 8.1 / 8 / 7 / Vista  
(To edit 4K motion pictures, you need the 64-bit versions of Windows 8.1, Windows 8, or Windows 7.)

### SILKYPIX Developer Studio 4.2 SE

This software develops and edits RAW file pictures. Edited pictures can be saved in a file format such as JPEG or TIFF that can be displayed on a PC, etc.

- Supported OS: Windows 8.1 / 8 / 7 / Vista  
Mac OS X v10.5 / v10.6 / v10.7 / v10.8 / v10.9
- For details on how to use the SILKYPIX Developer Studio, refer to the "Help" or the Ichikawa Soft Laboratory's support website:  
<http://www.isl.co.jp/SILKYPIX/english/p/support/>

### LoiLoScope 30 day full trial version

LoiLoScope is a video editing software that draws out the full power of your PC. Creating videos is as easy as organizing cards on top of a desk. Use your music, picture and video files to create videos to share with your friends and family by burning it to a DVD, uploading it to websites, or simply share your videos with your friends via e-mail.

- This will only install a shortcut to the trial version download site.
- Supported OS: Windows 8.1 / 8 / 7 / Vista
- **For more information on how to use LoiLoScope, read the LoiLoScope manual available for download at the link below.**  
**Manual URL: <http://loilo.tv/product/20>**

## Installing supplied software

The software compatible with your PC will be installed.

### Preparations

- Check your PC's specifications and operating environment for each software.
- Before inserting the DVD (supplied), close all running applications.

### 1 Insert the DVD with the supplied software

- If the automatic playback screen is displayed, you can display the menu by selecting and executing [Launcher.exe].
- In Windows 8.1/Windows 8, you can display the menu by clicking a message that is displayed after inserting the DVD and then selecting and executing [Launcher.exe].
- You can also display the menu by double-clicking [SFMXXXX] in [Computer]. (The "XXXX" portion differs depending on the model.)

### 2 Click [Applications]

### 3 Click [Recommended Installation]

- Continue the installation procedure following the instructions displayed on the screen.
- If you are using a Mac, you can manually install SILKYPIX.
  - ① Insert the DVD with the supplied software
  - ② Double-click the application folder on the DVD
  - ③ Double-click the folder that automatically appears
  - ④ Double-click the icon in the folder



### Not available in the following case:

- PHOTOfunSTUDIO / LoiLoScope are not compatible with Mac.


## Copying still pictures and motion pictures

### Preparations

- Install "PHOTOfunSTUDIO" on your computer before starting the copying procedure. (→74)
- Turn on the camera and computer.

### 1 Connect camera to computer

- Check the plug direction and insert it straight in. (If the cable is inserted in the wrong direction, the plug could become deformed and cause faulty operation) Also, do not insert into the wrong socket. Doing so may cause damage to this unit.
- Do not use any other USB connection cables except the supplied one or a genuine Panasonic USB connection cable (DMW-USBC1: optional). Using cables other than the above may cause a malfunction.

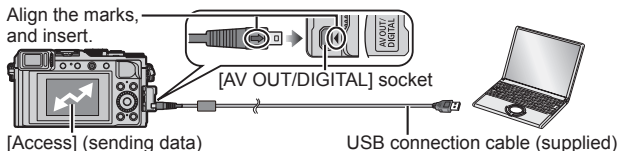

- Do not disconnect the USB connection cable (supplied) while [Access] is displayed.

### 2 Use ▲ ▼ to select [PC] and press [MENU/SET]

- Setting the [USB Mode] to [PC] removes the need to make the setting each time the camera is connected to the computer.

### 3 Use "PHOTOfunSTUDIO" to copy pictures to your computer

- Do not delete or move copied files and folders using Windows Explorer or other browsers. Otherwise, you will not be able to play back or edit the files using "PHOTOfunSTUDIO".


### ■ Copying to your computer without using "PHOTOfunSTUDIO"

You can save pictures to use on your computer by dragging and dropping folders and files into separate folders on your computer.

# List of monitor/viewfinder displays

- The following images are examples of when the display screen is set to [ ] (monitor style) in the monitor.

## In recording

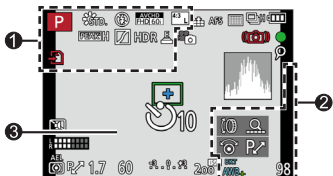


<b>1</b>		Recording Mode (→28)
		Motion picture recording mode (→39)
		Motion picture recording mode when [4K PHOTO] is set to [ON] (→42)
	C1	Custom Set (→36)
		Panorama picture recording mode (→55)
		[Photo Style]
		Flash Mode (→60)
		Flash
		[Rec Format]/ [Rec Quality] (→40)
		Aspect Ratio/ [Picture Size] (→45)
		Card (displayed only during recording)
		Panorama Direction (→55)

EXPS	Types of picture effects (Filter) (→44)
	Picture effect (Filter) adjustment display (→44)
XXmXXs	Elapsed recording time*1 (→39)
	Simultaneous recording indicator
LVF/MON AUTO	Automatic switching between viewfinder and monitor (→27)
	[Peaking] (→48)
	[Highlight Shadow]
HDR	[HDR]
	[Multi Exp.]
	Electronic shutter (→51)

<b>2</b>		[Dial Guide]
		White Balance Bracket White Balance Fine Adjustment
		White Balance (→44)
	98	Number of recordable pictures *2 (→20)
	R8m30s	Available recording time*1*2 (→20)

<b>3</b>	Exposure meter (→32)
	Zoom

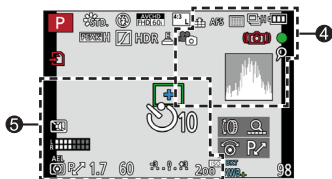

4

	<b>RAW</b> [Quality] (→46)
<b>AFS AFF AFC MF</b>	<b>Focus Mode</b>
	<b>AF Mode</b> (→47)
	<b>[Face Recog.]</b>
<b>AFL</b>	<b>AF Lock</b> (→49)
	<b>Burst</b> (→53)
	<b>[Auto Bracket]</b> (→54)
	<b>[Aspect Bracket]</b> (→54)
	<b>Self-timer</b> (→55)
	<b>Panorama Direction</b> (→55)
	<b>Remaining battery</b> (→18)
	<b>Picture Mode (Still picture priorities)</b>
	<b>Macro recording</b> (→48)
	<b>Stabilizer</b>
	<b>Jitter alert</b>
	<b>Recording state (Flashes red./Focus Lights green.)</b> (→28)

	<b>Focus (Under low illumination)</b>
	<b>Wi-Fi connection status</b>
	<b>[4K PHOTO] marker</b> (→43)
	<b>[Time Lapse Shot]</b>
	<b>[Stop Motion Animation]</b>
	<b>Histogram</b>

5

	<b>AF area</b>
	<b>Spot metering target</b> (→51)
	<b>Self-timer*</b> (→55)
	<b>[Silent Mode]</b>
	<b>[Mic Level Disp.]</b>
	<b>AE Lock</b> (→49)
	<b>[Metering Mode]</b> (→51)
	<b>Program Shift</b> (→32)
	<b>Aperture value</b> (→31)
	<b>Shutter speed</b> (→31)
	<b>Exposure compensation value</b> (→50)
	<b>Manual Exposure Assist</b>
	<b>ISO Sensitivity</b> (→50)

	<b>Destination settings*</b> <sup>3</sup>
	<b>Travel elapsed days*</b> <sup>3</sup>
	<b>Name*</b> <sup>3</sup>
	<b>Age in years/months*</b> <sup>3</sup>
	<b>Current date/time*</b> <sup>3</sup>
	<b>World time*</b> <sup>3</sup>


\*1 [m] and [s] indicate “minute” and “second”.

\*2 It is possible to switch the display between the number of recordable pictures and available recording time with the [Remaining Disp.] setting in the [Custom] menu.

\*3 This is displayed for about 5 seconds when the camera is turned on, after setting the clock and after switching from Playback Mode to Recording Mode.

\*4 This is displayed during countdown.

## ■ On-monitor recording information

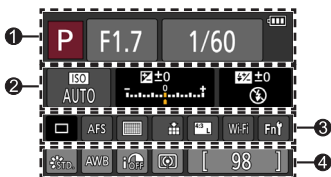

<b>1</b>		<b>Recording Mode</b> (→28)
		<b>Program Shift</b> (→32)
		<b>Motion picture recording mode</b> (→39)
		<b>Motion picture recording mode when [4K PHOTO] is set to [ON]</b> (→42)
		<b>Custom Set</b> (→36)
		<b>Panorama picture recording mode</b> (→55)
	<b>F1.7</b>	<b>Aperture value</b> (→31)
	<b>1/60</b>	<b>Shutter speed</b> (→31)
	<b>TIME</b>	<b>T (time) recording</b> (→35)
		<b>Remaining battery</b> (→18)
		<b>Card (displayed only during motion picture recording)</b>

<b>2</b>		<b>ISO Sensitivity</b> (→50)
		<b>Exposure compensation value</b> (→50)
		<b>Manual Exposure Assist</b>
		<b>Flash Mode</b> (→60)
		<b>Flash</b>

<b>3</b>		<b>Single</b> (→52)
		<b>Burst</b> (→53)
		<b>[Auto Bracket]</b> (→54)
		<b>[Aspect Bracket]</b> (→54)
		<b>Self-timer</b> (→55)
		<b>Panorama Direction</b> (→55)
	<b>AFS AFF AFC MF</b>	<b>Focus Mode</b>
		<b>AF Mode</b> (→47)
		<b>[Quality]</b> (→46)
		<b>[Rec Format]/[Rec Quality]</b> (→40)
		<b>Aspect Ratio/[Picture Size]</b> (→45)
	<b>Wi-Fi</b>	<b>Wi-Fi</b> (→61)
	<b>Fn</b>	<b>Function button setting</b> (→24)

<b>4</b>		<b>[Photo Style]</b>
		<b>White Balance</b> (→44)
		<b>[i.Dynamic]</b>
		<b>[Metering Mode]</b> (→51)
	<b>98</b>	<b>Number of recordable pictures</b> (→20)
	<b>R8m30s</b>	<b>Available recording time*</b> (→20)

\* [m] and [s] indicate “minute” and “second”.

## Message displays

The following explains the meaning of major messages displayed on the monitor or viewfinder, and how to respond to them.

- Further information is provided in the “Owner’s Manual for advanced features (PDF format)”. Check it together with the information in this section.

### **[Some pictures cannot be deleted] [This picture cannot be deleted]**

- Non-DCF pictures cannot be deleted.  
→ Save needed data on a computer or other device, and then use [Format] on the camera. (→20)

### **[Memory Card Error] [This memory card cannot be used]**

- Not compatible with the camera. Use a compatible card.

### **[Insert SD card again] [Try another card]**

- Access to card has failed.  
→ Insert card again.
- Try with a different card.

### **[Read Error] / [Write Error] [Please check the card]**

- Data read has failed.  
→ Check whether card has been inserted correctly.
- Data write has failed.  
→ Turn off the camera and remove the card. Reinsert the card and turn the camera on again.
- Card may possibly be damaged.  
→ Try with a different card.

### **[This battery cannot be used]**

- Use a genuine Panasonic battery. (DMW-BLG10PP)
- Battery cannot be recognized as terminal is dirty.  
→ Wipe any dirt away from the battery terminal.

### **[Failed to connect wireless access point] / [Connection failed] / [No destination found]**

- Check following regarding the wireless access point.
  - The wireless access point information set on this unit is wrong. Check the authentication type, encryption type, and encryption key.
  - Power of the wireless access point is not turned on.
  - Setting of the wireless access point is not supported by this unit.
- Check the network setting of the destination.
- Radio waves from other devices may block the connection to a wireless access point.
  - Check other devices that are connected to the wireless access point and devices that use the 2.4 GHz band.

### **[No picture to send]**

- This is displayed when there is no image to transmit due to the restriction of the destination. Check the file type of the image to transmit.



## Menu list

- The [Photo Style], [AFS/AFF/AFC], [Metering Mode], [Highlight Shadow], [i.Dynamic], [i.Resolution], [i.Zoom], and [Digital Zoom] menu items are common for both [Rec] and [Motion Picture] menus. If a setting in one menu is changed, the setting with the same name in other menu will also be changed automatically.

### [Rec]

[Photo Style]	You can select the effects according to the concept of the picture that you want to create. Adjusts the colors of effects and picture quality.
[Picture Size]	Set the number of pixels. (→45)
[Quality]	Set the compression rate used for storing pictures. (→46)
[AFS/AFF/AFC]	Select how the focus is adjusted.
[Metering Mode]	Type of optical measurement to measure brightness can be changed. (→51)
[Burst Rate]	Sets the burst speed to be used for burst recording. (→53)
[Auto Bracket]	Sets the Single/Burst setting, compensation range, and recording sequence of Auto Bracket. (→54)
[Self Timer]	Sets the time before recording starts when you take a picture using the self-timer. (→55)
[Highlight Shadow]	You can adjust the highlights and shadows in a picture while confirming the brightness of these areas on the screen.
[i.Dynamic]	Correcting contrast and exposure.
[i.Resolution]	Records still pictures with sharper outlines and the impression of high-resolution.
[Simultaneous record w/o filter]	Sets whether to record pictures with Filter and those without Filter at the same time.
[iHandheld Night Shot]	Combines nightscape pictures recorded using high-speed burst recording into a single picture. (→30)
[iHDR]	When there is, for example, strong contrast between the background and the subject, [iHDR] records multiple still pictures with differing exposures and combines them to create a single still picture rich in gradation. (→30)

<b>[HDR]</b>	The camera can combine 3 still pictures taken with different exposures into a single properly exposed picture with rich gradation.
<b>[Multi Exp.]</b>	You can create an effect similar to the operation of up to four times of exposure on a single picture.
<b>[Time Lapse Shot]</b>	You can preset the recording start time, recording interval, and the number of pictures to be taken when automatically recording time lapse motion pictures of subjects such as animals and plants.
<b>[Stop Motion Animation]</b>	You can stitch still pictures to create stop motion animation.
<b>[Panorama Direction]</b>	You can set the recording direction to be used for recording panorama pictures. (→55)
<b>[Shutter Type]</b>	You can take pictures using two types of shutter modes: the mechanical shutter and electronic shutter. (→51)
<b>[Flash]</b>	Performs flash settings in accordance with the recording conditions. (→60)
<b>[Red-Eye Removal]</b>	Automatically detects red-eye and corrects still picture data when recording with flash.
<b>[ISO Limit Set]</b>	Sets the optimal ISO Sensitivity using the selected value as the upper limit of ISO Sensitivity when [Sensitivity] is set to [AUTO] or [E <sub>ISO</sub> ].
<b>[ISO Increments]</b>	Changes the ISO Sensitivity settings every 1/3 EV or 1 EV steps.
<b>[Extended ISO]</b>	You can extend the numeric values that can be set for ISO Sensitivity.
<b>[Long Shtr NR]</b>	Eliminates the noise made when taking pictures at a slower shutter speed.
<b>[i.Zoom]</b>	Allows increasing the zoom ratio while suppressing the deterioration of picture quality. (→58)
<b>[Digital Zoom]</b>	Improves the telephoto effect of your pictures. Note that enlarging will decrease picture quality. (→58)
<b>[Color Space]</b>	You can set the method for reproducing the colors to correctly display the recorded pictures on the screens of a PC or printer, etc.
<b>[Stabilizer]</b>	Automatically detects jitter during recording and makes corrections.
<b>[Face Recog.]</b>	Recognizes a registered face and automatically adjusts the focus and exposure for this face with higher priority.

<b>[Profile Setup]</b>	You can set a name or birthday of a baby or pet before taking a picture to record the name or age in months/ years in the picture.
------------------------	--

### [Motion Picture]


<b>[4K PHOTO]</b>	You can set the motion picture mode used for creating a high-resolution still picture by capturing a single frame from a 4K motion picture. (→42)
<b>[Rec Format]</b>	Sets the file format (AVCHD, MP4) of the motion picture to be recorded. (→40)
<b>[Rec Quality]</b>	Sets the picture quality of the motion picture (size, frame rate, etc.) to be recorded. (→40)
<b>[Picture Mode]</b>	Sets the recording method of still pictures to be taken while recording motion pictures.
<b>[Continuous AF]</b>	Constantly adjusts the focus on a subject that is in focus.
<b>[Mic Level Disp.]</b>	You can set whether or not to display the microphone level on the recording screen.
<b>[Mic Level Adj.]</b>	You can adjust the audio input level in 4 steps.
<b>[Wind Cut]</b>	If you hear wind noise during an audio recording, you can use [Wind Cut] to effectively reduce the wind noise.

### [Custom]

<b>[Utilize Custom Set feature]</b>	Calls up the setting registered using [Cust.Set Mem.].
<b>[Cust.Set Mem.]</b>	Registers the current camera settings as a custom setting. (→36)
<b>[Silent Mode]</b>	Disabling the beeps and flash at the same time.
<b>[AF/AE Lock]</b>	Performs the lock setting of the focus and/or exposure used for executing AF/AE lock.
<b>[AF/AE Lock Hold]</b>	Sets the [AF/AE LOCK] button operation used for recording by fixing the focus and/or exposure.
<b>[Shutter AF]</b>	Enables focus adjustment automatically when the shutter button is pressed halfway.
<b>[Half Press Release]</b>	Enables shutter release when the shutter button is pressed halfway.

<b>[Quick AF]</b>	Enables faster focusing when the shutter button is pressed.
<b>[Eye Sensor AF]</b>	Automatically adjusts the focus when the eye sensor is activated.
<b>[Pinpoint AF Time]</b>	Sets the time for displaying the enlarged screen if the shutter button is pressed halfway when Auto Focus mode is set to <b>[+]</b> .
<b>[Pinpoint AF Display]</b>	Sets whether the assist screen is to be enlarged on a part of the screen or the entire screen when Auto Focus mode is set to <b>[+]</b> .
<b>[AF Assist Lamp]</b>	Illuminates the AF Assist Lamp when the shutter button is pressed halfway when it is too dark to facilitate focusing.
<b>[Direct Focus Area]</b>	Moves the AF area or MF assist using the cursor button while recording.
<b>[Focus/Release Priority]</b>	Disables recording when a subject is out of focus.
<b>[AF+MF]</b>	Allows manual adjustment of the focus after AF is performed.
<b>[MF Assist]</b>	Sets the display method for MF Assist (enlarged screen). (→48)
<b>[MF Assist Display]</b>	Sets whether the Assist screen (enlarged screen) is to be enlarged on part of the screen or over the entire screen.
<b>[MF Guide]</b>	Displays the MF guide used to check the direction of focus on the screen when the focus is manually adjusted. (→48)
<b>[Peaking]</b>	When you perform Manual Focus operation, this function automatically adds color to the portions of the image that are in focus. (→48)
<b>[Histogram]</b>	Sets whether to display the histogram.
<b>[Guide Line]</b>	Sets the pattern of the guidelines to be displayed while recording.
<b>[Highlight]</b>	Flashes the overexposed areas in black and white during [Auto Review] or playback.
<b>[Zebra Pattern]</b>	Displays the area, where overexposure may occur, using a zebra pattern.
<b>[Monochrome Live View]</b>	You can display the recording screen in black and white.

<b>[Constant Preview (M Mode)]</b>	Allows the effects of the aperture value and shutter speed on the recording screen to be checked when [Manual Exposure] Mode is set.
<b>[Expo.Meter]</b>	Sets whether to display the exposure meter. (→32)
<b>[Dial Guide]</b>	Sets whether to display the operation guide.
<b>[LVF Disp.Style]</b>	Sets the viewfinder display method. (→37)
<b>[Monitor Disp. Style]</b>	Switching the monitor display method. (→37)
<b>[Monitor Info. Disp.]</b>	Switches the recording information screen of the monitor.
<b>[Rec Area]</b>	Switching the angle of view setting used for recording still pictures and motion pictures.
<b>[Remaining Disp.]</b>	Switching the display between the number of recordable pictures that you can take and the available recording time.
<b>[Auto Review]</b>	Set the time to display the pictures you have taken after taking still pictures.
<b>[Fn Button Set]</b>	You can assign frequently-used functions to particular buttons. (→24)
<b>[Zoom lever]</b>	Switches the zoom lever operation setting.
<b>[Control Ring]</b>	You can assign frequently-used functions to control ring. (→26)
<b>[Zoom Resume]</b>	Retaining the zoom position when the camera is turned off.
<b>[Q.MENU]</b>	Switches the method for setting Quick Menu items.
<b>[iA Button Switch]</b>	Changes the operation method of the [iA] button used for switching to [Intelligent Auto] Mode.
<b>[Video Button]</b>	Enabling/disabling the motion picture button.
<b>[Eye Sensor]</b>	Setting the sensitivity of the eye sensor or setting to switch the display between the viewfinder and monitor.

 [Setup]	
[Clock Set]	Set time, date, and display format. (→22)
[World Time]	Set the local time at travel destination.
[Travel Date]	If you set your travel schedule and record pictures, the day of your trip on which the picture was taken will be recorded.
[Wi-Fi]	Configure the settings required for the Wi-Fi function.
[Beep]	Sets the beep sounds or shutter sounds.
[Live View Mode]	Sets the display speed and picture quality of the screen (Live View screen) when recording pictures.
[Monitor Display]/ [Viewfinder]	Adjust brightness and color of the monitor or viewfinder.
[Monitor Luminance]	You can adjust the brightness of the monitor depending on how bright it is around the camera.
[Sleep Mode]	The camera automatically turns off if no operation is performed for a preset period of time.
[USB Mode]	Select communication method for when connecting camera to a computer or printer with USB connection cable (supplied).
[TV Connection]	Change the settings to be used when the camera is connected to a TV or other device.
[Menu Resume]	Save the last operated menu position.
[Menu Background]	Set the background color for the menu screen.
[Menu Information]	Explanations of the menu items and settings are displayed on the menu screen.
[Language]	Set the language displayed on the screen.
[Version Disp.]	Check the firmware version of the camera or supplied flash (when the flash is attached).
[Self Timer Auto Off]	The self-timer is canceled if the unit is turned off.
[No.Reset]	Reset picture file numbers.
[Reset]	Reset to the default settings.
[Reset Wi-Fi Settings]	Return [Wi-Fi] settings to default settings.
[Format]	Format (initialize) a memory card. (→20)

▶ [Playback]	
[Slide Show]	Automatically play pictures in order.
[Playback Mode]	You can narrow down the pictures to be displayed with set filters, such as categories or favorite pictures.
[Location Logging]	You can write location information (longitude/latitude) sent from the smartphone to the pictures.
[RAW Processing]	You can use the camera to develop still pictures that were recorded in RAW format. The created still pictures are saved in JPEG format.
[Title Edit]	Allows characters (comments) to be entered on a recorded picture.
[Text Stamp]	You can stamp the recording date and time, names, travel destination, travel dates, etc. on the recorded still pictures.
[Video Divide]	A single motion picture can be split into 2 parts.
[Time Lapse Video]	You can create a motion picture from the pictures in a group that was recorded using [Time Lapse Shot].
[Stop Motion Video]	You can create a motion picture from the pictures in a group that was recorded using [Stop Motion Animation].
[Resize]	Picture size can be reduced.
[Cropping]	Enlarge your still pictures and crop unwanted areas.
[Rotate]	Manually rotate pictures by 90°.
[Rotate Disp.]	Automatically rotate portrait pictures.
[Favorite]	Allows a label to be assigned to a picture with a mark to set it as your favorite picture.
[Print Set]	Sets the pictures and the number of pictures to be printed.
[Protect]	Set protection to prevent deletion of pictures by mistake.
[Face Rec Edit]	Edit or delete the recognition information for pictures with mistaken Face Recognition.
[Picture Sort]	You can set the display sequence used for playing back pictures on this unit.
[Delete Confirmation]	You can set the Yes/No options that you want to select first on the confirmation screen when you delete a picture from either [Yes] or [No].

## Q&A Troubleshooting

- Performing [Reset] in the [Setup] menu may resolve the issue.
- Further information is provided in the “Owner’s Manual for advanced features (PDF format)”. Check it together with the information in this section.

### Focus not aligned correctly.

- Subject outside of focus range.
- Caused by jitter or subject movement.
- [Focus/Release Priority] is set to [RELEASE].
- [Shutter AF] is set to [OFF].
- AF Lock (→49) is set inappropriately.

### Recorded pictures are blurred. The stabilizer function ineffective.

- Shutter speed is slower in dark locations and the stabilizer function is less effective.  
→ Hold camera firmly with both hands, keeping arms close to body.
- Use a tripod and the self-timer when using a slower shutter speed (→55).

### Striping or flicker may appear under lighting such as fluorescent lighting and LED lighting fixture. The subject appears distorted.

- This is characteristic of MOS sensors which serve as the camera’s pickup sensors. This is not a malfunction. If the subject passes quickly in front of the lens, it will appear slightly distorted.
- If you are taking still pictures using [ESHTR], the striping may be reduced by setting a slower shutter speed. (→33)

### No flash emitted.

The flash becomes unavailable in the following cases.

- When the picture effect (Filter) is set
- When camera is set to use [Auto Bracket], White Balance Bracket, or [Aspect Bracket]
- When using [Burst]
- During panorama picture recording
- When [HDR] is set to [ON]
- When the electronic shutter is used (→51)  
→ Set [Shutter Type] to [AUTO] or [MSHTR].
- When [Silent Mode] is set to [ON]  
→ Set [Silent Mode] to [OFF].



**Cannot view pictures. There are no recorded pictures.**

- A card is not inserted in the camera.
- There is no picture on the card to play back.
- Has the file name of the picture been changed on a computer? If so, it cannot be played back on the camera.
- [Playback Mode] is set to other than [Normal Play].  
→ Set [Playback Mode] to [Normal Play].

**Folder/file number displayed as [-]. Picture is black.**

- Picture edited on computer or taken with different device.

**Motion pictures taken with this camera cannot be played in other cameras.**

- Even if a device is compatible with AVCHD and MP4, the motion pictures that were recorded on this unit may have bad picture quality or sound quality upon playback, or may be unable to be played back. Also, the recording information may not be displayed correctly.

**It cannot connect to the wireless LAN. Radio waves get disconnected.**

- Use within the communication range of the wireless LAN network.
- When the battery indicator is flashing red, the connection with other equipment may not start or the connection may be disrupted. (A message such as [Communication error] is displayed.)

**Wireless access point is not displayed. Or it cannot be connected.**

- The camera may not display or connect to a wireless access point depending on the radio wave condition.  
→ Perform the connection closer to the wireless access point.  
→ Remove the obstacles between this unit and the wireless access point.  
→ Change the direction of this unit.
- Check if the wireless access point to connect is in operating state.
- Connection methods differ depending on the wireless access point.  
→ Refer to the operating instructions of the wireless access point.

**I am having a problem connecting to my Windows 8 PC. The user name and password are not recognized.**

- Depending on the OS version, on Windows 8, for example, there are two types of user account (local account/Microsoft account).  
→ Be sure to set the local account and use the user name and password for the local account.

**The Wi-Fi connection is not recognizing my PC.**

- By default, the Wi-Fi connection uses the default workgroup name of "WORKGROUP". If the name of the workgroup has been changed, it will not be recognized.
  - Select [PC Connection] then [Change Workgroup Name] in the [Wi-Fi Setup] to change the workgroup name to match that of your PC.

**Transmission of the image fails midway. There is an image that could not be transmitted.**

- Image cannot be transmitted when the battery indicator is flashing red.
- Is the size of the image too large?
  - Divide the motion picture using [Video Divide].
  - Reduce the image size at [Size], and then send.
- File format of the picture that can be sent differs depending on the destination.

**Sometimes focus adjustment with Auto Focus mode is difficult while recording 4K motion pictures.**

- This may occur when taking a picture by reducing the Auto Focus speed in order to adjust the focus at high precision. This is not a malfunction.

# Specifications

## Digital Camera: Information for your safety

<b>Power Source</b>	DC 8.4 V
<b>Power</b>	2.1 W (When recording with monitor)
<b>Consumption</b>	2.3 W (When recording with viewfinder) 1.5 W (When playing back with monitor) 1.6 W (When playing back with viewfinder)
<b>Camera effective pixels</b>	12,800,000 pixels
<b>Image sensor</b>	4/3" MOS sensor, total pixel number 16,840,000 pixels Primary color filter
<b>Lens</b>	Optical 3.1x zoom f=10.9 mm to 34 mm (35 mm film camera equivalent: 24 mm to 75 mm) / Max. Wide: F1.7 to F16.0 Max. Tele: F2.8 to F16.0 Filter diameter $\Phi$ 43 mm
<b>Image Stabilizer</b>	Optical method
<b>Focus range</b>	AF: 50 cm (1.6 feet) (Max. Wide) / 50 cm (1.6 feet) (Max. Tele) to $\infty$ AF Macro / MF / Intelligent Auto / Motion picture: 3 cm (0.098 feet) (Max. Wide) / 30 cm (0.98 feet) (Max. Tele) to $\infty$
<b>Shutter system</b>	Electronic shutter + Mechanical shutter
<b>Minimum Illumination</b>	Approx. 5 lx (when i-Low light is used, the shutter speed is 1/30th of a second)
<b>Shutter speed</b>	Still picture: 60 seconds to 1/4000th of a second (When the mechanical shutter is used) 1 second to 1/16000th of a second (When the electronic shutter is used) T (Time) (Max. approx. 120 seconds)
<b>Exposure</b>	Program AE (P) / Aperture-priority AE (A) / Shutter-priority AE (S) / Manual exposure (M) Exposure Compensation (1/3 EV steps, -3 EV to +3 EV)

<b>Monitor</b>	3.0" TFT LCD (3:2) (Approx. 921,600 dots) (field of view ratio about 100%)
<b>Viewfinder</b>	0.38" Color LCD (16:9) (Approx. 2,760,000 dots equivalent) (field of view ratio about 100%) (with diopter adjustment -4.0 to +3.0 diopter)
<b>Flash mode</b>	Auto, Auto/Red-Eye Reduction, Forced ON, Forced ON/Red-Eye Reduction, Slow Sync., Slow Sync./Red-Eye Reduction, Forced OFF
<b>Microphones</b>	Stereo
<b>Speaker</b>	Monaural
<b>Recording media</b>	SD Memory Card / SDHC Memory Card* / SDXC Memory Card* * UHS-I UHS Speed Class 3
<b>Recording file format</b>	
<b>Still picture</b>	RAW/JPEG (based on Design rule for Camera File system, based on Exif 2.3 standard / DPOF corresponding)
<b>Motion pictures</b>	AVCHD Progressive / AVCHD / MP4
<b>Audio compression format</b>	AVCHD: Dolby® Digital (2 ch) MP4: AAC (2 ch)
<b>Interface</b>	
<b>Digital</b>	USB 2.0 (High Speed)
<b>Analog video</b>	NTSC Composite
<b>Audio</b>	Audio line output (Monaural)
<b>Terminal</b>	
<b>AV OUT/DIGITAL</b>	Dedicated jack (8 pin)
<b>HDMI</b>	MicroHDMI Type D
<b>Dimensions</b>	Approx. 114.8 mm (W) x 66.2 mm (H) x 55.0 mm (D) [4.52" (W) x 2.61" (H) x 2.17" (D)] (excluding the projection part)
<b>Mass (weight)</b>	With card and battery: Approx. 393 g (0.86 lb) Excluding card and battery: Approx. 351 g (0.77 lb)
<b>Operating temperature</b>	0 °C to 40 °C (32 °F to 104 °F)

<b>Operating humidity</b>	10%RH to 80%RH
<b>Language select</b>	[ENGLISH] / [ESPAÑOL] (DMC-LX100P) [ENGLISH] / [DEUTSCH] / [FRANÇAIS] / [ESPAÑOL] / [PORTUGUÊS] / [ITALIANO] / [繁體中文] / [日本語] (DMC-LX100PC)

#### ■ Wi-Fi

<b>Compliance standard</b>	IEEE 802.11b/g/n (standard wireless LAN protocol)
<b>Frequency range used (central frequency)</b>	2412 MHz to 2462 MHz (1 ch to 11 ch)
<b>Encryption method</b>	Wi-Fi compliant WPA™/WPA2™
<b>Access method</b>	Infrastructure mode

#### ■ NFC

<b>Compliance standard</b>	ISO / IEC 18092 NFC-F (Passive Mode)
----------------------------	--------------------------------------

#### ■ Battery Charger (Panasonic DE-A99B): Information for your safety

<b>Input:</b>	~110 V to 240 V, 50/60 Hz, 0.15 A
<b>Output:</b>	=== 8.4 V, 0.43 A

#### Equipment mobility: Movable

#### ■ Battery Pack (lithium-ion) (Panasonic DMW-BLG10PP):

Information for your safety

<b>Voltage/capacity:</b>	7.2 V/1025 mAh
--------------------------	----------------

#### ■ Flash (supplied)

<b>Guide number</b>	10 equivalent (ISO 200• m), 7 equivalent (ISO 100• m)
<b>Lighting angle</b>	24 mm (35 mm film camera equivalent)

Specifications are subject to change without notice.

## Digital Camera Accessory System

Description	Accessory#
Battery pack	DMW-BLG10
AC adaptor*1	DMW-AC10
DC coupler*1	DMW-DCC11
Flash*2	DMW-FL220 / DMW-FL360L / DMW-FL580L
LED video light	VW-LED1
Auto lens cap	DMW-LFAC1
External viewfinder	DMW-VF1
USB connection cable	DMW-USBC1
AV cable	DMW-AVC1

\*1 The AC adaptor (optional) can only be used with the designated Panasonic DC Coupler (optional). The AC adaptor (optional) cannot be used by itself.

\*2 For details about the flash, refer to (→59) in this manual and the corresponding operating instructions for the flash.


- Part numbers are as of September 2014. These may be subject to change.
- Some optional accessories may not be available in some countries.

## Reading the Owner's Manual (PDF format)

More detailed instructions on the operation of this camera are contained in "Owner's Manual for advanced features (PDF format)" in the supplied disc. Install it on your PC to read it.

### ■ For Windows

- ① Turn the PC on and insert the disc containing the Owner's Manual (supplied)
    - If the automatic playback screen is displayed, you can display the menu by selecting and executing [Launcher.exe].
    - In Windows 8.1/Windows 8, you can display the menu by clicking a message that is displayed after inserting the DVD and then selecting and executing [Launcher.exe].
    - You can also display the menu by double-clicking [SFMXXXX] in [Computer]. (The "XXXX" portion differs depending on the model.)
  - ② Click the [Owner's Manual]
  - ③ Select the desired language and then click [Owner's Manual] to install
- Ⓐ To return to the install menu.
- ④ Double-click the "Owner's Manual" shortcut icon on the desktop

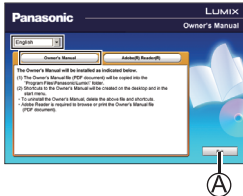

### ■ When the Owner's Manual (PDF format) will not open

You will need Adobe Acrobat Reader 5.0 or later, or Adobe Reader 7.0 or later to browse or print the Owner's Manual (PDF format).

- You can download and install a version of Adobe Reader that you can use with your OS from the following website.  
<http://get.adobe.com/reader/otherversions/>

### ■ Uninstalling the "Owner's Manual for advanced features (PDF format)"

Delete the PDF file in the following folder.  
 Program Files\Panasonic\Lumix\

### ■ For Mac

- ① Turn the PC on and insert the disc containing the Owner's Manual (supplied)
- ② Open the "Manual" folder in the DVD (supplied)
  - The "Manual" folder is displayed again.
- ③ Open the "Manual" folder in the DVD (supplied) and copy the PDF file in the language folder
- ④ Double click the PDF file to open it

# Digital Camera Accessory Order Form (For USA Customers)

Please photocopy this form when placing an order.

1. Digital Camera Model # \_\_\_\_\_

2. Items Ordered

Accessory #	Description	Price Each	Quantity	Total Price
Shipping & Handling				\$6.95
Subtotal				
Your State & Local Sales Tax				
Total				

3. Method of payment (check one)

<input type="checkbox"/>	American Express	
<input type="checkbox"/>	VISA	Credit Card # _____
<input type="checkbox"/>	MasterCard	Expiration Date _____
<input type="checkbox"/>	Discover	Customer Signature _____

(Please do not send cash)

4. Shipping information (UPS delivery requires complete street address)

Ship To:

Mr.

Mrs.

Ms.

First \_\_\_\_\_ Last \_\_\_\_\_

Phone#:

Day ( ) \_\_\_\_\_

Street Address \_\_\_\_\_

Night ( ) \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

TO OBTAIN ANY OF OUR DIGITAL CAMERA ACCESSORIES YOU CAN DO ANY OF  
THE FOLLOWING:

VISIT YOUR LOCAL PANASONIC DEALER

OR

YOU MAY CONTACT US DIRECTLY AT:

1-800-237-9080 (FAX ONLY)

OR

MAIL THIS ORDER TO: PANASONIC NATIONAL PARTS CENTER

20421 84th Avenue South, Kent, WA 98032



## Limited Warranty (ONLY FOR U.S.A.)

### Panasonic Products Limited Warranty

#### Limited Warranty Coverage (For USA Only)

If your product does not work properly because of a defect in materials or workmanship, Panasonic Corporation of North America (referred to as “the warrantor”) will, for the length of the period indicated on the chart below, which starts with the date of original purchase (“warranty period”), at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

Product or Part Name	Parts	Labor
Digital Camera	1 Year	1 Year
All included Accessories (Except Non-Rechargeable Batteries)	90 Days	Not Applicable
Only Non-Rechargeable Batteries	10 Days	Not Applicable

During the “Labor” warranty period there will be no charge for labor. During the “Parts” warranty period, there will be no charge for parts. This Limited Warranty excludes both parts and labor for non-rechargeable batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States. This warranty is extended only to the original purchaser of a new product which was not sold “as is”.

## Mail-In Service--Online Repair Request

### Online Repair Request

To submit a new repair request and for quick repair status visit our Web Site at [www.panasonic.com/repair](http://www.panasonic.com/repair).

When shipping the unit, carefully pack, include all supplied accessories listed in the Owner's Manual, and send it prepaid, adequately insured and packed well in a carton box. When shipping Lithium Ion batteries please visit our Web Site at [www.panasonic.com/BatteryHandling](http://www.panasonic.com/BatteryHandling) as Panasonic is committed to providing the most up to date information. Include a letter detailing the complaint, a return address and provide a daytime phone number where you can be reached. A valid registered receipt is required under the Limited Warranty.

**IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD, THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.**

### **Limited Warranty Limits And Exclusions**

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

---

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE".**

**THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.**

(As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but for illustration only.)

**ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.**

**Customer Services Directory (United States)**

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/support>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

For hearing or speech impaired TTY users, TTY: 1-877-833-8855

**Accessory Purchases (United States)**

Purchase Parts, Accessories and Owner's Manual online for all Panasonic Products by visiting our Web Site at:

<http://www.pstc.panasonic.com>

Or, send your request by E-mail to:

[npcparts@us.panasonic.com](mailto:npcparts@us.panasonic.com)

You may also contact us directly at:

1-800-237-9080 (Fax Only)

(Monday-Friday 9am-9pm EST)

Panasonic National Parts Center

20421 84th Avenue South, Kent, WA 98032

(We accept Visa, MasterCard, Discover Card, American Express)

For hearing or speech impaired TTY users, TTY: 1-866-605-1277

As of April 2014

## Limited Warranty (ONLY FOR CANADA)

### Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

### PANASONIC PRODUCT – LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship under normal use and for a period as stated below from the date of original purchase agrees to, at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by Panasonic Canada Inc.

<b>Digital Camera</b>	<b>One (1) year, parts and labour</b>
<b>Digital Camera Peripherals</b>	<b>One (1) year, parts and labour</b>
<b>Digital Camera Accessories</b>	<b>Ninety (90) days, parts and labour</b>

This warranty is given only to the original purchaser, or the person for whom it was purchased as a gift, of a Panasonic brand product mentioned above sold by an authorized Panasonic dealer in Canada and purchased and used in Canada, which product was not sold "as is", and which product was delivered to you in new condition in the original packaging.

**IN ORDER TO BE ELIGIBLE TO RECEIVE WARRANTY SERVICE HEREUNDER, A PURCHASE RECEIPT OR OTHER PROOF OF DATE OF ORIGINAL PURCHASE, SHOWING AMOUNT PAID AND PLACE OF PURCHASE IS REQUIRED**

### LIMITATIONS AND EXCLUSIONS

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by Panasonic Canada Inc., or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, improper batteries, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Authorized Servicer, or damage that is attributable to acts of God.

Dry cell batteries, printer ink cartridge and paper are also excluded from coverage under this warranty.

Rechargeable batteries are warranted for ninety (90) days from date of original purchase.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY. (As examples, this warranty excludes damages for lost time, travel to and from the Authorized Servicer, loss of or damage to media or images, data or other memory or recorded content. This list of items is not exhaustive, but for illustration only.)

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable. This warranty gives you specific legal rights and you may have other rights which vary depending on your province or territory.

### **WARRANTY SERVICE**

For product operation, repairs and information assistance, please visit our Support page :

[www.panasonic.ca/english/support](http://www.panasonic.ca/english/support)

- SDXC Logo is a trademark of SD-3C, LLC.
- HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- HDAVI Control™ is a trademark of Panasonic Corporation.
- “AVCHD”, “AVCHD Progressive” and the “AVCHD Progressive” logo are trademarks of Panasonic Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories.  
Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Adobe is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.
- Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Mac and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- iPad, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc.
- Android and Google Play are trademarks or registered trademarks of Google Inc.
- The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance®.
- The Wi-Fi Protected Setup™ Identifier mark is a certification mark of Wi-Fi Alliance®.
- “Wi-Fi®” and “Wi-Fi Direct®” are registered trademarks of Wi-Fi Alliance®.
- “Wi-Fi Protected Setup™”, “WPA™”, and “WPA2™” are trademarks of Wi-Fi Alliance®.
- DLNA, the DLNA Logo and DLNA CERTIFIED are trademarks, service marks, or certification marks of the Digital Living Network Alliance.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- This product uses “DynaFont” from DynaComware Corporation. DynaFont is a registered trademark of DynaComware Taiwan Inc.
- Other names, company names, and product names mentioned in these instructions are trademarks or registered trademarks of the companies concerned.



**AVCHD**™  
Progressive



## Panasonic Corporation of North America

Two Riverfront Plaza, Newark, NJ 07102-5490

<http://www.panasonic.com>

## Panasonic Canada Inc.

5770 Ambler Drive

Mississauga, Ontario

L4W 2T3

[www.panasonic.com](http://www.panasonic.com)

© Panasonic Corporation 2014

Printed in China