


1 Getting Started




1-A Accessories


Handset one

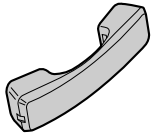


Handset Cord one

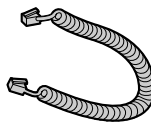


Telephone Line Cord one

 


Wall Mounting Adaptor one

 



1-B Location of Controls

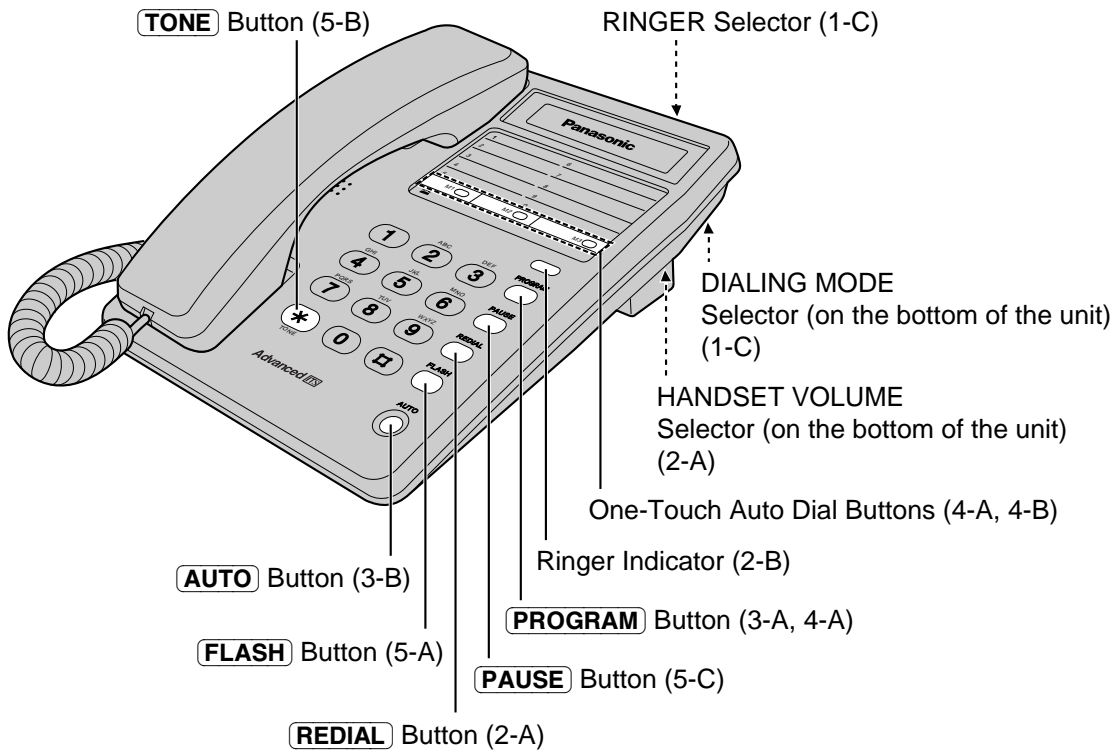

1-C Settings

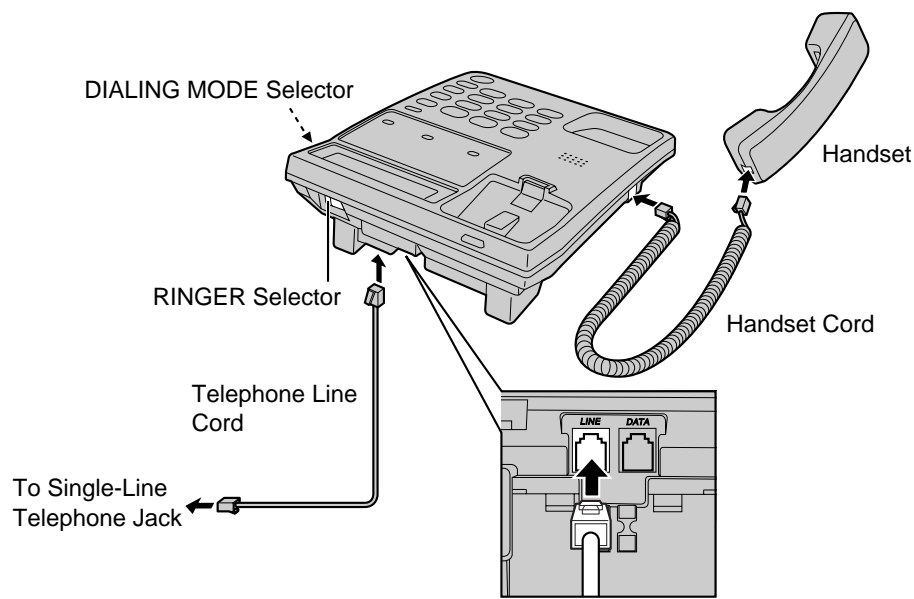

- 1 Connect the handset cord.
- 2 Connect the telephone line cord, then lift the handset to confirm the dial tone.
- 3 Set the DIALING MODE selector to TONE (preset).
 - If you cannot dial, set to PULSE.
- 4 Set the RINGER selector to HIGH (preset), LOW or OFF.
 - When set to OFF, the unit will not ring.

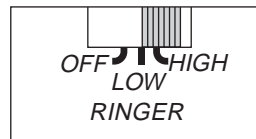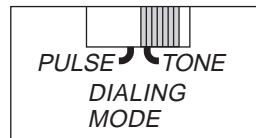


• Use only a Panasonic Handset for the KX-T2371MXW.

Getting Started

Section 1

1-D Connecting a Communication Device

If you connect a communication device (computer, modem, fax, answering machine, etc.) to the telephone line, you can connect it through this unit using the DATA jack.

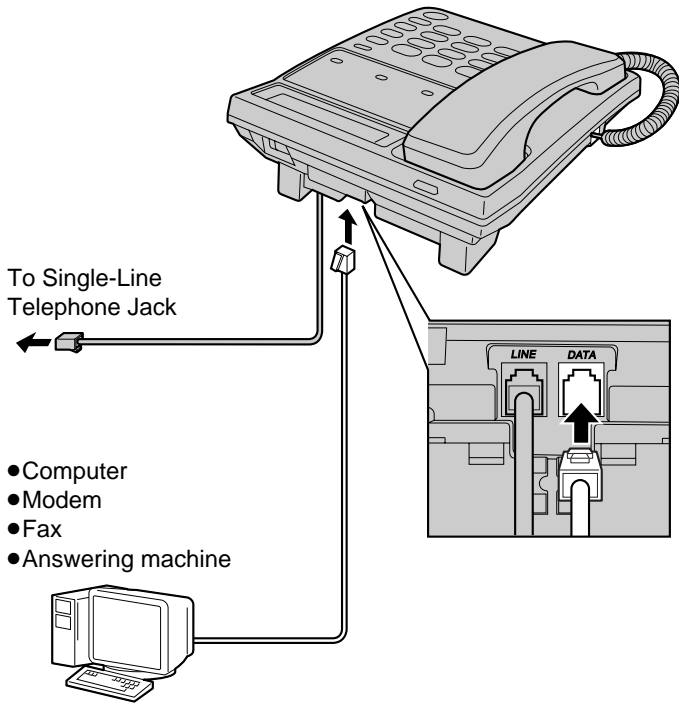


- 1 Be sure to perform steps 1 through 4 in 1-C.
- 2 Connect the communication device telephone line cord to the DATA jack.

• Make sure that the communication device is not in use before using this unit (making calls, storing phone numbers in memory, etc.), or the communication device may not operate properly.

1-E Wall Mounting


The unit can be mounted on a wall.

- 1 Pull down the handset hook until it locks, **so the tab holds the handset.**


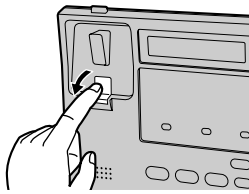


- 2 Tuck the telephone line cord inside the wall mounting adaptor, and push it in the direction of the arrow.

• "UP" should be facing upward.

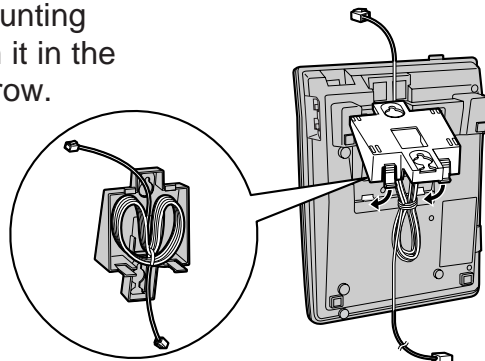


- 3 Install screws using the wall template below. Connect the telephone line cord. Mount the unit, then slide it down.

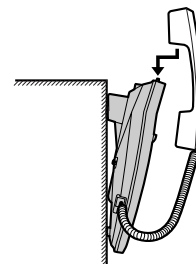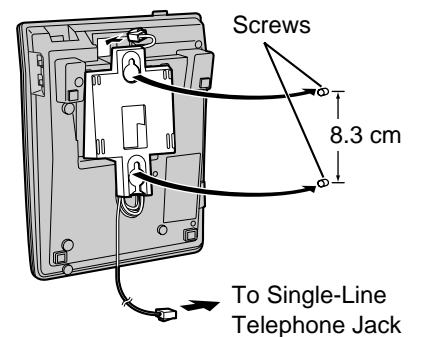


To temporarily set the handset down during a conversation, place it as shown here.

Wall Template

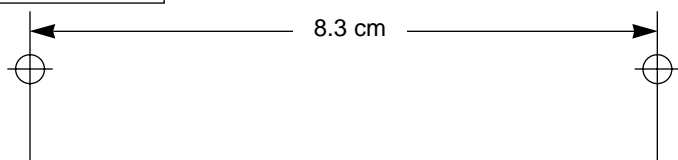

2 Making/Answering Calls

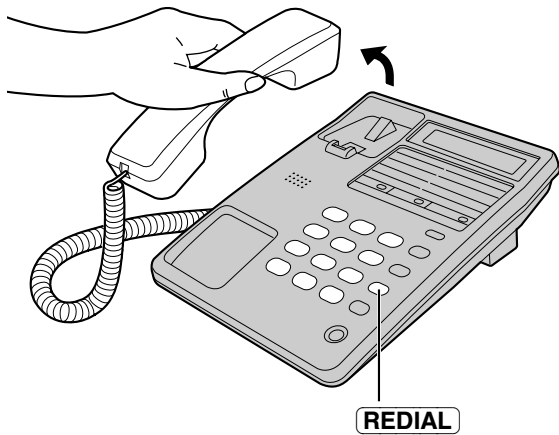

2-A Making Calls

- 1 Lift the handset.
- 2 Dial a phone number.
 - If you misdial, hang up and start from step 1.
- 3 When finished talking, hang up.


To redial the last number

Lift the handset. → Press **REDIAL**.

- While lifting the handset, each time you press **REDIAL**, the line will be automatically disconnected and the number will be redialed.
- **REDIAL** will dial the last number you called manually, not a Speed Dialer number (3-B) or One-Touch Dialer number (4-B).


To select the receiver volume

Set the HANDSET VOLUME selector to HIGH, MEDIUM (preset) or LOW.

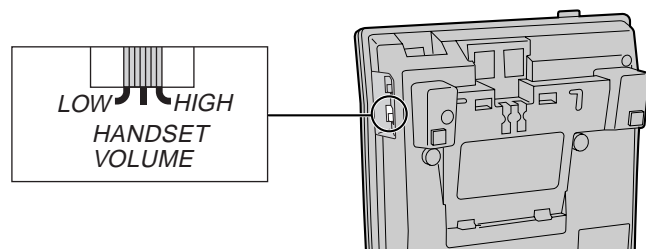

2-B Answering Calls


- 1 When the unit rings, lift the handset.
 - The Ringer indicator lights.
- 2 When finished talking, hang up.

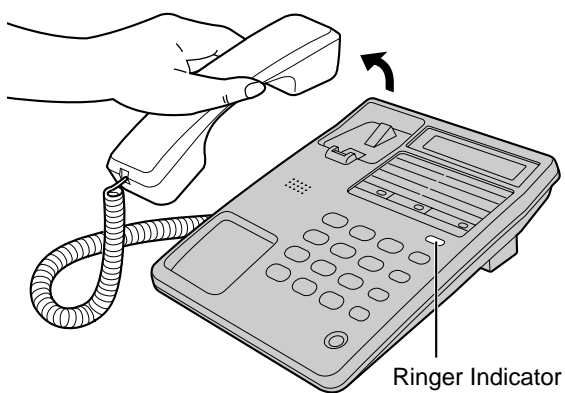

3 Speed Dialer

3-A Storing Phone Numbers in Memory

You can store up to 10 phone numbers in the memory stations. The dialing buttons (0 to 9) function as memory station numbers. Do not press any memory stations before storing to prevent misoperation.

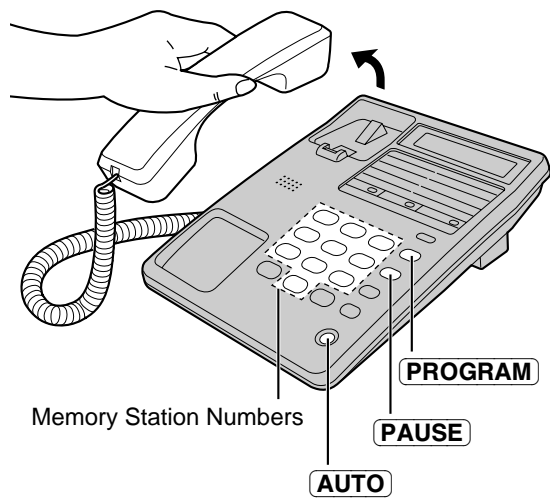

- 1 Lift the handset.
 - 2 Press **PROGRAM**.
 - 3 Enter a phone number up to 16 digits.
 - If you enter a wrong number, hang up and start again from step 1.
 - 4 Press **PROGRAM**.
 - 5 Press a memory station number (0 to 9).
 - 6 When finished, hang up.
 - To store other numbers, repeat steps 1 through 6.
- If a pause is required for dialing, press **PAUSE** where needed. Pressing **PAUSE** counts as one digit (5-C).

To store a dialed number in memory

Lift the handset. →

→ Phone number (up to 16 digits) →


→ During a conversation, press **PROGRAM**

twice → Station number (0 to 9). →

→ Hang up.

Memory Card


Remove the memory card and use it as a name or phone number index for speed dialing.

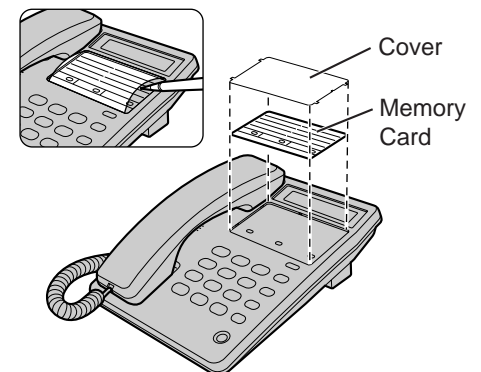

4 One-Touch Dialer

4-A Storing Phone Numbers in Memory

You can store up to 3 phone numbers in the one-touch auto dial buttons (M1 to M3). Do not press any one-touch auto dial buttons before storing to prevent misoperation.

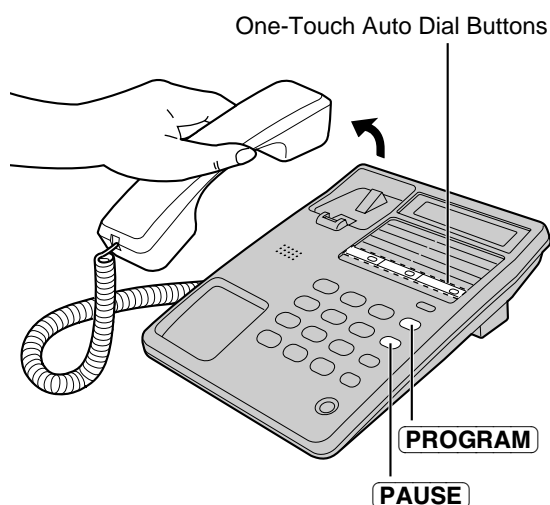

- 1 Lift the handset.
 - 2 Press **PROGRAM**.
 - 3 Enter a phone number up to 16 digits.
 - If you enter a wrong number, hang up and start again from step 1.
 - 4 Press **PROGRAM**.
 - 5 Press a one-touch auto dial button (M1 to M3).
 - 6 When finished, hang up.
 - To store other numbers, repeat steps 1 through 6.
- If a pause is required for dialing, press **PAUSE** where needed. Pressing **PAUSE** counts as one digit (5-C).

To store a dialed number in memory

Lift the handset. →

→ Phone number (up to 16 digits) →

→ During a conversation, press

PROGRAM twice →

→ One-touch auto dial button (M1 to M3). →

→ Hang up.

Speed Dialer


Section 3

3-B Dialing a Stored Number

- 1 Lift the handset.
- 2 Press **AUTO**.
- 3 Press the memory station number (**0** to **9**).
 - The stored number is dialed.

- The **REDIAL** button does not work for Speed Dialer. To dial the number again, hang up and repeat steps 1 to 3.
- If the telephone line cord is disconnected more than 3 days, the stored numbers may be erased. Store phone numbers again.

5 Special Features

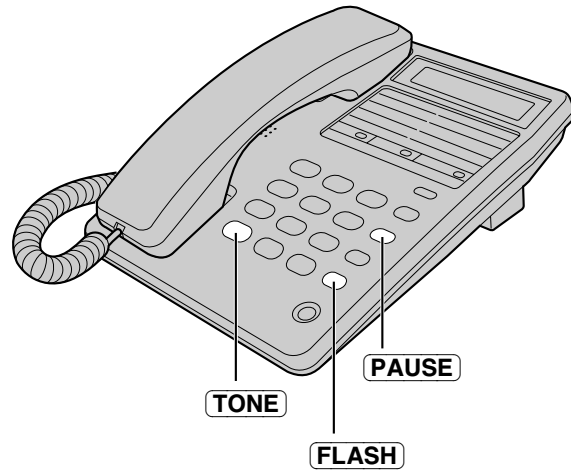

5-A For Call Waiting Service Users

Press **FLASH** if you hear a call-waiting tone while talking.

- The first call is put on hold and you can answer the second call.
- To return to the first caller, press **FLASH** again.
- If this function does not operate properly, consult your telephone company.

One-Touch Dialer

Section 4

4-B Dialing a Stored Number

- 1 Lift the handset.
- 2 Press the one-touch auto dial button (**M1** to **M3**).
 - The stored number is dialed.

- The **REDIAL** button does not work for One-Touch Dialer. To dial the number again, hang up and repeat steps 1 and 2.
- If the telephone line cord is disconnected more than 3 days, the stored numbers may be erased. Store phone numbers again.

6 Things You Should Know

6-A Before Requesting Help

Problem	Remedy
The unit does not work.	<ul style="list-style-type: none"> •Check the settings (1-C).
The call cannot be connected even you dialed correctly.	<ul style="list-style-type: none"> •Check whether the DIALING MODE selector setting is correct or not (1-C).
The unit does not ring.	<ul style="list-style-type: none"> •The RINGER selector is set to OFF. Set to HIGH or LOW (1-C).
You cannot store a phone number in memory.	<ul style="list-style-type: none"> •Confirm the handset is off the cradle. •Do not enter a phone number more than 16 digits long, or the entered number and the previously stored number will be cleared.

Special Features

Section 5

5-B Temporary Tone Dialing (For Rotary Service Users)

Press **[TONE]** before entering access numbers which require tone dialing.

- The dialing mode changes to tone. You can enter numbers to access answering services, electronic banking services, etc. When you hang up, the mode returns to pulse.

5-C How to Use the PAUSE Button (For Analog PBX Line/Long Distance Service Users)

We recommend you press **[PAUSE]** if a pause is required for dialing with a PBX or to access a long distance service.

Ex. Line access number **[9]** (PBX)

[9] → **[PAUSE]** → Phone number

- Pressing **[PAUSE]** once creates a few seconds pause. This prevents misdialing when you redial or dial a stored number.
- Pressing **[PAUSE]** more than once increases the length of the pause between numbers.

Things You Should Know

Section 6

6-B Safety instructions

Take special care to follow the safety suggestions listed below.

Installations

Environment

- 1) Do not use this unit near water—for example, near a bathtub, washbowl, sink, etc. Damp basements should also be avoided.
- 2) The unit should be kept away from heat sources such as radiators, kitchen range, etc. It also should not be placed in rooms where the temperature is less than 5°C or greater than 40°C.

Placement

- 1) Do not place heavy objects on top of this unit.
- 2) Care should be taken so that objects do not fall onto, and liquids are not spilled into, the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration, or shock.
- 3) Place the unit on a flat surface.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

If there is any trouble, disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, do not reconnect the unit to the telephone line until the trouble has been repaired. If the known working phone does not operate properly, consult with your telephone company.

Panasonic

Integrated Telephone System

Model No. **KX-T2371MXW**

Pulse-or-tone dialing capability

Operating Instructions



PLEASE READ BEFORE USE AND SAVE.

Contents by Section

- | | |
|--------------------------|--------------------------|
| 1 Getting Started | 4 One-Touch Dialer |
| 2 Making/Answering Calls | 5 Special Features |
| 3 Speed Dialer | 6 Things You Should Know |

For your future reference

Serial No. _____ Date of purchase _____
(found on the bottom of the unit)

Name and address of dealer _____

Kyushu Matsushita Electric Co., Ltd.

Manufactured by Kyushu Matsushita Electric (Malaysia) Sdn. Bhd. Johor Malaysia

PQQX13103ZA-BM FM0601HK0 ©