

PHILIPS

toaster
with warming rack

HD2533




PHILIPS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using.

1. Do not touch hot surfaces. Use handles or knobs.
2. To protect against electrical shock, do not immerse cord, plug, or Toaster in water or other liquids.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts or before cleaning appliance.
5. To disconnect, make sure lever knob is in up position, then remove plug from electrical outlet. Remove plug by gripping plug body and pulling it from the outlet. Never yank or twist cord to unplug.
6. Do not operate this appliance with a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. To avoid the risk of electrical shock, do not disassemble; return the Toaster to the retail location where it was purchased for examination, repair, or adjustment. Incorrect reassembly can cause a risk of electrical shock when Toaster is used.
7. Use this appliance only for its intended use as described in this manual. Do not use accessory attachments not recommended by Philips Electronics North America Corporation as they may cause fire, electric shock or injury.
8. Do not use outdoors or operate where oxygen is being administered or in the presence of explosive and/or flammable fumes.

- 
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
 10. Let the Toaster cool completely before putting away.
 11. Do not place on or near a hot gas or electric burner, or in heated oven.
 12. Do not operate Toaster without correctly replacing Crumb Tray. Failure to clean Crumb Tray may result in a fire hazard.
 13. Oversized foods, metal foil packages, or utensils must not be inserted in toaster as they may involve a risk of fire or electrical shock.
 14. A fire may occur if Toaster is covered by or touching flammable material, including curtains, draperies, and walls, etc, when in operation. Do not operate under wall cabinets.
 15. Do not attempt to dislodge food while Toaster is plugged in. Unplug Toaster and allow to cool completely before carefully removing obstruction. Do not use a knife or similar sharp tool as these may cause damage to heating elements.
 16. Do not clean with metal scouring pads. Pieces can break off pad and touch electrical parts, involving a risk of electrical shock.
 17. This appliance is intended for household use ONLY; it is not for commercial or industrial use.
 18. Any service of the Toaster should be performed by the retail location where it was purchased.
 19. Do not operate while unattended. Unplug after each use.
 20. Extreme caution must be used when moving an appliance containing hot food, frosting, or juicy fillings.
 21. To disconnect appliance from electrical outlet, make sure Lift Lever is in the up position, then remove plug from electrical outlet.

SAVE THESE INSTRUCTIONS

SPECIAL INSTRUCTIONS

This Philips Toaster has a short cord to reduce the hazards of becoming entangled in or tripping over a longer cord. An extension cord may be used if the rating is equal to or greater than the rating of the Toaster. Use an extension cord rated 13 amperes or greater. Care must be taken to arrange extension cord so that it will not drape over countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Operating the Toaster and another appliance at the same time from the same electrical circuit could cause an electrical overload condition, which would blow the fuse or trip the circuit breaker.

WARNING:

- Always use the Light setting for pastry items because frosting and fillings can ignite. If frosting or filling does drip into Toaster well, follow instructions in “Cleaning” before using the Toaster again to prevent risk of fire.
- Immediately unplug Toaster if fire or smoke is observed.
- Please read and save this Instructions For Use booklet.

SPECIAL POLARIZED PLUG INSTRUCTIONS

This Philips Toaster has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock:


- Plug will fit into polarized outlet only one way.
- If plug does not properly fit outlet at first, reverse it.
- If plug still does not fit, contact a qualified electrician.

DO NOT ATTEMPT TO DEFEAT THIS SAFETY FEATURE

Table of Contents


Features	2
Toasting Bread	3-4
Toasting Frozen Bread	4
Toasting on One Side	4
Reheating Toasted Bread	4
Warming Rolls or Croissants	5
Cleaning	6
For Assistance	7
Warranty	Back Cover

Features

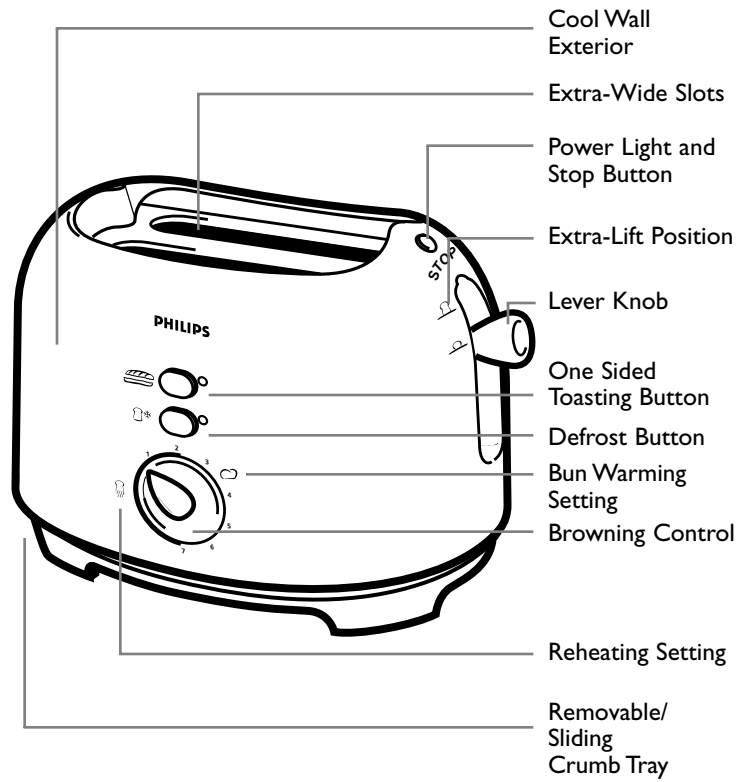


- Warming Rack
- Ready Bell Signal

Toasting Bread

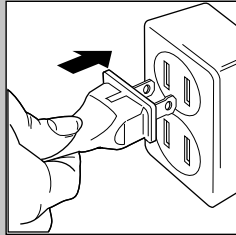


- 1** Put the appliance in a safe place, away from fire hazards such as curtains, and plug cord into 120V AC electrical outlet.

You can adjust the length of the cord by looping part of it around the brackets on the base of the appliance.

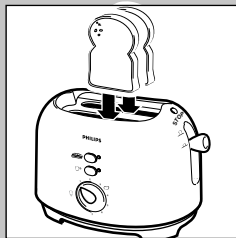

- 2** Put one or two slices of bread in the Toaster.


NOTE: Toaster heating elements may give off an unpleasant smell as they heat up initially. This is normal for a new appliance.

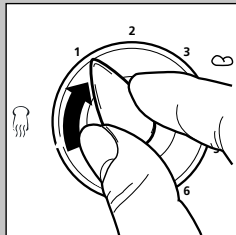

- 3** Select the desired browning setting. The Temperature sensor and electronic timer provide even toasting results.

Select a low setting (1-2) for lightly toasted bread and a high setting (5-7) for a dark browning result.

NOTE: When toasting a series of slices, no re-adjustments of the browning control is required.

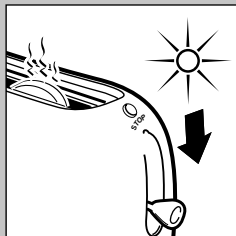

- 4** Push the lever knob down to turn appliance on. The lever knob will only stay down if the appliance has been plugged into electrical outlet. The light integrated in the Power/Stop button will come on.

- 5** Bell signals when toast is ready and toast pops up automatically. Then Toaster turns off the heating elements and the LED Power Light goes off.


Never leave Toaster unattended during use.


Metal parts of Toaster will get hot while in use. Be careful not to touch them.

- The Toaster will shut off automatically. You can stop the toasting process and pop the bread up at any time by pressing the Stop button.
- To remove smaller items, you can lift the lever knob slightly further upwards (until it will not go any further).
- If the bread gets stuck in the Toaster; unplug cord from electrical outlet, let Toaster cool completely, then carefully remove the bread from the Toaster. Do not use metal objects to do this and avoid touching the metal parts of the Toaster.

- ▶ Do not toast buttered breads.
- ▶ Do not toast or warm extremely thin or broken bread slices or very small-size slices such as mini-baguettes, mini-bagels, small cocktail-size breads, bread sticks, etc.


Toasting Frozen Bread

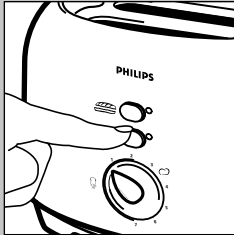


- 1 Follow instructions 1 & 2 in Toasting Bread section and set the browning control to desired position before you push the lever knob down and press Defrost button  .


Toasting on One Side

Perfect for bagels and baguettes:

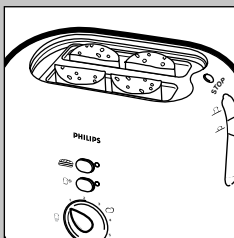



- 1 Cut a baguette (max. 5" in / 13cm) in half.
- 2 Put the halved parts in the Toaster with the side to be toasted facing the middle heater of the toaster.

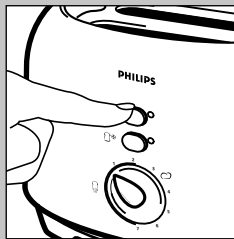


- 3 Follow the instructions in "Toasting Bread" and press One Side Toasting button  . You can also use this function in combination with the setting for toasting frozen bread.

Reheating Toasted Bread

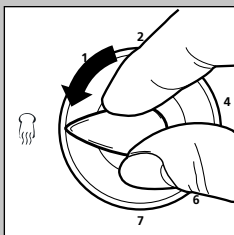


- 1 Follow instructions in 1 & 2 in Toasting Bread section and set the browning control to setting  . You will hear a click. Then push the lever knob down.

Warming Rolls or Croissants

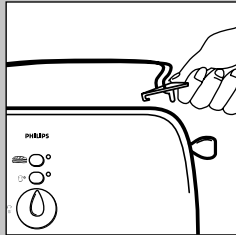


1 Mount the warming rack firmly onto the Toaster.

Never put the rolls to be warmed on the Toaster without the warming rack to avoid damaging the Toaster.

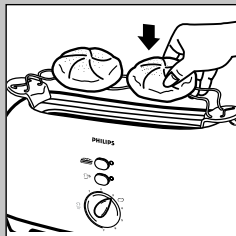

2 Put the rolls or croissants in the center of the rack.

Do not warm more than 2 items at a time.

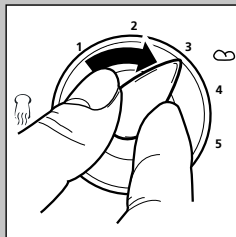

3 Set the browning control between setting 1 and setting 2. The setting must not be higher than Roll or Croissant setting.

4 Push the lever knob down to turn the Toaster on.


The light in the Power/Stop button will come on.

If you want to heat the rolls or croissants on both sides, turn them after the Toaster has shut itself off and turn the Toaster back on again by pushing the lever knob down.

Cleaning

- 1 Unplug cord from electrical outlet.
- 2 Clean the Toaster with a moist cloth.
Do not use abrasive cleaners.


Never immerse the appliance in water.

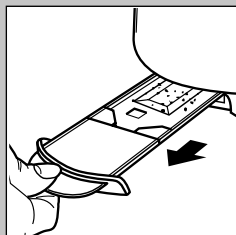

- 3 Remove crumbs from the appliance by sliding the removable crumb tray out of the Toaster.

Do not hold the appliance upside down and do not shake it to remove the crumbs.

IMPORTANT: To reduce the risk of fire, frequently remove crumbs from Toaster.

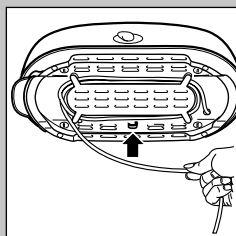

- 4 You may store the cord by looping it around the brackets on the base of the Toaster.

For assistance

For assistance call toll free:

1-800-243-7884
or visit our website: www.philipsonline.com.

FULL ONE YEAR WARRANTY

Philips Electronics North America Corporation warrants each new Philips product, model HD2533 (except cord), against defects in materials or workmanship for a period of one year from the date of purchase.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.*

**PHILIPS ELECTRONICS NORTH AMERICA CORPORATION
WILL NOT PAY FOR UNAUTHORIZED SERVICE OF ANY
TYPE.**

**NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL,
INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

In order to address warranty issues, simply take or ship the product back to the retail location where it was purchased.

* Read enclosed instructions carefully.

Manufactured for:
Norelco Consumer Products Company
A Division of Philips Electronics North America Corporation
1010 Washington Blvd., Stamford, CT 06912-0015

For Assistance call 1-800-243-7884

MADE IN CHINA.



This symbol on the product's nameplate means
it is listed by Underwriters' Laboratories, Inc.

PHILIPS and Philips Shield are Registered Trademarks of Koninklijke Philips Electronics N.V.

© 2000 Philips Electronics North America Corporation.
All Rights Reserved.

HD2533

4222.001.9324.1