

MAGIC 5 eco

PPF 685

PPF 695



EN User Manual

PHILIPS

Dear Customer

With the purchase of this device, you have chosen a quality PHILIPS product brand. Their device fulfils the most varied requirements for private use or in your office and business everyday.

Your device is delivered with an already inserted free ink film for a few test pages. For this film, you do not require any Plug'n'Print card (= chip card with information regarding ink film capacity).

In the telephone book of your device, you can save entries with multiple numbers and collect multiple entries into groups. You can assign various ring tones to the entries.

You can assign the speed dial keys to frequently dialled telephone numbers. You can load these telephone numbers quickly with the speed dial keys.

The cordless telephone is provided with its own telephone book. With the cordless telephone you can send and read SMS messages (function is not supported in all countries and networks). You can hear messages on the answering machine of the device and record new outgoing messages.

You can individually set ringer tones and notification tones, wallpaper and menu colours of the cordless telephone. Additional functions such as alarms, timer, birthday reminder or a room monitoring function are also available to you. You can register up to five cordless telephones with your device.

The built-in answering machine stores up to 30 minutes of messages. You can record internal and external voice messages (= memos). Using remote message retrieval, you can call new messages from each telephone. With the VIP code, callers can also reach you even while the answering machine is switched on.

You can send fax messages in different resolutions to one or more recipients or a group. You can also poll faxes and prepare documents for polling.

Five fax templates, which you can use, are stored in your device. With these templates you can quickly create, for example, a short fax note or an invitation.

Select the resolution for text and photo in order to copy documents with your device. You can also create multiple copies.

You can send SMS messages from your device if this service is activated for your telephone line (this function is not supported in all countries and networks). Received SMS messages can be managed with the extensive functions of the SMS menu.

Activate notification by SMS to receive an SMS message, for instance on your mobile phone, when calls, fax transmissions or other messages arrive in your absence (this function is not supported in all countries and networks).

If you want, your device can print Sudoku puzzles in four different difficulty levels with solution.

We hope you enjoy your device and its many functions!

About this User Manual

With the installation guide on the following pages, you can start using your device quickly and easily. Detailed descriptions can be found in the following sections of this user manual.

Read the entire user manual carefully. Follow all safety instructions in order to ensure proper operation of your device. The manufacturer accepts no liability if these instructions are not followed.

Multiple models of this device series are described in this user manual. Please note that some functions are only available with specific models.

Symbols Used

DANGER!



DANGER!

Warns about dangers for people, damage to the device or other objects as well as possible loss of data. Injuries or damage can result from improper handling.

Notice



Troubleshooting

This symbol designates tips that will help you to use your device more effectively and easily.

Table of Contents

Dear Customer	2
About this User Manual	2
1 General Safety Information	5
2 Overview	7
Overview of the Menu Functions	7
Device Overview	8
Cordless Telephone Panel	9
Panel	10
3 Initial Operation	11
Contained in the Packing	11
Attaching the Paper Tray	11
Inserting Paper	11
Connecting the Handset	12
Connecting the Telephone Cord	12
Connecting the Power Cord	12
Initial Installation	12
Inserting Batteries in Cordless Telephone	13
Putting Cordless Telephone in Operation	14
4 Telephone Functions	15
Placing a Call on the Device	15
Putting a Call from Cordless Telephone	16
Calling Additional Telephone Functions	16
Hands-Free	17
Mute Mode	17
Recording a Telephone Conversation	17
Forwarding a Call	18
Placing Internal Calls	18
Calling Line Identification (CLIP)	19
Missed Calls	19
5 Telephone Book of the Device	20
Saving entry	20
Edit Entry	20
Deleting an Entry	20
Groups	20
Speed dialling	21
6 Telephone Book of the Cordless Telephone	22
Saving Entry	22
Edit Entry	22
Deleting an Entry	22
Adding an Additional Number	22
Changing the Ring Tone	22
Calling Options	23
7 Cordless Telephone	24
Looking for Cordless Telephone	24
Switching On and Off	24
Navigating in the Menu	24
Keypad lock	24
Activating emergency call number	24
Additional Functions	25

8 Answering Machine	28
Switching On and Off	28
Editing the Outgoing Message	28
Listening to Messages	30
Deleting Messages	30
Setting up Forwarding and Remote Access	31
Using Remote Access	31
Remote Control Functions	32
Recording Internal Memos	32
Modifying the Settings	33
9 Fax	34
Sending fax	34
Sending Fax Manually	35
Direct Inward Dialling or Selecting Sub-address	35
Sending to Multiple Recipients (= Broadcasting)	35
Sending Fax Later	35
Fax Reception	36
Receiving Fax Manually	36
Polling Faxes	36
Using Fax Templates	36
10 Copier	37
Inserting Documents	37
Making a Copy	37
Creating Multiple Copies	37
11 SMS	38
SMS Requirements	38
Sending SMS	38
Notification by SMS	39
Receiving SMS Messages	40
Reading SMS Messages	40
Calling SMS Functions	41
Printing SMS Messages	41
Deleting SMS Messages	41
Modifying the Settings	42
12 Fun and Games	43
Sudoku	43
13 Settings on the Device	44
Entering the Date and Time	44
Selecting the Language	44
Selecting the Country	44
Entering Number	44
Entering Your Name	44
Setting the Contrast	44
Reducing Transmission Speed	45
Switching Page Adjustment On and Off	45
Setting the Ring Tones	45
Setting the Fax Switch	45
Printing Lists and Help Pages	46
Starting Initial Installation	46

14 Settings on the Cordless Telephone 47

Selecting the Language 47
 Changing the Wallpaper Image 47
 Changing the menu colours 47
 Setting the contrast 47
 Setting the ring tone 47
 Turning key-tones and signal-tones on and off 48
 Switching silent mode on/off 48
 Programmable Keys 48
 Automatic Picking up and Hanging up the Phone 48
 Resetting the Cordless Telephone 49
 Displaying Call Logs and Events 49

15 Telephone Lines and Additional

Devices..... 50

Configuring Telephone Lines and Services 50
 Registering and De-Registering Additional Cordless Tele-
 phones 50
 Connecting Additional Devices 52
 Using Additional Telephones (Easylink) 52

16 Service..... 53

Checking the Ink Film Reserve 53
 Changing the ink film 53
 Fixing a Paper Jam 54
 Fixing a Document Jam 55
 Cleaning 56
 Displaying the Battery Charge 57
 Changing the Batteries in the Cordless Telephone 57
 Checking the Firmware Version 57
 Using Service Codes 57
 Power Cycling 58

17 Appendix..... 60

Technical Data 60
 Guarantee 60
 Declaration of Conformity (DoC) 62
 Customer Information 64

1 General Safety Information

Your device has been tested in conformity with standards EN 60950-1 and IEC 60950-1 and should only be operated with telephone systems and power equipment that meet these standards. The device was built exclusively for use in the indicated sales region.

Do not make any changes or settings that are not described in this user manual. Physical injury or damage to the device or loss of data can result from improper handling. Take note of all warning and safety notes indicated.

Setting Up the Machine

The device should rest securely on a stable, flat surface. If the device should fall, it can be damaged or can cause injury to people, especially small children. Position all cables in such a way that no one will stumble on them, thus avoiding possible injuries to persons or damage to the device itself.

The distance between the device and other devices or objects must be at least 15 centimetres; this also applies to the use of additional cordless telephones. Do not place the device in the vicinity of radios or televisions.

Lock the cover of the device completely into place when opening the device. You could be injured if the cover falls while you are working on the device.

Protect the device against direct sunlight, heat, large temperature fluctuations and moisture. Do not place the device in the vicinity of heaters or air conditioners. Observe the information on temperature and humidity in the technical data.

The device must have sufficient ventilation and may not be covered. Do not put your device in closed cabinets or boxes. Do not place the machine on soft surfaces such as tablecloths or carpets and do not cover the ventilation slits. Otherwise, the device can overheat and catch on fire.

In the event that the device becomes too hot, or if you see smoke coming from the device, you must immediately pull the power cable out of the power socket. Have your device examined by trained professionals at a technical service location. To prevent the spread of fire, open flames should be kept away from the device.

Do not plug in the device in moist rooms. Never touch the mains cable, the mains connection or the telephone socket with wet hands.

Do not allow liquids to enter into the device. Disconnect the device from the power socket if liquids or foreign objects have entered the device and have your device examined by trained professionals at a technical service location.

Do not allow children to handle the device without supervision. The packing materials should be kept out of the hands of children.

The telephone handset of the device is magnetic. Caution, small metallic objects (paper clips) may be retained if placed near or on the telephone handset.

Power Supply

Check whether the mains voltage of your device (indicated on the type label) matches the mains voltage available at the setup location.

Use only the power and telephone cables supplied.

Set up your device so that the power socket is easily accessible. The device does not have an on/off button. In an emergency, disconnect your device from the power supply by pulling the power plug.

Never touch the power or telephone cable if the insulation is damaged. Replace damaged wires immediately. Use suitable cables only; if necessary please contact our technical customer service or your retailer.

Disconnect your device from the power and telephone networks during an electrical storm. If this is not possible, do not use the device during an electrical storm.

Before cleaning the surface of your device, disconnect it from the power and telephone networks. Use a soft, lint-free cloth. Never use liquid, gaseous or easily flammable cleansers (sprays, abrasives, polishes, alcohol). Do not allow any moisture to reach the interior of the device.

Only clean the display with a dry, soft cloth. If the display breaks, a mildly corrosive liquid may escape. Avoid all contact with your skin and eyes.

In the event of a power failure, your device will not function; saved data is retained.

Repairs

Should disruptions occur, follow the instructions on the display and on the error report.

Do not make any repairs to the device yourself. Improper maintenance can result in injuries or damage to the device. Only have your device repaired by an authorised service centre.

Do not remove the type label from your device; this would void the warranty.

Consumable Materials

Use only original consumable materials. These are available from a specialised retailer or through our order service (see back side of this user manual). Other consumable materials could damage the device or shorten its service life.

Dispose of old consumable materials according to the waste regulations of your country.

Cordless Telephone

Never place the cordless telephone in the charging station without rechargeable batteries or with non-rechargeable batteries.

EN

Do not install or use your cordless telephone in a damp environment. Never touch the cordless telephone with wet hands.

The functioning of security systems, medical equipment or sensitive devices can be disrupted by the transmission power of the cordless telephone. Observe any usage regulations (or restrictions) in the vicinity of such equipment.

The batteries used should be disposed of according to the recycling regulations of your country.

2 Overview

Overview of the Menu Functions

The following functions are available on your device. There are two ways in which you can call functions:

Navigating in the Menu: Press **OK** or one of the two arrow keys **▲/▼**, to open the function menu. Page through **▲/▼** menu entries. Use **OK** to select a menu function. Press **C** to return to the previous menu level. Press **STOP** to close the menu and return to the starting mode.

Calling Functions Directly: You can call a menu function directly using the function number. Press **OK** and enter the appropriate function number using the numeric keypad. Confirm with **OK**. You will find the function number in the following list.

Notice



Printing the Functions List

Press **[1]** and **[6]** to print a list of all functions and settings of your device.

1 Telephone book

- [1] [1]** Looking up an entry.....page 15
- [1] [2]** New entry.....page 20
- [1] [3]** Creating group.....page 20
- [1] [4]** Speed dialling.....page 21
- [1] [5]** Modifying an entry.....page 20
- [1] [6]** Deleting entries.....page 20
- [1] [7]** Printing entries.....page 46

2 Calls

- [2] [1]** Received calls.....page 15
- [2] [2]** Outgoing calls.....page 15
- [2] [3]** Printing entries.....page 46

3 Fax

- [3] [1]** Polled reception.....page 36
- [3] [2]** Polling send.....page 36
- [3] [3]** Sending fax later.....page 35
- [3] [4]** Sending to multiple recipients (= broadcast)
.....page 35
- [3] [5]** Printing fax journal.....page 46
- [3] [6]** Printing transmission report.....page 46
- [3] [7]** Print reduced in size.....page 45
- [3] [8]** Reducing transmission speed.....page 45

4 Miscellaneous

- [4] [1]** Printing call log.....page 46
- [4] [2]** Switching notification tone for call waiting on/off
.....page 16
- [4] [3]** Using fax templates.....page 36

- [4] [4]** Setting the contrast.....page 44
- [4] [5]** Using service codes.....page 57
- [4] [6]** Checking the ink film reserve.....page 53
- [4] [7]** Checking the firmware version.....page 57
- [4] [8]** Sudoku.....page 43

5 Fax switch

- [5] [1]** Configuring day mode.....page 45
- [5] [2]** Configuring night mode.....page 45
- [5] [3]** Setting the timer.....page 45
- [5] [4]** Easylink.....page 52
- [5] [5]** Setting the ring tones.....page 45

6 SMS

- [6] [1]** Sending SMS.....page 38
- [6] [2]** Reading SMS.....page 40
- [6] [3]** Printing SMS.....page 41
- [6] [4]** Deleting SMS.....page 41
- [6] [5]** Notification by SMS.....page 39
- [6] [6]** SMS access.....page 42

7 Answering Machine

- [7] [1]** Switches answering machine on/off.....page 28
- [7] [2]** Listening to messages.....page 30
- [7] [3]** Recording internal memos.....page 32
- [7] [4]** Setting the recording duration.....page 33
- [7] [5]** Editing the announcement.....page 28
- [7] [6]** Using announcement without recording message
(= external memo).....page 29
- [7] [7]** Forwarding messages.....page 31
- [7] [8]** Entering the VIP code.....page 33
- [7] [9]** Entering access code.....page 31

8 Cordless Telephone

- [8] [1]** Locating cordless phones.....page 24
- [8] [2]** Registering cordless telephone.....page 51
- [8] [3]** De-registering cordless telephone.....page 51



9 Settings

- [9] [1]** Entering the date and time.....page 44
- [9] [2]** Selecting the language.....page 44
- [9] [3]** Selecting the country.....page 44
- [9] [4]** Entering number.....page 44
- [9] [5]** Entering name.....page 44
- [9] [6]** Configuring telephone lines and services page 50

Device Overview


- ① Handset
- ② Paper tray
- ③ Document feeder (writing facing up)
- ④ Panel with display
- ⑤ ☎ socket—Connection socket for the telephone handset
- ⑥ **EXT** socket—Connection socket for additional devices
- ⑦ **LINE** socket—Connection socket for telephone cable

- ① Scanner glass
- ② Rollers of the automatic document feeder
- ③ Rests of the intake rollers
- ④ Document guide / scanner film
- ⑤ Cover for scanner and automatic document feeder
- ⑥ Toothed wheel for tightening the ink film
- ⑦ Ink film roll in the rear ink film compartment
- ⑧ Ink film roll in the front ink film compartment
- ⑨ Slot for the Plug'n'Print card
- ⑩ Locks for the cover of the scanner and automatic document feeder

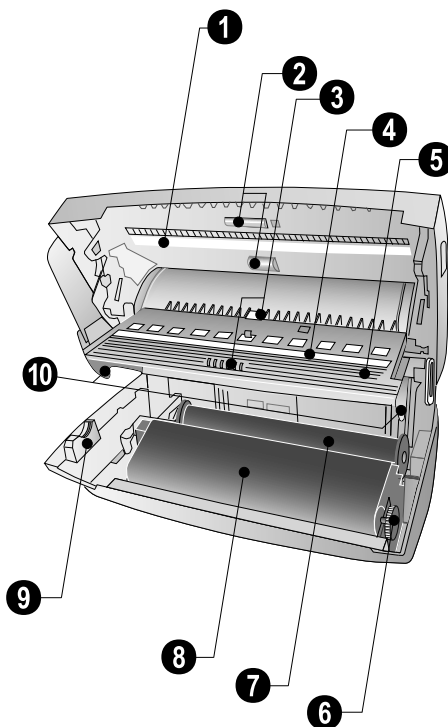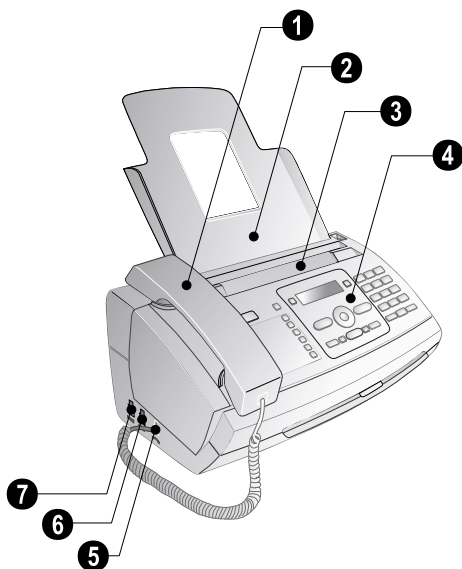

Cordless Telephone Panel

Monochrome Dect · Colour Dect

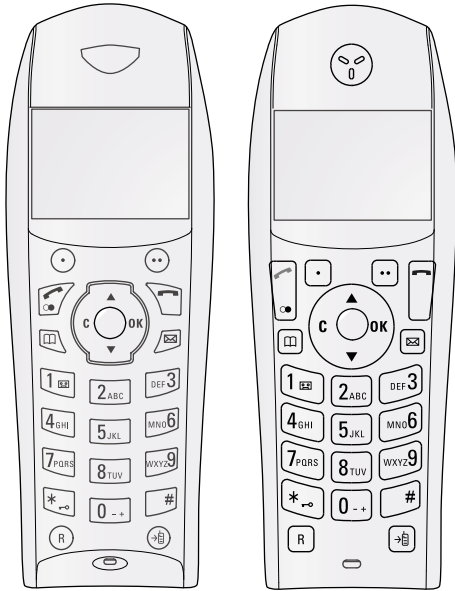


- Programmable key (the saved function appears on the display)
- Programmable key (the saved function appears on the display) / calling options / confirming selection
- ☎/●—Press briefly: Place calls / receives calls / hands free / press and hold: Redialling / switching on cordless telephones
- ☎—Press briefly: Ending calls / aborting menu functions / press and hold: switching off cordless telephone
- ☎—Press briefly: Calling up the telephone book from the device / hold pressed: Calling the telephone book of the cordless telephone
- ☎—Calling the SMS menu (function is not supported in all countries and networks)
- ▲/▼—Calling the menu functions / navigation within the menu / selecting options / moving the cursor / adjusting the volume level
- C—Returning to the previous menu level / deleting individual digits
- OK—Calling the menu functions / confirming input
- ☎/☎—Press and hold: Calling answering machine menu
- * / ☎—Press and hold: Turning keypad lock on/off
- 0—Inputting special characters
- R—Switching between calls (= call toggling)
- ☎—Forwarding a call to the device or to other cordless telephones


EN

Symbols on the LCD Display

Monochrome Dect

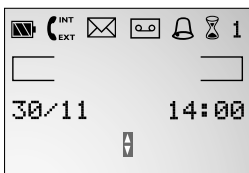

Colour Dect

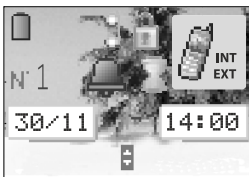

- ☎—Display of the battery charge
- ☎^{INT}—Internal telephone call (= intercom) with another cordless telephone or the device
- ☎^{EXT}—External telephone call
- ☎—New SMS received
- ☎—Answering machine switched on
- ☎—Alarm clock switched on
- ☎—Timer switched on
- 1—Number with which the cordless telephone is registered with the base unit

Colour Dect

- ☎—Keypad lock switched on
- ☎—Silent mode switched on (all ring tones switched off)

Panel

—Lights up, if new messages are received / list of the new messages with submenus / blinks in the case of device error (for example no ink film)

—During a call: Forwarding a call to a specific or all cordless telephones / in the starting mode: Locating cordless phones (all registered cordless phones start ringing)

Speed dial buttons **1 ... 6**—Press briefly: Recalling speed dial entry / press and hold: Editing speed dial entry

—Press briefly: Calling up the telephone book entries. Selecting the entries with the / press and hold: saving new entries

//—Setting the timer and the fax reception modes (= fax switch). Modes set on the display (day), (night). Activated timer is indicated with

STOP—Function abort / return to the starting mode / documents eject / ending message playback

C—Return to the previous menu level / press briefly: deleting individual characters / press and hold: deleting complete input / during a playback: deleting individual message / in the starting mode: deleting all messages

—Calling the menu functions / navigation within the menu / selecting options / moving the cursor / adjusting the volume level

OK—Calling the menu functions / confirming input

START—Press briefly: Starting transmission of messages / press and hold: Starting fax polling

—Calling answering machine menu

—Press briefly: Printing help pages and setting lists / press and hold: Starting initial installation process

COPY—Press briefly: creating a copy / press and hold: creating multiple copies / printing SMS

—Setting higher resolution for faxes and copying (RESOL. : STANDARD, RESOL. : FINE, RESOL. : PHOTO)


—Calling the SMS menu (function is not supported in all countries and networks)

Numeric keypad—Inputting digits, characters and special characters

—Press briefly: Toggling between the list of the last 10 dialled numbers (= redial list) / press and hold: List of last ten callers (caller list)

—Dialling with the handset replaced / hands-free

R—Press briefly: insert short line interruption (Hook Flash) as office index on PABX or for calling special functions in the public telephone network (PSTN)/long press: Inserting dialling pause

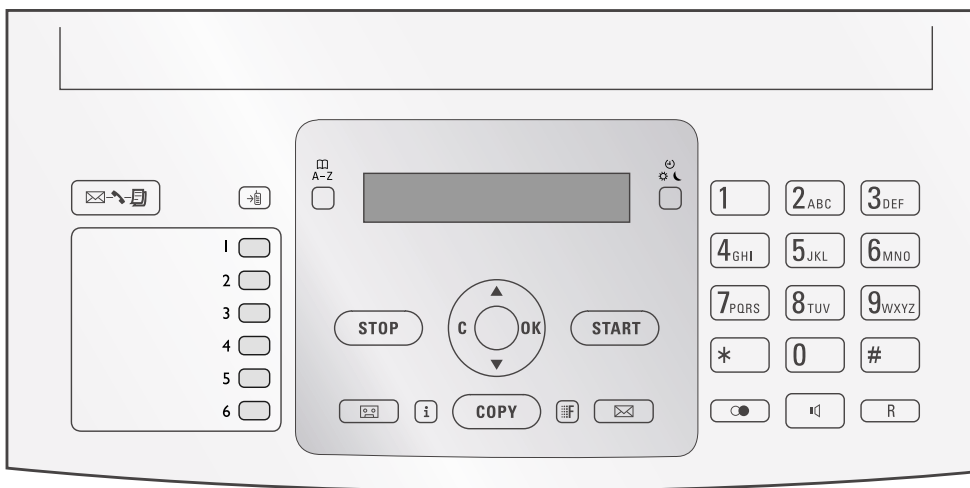


3 Initial Operation

Contained in the Packing

- 1 Device
- 2 Telephone handset
- 3 Spiral cable for telephone handset
- 4 Paper tray
- 5 Mains cable with plug (country-specific)
- 6 Telephone cable with plug (country-specific)
- 7 Charging station
- 8 Three batteries
- 9 Cordless telephone

User manual with installation guide (not depicted)

Depending upon model several cordless telephones are included.

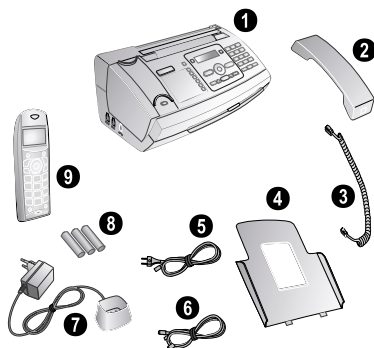

Notice




Missing Package Contents

If one of the parts is missing or damaged, please contact your retailer or our customer service.

Attaching the Paper Tray

Insert the paper tray into the openings behind the paper feed mechanism.

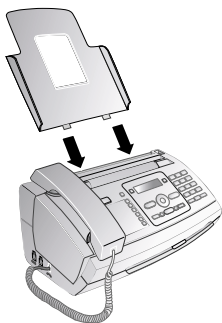

Inserting Paper


Before you can receive documents or make copies, you must load paper into the device. Please use only appropriate paper in standard format **A4** (210 × 297 millimetre · preferably 80 g/m²). Follow the specifications in the technical data.

Notice




Loading Paper


Separate the paper sheets by fanning them out, then align them by tapping edge of the stack lightly against a flat surface. This will prevent several sheets of paper from being drawn in all at once.

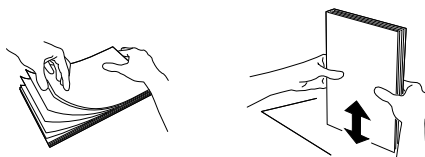


- 1 Fold open the lever on the right beside the paper feed towards front.
- 2 Insert paper in the paper feeder. You can insert **maximum 50 sheets** (A4 · 80 g/m²).
- 3 Fold open the lever on the right beside the paper feed backward in order to enclose the paper.

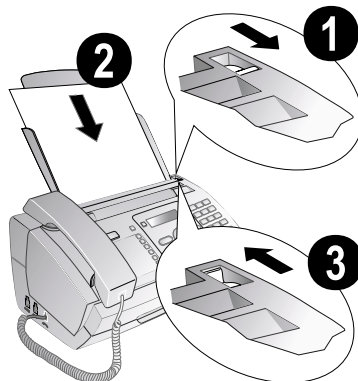

Connecting the Handset

Plug one end of the spiral cable into the socket on the telephone handset. Insert the other end into the socket designated with the  symbol.

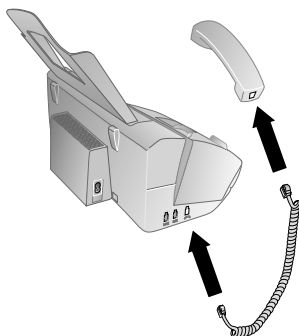

Connecting the Telephone Cord


Notice



Analogue Fax Machine

Your device is an analogue fax device (Group 3). It is not an ISDN device (Group 4), and therefore it cannot be operated directly on an ISDN connection. In order to do this, you need either an analogue adapter or a connection for analogue terminals.

Connect the telephone cable to the device by inserting it in the socket designated with **LINE** (RJ-11-Connector). Insert the telephone plug into your PTT line socket.

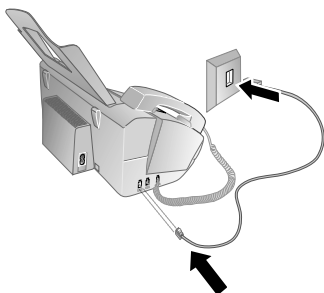

Notice



Connection to Private Automatic Branch Exchange

If you connect your device as extension to a telephone system, you must set it for working as an extension (also see Chapter *Telephone connections and additional devices*, page 50).

Ireland

When connecting to the telephone line socket, use only a **two-pin** RJ-11-telephone cable (modular plug). The use of a four-pin telephone cable may lead to the device not functioning correctly.

Connecting the Power Cord

CAUTION!




Mains Voltage at the Site of Installation!

Check whether the mains voltage of your device (indicated on the type label) matches the mains voltage available at the setup location.


Connecting Mains Cable of the Device

Insert the mains cable into the connection located on the rear side of the device. Plug the power cable into the electrical outlet.

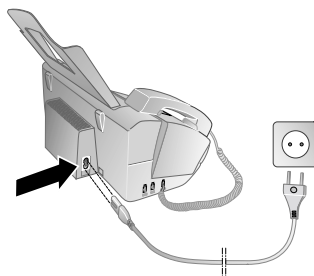


Connecting the Mains Cable of the Charging Station

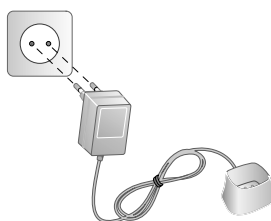

 Connect the mains cable of the charging station to the electrical socket.



Initial Installation

After you connect your device to the mains voltage, the initial installation commences. Press . Your device prints a help page.

Selecting the Language

- 1 Use / to select the desired display language.
- 2 Confirm with **OK**.

Selecting the Country

CAUTION!



Setting the Country Correctly!

You must set the country in which you are operating the device. Otherwise your device is not adapted to the telephone network. If your country is not included in the list, you must select a different setting and use the correct telephone cable for the country. Consult your retailer.

- 1 Use ▲/▼ to select the country in which you are operating the device.
- 2 Confirm with **OK**.

After this input, the device prints another help page and checks the telephone line.

Entering Number

Your name and number are added together with date, time and page number at the top edge of each fax transmission (= header).

- 1 Enter your number. Using **#** or ***** you can enter a plus sign.
- 2 Confirm with **OK**.

Entering Your Name

- 1 Enter your name. You can enter characters using the numeric keys (see button labels). Enter special characters using **0**. Press the respective button several times until the desired character or special character appears on the display.

Notice



Navigating in the Editor

You can move the cursor using ▲/▼. Use **C** to delete individual characters.

- 2 Confirm with **OK**.

After the input, the machine prints an overview of the functions.

Entering the Date and Time

- 1 Enter the time, e.g. **1 4 0 0** for 2 pm.
- 2 Enter the date (two digits for each field), for example **0 8 0 6 0 7** for June 8th, 2007.
- 3 Confirm with **OK**.

Notice



Starting Initial Installation Process

You can restart the initial installation process any time. Press **1** and **2**.

Inserting Batteries in Cordless Telephone

- 1 Insert the new rechargeable batteries in the battery compartment with the positive and negative poles as shown in the picture in the battery compartment.

EN

DANGER!



No Non-Rechargeable Batteries!

Never use non-rechargeable batteries in the cordless telephone. Follow the specifications in the technical data.




- 2 Place the cover on the battery compartment and slide it upward until it snaps into place.
- 3 Place the cordless telephone into the charging station.

DANGER!



Never Into the Charging Station Without Batteries!

Never place the cordless telephone into the charging station without batteries.

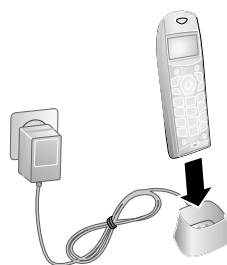


Notice



Charging Batteries for 12 Hours

Leave the cordless telephone in the charging station for at least twelve hours. The batteries will heat up slightly during charging; this is not dangerous.

Putting Cordless Telephone in Operation

Press the green  key for at least two seconds for switching on your cordless telephone.

Normally your cordless telephone is registered with your device in the factory. In the starting mode, press **OK**. The display shows on which base unit and with which number the cordless telephone is registered.

Notice



Unregistered Cordless Telephones

If you acquired a model with several cordless telephones, only one cordless telephone is registered with your device in the factory. Insert the batteries as described above and register the cordless telephones with your device (also see Chapter "Telephone Connections and Additional Devices", page 50).

4 Telephone Functions

For information on how to connect additional cordless telephones and another device and which functions are available to you, please refer the chapter on Telephone Connections and additional devices, Page 50.

Placing a Call on the Device

Dial the desired number. There are several ways to do this: Then pick up the handset.

Notice



Direct Dialling

You can also lift up the receiver first, then dial a number. The dialling process begins immediately.

Manual Dialling: Dial the desired number using the numeric keypad.

Telephone Book:

1 Press **□** **A-Z**.

Notice



Access Function

You can also search for an entry in the telephone book by pressing **OK**, **1** **1** and **OK**.

2 Select an entry using **▲/▼**. Enter the starting letters with the numeric keypad to quickly navigate through the telephone book.

Notice



Multiple Categories for One Entry

You can save an entry multiple times with the same name but in a different category. In the telephone book, the first letter of the category appears after the entry.

Speed Dialling: Press the desired speed dial key (1... 6).

Redial List: Press **☉**. Use **▲/▼** to select an entry from the list of the dialled numbers.

Notice



Access Function

You can also load the redial list by pressing **OK**, **2** **2** and **OK**.

Caller List: Press and hold **☉** (at least two seconds). Use the **▲/▼** to select an entry from the list of callers.

Notice



Access Function

You can also load the caller list by pressing **OK**, **2** **1** and **OK**.

Notice



Calling Line Identification (CLIP)

For this function to work, the Caller Line Identification (CLIP) must be activated for your telephone connection (country and network dependent). The number and name will not be shown if the caller suppresses his number.

Getting Outside Line

Private branch exchanges (PABX) are typical in many offices and some households. You must dial an outside line access code in order to get a connection to the public telephone network (PSTN) from a PABX.

Enter the outside line access code with which you reach the public telephone network before you enter the desired number or select a stored entry. The outside line access code is usually **0**.

Notice



Incorrect Outside Line Access Code

In rare cases, the outside line access code may be a different number or a two-digit number. For older telephone systems, the outside line access code can be R (= Flash). Press **R** to enter this outside line access code. If the connection to the public telephone network is not possible, contact your telephone system supplier.

Notice



Connection to Private Automatic Branch Exchange

If you operate your device permanently at an extension, store the outside line access code with the 96 function (see page 50).


Chain Dialling

You can combine and edit manually entered digits and saved entries, before the dialling process starts. If you have saved, for example, the telephone number prefix of an inexpensive telephone service provider (call-by-call) as a telephone book entry, select this entry and manually enter the subsequent telephone number or select another saved entry.

Insert Dialling Pause

It may be necessary to insert a dial pause in telephone number, for example, for a direct-inward dialling number, a sub-address or in a long distance number. Hold **R** pressed (for at least two seconds). **-** appears on the display. The second part of the number is dialled only after a short pause.


Putting a Call from Cordless Telephone

Dial the desired number. There are several ways to do this: Then press .

Notice





Direct Dialling

You can also press  first and then dial a number. The dialling process begins immediately.

Notice






Forwarding Fax to the Device

If you receive a call on the cordless telephone and hear that it is a fax call (whistling tone or silence), you can start the fax reception on the device. Press either **START** on the device or   on the cordless telephone.

Manual Dialling: Dial the desired number using the numeric keypad.

Telephone Book of the Cordless Telephone:

- 1 Hold  pressed (for at least two seconds).
- 2 Select an entry using /. Enter the starting letters with the numeric keypad to quickly navigate through the telephone book.




Notice


 



Additional Number





 
 


If you have added an additional number to an entry, this entry appears twice in the telephone book. The symbol of the category appears before the name.

Telephone Book of the Device:

- 1 Press .
- 2 Select an entry using /. Enter the starting letters with the numeric keypad to quickly navigate through the telephone book.

Redial List: Press and hold  (at least two seconds). Use / to select an entry from the list of the dialled numbers.



Caller List:

- 1 Press /, and using / to select **CALLS**.
- 2 Confirm with **OK**.
- 3 Using /, select from which list you would like to dial a number.
- 4 Confirm with **OK**.
- 5 Select the desired number using /.

  Notice

 
 

 



Adjusting Volume Level

You can adjust the volume level of the speaker on the cordless telephone using / even during a call.

Looking Up Numbers


During a call, you can look up the telephone book entries.

- 1 During a call, press  **Menu**.
- 2 Using / select **PHONEBOOK**.
- 3 Using /, dial the desired entry.

Notice



Navigating in the Menu

Press  **Return** to go back to the previous menu level.

Calling Additional Telephone Functions

(Function is not supported in all countries and networks)

You can use additional telephone functions with your device for example call toggling, three-way call or call forwarding. Contact your telephone company to inquire whether or not these functions are available for your connection. The signal to the switchboard to call these services is a short line interruption (Hook Flash). How to call up the functions, depends on your telephone company and may vary from the description found below.

On the Device

Making a Second Call

- 1 During a call, press **R**.
- 2 Enter the desired number using the numeric keypad or select a saved entry.

Switching Between Calls (= Call Toggling)

Press **R**, to toggle between the calls.

Receiving a Second Call

During a call, you can be informed about another call by a notification tone (= call waiting) if your telephone company offers this service. The notification tone for call waiting on the device is switched off in the factory.

During a call, press **R** to accept the new call.


 


Notice



Calling Line Identification (CLIP)

For this function to work, the Caller Line Identification (CLIP) must be activated for your telephone connection (country and network dependent). The number and name will not be shown if the caller suppresses his number.

Switching Notification Tone for Call Waiting On/Off

- 1 Press **OK**,   and **OK**.
- 2 Use /, to select whether you would like to turn the call waiting on or off.
- 3 Confirm with **OK**.

On the Cordless Telephone

Receiving a Second Call

During a call, press **●● ACCEPT** to accept the new call.

Switching Between Calls (= Call Toggling)

Notice



Hot Key

Press **R**, to toggle between the calls.

- 1 During a call, press **●● MENU**.
- 2 Using **▲/▼** select **SWITCH**.
- 3 Confirm with **OK**.

Making a Second Call

Notice



Hot Key

Press **●**, and dial the other number.

- 1 During a call, press **●● MENU**.
- 2 Using **▲/▼** select **SECOND CALL**.
- 3 Enter the desired number using the numeric keypad.
- 4 Press **●● CALL**.

Notice



Hot Key

Press **●** and **[1]**, to end the call and to activate the call on hold.

Hands-Free

On the Device

- 1 Press **📞** to dial without lifting up the handset. You will hear a dial tone from the loudspeaker.
- 2 Enter the desired number using the numeric keypad or select a saved entry. The dialling process begins immediately. At this stage, any numbers that have been incorrectly entered can no longer be changed.

Notice



Hands-Free

Put the handset near the device with the microphone facing up in order to achieve an optimum communication.

On the Cordless Telephone

Notice



Low Battery Charge

This function is not available if the battery charge of the cordless telephone is low. Place the cordless telephone into the charging station.

Switching On Hands-free

- 1 During a call, press **●● MENU**.
- 2 Using **▲/▼** select **DEACT..**
- 3 Confirm with **OK**.

Switching Off Hands-free

- 1 Select **DEACT..** again.
- 2 Press **●● DEACT..**

Notice



Switching Hands-Free On/Off

You can switch the hands-free mode on and off by pressing **📞** key during a telephone call.

Mute Mode

You can put the handset on mute, if you want to speak to someone without letting the caller hear the conversation.

On the Device

- 1 During a call, press **C**. Your caller cannot hear anymore.
- 2 Press **C** again to continue with the call.

On the Cordless Telephone

- 1 During a call, press **●● MENU**.
- 2 Using **▲/▼** select **SECRET**.
- 3 Confirm with **OK**. Your caller cannot hear anymore.
- 4 Press **● EXIT** to continue with the call.

Notice



Mute Mode

The mute mode of the cordless telephone can also be switched on/off by pressing and holding **C** (at least 2 seconds).

Recording a Telephone Conversation

You can record a telephone conversation. After recording, the **📞📞** key flashes, and you can hear the recording like a message on the answering machine.

CAUTION!



Recording a Telephone Conversation!

You must inform your caller when recording a telephone conversation.

- 1 During a call, press **[2-3]**. The recording begins.
- 2 Press **[2-3]** again to end the recording.

Forwarding a Call

You can forward calls from the device to registered cordless telephones. From the cordless telephone, you can forward calls to the device or to other cordless telephones.

From the Device

To a Cordless Telephone

- 1 During a call, press **→**.
- 2 Dial the number of the cordless telephone using the numeric keypad.
- 3 Hang up.

To all Cordless Telephones

- 1 During a call, press **→**.
- 2 Hang up.

From the Cordless Telephone

To the Device

- 1 During a call, press **●● Menu**.
- 2 Using **▲/▼** select **CALL TRANSFER**.
- 3 Confirm with **OK**.
- 4 Using **▲/▼** select **HANDSET 0**.
- 5 Confirm with **OK**.
- 6 Press **↵**, to hang up.

To other Cordless Telephones

Notice



Function Only Available with Several Cordless Telephones Registered to the device

This function is available only if you have registered several cordless telephones with your device and the telephones are within the range of the device.

- 1 During a call, press **●● Menu**.
- 2 Using **▲/▼** select **CALL TRANSFER**.
- 3 Confirm with **OK**.
- 4 Select the cordless telephone to which you would like to transfer the call using **▲/▼**.
- 5 Confirm with **OK**.
- 6 Press **↵**, to hang up.

Getting Back the Telephone Call

You can get a transmitted telephone call back, before the cordless telephone is picked up.

- 1 Press **●● Menu**.
- 2 Using **▲/▼** select **HANGING UP**.
- 3 Confirm with **OK**.

Placing Internal Calls

From the Device

Calling a Cordless Telephone

- 1 In starting mode, pick up the handset.
- 2 Press **→**.
- 3 Dial the number of the cordless telephone using the numeric keypad.

Calling all Cordless Telephones

- 1 In starting mode, pick up the handset.
- 2 Press **→**.

Notice



Ending Internal Call

You can also terminate an internal telephone call by pressing **→** without hanging up. You can place an internal or external call.

From the Cordless Telephone

Calling the Device

- 1 In the starting mode, press **→**.
- 2 Using **▲/▼** select **HANDSET 0**.
- 3 Press **●● Call**.

Calling other Cordless Telephones

Notice



Function Only Available with Several Cordless Telephones Registered to the device

This function is available only if you have registered several cordless telephones with your device and the telephones are within the range of the device.

- 1 In the starting mode, press **→**.
- 2 Using **▲/▼** dial the cordless telephone you would like to call.
- 3 Press **●● Call**.

Calling Line Identification (CLIP)

(Function is not supported in all countries and networks)

The number of an incoming call appears on the display. For this function to work, the Calling Line Identification Presentation (CLIP) must be activated for your telephone connection. Enquire with your telephone company. Caller Line Identification may be associated with a fee.

Notice



Setting the Country Correctly

If the Caller Line Identification does not work even though the function is activated for your telephone connection, check if you have set the correct country (also see Chapter Settings, page 44).

Missed Calls

Notice



Displaying Telephone Book Names

Your device displays the name with which you have saved the number in the telephone book. The number and name will not be shown if the caller suppresses his number.

On the Device

If you received a call while away, the - key flashes.

- 1 Press .
- 2 Using , you can page through the list of missed calls.

Notice



Additional Messages

If you have received additional messages, first select the missed calls using and confirm with **OK**.

- 3 Pick up the handset or press , on the cordless telephone to call back.

On the Cordless Telephone

If you receive calls in your absence, a message appears on the display of the cordless telephone.

- 1 Press **OK**.
- 2 Using , you can page through the list of missed calls.
- 3 Press , to call back.

5 Telephone Book of the Device

Notice



Printing Telephone Book Functions

Press **[1]** and **[3]** to print an overview of the telephone book functions.

In the telephone book of your device, you can save entries with multiple numbers and collect multiple entries into groups. You can assign various ring tones to the entries. Follow the specifications in the technical data.

Notice



Navigating in the Editor

You can move the cursor using **▲/▼**. Use **C** to delete individual characters. Press **STOP** to close the menu and return to the starting mode.

Saving entry

- 1 Hold **[A-Z]** pressed (for at least two seconds).

Notice



Access Function

You can also call the function by pressing **OK**, **[1]****[2]** and **OK**.

- 2 Enter the name. You can enter characters using the numeric keys (see button labels). Enter special characters using **[0]**. Press the respective button several times until the desired character or special character appears on the display.
- 3 Confirm with **OK**.
- 4 Using **▲/▼**, select the category for which you would like to enter a number: **CATEGORY: HOME**, **CATEGORY: WORK**, **CATEGORY: MOBILE** or **CATEGORY: FAX**.
- 5 Confirm with **OK**.
- 6 Enter the telephone number.
- 7 Confirm with **OK**.
- 8 You can assign a ring tone to the number. Use the number keys **[0]** to **[9]** to select a ring tone. Using **▲/▼**, set the volume.
- 9 Confirm with **OK**. The entry is saved.

Edit Entry

- 1 Press **OK**, **[1]****[5]** and **OK**.
- 2 Using **▲/▼** select the entry which you would like to edit.
- 3 Confirm with **OK**.
- 4 Edit the name.
- 5 Confirm with **OK**.

- 6 Using **▲/▼**, select the category for which you would like to enter a number: **CATEGORY: HOME**, **CATEGORY: WORK**, **CATEGORY: MOBILE** or **CATEGORY: FAX**.
- 7 Confirm with **OK**.
- 8 Enter the telephone number.
- 9 Confirm with **OK**.
- 10 You can assign a ring tone to the number. Use the number keys **[0]** to **[9]** to select a ring tone. Using **▲/▼**, set the volume.
- 11 Confirm with **OK**. The entry is saved.

Deleting an Entry

- 1 Press **OK**, **[1]****[6]** and **OK**.
- 2 Using **▲/▼** select the entry which you would like to delete.
- 3 Confirm with **OK**.
- 4 Confirm **DELETE: YES** with **OK**.

Groups

You can combine several telephone book entries into a group. A message is sent to all members of this group in succession.

Adding Group Entries

- 1 Press **OK**, **[1]****[3]** and **OK**.
- 2 Use **▲/▼** to select the group you would like to create.
- 3 Confirm with **OK**. You can add entries to the group, display the members of the group, delete the group or send a fax to the group.
- 4 Using **▲/▼** select **ADD MEMBER?**.
- 5 Confirm with **OK**.
- 6 Use **▲/▼** to select the entry you would like to add to the group.
- 7 Confirm with **OK**.
- 8 Repeat steps **4** to **6** to add additional entries to the group.
- 9 Press **STOP** to end the input.

Displaying Group Entries

- 1 Press **OK**, **[1]****[3]** and **OK**.
- 2 Use **▲/▼** to select the group you would like to display.
- 3 Confirm with **OK**.
- 4 Using **▲/▼** select **VIEW MEMBERS?**.
- 5 Confirm with **OK**.
- 6 Page through the entries of the group with **▲/▼**.
- 7 Press **STOP** twice to return to the starting mode.

Deleting Individual or All Group Entries

Deleting an Individual Entry

- 1 Press **OK**, **[1][3]** and **OK**.
- 2 Using **▲/▼** select the group from which you would like to delete entries.
- 3 Confirm with **OK**.
- 4 Using **▲/▼** select **DELETE MEMBER?**.
- 5 Confirm with **OK**.
- 6 Using **▲/▼** select the entry which you would like to delete.
- 7 Confirm with **OK**.
- 8 Using **▲/▼** select **DELETE: YES**.
- 9 Confirm with **OK**. The entry is deleted.

Deleting a Group

- 1 Press **OK**, **[1][3]** and **OK**.
- 2 Using **▲/▼** select the group you would like to delete.
- 3 Confirm with **OK**.
- 4 Using **▲/▼** select **DELETE MEMBER?**.
- 5 Confirm with **OK**.
- 6 Using **▲/▼** select **DELETE: ALL**.
- 7 Confirm with **OK**. All entries in the group are deleted.

Speed dialling

You can assign the speed dial keys to frequently dialled telephone numbers. You can load these telephone numbers quickly with the speed dial keys.

Assigning or editing speed dial entry

- 1 Press and hold (at least two seconds) the speed dial button (**1 ... 6**), which you would like to assign or change.

Notice



Access Function

You can also call the function by pressing **OK**, **[1][4]** and **OK**.

- 2 Confirm using **OK**.
- 3 Using **▲/▼** select the telephone book entry which you would like to assign to this speed dial button.
- 4 Confirm using **OK**.

Deleting a speed dial entry

CAUTION!



The telephone book entry is deleted!

With this function, you can not only delete the speed dial entry, but also the entire entry from the telephone book. Overwrite the speed dial entry, if you want to modify the assignment.

- 1 Press the speed dial button (**1 ... 6**), whose entry you want to delete.

Notice



Access Function

You can also call the function by pressing **OK**, **[1][4]** and **OK**.

- 2 Press **C**.
- 3 Confirm the deletion with **OK**.

6 Telephone Book of the Cordless Telephone

EN

Notice



Restricted Telephone Book Functions

All functions for the telephone book of the device are not available to you on the cordless telephone.

Notice



Navigating in the Menu

Use **C** to delete individual characters. Press **↵** to close the menu and return to the starting mode.

Saving Entry

Notice



Restricted Telephone Book Functions

You can add entries to the telephone book of the cordless telephone only.

- 1 Hold **□** pressed (for at least two seconds).
- 2 Using **▲/▼** select **<New>**.
- 3 Enter the name. You can enter characters using the numeric keys (see key labels). Enter special characters using **0** or **#**. Press and hold the respective key or press it several times until the desired character appears on the display.
- 4 Confirm with **OK**.
- 5 Enter the telephone number.
- 6 Confirm with **OK**.
- 7 Using **▲/▼**, select the category for which you would like to enter a number: **HOME**, **WORK**, **MOBILE** or **FAX**.
- 8 Confirm with **OK**.

Edit Entry

Notice



Restricted Telephone Book Functions

You can edit the entries on the cordless telephone only.

- 1 Hold **□** pressed (for at least two seconds).
- 2 Using **▲/▼** select the entry which you would like to edit.
- 3 Press **●● Option**.
- 4 Using **▲/▼** select **EDIT ENTRY**.
- 5 Confirm with **OK**.
- 6 Modify the name. Use **C** to delete individual characters.
- 7 Confirm with **OK**.
- 8 Modify the number.
- 9 Confirm with **OK**.
- 10 Select a category using **▲/▼**.
- 11 Confirm with **OK**.

Deleting an Entry

- 1 Hold **□** pressed (for at least two seconds).
- 2 Using **▲/▼** select the entry which you would like to delete.
- 3 Press **●● Option**.
- 4 Using **▲/▼** select **DELETE ENTRY**.
- 5 Confirm with **OK**.
- 6 Confirm the deletion with **●● Yes**.

Adding an Additional Number

Notice



Additional Number

If you have added an additional number to an entry, this entry appears twice in the telephone book. The symbol of the category appears before the name.

- 1 Hold **□** pressed (for at least two seconds).
- 2 Using **▲/▼** select the entry which you would like to edit.
- 3 Press **●● Option**.
- 4 Using **▲/▼** select **ADD NUMBER**.
- 5 Confirm with **OK**.
- 6 Enter the additional number.
- 7 Confirm with **OK**.
- 8 Select a category using **▲/▼**.
- 9 Confirm with **OK**.

Changing the Ring Tone

You can assign a separate ring tone to each entry. In this way you can distinguish between business and personal calls.

Notice



Calling Line Identification (CLIP)

For this function to work, the Caller Line Identification (CLIP) must be activated for your telephone connection (country and network dependent). The number and name will not be shown if the caller suppresses his number.

- 1 Hold **□** pressed (for at least two seconds).
- 2 Using **▲/▼** select the entry which you would like to edit.
- 3 Press **●● Option**.
- 4 Using **▲/▼** select **RINGER TYPE**.
- 5 Confirm with **OK**.
- 6 Select the desired ring tone using **▲/▼**.
- 7 Confirm with **OK**.

Calling Options

Telephone Book Entries on the Device

- 1 Press **□**.
- 2 Using **▲/▼**, dial the desired entry.
- 3 Press **●● Option**.
- 4 Select the desired option using **▲/▼**. You can have the details of the entry displayed, call the number, send an SMS to the number or search for some other entry.
- 5 Confirm with **OK**.

 
Telephone Book Entries of the Cordless Telephone

- 1 Hold **□** pressed (for at least two seconds).
- 2 Using **▲/▼**, dial the desired entry.
- 3 Press **●● Option**.
- 4 Select the desired option using **▲/▼**. You can have the details of the entry displayed, call the number, send an SMS to the number, edit or delete the entry, assign a special ring tone or add an additional number to the entry, search for some other entry or save a new entry.
- 5 Confirm with **OK**.

7 Cordless Telephone

Looking for Cordless Telephone



This function helps you in locating cordless telephones, which you have misplaced. For this purpose the cordless telephones must be registered with the device and must be within its range.

Press  on the device. All cordless telephones registered with the device ring for approx. one minute.



Notice




 
 
Access Function

You can also call the function by pressing **OK**,   and **OK**.

     Switching On and Off

 

 
 


You can switch your cordless telephone off to save power. Press and hold  (at least two seconds) for switching off the cordless telephone. Press and hold  (at least two seconds) for switching on the cordless telephone.

Navigating in the Menu

 

 


Press one of the two arrow keys  to open the function menu. Page through  menu entries. Use **OK** to select a menu function. Press **C** to return to the previous menu level. Press  to close the menu and return to the starting mode.

Keypad lock


On monochrome Dect

- 1 Press , and using  to select **SETTINGS**.
- 2 Confirm with **OK**.
- 3 Using  select **SECURITY**.
- 4 Confirm with **OK**.
- 5 Using  select **KEYPAD LOCK**.
- 6 Confirm with **OK**.
- 7 Using  select **Yes** to switch on the function. Using  select **No** to switch on the function.

On colour Dect

- 1 Press , and using  select **SECURITY**.
- 2 Confirm using **OK**.
- 3 Using  select **KEYPAD LOCK**.
- 4 Confirm with **OK**.
- 5 Using  select **Yes** to switch on the function. Using  select **No** to switch on the function.

Activating emergency call number

Using this function you can save a number as an emergency call number. If the emergency call function is activated, the number is dialled as soon as  is pressed. You can dial and call other telephone numbers with the numeric keypad.

 
 
 
 

 
 
Notice



No Actual Emergency Call Numbers

It is recommended not to save any actual emergency call number (e.g. police or fire brigade) with this function, so that you do not accidentally call this emergency call number.

On monochrome Dect

- 1 Press , and using  to select **SETTINGS**.
- 2 Confirm with **OK**.
- 3 Using  select **SECURITY**.
- 4 Confirm with **OK**.
- 5 Using  select **EMERGENCY**.
- 6 Confirm with **OK**.
- 7 Press  **EDIT ENTRY**.
- 8 Using  select **ACTIVATE** to switch on the function. Using  select **DEACTIVATE** to switch off the function.
- 9 Confirm with **OK**.

 
 
 
 

 
Notice



Initial Activation

When you activate the function for the first time, you must enter a number. This number remains stored.

Modifying the Emergency Call Number

- 1 Press , and using  to select **SETTINGS**.
- 2 Confirm with **OK**.
- 3 Using  select **SECURITY**.
- 4 Confirm with **OK**.
- 5 Using  select **EMERGENCY**.
- 6 Confirm with **OK**.
- 7 Press  **EDIT ENTRY**.
- 8 Using  select **CHANGE NO**.
- 9 Confirm with **OK**.
- 10 Enter the telephone number.
- 11 Confirm with **OK**.

On colour Dect

- 1 Press ▲/▼, and using ▲/▼ select SECURITY.
- 2 Confirm using **OK**.
- 3 Using ▲/▼ select EMERGENCY.
- 4 Confirm with **OK**.
- 5 Press ● EDIT ENTRY.
- 6 Using ▲/▼ select ACTIVATE to switch on the function. Using ▲/▼ select DEACTIVATE to switch off the function.
- 7 Confirm with **OK**.

Notice



Initial Activation

When you activate the function for the first time, you must enter a number. This number remains stored.

Modifying the emergency call number

- 1 Press ▲/▼, and using ▲/▼ select SECURITY.
- 2 Confirm using **OK**.
- 3 Using ▲/▼ select EMERGENCY.
- 4 Confirm with **OK**.
- 5 Press ● EDIT ENTRY.
- 6 Using ▲/▼ select CHANGE NO.
- 7 Confirm with **OK**.
- 8 Enter the telephone number.
- 9 Confirm with **OK**.

Additional Functions

Notice



Telephone Call at Alarm Time

If you place a call at a preset alarm time, the cordless telephone rings after the call is terminated.

Notice



Navigating in the Menu

Press **C** to return to the previous menu level. Press **⏪** to close the menu and return to the starting mode.

Alarm

The cordless telephone rings each day at the set time with the selected ringer tone. Press any key to switch off the alarm. If you would like to completely switch off the alarm, you must deactivate the function.

Setting the Wake-up Alarm

- 1 Press ▲/▼, and using ▲/▼ to select ACCESSORIES.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select ALARM.
- 4 Confirm with **OK**.

- 5 Press ● EDIT ENTRY.
- 6 Using ▲/▼ select RINGER TYPE.
- 7 Confirm with **OK**.
- 8 Select the desired ring tone using ▲/▼.
- 9 Confirm with **OK**.
- 10 Using ▲/▼, set the volume.
- 11 Confirm with **OK**.
- 12 Using ▲/▼ select SET TIME.
- 13 Confirm with **OK**.
- 14 Enter the time at which you would like to be woken up, e.g. **00****07****00****00** for 7 a.m.
- 15 Confirm with **OK**.
- 16 Confirm with **OK** to switch on the alarm.

Deactivating the Alarm Clock

- 1 Press ▲/▼, and using ▲/▼ to select ACCESSORIES.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select ALARM.
- 4 Confirm with **OK**.
- 5 Press ● EDIT ENTRY.
- 6 Using ▲/▼ select DEACTIVATE.
- 7 Confirm with **OK**.

Timer

Using the Timer function (countdown alarm) you can enter a time, after which the cordless telephone rings. You can set whether the remaining time should be shown on the display. Press any key to switch off the alarm.

Notice



Telephone Call when Using Timer Function

While the timer is running, you can talk on the phone without interrupting the timer.

Setting the Timer

- 1 Press ▲/▼, and using ▲/▼ to select ACCESSORIES.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select TIMER.
- 4 Confirm with **OK**.
- 5 Press ● EDIT ENTRY.
- 6 Using ▲/▼ select SET DURATION.
- 7 Confirm with **OK**.
- 8 Enter the minutes (max. 99 minutes).
- 9 Confirm with **OK**.
- 10 Using ▲/▼ select VIEW.
- 11 Confirm with **OK**.
- 12 Using ●● select Yes to switch on the function. Using ● select NO to switch on the function.
- 13 Using ▲/▼ select RINGER TYPE.
- 14 Confirm with **OK**.

- 15 Select the desired ring tone using ▲/▼.
- 16 Confirm with **OK**.
- 17 Using ▲/▼, set the volume.
- 18 Confirm with **OK**.
- 19 Press ● **Return** after carrying out all the settings.
- 20 Press ●● **Start** to start the timer.

Modifying the Timer

Before you can modify the timer settings, you must switch off the current timer.

- 1 Press ● **Stop**.
- 2 You will be asked, whether you would like to switch off the timer. Confirm with ●● **Yes**.

You can now access the timer menu and modify settings.

Birthday Reminder

Using the birthday reminder you can enter the dates for up to ten birthdays. The cordless telephone rings at the entered time on the entered date. Press any key to switch off the alarm.

Entering a Birthday

- 1 Press ▲/▼, and using ▲/▼ to select **ACCESSORIES**.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select **BIRTHDAY**.
- 4 Confirm with **OK**.
- 5 Using ▲/▼ select <New>.
- 6 Confirm with **OK**.
- 7 Enter the name.
- 8 Confirm with **OK**.
- 9 Enter the birth day, e.g. for 8th June.
- 10 Confirm with **OK**.
- 11 Enter the time, e.g. for 2 pm.
- 12 Confirm with **OK**.

Displaying a Birthday

- 1 Press ▲/▼, and using ▲/▼ to select **ACCESSORIES**.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select **BIRTHDAY**.
- 4 Confirm with **OK**.
- 5 Using ▲/▼ select the entry which you would like to be displayed.
- 6 Confirm with **OK**. Name, date and time of the birthday reminder are displayed.
- 7 End the function using **Return**.

Modifying a Birthday

- 1 Press ▲/▼, and using ▲/▼ to select **ACCESSORIES**.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select **BIRTHDAY**.
- 4 Confirm with **OK**.
- 5 Using ▲/▼ select the entry which you would like to modify.
- 6 Press ●● **Option**.
- 7 Using ▲/▼ select **EDIT ENTRY**.
- 8 Confirm with **OK**.
- 9 Modify the name. Use **C** to delete individual characters.
- 10 Confirm with **OK**.
- 11 Modify the date.
- 12 Confirm with **OK**.
- 13 Modify the time.
- 14 Confirm with **OK**.

Deleting a Birthday

- 1 Press ▲/▼, and using ▲/▼ to select **ACCESSORIES**.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select **BIRTHDAY**.
- 4 Confirm with **OK**.
- 5 Using ▲/▼ select the entry which you would like to delete.
- 6 Press ●● **Option**.
- 7 Using ▲/▼ select **DELETE ENTRY**.
- 8 Confirm with **OK**.
- 9 Confirm the deletion with ●● **Yes**.

Changing the Ring Tone

You can assign a separate ring tone to each birthday reminder.

- 1 Press ▲/▼, and using ▲/▼ to select **ACCESSORIES**.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select **BIRTHDAY**.
- 4 Confirm with **OK**.
- 5 Using ▲/▼ select the entry to which you would like to assign a new ring tone.
- 6 Press ●● **Option**.
- 7 Using ▲/▼ select **RINGER TYPE**.
- 8 Confirm with **OK**.
- 9 Select the desired ring tone using ▲/▼.
- 10 Confirm with **OK**.
- 11 Using ▲/▼, set the volume.
- 12 Confirm with **OK**.

Acoustic Room Monitoring

Notice



Function Only Available with Several Cordless Telephones Registered to the device

This function is available only if you have registered several cordless telephones with your device and the telephones are within the range of the device.

With this function you can acoustically "monitor" a room (for example, a children's bedroom).

Setting up Room Monitoring

Set up the room monitoring on the receiver unit first.

- 1 On the receiver unit, press ▲/▼, and using ▲/▼ select **ACCESSORIES**.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select **ROOM MONITOR..**
- 4 Confirm with **OK**.
- 5 Using ▲/▼ select the transmitting cordless telephone.
- 6 Press ●● **Call**.
- 7 The transmitting unit starts ringing. Press **OK** to accept the call.
- 8 Using ●● **Yes** activate the baby-phone function on the transmitting unit.

The cordless telephones are now connected to each other in the monitoring mode. Place the transmitting unit in the room which you would like to acoustically monitor. Keep the receiver unit with you.

Notice



Telephone Calls During Room Monitoring

If you get a call when you are in the room monitoring mode, only the device rings. On the cordless telephone, the display gets lit up and a message appears.

Telephone Calls During Room Monitoring

If you get a call when you are in the room monitoring mode, only the device rings. On the cordless telephone, the display gets lit up and a message appears.

- 1 Press ●● **ACCEPT** on the cordless telephone to accept the call.
- 2 Press to end the call. The cordless telephone returns to the room monitoring mode.

You can place a call when in the room monitoring mode.

- 1 Press ●● **Call** and dial the desired number.
- 2 Press to make the connection.
- 3 Press to end the call. The cordless telephone returns to the room monitoring mode.

Ending Room Monitoring

Press on any one of the cordless telephones to end the room monitoring mode.

8 Answering Machine

Notice



Printing Answering Machine Functions

Press **[1]** and **[3]** to print an overview of the answering machine functions.

Switching On and Off

On the Device

Notice



Using Anonymous Outgoing Messages

If you do not record a personal announcement, the answering machine uses the anonymous announcement set by the factory.

Press **[2]** three times to turn the answering machine on or off. If the answering machine is turned on, the symbol **[2]** appears on the display.

Notice



Access Function

You can also call the function by pressing **OK**, **[7]****[1]** and **OK**.

On the Cordless Telephone

- 1 Press **▲/▼**, and using **▲/▼** to select **VOICE MAIL**.
- 2 Confirm with **OK**.
- 3 Using **▲/▼** select **ON/OFF**.
- 4 Confirm with **OK**.
- 5 Using **●** select **EDIT ENTRY**.
- 6 Using **▲/▼**, select whether you would like the answering machine to be switched on or off with or if a message being recorded.
- 7 Confirm with **OK**.
- 8 Confirm with **●● Valid..**

Editing the Outgoing Message

On the Device

Notice



Recording the Outgoing Message

During playback, press **C** and **OK** in order to delete the currently playing outgoing message. Using **▲/▼**, set the volume. Stop the playback with **STOP**.

Recording the Outgoing Message

- 1 Press **[2]**.
- 2 Using **▲/▼** select **OUTGOING MSG..**
- 3 Confirm with **OK**.

Notice



Access Function

You can also call the function by pressing **OK**, **[7]****[5]** and **OK**.

- 4 Using **▲/▼** select **MESSAGE: RECORD**.
- 5 Confirm with **OK**.
- 6 Press **OK** to record an outgoing message. Wait for the confirmation tone before you say your text.

Notice



Length of Outgoing Message

The outgoing message must be longer than ten seconds and shorter than twenty seconds.

- 7 Press **OK** to end the recording. The recording is played back.

Notice



Recording the Outgoing Message

If the volume of the outgoing message is too low, rerecord the same. For recording, lift up the telephone handset of the device and speak the text into the microphone.

Playing Back the Outgoing Message

- 1 Press **[2]**.
- 2 Using **▲/▼** select **OUTGOING MSG..**
- 3 Confirm with **OK**.

Notice



Access Function

You can also call the function by pressing **OK**, **[7]****[5]** and **OK**.

- 4 Using **▲/▼** select **MESSAGE: PLAY**.
- 5 Confirm with **OK**. The outgoing message is played back.

Using Anonymous Outgoing Messages

You can replace your personal outgoing message with the factory default anonymous message.

- 1 Press **[2]**.
- 2 Using **▲/▼** select **OUTGOING MSG..**
- 3 Confirm with **OK**.

Notice



Access Function

You can also call the function by pressing **OK**, **[7]****[5]** and **OK**.

- 4 Using **▲/▼** select **MESSAGE: DEFAULT**.
- 5 Confirm with **OK**. The outgoing message is played back.

Using Announcement without Recording Message

You can record an outgoing message which the caller hears for which no message can be recorded in reply (= external memo).

1 Press **[9]**.

2 Using **▲/▼** select **EXTERN. MEMO**.

3 Confirm with **OK**.

Notice



Access Function

You can also call the function by pressing **OK**, **[7]** **[6]** and **OK**.

4 Use **▲/▼** to select whether you would like the outgoing message to be switched on/off without recording the message.

5 Confirm with **OK**.

Notice



Overwriting Existing Outgoing Message

When you record an outgoing message, you are asked, if you would like to use the old outgoing message or would like to record a new one. Confirm with **OK**.

6 **Recording a New Outgoing Message:** Press **OK** to record an outgoing message. Wait for the confirmation tone before you say your text.

Notice



Length of Outgoing Message

The outgoing message must be longer than ten seconds.

7 Press **OK** to end the recording. The recording is played back.

On the Cordless Telephone

Notice



Navigating in the Menu

Press **C** to return to the previous menu level. Press **☐** to close the menu and return to the starting mode.

Recording the Outgoing Message

1 Press **▲/▼**, and using **▲/▼** to select **VOICE MAIL**.

2 Confirm with **OK**.

3 Using **▲/▼** select **OUTGOING MSG..**

4 Confirm with **OK**.

5 Use **▲/▼** to select **EDIT ENTRY**.

6 Confirm with **OK**.

7 Press **●●** **Begin** to start the recording. Wait for the confirmation tone before you say your text.

Notice



Canceling the Recording

Using **●** **Exit** you can cancel the recording.

8 Press **●●** **End** to end the recording. The recording is played back.

9 You can end the playback of the outgoing message using **●●** **End**.

10 Press **●●** **Yes** to save the recording. Using **●** **No** you can reach the recording menu.

Notice



Length of Outgoing Message

The outgoing message must be longer than ten seconds and shorter than twenty seconds.

Playing Back the Outgoing Message

1 Press **▲/▼**, and using **▲/▼** to select **VOICE MAIL**.

2 Confirm with **OK**.

3 Using **▲/▼** select **OUTGOING MSG..**

4 Confirm with **OK**.

5 Using **▲/▼** select **PLAY**.

6 Confirm with **OK**.

7 You can end the playback of the outgoing message using **●●** **End**.

8 Press **●●** **Yes** to save the recording. Using **●** **No** you can reach the recording menu.

Using Anonymous Outgoing Messages

You can replace your personal outgoing message with the factory default anonymous message.

1 Press **▲/▼**, and using **▲/▼** to select **VOICE MAIL**.

2 Confirm with **OK**.

3 Using **▲/▼** select **OUTGOING MSG..**

4 Confirm with **OK**.

5 Using **▲/▼** select **DEFAULT**.

6 Confirm with **OK**.

7 Using **●●** select **Yes** to switch on the function. Using **●** select **No** to switch on the function.

8 **Switching on the function:** The outgoing message is played back. Using **●●** **End**, you can end the playback.

Listening to Messages

On the Device

 
Notice



Listening to Messages


Press **#** to play the next message. With the number keys, you can load the desired message directly. During playback, press **C** and **OK** in order to delete the currently playing outgoing message. Using **▲/▼**, set the volume. Stop the playback with **STOP**.

Listening to New Messages

If new messages have been received on the answering machine, the  key blinks. The number of the new messages is shown on the display.

- 1 Press .
- 2 Confirm with **OK**.
- 3 The new messages are played back.

Playing Messages again

- 1 Press .
- 2 Using **▲/▼** select **MESSAGES**.
- 3 Confirm with **OK**.

Notice



Access Function

You can also call the function by pressing **OK**, **7** **2** and **OK**.

 
- 4 Using **▲/▼** select **MESSAGE: PLAY**.
- 5 Confirm with **OK**. The messages are played back.

On the Cordless Telephone

Notice



Access Function

You can also call the function by pressing and holding **1**/ (at least two seconds).

Listening to New Messages

If new messages are received, a message appears on the display of the cordless telephone.

- 1 Press **OK**.
- 2 Select a message using **▲/▼**.
- 3 Confirm with **OK**. The message is played back. You can cancel the playback or switch between messages.

Interrupting the playback: Press **2** to pause the playback; press **2** again to continue the playback.

Navigating: Press **1** to return to the beginning of the current message. Press **3** to play the next message.

Ending the Playback: Press **↵**.

Playing Messages again

- 1 Press **▲/▼**, and using **▲/▼** to select **VOICE MAIL**.
- 2 Confirm with **OK**.
- 3 Using **▲/▼** select **MESSAGES**.
- 4 Confirm with **OK**.
- 5 Using **▲/▼** select **PLAY**.
- 6 Confirm with **OK**.
- 7 Select the desired message using **▲/▼**.
- 8 Confirm with **OK**. The message is played back.

Notice



Navigating

Press **2** to interrupt the current message. Press **1** and **3** to navigate among the messages.

Deleting Messages

On the Device

Deleting Individual Message

During playback, press **C** and **OK** in order to delete the currently playing outgoing message.


Deleting Messages already Played

Notice



Deleting New Messages

Messages not yet heard must be heard first before deleting them.

- 1 Press .
- 2 Using **▲/▼** select **MESSAGES**.
- 3 Confirm with **OK**.

Notice



Access Function

You can also call the function by pressing **OK**, **7** **2** and **OK**.

- 4 Using **▲/▼** select **MESSAGE: DELETE**.
- 5 Confirm with **OK**. The heard messages are deleted.

Notice



Deleting Heard Messages

You can also delete the already heard messages by pressing **C** and **OK** in the starting mode.

On the Cordless Telephone

Deleting Individual Message

During the playback, press **0** to delete the current message.

Deleting Messages already Played

Notice



Deleting New Messages

Messages not yet heard must be heard first before deleting them.

- 1 Press ▲/▼, and using ▲/▼ to select VOICE MAIL.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select MESSAGES.
- 4 Confirm with **OK**.
- 5 Using ▲/▼ select DELETE OLD.
- 6 Confirm with **OK**.
- 7 Confirm the deletion with ● Yes. Using ● No you can cancel the function.

Setting up Forwarding and Remote Access

Notice



Available Only on the Device

These functions are available only on the device.

Entering Access Code

You must enter an access code to be able to receive transferred messages, or listen to and control your answering machine from other telephones.

Notice



Remote Control On/Off

The remote control is switched off with the factory-installed access code (0000). Change the access code to switch on the remote control. If you want to switch the remote control off enter the factory-installed code 0000 again.

- 1 Press [9].
- 2 Using ▲/▼ select ACCESS CODE.
- 3 Confirm with **OK**.

Notice



Access Function

You can also call the function by pressing **OK**, [7] [9] and **OK**.

- 4 Enter a four-digit code.

CAUTION!



No Identically PIN Codes!

The access code may not be identical to the VIP code.

- 5 Confirm with **OK**.

Forwarding Messages

The device forwards messages to a specified telephone number. Once the configured number of messages is reached, the device calls the number. If the call is answered, a greeting text is played. Then the person on the line must enter the access code. If no code is entered or an incorrect code is entered three times, the device hangs up.

- 1 Press [2].
- 2 Using ▲/▼ select FORWARDING.
- 3 Confirm with **OK**.

Notice



Access Function

You can also call the function by pressing **OK**, [7] [7] and **OK**.

- 4 Use ▲/▼ to select whether you would like to switch forwarding on or off.
- 5 Confirm with **OK**.
- 6 Enter the number to which the received messages should be forwarded.
- 7 Confirm with **OK**.
- 8 Use ▲/▼ to select how many messages should be collected and forwarded together.
- 9 Confirm with **OK**.

Notice



Overwriting Existing Outgoing Message

When you record a message, you are asked, if you would like to use the old message or would like to record a new one. Confirm with **OK**.

- 10 **Recording a new outgoing message:** Press **OK** to record an outgoing message. Wait for the confirmation tone before you say your text.
- 11 Press **OK** to end the recording. The recording is played back.

Using Remote Access

You can hear and delete new messages, record a new outgoing message or switch answering machine on or off with a telephone call.

Notice



Tone Dialling

The telephone on this connection must be set to tone dialling. Press a key within 50 seconds, otherwise the connection is cut-off (country and network dependent).

- 1 Call your number.
- 2 Wait, until the answering machine switches on and plays the outgoing message.
- 3 Enter the access code.

- 4 The device interrupts the outgoing message and plays new messages. If no new messages have been received, you will hear two confirmation tones.

Notice



Conserving Function of Fax Reception Mode

If you select the 5/2 option for the number of rings of the answering machine, the answering machine switches on after two rings, when you have received new messages. If there are no new messages, the device rings five times. If the device does not pick up after two rings, you have no new messages. You can terminate the remote access without incurring any telephone costs.

- 5 The functions listed below are available using the numeric keys.
- 6 Hang up to end the remote access.

Remote Control Functions

Notice



Aborting Current Function

Occasionally the answering machine might not react to your entry—for example while you are listening to a message. Cancel the current function by pressing **6**. Select the next function with the appropriate number key.

Listening to Messages

Hearing Current Message Again: Press **1**.

Listening to All Messages: Press **2**.

Listening to Next Message: Press **3**.

Deleting Messages

To Delete the Current Message: Press **6** while listening to the message.

Deleting All Messages: Press **6** after listening to all the messages.

Press **6** again within five seconds to confirm the deletion.

Outgoing Message

Listening to the Outgoing Message Press **5**.

Recording a New Outgoing Message:

- 1 Press **4**.
- 2 Wait for the confirmation tones.
- 3 Press **4**.
- 4 Wait for the long confirmation tone before beginning with the text.
- 5 Press **4** to end the recording.

Control Functions

Aborting Last Function: Press **8**.

Switching Off Answering Machine Press **7**.

Switching On Answering Machine Press **9**.

Notice



Conserving Function of Fax Reception Mode

If the answering machine is switched off you have to enter the access code while the fax switch analyzing the incoming signal. After the 4th ring the tone heard changes (factory settings of the number of rings for fax switch, also see Chapter Setting the Fax Switch page 45). Press **9**, to activate the answering machine. Afterwards you can call additional functions.

Recording Internal Memos

On the Device

You can record voice messages (= memos), which can be played as messages. The limit on duration of recording set for messages applies even to the recording duration of memos.

Notice



Recording Length for Memos

The configured recording length for incoming messages also limits the length of the internal memos.

- 1 Press **2**.
- 2 Using **▲/▼** select **QUICK NOTE**.
- 3 Confirm with **OK**.

Notice



Access Function

You can also call the function by pressing **OK**, **[7][3]** and **OK**.

- 4 Press **OK** to record a voice message. Wait for the confirmation tone before you say your text.
- 5 Press **OK** to end the recording. The recording is played back. After that the **[✉/📧]** key starts flashing. The voice message is displayed as a new message.

On the Cordless Telephone

- 1 Press ▲/▼, and using ▲/▼ to select VOICE MAIL.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select MESSAGES.
- 4 Confirm with **OK**.
- 5 Using ▲/▼ select RECORD MEMO.
- 6 Confirm with **OK**.
- 7 Press ●● **Begin** to start the recording. Wait for the confirmation tone before you say your text.

Notice



Canceling the Recording

Using ● **Exit** you can cancel the recording.

- 8 Press ●● **End** to end the recording. The recording is played back.
- 9 Using ●● **End**, you can end the playback.
- 10 Press ●● **Yes** to save the recording. Using ● **No** you can reach the recording menu.

The voice message is displayed as a new message.

Modifying the Settings

Notice



Available Only on the Device

These functions are available only on the device.

Entering the VIP Code

If callers enter the VIP code, the device continues to ring, even if the answering machine has taken over the call. With this function, certain persons can reach you even if you have set the number of rings to zero.

CAUTION!



No Identically PIN Codes!

The VIP code may not be identical to the access code for remote control.

- 1 Press [09].
- 2 Using ▲/▼ select VIP CODE.
- 3 Confirm with **OK**.

Notice



Access Function

You can also call the function by pressing **OK**, [7][8] and **OK**.

- 4 Enter a four-digit code.
- 5 Confirm with **OK**.

Setting the Recording Duration

You can limit the length of the incoming messages and internal memos.

- 1 Press [09].
- 2 Using ▲/▼ select RECORD. TIME.
- 3 Confirm with **OK**.

Notice



Access Function

You can also call the function by pressing **OK**, [7][4] and **OK**.

- 4 Use ▲/▼ to select the desired recording length or unlimited time (automatic).
- 5 Confirm with **OK**.

9 Fax

Notice



Printing Informations for Fax Transmission

Press **[i]** and **[4]** to print instructions for sending fax messages and for configuring the fax switch.

CAUTION!



Unsuitable Documents!

Do not insert any documents into the device that ...

... are wet, have been edited with correction fluid, are soiled or have a coated surface.

... that are written on with a soft pencil, with paint, chalk or charcoal.

... originate from newspapers or magazines (printing ink).

... that are held together with office or notebook staples or with tape or glue.

... are pasted with note papers.

... are creased, crumpled or torn.

Use documents with sizes **A5** or **A4** with 60 to 100 g/m² weight. You can insert **up to ten documents** at a time.

Notice




Cancel Transmission

Press **STOP** to eject the documents without sending them.

Sending fax

- 1 Insert the documents face up into the document feeder. The top most document will be fed in first.

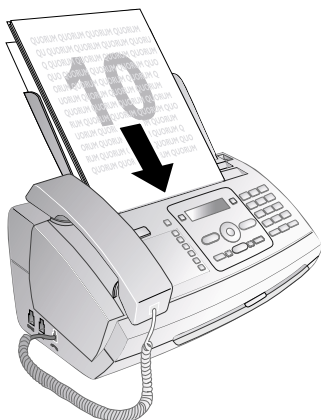

- 2 Set the desired resolution. You can choose between **RESOL. : STANDARD** (for documents without special features), **RESOL. : FINE** (for texts with small print or drawings) and **RESOL. : PHOTO** (for photos). Press **[F]**. The configured resolution appears on the display. Press **[F]** again to change the resolution.

Notice



Setting the Contrast

They can adjust the preset contrast (also see Chapter *Settings*, page 44).

- 3 Dial the desired number. There are several ways to do this:

- 4 Press **START**.

Notice



Automatic Redial

If the subscriber is busy, the device dials the number again after some time. Press **STOP**, in order to cancel the transmission process. After the transmission, the device prints out a transmission report depending on the settings.

Manual Dialling: Dial the desired number using the numeric keypad.

Telephone Book:

- 1 Press **[A-Z]**.

Notice



Access Function

You can also search for an entry in the telephone book by pressing **OK**, **[1][1]** and **OK**.

- 2 Select an entry using **▲/▼**. Enter the starting letters with the numeric keypad to quickly navigate through the telephone book.

Notice



Multiple Categories for One Entry

You can save an entry multiple times with the same name but in a different category. In the telephone book, the first letter of the category appears after the entry.

Speed Dialling: Press the desired speed dial key (**1 ... 6**).

Redial List: Press **[C]**. Use **▲/▼** to select an entry from the list of the dialled numbers.

Notice



Access Function

You can also load the redial list by pressing **OK**, **[2][2]** and **OK**.

Caller List: Press and hold **OK** (at least two seconds). Use the **▲/▼** to select an entry from the list of callers.

Notice



Access Function

You can also load the caller list by pressing **OK**, **2** **1** and **OK**.

Notice



Calling Line Identification (CLIP)

For this function to work, the Caller Line Identification (CLIP) must be activated for your telephone connection (country and network dependent). The number and name will not be shown if the caller suppresses his number.

Sending Fax Manually

- 1 Insert the document.
- 2 Enter the desired number using the numeric keypad or select a saved entry.
- 3 Press **⏏**.
- 4 Press **START**.

Direct Inward Dialling or Selecting Sub-address

You can send a fax to a direct-inward dialling number or a sub address or call from a direct-inward dialling number or sub address - for example to use a certain service of a fax database provider. For this purpose, attach the direct-inward dialling number or sub address with a short dialling pause to the fax number.

- 1 Enter the desired number using the numeric keypad or select a saved entry.
- 2 Hold **R** pressed (for at least two seconds).
- 3 Enter the direct-inward dialling number or sub address.
- 4 Press **START**. The direct-inward dialling number or sub address is dialled only after a short pause.

Sending to Multiple Recipients (= Broadcasting)

You can send one fax to multiple recipients in succession.

Entering Recipients Individually

- 1 Insert the document.
- 2 Press **OK**, **3** **4** and **OK**. The document is now read.
- 3 Enter the desired number using the numeric keypad or select a saved entry.
- 4 Confirm with **OK**.
- 5 Enter the next telephone numbers.
- 6 Confirm with **OK**. You can enter up to 25 recipients.
- 7 Press **START**. The device transmits the fax message successively to all recipients.

Sending a Fax to a Group

- 1 Insert the document.
- 2 Press **OK**, **1** **3** and **OK**.
- 3 Use **▲/▼** to select the group to which you would like to send a fax.
- 4 Confirm with **OK**.
- 5 Using **▲/▼** select **SEND FAX?**.
- 6 Confirm with **OK**.

Notice



Transmission to Multiple Recipients

If your device cannot reach a recipient, the fax message is sent to the other recipients. After the device has called all recipients, it once again dials the numbers that previously could not be reached.

Sending Fax Later

If you would like to make use of the lower telephone tariffs or if the recipient can be reached at some specific time only, you can send the fax at a later time—within 24 hours.

- 1 Insert the document.
- 2 Press **OK**, **3** **3** and **OK**.
- 3 Enter the time, at which the document should be transmitted, e.g. **1** **4** **0** **0** for 2 pm.
- 4 Confirm with **OK**.
- 5 Enter the desired number using the numeric keypad or select a saved entry.
- 6 **Selecting a Saved Entry:** Confirm the selected entry using **OK**.
- 7 Press **START**. The device goes into standby mode and transmits the fax at the entered time. You can continue to make telephone calls and receive faxes

 
Notice



Cancel a Scheduled Fax Transmission

Press **STOP** to eject the document. This interrupts the standby mode.

Fax Reception

If you have not changed the factory settings, received faxes will be printed out automatically. If no paper or no ink film is inserted, the device saves the incoming faxes. The  key blinks. Once paper or a new ink film is inserted, the saved faxes are printed out.

Notice



Paper Not Inserted Correctly

Check if you have inserted clamped paper correctly. The lever on the right hand side next to the paper feeder must be folded backwards.

If the message memory is full, no additional messages can be received. A warning appears on the display. Follow the specifications in the technical data.

Notice



Delete Fax Messages Sent

If there are problems with printing out saved fax messages, a service code is available (see also section *Service*, page 57).

Receiving Fax Manually

Select manual reception under number of rings of the fax switch (see Chapter Setting the Fax Switch, page 45). The device will not receive faxes on its own. This setting is useful, when you want to receive faxes via a modem connected to a computer.

You can start fax reception manually, by pressing **START**.

Polling Faxes


With the fax polling function, you can retrieve faxes that lie ready in the dialled device. You can keep a document ready in your device, which can be polled by others.

Polling Faxes Directly

- 1 Enter the desired number using the numeric keypad or select a saved entry.
- 2 Hold **START** pressed (for at least two seconds).

Polling Secure Faxes

With this function, you can poll faxes that are protected with a code.

- 1 Press **OK**,  and **OK**.
- 2 Enter the code.
- 3 Confirm with **OK**.
- 4 Enter the desired number using the numeric keypad or select a saved entry.
- 5 Press **START**.

Polling Send of Faxes

 
 
CAUTION!



Unauthorised Fax Polling!

Protect your document against unauthorised polling with a code.

A caller who knows the code can poll the fax from your device. You can continue to make telephone calls and receive faxes

- 1 Insert the document.
- 2 Press **OK**,   and **OK**.
- 3 Enter a code (max. 20 characters).
- 4 Confirm with **OK**.

Notice

 
 




Cancel a Scheduled Fax Transmission

Press **STOP** to eject the document. This interrupts the standby mode.

Using Fax Templates

Five fax templates, which you can use, are stored in your device. With these templates you can quickly create, for example, a short fax note or an invitation.

- 1 Press **OK**,   and **OK**.
- 2 Use   to select the template you would like to print.
- 3 Confirm with **OK**. The device prints the template.
- 4 Fill the template and send it to the desired recipient per fax.

10 Copier

Notice




Printing Informations for Copying

Press **i** and **5** to print the help for copying.

Use documents with sizes **A5** or **A4** with 60 to 100 g/m² weight. You can insert **up to ten documents** at a time.

Inserting Documents

- 1 Insert the documents face up into the document feeder. The top most document will be fed in first.

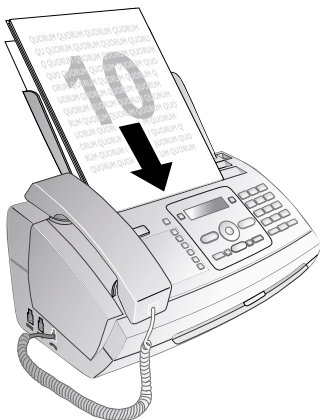

- 2 Set the desired resolution. You can choose between **RESOL. : STANDARD** (for documents without special features), **RESOL. : FINE** (for texts with small print or drawings) and **RESOL. : PHOTO** (for photos). Press **RESOL.**. The configured resolution appears on the display. Press **RESOL.** again to change the resolution.

Notice



Setting the Contrast

They can adjust the preset contrast (also see Chapter *Settings*, page 44).

Making a Copy

Press **COPY** briefly. The copy is created.

Creating Multiple Copies

- 1 Hold **COPY** pressed (for at least two seconds).
- 2 Enter the number of times you would like to copy the document (maximum of 15 copies).
- 3 Press **COPY**.
- 4 Using **▲/▼** select whether to reduce or enlarge the document in size when copying. You can magnify up to 200 percent or reduce to as small as 50 percent of the original size.
- 5 Confirm with **OK**. The copy is created.

Notice




Cancel Copying

Press **STOP** to eject the documents without copying them.

11 SMS

(Function is not supported in all countries and networks)


Notice

-  **Printing Instructions for SMS Functions**
Press **[I]** and **[8]** to print the instructions for SMS functions.


SMS Requirements

Your device is preset for using the SMS (Short Messaging Service) services. Caller Line Identification (CLIP) must be activated for the SMS to work. It is possible that you will not be able to send and receive SMS messages from a private branch exchange (depending on the country and network).

Notice


-  **SMS with Secret Number**
Should you face problems in sending SMS, the reason for the same could be that you are using a secret number or that the device is connected to an old ISDN System.

Notice

-  **SMS Requirements**
Ask your telephone service provider ...
... whether you must register for the SMS Service.
... to which mobile telephone service providers you can send SMS
... which costs are applicable.
... which functions are available.

Sending SMS


Notice

-  **SMS in Ireland**
In Ireland, some providers will only accept SMS messages with a 140 character limit.


On the device

- 1 Press **[✉]**.
- 2 Confirm with **OK**.

Notice

-  **Access Function**
You can also call the function by pressing **OK**, **[6]****[1]** and **OK**.


Notice

-  **SMS Templates**
The last five SMS messages written remain saved as templates. Press **[C]** until the desired message appears.

- 3 You can enter characters using the numeric keys (see button labels). Press **[0]** to enter space or special characters.


You can enter 160 characters.

Notice

-  **Navigating and Printing**
You can move the cursor using **▲/▼**. Use **C** to delete individual characters. Press and hold **C** (at least two seconds) to delete the entire text. Press **COPY** to print the message before sending it.

- 4 Confirm with **OK**.
- 5 Enter the desired number using the numeric keypad or select a saved entry.

Notice


-  **Sending to Multiple Recipients (= Broadcasting)**
You can send an SMS message to up to five recipients. Press **OK** after entering the number.

- 6 Press **[✉]**. The message is sent.

On the Cordless Telephone


Sending SMS

Notice

-  **Navigating in the Menu**
You can navigate within the text using **▲/▼**. Use **C** to delete individual characters. Press **[C]** to close the menu and return to the starting mode.

- 1 Press **[✉]**.

Notice

-  **Access Function**
You can also call the function by pressing **▲/▼** and selecting using **▲/▼** SMS. Confirm with **OK**.

- 2 Using **▲/▼** select **SEND SMS**.
- 3 Confirm with **OK**.
- 4 You can enter characters using the numeric keys (see key labels). Enter space or special characters using **[0]** or **[#]** Press and hold the respective key or press it several times until the desired character appears on the display.

You can enter 160 characters.

Notice



Enter Letters

Switch the keyboard to enter capital or small letters: Press ●● **Select**. Using ▲/▼ select whether you would like to enter capital or small letters. Confirm with **OK**. Press and hold (at least two seconds) to toggle between capital and small letters.

Press ●● **Select**. Using ▲/▼ select **INSERT CHAR.** to enter a character. Confirm with **OK**.

Press ●● **Select**. Using ▲/▼ select **CANCEL** to delete the entire text. Confirm with **OK**. Confirm the deletion with ●● **Yes**.

- 5 Confirm with **OK**.
- 6 Enter the desired number using the numeric keypad or select a saved entry.
- 7 Confirm with **OK**.
- 8 Press ●● **Confirm** to send the message. Press ● **EDIT ENTRY** to edit the message again.

Notice



Saving SMS Message

After sending you can save the SMS. Using ●● select **Yes** to save the message. Press ● **No** to delete the message.

Sending SMS from the Telephone Book

You can select an entry from the telephone book and then call the SMS menu.

- 1 Short press to call up the telephone book of the device. Long press (at least two seconds) to call up the telephone book of the cordless telephone.
- 2 Using ▲/▼, dial the desired entry.
- 3 Press ●● **Option**.
- 4 Using ▲/▼ select **SEND SMS**.
- 5 Confirm with **OK**. The Send SMS Menu appears.

SMS Messages to E-Mail

(Function is not supported in all countries and networks)

You can send an SMS to an E-Mail address.

- 1 Press .

Notice



Access Function

You can also call the function by pressing ▲/▼ and selecting using ▲/▼ **SMS**. Confirm with **OK**.

- 2 Using ▲/▼ select **EDIT EMAIL**.
- 3 Confirm with **OK**.

- 4 Enter the text as described under Sending SMS.

- 5 Confirm with **OK**.

- 6 Enter the e-mail address. Press and hold until the @ character appears.

Notice



Enter E-Mail Addresses

E-Mail addresses must not contain a space.

- 7 Confirm with **OK**.

- 8 Press ●● **Confirm** to send the message. Press ● **EDIT ENTRY** to edit the message again.

SMS Messages to Fax

(Function is not supported in all countries and networks)

You can send an SMS as a fax to a fax machine.

- 1 Press .

Notice



Access Function

You can also call the function by pressing ▲/▼ and selecting using ▲/▼ **SMS**. Confirm with **OK**.

- 2 Using ▲/▼ select **EDIT FAX**.

- 3 Confirm with **OK**.

- 4 Enter the text as described under Sending SMS.

- 5 Confirm with **OK**.

- 6 Enter the desired number using the numeric keypad or select a saved entry.

- 7 Confirm with **OK**.

- 8 You can give a title (= reference) which appears in the heading of the fax.

- 9 Press ●● **Confirm** to send the message. Press ● **EDIT ENTRY** to edit the message again.

Notification by SMS

You can have an SMS message sent to a telephone number of your choice when faxes or SMS messages are received or the answering machine receives calls or voice messages in your absence.

- 1 Press **OK**, and **OK**.

- 2 Use ▲/▼ to select whether you would like to be informed about new SMS messages.

- 3 Confirm with **OK**.

- 4 Use ▲/▼ to select whether you would like to be informed about calls in your absence.

- 5 Confirm with **OK**.

- 6 Use ▲/▼ to select whether you would like to be informed about new fax messages.

- 7 Confirm with **OK**.

- 8 Use ▲/▼ to select whether you would like to be informed about new messages on the answering machine.
- 9 Confirm with **OK**.
- 10 Enter the number to which the SMS should be sent.
- 11 Confirm with **OK**. A message appears on the display stating the notification by SMS is activated.

Receiving SMS Messages

Notice



Paper Not Inserted Correctly

Check if you have inserted clamped paper correctly. The lever on the right hand side next to the paper feeder must be folded backwards.

 
 
Received SMS messages are printed out automatically. If you have turned the automatic printing function off, the SMS messages will be stored. Your device can store up to 30 SMSs.

Reading SMS Messages



On the Device

Reading New SMS

After reception of a new SMS message, the  key lights up.

- 1 Press .
- 2 Select the SMS using ▲/▼.
- 3 Press . The Read SMS menu opens.

  Loading Previously Read SMS Messages

- 1 Press **OK**,   and **OK**.
- 2 Using ▲/▼ select the SMS that you would like to read. Unread SMS messages are marked with a *.
- 3 Confirm with **OK**.

Notice



Navigating and Printing

You can move the cursor using ▲/▼. Press **COPY** to print the SMS message.

- 4 Press **STOP** to return to the SMS list.

Notice



Calling Further SMS Functions

Press **OK** to call additional SMS functions.

On the Cordless Telephone

Reading SMS Messages

- 1 Press .

Notice



Access Function

You can also call the function by pressing ▲/▼ and selecting using ▲/▼ SMS. Confirm with **OK**.

- 2 Using ▲/▼ select **READ SMS**.
- 3 Confirm with **OK**.
- 4 Select the desired message memory using ▲/▼. The number of the messages contained in the folder is given in brackets.

NEW—Contains new messages

INBOX—Contains read and saved message.

SENT—Contains sent messages that you have saved.

DRAFT—Contains message that are yet to be sent

- 5 Confirm with **OK**.
- 6 Select the desired SMS using ▲/▼.
- 7 Press ●● **Select**.
- 8 Using ▲/▼ select **READ**.
- 9 Confirm with **OK**.

Notice



Call Additional Functions

Press ●● **Select** to call additional SMS functions.

Modifying the Read Mode

You can display an SMS in different ways.

- 1 Select the SMS to Read.
- 2 Press ●● **Select**.
- 3 Using ▲/▼ select **SMS MODE**.
- 4 Using ▲/▼, select the desired mode:
 - AUTO SCROLL**—The text scrolls automatically.
 - MANUAL SCROLL**—Using ▲/▼ you can navigate within the text.
 - 2 LINES**—Two rows of the text are displayed.
- 5 Confirm with **OK**.

Calling SMS Functions

On the Device

- 1 While reading an SMS message, press **OK** to load additional SMS functions.
- 2 Use **▲/▼** to select an option: You can display information about the SMS message, print or delete the message, forward the message to another recipient or send an SMS response. You can return to the list of SMS messages, or view the next or previous SMS message.
- 3 Confirm with **OK**.

On the Cordless Telephone

- 1 Select the SMS to Read.
- 2 Press **●● Select**.
- 3 Use **▲/▼** to select an option: You can reply the SMS. You can move the message to the Archive folder, delete it or forward it to some other recipient. You can call the number of the sender or save it to the telephone book.
- 4 Confirm with **OK**.

Notice



SMS in Ireland

Some providers do not include the entire telephone number of the SMS sender. In such cases a direct response to the SMS message will not be delivered. Instead, create a new SMS message. Pay attention when entering the area code.

Printing SMS Messages

- 1 Press **OK**, **[6][3]** and **OK**.
- 2 Using **▲/▼** select the SMS message you would like to print.

PRINT: ALL—Prints all received and composed SMS messages that you have saved

PRINT: INBOX—Prints all received SMS messages that you have saved

PRINT: OUTBOX—Prints all sent SMS messages that you have saved

PRINT: NEW—Prints all unread SMS messages
- 3 Confirm with **OK**.

Notice



Printing an Individual SMS message

If you would like to print an individual SMS message, load the message. Press **COPY** to print the message.

Deleting SMS Messages

On the Device

If the message memory is full, the device cannot receive any more messages. Delete SMS messages to free up memory.

- 1 Press **OK**, **[6][4]** and **OK**.
- 2 Use **▲/▼** to select the SMS messages you would like to delete:

DELETE: ALL SMS—Deletes all received and composed SMS messages that you have saved

DELETE: READ SMS—Deletes all read SMS messages

DELETE: SENT SMS—Deletes all sent SMS messages that you have saved
- 3 Confirm with **OK**.
- 4 Confirm the deletion with **OK**.

Notice



Deleting Single SMS Message

If you would like to delete an individual SMS message, load the message. Press **OK**, and using **▲/▼** to select **DELETE**. Confirm with **OK**.

On the Cordless Telephone

Deleting Individual SMS

- 1 Select the SMS to Read.
- 2 Press **●● Select**.
- 3 Using **▲/▼** select **DELETE ENTRY**.
- 4 Confirm with **OK**.
- 5 Confirm the deletion with **●● Yes**.

Emptying the Message Folder

CAUTION!



Messages are Deleted!

This function deletes all SMS messages in a message folder.

- 1 Press **☒**.

Notice



Access Function

You can also call the function by pressing **▲/▼** and selecting using **▲/▼ SMS**. Confirm with **OK**.

- 2 Using **▲/▼** select **DELETE SMS**.
- 3 Confirm with **OK**.
- 4 Select the folder you would like to clear using **▲/▼**.
- 5 Confirm with **OK**.
- 6 Confirm the deletion with **●● Yes**.

Modifying the Settings

Notice



Available Only on the Device

These functions are available only on the device.

Changing Transmitting and Receiving Numbers

All numbers that you need to send and receive SMSs are stored in your device. In case you moved to another telephone service provider, you must change these numbers. You can set your device for two SMS service providers.

- 1 Press **OK**, **[6][6]** and **OK**.
- 2 Use **▲/▼** to select the SMS service provider that you would like to set.
- 3 Confirm with **OK**.
- 4 Enter the number for sending SMSs.
- 5 Confirm with **OK**.
- 6 Enter the number for receiving SMSs.
- 7 Confirm with **OK**.
- 8 Use **▲/▼** to select the SMS service provider through which you would like to send SMSs.
- 9 Confirm with **OK**.

Notice



Receiving SMS Messages

You can receive SMS messages via both providers.

Turning Off the Automatic Printing

You can deactivate the automatic printing of SMS messages.

- 1 Press **OK**, **[6][6]** then **OK** repeatedly until **PRINT SMS: YES** appears on the display.
- 2 Using **▲/▼** indicate whether you would like to turn printing on or off.
- 3 Confirm with **OK**.

Switching SMS Reception On and Off

If you are using a cordless telephone with SMS function on the same telephone line, then the specific device at which you will receive an SMS message will depend on the specific manufacturer. Only one of the devices will receive the SMS message. Try to turn off the SMS reception on your cordless telephone. If this is not possible, switch off SMS reception on the device. You can continue to send SMS messages even while SMS reception is switched off.

Switching SMS Reception Off

- 1 Press **OK**, **[4][5]** and **OK**.
- 2 Enter the service code **[3][1][2][0][7]**.
- 3 Confirm with **OK**.
- 4 Using **▲/▼** select **SURE: YES**.
- 5 Confirm with **OK**.

Notice



Cancelling Entry

If you have entered the incorrect code, you can cancel the entry with **SURE: NO**.

Switching SMS Reception On

- 1 Press **OK**, **[4][5]** and **OK**.
- 2 Enter the service code **[4][1][2][0][6]**.
- 3 Confirm with **OK**.
- 4 Using **▲/▼** select **SURE: YES**.
- 5 Confirm with **OK**.

Notice



Cancelling Entry

If you have entered the incorrect code, you can cancel the entry with **SURE: NO**.

12 Fun and Games

Notice



Printing informations for the Games and Fun functions

Press **[1]** and **[7]** to print the instructions for the Games and Fun functions of your device.

Sudoku

Sudoku is a Japanese number puzzle. The game has 3×3 squares divided into 3×3 fields. Depending on the difficulty level, lesser or more digits are already given at the beginning of the game. The aim of the game is to fill digits from 1 to 9 in the game field in such a way that each digit appears only once in a row, a column and each of the nine blocks. There is only one solution.

Notice



Last Solution Available

The solution of the last printed game is saved. The solutions of earlier games are no longer available.

Printing a Game

- 1 Press **OK**, **[4]****[8]** and **OK**.
- 2 Using **▲/▼** select **SUDOKU: NEW**.
- 3 Confirm with **OK**.
- 4 Using **▲/▼** select the difficulty level.
- 5 Confirm with **OK**.
- 6 Enter, how many copies of the Sudoku you would like to print (maximum 9 copies).
- 7 Confirm with **OK**.
- 8 Using **▲/▼** select if you would like to print the solution.
- 9 Confirm with **OK**.

Printing the Last Game Again

- 1 Press **OK**, **[4]****[8]** and **OK**.
- 2 Using **▲/▼** select **SUDOKU: LAST**.
- 3 Confirm with **OK**.
- 4 Enter, how many copies of the Sudoku you would like to print (maximum 9 copies).
- 5 Confirm with **OK**.
- 6 Using **▲/▼** select if you would like to print the solution.
- 7 Confirm with **OK**.

Printing the Solution

- 1 Press **OK**, **[4]****[8]** and **OK**.
- 2 Using **▲/▼** select **SUDOKU: SOLUTION**.
- 3 Confirm with **OK**.

Sudoku for Every Day

You can have a new Sudoku automatically printed each day.

- 1 Press **OK**, **[4]****[8]** and **OK**.
- 2 Using **▲/▼** select **SUDOKU: AUTO**.
- 3 Confirm with **OK**.
- 4 Enter the time, e.g. **[1]****[4]** **[0]****[0]** for 2 pm.
- 5 Confirm with **OK**.
- 6 Using **▲/▼** select the difficulty level.
- 7 Confirm with **OK**.
- 8 Enter, how many copies of the Sudoku you would like to print (maximum 9 copies).
- 9 Confirm with **OK**.
- 10 Using **▲/▼** select if you would like to print the solution.
- 11 Confirm with **OK**.
- 12 Using **▲/▼** indicate whether you would like to turn printing on or off.
- 13 Confirm with **OK**.

Notice



Switching Off Function

You can turn off the daily Sudoku print by selecting the function as described above and by switching off the automatic printing under point 12.

13 Settings on the Device

Notice



Navigating in the Editor

You can move the cursor using **▲/▼**. Use **C** to delete individual characters. Press **STOP** to close the menu and return to the starting mode.

Entering the Date and Time

- 1 Press **OK**, **9****1** and **OK**.
- 2 Enter the time, e.g. **1****4** **0****0** for 2 pm.
- 3 Enter the date (two digits for each field), for example **0****8** **0****6** **2****7** for June 8th, 2027.
- 4 Confirm with **OK**.

Notice



Time and Date After a Short Power Failure

You must check the time and date after a short power failure. Confirm with **OK**.

Selecting the Language

- 1 Press **OK**, **9****2** and **OK**.
- 2 Use **▲/▼** to select the desired display language.
- 3 Confirm with **OK**.

Selecting the Country

CAUTION!



Setting the Country Correctly!

You must set the country in which you are operating the device. Otherwise your device is not adapted to the telephone network. If your country is not included in the list, you must select a different setting and use the correct telephone cable for the country. Consult your retailer.

CAUTION!



Settings will be Deleted!

When you select a new country, all settings are reset to the factory defaults for that country. Saved data remains intact. Check the number entered for the header.

- 1 Press **OK**, **9****3** and **OK**.
- 2 Use **▲/▼** to select the country in which you are operating the device.
- 3 Confirm with **OK**.
- 4 Using **▲/▼** select **SURE: YES**.
- 5 Confirm with **OK**.

Entering Number

Your name and number are added together with date, time and page number at the top edge of each fax transmission (= header).

- 1 Press **OK**, **9****4** and **OK**.
- 2 Enter your number. Using **#** or ***** you can enter a plus sign.
- 3 Confirm with **OK**.

Entering Your Name

- 1 Press **OK**, **9****5** and **OK**.
- 2 Enter your name. You can enter characters using the numeric keys (see button labels). Enter special characters using **0**. Press the respective key several times until the desired character or special character appears on the display.
- 3 Confirm using **OK**.

Setting the Contrast

For copying and printing of fax messages, you can select different contrast levels.

- 1 Press **OK**, **4****4** and **OK**.
- 2 Using **▲/▼**, select the desired contrast:
CONTR. : LIGHT—For brighter copies and fax transmission
CONTR. : NEUTRAL—For all types of originals (for example white text on black background or documents with coloured background)
CONTR. : OPTIMISED (Factory settings)—Optimized adaptation for text and photo printing
CONTR. : DARK—For darker copies and fax transmission (for example documents with faint printing)
- 3 Confirm with **OK**.

Notice



Modifying the Basic Settings

The changed settings are stored as new default settings. If you select a special function for a one-time process, take care to restore the default settings or factory settings after that.

Reducing Transmission Speed

The device adapts the transmission speed to the line quality. This may take some time, especially for overseas connections. Set a lower transmission speed if you are sending faxes into networks with poor line quality.

- 1 Press **OK**, **[3][8]** and **OK**.
- 2 Use **▲/▼** to set whether you would like to use a lower transmission speed.
- 3 Confirm with **OK**.

Switching Page Adjustment On and Off

In order that no information is lost, received faxes are reduced in size when printed.

- 1 Press **OK**, **[3][7]** and **OK**.
- 2 Use **▲/▼** to select whether you would like to switch size reduction on or off.
- 3 Confirm with **OK**.

Setting the Ring Tones

Selecting the Ring Tone

You can select from among ten different ring tones.

- 1 Press **OK**, **[5][5]** and **OK**.
- 2 Use the number keys **[0]** to **[9]** to select a ring tone. Using **▲/▼**, set the volume.
- 3 Confirm with **OK**.

Adjusting Volume Level

You can adjust the volume of the ring tone when the device is ringing or when you set the ring tone. You can save different volumes for the ***** (day) and **☾** (night) modes, (also see Chapter Fax Switch).

Using **▲/▼** you can set adjust the volume when the device is ringing.

Setting the Fax Switch

The built-in fax switch of your device distinguishes between fax messages and telephone calls. Faxes are automatically received, telephone calls can be received—even on additionally connected devices. While the device is checking the call, it continues to ring.

You can set how often the device should ring before picking up separately for the modes ***** (day) and **☾** (night). This makes it possible for you to receive faxes silently at night without getting disturbed.

Press **☺/☼/☾** to switch between day and night mode. With the activated timer **⌚**, the device switches between the modes ***** (day) and **☾** (night) at the configured times.

Setting the Day Mode

- 1 Press **OK**, **[5][1]** and **OK**.
- 2 Using **▲/▼** select the number of rings for the answering machine. The answering machine responds after these many number of rings.

Notice



Conserving Function of Fax Reception Mode

If you select the **5/2** option for the number of rings of the answering machine, the answering machine switches on after two rings, when you have received new messages. If there are no new messages, the device rings five times. If the device does not pick up after two rings, you have no new messages. You can terminate the remote access without incurring any telephone costs.

- 3 Confirm with **OK**.
- 4 Use **▲/▼** to select the number of rings for the fax switch. After the number of rings, the fax switch switches on and distinguishes between fax transmissions and telephone calls. While the device is checking the call, it continues to ring.
- 5 Confirm with **OK**.
- 6 Using **▲/▼**, set the volume.
- 7 Confirm with **OK**.

Notice



Silent Fax Transmission

Older devices do not transmit any fax-tone (= CNG tone) as an announcement for fax transmission (= silent fax transmission). If the total number of rings has been set to a value using **7**, silent fax transmissions cannot be received automatically.

Setting the Night Mode

- 1 Press **OK**, **[5][2]** and **OK**.
- 2 Configure the same settings as for the day mode (see steps **2** to **7**).

Setting the Timer

The timer switches between the modes ***** (day) and **☾** (night) at the configured times.

- 1 Press **OK**, **[5][3]** and **OK**.
- 2 Enter the time at which the device should switch to ***** (day) mode, for example **[0][6][0][0]** for 6 o'clock a.m.
- 3 Confirm with **OK**.
- 4 Enter the time at which the device should switch to **☾** (day) mode, for example **[2][2][0][0]** for 2 o'clock a.m.
- 5 Confirm with **OK**.

Special Settings

Silent Fax Reception

If you would like to accept a fax without preceding rings, set the number of rings of the fax switch to 0.

Switching Off All Rings

If you don't want to be disturbed, e.g. in the night, by any incoming calls, you can set the number of rings to 0. The device switches immediately to silent fax reception.

Printing Lists and Help Pages

Printing Numbers and Entries

The list of numbers and entries contains the last ten calls received and numbers dialed as well as the saved entries and groups.

Press **OK**, **[2][3]** and **OK**. The list is printed.

Printing Call Log

The call log contains the last 50 dialled numbers.

- 1 Press **OK**, **[4][1]** and **OK**.
- 2 Using **▲/▼** indicate whether you would like to turn printing on or off.
- 3 Confirm with **OK**.
- 4 **Switch on printing:** Use **▲/▼**, to select whether the call list should be printed immediately or after every 50 calls.
- 5 Confirm with **OK**.

Printing the Telephone Book

Press **OK**, **[1][7]** and **OK**. The device prints a list with the telephone book entries and saved assignments.

Printing Fax Journal

The fax journal is a list of the last ten faxes sent and received.

- 1 Press **OK**, **[3][5]** and **OK**.
- 2 Using **▲/▼** indicate whether you would like to turn printing on or off.
- 3 Confirm with **OK**.
- 4 **Switch on printing:** Use **▲/▼**, to select whether the fax journal should be printed immediately or after every ten transmissions.
- 5 Confirm with **OK**.

Printing Transmission Report

After every transmission, the device prints out a transmission report. If a transmission error occurs, an error report is printed out. You can switch off printing of the transmission report.

- 1 Press **OK**, **[3][6]** and **OK**.
- 2 Using **▲/▼** indicate whether you would like to turn printing on or off.
- 3 Confirm with **OK**.

Printing Help Pages

Help 1 · Overview

Press **[i]** and **[1]** to print an overview of the help pages.

Help 3 · Telephone Book

Press **[i]** and **[3]** to print an overview of the telephone book and answering machine functions.

Help 4 · Fax Transmission

Press **[i]** and **[4]** to print instructions for sending fax messages and for configuring the fax switch.

Help 5 · Copier

Press **[i]** and **[5]** to print the help for copying.

Help 6 · Function List

Press **[i]** and **[6]** to print a list of all functions and settings of your device.

Help 7 · Games and Fun

Press **[i]** and **[7]** to print the instructions for the Games and Fun functions of your device.

Help 8 · SMS

Press **[i]** and **[8]** to print the instructions for SMS functions.

Starting Initial Installation

- 1 Press **[i]** and **[2]**.
- 2 The device prints out a help page and starts the initial installation process.

14 Settings on the Cordless Telephone

Notice



Navigating in the Menu

Press **C** to return to the previous menu level.
Press **↵** to close the menu and return to the starting mode.

Selecting the Language

Your cordless telephone automatically adopts the language setting of the device during registration. You can set a different language for the display of the cordless telephone. All languages are not available on the cordless telephone.

Notice



Adopting the Language Setting

The cordless telephone adopts the language setting of the device when you change it on the device (also see Chapter Settings on the device, Page 44)

- 1 Press **▲/▼**, and using **▲/▼** to select **SETTINGS**.
- 2 Confirm with **OK**.
- 3 Using **▲/▼** select **LANGUAGE**.
- 4 Confirm with **OK**.
- 5 Press **●** **EDIT ENTRY**.
- 6 Use **▲/▼** to select the desired display language.
- 7 Confirm with **OK**.

Changing the Wallpaper Image

(PPF 695)

- 1 Press **▲/▼**, and using **▲/▼** to select **PERSONALIS..**
- 2 Confirm with **OK**.
- 3 Using **▲/▼** select **BACKGROUND**.
- 4 Confirm with **OK**.
- 5 Using **▲/▼**, select the desired wallpaper.

Notice



Displaying Wallpaper Images

Press **●●** **View** to display the wallpaper image. Using **▲/▼** you can page through the various motifs. Using **●** **Return** you can go back to the selection menu.

- 6 Confirm with **OK**.

Changing the menu colours

(PPF 695)

- 1 Press **▲/▼**, and using **▲/▼** to select **PERSONALIS..**
- 2 Confirm with **OK**.
- 3 Dial using **▲/▼** **AMBIANCE**.
- 4 Confirm using **OK**.
- 5 Using **▲/▼**, select the desired menu colour.
- 6 Confirm using **OK**.

Setting the contrast

(PPF 695)

- 1 Press **▲/▼**, and using **▲/▼** to select **SETTINGS**.
- 2 Confirm with **OK**.
- 3 Using **▲/▼** select **CONTRAST**.
- 4 Confirm using **OK**.
- 5 Use **▲/▼** to select the desired contrast level.
- 6 Confirm using **OK**.

Setting the ring tone

On Monochrome Dect

- 1 Press **▲/▼**, and using **▲/▼** to select **RINGER TYPE**.
- 2 Confirm with **OK**.
- 3 Using **▲/▼** indicate, whether you would like to set the ring tone for internal or external calls.
- 4 Confirm with **OK**.
- 5 Select the desired ring tone using **▲/▼**.
- 6 Confirm with **OK**.
- 7 Using **▲/▼**, set the volume.
- 8 Confirm with **OK**.

On Colour Dect

- 1 Press **▲/▼**, and using **▲/▼** to select **PERSONALIS..**
- 2 Confirm with **OK**.
- 3 Using **▲/▼** select **SECRET**.
- 4 Confirm with **OK**.
- 5 Using **▲/▼** indicate, whether you would like to set the ring tone for internal or external calls.
- 6 Confirm with **OK**.
- 7 Select the desired ring tone using **▲/▼**.
- 8 Confirm with **OK**.
- 9 Using **▲/▼**, set the volume.
- 10 Confirm with **OK**.

Turning key-tones and signal-tones on and off

On Monochrome Dect

- 1 Press ▲/▼, and using ▲/▼ to select RINGER TYPE.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select BEEPS.
- 4 Confirm with **OK**.
- 5 Using ▲/▼, select whether you would like to turn the key-tones, the notification tone for low battery charge or the confirmation tone when replacing the cordless telephone in the charging station on or off.
- 6 Confirm with **OK**.
- 7 Press ● EDIT ENTRY to switch the function on/off.
- 8 Confirm with **OK**.

On Colour Dect

- 1 Press ▲/▼, and using ▲/▼ to select PERSONALIS..
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select SECRET.
- 4 Confirm with **OK**.
- 5 Using ▲/▼ select BEEPS.
- 6 Confirm with **OK**.
- 7 Using ▲/▼, select whether you would like to turn the key-tones, the notification tone for low battery charge or the confirmation tone when replacing the cordless telephone in the charging station on or off.
- 8 Confirm with **OK**.
- 9 Press ● EDIT ENTRY to switch the function on/off.
- 10 Confirm with **OK**.

Switching silent mode on/off

In the silent mode, all ring tones, alarm tones and key tones of the cordless telephone are turned off. However, you can still place a call.

On monochrome Dect

- 1 Press ▲/▼, and using ▲/▼ to select RINGER TYPE.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select SILENT MODE.
- 4 Confirm with **OK**.
- 5 Using ●● select YES to switch on the function. Using ● select NO to switch on the function.

On colour Dect

- 1 Press ▲/▼, and using ▲/▼ to select PERSONALIS..
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select SECRET.
- 4 Confirm with **OK**.
- 5 Using ▲/▼ select SILENT MODE.
- 6 Confirm with **OK**.
- 7 Using ●● select YES to switch on the function. Using ● select NO to switch on the function.

Programmable Keys

Your cordless telephone has two programmable keys ● and ●●, to which you can assign functions for the quick access. The selected functions appear as display text at the lower edge of the display.

Press ● and/or ●● to access the function. You can assign the answering machine functions, silent mode, alarm clock, timer, keypad lock, number (= specific telephone number) or redialling to the keys.

Programming the Keys

- 1 Press ▲/▼, and using ▲/▼ to select SETTINGS.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select PROGRAM KEYS.
- 4 Confirm with **OK**.
- 5 Press ● EDIT ENTRY to assign a function to the left programmable key.
- 6 Select the desired function using ▲/▼.
- 7 Confirm with **OK**.
- 8 Press ● EDIT ENTRY to assign a function to the right programmable key.
- 9 Select the desired function using ▲/▼.
- 10 Confirm with **OK**.

Automatic Picking up and Hanging up the Phone

These functions enable you to accept or end call by picking up the cordless telephone from the charging station or placing it back into the charging station respectively.

Switching Automatic Picking Up On/Off

- 1 Press ▲/▼, and using ▲/▼ to select SETTINGS.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select AUTO PICKUP.
- 4 Confirm with **OK**.
- 5 Switch the function on/off using ● EDIT ENTRY.
- 6 Confirm with **OK**.

Switching Automatic Picking up On/Off

- 1 Press ▲/▼, and using ▲/▼ to select **SETTINGS**.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select **AUTO HANG UP**.
- 4 Confirm with **OK**.
- 5 Switch the function on/off using ● **EDIT ENTRY**.
- 6 Confirm with **OK**.

Resetting the Cordless Telephone

With this function you can delete all personal settings such as ring tones or programmable keys and the cordless telephone is reset to factory settings. Saved data remains intact.

- 1 On the cordless telephone, press ▲/▼, and using ▲/▼ select **SETTINGS**.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select **ADVANCED SET..**
- 4 Confirm with **OK**.
- 5 Use ▲/▼ to select **SET HANDSET**.
- 6 Confirm with **OK**.
- 7 Use ▲/▼ to select **RESET HANDSET**.
- 8 Confirm with **OK**.
- 9 Confirm the deletion with ●● **Yes**.

Displaying Call Logs and Events

The call logs contain the last dialled numbers, incoming calls and other events (messages, missed calls).

Calling Call Logs

- 1 Press ▲/▼, and using ▲/▼ to select **CALLS**.
- 2 Confirm with **OK**.
- 3 Using ▲/▼, select from which list you would like to dial a number.
- 4 Confirm with **OK**.
- 5 Select the desired number using ▲/▼.
- 6 Press ●● **Option**.
- 7 Use ▲/▼ to select an option: You can have the call details displayed, call the number, save it to the telephone book or delete it from the log, send an SMS to the number or delete all numbers from the list.
- 8 Confirm with **OK**.

Calling Events

- 1 Press ▲/▼, and using ▲/▼ to select **CALLS**.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select **EVENTS**.
- 4 Confirm with **OK**.
- 5 Using ▲/▼ select **VIEW**.
- 6 Confirm with **OK**.
- 7 Select the desired number or message using ▲/▼.
- 8 Confirm with **OK**.

Setting up the Display

You can set, whether you would like to be informed about new events (SMSs, missed calls) with a message on the display.

- 1 Press ▲/▼, and using ▲/▼ to select **CALLS**.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select **EVENTS**.
- 4 Confirm with **OK**.
- 5 Use ▲/▼ to select whether you would like to turn the function on or off.
- 6 Confirm with **OK**.

15 Telephone Lines and Additional Devices

Configuring Telephone Lines and Services

PABX Systems

Private branch exchanges (PABX) are typical in many offices and some households. You must dial an outside line access code in order to get a connection to the public telephone network (PSTN) from a PABX.

Notice



Additional Telephone No Extension

An additional telephone connected to the device on a telephone socket is not considered an extension.

- 1 Press **OK**, **[9][6]** and **OK**.
- 2 In some countries you can set the dialling process to pulse dialling or tone dialling (DTMF tones). Use **▲▼** to select the desired dialling process.

Notice



Selecting the Dialling Process

Only use pulse dialling if tone dialling is not yet activated for your telephone line.

- 3 Confirm with **OK**.
- 4 Use **▲▼** to set whether you operate your device on an extension.
- 5 Confirm with **OK**.
- 6 **Configuring an extension:** Enter the outside line access code with which you reach the public telephone network. This is usually **[0]**.

Notice



Incorrect Outside Line Access Code

In rare cases, the outside line access code may be a different number or a two-digit number. For older telephone systems, the outside line access code can be R (= Flash). Press **R** to enter this outside line access code. If the connection to the public telephone network is not possible, contact your telephone system supplier.

- 7 Confirm with **OK**.
- 8 When finished, the device tests the telephone line. Confirm with **OK**.
- 9 Your device checks whether it can establish a connection with the public telephone network. If it cannot establish the connection, you are once again asked for input.

DSL Connection

In the event that you use a DSL modem: Connect the device to the slot intended for analogue telephones/fax machines! For additional information, please consult the operating manual of your DSL system. Ask your telephone or internet service provider if necessary.

ISDN Connection

Your device is an analogue fax device (Group 3). It is not an ISDN device (Group 4), and therefore it cannot be operated directly on an ISDN connection. In order to do this, you need either an analogue adapter or a connection for analogue terminals. Details for ISDN connections can be found in the instructions provided with the terminal adapter or the dial-up router.

Voice Mailbox

You cannot simultaneously use the answering machine facility of your telephone service provider (= voice-mail box) and receive faxes on your devices. Get the mail-box function for your telephone connection deactivated or set the number of rings for the fax switch to lower than 5 on your device (also see Chapter Setting the Fax Switch, page 45). When the fax switch accepts the call, the mail-box of the service provider does not step in. Enquire with your telephone company.

Registering and De-Registering Additional Cordless Telephones

Normally your cordless telephone is registered with your device in the factory. In the starting mode, press **OK**. The display shows on which base unit and with which number the cordless telephone is registered.

Notice



Unregistered Cordless Telephones

If you acquired a model with several cordless telephones, only one cordless telephone is registered with your device in the factory. Insert the batteries as described above and register the cordless telephones with your device (also see Chapter "Telephone Connections and Additional Devices", page 50).

You can register in all up to five cordless telephones with your device. Using only original cordless phones as additional cordless phones ensures optimum use of all functions. You can get original cordless telephones through our order service or at specialist shops.

Notice**GAP Compatible**

Additional cordless telephone must be GAP-compatible.

Registering Cordless Telephone

You must first bring the cordless telephone and then your device (= base station) in the registration mode to register a cordless telephone.

- 1 On the cordless telephone, press ▲/▼, and using ▲/▼ select **SETTINGS**.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select **ADVANCED SET..**
- 4 Confirm with **OK**.
- 5 Using ▲/▼ select **SET HANDSET**.
- 6 Confirm with **OK**.
- 7 Using ▲/▼ select **REGISTRATION**.
- 8 Confirm with **OK**.
- 9 Confirm with ●● **Yes**. The cordless telephone goes into registration mode.
- 10 Press **OK**, [8][2] and **OK** on the device.
- 11 Confirm the preset PIN code (0000) using **OK**.

The cordless telephone is automatically registered. This process can take a few minutes. Then the number with which it is registered with the device appears on the display of the cordless telephone.

Notice**Registering other Cordless Telephones**

You can register other cordless telephones with your device in the same manner. If you face any difficulties in registering, de-register all cordless telephones, and re-register them individually.

Deregistering Cordless Telephone

You may log off a cordless telephone either using the device or using the cordless telephone.

On the Device

- 1 Press **OK**, [8][3] and **OK**.
- 2 Using ▲/▼ to select which cordless telephone you are would like to de-register.
- 3 Confirm with **OK**. The device disconnects from the cordless telephone.

On the Cordless Telephone

- 1 On the cordless telephone, press ▲/▼, and using ▲/▼ select **SETTINGS**.
- 2 Confirm with **OK**.
- 3 Using ▲/▼ select **ADVANCED SET..**
- 4 Confirm with **OK**.

- 5 Using ▲/▼ select **SET BASE**.
- 6 Confirm with **OK**.
- 7 Using ▲/▼ select **DELETE HANDSET**.
- 8 Confirm with **OK**.
- 9 Using ▲/▼ to select which cordless telephone you are would like to de-register.
- 10 Confirm with **OK**.
- 11 Confirm the de-registration with ●● **Yes**. The connection with the device is disconnected.

Registering the Cordless Telephone with other Devices

You can register a cordless telephone on four different devices (= base units).

On the Device

- 1 Register the cordless telephone with the first device as described above.
- 2 Press **OK**, [8][2] and **OK** on the next device.
- 3 Confirm the preset PIN code (0000) or enter a new PIN code.

Notice**Identically PIN Codes**

The pin code can be identical with the pin code on the first device.

- 4 Confirm with **OK**.
- On the Cordless Telephone**
- 5 On the cordless telephone, press ▲/▼, and using ▲/▼ select **SETTINGS**.
 - 6 Confirm with **OK**.
 - 7 Using ▲/▼ select **ADVANCED SET..**
 - 8 Confirm with **OK**.
 - 9 Using ▲/▼ select **SET HANDSET**.
 - 10 Confirm with **OK**.
 - 11 Using ▲/▼ select **PERSON. REGISTR.**
 - 12 Confirm with **OK**.
 - 13 Select the next device (= base station) using ▲/▼.
 - 14 Confirm with **OK**.
 - 15 Confirm the name of the base unit, or enter a new name.
 - 16 Confirm with **OK**.
 - 17 Enter the same pin code which you entered on the other device.
 - 18 Confirm with **OK**.
 - 19 Using ▲/▼ select the number with which you would like to register the cordless telephone on the device.
 - 20 Confirm with **OK**.

Setting the Preferred Base Unit

With this function you can specify which device (= base station) should be used for placing telephone calls if you have registered your cordless telephone with multiple devices. When you select **AUTO**, the cordless telephone automatically connects to the device that is within the range.

- 1 On the cordless telephone, press **▲/▼**, and using **▲/▼** select **SETTINGS**.
- 2 Confirm with **OK**.
- 3 Using **▲/▼** select **ADVANCED SET..**
- 4 Confirm with **OK**.
- 5 Using **▲/▼** select **SET HANDSET**.
- 6 Confirm with **OK**.
- 7 Using **▲/▼** select **BASE PRIORITY**.
- 8 Confirm with **OK**.
- 9 Press **•** **EDIT ENTRY**.
- 10 Using **▲/▼** select the device to which you would like to assign the priority, or select auto setting.
- 11 Confirm with **OK**.

Connecting Additional Devices

You can operate other devices on a telephone line, for instance answering machines, modems or charge counters

Connection to the Device

You can connect additional devices directly to your device. Insert the telephone cable of the additional device into the **EXT** socket (RJ-11-connection) on the device.

Notice



Direct Connection Recommended

We recommend direct connection to the device because this allows the fax switch to function optimally and to control the additional devices.

Connection to the Telephone Line

In order for the fax switch to function, the device must be first in the series if multiple devices are connected to the same telephone socket. Follow the correct order.

Using Additional Telephones (Easylink)

With the Easylink function you can control your device with additional telephones. To use this function, additional telephones must be set to the tone dialling mode (DTMF/MFV tones) (for this purpose see the operating manual of your additional telephone).

Starting Fax Reception

If you pick up at an additional device and hear that you are receiving a fax (whistling tone or silence), you can start the fax reception by pressing **[*][5]** on the additional telephone or pressing **START** on the device.

Taking Over the Line

If you pick up on an additional telephone and the device continues to ring or attempts to receive a fax, you can disconnect the device from the line. Press **[*][*]** on the additional telephone.

Changing Code

CAUTION!



Changing Easylink Codes!

Only change the codes if it is absolutely necessary. The codes must begin with **[*]** or **[#]** and must be different.

- 1 Press **OK**, **[5][4]** and **OK**.
- 2 Enter the new code for starting fax reception.
- 3 Confirm with **OK**.
- 4 Enter the new code for taking over the line on an additional device.
- 5 Confirm with **OK**.

16 Service

Notice



Troubleshooting

Should disruptions occur, follow the instructions on the display and on the error report.

Checking the Ink Film Reserve

- 1 Press **OK**, [4] [6] and **OK**.
- 2 The number of pages that can still be printed with the ink film is shown on the display.
- 3 Press **STOP** to return to the starting mode.

If the ink film used up or if there is no ink film in the device, a message appears on the display.

Changing the ink film

CAUTION!



Use Original Consumable Materials!

Use only original consumable materials. These are available from a specialised retailer or through our order service (see back side of this user manual). Other consumable materials can cause damage to the device.

CAUTION!




Observe Packaging Instructions

Follow the instructions on the packaging of the consumable materials.

For receiving or copying documents, an ink film must be inserted in your device. Your device is delivered with an already inserted free ink film for a few test pages. For this film, you do not require any Plug'n'Print card (= chip card with information regarding ink film capacity). For every next ink film that you insert, you must load the capacity memory with the included Plug'n'Print card.

- 1 Remove the paper from the paper feeder and take the paper tray out of the device.
- 2 Open the device by lifting the panel using grip in the centre and folding it up.

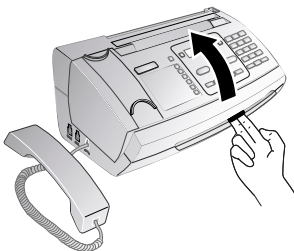


DANGER!



Device can Close with a Snap!

Lock the cover of the device completely into place when opening the device. You could be injured if the cover falls while you are working on the device.

- 3 Grip the rear ink film roll at both the sides and place it next to the front ink film roll.

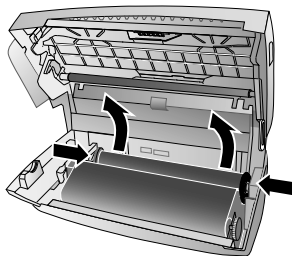

- 4 Remove both the rolls from the device. The used ink film cannot be reused.




CAUTION!




Data on Used Ink Films!

The messages and copies you have printed out can be read from used ink films. Consider data protection issues when disposing of used ink films.


- 5 Pull the used Plug'n'Print card out of the plug socket on the left hand side next to the ink film tray. The Plug'n'Print card cannot be reused.

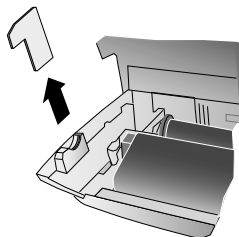


- 6 Carefully remove the rubber bands from the new ink film. Make sure that the film is not damaged!

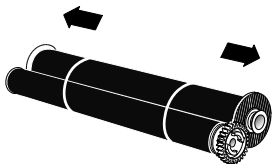


- 7 Place the larger roll with the ink film in the rear ink film tray. The blue gear wheel must be on the right hand side.

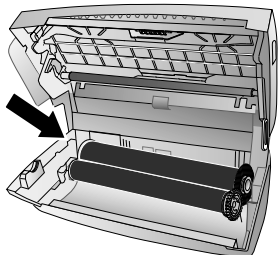


- 8 Place the smaller roll without ink film in the front tray. The blue gear wheel must be on the right hand side and the pin must be inserted in the depression on the left hand side.

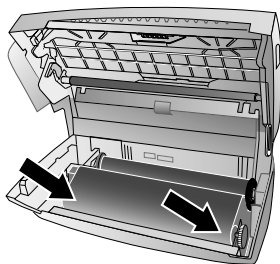

- 9 Break the chip card from the Plug'n'Print card. Insert the chip card in the plug socket on the left hand side next to the ink film tray.

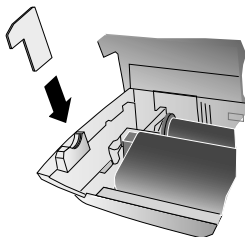

- 10 Turn the blue gear wheel forward to tension the ink film. The ink film must not have any creases.

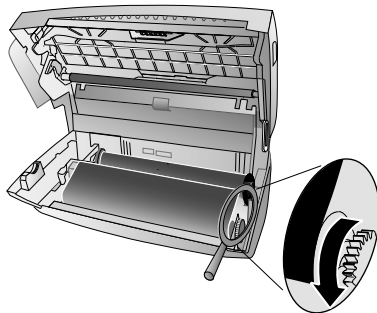

- 11 Close the device. Insert the paper tray in the opening provided for it behind the paper feeder. Insert paper again.

Fixing a Paper Jam

- 1 Remove the paper from the paper feeder and take the paper tray out of the device.
- 2 Open the device by lifting the panel using grip in the centre and folding it up.




DANGER!




Device can Close with a Snap!

Lock the cover of the device completely into place when opening the device. You could be injured if the cover falls while you are working on the device.

- 3 Carefully pull out the paper.

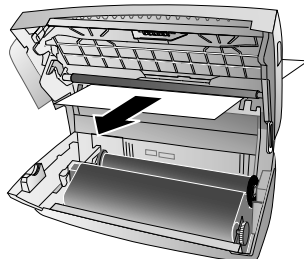

- Turn the blue gear wheel forward to tension the ink film. The ink film must not have any creases.

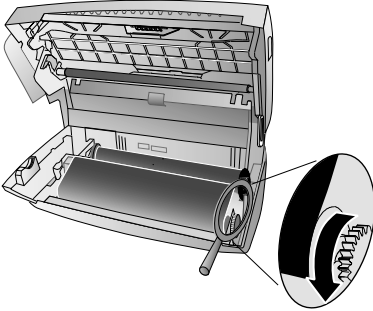

- Close the device. Insert the paper tray in the opening provided for it behind the paper feeder. Insert paper again.

Fixing a Document Jam

- Remove the paper from the paper feeder and take the paper tray out of the device.
- Open the device by lifting the panel using grip in the centre and folding it up.




DANGER!



Device can Close with a Snap!


Lock the cover of the device completely into place when opening the device. You could be injured if the cover falls while you are working on the device.

- Open the scanner cover and the cover of the automatic document feeder by first pushing the support (A) and then the support (B) inside. The cover (C) falls freely.

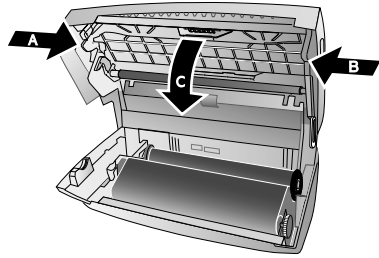


EN

- Carefully pull the document to the front or to the back out of the device.

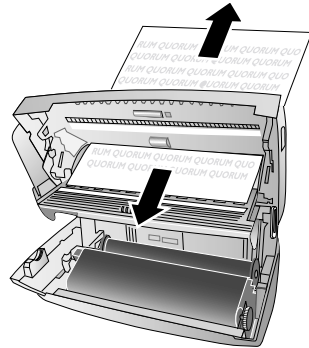

- Close the scanner cover and the cover of the automatic document feeder. Both the supports must securely snap into place.
- Turn the blue gear wheel forward to tension the ink film. The ink film must not have any creases.

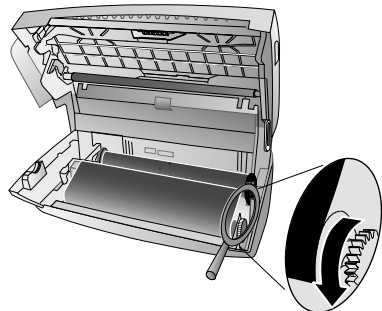

- Close the device. Insert the paper tray in the opening provided for it behind the paper feeder. Insert paper again.

Cleaning

! DANGER!



Instructions for Cleaning!

Unplug the device from the power socket before cleaning it. Use a soft, lint-free cloth. Never use liquid or easily flammable cleansers (sprays, abrasives, polishes, alcohol, etc.). Do not allow any moisture to reach the interior of the device.


Notice



Fax Cleaning Sheets

Special fax cleaning sheets are available as accessories from our call centre. Insert a sheet into the document feeder. Press **STOP**; the page is ejected. Repeat this process a few times.

- 1 Remove the paper from the paper feeder and take the paper tray out of the device.
- 2 Open the device by lifting the panel using grip in the centre and folding it up.

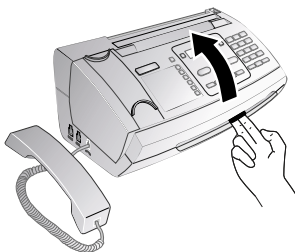


! DANGER!




Device can Close with a Snap!

Lock the cover of the device completely into place when opening the device. You could be injured if the cover falls while you are working on the device.


- 3 Open the scanner cover and the cover of the automatic document feeder by first pushing the support (A) and then the support (B) inside. The cover (C) falls freely.

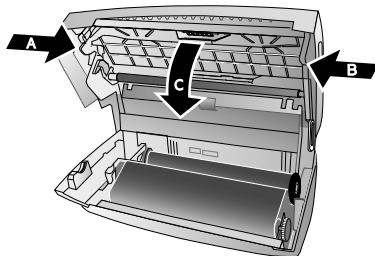


- 4 Lightly wipe the upper side of the scanner glass (A) and the lower side of the document feeder/scanner film (= white plastic plate) (B) with a cloth.

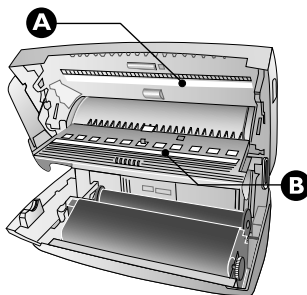

- 5 Clean the feed roller (A) and the underside of the support pad of the feeder roller (B) with a soft, lint-free cloth moistened with cleaning alcohol (96 percent). Rotate the feed roller; You must clean the entire roller.

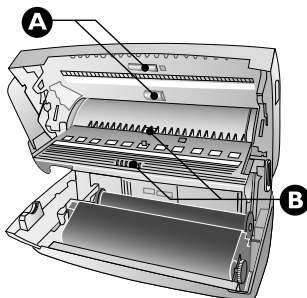

- 6 Close the scanner cover and the cover of the automatic document feeder. Both the supports must securely snap into place.
- 7 Turn the blue gear wheel forward to tension the ink film. The ink film must not have any creases.

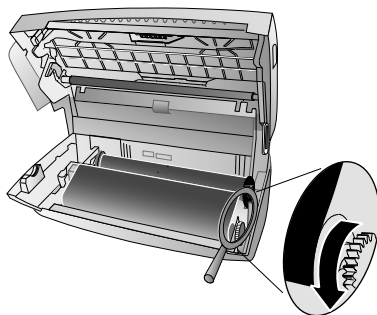


- 8 Close the device. Insert the paper tray in the opening provided for it behind the paper feeder. Insert paper again.

Displaying the Battery Charge

The charge indicator on the display shows the charge level of the battery. If the charge is too low, the display illumination is switched off and the hands-free function is not available. Place the cordless telephone into the charging station.

Changing the Batteries in the Cordless Telephone

- 1 Press and hold  (at least two seconds) for switching off the cordless telephone.
- 2 Open the battery compartment on the backside of the cordless telephone by pulling the cover down.



- 3 Remove the old batteries.

Notice



Disposing of the Batteries

The batteries used should be disposed of according to the recycling regulations of your country.

- 4 Insert the new rechargeable batteries in the battery compartment with the positive and negative poles as shown in the picture in the battery compartment.

DANGER!



No Non-Rechargeable Batteries!

Never use non-rechargeable batteries in the cordless telephone. Follow the specifications in the technical data.



- 5 Place the cover on the battery compartment and slide it upward until it snaps into place.
- 6 Place the cordless telephone into the charging station.

DANGER!



Never Into the Charging Station Without Batteries!

Never place the cordless telephone into the charging station without batteries.

EN


 
Notice



Charging Batteries for 12 Hours

Leave the cordless telephone in the charging station for at least twelve hours. The batteries will heat up slightly during charging; this is not dangerous.

Checking the Firmware Version

- 1 Press **OK**,   and **OK**.
- 2 The model designation and the configured country appear on the display.
- 3 Confirm with **OK**.
- 4 The information on the firmware version of the device is displayed.
- 5 Confirm with **OK**.

Using Service Codes

















The service codes delete all the changed settings and your device is reset to factory settings. It may be possible that the device with the changed settings reacts differently than expected.

CAUTION!



Settings will be Deleted!

Only use the service codes if this is absolutely necessary. Some service codes also delete saved messages and telephone book entries.

- 1 Press **OK**,   and **OK**.
- 2 Enter a service code:
   —Deletes all changed settings and saved data. The device is reset to factory settings and the initial installation process is started.
   —Deletes all changed settings. Saved data and telephone book entries remain intact.
   —Deletes saved faxes, when there are problems with printing.
- 3 Confirm with **OK**.
- 4 Using /  select **SURE: YES**.
- 5 Confirm with **OK**.

Notice



Cancelling Entry

If you have entered the incorrect code, you can cancel the entry with **SURE: NO**.

Power Cycling

If a problem occurs that cannot be corrected with the instructions in this user manual (see also the help below), follow the steps given here.

- 1 Pull out the power plug.
- 2 Wait at least ten seconds, then plug the power plug back into the socket.
- 3 Follow the instructions on the display and in the error report. If the problems repeats, please contact our technical customer service or your retailer.

General Information	
The time and date flash on the display.	You must check the time and date after a short power failure. Confirm with OK .
Problems when Faxing or Printing	
Faxes sent are of poor quality.	Change the resolution from RESOL. : STANDARD to RESOL. : FINE or RESOL. : PHOTO . Change the contrast. Clean the scanner and the document feed slot. Test the device by making a copy of the document. If the device is in order, the device of the recipient might be defective.
The device produces black lines when sending or printing.	Clean the scanner and the document feed slot.
Copy is blank.	Insert the documents face up into the document feeder.
Printing is interrupted.	Paper or document jam, no paper or ink film. Follow the instructions on the display and in the error report. There could be a small pause after printing several pages. The device continues printing automatically.
No printing	Check if you have inserted clamped paper correctly. The lever on the right hand side next to the paper feeder must be folded backwards.
Documents are not properly fed.	Clean the scanner and the document feed slot.
Problems with the Connection	
The device rings once, remains silent for a short while and starts ringing again.	This is absolutely normal. The fax switch checks the call after the first ring. If it is a voice call, the device continues to ring.
No dial tone	Check the installation of the device. Connect the telephone cable to the socket marked LINE . Insert the telephone plug into your PTT line socket.

Problems with the Connection	
Fax transmissions are constantly interrupted.	Try to send the fax manually: Press Ⓜ , and dial the number. If the recipient is using an answering machine, wait until you hear a whistling tone. Press START . It is possible that the recipient's device is not ready to receive.
You hear a whistling tone or silence in the handset.	The call is a fax: Press START on the device. Press *5 on the additional telephone. Hang up.
No fax reception or a short fax audio signal as message on the answering machine	Using function 51, set the number of rings for the fax switch to 4 and the total number or the number of rings for the answering machine (model dependent) to 5 (see Page 45). You cannot simultaneously use the answering machine facility of your telephone service provider (= voice-mail box) and receive faxes on your devices(see page 50).

Problems with the Cordless Telephone	
Cordless telephone does not function or does not function as expected. Display shows only the battery charge.	Check if the cordless telephone is functioning and is registered with the device. Switch the cordless telephone off. Open the battery compartment on the backside. Remove the batteries and insert them again. Close the battery compartment and switch the cordless telephone on again.
No dial tone	The cordless telephone is not registered with the device or is out of range.
The cordless telephone cannot be switched on.	Place the cordless telephone into the charging station.
The cordless telephone cannot be switched on after 12 hours in the charging station.	Change the batteries in the cordless telephone (also see Chapter Service, Page 57).

17 Appendix

Technical Data

Dimensions (L × H × W)	313 × 129 × 197 mm
Weight	1,9 kg
Mains Connection	220–240 V - / 50–60 Hz
Power Consumption	
Stand-by Mode	< 2,5 W
Transmission	< 20 W
Recommended Ambient	18–28 °C
Relative Humidity	20–80 % (non-condensing)
Connection Type	PSTN · PABX
Dialling Mode Tone / pulse dialling (country dependent)	

Standards

Safety	EN 60950-1
Emissions	EN 55022 Class B
Immunity	EN 55024

Scanner

Scan Width	212 mm
Horizontal Resolution	8 dots/mm
Vertical Resolution	Standard: 3,85 lines/mm
.....	Fine: 7,7 lines/mm

Memory

Telephone Book	up to 200 entries
Voice Messages	up to 30 minutes
Fax Messages	up to 50 pages (standard test letter)
SMS Messages	up to 30 SMS messages

Cordless Telephone

Rechargeable Batteries	AAA · NiMH
Talk Time	up to 10 hours
Stand-by Period	up to 120 hours
Range	up to 50 m (in buildings)
.....	up to 300 m (in open-air)

Paper

Capacity	50 sheets
Size	A4 · 210 × 297 mm
Thickness	0,07–0,11 mm
Weight60–90 g/m ²

Document Feed Slot

Capacity	10 sheets
Width	148–212 mm
Length	100–600 mm
Thickness	0,06–0,15 mm

Fax

Type	Group 3
Compatibility	ITU-TT.30
Data Compression	MH · MR
Modulation	V.17 · V.21 · V.27ter · V.29
Transfer Speed	14.400 bps

Technical specifications subject to change without notice.

Guarantee

(Terms and Conditions for United Kingdom only)

In order to supply the guarantee, you should contact your dealer or Sagem Communications Helpdesk. The proof of purchase will be required.

Please make usage of your equipment for the purpose for which it was designed and under normal usage conditions. Sagem Communications do not accept any liability for any usage made out of the frame of its original designed purpose and any consequence that may arise from this usage.

Should any malfunctioning arise, the dealer or Sagem Communications Helpdesk will advise you what to do.

A) General Guarantee Conditions

Sagem Communications undertakes to remedy by repair or exchange at its own convenience, free of charge for labour and replacement parts, any defects in the equipment during the guarantee period of 12—twelve—months (3—three—months for accessories), from the date of original invoice of the Equipment, where those defects are a result of faulty workmanship.

Unless the customer has concluded with Sagem Communications a maintenance contract in respect of the equipment which specifically provides for repairs to be carried out at the customer's premises, the repairs will not be carried out on the equipment at the customer premises. The customer must however return the defective equipment at his/her own expense, to the address given by the dealer or Sagem Communications Helpdesk.

In case a product needs to be sent in for a repair, it always has to be accompanied by a proof of purchase (which is not altered, written on or in any way be made illegible) showing that the product is still under warranty. In case no proof of purchase is enclosed, the Sagem Communications repair center will use the production date as a reference of establishing the warranty status of the product.

Apart from all legal obligatory rules, Sagem Communications, do not give any Guarantee, either implicit or explicit which is not set force in the present section, and could not be hold responsible for any direct or indirect, material or immaterial damage, in or out of the frame of the present guarantee.

If any provision of this guarantee shall be held to be in whole or in part invalid or illegal due to an obligatory rule applicable to consumers pursuant to their national legislation, such invalidity or illegality shall not impair or affect the remaining provisions or parts of this guarantee.

This guarantee does not affect the Customer statutory rights.

B) Exclusions From Guarantee

Sagem Communications shall have no liability under the guarantee in respect of:

-) Damage, defects, breakdown or malfunction due to one or more of the following:
 - Failure to properly follow the installation process and instructions for use
 - An external cause to the equipment (including but not limited to: lightning, fire, shock, vandalism, inappropriate conditions of electrical network or water damage of any nature)
 - Modifications made without the written approval of Sagem Communications
 - Unsuitable operating conditions, particularly of temperature and humidity
 - Repair or maintenance of the equipment by persons not authorized by Sagem Communications
-) Wear and tear from normal daily use of the equipment and its accessories
-) Damage due to insufficient or bad packaging of equipment when returned to Sagem Communications
-) Usage of new versions of software without previous approval of Sagem Communications
-) Work on any equipment or software modified or added without the prior written consent of Sagem Communications
-) Malfunctions not resulting from the Equipment or from software installed in user workstations for the purpose of use of the equipment.

Communication problems related to an unsuitable environment including:

- Problems related to access and/or connection to the Internet such as interruptions by access networks or malfunction of the line used by the subscriber or his correspondent
- Transmission faults (for example poor geographical coverage by radio transmitters, interference or poor line quality)
- The local network fault (wiring, servers, workstations) or the failure of the transmission network (such as but not limited to interferences, fault or poor quality of the network)
- Modification of the parameters of the cellular network carried out after the sale of the Product
-) The normal servicing (as defined in the user guide supplied with the equipment) as well as malfunctioning due to servicing not being carried out. Servicing costs are in any event always borne by the customer.
-) Malfunctions resulting from the usage of products, consumables or accessories not compatibles with the equipment.

C) Out of Guarantee Repairs

In the cases set forth in B) as well as after expiry of the guarantee period, the customer must ask the Authorized Sagem Communications Repair Centre for a cost estimation.

The repair and delivery costs will be invoiced to the customer.

The foregoing shall apply unless otherwise agreed in writing with the customer and only for the United Kingdom.

Helpdesk: 08 45 - 090 03 15



The CE symbol confirms conformity with the EU directives that apply to the device.

Declaration of Conformity (DoC)

Hereby, **Sagem Communications Austria GmbH** declares that this **PPF 685, PPF 695** is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

You can find the complete Declaration of Conformity on our website www.sagem-ca.at/doc



As a participant in the ENERGY STAR programme, Sagem Communications Austria GmbH has made sure that this machine complies with the ENERGY STAR requirements.



Packaging: To facilitate packaging recycling, please conform to your local selective recycling rules.

Batteries: Old batteries have to be deposited in designated collection areas.



Product: The crossed out dustbin logo on your product signifies it is classified as Electrical and Electronic Equipment covered by special disposal regulations.

To enforce recycling, recovery of The Waste Electrical and Electronic Equipment (WEEE) and to protect the environment and human health, European regulations requires that you selectively collect waste equipment using one of the following options:

- Your retailer will take your equipment back if you are buying a replacement product.
- Waste equipment can also be deposited in designated collection areas.

The paper and cardboard packaging used can be disposed of as recyclable paper. Have the plastic wrapping and Styrofoam packaging recycled or dispose of it in the non-recyclable waste, depending on the requirements in your country.

Trademarks: The references mentioned in this manual are trademarks of the respective companies. The lack of the trademarks ® and ™ does not justify the assumption that

these dedicated terminologies are free trademarks. Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Sagem Communications disclaims any and all rights in those marks.

The reproduction of certain documents (e.g. by scanning, printing, copying) is prohibited in many countries. The list of such documents below is not intended to be complete, it only offers a general overview. In case of doubt, consult your legal advisor.

- Passports (personal identification)
- Entrance and exit visa papers (immigration papers)
- Military service documents
- Bank notes, travel checks, payment orders
- Postage stamps, tax stamps (stamped or unstamped)
- Loan papers, certificates of deposit, bonds
- Documents protected by copyright

Follow the statutory regulations of your country with regard to the legal validity of fax transmissions—particularly in connection with the validity of signatures, meeting delivery deadlines or disadvantages resulting from the loss of quality in the transmission, etc.

Take care to maintain the statutory regulations of your country regarding telecommunications secrecy and data privacy.

This product is intended for use on an analogue public telecommunications network (PSTN) and in the country specified on the packaging. Use in other countries can result in faulty functioning.

For more information, please contact the technical service centre for your country. Should problems arise during use of your machine, please contact your retailer first.

Neither Sagem Communications nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or failure to strictly comply with Sagem Communications operating and maintenance instructions.

Sagem Communications shall not be liable for any damages or problems arising from the use of any options or any consumable materials other than those designated as original Sagem Communications products or Sagem Communications approved products.

Sagem Communications shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Sagem Communications products.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Sagem Communications. The information contained herein is designed only for use with this product. Sagem Communications is not responsible, if this information is applied to other devices.

This user manual is a document that does not represent a contract.

Errors, printing errors and changes are reserved.

Copyright © 2009 Sagem Communications Austria GmbH

Customer Information

As part of our continuing quest for total customer satisfaction, all of our products are made with ease-of-use and reliability in mind.

In your user manual you will find all the information required to use your machine. If, after consulting your user manual, you still require assistance, you should contact our Call Centre. Our personnel are highly trained specialists who can ensure that you receive the maximum benefit from your product.

We can assist you more quickly if you do not call us from the machine, rather an external telephone. Keep a printout of the settings as well as the serial number of the machine handy. The serial number can be found on the type label.

United Kingdom

Telephone: 08 45 - 090 03 15

Fax: 08 70 - 124 02 02

You can order original accessories from our homepage or—in some countries (see below)—per telephone on our toll-free number.

Use only original consumable materials. The warrantee does not cover damages to the device resulting from other consumables.

United Kingdom

Telephone: 0800 - 358 08 07

E-Mail: dti.faxinfo@sagem.com

Internet: www.sagem-communications.com

We hope that you will have lots of joy using your new product.



PHILIPS and the PHILIPS' Shield Emblem are registered trademarks of Koninklijke Philips Electronics N.V. and are used by SAGEM COMMUNICATIONS under license from Koninklijke Philips Electronics N.V.

SAGEM COMMUNICATIONS

Printing Terminals

Headquarters : Le Ponant de Paris
27, rue Leblanc · 75015 Paris · FRANCE
Tél. : +33 1 58 11 77 00 · Fax : +33 1 58 11 77 77
www.sagem-communications.com
Limited company · Capital 167.038.185 Euros · 440 294 510 RCS PARIS

PPF 685 · 695
UK
253132489-B