



User Guide

 
.....

5.0 Megapixels Digital Camera

.....


Product Overview

1. Shutter button
2. Flash
3. Power button
4. Self-timer LED
5. Lens
6. Microphone

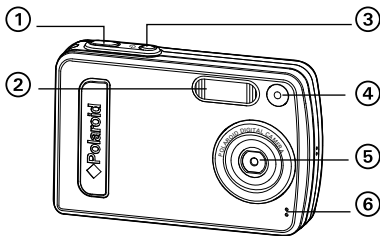


Front View

 7. Zoom in button
8. Zoom out/ Thumbnail button
9. Power LED
10. Flash LED
11. LCD Screen
12. Left button
13. Menu button
14. Wrist strap holder
15. Mode button
16. Flash / Up button
17. Self-timer / Right button
18. Down button
19. LCD screen on / off button
20. OK button

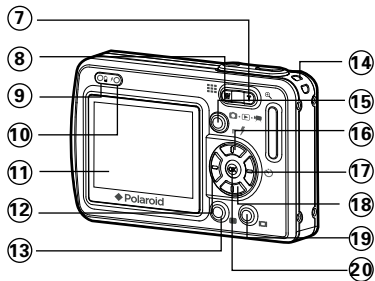

Back View

 - 21. Tripod mount
- 22. USB port
- 23. Battery / SD card door

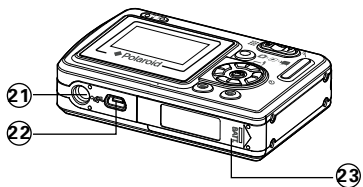

Bottom View

Table of Contents

1 Getting Started	7
• Camera Package Contents	8
• Attaching the Wrist Strap	9
• Installing and Removing the Battery	9
• Turning the Camera On and Off	10
• Checking the Battery Power Level.....	10
• Using Your Battery	11
2 Camera Setting	12
• Checking Camera Status	12
• Camera Modes	14
• How to Navigate Menus	14
• Setup Menu	15
• Formatting the Internal Memory Or SD Card	16
• Setting the Current Date and Time	17
• Auto Power Save Setting	18
• Setting the Beep Sound On/Off	19
• Setting Frequency	19
• Setting Display Language.....	20
• Setting the Date Stamp On and Off	20
• Resetting to Default Settings	21
• Switching the Information Display on LCD Screen	21
3 Taking Pictures.....	23
• Taking a Picture	23
• Setting Flash Mode	24
• Setting Self-timer	25
• Zoom Feature.....	26
• Setting the Image Size and Quality	27
• Setting Exposure Compensation	28
• Setting the White Balance for Pictures	29

4 Recording Video Clips	30
• Recording Video Clips	30
• Setting Video Resolution.....	31
• Setting the White Balance for Video Clips	32
5 Reviewing and Managing Pictures and Video Clips.....	33
• Reviewing the Pictures and Video Clips	33
• Reviewing Picture and Video Clip Files in Thumbnail	33
• Auto Play	34
• Playing the Video Clip	35
• Protect or Unprotect Picture(s) or Video Clip(s)	36
• Deleting Picture(s) or Video Clip(s).....	37
6 Print Settings	38
• About PictBridge	38
• DPOF (Digital Print Order Format)	45
7 Using the SD (Secure Digital) Card.....	48
• Using the SD Card	48
• To Copy Pictures and Video Clips from Internal Memory to a Memory Card.....	51
8 Installing the Software onto a Computer.....	52
• Software Included with Your Camera.....	54
• Computer System Requirements	55
9 Transferring Pictures and Video Clips to Your Computer.....	56
• Before You Transfer Files	56
• Connecting to Your Computer	56
• Transferring Pictures and Video Clips	57
• PhotoImpression® 5 Hot Plug Function (PC Only)	58
10 Troubleshooting Problems.....	60
• Troubleshooting	60

11 Getting Help	64
• Polaroid Online Services	64
• Customer Support	64
• ArcSoft Software Help	64
12 Appendix	65
• Technical Specifications	65
• Storage Capacities	67
• Uninstalling Polaroid Digital driver (PC Only)	70
• Camera Default Settings.....	71
• Tips, Your Safety & Maintenance	72
• Regulatory Information	73

1 Getting Started

 
Your camera has easy-to-use features. It has never been easier and more enjoyable to take digital pictures. Here are a few examples of what you can do with your camera.

- Enjoy point & shoot operation. Adjust the resolution for print or email.
- Store pictures and video clips to the internal memory or an SD card.
- Playback your pictures and video clips on the LCD screen or on a computer.
- Send your pictures and video clips over the Internet to family and friends.
- Your camera has PictBridge capability (See page 38).


• Camera Package Contents



Digital Camera




Registration Card

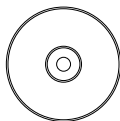 


The CD-ROM includes
Polaroid Digital Camera driver (PC)
Arcsoft PhotImpression® 5 (PC & Mac)
ArcSoft PhotoPrinter® 5 (PC)
/ArcSoft PhotoPrinter® 4 (Mac)
Adobe® Acrobat® Reader™ (PC & Mac)
User Guide (in PDF format)



 Quick Start Guide



4 AAA Batteries

 

Skin

 


Wrist Strap




USB Cable

• Attaching the Wrist Strap

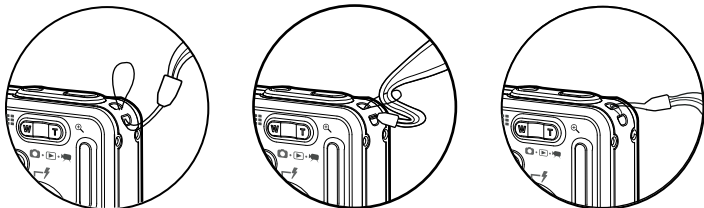


• Installing and Removing the Battery

 1. Open the camera battery door by pushing it outwards as illustrated.
2. Insert the battery as shown.
3. Close the battery door by pressing it downwards then slide it back to lock.

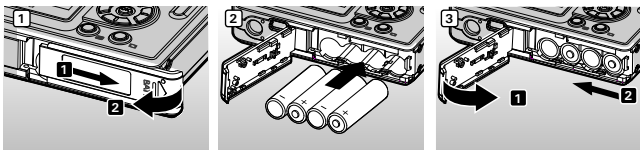


 4. To remove the battery, slide the battery lock in the direction of the arrow.
5. Take out the battery as shown.

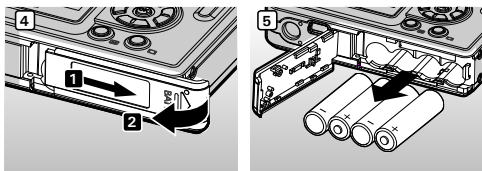

• Turning the Camera On and Off

 To turn on the camera, fully press and hold the Power button until the LCD Screen comes on. Press and hold the Power button again and the camera will power off.

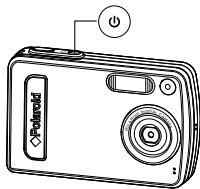

NOTE:

 
- The camera is designed with an automatic power-off feature to conserve battery life. After a specified period of inactivity, the camera automatically powers off.

• Checking the Battery Power Level

Check the battery power level before taking pictures.

1. Turn the camera on.
2. Check the battery power level that appears on the LCD screen.

- Battery power is full.
- Battery power is adequate.
- Battery power is low.
- Battery power is exhausted.

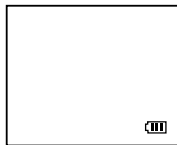

NOTE:

- When battery power is exhausted, the icon appears on the LCD screen and then the camera will turn off automatically in a few seconds. Replace the batteries with new ones immediately.

• Using Your Battery

Limit the following activities that reduces battery life:

- Reviewing your pictures on the LCD screen.
- Excessive use of the flash.

WARNINGS!

- Batteries should be replaced by an adult.
- Insert the battery with the correct polarity.
- Remove exhausted battery from the camera immediately.
- Do not short the supply terminals.
- Do not diapos the battery in fire.
- Remove battery from the camera when not in use.
- Batteries life varies depending on the camera usage.

 
These instructions should be retained for future reference.

2 Camera Setting

• Checking Camera Status


Turn on the camera, view the camera's LCD screen to check which camera settings are active. Those particular features whose icons are not displayed are not activated.

Still Image mode

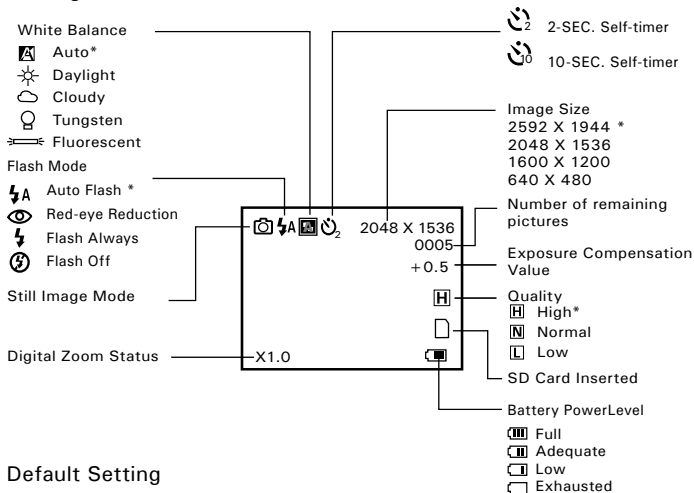


* Default Setting

 Video mode

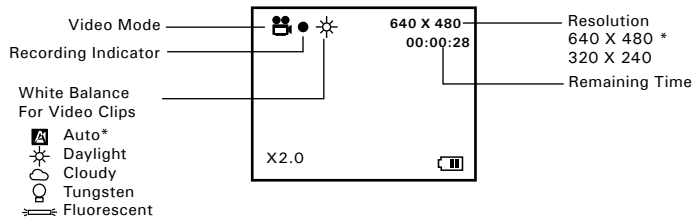


* Default Setting

 Playback Mode

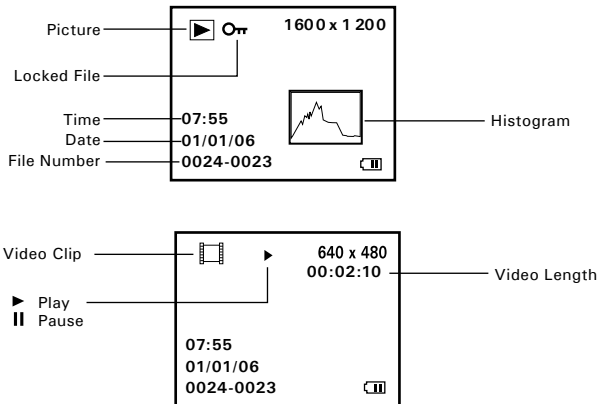


• Camera Modes

 The camera has three working modes, Capture mode, Playback mode and Video mode. Press the mode button switches among these modes.

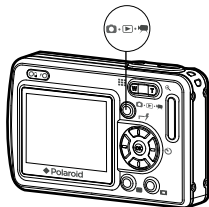


• How to Navigate Menus

  Menus are used to adjust capture and play settings, as well as other camera settings like the date/time and auto power off.

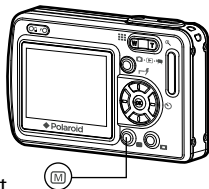



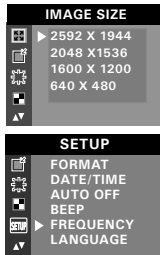 



 



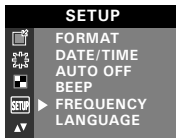 
1. Press the **M** button to enter the menu bar. Press it again to exit.
2. Press the **Left** button to enter the submenu or press the **Right** button to return to the menu.
3. Press the **Up** or **Down** button to select the desired setting.
4. Press the **OK** button to confirm.



• Setup Menu

Setup menu can be accessed in both Still Image and Video modes.



1. Press the Mode button until you see the  or  on the display.
2. Press the  button.
3. Press the  or  button to select  (SETUP).
4. Press the  button.
5. Press the  or  button to select the desired setting.
6. Press the  button to enter the next submenu for that particular option.



Content	Refer Page
FORMAT	16
DATE/TIME	17
AUTO OFF	18
BEEP	19
FREQUENCY	19
LANGUAGE	20
DATE STAMP	20
DEFAULT	21

• Formatting the Internal Memory Or SD Card

Formatting the internal memory or SD card will delete all data stored in it.




1. Follow the guidelines in “Setup Menu” on page 15 to access the SETUP menu.
2. Press the right button to access the “FORMAT” submenu.
3. Press the  or  button to select the desired setting.
4. Press the OK button.






 

NOTE:

- Data deleted by a format operation cannot be recovered. Make sure you do not have any useful data currently stored in the internal memory before you format it.
- Formatting the internal memory destroys all the pictures, even those that are protected.
- **With a memory card inserted, the above operation would format the inserted memory card only. The internal memory will not be formatted when a memory card is inserted.**




 


• Setting the Current Date and Time

 
1. Follow the guidelines in “Setup Menu” on page 15 to access the SETUP menu.
2. Press the  or  button to select “DATE/TIME”.
3. Press the  button.

Setting the date format

4. Press the  or  button to select “DATE FORMAT”.
5. Press the  button.
6. Press the  or  button to select the desired setting.
7. Press the OK button.

Setting the date and time

4. Press the  or  button to select “SETUP”.
5. Press the  button.
6. Press the  or  button to adjust the value in the field.
7. Press the  button to switch to the next field.
8. Press the OK button.

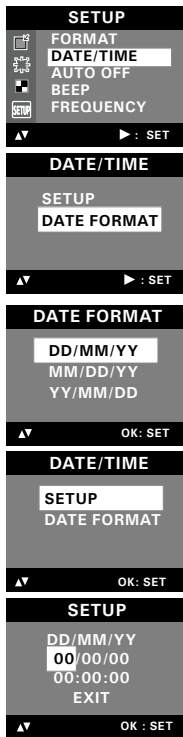

• Auto Power Save Setting

The camera performs the following power save operations to conserve battery power.

 
 



OFF

The power save feature is not activated.

1/3/5 MIN

The camera is designed to switch off automatically to save battery life after the specified period of inactivity.

 You can change the power save setting according to the following steps:

1. Follow the guidelines in “Setup Menu” on page 15 to access the SETUP menu.
2. Press the  or  button to select “AUTO OFF”.
3. Press the  button.
4. Press the  or  button to select the desired setting.
5. Press the OK button.

 
 



 
 
NOTE:



- Auto power off is automatically disabled under any one of the following conditions.
 - While an auto play is operating.
 - While the camera's USB port is connected to a computer or other external devices, or while the camera is being controlled by an external device.
- The LCD screen automatically goes into hibernation after one minute of inactivity. Press any button, except the Power button, to re-activate the LCD screen.

• Setting the Beep Sound On/Off

  You can turn the beep sound on and off. When the beep sound is turned on, the camera will beep when you press the buttons.


 

1. Follow the guidelines in “Setup Menu” on page 15 to access the SETUP menu.
2. Press the  or  button to select “BEEP”.
3. Press the  button.


 
4. Press the  or  button to select the desired setting.
5. Press the OK button.

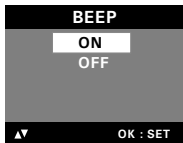
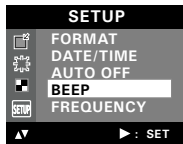


• Setting Frequency

  In order to take a better indoor picture, the camera needs to be set to suit the correct lighting frequency. Set the frequency to 60Hz for US and 50Hz for Europe.



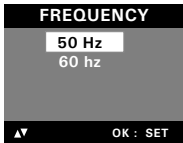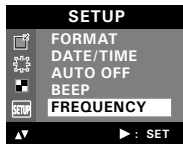


1. Follow the guidelines in “Setup Menu” on page 15 to access the SETUP menu.
2. Press the  or  button to select “FREQUENCY”.
3. Press the  button.

4. Press the  or  button to select the desired setting.
5. Press the OK button.



• Setting Display Language




 
 
Under this setting, you can select the language you prefer for the LCD screen.



1. Follow the guidelines in “Setup Menu” on page 15 to access the SETUP menu.
2. Press the  or  button to select “LANGUAGE”.
3. Press the  button.
4. Press the  or  button to select the desired setting.
5. Press the OK button.



• Setting the Date Stamp On and Off

Use the date stamp to imprint the date on your pictures.

  1. Follow the guidelines in “Setup Menu” on page 15 to access the SETUP menu.
2. Press the  or  button to select “DATE STAMP”.
3. Press the  button.
4. Press the  or  button to select the desired setting.
5. Press the OK button.

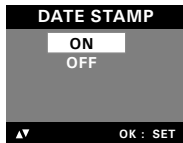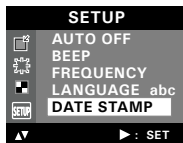






NOTE:

 
This setting is configured for images only.

• Resetting to Default Settings


You can easily change all the settings you made back to the camera default settings by the following steps.

Please refer to “Camera Default Settings” on page 71 for more details.


1. Follow the guidelines in “Setup Menu” on page 15 to access the SETUP menu.
2. Press the  or  button to select “DEFAULT”.
3. Press the  button.
4. Press the  or  button to select the desired setting.
5. Press the OK button.

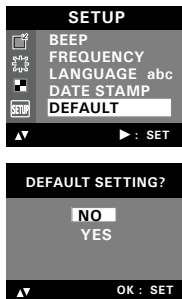


• Switching the Information Display on LCD Screen

Pressing the  button each time switches the LCD screen to the next display mode in the following sequence.

 
Still Image Mode

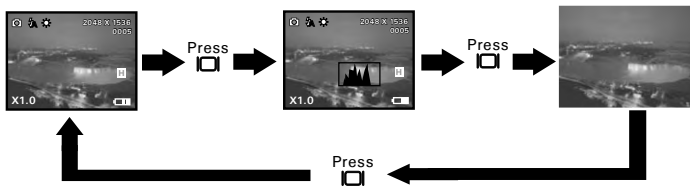

Video Mode

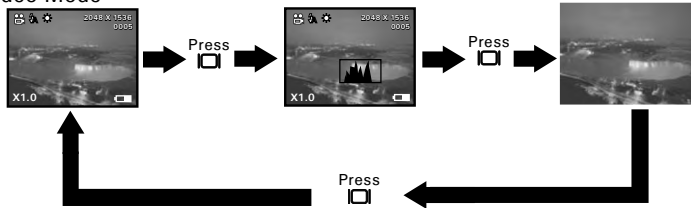 

Playback mode

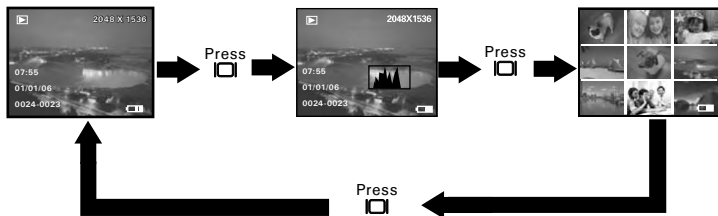 

3 Taking Pictures

Before you take pictures, please read this note first:

 
Outdoor Pictures Without the Flash

- Never take pictures directly into the sun as they may cause spots in your pictures.
- Make sure that the sun is behind the camera to properly light up your scene.

• Taking a Picture

Taking pictures at approximately 3.2 feet to infinity (1 meter to infinity).

1. Set the camera to Still Image mode.
2. Frame your subject using the LCD screen.
3. Hold the camera steady. Press the shutter button completely down to take a picture. A beep will sound (if the beep sound is turned on) when a picture is taken.

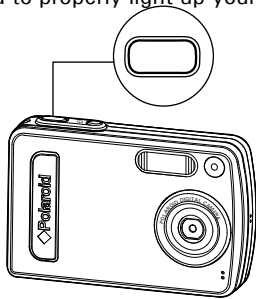





• Setting Flash Mode

1. Set the camera to Still Image mode.
2. Pressing the Flash button cycles through the flash modes.

When you press the Flash button, the icon (according to the flash setting you selected) will appear on the LCD screen. You can now take pictures using the flash mode you have selected. The flash will recharge after each flashed picture.

The flash range is approximately 3.2 feet to 6.4 feet (1.0 to 2.0 meters). The camera has 4 flash modes (default setting is Auto Flash). Use the flash when you take pictures at night, indoors, or outdoors in heavy shadows.

When shooting under these conditions:	Select this mode	Icon shown on the LCD screen
The flash does not fire. Use this setting for outdoor pictures, or where flash is prohibited or may be distracting, or when shooting towards a reflective surface, such as a window or a mirror. If there is not enough light when using this setting, your pictures will be too dark.	Flash Off	
The flash fires automatically as needed. Use this setting to take most pictures.	Auto Flash	
Use this setting to avoid "red eye" in your subject's eyes. The camera fires a brief preflash before the main flash.	Red-eye Reduction	
The flash fires for every picture. Use this setting in high-contrast situations to provide fill-light or use it indoors in low light.	Flash Always	




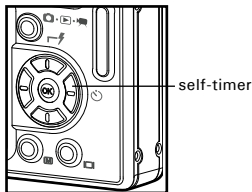 
NOTE:



- Flash modes are not available in Video mode.
- Never touch or block the flash with your fingers. Doing so can soil these components and interfere with the correct flash operation.



• Setting Self-timer

Your camera is designed with a self-timer function, which allows you to take pictures with a count down of 2 or 10 seconds.

1. Set the camera to Still Image mode.
2. Press the  button repeatedly to cycle through the self-timer settings and select the one you need.



Display	Option	Description
	2-SEC	Take a picture after a count down of 2 seconds.
	10-SEC	Take a picture after a count down of 10 seconds.

3. The icon  or  will appear on the LCD screen.
4. Frame your subject using the LCD screen.
5. Press the shutter button to take a picture. The camera beeps (if the beep sound is turned on) and the Self-timer LED blinks.




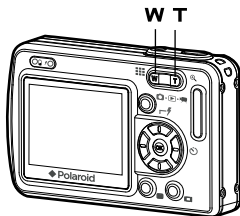 
NOTE:

- This feature is only available in Still Image mode.
- Place the camera on a flat surface or use a tripod when using the self-timer function.

• Zoom Feature

Your camera is designed with 4X digital zoom. This feature lets you zoom in on the central area of a photo and photograph only the enlarged portion of the picture.

1. Set the camera to Capture mode .
2. Press the **W** button to zoom out. Press the **T** button to zoom in. The zoom factor is shown on the LCD screen.



Digital Zoom Factor









NOTE:

- You may notice a decrease in image quality when using the digital zoom.
- The zoom feature is not available during recording video clips, please set zoom factor before recording video clips.

• Setting the Image Size and Quality

Picture resolution refers to the number of pixels in a digital picture. Picture quality depends on the JPEG file compression that the camera applies when the picture is taken. Higher resolution and less compression produces better quality but occupies more memory space. Smaller size pictures and normal quality are easier to email while larger size and fine quality are better for printing.

Image Size Setting

 



 
 
1. Set the camera to Still Image mode.
2. Press the **M** button.
3. Press the  or  button to select  (IMAGE SIZE).
4. Press the  button.
5. Press the  or  button to select the desired setting.
6. Press the OK button.







NOTE:

    It is recommended to use the 2592 x 1944 resolution for printing.



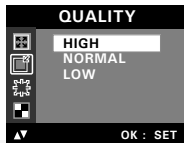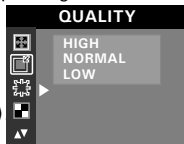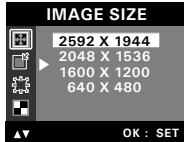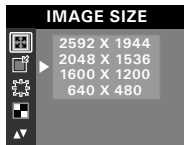



Quality Setting


1. Set the camera to Still Image mode.
2. Press the **M** button.
3. Press the  or  button to select  (QUALITY).
4. Press the  button.
5. Press the  or  button to select the desired setting.
6. Press the OK button.



• Setting Exposure Compensation

 You can adjust the exposure compensation value (EV) within the range of -2.0EV to +2.0EV in order to compensate for current lighting conditions. This setting can be used to obtain better result when shooting with backlighting, indirect indoor lighting, a dark background, etc.

 1. Set the camera to Still Image mode.
2. Press the **M** button.
3. Press the  or  button to select  (EXPOSURE).
4. Press the  button.
5. Press the  or  button to select the desired setting.
6. Press the OK button.

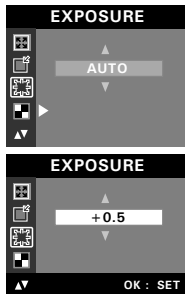
 








NOTE:






- A higher EV value is best used for light-colored subjects and backlit subjects. A lower EV value is best for dark-colored subjects and for shooting outdoors on a clear day.
- When shooting under very dark or very bright conditions, you may not be able to obtain satisfactory results even after performing exposure compensation.

  • Setting the White Balance for Pictures

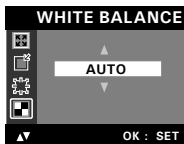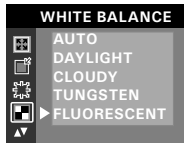Selecting the right type of white balance can help to make the color of a subject in a picture appear more natural under the type of lighting that is available.

 1. Set the camera to Still Image mode.
2. Press the **M** button.
3. Press the  or  button to select  (WHITE BALANCE).
4. Press the  button.
5. Press the  or  button to select the desired setting.
6. Press the OK button.



When shooting under these conditions:	Select this setting
Automatic adjustment	
Outdoor daylight	
Cloudy	
Indoors, illuminated by tungsten lighting	
Indoors, illuminated by fluorescent lighting	

4 Recording Video Clips



NOTE:

Change the drive mode from Still Image mode to Video mode before recording video clips, since Still Image mode is the default capture mode. Please refer to “Camera Mode” on page 14 for more details.

• Recording Video Clips

Use the Video mode to record video clips. The recording time displayed on the LCD screen will decrease and the ● icon will blink while recording.


 



 
1. Set the camera to Video mode.
2. Frame your subject using the LCD screen.
3. Press the shutter button completely down to start recording.
4. Press the shutter button again to stop recording. Recording stops when the current memory is full.

Recording Indicator



• Setting Video Resolution


 




Video resolution refers to the number of pixels in a digital video clip. Video clip quality depends on the file resolution that the camera applies when the video clip is recorded. Higher resolution makes better quality which occupies more memory space.

 
 
1. Set the camera to Video mode.
2. Press the **M** button.
3. Press the  or  button to select  (IMAGE SIZE).
4. Press the  button.
5. Press the  or  button to select the desired setting.
6. Press the **OK** button.








• Setting the White Balance for Video Clips

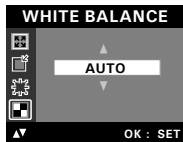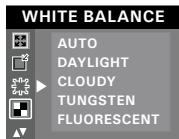Selecting the right type of white balance can help to make the color of a subject in the video clip appear more natural under the type of lighting that is available.

 1. Set the camera to Video mode.
2. Press the **M** button.
3. Press the  or  button to select  (WHITE BALANCE).
4. Press the  button.
5. Press the  or  button to select the desired setting.
6. Press the OK button.



When shooting under these conditions:	Select this setting
Automatic adjustment	
Outdoor daylight	
Cloudy	
Indoors, illuminated by tungsten lighting	
Indoors, illuminated by fluorescent lighting	

 
 


5 Reviewing and Managing Pictures and Video Clips



NOTE:







Change the camera mode from Capture mode to Playback mode before reviewing pictures and video clips. Please refer to “Camera Mode” on page 14 for more details.


• Reviewing the Pictures and Video Clips

1. Set the camera to Playback mode.
2. Use the  or  button to view the pictures and video clips. The  icon is shown on the LCD screen when a picture is selected. The  icon is shown on the LCD screen when a video clip is selected.

 • Reviewing Picture and Video Clip Files in Thumbnail

 You can view up to 9 picture and video clip files at a time on the LCD screen by using the Thumbnail function.


 


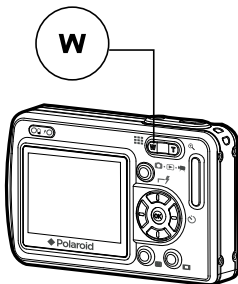


1. Set the camera to Playback mode.
2. Press the **W** button or  button. Thumbnail files will be shown on the LCD screen and the last reviewed picture will be highlighted.
3. Press the , ,  and  button to select a thumbnail file and view it in full screen by pressing the **T** button or  button.






 

• Auto Play

The Auto Play function enables you to view all the picture and video clip files stored in the camera one by one forward or backward on the LCD screen.

You can activate the Auto Play function and make Auto Play direction and interval according to the following steps.






1. Set the camera to Playback mode.
2. Press the **M** button.
3. Press the  or  button to select  (AUTO PLAY).
4. Press the  button.
5. Press the  or  button to select "SETUP".
6. Press the  button.

 
Set Auto Play Direction

7. Press the  or  button to select "DIRECTION".
8. Press the  button.
9. Press the  or  button to select the desired setting.
10. Press the OK button.





Setting Auto Play Interval

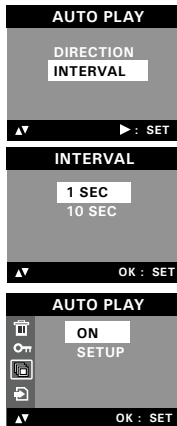

- Press the  or  button to select "INTERVAL".
- Press the  button.
- Press the  or  button to select the desired setting.
- Press the OK button.



 
 


Start Auto Play

Perform steps 1, 2, 3 and 4 on page 34.

- Press the  or  button to select "ON".
- Press the OK button.

The camera will automatically run from the last file that you have reviewed. Every file will display according to your interval setting. You may press the  or  button to stop the auto play. The auto play will keep running as long as there is power.






• Playing the Video Clip

- Set the camera to Playback mode.
- Press the  or  button to select the video clip you want to play.
- Press the OK button to start playing video clip.
Press  button to pause.
- Press the  button to stop.



The  icon is shown on LCD screen when a video clip is selected.

• Protect or Unprotect Picture(s) or Video Clip(s)

1. Set the camera to Playback mode.
2. Press the **M** button.
3. Press the  or  button to select **On** (PROTECT).
4. Press the  button.
5. Press the  or  button to select the desired setting.
6. Press the OK button.





LOCK THIS	Protect the selected picture or video clip
UNLOCK THIS	Remove protection from the selected picture or video clip
LOCK ALL	Protect all pictures and video clips in the current memory
UNLOCK ALL	Remove protection from all of the pictures and video clips










Once the images or video clips are protected, an **On** icon will appear on the LCD screen, indicating it is locked when you review it.



NOTE:

To protect one picture or video clip or to remove protection from one picture or video clip, use the  or  button to choose the selection you want to protect or unprotect before the above operation.



• Deleting Picture(s) or Video Clip(s)

 
1. Set the camera to Playback mode.
2. Press the **M** button.
3. Press the  or  button to select  (ERASE).
4. Press the  button.
5. Press the  or  button to select the desired setting.
6. Press the  button.
7. Press the  or  button to select the desired setting.
8. Press the OK button.

You can cancel the deletion by choosing “NO”.



NOTE:

- To delete one picture or video clip, use the  or  button to select the one you want to delete before the above operation.
- Protected file can not be deleted. Remove protection before deleting.
- All deleted pictures and video clips can not be recovered.

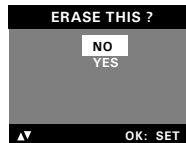

6 Print Settings

• About PictBridge

PictBridge is a new industry standard that allows you to print images directly from a PictBridge enable digital still camera to a PictBridge compatible printer without using a photo editing software or a computer.

Printing Procedures

1. Preparing the camera and the printer.

Camera	Be sure battery level is full before printing.
Printer	Refer to the user guide that comes with your printer and make preparations (paper, ink cassette, cartridge, etc.) as required.

Turn on the camera and the printer.

2. Selecting PictBridge mode

Set the camera to Playback mode and select the PictBridge mode. Refer to page 39 for details.

3. Connecting the camera to the printer

Refer to "Camera/Printer Connection" on page 40 for details.

4. Select print settings.

Use the camera's function and navigation buttons to select the print settings. Refer to page 41 for details.

5. Printing

Select "PRINT" and press the OK button to start printing. Refer to page 44 for details.

Cancelling Printing

Press the OK button to cancel printing the print job. The printer will stop printing and eject the paper.

Printing Errors

If for some reason an error occurs during or before printing, select “CANCEL” or “CONTINUE” and then press the OK button.

NOTE:

 
 
 
- Please refer to the printer’s user guide for the solutions. Printing may resume once the problem is solved.
- Printing operation may still fail with some errors even if you press the OK button after selecting “CONTINUE”. In that case, select “CANCEL” and press the OK button.

Selecting PictBridge Mode

1. Set the camera to Playback mode.
2. Press the **M** button.
3. Press the or button to select (PRINT SETTING).
4. Press the button.
5. Press the or button to select “PICTBRIDGE”.
6. Press the button.


NOTE:


To print a single image, select the image before enabling PictBridge mode.

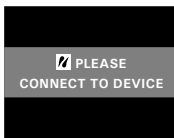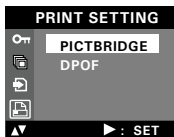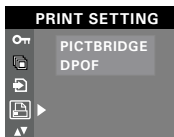

Camera/Printer Connection

 
Connecting with the USB Cable.

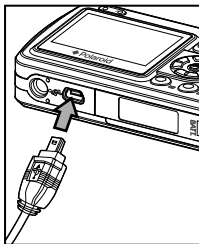

1. Plug Series A of the USB cable into the  marked socket on your printer. Location of USB socket will vary from printer to printer.
2. Plug Series Mini B of the USB cable into the port on your camera.





NOTE:

- “ DEVICE IS CONNECTED” displays on the LCD screen, indicating a proper connection to the printer.
- Do not connect the USB cable to the camera until PictBridge is enable and when prompted by the “PLEASE CONNECT TO DEVICE” screen. Or if you already have connected the cable to the camera, do not plug into printer until prompt to do so. Not following this sequence will result in connection failure.
- When “PLEASE CONNECT TO DEVICE” is displayed for about ten seconds, it will skip to the PictBridge print setting screen even if there is no connection between camera and printer.



Selecting Print Settings

1. Press the  or  button to select the print mode.




2. The following options are available.


THIS IMAGE	Print the selected image in the camera's internal memory or a memory card according to specified settings.
ALL IMAGES	Print all images in the camera's internal memory or a memory card according to the specified settings.
ALL INDEX	All images in the camera's internal memory or a memory card are given an index and printed according to the specified settings.

  

 



NOTE:

- To print a single image, select the image before enabling PictBridge.
- Print settings are configured for images only. Make sure there are no video clips or other file besides images in the memory before printing, otherwise, an error will occur if trying to print using the "ALL IMAGES" or "ALL INDEX" option.
- Not all printers will support all these print options. Please refer to the printer user guide for options available.

3. Press the  button to select the print settings.

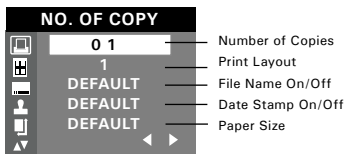 


Select a setting item using the  or  button and select setting contents using the  or  button.





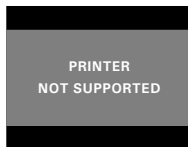


NOTE:

“PRINTER NOT SUPPORTED” may appear on the LCD screen after select a particular setting and begin to print. The camera’s print settings are not supported by the printer. In this case, select “DEFAULT” for this particular setting, or visit <http://www.polaroid.com> for possible solutions.



 
Specifying the Number of Copies

 1. Press the  or  button to select  (NO. OF COPY).
2. Press the  or  button to specify the number of copies (from 1 to 99) you want to print for the selected image or all images.





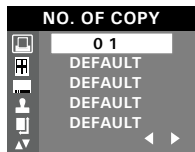


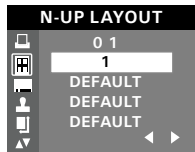 
NOTE:

“01” is the default setting.



 
 


Selecting Print Layout

 
1. Press the  or  button to select  (N-UP LAYOUT).
2. Press the  or  button to specify the number of printed images on a page.



- DEFAULT** Print settings differ according to the printer model.
- 1/2/4/6/8** Print 1/2/4/6/8 on a page.
- BORDERLESS** Print right to the edge of the page.



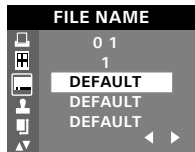

Setting the File Name On/Off

 
1. Press the  or  button to select (FILE NAME).
2. Press the  or  button to select "DEFAULT", "ON" or "OFF".



- DEFAULT** Print settings differ according to the printer model.
- ON** Add the file name to the printed image.
- OFF** Print without the file name.




 

Setting the Date Stamp On/Off

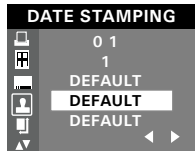1. Press the  or  button to select (DATE STAMPING).
2. Press the  or  button to select "DEFAULT", "ON" or "OFF".

 


- DEFAULT** Print settings differ according to the printer model.
- ON** Add the date stamp to the printed image.
- OFF** Print without the date stamp.

Selecting Paper Size



1. Press the  or  button to select  "SIZE".
2. Press the  or  button to select the paper size.

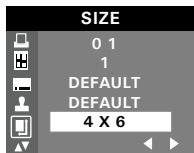The following paper sizes are available:
8" x 10", 4" x 6", A4 and default.





DEFAULT Print settings differ according to the printer model.

Printing

1. Press OK after all options defined, then press the  or  button to select "PRINT".
2. Press the OK button.



NOTE:

To return to the normal playback mode, press the  or  button to select "EXIT" and press the OK button.

• DPOF (Digital Print Order Format)

“DPOF” stands for “Digital Print Order Format”, which is a format for recording on a memory card or other medium which captured images and how many copies should be printed. Then you can print on a DPOF-compatible printer or at a professional print service from the memory card in accordance with the file name and number of copies settings recorded on the card.

 
 
With this camera, you should always select images by viewing them on the LCD screen. Do not specify images by file name without viewing the file contents.


 


NOTE:

Print settings are configured for images only. Make sure there are no video clips or other file besides images in the memory before printing, otherwise, an error will occur if trying to print using the “ALL IMAGES” option.

1. Insert an SD card into the camera.
2. Turn on the camera.
3. Set the camera to Playback mode.
4. Press the **M** button.
5. Press the or button to select (PRINT SETTING).
6. Press the button.
7. Press the or button to select “DPOF”.
8. Press the button.

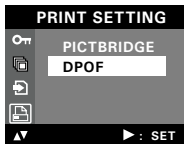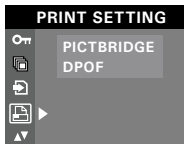

9. Press the  or  button to select the desired setting.
10. Press the OK button.

 
 



- THIS IMAGE** The selected picture in a memory card will be printed up to 99 copies.
- ALL IMAGES** All pictures in a memory card will be printed up to 99 copies for each picture.



NOTE:

To print a single image, select the image before enabling DPOF mode.

 11. Press the  or  button to select the desired setting.
12. Press the OK button.

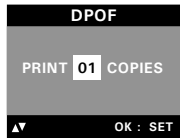


13. Remove the memory card from the camera and insert it into the printer's card slot (as illustrated). Location of the card slot may vary from printer to printer model.



NOTE:

Make sure you turn off the camera before inserting or removing a memory card.

 14. Press the Print button on the printer to start printing.

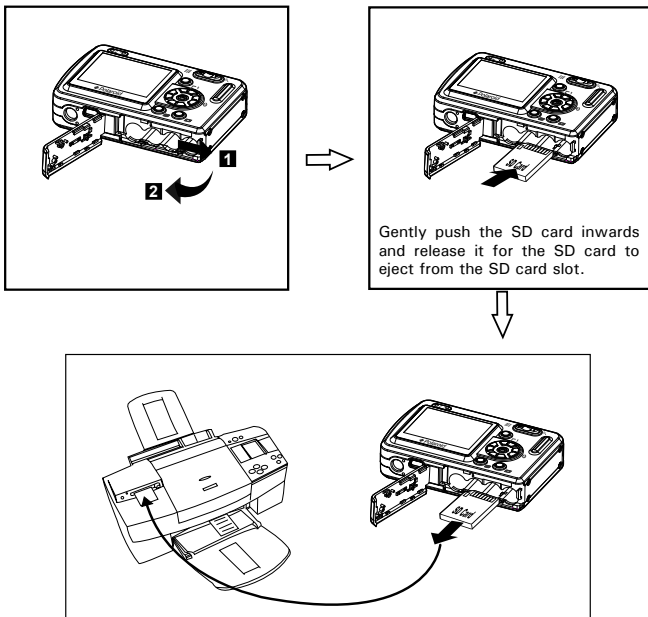

7 Using the SD (Secure Digital) Card

• Using the SD Card

Your camera comes with built-in flash memory for storing pictures and video clips. You can expand the memory using a commercially available SD card (up to 1GB). The camera senses whether a memory card is inserted, and automatically saves pictures and video clips accordingly. Note that you cannot save pictures or video clips to the built-in flash memory while a memory card is installed in the camera.

See pages 66 to 68 for storage capacities.

Memory Card Precautions

1. Use only an SD memory card with this camera.
2. Electrostatic charge, electrical noise, and other phenomena can cause data corruption or even loss. Always make sure that you always back up important data on other media (MO disc, computer hard drive, etc.).
3. If a memory card starts to behave abnormally, you can restore normal operation by reformatting it. However, we recommend that you always take along more than one memory card whenever using the camera far away from the home or office.
4. We recommend that you format a memory card before using it for the first time after purchasing it, or whenever the card you are using seems to be the cause of abnormal pictures. Remember to format a memory card if it was used in another digital camera or other devices.




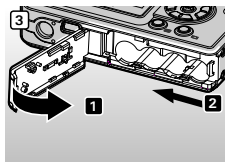 
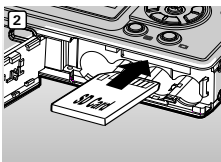 
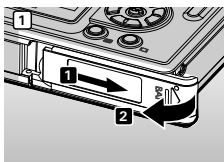 
IMPORTANT!

- Make sure you turn off the camera before inserting or removing a memory card.
- Be sure to orient the card correctly when inserting it. Never try to force a memory card into the slot when you feel resistance.
- SD memory cards have a write protection switch that you can use to protect files from accidental deletion. However, you must remove the write protection whenever you want to record new files onto it, format it, or delete its files.
- **Files contained in the SD card recorded by other cameras may conflict with your camera, and valuable data in your existing SD card may be distorted or lost when the card is inserted in your camera. We strongly recommend the user to use a NEW or formatted SD card for your camera. The manufacturer is not liable for losing or corrupting any valuable data or files in your SD card due to your improper operation.**

Inserting the SD Card

 
Turn off the camera. Insert the SD card and ensure the card is inserted correctly as illustrated.

The  icon will appear on the LCD screen when a SD card is inserted into the camera.



Removing the SD Card

To remove the SD card, turn off your camera. Gently push the SD card inwards until you hear a click, then release it for the card to eject from the card slot.

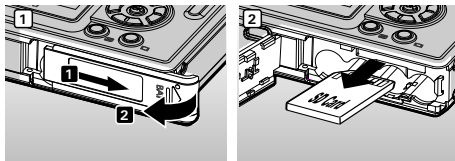

IMPORTANT!

- Never insert any other object into the camera's SD card slot. Doing so creates the risk of damage to the camera and card.
- Should water or any foreign objects ever get into the card slot, immediately turn off the camera, remove the batteries and contact your dealer or nearest service provider.
- Never remove a card from the camera while the camera is powered on. Doing so can cause the recording operation to fail, and even damage the memory card.

Formatting the SD Card

 
 




Formatting the SD card erases all files stored in it, including the protected ones. Removing the SD card during formatting may damage the card.



1. Insert an SD card into the camera card slot.
2. Turn on the camera.
3. Procedures are the same as for formatting the internal memory. Refer to "Formatting the Internal Memory" on page 16 for details.

IMPORTANT!

- SD cards formatted in another camera, computer or other devices may not work properly. It is recommended to format SD cards with your camera.
- Note that the data deleted by a format operation cannot be recovered. Make sure you do not have any useful data currently stored on a memory card before you format it.

• To Copy Pictures and Video Clips from Internal Memory to a Memory Card

  1. Insert an SD card into the camera card slot.
2. Turn on the camera.
3. Set the camera to Playback mode.
4. Press the **[M]** button.
5. Press the  or  button to select  (COPY TO CARD).
6. Press the  button.
7. Press the  or  button to select the desired setting.
8. Press the OK button.

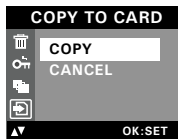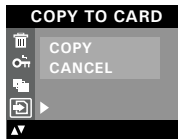


In the above operation, you can exit to the normal Playback mode by choosing "CANCEL" and confirm it. Please note that you cannot copy pictures or video clips from a memory card to the internal memory.



NOTE:

 The original pictures and video clips will still be in the camera's internal memory before the copy operation has been performed. You must take the card out before you can erase them.

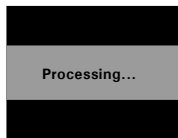

8 Installing the Software onto a Computer

• Installing the Software

PC

For Windows® Users:



IMPORTANT!

- Please backup all the necessary data before any driver and software installation.
- The CD-ROM is tested and recommended to use under English Windows OS.
- Please restart the computer after installing the software.



IMPORTANT! (For Windows® 98SE)

Windows® 98SE needs to install your camera driver for Mass Storage function. After the installation, please restart the Windows before connecting the camera to the PC.



IMPORTANT! (For Windows® Me, 2000, XP)

Directly plug-in the camera to transfer and view the pictures. No need to install the driver.





IMPORTANT!

To experience higher performance in graphics and sound when you're watching video clips on your PC, it is recommended to install the DirectX ver. 9.0 or above. It can be downloaded from <http://www.microsoft.com/directx>.

1. Before you begin, close all other software applications opened on your computer.
2. Insert the CD supplied into the computer CD-ROM Drive.
3. The CD User Interface Screen will automatically launch.
4. With the mouse, click on each software interface button in turn and follow the on-screen instructions.

**NOTE:**

  If the setup screen does not appear after loading the CD, then you can manually start it by double clicking the "My Computer" icon on your desktop, then double clicking the icon for the CD-ROM drive. When the CD-ROM window opens, double click the "INSTALL-E.EXE" icon.

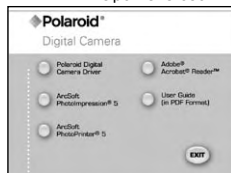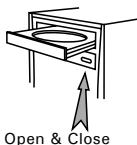***For Macintosh Users:***

1. Before you begin, close all other software applications opened on your computer.
2. Insert the CD supplied into the computer CD-ROM Drive.
3. Double click the CD-ROM icon "Polaroid".
4. Install the software included.

- **Software Included with Your Camera**

Your Camera Driver *Plug & Play removable disk*

Easy to use, just plug the camera to a computer and use it as a removable disk. Use the PhotoBase software to edit and print the pictures.

ArcSoft Photolmpression® *5 Picture Editing Software*

ArcSoft Photolmpression® is an easy to use image-editing program. This program enables users to upload still image and movie clips stored in your camera. You could also edit and retouch your photos, then add special effects or place them in cards, calendars, frames and fantasy templates. ArcSoft Photolmpression® also includes a wide variety of printing options.

ArcSoft PhotoPrinter® *Picture Editing Software*

A quick, easy way to get great-looking photo prints at home. In just a couple of clicks you can turn your favorite digital snapshots into gorgeous color photos ready for framing, scrapbooking, or sending to family and friends.

Adobe® Acrobat® Reader™ *.PDF File Reading Software*

Adobe® Acrobat® Reader™ lets you view and print Adobe Portable Document format (PDF) files on all major computer platforms, as well as fill in and submit Adobe PDF forms online.

• Computer System Requirements

For acceptable picture transferring and editing performance, we recommend the following minimum requirements;

PC

For Windows® Users

- Compatible with Microsoft® Windows® 98SE, Me, 2000 or XP
- Pentium® III 450MHz or equivalent processor
- 128MB RAM (256 MB recommended)
- USB Port
- DirectX 9.0 or higher
- 500MB free disk space
- Color monitor with high color (16-bit) graphic capability or higher
- CD-ROM drive
- Standard mouse and keyboard
- Stereo speakers

Mac

For Macintosh Users

- PowerPC® G3 or higher Processor
- Mac OS Version 9.2~X
- USB Port
- 128 MB RAM (256 MB recommended)
- 500 MB Free disk space
- Color monitor with high color (16-bit) graphic capability or higher
- CD-ROM drive
- Standard mouse and keyboard
- Stereo speakers

9 Transferring Pictures and Video Clips to Your Computer

• Before You Transfer Files

 


IMPORTANT!


BEFORE YOU CONNECT YOUR DIGITAL CAMERA TO THE COMPUTER, MAKE SURE THAT YOU HAVE INSTALLED THE SOFTWARE FROM THE ENCLOSED CD. PLEASE REFER TO "8 Installing the Software Onto a Computer".

• Connecting to Your Computer


Connecting with the USB Cable.

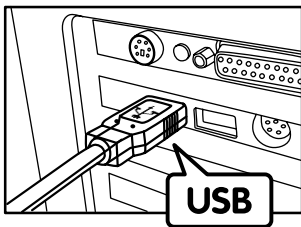

USB Series "A" Plug connects to your PC

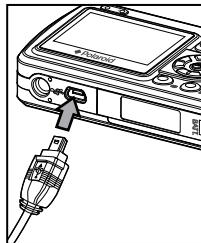 

USB Series "Mini B" Plug connects to your Camera

1. Turn off the camera.
2. Plug Series A of the USB cable into the  marked socket on your computer.
3. Plug Series Mini B of the USB cable into the port on your camera.
4. Turn on the camera and an interface "New Hardware Found" will show on the computer desktop.
5. A removable disk drive will be installed onto your computer automatically.

• Transferring Pictures and Video Clips

PC

For Windows® Users:



NOTE:

You can transfer pictures and video clips in any mode.

1. Turn on the camera
2. Connect the camera to a computer via the USB cable.
3. Double click on "My Computer" on your PC desktop and you will see a "Removable Disk" drive.
4. Double click "Removable Disk" -> double click "DCIM"-> double click any directory folder under "DCIM".
5. All the pictures and video clips are in the directory folder. Highlight the pictures and video clips and drag them to a folder of your choice. You can also create sub-folders to group them or use the PhotoBase software to edit and manage the pictures or video clips.

Mac

For Macintosh Users



NOTE:

For Mac users, directly plug-in the camera, no need to install the driver.

1. Connect the camera to Mac via the USB cable, the systems will automatically recognize the MASS STORAGE drive. (System will automatically create a Mass Storage named "Unlabelled")



NOTE:

This drive name will vary from different version of Mac OS system.

2. Double click the folder "Unlabelled" to enter sub-folder "DCIM".
3. Double click the folder "DCIM" and then any sub folder inside.
4. You can copy the pictures and video clips from this directory folder.

 
- **PhotoImpression® 5 Hot Plug Function (PC Only)**

PhotoImpression® 5 will detect the connection between the camera and the computer automatically.


When you connect the camera to the computer, PhotoImpression® 5 will launch on your desktop automatically.




PhotoImpression® 5 will detect any new photos in the camera. Click "OK" button to start the copying new photos to the computer.

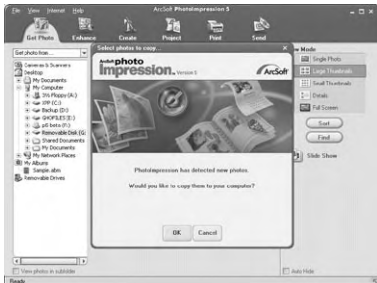

 You can select the destination which the photos are copied to.
Click the “folder” icon - >Browse for folder - > Click the “OK” button to confirm.
Click “OK” to start copying.

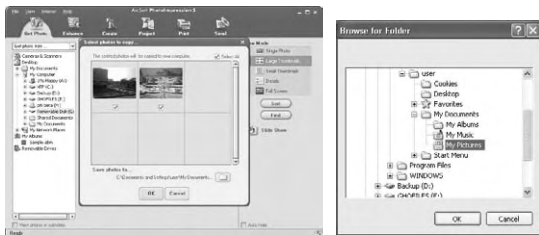

 The photos have been copy to the computer successfully. You can start to use the Photolmpression® 5 to edit the photos.

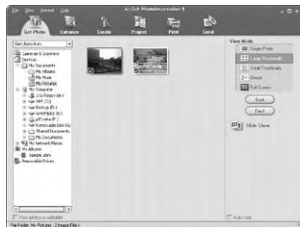

10 Troubleshooting Problems

• Troubleshooting

The troubleshooting guide is designed to help you. If problems continue, please contact customer support. Details are provided under “Getting Help”.

Symptom	Problem	Solution
I receive an error message when I am installing “Polaroid Digital Camera Driver”.	“Polaroid Digital Camera Driver” does not load.	Shut down all other applications and attempt to reinstall the driver.
		Check to see if the USB in your BIOS is activated. Please refer to Polaroid website for how to active USB controller in BIOS
I cannot upload images to my computer.	Connection failure.	Check all cable connections are secured.
	Camera Driver is not installed.	You need to install the camera driver for Windows 98SE systems.
I cannot run the “Polaroid Digital Camera Driver”.	Conflict with another camera driver or capture device.	If you have another camera installed on your computer, remove it and it’s driver completely from your system to avoid conflicting with your camera.
My CD Installation wizard does not work.	The auto installation file is switched off or the CD-ROM is disconnected.	Go to the computer desktop. Right click on “My Computer”. Click “Properties”. Select “Device Manager”. Double click on “CD-ROM”, double click on “CD-R (normally the manufacturer’s name. Click on “Settings”. Ensure both “Auto insert notification” and the “disconnect” are ticked. If you change the settings the computer will ask you to restart your PC. Click “Yes”.

Symptom	Problem	Solution
I get a blurred image when uploading my images to my computer.	There may be a momentary delay between pressing the Shutter button and the actual exposure.	Hold your camera steady until you hear a beep which indicates the exposure is completed.
My camera hangs up and all buttons do not work.	Your camera may be affected by the electrostatic discharge.	Take out the batteries and disconnect the camera from the computer for 10 seconds. Insert the battery again.
I cannot activate my digital camera by pressing the Power button.	Insufficient battery power or batteries are missing.	Replace batteries.
Camera does not turn on.	Batteries are not oriented correctly Or Batteries are dead	Orient batteries correctly Or Replace batteries
Camera suddenly powers off.	Auto power off function is activated. Or Batteries are dead.	Turn the camera on. Or Replace batteries.
Image is not recorded when the Shutter button is pressed.	Camera is turned off Or Flash unit is charging. Or Memory is full.	Turn the camera on. Or Wait until flash unit charging finishes. Or Delete images you no longer need, or use another memory card.
Camera powers off during self-timer countdown.	Batteries are dead.	Replace batteries.

Symptom	Problem	Solution
Recorded pictures are not saved in memory.	Camera powers off before the save operation is complete Or Removing the memory card before the save operation is complete.	If the low battery indicator is on the LCD screen, replace batteries with a full set of new ones as soon as possible Or Do not remove the memory card before the save operation is complete.
Color of the playback pictures is different from the picture on the LCD screen during recording.	Sunlight or light from another source is shining directly into the lens during recording.	Position the camera so that sunlight does not shine directly into the lens.
Pictures are not displayed.	A memory card with non-DCF pictures recorded with another camera is loaded in the camera.	This camera cannot display non-DCF pictures recorded onto a memory card used by another digital camera.
I cannot erase pictures.	All the pictures in memory are protected.	Unprotected the pictures you want to delete.
AVI file cannot be played.	DirectX version is lower than 9.0. Or Windows Media player not installed in the computer	Install directx 9.0 or above. Visit http://www.microsoft.com/directx for more detail. Or Please go to http://www.microsoft.com/windows/windowsmedia/players.aspx to download the Windows Media Player to play the video clips.
The camera is detected by the Windows and works properly. But a drive letter of the Removable disk is not created.	The removable disk crashes with the network drives.	Disconnect the crashed network drive and reserve this drive letter for the camera.
There is no response from the camera while pressing any buttons.	The LCD screen is frozen or the camera is hanged.	Remove and re-install the battery or batteries to reset the camera. Your valuable data stored in the camera will not be lost.

Symptom	Problem	Solution
An error message appears on the LCD screen before or during printing.	Printer may not support some advance print features. Or Some problem occurs with the printer. Or Print settings can be configured for images only.	Select "DEFAULT" for a particular print setting or visit http://www.polaroid.com for the solutions. Or Please refer to the printer's user guide for the solutions. Or Make it sure that there is no video clips or other file format in the current memory before printing.
Valuable data in the existing SD card is distorted or lost when the card is inserted in your camera.	Files contained in the SD card recorded by other cameras may conflict with your camera.	Use a new or formatted SD card for your camera.
The SD card cannot work with your camera.	Not all brands of SD card are fully supported by the your camera.	Visit www.polaroid.com for those SD cards that have been tested and can work with your camera.

Please also refer to the help files & User Guides that accompany the enclosed applications. For further information and support, please visit our website: <http://www.polaroid.com>

11 Getting Help

• Polaroid Online Services

Website: <http://www.polaroid.com>

• ArcSoft Software Help

For United States

ArcSoft HQ Support Center

(Fremont, CA 94538)

Tel.: 1-510-979-5599

Fax: 1-510-440-7978

E-mail: support@arcsoftsupport.com

Web: <http://www.arcsoft.com/en/support/>

For Europe

ArcSoft Europe Support Center

(Ireland)

Tel.: +353-(0) 61-702087

Fax: +353-(0) 61-702001

E-mail: eurosupport@arcsoft.com

For Japan

ArcSoft Japan Support Center (Tokyo)

Tel.: +81-3-5795-1392

Fax: +81-3-5795-1397

E-mail: support@arcsoft.jp

Web: <http://www.arcsoft.jp>

For Latin America

E-mail: latinsupport@arcsoftsupport.com

For China

ArcSoft China Support Center

(Hangzhou)

Tel.: +86-571-88210575

E-mail: support@arcsoft.com.cn

Web: <http://www.arcsoft.com.cn/new/support>

For Taiwan

ArcSoft Taiwan Support Center (Taiwan)

Tel.: +886-(0) 2-2506-9355

Fax: +886-(0) 2-2506-8922

E-mail: support@arcsoft.com.tw

Web: www.arcsoft.com.tw

Visit <http://www.arcsoft.com> for technical support and frequently asked questions (FAQ's).

"Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation, Waltham, MA, USA.

12 Appendix

• Technical Specifications

Sensor	<ul style="list-style-type: none">• Sensor:<ul style="list-style-type: none">- 1/1.8 inch- 5.0 Mega Pixels CMOS
Lens	<ul style="list-style-type: none">• Type: 5 elements 5 Group Full Glass• Aperture: F 2.8 / 8.0• Focal Length: 8.54 mm• Focal Distance<ul style="list-style-type: none">- Normal Focus: 3.2 ft to ∞ (1 m to ∞) (The focusing range is the distance from the lens surface to the subject.)• Focus Zones: center
LCD Screen	TFT color panel
Built-in Flash	<ul style="list-style-type: none">• Modes<ul style="list-style-type: none">- Auto Flash, Red Eye Reduction, Flash Always, Flash Off• Range: 3.2 to 6.4 ft (1 to 2 m)
Exposure Control	-/+2.0 EV in 0.5 increments
Shutter Speed	Electronic shutter 1/8 sec ~ 1/2000 sec
White Balance	Auto, Daylight, Cloudy, Tungsten, Fluorescent

Storage	<ul style="list-style-type: none"> • Internal Memory: 16MB (11MB for data storage) Nand Flash • External Memory <ul style="list-style-type: none"> - supports SD card up to 1GB (not included)
File Format	<ul style="list-style-type: none"> • Still Image <ul style="list-style-type: none"> - EXIF 2.2 compatible format (JPEG compression) • Video Clip: AVI format
Power Supply	4 AAA batteries
Self-timer	2/10 seconds with beep sound
Connectivity	With computer via USB cable
Dimension	<ul style="list-style-type: none"> • Size: (W) 94 mm x (D) 60 mm x (H) 21 mm • Weight: Approximately 95 g (including the integrated battery and excluding card)
Operating System	<ul style="list-style-type: none"> • For Windows® Users: Microsoft® Windows® 98SE, Me, 2000 or XP • For Macintosh Users: Mac OS 9.2~X

• Storage Capacities

The charts below indicate the approximate numbers of pictures and length of video clips the camera can hold at each setting based on the internal memory and different capacities of SD card.

Recordable Images

Units: Images

Resolution	Quality	16MB Internal Memory (11MB for data storage)	32MB SD	64MB SD
2592 X 1944	High	6	21	47
	Normal	12	35	73
	Low	17	49	102
2048 x 1536	High	11	33	71
	Normal	19	53	110
	Low	26	72	150
1600 x 1200	High	18	50	105
	Normal	31	79	163
	Low	39	105	215
640 x 480	High	72	186	379
	Normal	105	271	553
	Low	133	393	799

Resolution	Quality	128MB SD	256MB SD	512MB SD	1GB SD
2592 x 1944	High	98	200	399	808
	Normal	150	306	609	1231
	Low	212	428	852	1723
2048 x 1536	High	148	299	596	1206
	Normal	228	462	918	2024
	Low	309	625	1243	2511
1600 x 1200	High	216	437	869	1755
	Normal	335	676	1343	2714
	Low	443	893	1772	3579
640 x 480	High	778	1567	3110	6278
	Normal	1134	2285	4531	9147
	Low	1637	3297	6539	9507

Recordable Video Length

	Resolution	Video clips can be taken
16MB Internal Memory (11MB for data storage)	640 x 480	46 secs
	320 x 240	1 min 32 secs
32MB SD	640 x 480	2 min 17 secs
	320 x 240	5 mins 36 secs
64MB SD	640 x 480	4 mins 34 secs
	320 x 240	11 mins 02 secs
128MB SD	640 x 480	9 mins 08 secs
	320 x 240	22 mins 04 secs
256MB SD	640 x 480	18 mins 16 secs
	320 x 240	44 min 08 secs
512MB SD	640 x 480	36 min 32 secs
	320 x 240	88 min 16 secs
1GB SD	640 x 480	73 min 04 secs
	320 x 240	176 min 32 secs



NOTE:

Scene complexity affects a picture's file size. For example, a picture of trees in autumn has a larger file size than a picture of blue sky at the same resolution and quality setting. Therefore, the number of pictures you can store on a memory card may vary.

• Uninstalling Polaroid Digital driver (PC Only)

PC

 
 
For Windows® 98SE Users:



NOTE:

The following driver uninstall procedure is for Windows 98SE users only because only Windows 98SE needs to install your camera driver.

1. Open Add/Remove Program Properties in Control Panel and select "Polaroid Digital Cam" program, then click Add/Remove .
2. The following dialog box appears, click "OK" to confirm removing the camera driver.
3. The uninstallation program runs automatically, please restart your computer when it is finished.

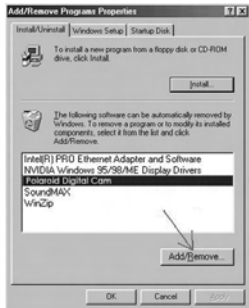

• Camera Default Settings

Camera Mode	Description	Default
Still Image Mode	Image Resolution	2592 X 1944
	Quality	High
	Exposure Compensation	Auto
	White Balance for Pictures	Auto
	Flash Mode	Auto Flash
Video Mode	Video Resolution	640 x 480
	White Balance for Video Clips	Auto
Setup Mode	Date Format	DD/MM/YY
	Auto Power Off	1 MIN
	Beep	On
	Frequency	50 Hz for Europe
	Language	English
	Date Stamp	Off



NOTE:

The default language for the LCD screen may vary with different countries and regions.

• **Tips, Your Safety & Maintenance**

Your camera should only be operated within the following environmental conditions;

- 32 - 104° Fahrenheit; 0 - 40° Celsius
- 20% - 85% relative humidity, non condensing

Battery life or image quality may be affected outside these conditions.



Camera Cautions

- NEVER immerse any part of the camera or its accessories into any fluid or liquid.
- ALWAYS disconnect the camera from your PC or TV before cleaning it.
- ALWAYS remove dust or stains with a soft cloth dampened with water or neutral detergent.
- NEVER place hot items on the surface of the camera.
- NEVER attempt to open or disassemble camera as this will affect any warranty claim.

• Regulatory Information

FCC Notice

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cable must be used with this unit to ensure compliance with the Class B FCC limits.

Under the environment with electrostatic discharge, the product may malfunction and require user to reset the product.