



7" Internet Tablet


Wi-Fi & Touch Screen

PMID701C



User Manual

 
In the box

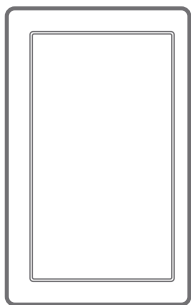


Tablet



 User Manual

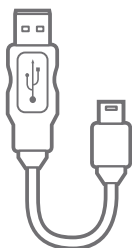

USB Cable

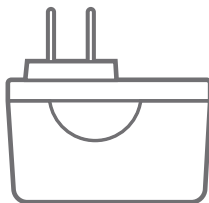 

AC Adapter

Location of controls



1. TV out
2. Mini USB port
3. microSD slot
4. Headphone jack
5. Microphone

6. [Power/Standby] button
7. [Home] button
8. [Menu] button
9. [Return] button
10. [Reset] button (on back)

11. Speaker (on back)

Button functions



[Power/Standby] button:

Quick press to lock/unlock the Tablet (standby);

Press and hold to turn on/off



[Home] button:

Press to go to the home screen



[Menu] button:

*Press to access the menus of apps
or screens of the Tablet*



[Return] button:

 
Press to return to the previous screen



Basic operation

Charging the battery:

Connect the Tablet to a wall outlet using the included AC adapter.

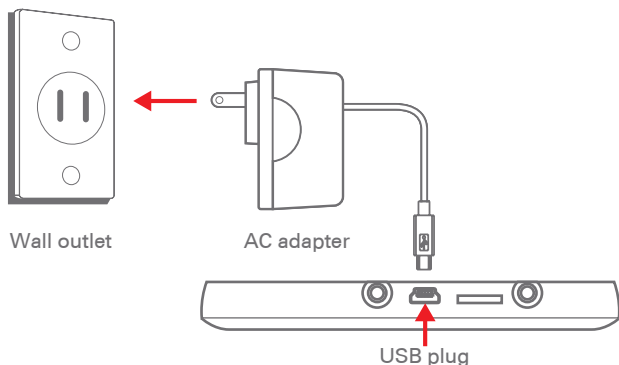

Note : The tablet can only be charged using the included AC adapter. It cannot be charged by connecting it to a computer using a USB cable. The battery charging indicator will show on the tablet screen.

Approximate play times

(actual play times may vary depending on display and power settings)

- Music: up to 10 hours (Wi-Fi / backlight off)
- Video: 4.5 - 5 hours (Wi-Fi turned off)
- eBook: 6 - 7 hours (Wi-Fi turned off)
- Web browsing: 5 - 6 hours
- Standby time: 60 - 70 hours



Battery Tips:

- * The first 3 times using the tablet, run the battery close to exhaustion and charge the Tablet for 12 hours.
- * Set the Tablet to standby mode (the display is off) to shorten charging time.
- * To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings app and shut Wi-Fi when not in use.

Inserting a Micro SD card (not included):

Insert a Micro SD card before transferring media files.

The Tablet supports **Micro SD cards** (up to **32GB**). Since the internal memory is limited, it is important to purchase a Micro SD card to expand the memory to save audio, video and picture files. Sometimes, the SD card is referred to as TF card. They are the same thing.

 
To install a Micro SD card into the Tablet:

1. Turn off the Tablet.
2. Insert the card (face up as shown with the metal contacts facing the back of the tablet) into the card slot until it clicks and locks into place.
3. To access the Micro SD card, select "Explorer" from the Apps screen.




Unmount & remove the Micro SD card:

1. Open "Settings"
2. Select "Storage"
3. Select "Unmount Micro SD card"
4. It is now safe to remove the card from the Tablet.
5. To remove the card, push it in until it pops out.




Micro SD card

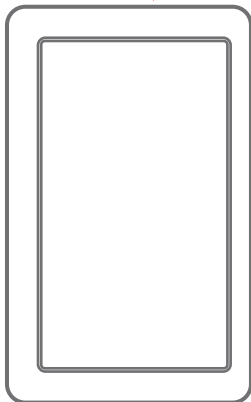 


- It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.
- A card can only be inserted one way; do not use force when inserting the card.
- Make sure to unmount the card before taking it out of the Tablet.

Turning on or off:


Powering on:

Press and hold the  button until the lock screen appears, and slide the **"Lock icon"** to the right.


- To activate or deactivate silent mode, slide the **"Speaker icon"** to the left.
- To lock or unlock the Tablet, briefly press the  button (Lock the device to conserve battery life).





Standby:

Briefly press the  button for standby mode (the display will shut but the device will still be powered on - this will extend battery time).

Powering off:

Press and hold the  button until the "Power off" window appears, and select "OK" to shutdown.

You can also use  (Power widget) on the Home screen or  "Shut Down" on the Apps screen to easily power off.




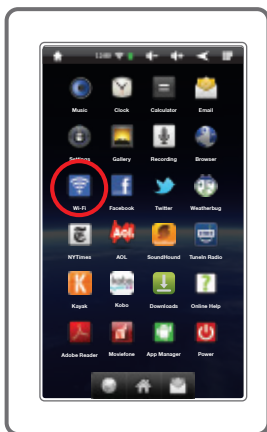 
**Power widget
(Home screen)**

Connecting to Wi-Fi



 
To browse web sites, use e-mail and download apps, you must first connect the Tablet to the internet. Follow the instructions below to set up Wi-Fi on the Tablet.

1. Select  "Wi-Fi" on the Apps screen and select "Turn on Wi-Fi".
2. Select "Wi-Fi settings".
3. Make sure that "Network notification" is checked.
4. Select a network, and if required enter the correct password.
5. When the Tablet is connected to a network, the Wi-Fi icon will appear on the top info bar and "Connected" will appear under the selected network.



Wi-Fi icon

Apps screen

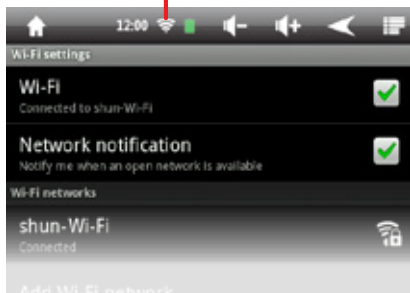

To conserve battery life, turn off Wi-Fi when not connected to a network.

Home screens

The Home screens are a great place to customize the Tablet by adding widgets, shortcuts or custom wallpaper.

There are five Home screens in total that may be accessed by tapping on the bottom left or right of the display as shown below.

Multimedia screen:

When the Tablet is powered on, the Multimedia screen appears, where music, pictures, video and clock may be easily accessed.



Tap right or left

(To change Home screens)

 
Multimedia

(Home screen)


Bookmarks widget:

Tap on the bottom left of the display until the Bookmarks widget appears where all the websites that are saved as bookmarks can be easily accessed.

To add or delete bookmarks, see "**Web browsing>Adding and deleting bookmarks**".

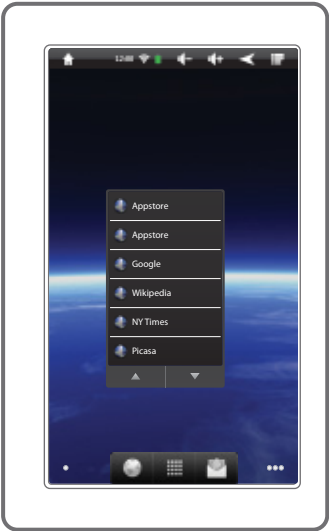

**Bookmarks widget
(Home screen)**

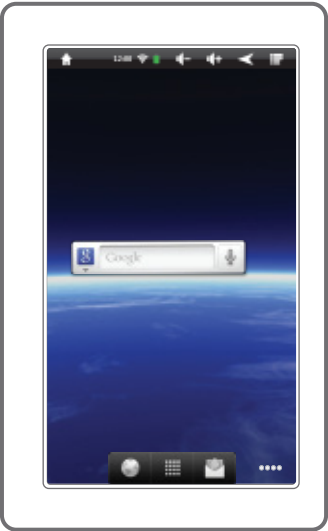 

**Search widget
(Home screen)**

Search widget:

Tap on the bottom left of the display until the Search widget appears to easily access the Google search engine.


Power widgets:

Tap on the bottom right of the display until the Power widgets appear - to easily power off, turn Wi-Fi on/off, or adjust the brightness of the display.



**Power widgets
(Home screen)**

Home screen menu:

While on the Home screen, press the  button to access the Home screen menu.



 
Home screen menu



Notifications:

Displays the status of items being downloaded as well as other activities of the Tablet.

Once an item has been completely downloaded it is possible to open the file.

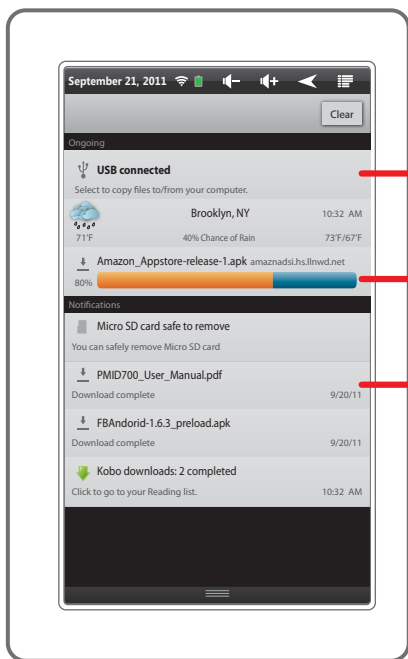


Turn on/off USB port
(to transfer files from/to
PC or Micro SD card)

Download progress

**Once the download is
complete, press here
to open.**


Adding widgets or apps to the Home screen:

 To customize the Home screen by adding your favorite apps or widgets, press the  button to show the **“Add to Home screen”** window.

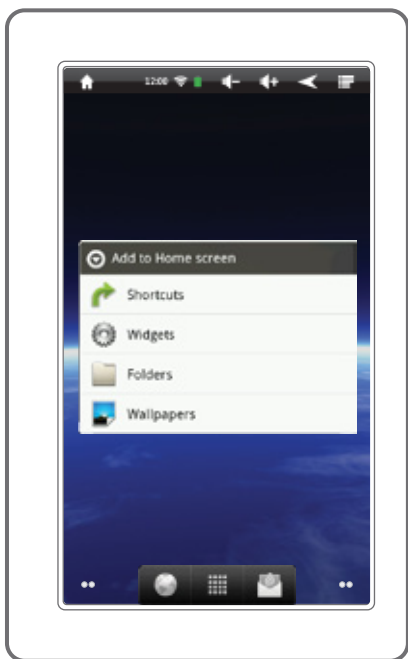


Add to Home screen window

 Select “Shortcuts,” “Widgets,” “Folders” or “Wallpapers” from the list.

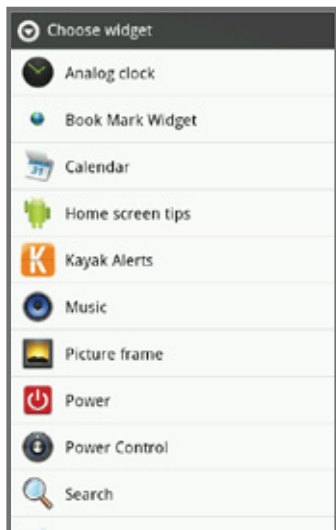

Widget list

 (Add widgets to the Home screen)

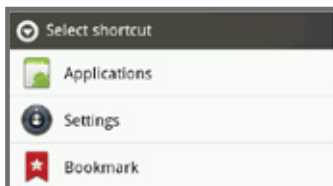

Shortcut list

(Add apps to the Home screen)





Wallpaper list

(Change wallpaper on the Home screen)



Removing widgets or apps from the Home screen



Press and hold the widget or app icon you want to remove from the Home screen until the Trash icon  appears on the bottom of the display, and drag it into the Trash icon  to remove it from the Home screen.



Wallpaper:

You can also change the wallpaper by pressing the  button from the Home screen menu.

Apps screen

Press the  icon on the bottom of the Home screen to access the Apps screen where all the apps are displayed (to return to the Home screen press the  icon).



Home screen

When the page is full scroll up or down to access more apps.




Apps screen

Press the  icon to return to the Home screen

Setting up e-mail




Select  "Email" on the Home or Apps screen and follow the instructions to set up your email account on the Tablet. (You must connect to Wi-Fi before accessing or setting up email accounts).





Web browsing



Select  "Browser" on the Home or Apps screen (You must connect to Wi-Fi before accessing the web).

 
Viewing web pages:


Use   the Zoom buttons which appear at the bottom right of the page (when scrolling up or down) to zoom in or out.




Adding and deleting bookmarks:

- 1. Press the “**Bookmarks button**”.
- 2. Select “**Add bookmark**” to add the current website.

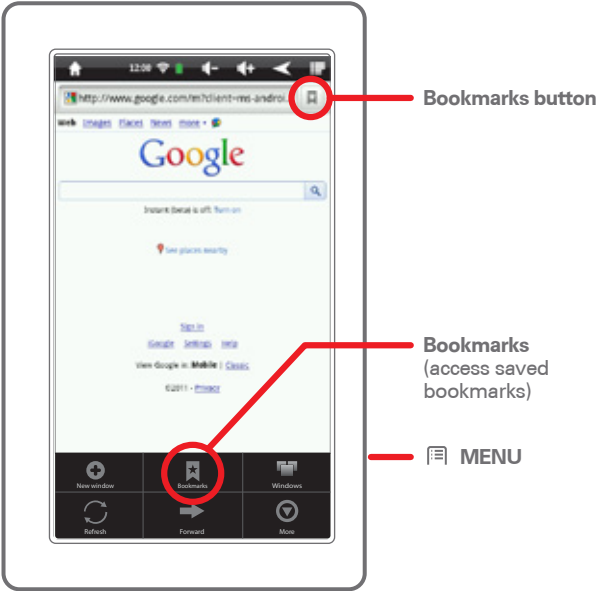

- 3. While using the web browser, press the  button and select “Bookmarks” or use the Bookmarks widget on the Home screen to access your favorite, saved websites.

 4. To delete a bookmark, press and hold the bookmark you wish to delete, and select “Delete bookmark” on the screen that appears.

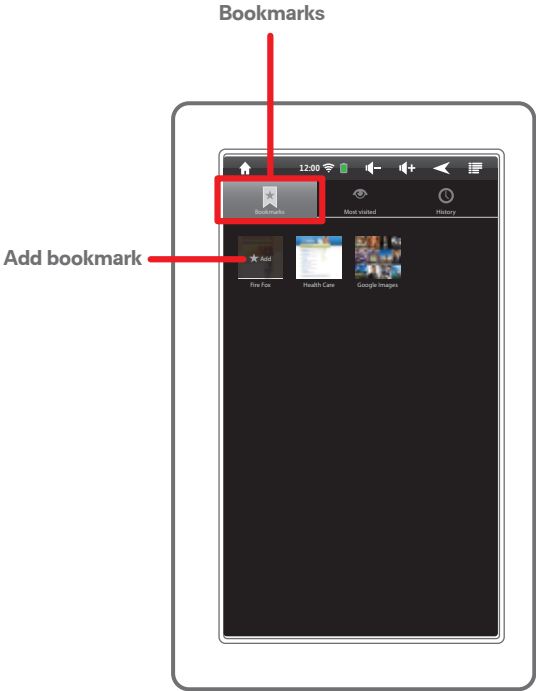


Note: When you add or delete a website to or from “Bookmarks”, it will also be adjusted on the “Bookmarks” widget of the Home screen.

Downloading apps



To access a large library of free/paid apps and games, we recommend downloading the Amazon Appstore - follow the instructions below to download it directly to the Apps screen of the Tablet:

 It is recommended to insert a Micro SD card (not included) before downloading apps.

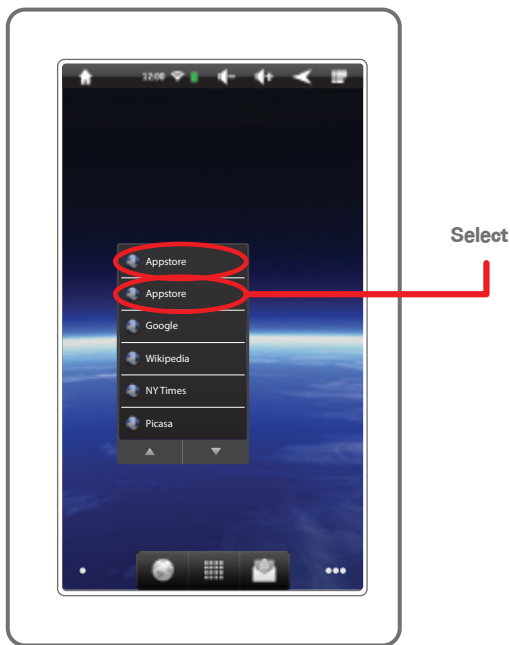


Bookmarks widget (Home screen)

1. Go to the "Bookmarks" widget on the Home screen, and select "Appstore"
(2 Appstore links are provided - both go to the same download page).



Note: It is also possible to download the appstore by going to www.amazon.com, and selecting "Appstore for Android".

 Select

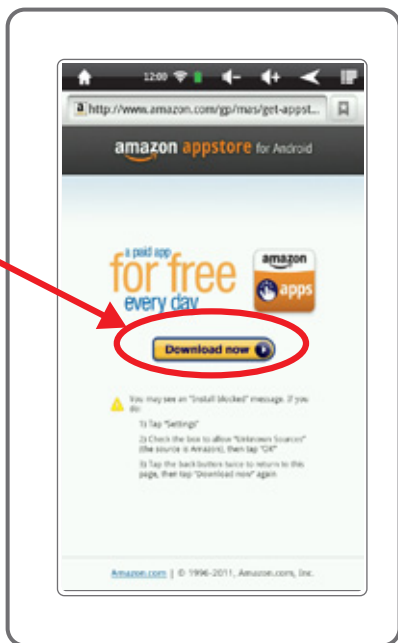


2. Select "Download now"

Downloads app




Apps screen

 3. Select the Downloads app on the Apps screen.

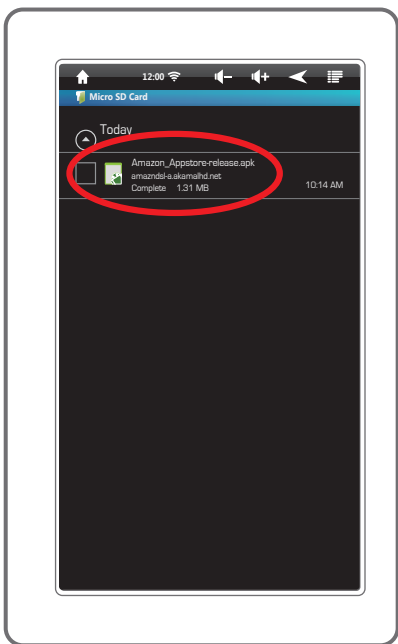

Downloads screen

 4. Select "Amazon_Appstore-release.apk"

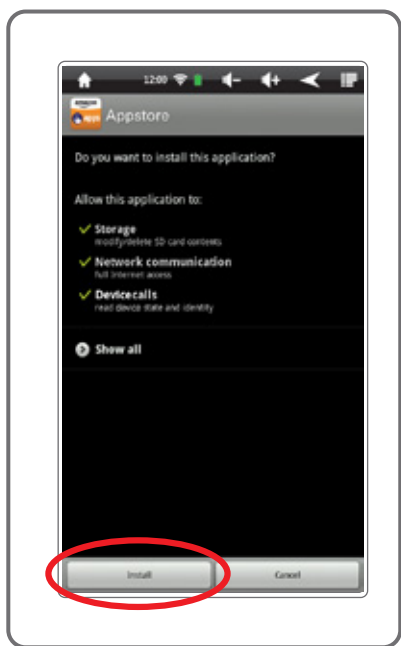


5. Select "Install" to install the Appstore on the Tablet.




6. The Appstore appears on the Apps screen.







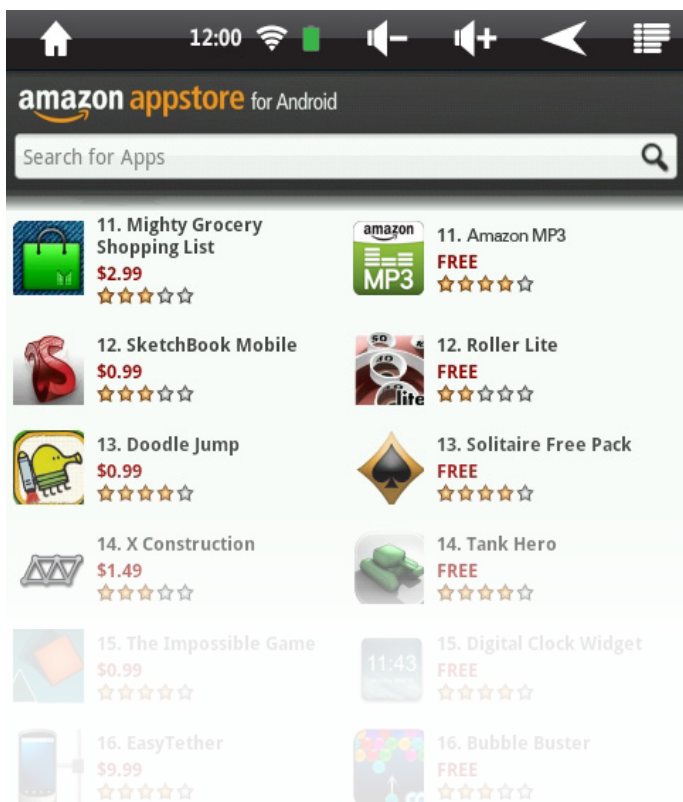





Downloading and installing apps:

After downloading the Amazon Appstore, it is possible to download and install apps directly to the Tablet - these apps will appear on the Apps screen.

Select  "Appstore" on the Apps screen and create an Amazon account (setting up the account is free). Once an account is created, it is easy to purchase, download and install apps directly to the Tablet.



The screenshot shows the Amazon Appstore for Android interface. At the top is a status bar with a home icon, the time 12:00, Wi-Fi, battery, and volume icons. Below the status bar is the appstore header with the Amazon logo and the text "amazon appstore for Android". A search bar with the placeholder text "Search for Apps" and a magnifying glass icon is positioned below the header. The main content area displays a grid of 16 app listings, each with an icon, a title, a price, and a star rating.

Icon	App Name	Price	Rating
	11. Mighty Grocery Shopping List	\$2.99	★★★★☆
	11. Amazon MP3	FREE	★★★★☆
	12. SketchBook Mobile	\$0.99	★★★★☆
	12. Roller Lite	FREE	★★★★☆
	13. Doodle Jump	\$0.99	★★★★☆
	13. Solitaire Free Pack	FREE	★★★★☆
	14. X Construction	\$1.49	★★★★☆
	14. Tank Hero	FREE	★★★★☆
	15. The Impossible Game	\$0.99	★★★★☆
	15. Digital Clock Widget	FREE	★★★★☆
	16. EasyTether	\$9.99	★★★★☆
	16. Bubble Buster	FREE	★★★★☆



Note: Apps compatibility / games:

 
There are many apps available on the Amazon Appstore, but unfortunately not all will be compatible with the Tablet. This is because some of the apps are designed for mobile phones and require functions or specifications that are not supported by the Tablet. We recommend always searching for the free or "Lite" version of an app and testing it before purchasing the paid app.

**Avoid apps that require camera or GPS as these apps will not be supported by the Tablet.*

The Tablet supports many game apps - although we recommend always testing the free version (if available) before purchasing.




To purchase and wirelessly download music to the Tablet, install the Amazon MP3 app.

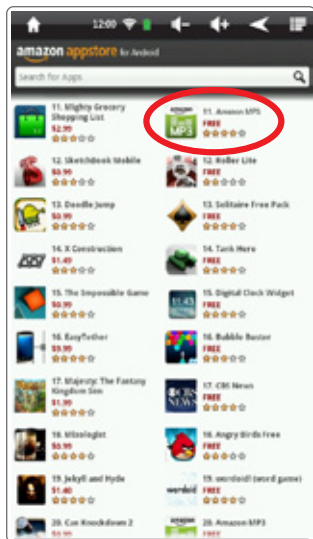


1. Open the Appstore and select **"Amazon MP3"**.



 Note: It is recommended to insert a Micro SD card before downloading music or apps to the Tablet.

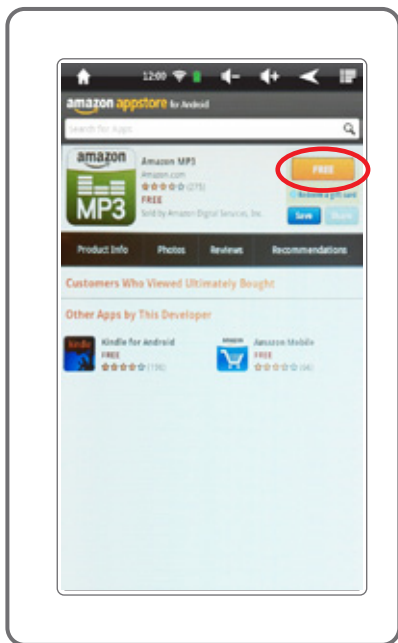

 
2. Select “Free”.

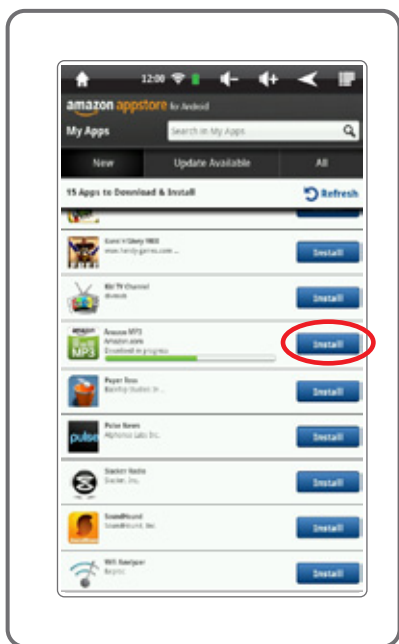

3. Select “Install” to download the app installer.

Polaroid and the manufacturer of this tablet are not affiliated with, connected to, or sponsored by Amazon, Amazon appstore, and the Amazon MP3 app - we simply recommend their app store over the other available options because of the wide selection of available apps, user experience, and customer service.

 Note: The Amazon appstore is available free to download at www.amazon.com

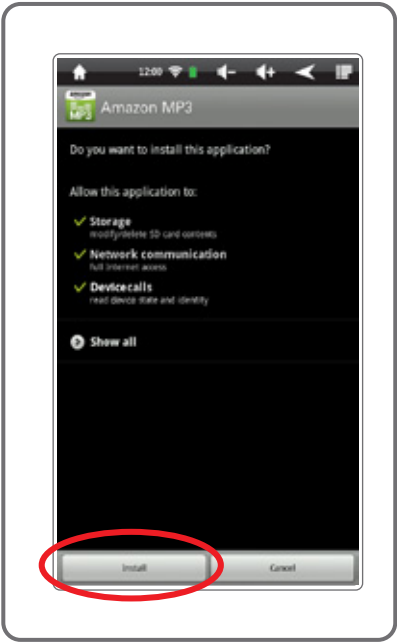


4. Select “Install” to install the app on the Tablet, it will appear on the Apps screen.



Kobo app:

 Access over 2 million books (over 1million free eBooks) with the included Kobo app.

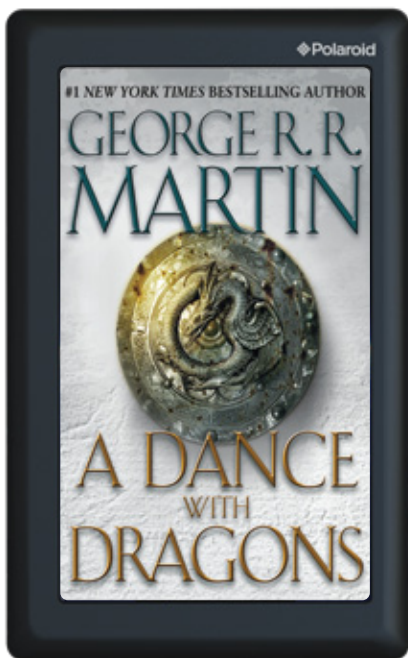

Managing apps



App Manager:

Use the App Manager to optimize the performance of the Tablet by freeing up internal memory, uninstalling and terminating running apps.



Download



All



On TF Card



Running

Download:

Displays all the downloaded apps (these apps may be uninstalled or moved to the Micro SD card).

All:

Displays all apps installed on the Tablet (it is not possible to delete or move pre-installed apps).

On TF Card:

Displays the apps that are able to be moved to the Micro SD card (the apps that are checked have already been moved).

Running:

 
Displays currently running apps.

Moving apps to the Micro SD card:

As the applications you've installed occupy the internal memory of the Tablet, it is necessary to free the internal memory by using the "Move to TF Card" option.

- 1) Insert a Micro SD card into the Tablet.
- 2) Open the App Manager and select "On TF Card"
- 3) Select an app that is not checked (the apps that have check-marks are already moved to the Micro SD card).
- 4) Select "Move to TF Card".

On TF Card

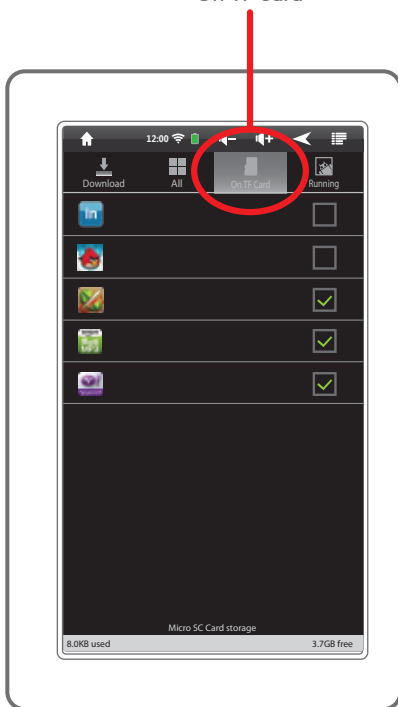

Force stop

Quit an app that is not functioning or responding properly.

Uninstall

 
Uninstall an app or use this option to reinstall an app that is not functioning properly.

Clear data

Use this option for apps that are not functioning properly (data related to the app such as username/password may be deleted).

Move to SD Card

Clear up space on the internal memory.

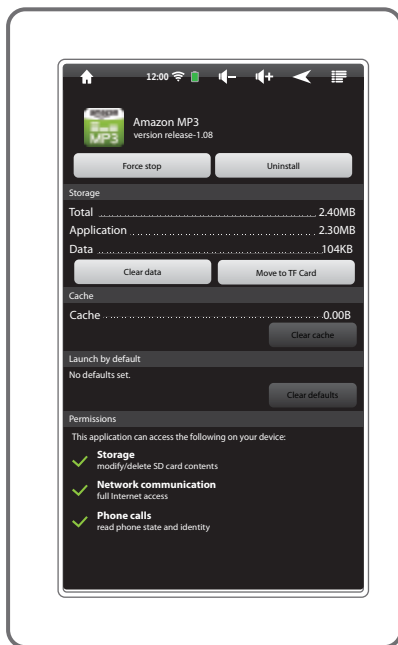


App Manager screen



ApkInstaller:


Most apps are downloaded from an app store directly to the Tablet and do not require the ApkInstaller.

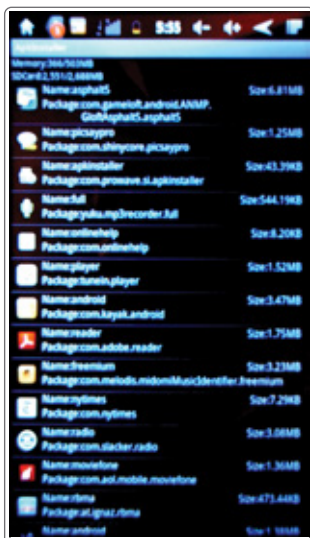


Name	Package Name	Size
asphat5	Package:com.gameloft.android.ANMP-GloftAsphat5.asphat5	Size:6.81MB
piccaypro	Package:com.shingore.piccaypro	Size:1.25MB
apkinstaller	Package:com.prowave.s.apkinstaller	Size:43.39KB
full	Package:yuka.mp3recorder.full	Size:544.19KB
onlinehelp	Package:com.onlinehelp	Size:8.20KB
player	Package:tonein.player	Size:1.52MB
android	Package:com.kayak.android	Size:3.47MB
reader	Package:com.adobe.reader	Size:1.75MB
freemium	Package:com.melodic.midiomMusicIdentifier.freemium	Size:3.23MB
nytimes	Package:com.nytimes	Size:7.29KB
radio	Package:com.slacker.radio	Size:3.06MB
moviefone	Package:com.asi.mobile.moviefone	Size:1.36MB
tema	Package:at.ignat.tema	Size:471.44KB
android		Size:1.18MB

ApkInstaller screen


In the event that you'd like to manually install an apk file directly to the Tablet, copy the apk file to the internal memory or Micro SD card, and use the ApkInstaller to find and install the app.

 1. Open "ApkInstaller."
2. Press the  "Menu" button.
3. Select "Install."

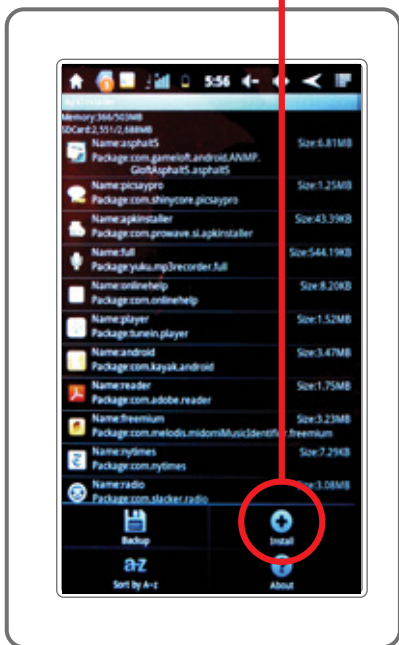

ApkInstaller screen

 
To install apk files that are copied directly to the internal memory of the Tablet or inserted Micro SD card, use the ApkInstaller app as shown below.

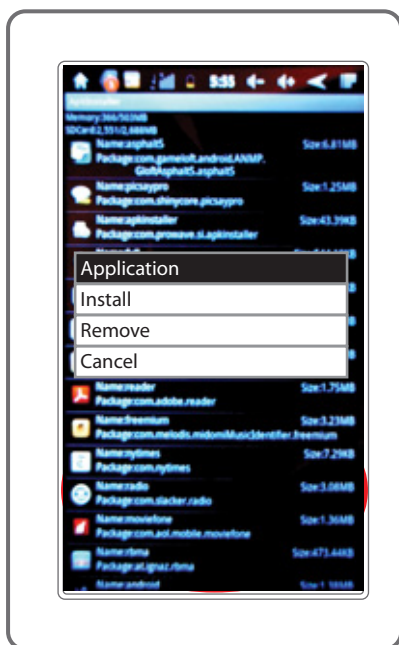



Downloads:

 Use the Downloads app to find files that have been downloaded to the Tablet.

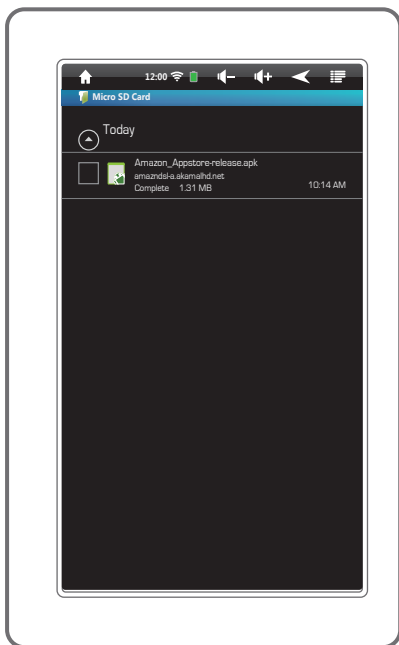


Settings



Settings app:

 Customize and select options to increase battery performance, Wi-Fi options, manage apps and more.

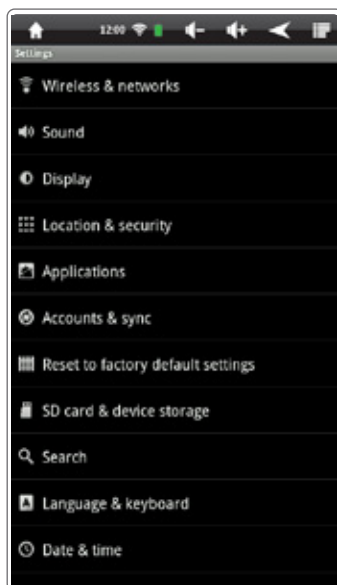


Settings screen

Transferring and managing files

It is possible to manage and transfer media files to the Tablet by connecting it to your computer as shown below. Before transferring media files to the Tablet, we strongly recommend inserting a Micro SD card - this will conserve internal memory and allow you to download more apps to the Tablet.


Connecting to a PC or Mac:

 - 1) Connect the included USB cable to the "USB port" of the Tablet and USB port of the computer.

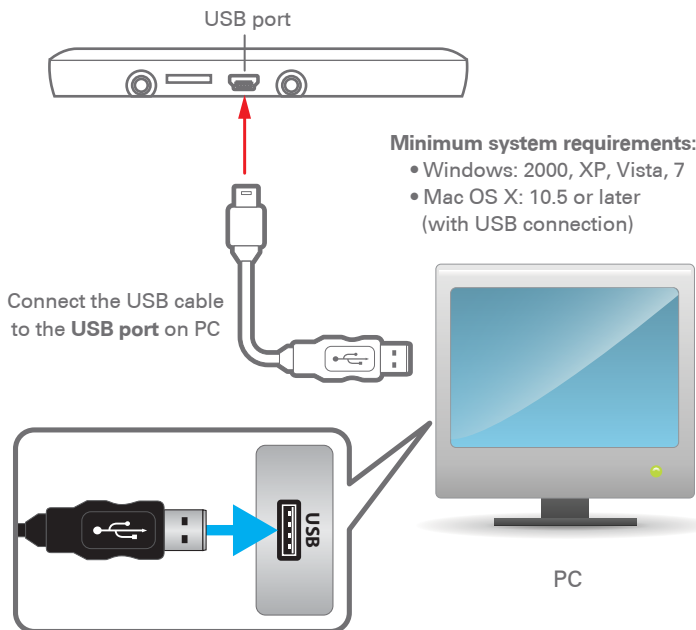


Note: The tablet is not being charged when connected to a computer. For charging, use the included AC adapter.

 2) The "USB connected" screen appears, select "Turn on USB storage," then select "OK."

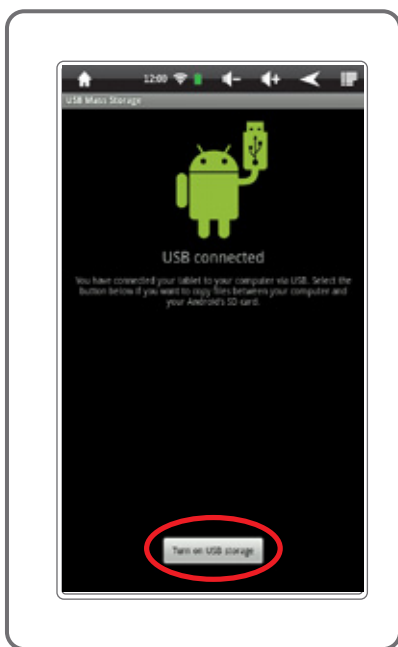


USB connected screen




Note: If the "USB connected" screen does not appear when connecting the USB cable to the computer, try pressing the  button on the Home screen and select "Notifications" > "USB connected".

 - 3) The "Autoplay" windows appear on your computer's display - select "Open folder to view Files" to manage files on the Tablet and Micro SD card (if inserted).

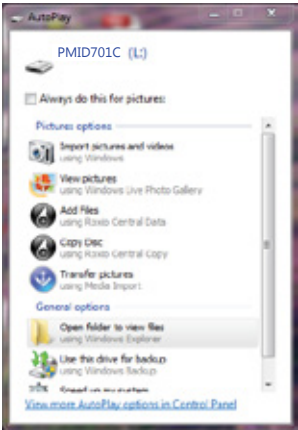

"PMID701C"
access the internal
memory

 
Conserve Internal Memory!
Avoid transferring media files in
"INTERNAL" (internal memory/Tablet)

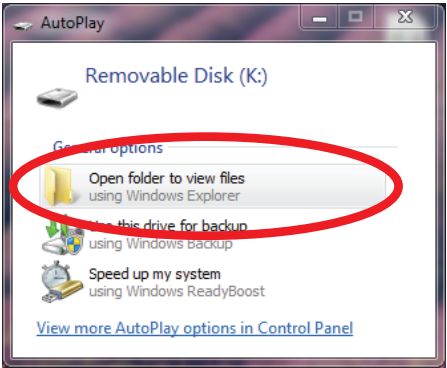

"Removable Disk"
access the Micro SD
card (if inserted)



 
Tips: *Transfer and store media files such as music, pictures and video on to a Micro SD card and avoid placing these types of files in the internal memory of the Tablet - this will conserve the internal memory, and allow you to download more apps.*




Conserve Internal Memory!

Transfer media files to "Removable Disk" (Micro SD card)

 4) Copy media files to the Micro SD card (if inserted).

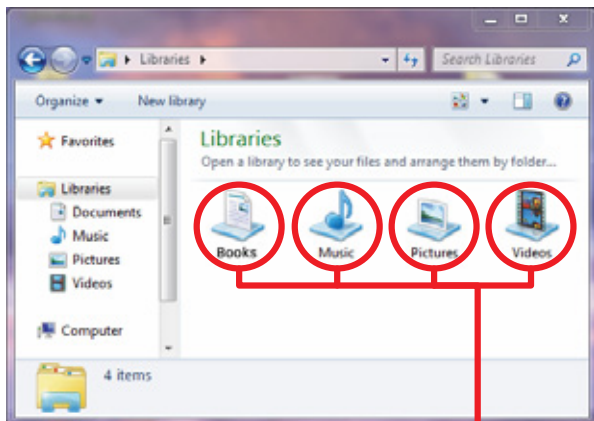

Media files on your computer

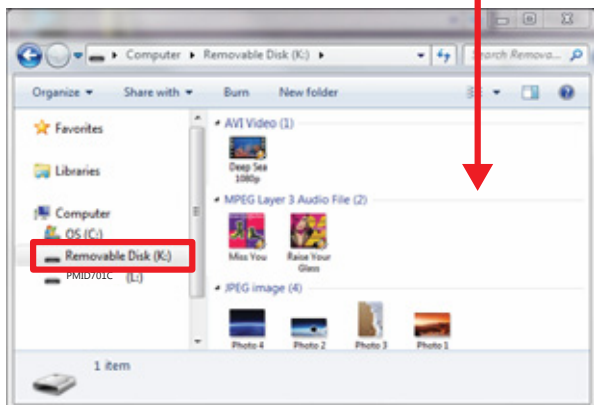 

"Removable Disk" (Micro SD card)



Tips: Organize your media (pictures, videos and music) by creating folders such as "Pictures", "Videos" and "Music" on the Micro SD card as shown below.

 
5) Select "Turn off USB storage" on the Tablet to disconnect it from the computer.



Resetting


In the event that the Tablet freezes or does not function properly, try correcting the problem by pressing the **RESET** button located on the back panel (shown below).


Use a paper clip or the tip of a stylus to press the **RESET** button. Data stored on the Tablet will not be affected by using the **RESET** button.

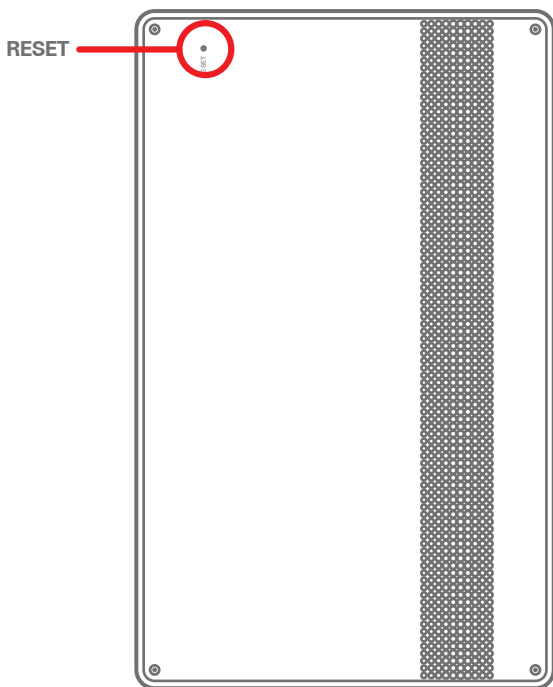



Note: If the problem persists it may be necessary to restore the Tablet to the factory default settings:

 - 1) Select  "Settings" from the Apps screen.
- 2) Select "Reset to factory default settings".
- 3) Select "Factory data reset" (this will erase data stored on the device so make sure to back up your data prior to using this option).

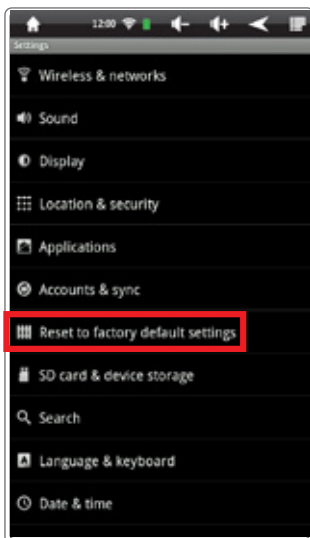


Multimedia

Use the Tablet to store and play music, pictures and video files. Since the internal memory is limited, store the media files on a Micro SD card.




Music:

 Access music files stored on the Tablet.

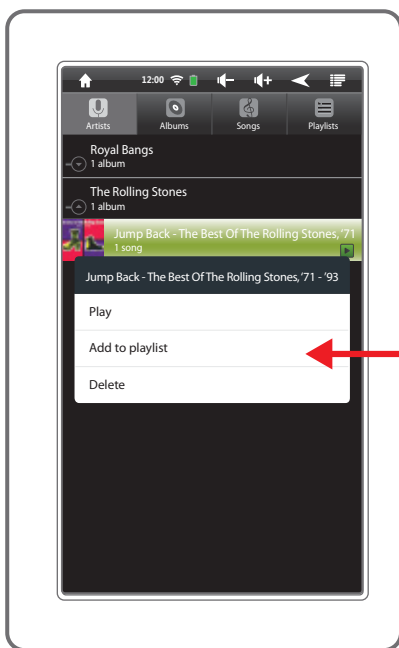

Press & hold
a song title,
and these
options will
appear

 Music screen

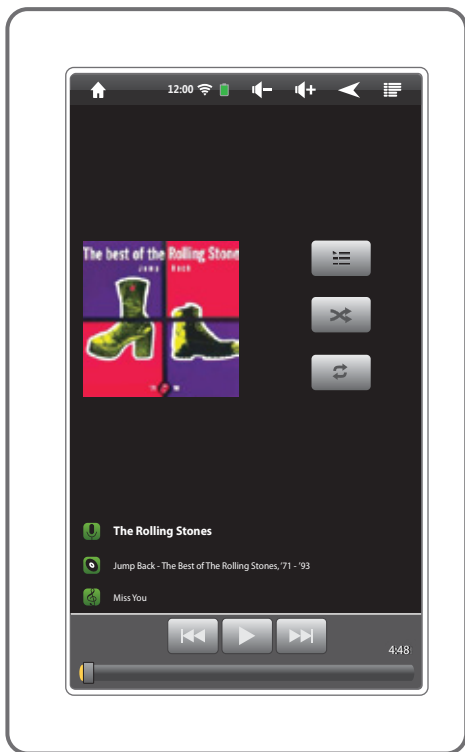


Music playback screen

Music playback options:

Press the  button to access:

 - Library: View the music library
- Party shuffle: Play songs randomly
- Add to playlist: Create, add a song, or edit playlists
- Delete: Delete a selected song
- Sound effects: Equalizer options

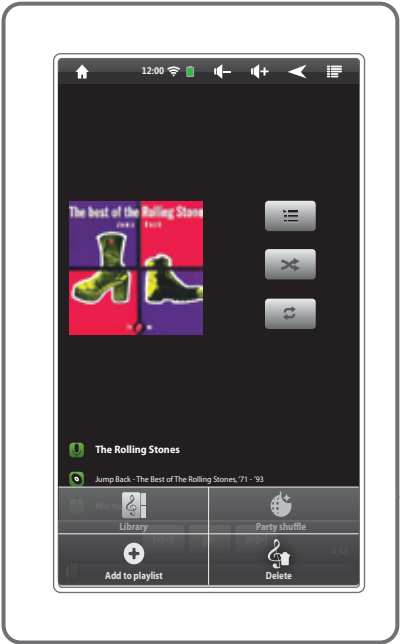


 MENU

 Music playback options




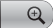
Gallery:


Access pictures and videos stored on the Tablet.

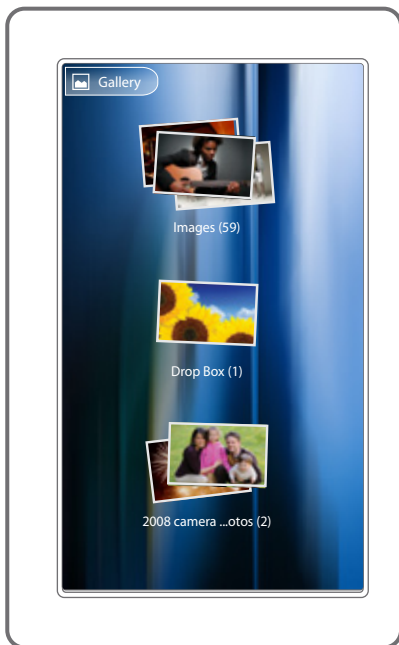

Gallery screen


Viewing pictures:

 Use the   Zoom buttons which appear at the bottom right of the display to zoom in or out of pictures.

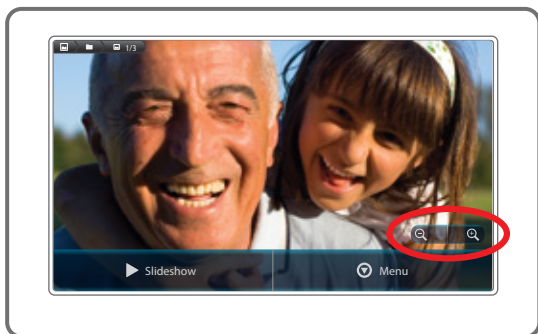

Slideshow:

 Tap the display to show the options below.

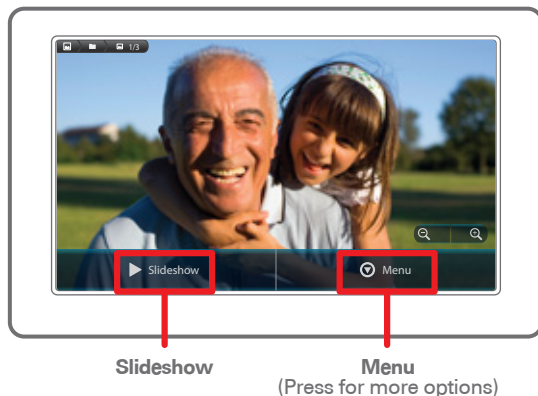


Share pictures to Email, Facebook or Twitter:

To utilize this feature you must have a Facebook or Twitter account and be logged in, for Email, an account must be set up for this option to appear.

Select **"Menu"** and then select **"Share"** to choose either Email, Facebook, or Twitter to share pictures.

 Select **"More"** to access Photo Tools where you can crop, paste, "set as" or more.

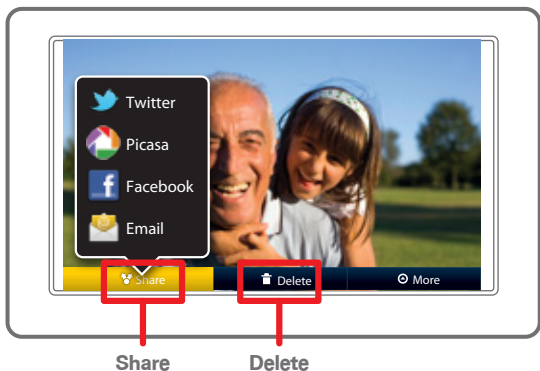

Watching videos:

Tap the display while playing a video, and the video controller appears, tap the display again to hide the controller.



Press the  button to go back to the previous screen, and exit video mode.

Streaming videos:

To wirelessly stream movies and television to the Tablet, install the Netflix™ app.

1. Open the Amazon App Store and search for "Netflix."
2. Select "Netflix."
3. Select "Free."
4. Select "Install."

Polaroid and the manufacturer of this tablet are not affiliated with, connected to, or sponsored by Netflix - we simply recommend their app over the other available options.

Games

Sometimes, while playing games, the g-sensor on the Tablet does not function correctly. This results in games not being controllable. To correct this problem, follow these steps:

 
1. Open "Settings."
2. Select "Display."
3. Select "Accelerometer Coordinate System."
4. The default setting is "Default Coordinate System." This setting should work for most games.
5. In the case that your game is not functioning properly, follow the above steps and select "Special coordinate system to support some other games."

Browsing files




File Manager:

To view, open, copy or delete files on the internal memory of the Tablet, inserted Micro SD card or USB stick, select "File Manager" on the Apps screen.

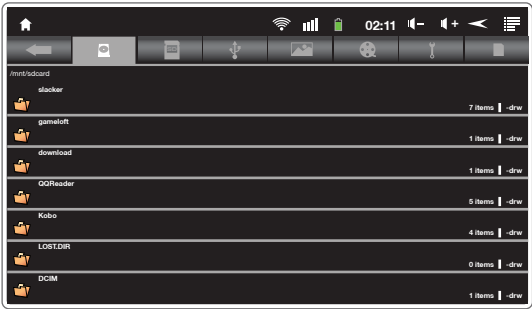

File Manager "Home" screen

 Briefly press a file or folder to open it. To copy, move or delete a file or folder, press and hold it until the options window appears.

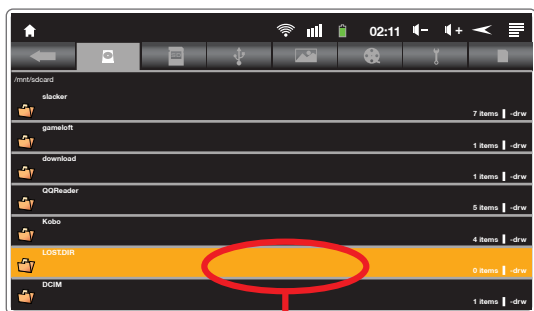


 - Press to open
- Press & hold for options







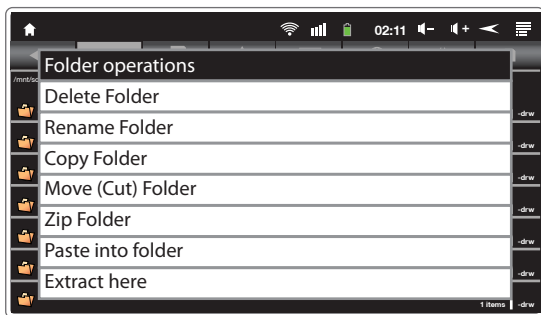




Note: If you would like to purchase an optional USB stick adapter, please call Polaroid Support at 1 (877) 768-8483

Options window



2. Select an option from the options window.

 
-  Go back to the previous folder
-  Go to internal memory
-  Go to microSD card
-  Go to USB
-  Go to pictures
-  Go to movies
-  Settings
-  Folder actions

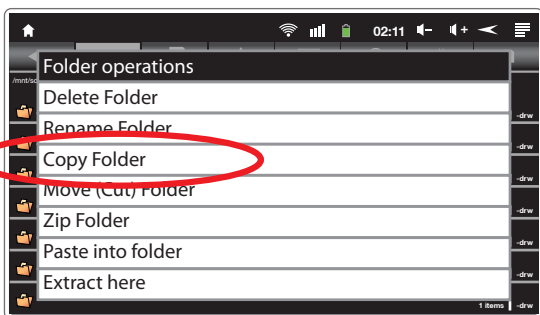

3. If you select "Copy" or "Move", press and hold on a folder and select "Paste into folder" to copy the file there.

Connecting to TV

 Connecting to TV: Attach the optional YPbPr video cable to the Tablet's TV out port, and to the TV's component video input.

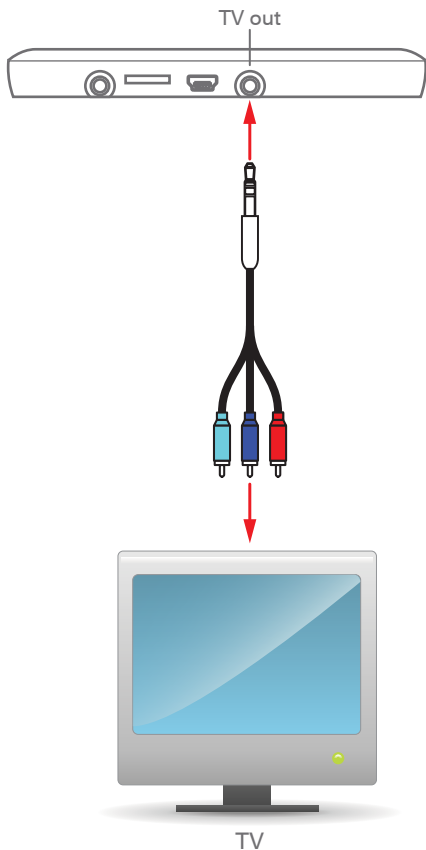

Note: If you would like to purchase an optional "Video Out" cable, please call Polaroid Support at 1 (877) 768-8483

Online help



Select "Online Help" on the Apps screen to access:

- New apps and updates for current apps
- Firmware updates
- Technical support
- Product registration



Legal information

FCC Part 15:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation."

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governance in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to [HYPERLINK "http://www.polaroid.com"](http://www.polaroid.com) www.polaroid.com and reference About / Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Limited Warranty

This product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty"). In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

 **AIT, Inc.**

Attention: Customer Service (2nd Floor)
14-C 53rd Street
Brooklyn, NY 11232

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:

 **1-877-768-8481 (Toll Free)**

 **polaroidtabletsupport@southerntelecom.com**

Monday - Thursday: 9AM - 5PM (EST)

Friday: 9AM - 3PM (EST)