




# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for POLAROID PDM-0082. You'll find the answers to all your questions on the POLAROID PDM-0082 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual POLAROID PDM-0082**  
**User guide POLAROID PDM-0082**  
**Operating instructions POLAROID PDM-0082**  
**Instructions for use POLAROID PDM-0082**  
**Instruction manual POLAROID PDM-0082**

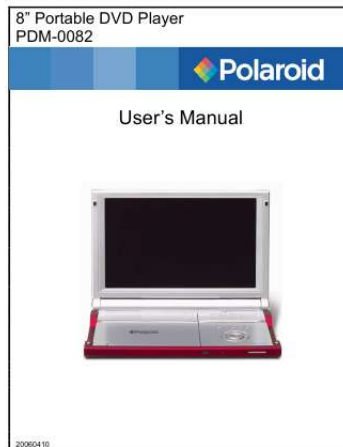

[Your user manual](#)  
[POLAROID PDM-0082](#)

**Manual abstract:**

Reverse engineering or disassembly is prohibited. IMPORTANT FOR LASER PRODUCTS 1. CLASS 1 LASER PRODUCT 2. DANGER: Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam. 3. CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit. Leave all servicing to qualified service personnel. Region code information DVD players and discs are coded by region. If the region number described on the DVD disc does not correspond to the region number of this product, this product cannot play the disc. The region code of this unit is 1. 3 Features High-quality audio and video AV input: External Audio, Video input can be connected to most external AV sources. AV Output: Analog audio output can be connected to external amplifier. Excellent sound: Dolby Decoder delivers great sound. Advanced Playing Functions Compatibility: Compatible DVD, CD and JPEG discs, etc. On-Screen Display: You can choose English, French, Spanish, etc. for the On-Screen Display language. Particular Performance: Multi-speed, fast forward, backward, slow playback repeated playback. fast and Search by Time: Search for a certain track of a disk by selected time. Last Memory Playback: Memorizes the stopped playback track and continues playing the disk from this spot when the power is kept to supplied. (Only available for DVD and CD disc). Special Functions: Supports screen multi-angle viewing, zooming function and foul language filtering function. Other Special Functions High Resolution: MPEG-2 decoding format achieves more than 500 lines of horizontal resolution. Power Adapter Switch: Automatically adapts to voltage requirements in U.S and other countries. 4 Accessories Accessories List ITEM NAME Remote Control (with battery) QTY 1 Power Supply Cord with AC Adapter 1 Rechargeable Battery Pack 1 DC Adapter (Car Adapter) 1 Audio/Video Cable 1 Headphone 1 Carrying Case 1 Operation Manual 1 NOTE Accessories and their parts numbers are subject to change without prior notice. 5 Contents Important Safety Instructions Features Accessories View of Front Panel View of Side Panels View of Bottom Panel Using of USB and SD Card Remote Control System Connections Power Supply Preparation Rechargeable Battery Notes on Discs Playback Operation DVD Playback CD Playback JPEG Playback System Setup Carrying Case Definition Troubleshooting Specifications 1 .4 .5 .

7 .9 10 .11 12 15 17 18 21 22 23 26 . 27 . 30 36 . 39 . 40 42 6 View of Front Panel 1. 2. 3. 4.

5. LCD screen Speaker OUTPUT/INPUT Button Press to play disc or output AV signal or input external Audio/Video signal. TITLE Button Press to display title menu if it exists in the disc. Source button Press the SOURCE button to switch among disc playback, USB playback and the SD Card playback. 7 View of Bottom Panel 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18. 19. 20. 21.

SETUP Button Press to access or exit the system setup menu. MENU Button Press to access the DVD disc menu during playback. LCD MODE button Press to enter the brightness, contrast or color adjusting mode. Press and hold for several seconds to change the aspect ratio among 16:9,4:3. Button : Press to pause the playback. Button : Press to stop playback. Then press the (PLAY) button to resume playback from the stopped spot. Press this button twice to stop playback completely. button : Press to confirm selection. /ZOOM /+ Button : Press to select different items. ZOOM: Press to realize various zoom functions +: Press the Mode button and then press this button to increase the level of brightness, contrast and color. // Button : Press to select different items. : Press to search backward fast. : Press and hold it for several seconds to the previous list/track/chapter. // Button : Press to select different items. : Press to search forward fast. : Press and hold it for several seconds to go to next list/track/chapter. ENT/ (PLAY) button ENT: Press to confirm selection. (PLAY): Press to start playback. /SLOW/- Button : Press to select different items. SLOW: Press to activate slow playback function..



[Your user manual](#)  
[POLAROID PDM-0082](#)