

# RCA

## Television User's Guide

Changing Entertainment. Again.



## CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

Caution: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

## WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.

Refer to the identification/rating label located on the back panel of your product for its proper operating voltage.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

**Caution:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**Caution:** Using video games or any external accessory with fixed images for extended periods of time can cause them to be permanently imprinted on the picture tube (or projection TV picture tubes). ALSO, some network/program logos, phone numbers, black borders (sides, top and bottom), etc. may cause similar damage. This damage is not covered by your warranty.

**Cable TV Installer:** This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

### Important Stand and Base Safety Information

Choose the location for your TV carefully. Place the TV on a stand or base that is of adequate size and strength to prevent the TV from being accidentally tipped over, pushed off, or pulled off. This could cause personal injury and/or damage the TV. Refer to the Important Safety Instructions on page 2.

## Product Registration

Please fill out the product registration card (packed separately) and return it immediately. For US customers: Your RCA Consumer Electronics product may also be registered at [www.rca.com/productregistration](http://www.rca.com/productregistration). Registering this product allows us to contact you if needed.

## Product Information


Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. These numbers are located on the product.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_ Purchase Date: \_\_\_\_\_

Dealer/Address/Phone: \_\_\_\_\_

 
# IMPORTANT SAFETY INSTRUCTIONS

## Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as if the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or if the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance ([www.eiae.org](http://www.eiae.org)).
16. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been damaged;
  - B. Objects have fallen or liquid has been spilled into the appliance;
  - C. The appliance has been exposed to rain;
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance;
  - E. The appliance has been dropped or the enclosure damaged.
17. **Tilt/Stability** - All televisions must comply with recommended international global safety standards for tilt and stability proper ties of its cabinet design.
  - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet, which could ultimately overturn the product.
  - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
18. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
19. **Power Lines** - An outdoor antenna should be located away from power lines.
20. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure below.
21. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
22. **Battery usage CAUTION** - To prevent battery leakage that may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, with + and - aligned as marked on the unit.
  - Do not mix batteries (old and new or carbon and alkaline, etc.).
  - Remove batteries when the unit is not used for a long time.
23. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

**Note to the Cable TV system installer:** This reminder is provided to call the Cable TV system installer's attention to Article 820-40 of the NEC (Section 54 of the Canadian Electrical Code, Part 1) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

**Example of Antenna Grounding as per NEC - National Electrical Code**

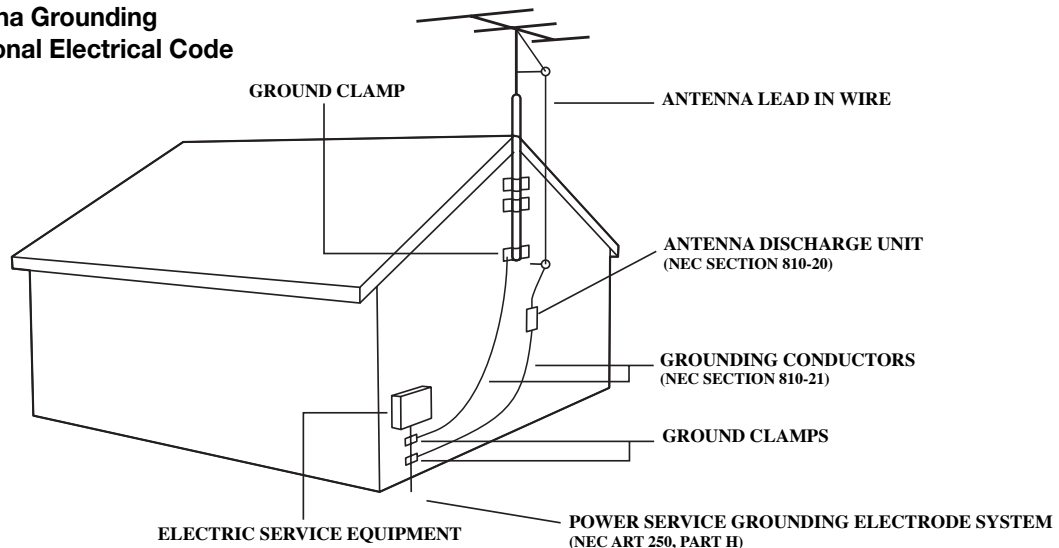

# Table of Contents

## **Introduction**

Safety/precaution .....	2
Table of Contents .....	3
Features .....	3

## **Getting Started**

Basic Cable TV Connection .....	4
Basic Antenna Connection .....	5
Basic TV + VCR Connection .....	6
TV + VCR + DVD Connection .....	7
Explanation of Jacks .....	8
Description of Buttons on the TV .....	9
Remote Control .....	10

## **Setup Menus**

Language .....	11
TV/Cable TV (CATV) .....	12
Auto Search (Setting TV Channels) .....	13
Manual Channel Tuning .....	14
Favorite Channel Setting .....	15
Adding or Erasing Channels .....	16

## **On-screen Menus**

Picture Adjustments .....	17
Preset Picture Mode .....	18
Clock .....	19
On-Timer .....	20
Off-Timer .....	21
Closed Caption .....	22
Sleep Timer .....	23

## **Parental Lock**

Understanding Parental Lock .....	24
Changing Your Password .....	25
Blocking Programming with Movie Ratings .....	26
Blocking Programming with TV Ratings .....	27
Parental Lock Blocking Options .....	28
Child Lock .....	29

## **Sound**

Sound Mode Selection .....	30
Sound Adjustments .....	31
Surround .....	32
Stereo and Second Audio Program .....	33

## **Others**

Notebook .....	34
Calendar .....	35

## **Troubleshooting** .....

## **Care and Cleaning** .....

## **Limited Warranty** .....

Here are a few of the special features of your new Color Television.

**Automatic Channel Programming:** Quick and easy selection of available stations.

**Child Lock (FPA Lock):** Locks the buttons on the front of the TV so it cannot be operated accidentally by young children.

**Closed Captioning:** Allows you to read TV program dialog or voice conversations as on-screen text.

**Off-Timer:** Turns off the TV at a preset time.

**On-Timer:** Turns on the TV at a preset time to a designated TV channel or video source.

**On-screen Menus:** On-screen text (in English, French, or Spanish) for setting TV controls.

**Parental Lock:** Allows you to block the viewing of certain TV channels if you do not want your children viewing inappropriate material.

**Remote control:** Operates your TV and navigates the menus.

**Sleep Timer:** Turns off the TV within an amount of time you specify. 10-120 minutes from the current time.

**Picture Preset Mode:** Lets you set the picture's color, tint, contrast, etc. for various types of programming. Settings include Bright, Normal, Theater, and Personal, which set the picture control as you want.

**Sound Mode:** Lets you set the TV's sound for the current programming. Choices include Personal, Theatre, Concert, or Speech.

**Standard broadcast (VHF/UHF) or Cable TV** channel capability.

**Stereo Capability:** Includes built-in amplifier twin-speaker system; allows reception of TV programs broadcast in stereo.

Graphics in this publication are for representation only.

# Basic Cable TV Connection

The Cable TV signal into your home may be a single cable (75 ohm ) or may include a Cable Box. In either case, the connection to the TV is easy.

If your Cable TV signal comes directly via a 75 ohm coaxial cable, using the following steps:

- 1 Connect the Cable TV signal to the 75 ohm ANTENNA INPUT jack on the rear of the TV. Screw it down tight.
- 2 Plug the TV's power cord into a power outlet and turn on the TV. Set TV/CATV to CATV as detailed on page 12. Refer to AUTO SEARCH to set up your available TV channels. Details are on page 13.

If you have a Cable Box, use the following steps:

- 1 Connect the Cable TV signal to the IN jack on the Cable Box.
- 2 Connect a separate coaxial cable to the OUT jack on the Cable Box and to the 75 OHM ANTENNA INPUT jack on the rear of the TV.
- 3 Plug the TV's power cord into a power outlet and turn on the TV. Set TV/CATV to CATV as detailed on page 12.
- 4 Set the TV to channel 3 or 4 (the same as the channel 3/4 switch on your Cable Box if applicable). Change channels at the Cable Box.

## Helpful Hints

An RF coaxial cable (to connect the Cable Box to the TV) may be supplied by the Cable TV company. It is not supplied with the TV.

You can connect a Satellite Receiver the same way you would connect a Cable Box.

Your Cable Box may have separate Audio and Video Out jacks instead. If so, use audio and video cables to connect the AUDIO/VIDEO OUT jacks of the Cable Box to the AUDIO/VIDEO INPUT jacks.

Press the INPUT button on the remote control to set the TV to the correct video input channel. For front inputs choose FRNT. For rear AV inputs choose VIDEO.

Your model has an S-Video input, choose S-VIDEO. Change the channel at the Cable Box.

This model has component jacks (Y, Pb, Pr), choose CMPT as your video input channel.

# Basic Antenna Connection

 
A combination antenna receives normal broadcast channels (VHF 2-13 AND UHF 14-69). Your connection is easy since you will connect the antenna to the 75 OHM ANTENNA INPUT jack on the rear of the TV.

- 1 If your antenna has a round cable (75 ohm) on the end, then you are ready to connect it to the TV. Go to the next step. If your antenna has flat twin-lead wire (300 ohm), you first need to attach the antenna wires to the screws on a 300 to 75 ohm adapter (not supplied with your TV).
- 2 Push the round end of the adapter or antenna cable onto the 75 OHM ANTENNA INPUT jack on the rear of the TV. If the round end of the antenna cable is threaded, screw it down tight.
- 3 Plug the TV's power cord into a power outlet and turn on the TV. Set TV/CATV to TV mode as detailed on page 12. Refer to AUTO SEARCH to set up your available TV channels. Details are on page 13.

Before plugging the UHF/VHF Rod Antenna into the ANTENNA INPUT jack, check that the pin is not bent. If it is bent, straighten the pin as illustrated, then plug the pin into the jack.



FCC WARNING -This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction Manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

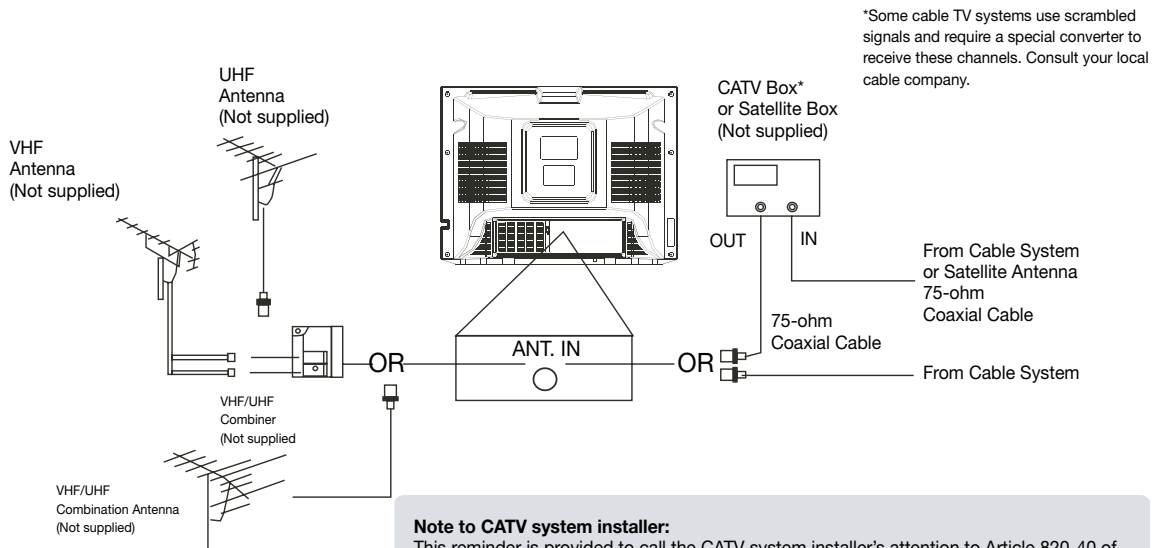

\*Some cable TV systems use scrambled signals and require a special converter to receive these channels. Consult your local cable company.

**Note to CATV system installer:**  
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC (Section 54 of the Canadian Electrical Code, Part 1) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

## CABLE TV / ANTENNA CONNECTIONS

 
### Helpful Hints

If you have separate UHF and VHF antennas, you need an optional combiner to connect the antennas to the TV.


# Basic TV + VCR Connection

The basic component (VCR, DVD player etc.) to TV connection is described below. For other hookups, refer to your component's instruction manual.

- 1** Connect the audio cables (white and red) to the R and L AUDIO jacks on the TV and to the Audio output jacks on the VCR (or other component). Match the cable color to the jack color.
- 2** If your component has Component Output Jacks (Y, Pb, Pr), connect three video grade cables to the Y, Pb, Pr jacks on the component and to the Y, Pb, Pr jacks on the TV. If your component doesn't have these jacks, go to item 3.
- 3** If your component has an S-Video jack, connect an S-Video cable to the S-VIDEO jack on the back of the TV to the S-Video jack on the component. If your component doesn't have an S-Video jack go to item 4.
- 4** Connect a video cable (yellow) to the VIDEO INPUT jack on the TV and to the VIDEO OUT jack on your VCR (or other component).
- 5** Turn on the TV and the component.
- 6** Press the INPUT button on the remote control until the correct video input channel appears in the upper right corner of the TV screen. When you play material on a VCR, DVD player, etc. it will appear on the TV on the video input channel. (The bottom of page 4 has a complete list.)

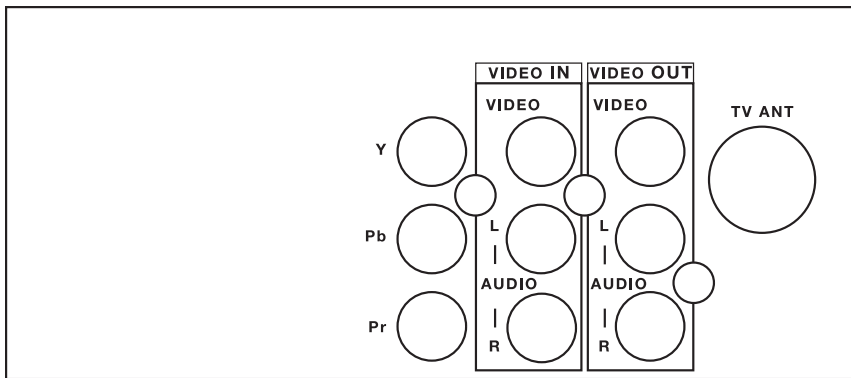

Rear Panel

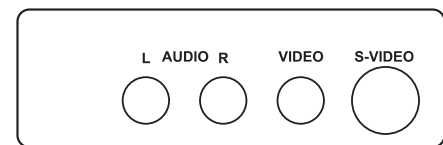 

Side AV (front)

## Helpful Hints

Your VCR may not have Audio and Video Out jacks, but only an RF or ANTENNA OUT jack.

Use a coaxial cable to connect the VCR's ANTENNA OUT jack to the TV's 75 OHM ANTENNA INPUT jack.

Use either S-VIDEO jack or VIDEO INPUT jacks. Do not use both at the same time for the same piece of equipment. This would interfere with the picture display. If both are used, S-VIDEO has priority over the yellow VIDEO INPUT jack.

# TV + VCR + DVD Connection

The TV/VCR/DVD connection is described below. For other hookups, refer to your component's instruction manual.

Connect your DVD Player to your TV.

 
- 1 Connect the audio cables (white and red) to the R and L AUDIO jacks on the TV and to the Audio Output jacks on the DVD player. Match the cable color to the jack color.
- 2 If your DVD player has Component Output Jacks (Y, Pb, Pr), connect three video grade cables to the Y, Pb, Pr jacks on the DVD player and to the Y, Pb, Pr jacks on the TV. If your DVD player doesn't have these jacks, go to item 3.
- 3 If your DVD player has an S-Video jack, connect an S-Video cable to the S-VIDEO jack on the DVD player to the S-Video jack on the TV. If your DVD player doesn't have an S-Video jack go to item 4.
- 4 Connect a video cable (yellow) to the VIDEO Output Jack on the DVD player and to the VIDEO IN on your TV.

Connect your TV to your VCR.


- 5 Connect a coaxial cable to the TV ANT jack on your TV and to the Output Jack on your VCR (sometime labeled OUT TO TV).

Note: If your VCR has A/V output jacks, you can connect your TV to your VCR using Audio/Video cables for better quality.

- 6 Connect the coaxial cable from your cable outlet or antenna to the antenna input on the VCR. Make sure the cable or antenna is connected to your VCR

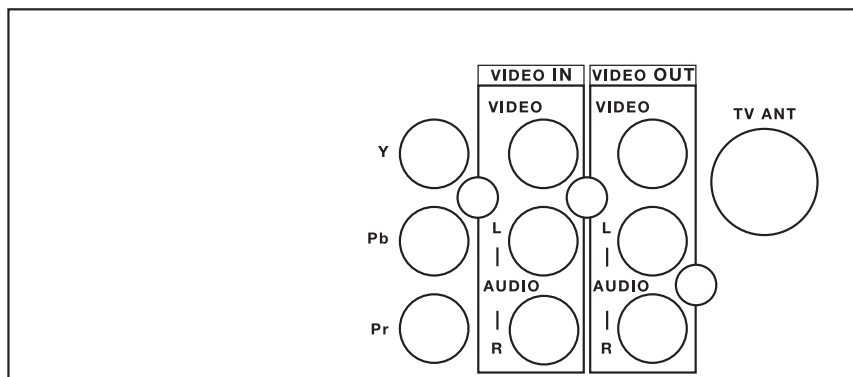

Rear Panel

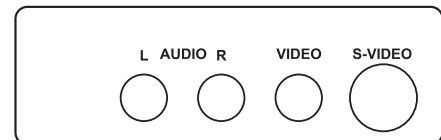 

Side AV (front)

## Helpful Hints

Depending on which connection you made above, choose the correct video input channel to view the material on your TV. Go to page 8.

 
Your VCR may not have Audio and Video Out jacks, but only an RF or ANTENNA OUT jack.

Use a coaxial cable to connect the VCR's ANTENNA OUT jack to the TV's 75 OHM ANTENNA INPUT jack.




# Explanation of Jacks

This page describes the jacks you can use to make connections. There are several ways to connect components to your TV.



**TV ANT** Lets you connect a coaxial cable to receive the signal from the antenna, cable, cable box, or VCR.

 The connections below let you connect a component such as a VCR, DVD player or laserdisc player.

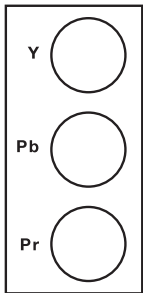

**Y, Pb, Pr** Provides optimum picture quality because the video is separated into three signals. Use three video grade cables for the connection. When using this connection make sure to connect left and right audio cables to the AUDIO input jacks.

Press INPUT on the remote to choose the video input channel. Choose CMPT to view material playing on equipment connected to the component inputs.

**R (RIGHT) AUDIO** Provides right audio connection. The right audio connector is usually red.

Press INPUT on the remote to choose the the video input channel. Choose FRNT to view material playing on equipment connected to the front AV (side) inputs or VIDEO to view material playing on equipment connected to the rear AV inputs.

**L (LEFT) AUDIO** Provides left audio connection. The left audio connector is usually white.

Press INPUT on the remote to choose the the video input channel. Choose FRNT to view material playing on equipment connected to the front AV (side) inputs or VIDEO to view material playing on equipment connected to the rear AV inputs.

 
**VIDEO** Provides composite video connection. The video connector is usually yellow.

Press INPUT on the remote to choose the FRNT channel to view material playing on equipment connected to the front AV (side) inputs or choose the video input channel. Choose VIDEO to view material playing on equipment connected to the rear AV inputs.



**S-VIDEO IN** Provides better picture quality than the standard video jack (the yellow jack) because the color part of the signal is separated from the black and white part of the picture. When using S-VIDEO IN, make sure to connect left and right audio cables to the L and R AUDIO Input jacks.


Press INPUT on the remote to choose the video input channel. Choose S-VIDEO to view material playing on equipment connected to the S-VIDEO jack.

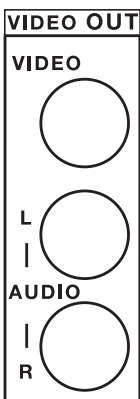

**AUDIO/VIDEO OUTPUT** Lets you connect an amplifier or audio receiver for improved sound quality.

Press INPUT on the remote to choose the audio and video that is sent to the output jacks.

## Description of Buttons on the TV

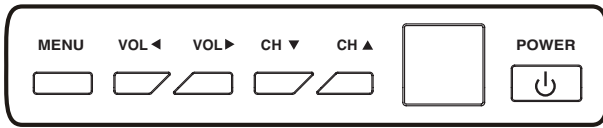 

### Front Panel Buttons

If you cannot locate your remote, you can use the buttons on the front of your TV to operate many of the TV's features.

### Front View

1. **MENU** Brings up the Main menu. Press for the on-screen display to clear the screen.
2. **VOLUME BUTTONS** Press to decrease/increase the volume. In the menu system, acts like the right or left arrow buttons. Press to select highlighted items and make adjustments.
3. **CHANNEL BUTTONS** Selects channel numbers. In the menu system, acts like the up or down arrow buttons. Use to highlight items.
4. **SENSOR** Receives infra-red signals from the remote.
5. **POWER** Turns the TV on and off. Lights to show TV is on.

 
The front panel of your TV is similar to the example above.

## Remote Control

### Battery Installation

To load batteries into the remote control:


- 1 **Remove the battery compartment lid** on the rear of the remote. Press in the tab, then lift off the lid.
- 2 **Place two AA batteries in the remote.** Be sure the (+) and (-) ends of the batteries line up correctly (as marked inside the battery compartment).
- 3 **Reattach the battery compartment lid.**

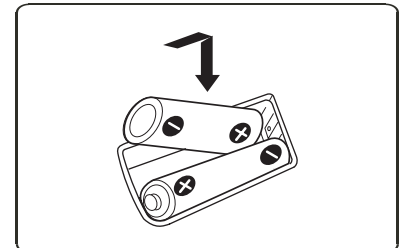

### Effectively Using the Remote Control

- 4 Point the remote control toward the remote sensor on the front of the TV when operating the TV with the remote control.
 
# Remote Control

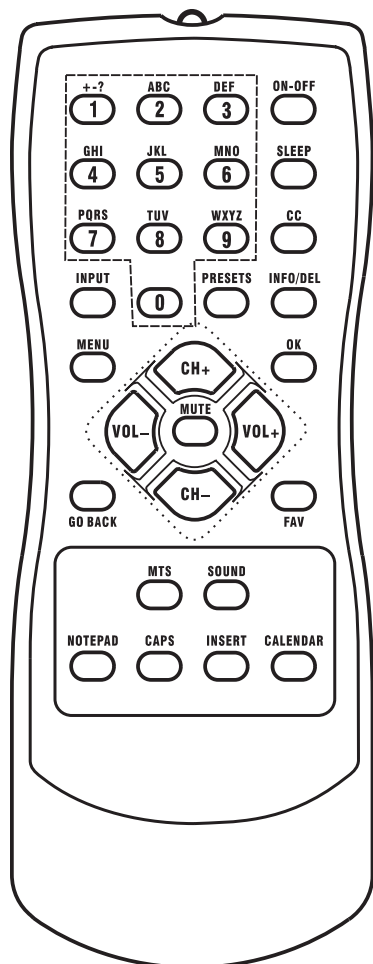

When operating the remote, point it directly at the front of the TV. Objects between the remote and the remote sensor can block the signal to the TV.

**CALENDAR** Press to display or close the calendar.

**CAPS** Press to toggle the entry mode between uppercase or lowercase letters. Details are on page 34.

**CHANNEL +/- Buttons** Press to select memorized TV channels. In the menu system, acts like the up arrow button and adjusts menu controls.

**CC (C.Mute)** Press to turn on/off C.Mute function directly. Details are on page 22.

**INFO/DEL(ETE)** Press to see the current channel number, and sound information on the TV screen. Press again to display the current time on the screen. Press to remove a menu from the screen.

In Notebook mode, press to delete unwanted text. Details are on page 34.

**INPUT** Press to select TV channels or the Audio/Video IN channels. Page 8 has a complete list.

**INSERT** In Notebook mode, press to select INS(ERT) or OVR (overwrite). Details are on page 34.

**FAV(ORITE)** Press to browse the channels in your Favorite List. Details are on page 15.

**GO BACK** Press to return to the previously viewed channel.

**MENU** Press to see the TV's on-screen menu. Press to go back to the previous menu or to remove a menu from the screen.

**MTS** Press to select a sound mode if available with the TV programming: MONO, STEREO, and SAP. Details are on page 33.

**MUTE** Press to mute or restore the TV sound. Pressing the volume buttons (VOLUME + or VOL+) also will cancel mute and restore the sound.

**NOTEPAD** Press to display or close the NOTEBOOK window.

**NUMBER Buttons** When the TV/Cable menu option is in the TV position, all channels can be selected by using two buttons. For example, to select channel 2, press "0" then "2". You can also just press "2". For channels 100 and above, press three number buttons of the channel directly. (You can select channels above 69 only if you have Cable TV. Make sure TV/CATV is set to CATV. Details are on page 12.) In Notebook mode, press to enter a letter, a digit or a symbol. Details are on page 34.

**OK** Within the on-screen menu, press to select some special function, such as Favorite list, etc.

**ON-OFF** Press to turn the TV on or off. You also can turn on the TV by pressing the CHANNEL +/- buttons on the front of the TV.

**PRESETS** Press to select one of the four preset Picture settings (Bright, Normal, Theater or Personal). Details are on page 18.

**SLEEP** Press to select a time period (120 minutes to 10 minutes in 10-minute decrements) after which the TV will turn itself off. Details are on page 23.


**SOUND** Press to select one of the four sound settings (Theater, Concert, Speech or Personal). Details are on page 30.

**VOLUME +/- Buttons** Press to adjust the TV sound level. In the menu system, acts like the right or left arrow button and adjusts menu controls.

# Language

 You can set the TV's on-screen menu to English, French or Spanish.

- 1** Press **MENU** to see the main menu.
- 2** Press **CH+** or **CH-** to highlight **Preferences**.
- 3** Press **OK** to enter the **Preferences** submenu.
- 4** **Language** is highlighted. Press **VOL+** or **VOL-** to select **English**, **Francais (French)**, or **Espanol (Spanish)**.
- 5** Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

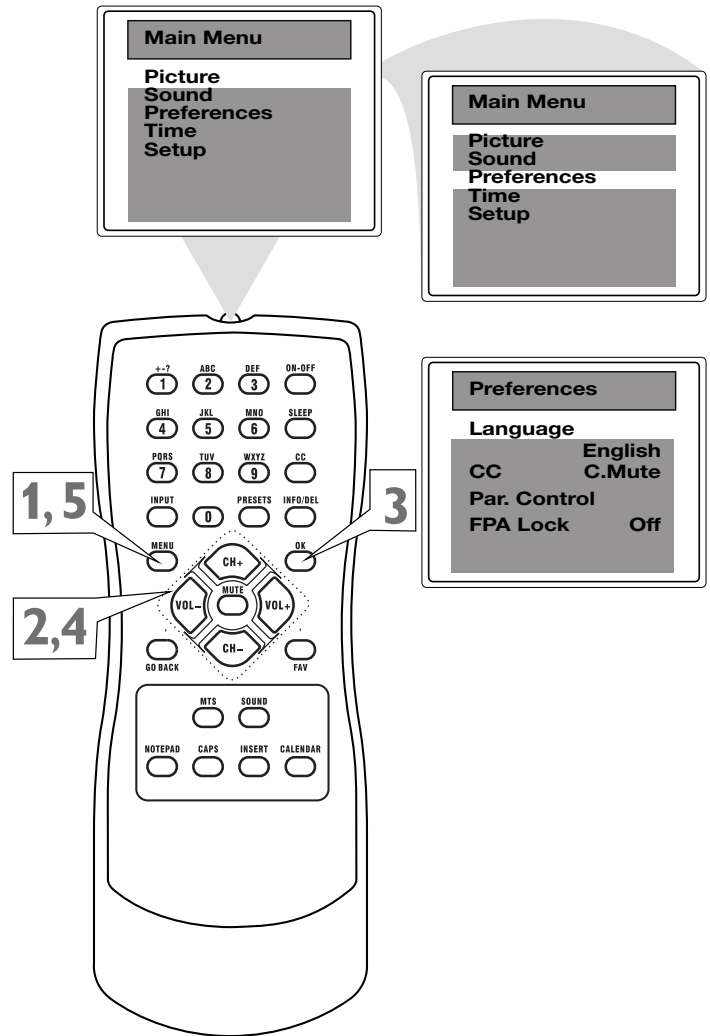


## Helpful Hints

The language control only affects the language of the TV menu. It does not change the other on-screen text features, such as Closed Captions.

# TV/Cable TV (CATV)

It is important for the TV to know what type of signal-Cable TV (CATV) or a normal antenna you are using. Choose your signal (Antenna or Cable):

 - 1** Press **MENU** to see the main menu.
- 2** Press **CH+** or **CH-** to highlight **Setup**.
- 3** Press **OK** to enter the **Setup** submenu.
- 4** **TV/CATV** is highlighted. Press **VOL+** or **VOL-** to select **TV** or **CATV**.  
Choose CATV if you have Cable TV service. (See page 4 for connection details.) If you do not have Cable TV service and you connected an antenna to the TV, choose TV. (See page 5 for connection details.)
- 5** Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

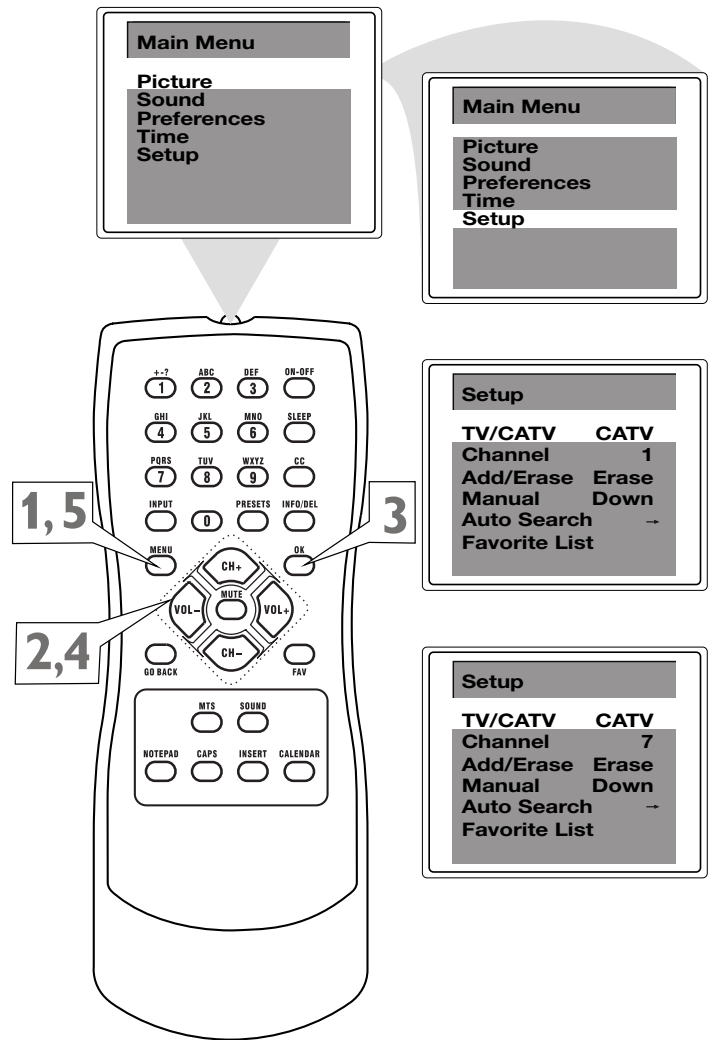

## Helpful Hints

When CATV is selected, channels 1-125 are available.

 
When TV is selected, only channels 2-69 are available.

You cannot select the **Setup** menu if the TV is set to a video input channel (FRNT). Press **INPUT** repeatedly to get to regular TV programming.

# Auto Search (Setting TV Channels)

You can set your TV to receive local TV channels (from an antenna) or Cable TV channels (when you have Cable TV service). Then, use Auto Search to set up channels that are available for you. This makes it easy for you to select only the available TV stations when you press CH+ or CH-. Before you start Auto Search, make the Antenna or Cable TV connection described on pages 4 and 5. In the menu select TV or Cable (CATV) as described on page 12.

- 1** Press **MENU** to see the main menu.
- 2** Press **CH+** or **CH-** to highlight **Setup**.
- 3** Press **OK** to enter the **Setup** submenu.
- 4** Press **CH+** or **CH-** repeatedly to highlight **Auto Search**.
- 5** Press **VOL+** to start programming TV channels. Press **VOL-** if you need to stop channel programming during the process.  
When channel setup is completed, the TV will go to its lowest channel.

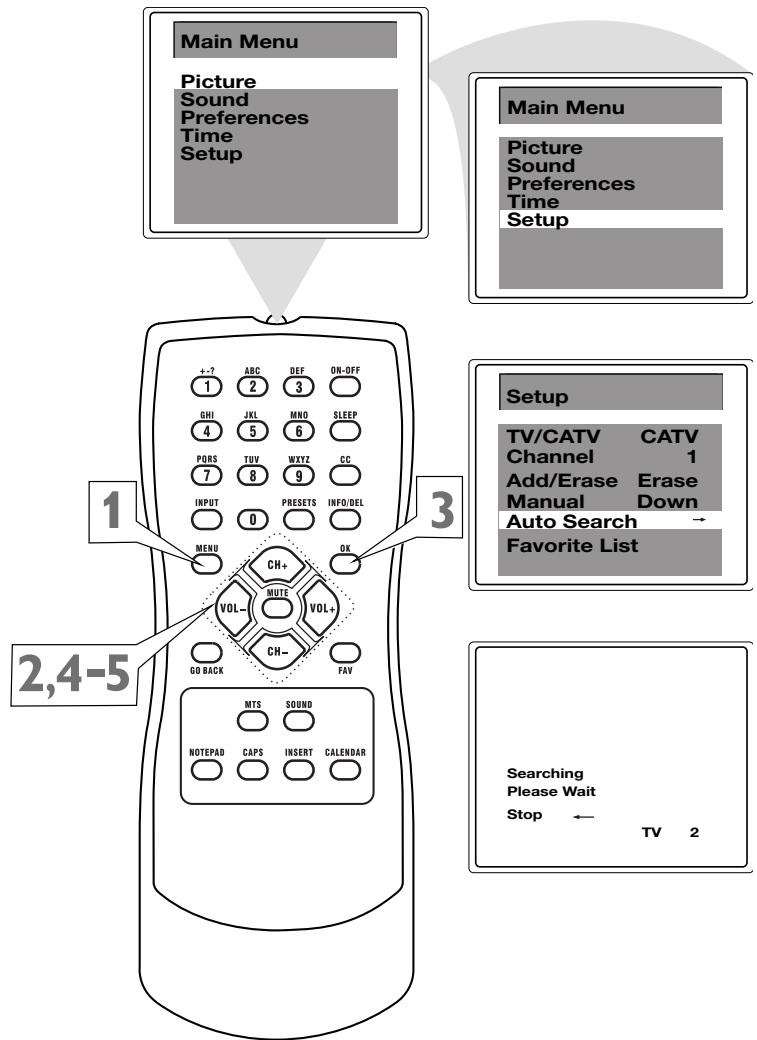

## Helpful Hints

Press CH+ or CH- to see which channels are in the TV's memory. You can also select channels that have not been memorized using the number buttons on the remote control.

 
To delete unwanted channels from the TV's memory or to add more channels, see ADD/ERASE on page 16.

You cannot select the **Setup** menu if the TV is set to a video input channel (FRNT). Press INPUT repeatedly to get to regular TV programming.

# Manual Channel Tuning

Manual Channel Tuning allows you to search for channels that may have been missed during the Auto Search process. For example, if you are looking for a channel between 60 and 70, start the search at channel 60 and go up.

- 1 Press **MENU** to see the main menu.
- 2 Press **CH+** or **CH-** to highlight **Setup**.
- 3 Press **OK** to enter the **Setup** submenu.
- 4 **TV/CATV** is highlighted. Press **VOL+** or **VOL-** to select **TV** or **CATV** (whichever you have). Details are on page 12.
- 5 Press **CH+** or **CH-** repeatedly to highlight **Channel**.
- 6 Press **VOL+** or **VOL-** to enter the channel number at which you want to begin the search.
- 7 Press **CH+** or **CH-** repeatedly to highlight **Manual**.
- 8 Press **VOL+** to start searching upward (for example, starting at channel 60 and going up to 61, 62, 63, etc.). Press **VOL-** when you find the channel you want. This stops the search. Otherwise the search will stop at the first available channel.  
  
Or, press **VOL-** to start searching downward (for example, starting at channel 60 and going down to 59, 58, 57, etc.). Press **VOL+** when you find the channel you want. This stops the search. Otherwise the search will stop at the first available channel.
- 9 Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

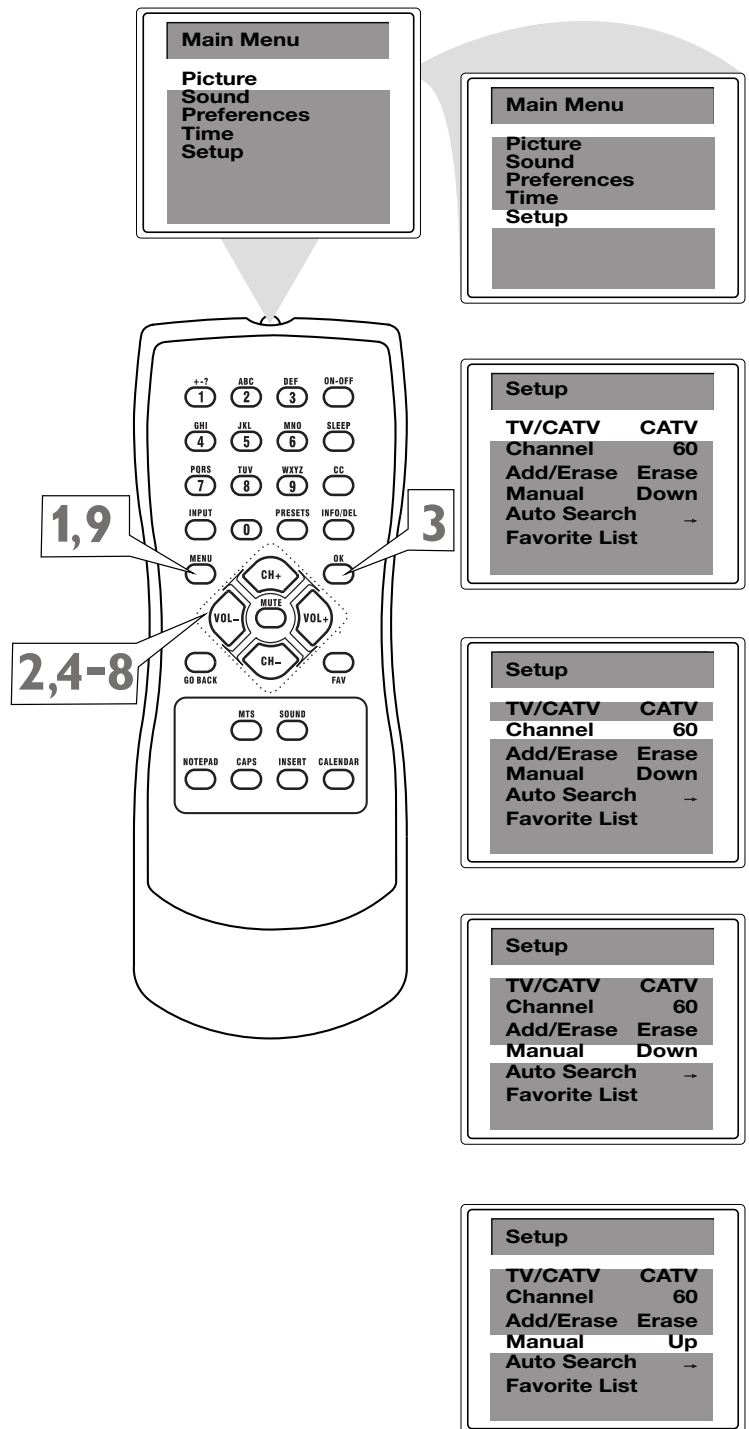


## Helpful Hints

You cannot select the **Setup** menu if the TV is set to a video input channel (FRNT). Press **INPUT** repeatedly to get to regular TV programming.

# Favorite Channel Setting

You can store five channels you prefer into the Favorite List and recall these channels easily by pressing the **FAV** button on the remote control.

 - 1** Press **MENU** to see the main menu.
- 2** Press **CH+** or **CH-** to highlight **Setup**.
- 3** Press **OK** to enter the **Setup** submenu.
- 4** Press **CH+** or **CH-** repeatedly to highlight **Favorite List**.
- 5** Press **OK** to display features of **Favorite List**.
- 6** **TV/CATV** is highlighted. Press **VOL+** or **VOL-** to select TV or CATV (whichever you have).
- 7** Press **CH+** or **CH-** to select **CH1** (the first channel position), then Press **VOL+** or **VOL-** to enter a channel number you want to store at this position, such as CATV 8. Repeat to set the other four favorite channels.
- 8** Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

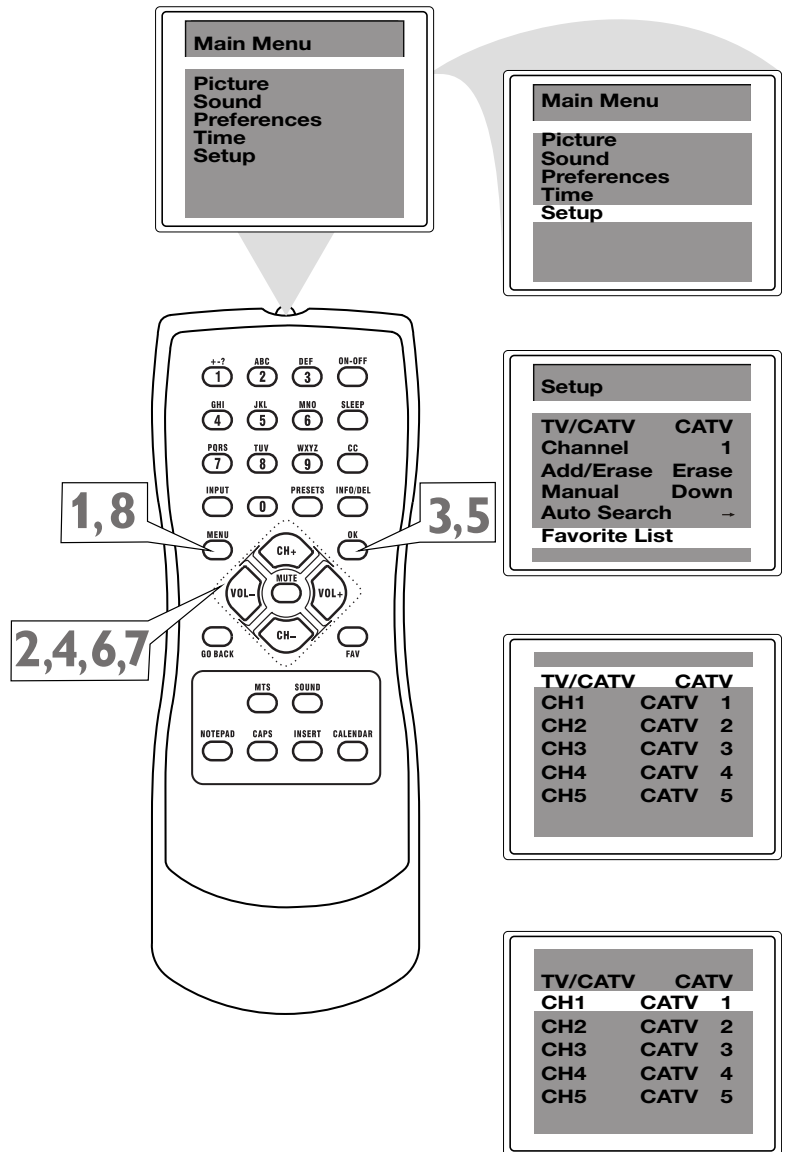

## Helpful Hints

 
You cannot select the **Setup** menu if the TV is set to a video input channel (FRNT). Press **INPUT** repeatedly to get to regular TV programming.



# Adding or Erasing Channels

You can add or erase channels from the list in the TV memory.

- 1 Press **MENU** to see the main menu.
- 2 Press **CH+** or **CH-** to highlight **Setup**.
- 3 Press **OK** to enter the **Setup** submenu.
- 4 **TV/CATV** is highlighted. Press **VOL+** or **VOL-** to select **TV** or **CATV** (whichever you have). Details are on page 12.
- 5 Press **CH+** or **CH-** repeatedly to highlight **Channel**.
- 6 Press **VOL+** or **VOL-** to enter the channel number you want to add or erase.
- 7 Press **CH+** or **CH-** repeatedly to highlight **Add/Erase**.
- 8 Press **VOL+** or **VOL-** to choose **Add or Erase**.  
 If you select Add, the channel will be available when you press CH+ and CH- to move through channels. Choosing Erase will remove the channel from the TV's memory. The channel will not be available when you flip through channels with the CH+ and CH- buttons.
- 9 Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.
- 10 You won't see the change take effect until you scroll through the channels in memory using the CH+/- buttons.

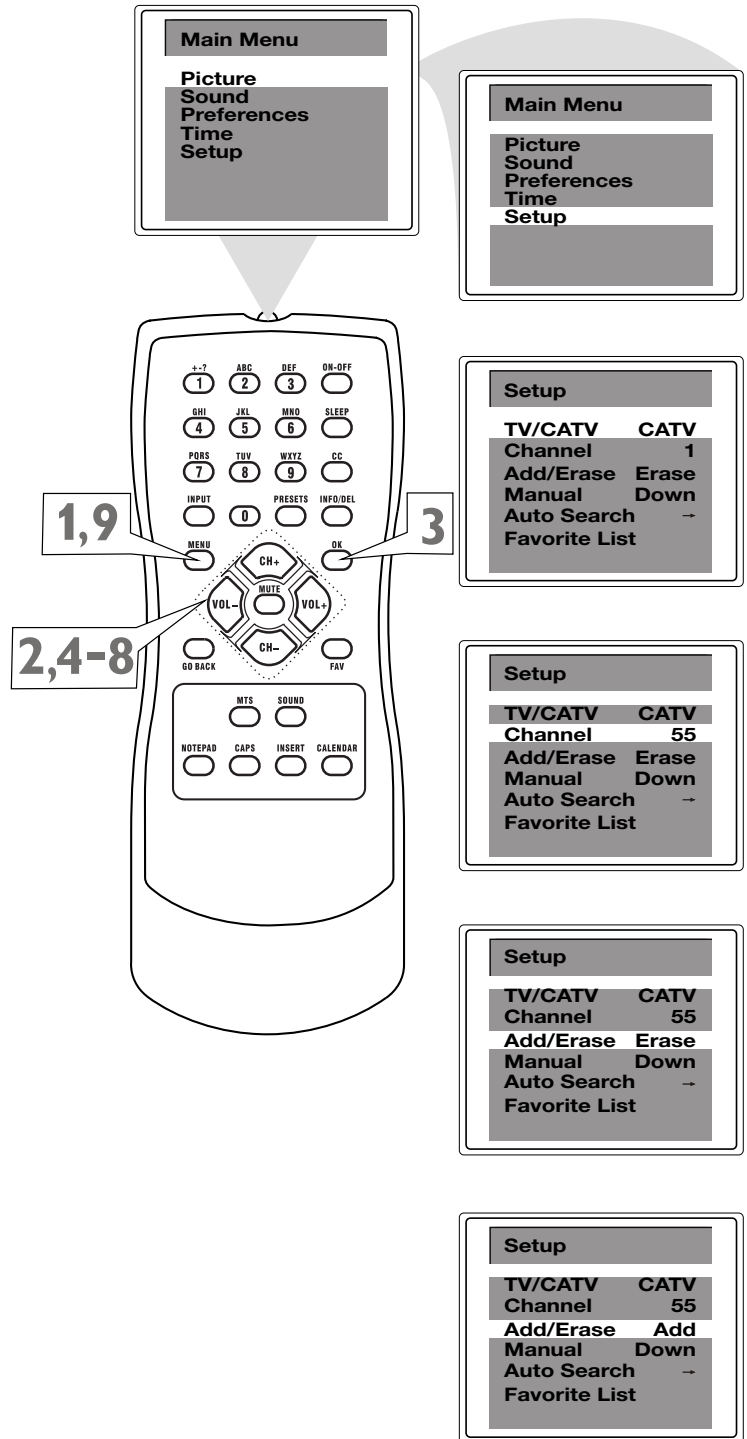


**Helpful Hints**  
 You cannot select the **Setup** menu if the TV is set to a video input channel (FRNT). Press INPUT repeatedly to get to regular TV programming.

# Picture Adjustments

 To adjust your TV picture, select a channel and follow the steps below:

- 1** Press **MENU** to see the main menu.
- 2** **Picture** is highlighted. Press **OK** to enter the **Picture** submenu.
- 3** Press **CH+** or **CH-** repeatedly to highlight your choice: Color, Brightness, Contrast, Sharpness, Tint, Blue Back (background), or C.Warmth (color temperature.)
- 4** Press **VOL+** or **VOL-** to increase or decrease the element you choose. However, you can turn Blue Back to only On or Off (see below). You can choose Warm, Cool or Normal mode for color temperature.
- 5** Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

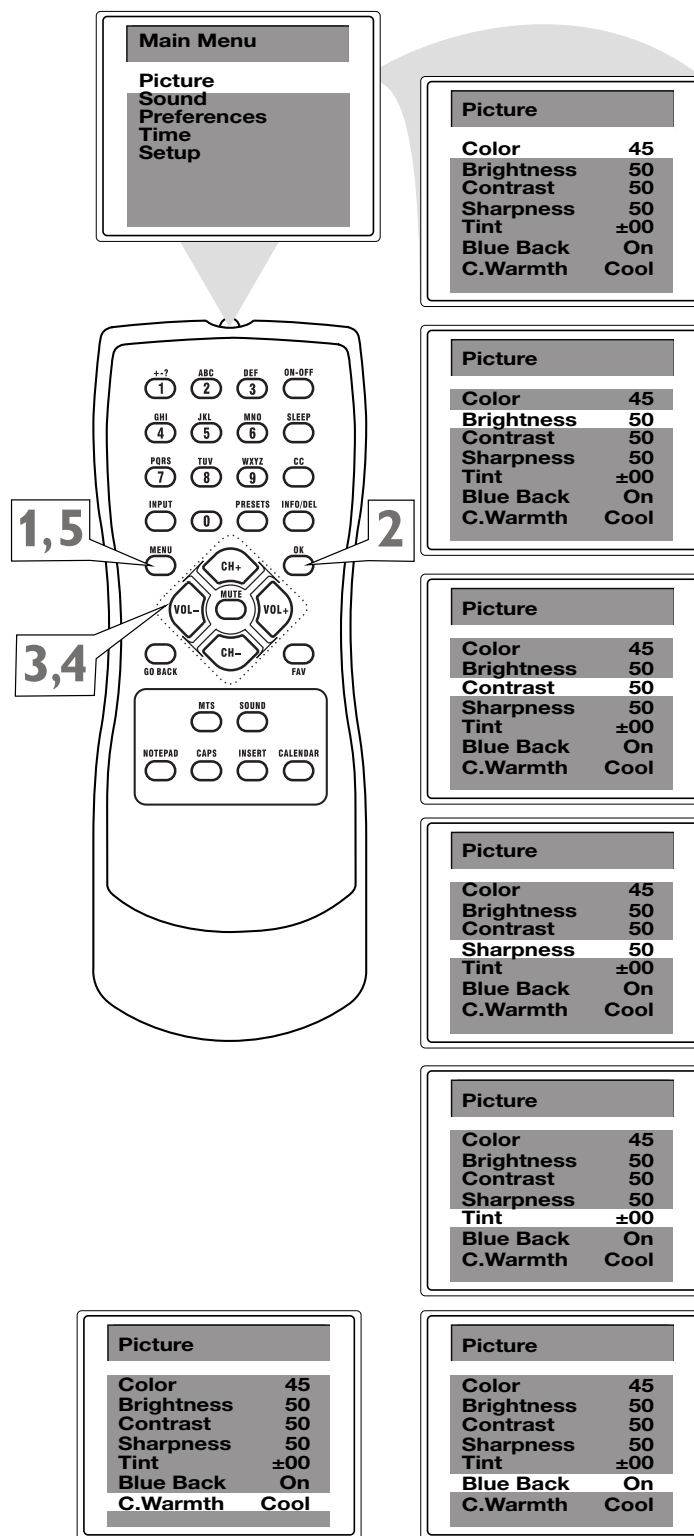


Helpful Hints	
<b>Color:</b>	Adjust to add or reduce color.
<b>Brightness:</b>	Adjust to brighten the darkest parts of the picture.
<b>Contrast:</b>	Adjust the distinction between the black and white parts of the picture.
<b>Sharpness:</b>	Improve picture detail.
<b>Tint:</b>	Obtain natural skin tones.
<b>Blue Back:</b>	Turn this option On or Off. If you choose On, a solid blue background screen will appear if the TV is on a weak channel (for example, if the reception is very poor or if the station has gone off the air for the night). After being such a channel for 15 minutes, the TV will turn itself off automatically.
<b>C. Warmth:</b>	Set this option for warm, cool tones or somewhere in between (Normal).

# Preset Picture Mode

 This function enables you to choose preset video settings for different types of programs and viewing conditions. Most picture settings are preset at the factory to automatically adjust the TV Brightness, Color, Contrast and Sharpness.


- 1 Press PRESETS** on the remote control. The current preset picture setting will appear on the screen.
- 2 Press PRESETS repeatedly** to select Personal, Normal, Bright or Theater. The Personal setting is what you specify with the picture adjustments as described on page 17. Personal is the only picture setting you can change. All others are set at the factory.

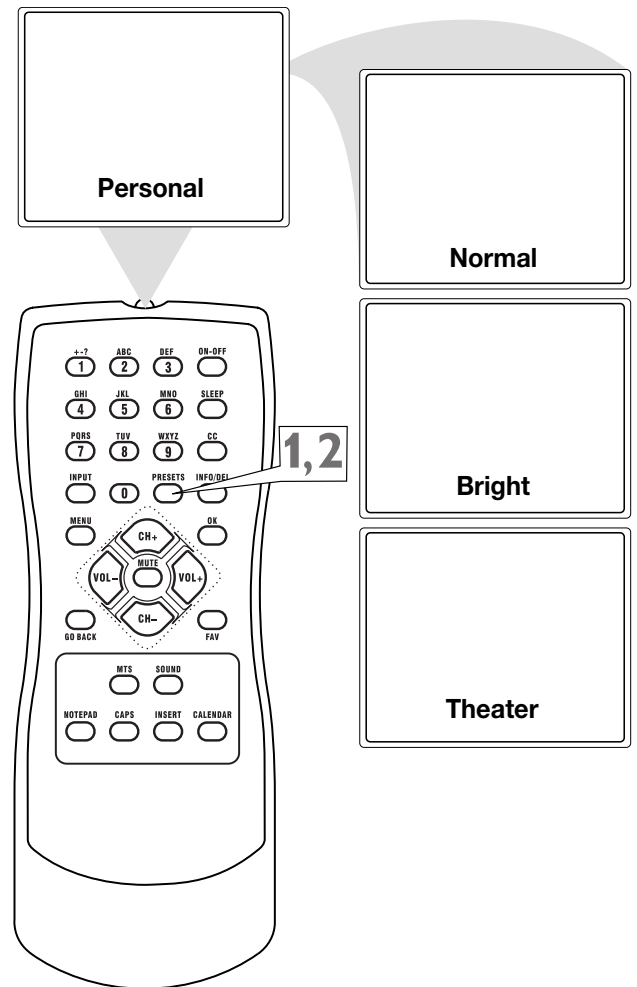

# Clock

Follow these steps to set the clock.

 - 1 Press MENU** to see the main menu.
- 2 Press CH+ or CH-** to highlight **Time**.
- 3 Press OK** to enter the **Time** submenu.
- 4 Press CH+ or CH-** repeatedly to highlight **Clock**.
- 5 Press VOL+ or VOL-** to change the time in minutes. Press and hold the VOL+ or VOL- to change the time quickly in 10 minute increments; press OK. The highlight moves to the hour position. Use the VOL+/- buttons to set the hour.
- 6 Press MENU repeatedly** to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

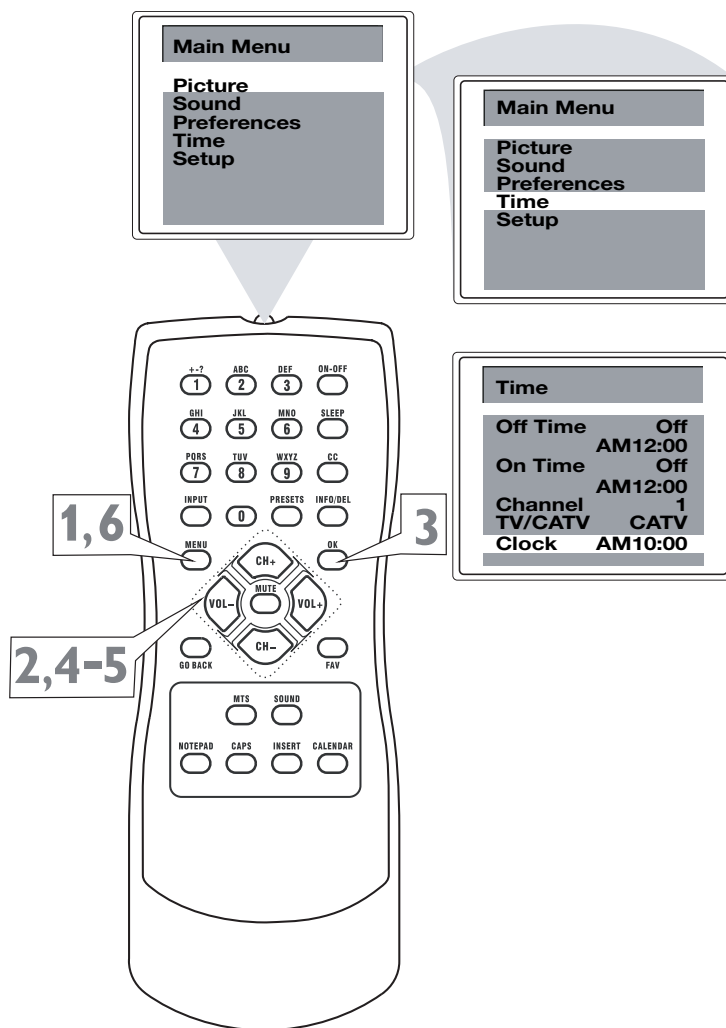


## Helpful Hints

If the power fails, you must reset the clock.

# On-Timer

To turn on the TV to a specific channel at a specific time, use the On-Timer. Before you begin, set the clock correctly. Details are on page 19.

 
- 1** Press **MENU** to see the main menu.
- 2** **CH+** or **CH-** to highlight **Time**.
- 3** Press **OK** to enter the **Time** submenu.
- 4** Press **CH+** or **CH-** repeatedly to highlight **TV/CATV**.
- 5** Press **VOL+** or **VOL-** to select TV or CATV, depending on whether you have Cable TV service or not. Details are on page 12.
- 6** Press **CH+** or **CH-** repeatedly to highlight **Channel**.
- 7** Press **VOL+** or **VOL-** to enter the channel number. This will be the channel to which the TV turns on at the specified time.
- 8** Press **CH+** or **CH-** repeatedly to highlight **On time**.
- 9** Press **VOL+** or **VOL-** to select **Once (or Daily, Off)**.  
If you select Once, the timer will turn on the TV one time within the next 24 hours only.  
If you select Daily, the timer will turn on the TV at the same time and to the same channel every day.  
Choose Off to cancel the On-timer.
- 10** Press **CH+** or **CH-** repeatedly to highlight **AM12:00** under the line of On Time.
- 11** Press **VOL+** or **VOL-** to enter the On time. Hold down **VOL+** or **VOL-** to change the time quickly in 10-minute increments; press **OK**. The hour is highlighted. Use the **VOL+/-** buttons to set the hour. This will be the time at which the TV will turn itself on.
- 12** Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

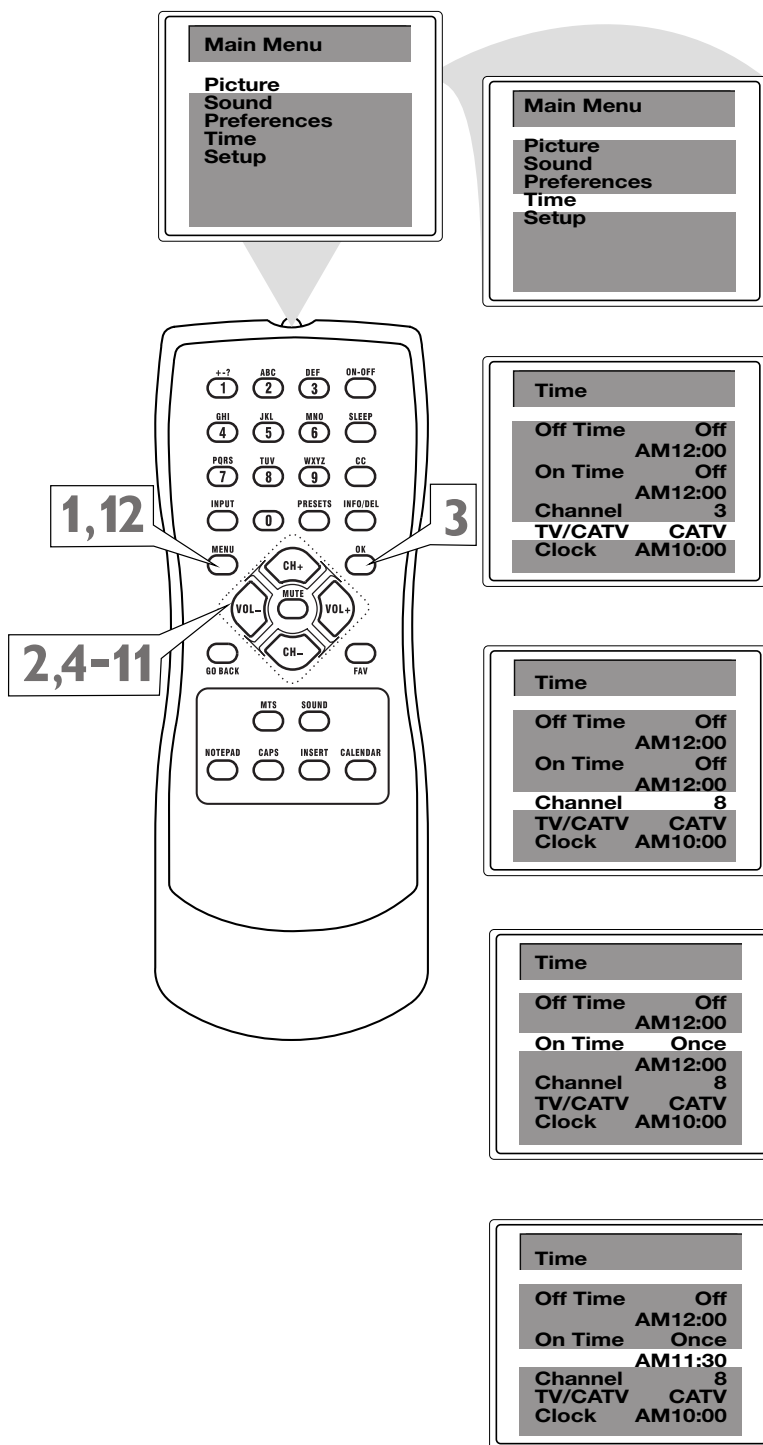

# Off-Timer

To turn off the TV at a specific time every day, use the Off-Timer. Before you begin, you must set the clock to the correct time. Details are on page 19.

 
- 1** Press **MENU** to see the main menu.
- 2** Press **CH+** or **CH-** repeatedly to highlight **Time**.
- 3** Press **OK** to enter the **Time** submenu.
- 4** **Off time** is highlighted. Press **VOL+** or **VOL-** to select **Once, Daily** or **Off**.  
If you select **Once**, the timer will turn off the TV once.  
If you select **Daily**, the timer will turn off the TV at the same time every day.  
Choose **Off** to cancel the Off-timer.
- 5** Press **CH+** or **CH-** repeatedly to highlight **AM12:00** under the line of **Off Time**.
- 6** Press **VOL+** or **VOL-** to enter the **On** time. Hold down **VOL+** or **VOL-** to change the time quickly in 10-minute increments; press **OK**. The hour is highlighted. Use **VOL+** or **VOL-** to set the hour. This will be the time at which the TV will turn itself off.
- 7** Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

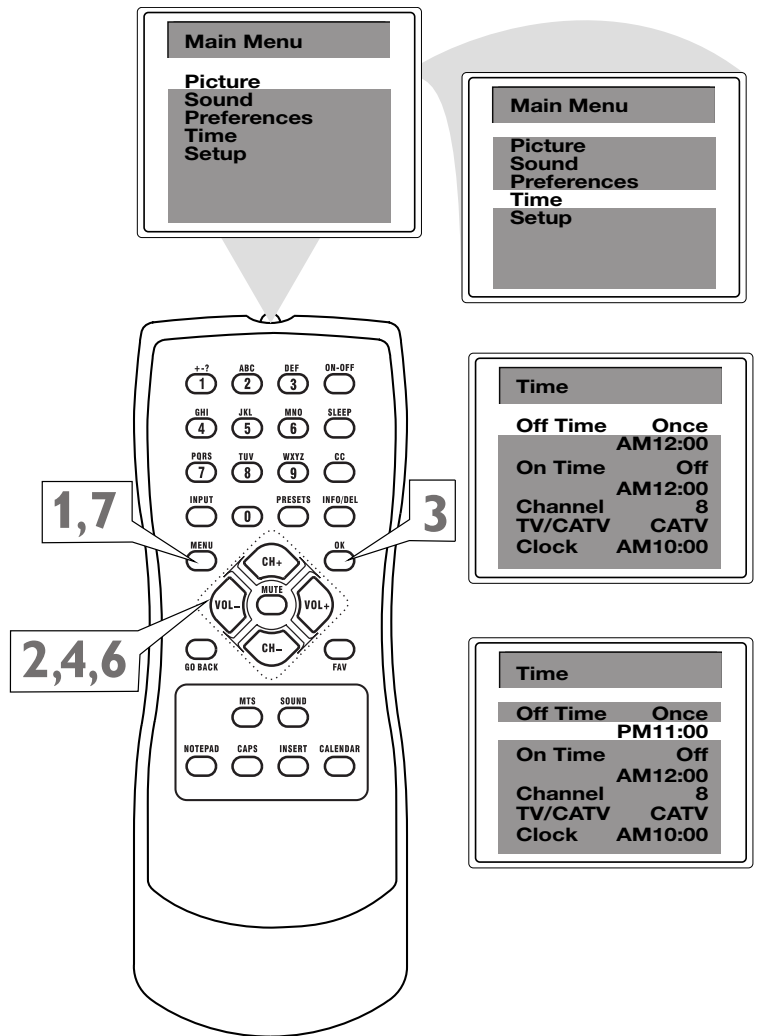

# Closed Caption

Closed captioning (CC) lets you read the voice content of TV programs on the TV screen. Designed to help the hearing impaired, on-screen text boxes will show dialog, conversation, and activity during TV programming.

 - 1** Press **MENU** to see the main menu.
- 2** Press **CH+** or **CH-** to highlight **Preferences**.
- 3** Press **OK** to enter the **Preference** submenu.
- 4** Press **CH+** or **CH-** to highlight **CC**.
- 5** Press **VOL+** or **VOL-** to select the closed caption you want (**Off**, **C1**, **C2**, or **C.Mute**). C.Mute sets the TV to show closed caption when you press MUTE. The TV volume will be disabled until you press MUTE or VOL+ again to restore the sound.
- 6** Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

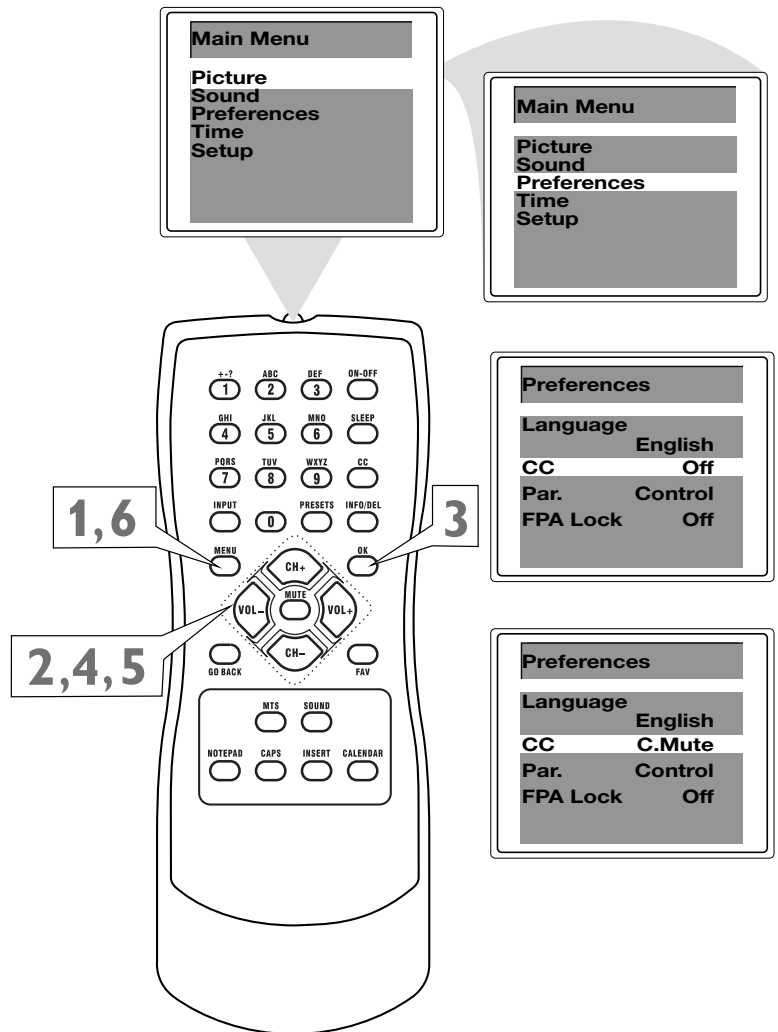

## Helpful Hints

Not all TV programs and commercials are broadcast with Closed Caption information. Neither are all Closed Caption modes transmitted by a station for a closed caption program.

 
See your TV listings for the stations and times of Closed Caption shows.

Press **CC** on the remote control to turn on/off C.Mute function directly. C.Mute On or C.Mute Off will appear on the screen accordingly.

# Sleep Timer

Turns off the TV within an amount of time you specify (10-120 minutes from the current time).

- 1 Press SLEEP repeatedly** to set the sleep timer from 120 to 10 minutes in 10-minute decrements.
- 2 After setting the sleep timer, Press SLEEP once** to display the remaining time.
- 3 To cancel the sleep timer, Press SLEEP until "Off" appears.**
- 4 Within 1 minute** of the time set a clock icon will flash to remind you that the TV will turn itself off soon.

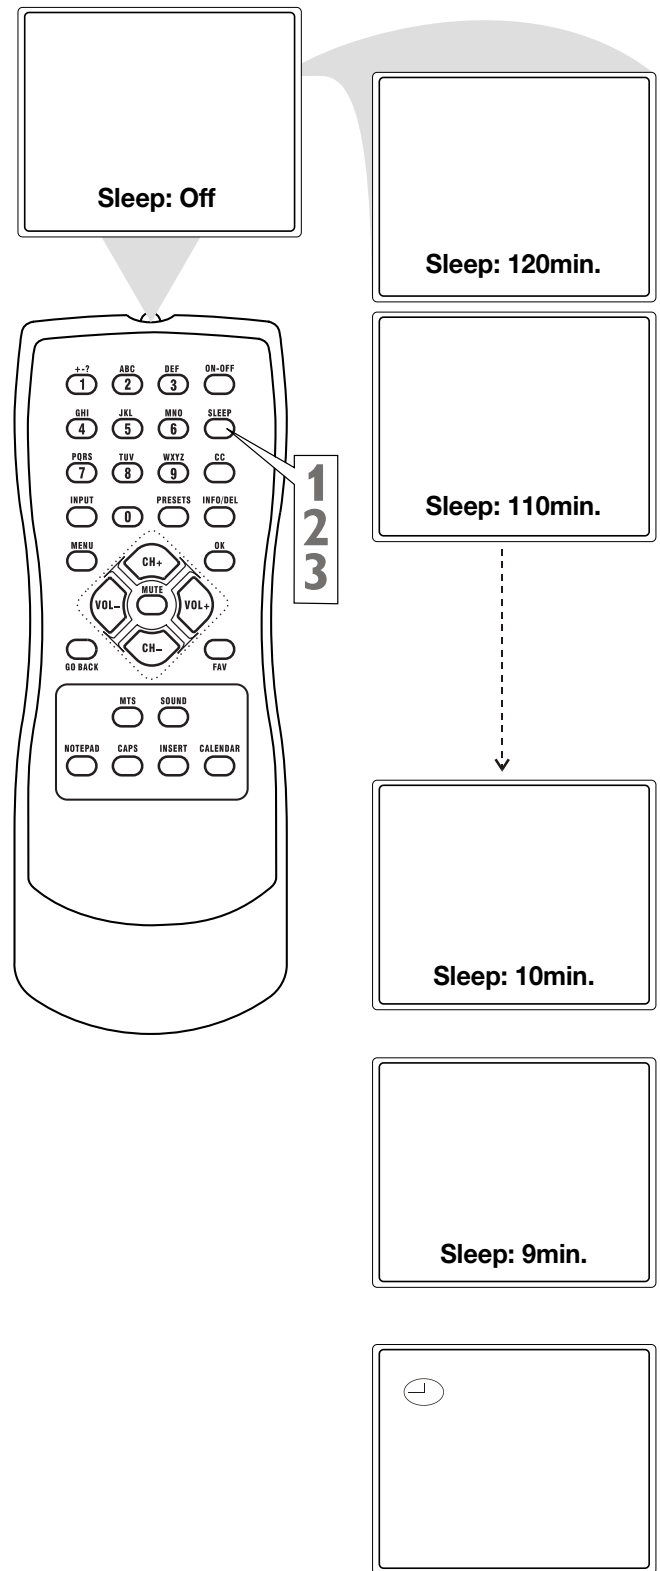



# Understanding Parental Lock

Parental Lock processes program content advisories from broadcasters. Parental Lock can respond to the content advisories and block objectionable content (offensive language, violence, sexual situations, etc.) This is a great feature to censor the type of programming children watch. **Parental Lock offers various blocking options from which to choose:**

**MASTER ENABLE:** This is the “master switch” for Parental Lock. When ON, all blocking/censoring you have set is enabled. When OFF, all blocking is disabled.

**BLOCK UNRATED:** All unrated programs (based on Movie Ratings or TV Ratings) will be blocked if this feature is ON and MASTER ENABLE is ON.

**BLOCK NO RATING:** All programming with no content advisory data will be blocked if this feature is ON and MASTER ENABLE is ON.

**After you set a password,** you can block up to six ratings in TV Ratings or Movie Ratings. These ratings are set by the Motion Picture Association of America and TV broadcasters.

## MPAA Ratings

(Motion Picture Association of America)

**G: General Audience** - All ages admitted. Most parents would find this program suitable for all ages. This type of programming contains little or no violence, no strong language, and little or no sexual dialog or situation.

**PG: Parental Guidance Suggested** - This programming contains material that parents may find unsuitable for younger children. It may contain one or more of the following: moderate violence, some sexual situations, infrequent coarse language, or some suggestive dialog.

**PG-13: Parents Strongly Cautioned** - This programming contains material that parents may find unsuitable for younger children under the age of 13. It contains one or more of the following: violence, sexual situations, coarse language, or suggestive dialog.

**R: Restricted** - This programming is specially designed for adults. Anyone under the age of 17 should only view this programming with an accompanying parent or adult guardian. It contains one or more of the following: intense violence, intense sexual situations, strong coarse language, or intensely suggestive dialog.

**NC17: No children under the age of 17 will be admitted** - This type of programming should be viewed by adults only. It contains graphic violence, explicit sex, or crude, indecent language.

**X: Adult only** - This type of programming contains one or more of the following: very graphic violence, very graphic and explicit sexual acts, very coarse and intensely suggestive language.

## TV Ratings

(TV broadcaster)

**TV-Y All children** - Appropriate for all children. Designed for a very young audience, including children age 2-6. This type of programming is not expected to frighten younger children.

**TV-Y7 Directed to Older Children** - Designed for children age 7 and above. It may be appropriate for children who can distinguish between make-believe and reality. This programming may include mild fantasy and comic violence (FV or Fantasy violence).

**TV-G General Audience** - Most parents would find this programming suitable for all ages. This type of programming contains little or no violence, no strong language, and little or no sexual dialog or situation.

**TV-PG Parents Guidance Cautioned** - Contains material that parents may find unsuitable for younger children. This type of programming contains one or more of the following: moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialog (D).

**TV-14 Parents Strongly Cautioned** - Contains material that parents under 14 years of age. This type of programming contains one or more of the following: intense violence (V), intense sexual situations (S), strong coarse language (L), or intensely suggestive dialog (D).

**TV-MA Mature Audience only** -

Specially designed to be viewed by adults and may be unsuitable for children under 17. This type of programming contains one or more of the following: graphic violence (V), explicit sexual situations (S), or crude, indecent language (L).

 
# Changing Your Password

Over the next few pages, you will learn how to block programs and understand the rating terms for certain broadcasts. First, set your password.

- 1 Press MENU** to see the main menu.
- 2 Press CH+ or CH-** to highlight Preferences.
- 3 Press OK** to enter the Preference submenu.
- 4 Press CH+ or CH-** to highlight Par. (Parental) Control.
- 5 Press OK.** Enter Password will appear on the screen.  
If you want to set a new code, go to steps 6-8 directly. (You can press the number buttons to enter a four-digit code. The code "0000" is the default password. If you have not set a code previously, then "0000" is the code.)

## Resetting Your Password

- 6 Press VOL+ on the remote and the CHANNEL + on the front of the TV at the same time.** Enter New Pwd. will appear on the screen. (You must be in the Enter Password screen when attempting this.)
- 7 Press the number buttons to enter a four-digit code.** The code will appear on the screen as you enter it.
- 8 Press OK to save the code.**
- 9 Press MENU repeatedly** to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

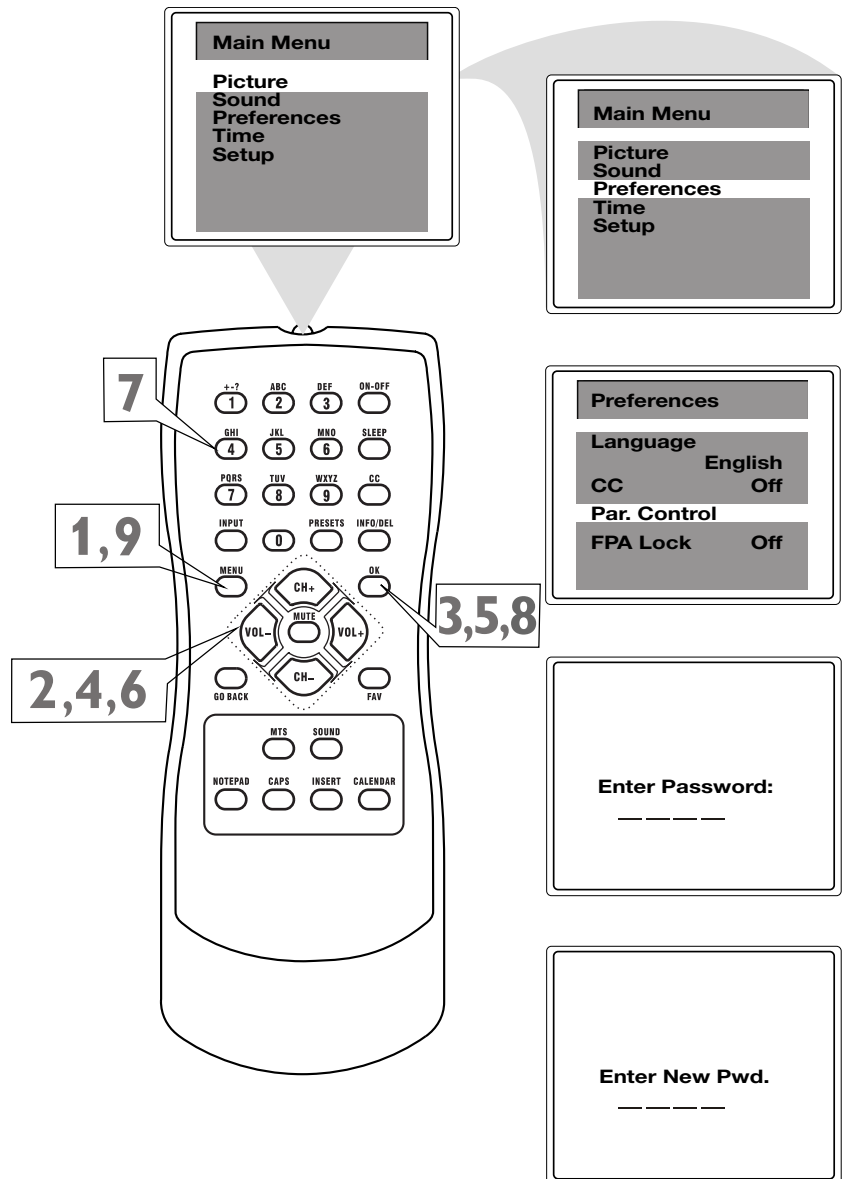

### Helpful Hints

 
You cannot change Parental Lock settings without knowing the password.

If you forget your password you can reset it. Simultaneously press the VOL+ on the remote and the CH+ button on the front of the TV. The display will appear for you to enter your new password.

# Blocking Programming with Movie Ratings

There are two types of ratings for Parental Lock. One is based on movie industry ratings. The other is based on TV industry ratings. Both can be used to censor programming. Let first look at the MPAA Rating options of Parental Lock.

- 1 Press **MENU** to see the main menu.
- 2 Press **CH+** or **CH-** to highlight **Preferences**.
- 3 Press **OK** to enter the **Preferences** submenu.
- 4 Press **CH+** or **CH-** to highlight **Par. (Parental) Control**.
- 5 Press **OK** to display the password screen.
- 6 Press the **number buttons** to enter your four-digit code. The Parental Lock setup menu appears on the screen and the MPAA rating is highlighted.
- 7 Press **OK** to display MPAA ratings (**G, PG, PG-13, R, NC-17, and X**).
- 8 Press **CH+** or **CH-** to select the rating you want to block.
- 9 Press **OK** to block (or unblock) the rating. A check mark will appear to the left of the rating when blocked. When you block a rating, higher ratings are blocked automatically. To unblock all the ratings, select N/A.
- 10 Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

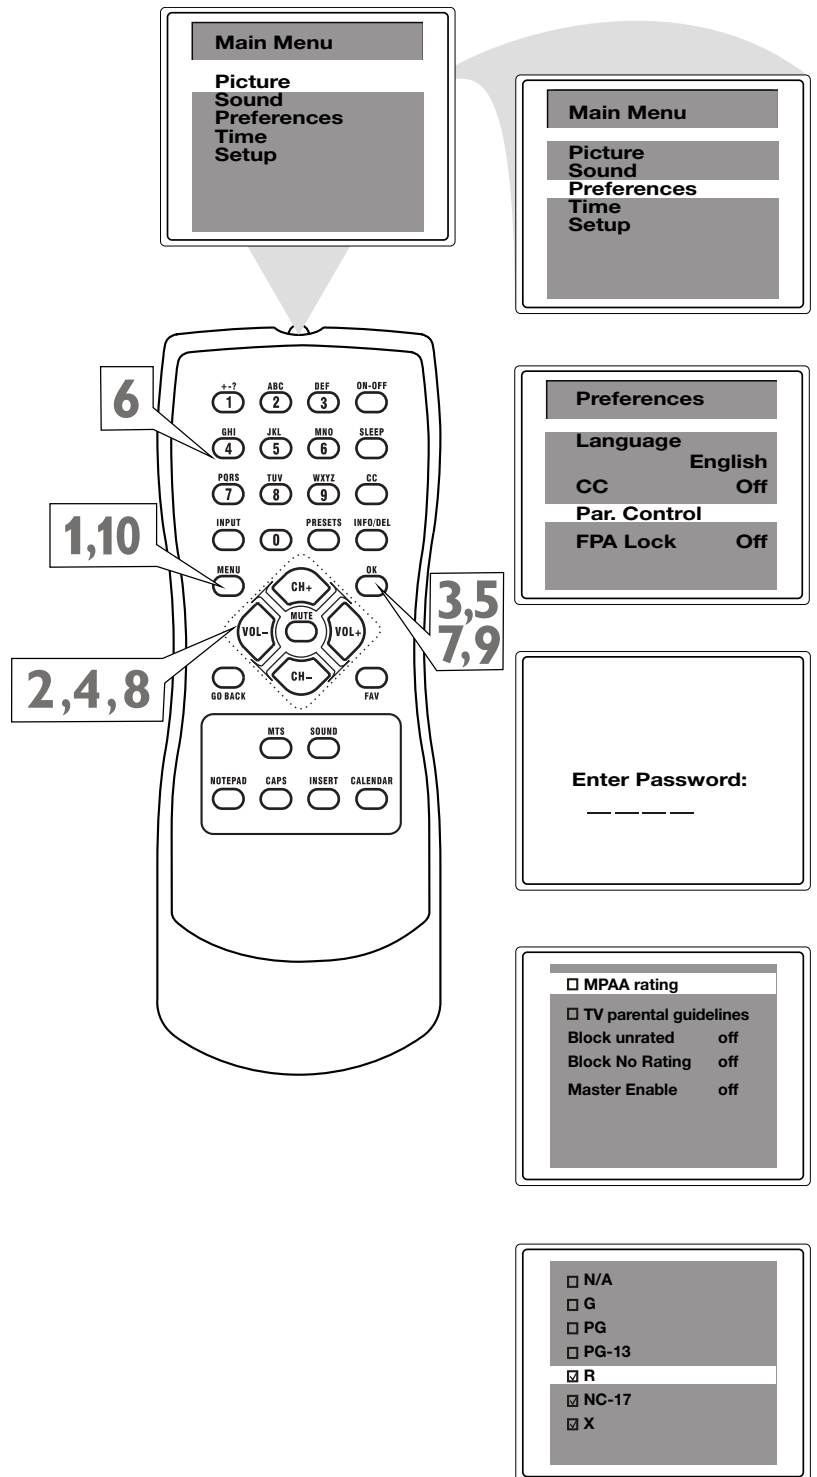


## Helpful Hints

Blocking any rating (ON) will block all the higher ratings automatically. For example, if R is blocked manually, NC17 and X will be blocked automatically. To turn a rating OFF, set each rating individually.

# Blocking Programming with TV Ratings

Some program ratings are based on TV industry ratings as described below.

 - 1 Press **MENU** to see the main menu.
- 2 Press **CH+** or **CH-** to highlight **Preferences**.
- 3 Press **OK** to enter the **Preferences** submenu.
- 4 Press **CH+** or **CH-** to highlight **Par. (Parental) Control**.
- 5 Press **OK** to display the password screen.
- 6 Press the **number buttons** to enter your four-digit code. The Parental Lock setup menu appears on the screen.
- 7 Press **CH+** or **CH-** to highlight **TV parental guidelines**.
- 8 Press **OK** to display the parental guidelines (**TV-Y, TV-Y7, TV-G, TV-PG, TV-14, or TV-MA**).
- 9 Press **CH+** or **CH-** to select a rating.
- 10 Press **OK** to turn the rating on or off. A check mark appears when the rating is blocked. TV-Y and TV-G can be turned on (to block viewing) or off (to allow viewing) only. TV-Y7, TV-PG, TV-14, and TV-MA can be customized to block V (violence), F (fantasy violence), S (sexual situations), L (coarse language), or D (suggestive dialog). To do so, continue with these steps.
- 11 Press **CH+** or **CH-** to highlight **Content**.
- 12 Press **OK** to enter the **Content** menu.
- 13 Press **CH+** or **CH-** to select a rating, then press **VOL+**.
- 14 Press **CH+** or **CH-** to select the content theme (**Fantasy-V, Violence, Sexual, Language, or Dialog**), then press **OK** to block or view it.
- 15 Press **MENU** to return to the Parental Guidelines screen and check your settings. A check mark appears when the rating is blocked.
- 16 Press **MENU repeatedly** to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

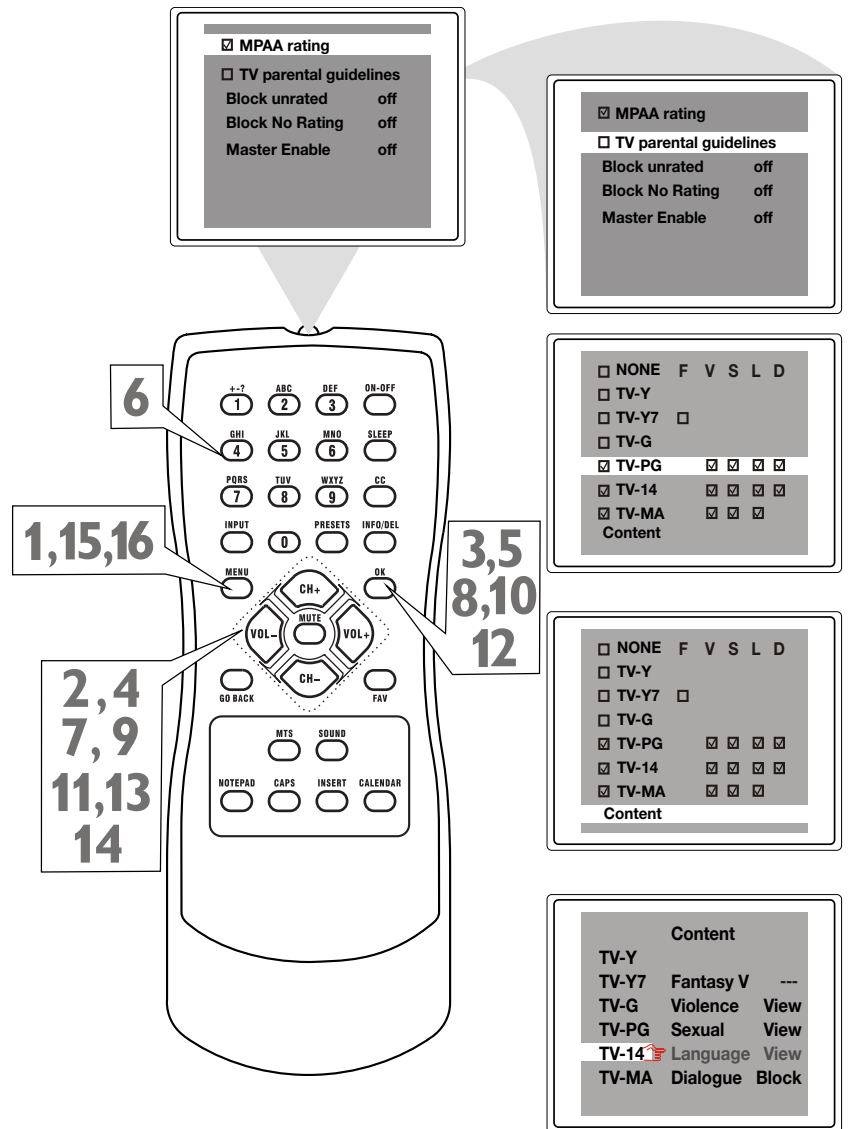

**Helpful Hints**

Any rating will block higher ratings automatically. To unblock all the ratings, select NONE.

 
**Notes:**

1. Blocking TV-Y, only TV-Y7 is blocked automatically.
2. Blocking TV-Y7, other ratings will not change.

# Parental Lock Blocking Options

After setting your password, Parental Lock also offers these special blocking options.


- 1** Press **MENU** to see the main menu.
- 2** Press **CH+** or **CH-** to highlight **Preferences**.
- 3** Press **OK** to enter the **Preferences** submenu.
- 4** Press **CH+** or **CH-** to highlight **Par. (Parental) Control**.
- 5** Press **OK** to display the password screen.
- 6** Press the **number buttons** to enter your four-digit code. The Parental Lock setup menu appears on the screen.
- 7** Press **CH+** or **CH-** to select **Master Enable, Block Unrated, or Block No Rating**.  
**MASTER ENABLE:** this is the “master switch” for Parental Lock. When ON, all blocking/censoring you have set is enabled. When OFF, all blocking is disabled.  
  
**BLOCK UNRATED:** All unrated programs based on movie ratings or TV ratings will be blocked if this feature is ON and MASTER ENABLE is ON.  
  
**BLOCK NO RATING:** All programming with no content advisory data will be blocked if this feature is ON and MASTER ENABLE is ON.
- 8** Press **VOL+** or **VOL-** to turn the blocking option **On** or **Off**.
- 9** Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

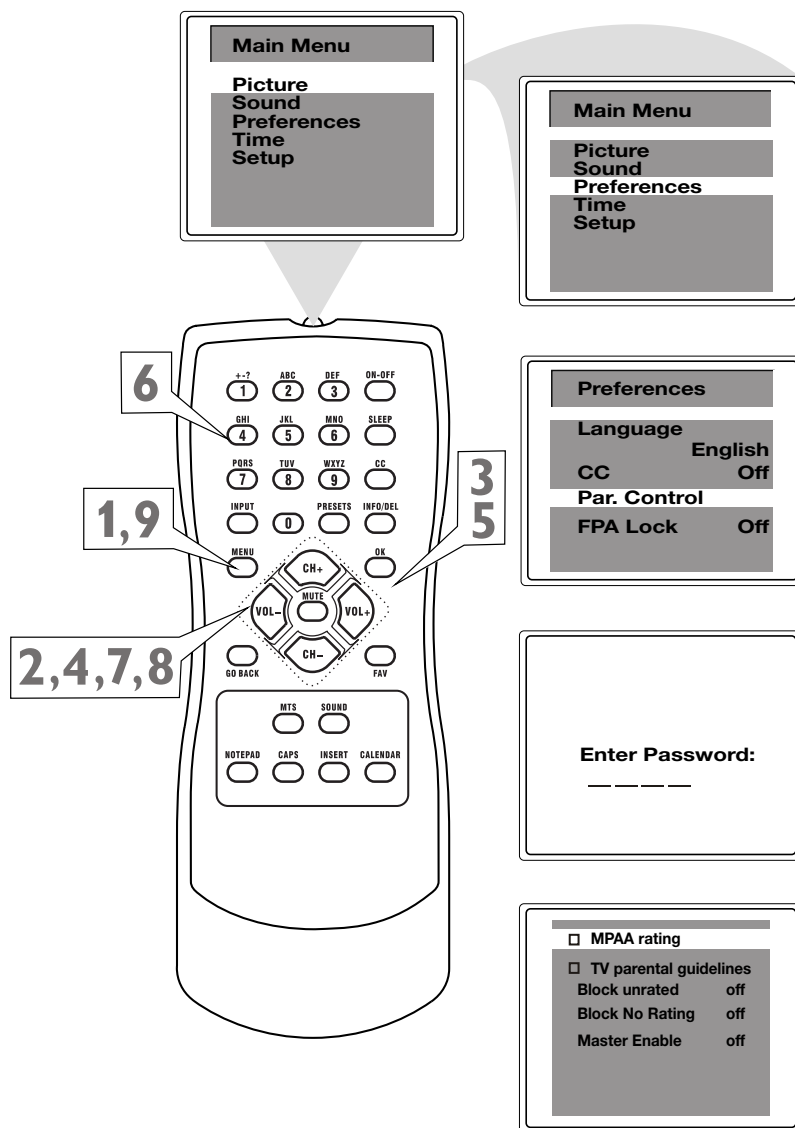

# Child Lock

Child Lock allows you to lock the buttons on the front of the TV.

 
- 1 Press MENU** to see the main menu.
- 2 Press CH+ or CH-** to highlight **Preferences**.
- 3 Press OK** to enter the **Preferences** submenu.
- 4 Press CH+ or CH-** to highlight **FPA (Front Panel) Lock**.
- 5 Press VOL+ or VOL-** to turn on or off FPA Lock. Choose **On** to disable all the buttons on the front of the TV. **FPA Lock On** will appear on the TV screen each time you press buttons on the front of the TV. You can still operate the TV with the remote control. You can still use the **POWER** button on the front of the TV, but only to turn off the TV (not on). Set FPA Lock to **Off** to cancel this feature so you can use the buttons on the front of the TV again.
- 6 Press MENU repeatedly** to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

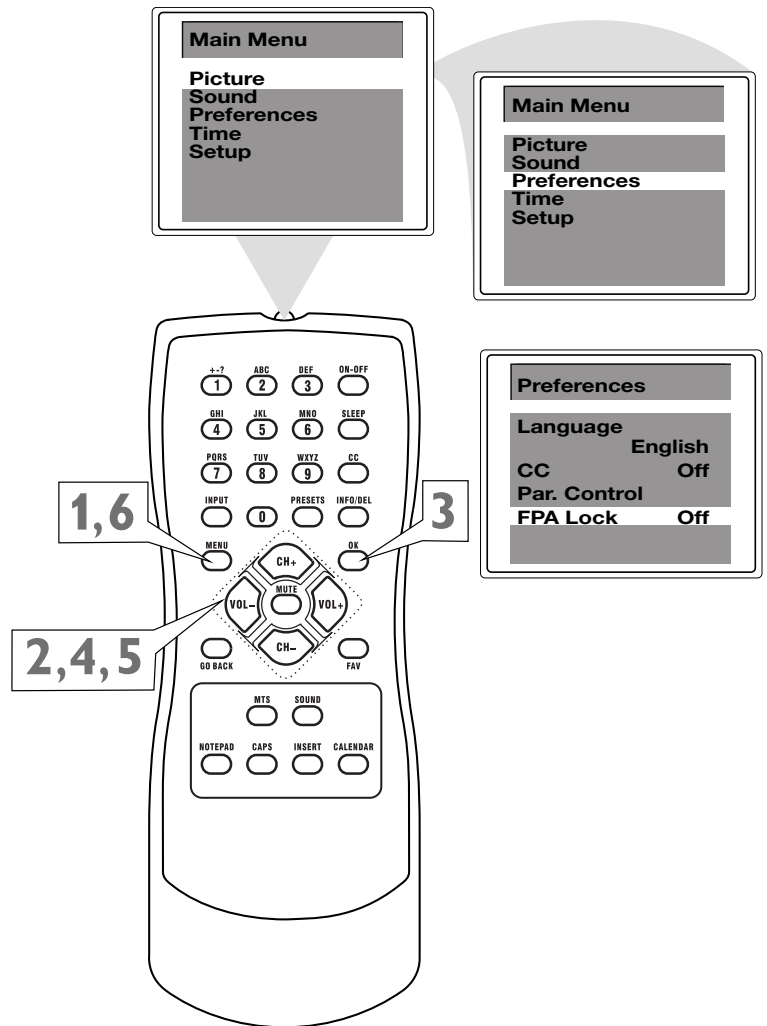

# Sound Mode Selection

You can preset sound mode that best suits your current programming among Personal, Theater, Concert and Speech.

 - 1 Press **MENU** to see the main menu.
- 2 Press **CH+** or **CH-** to highlight **Sound**.
- 3 Press **OK** to enter the **Sound** submenu.
- 4 Press **CH+** or **CH-** to highlight **Sound Mode**.
- 5 Press **VOL+** or **VOL-** to select **Personal**, **Theater**, **Concert**, or **Speech**.
- 6 Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

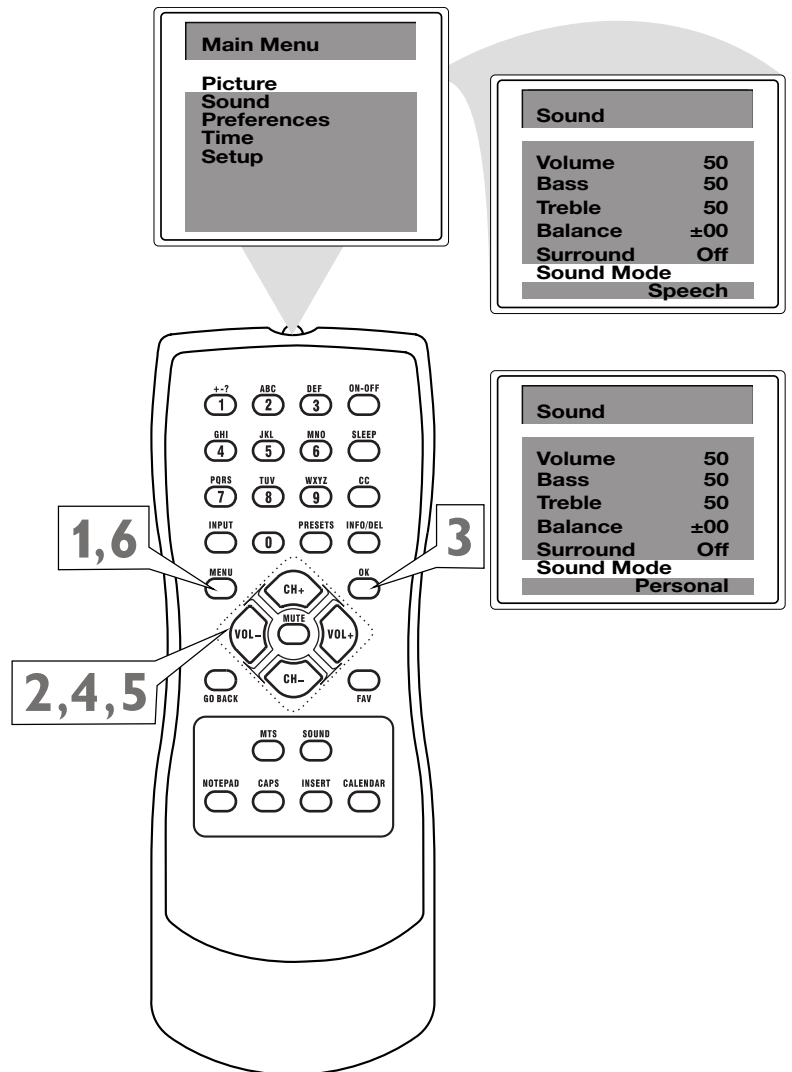


## Helpful Hints

You can choose a sound mode setting quickly by pressing the **SOUND** button on the remote control.

# Sound Adjustments

You can adjust the low frequency (Bass) or high frequency (Treble). You can also adjust the Balance to increase the volume of the left and right sound channels.

 - 1 Press **MENU** to see the main menu.
- 2 Press **CH+** or **CH-** to highlight **Sound**.
- 3 Press **OK** to enter the **Sound** submenu.
- 4 Press **CH+** or **CH-** to highlight **Volume**, **Bass**, **Treble** or **Balance**.
- 5 Press **VOL+** or **VOL-** to adjust the option.
- 6 Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

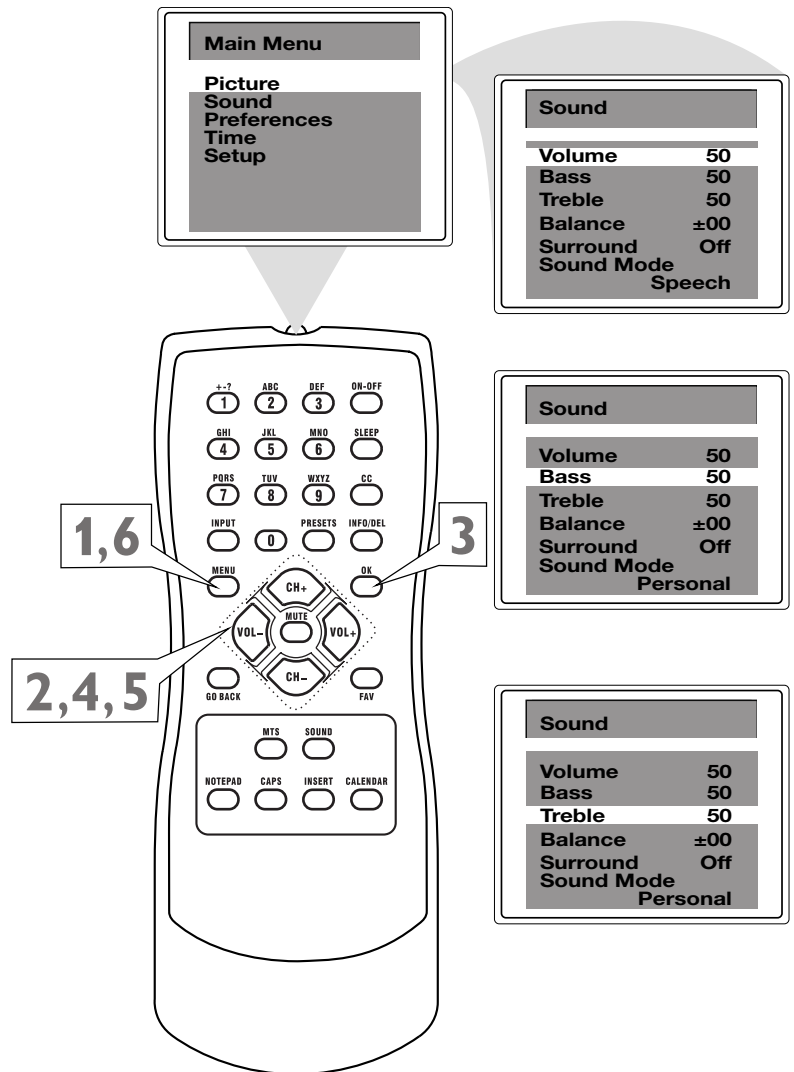

## Helpful Hints

 
**Bass:** Enhances the low frequency sounds.  
**Treble:** Enhances the high frequency sounds.  
**Balance:** Distributes the sound between the left and right speakers of the TV.



# Surround

When stereo signals are available, this function enhances the stereo spatial effect.

- 1** Press **MENU** to see the main menu.
- 2** Press **CH+** or **CH-** to highlight **Sound**.
- 3** Press **OK** to enter the **Sound** submenu.
- 4** Press **CH+** or **CH-** repeatedly to highlight **Surround**.
- 5** Press **VOL+** or **VOL-** to turn this option on or off.
- 6** Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

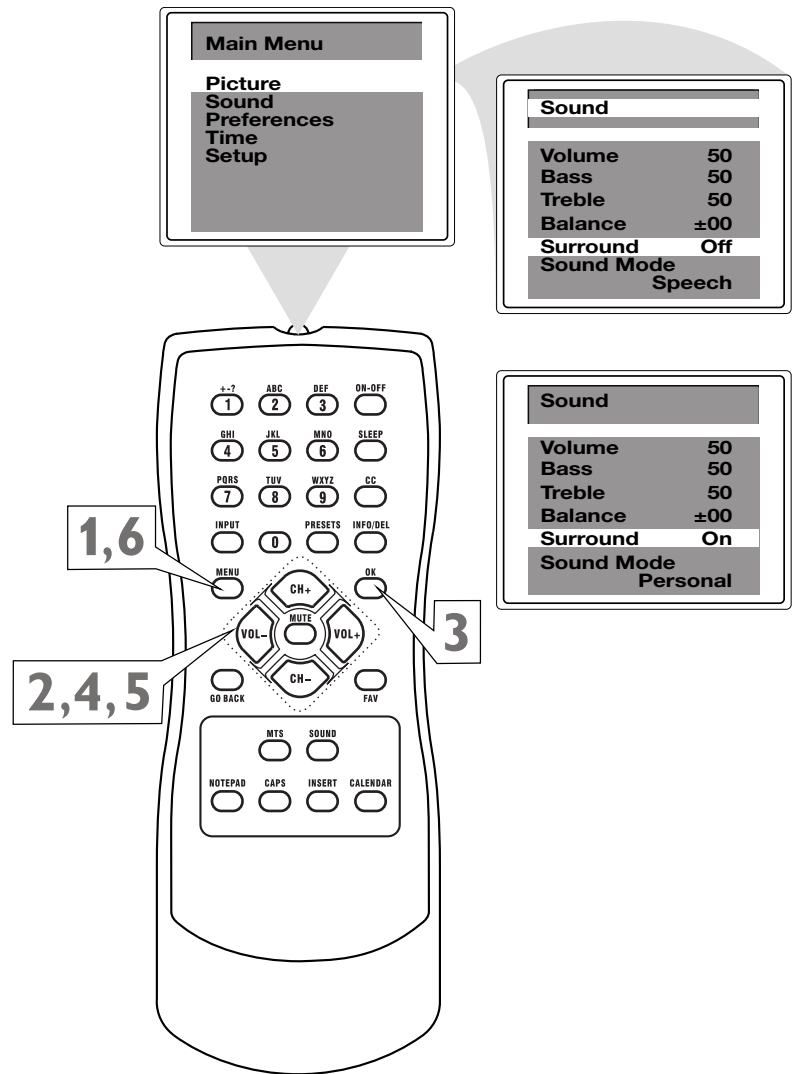

# Stereo and Second Audio Program

Multi-channel Sound (MTS) broadcasts enhance TV viewing by bringing you programs with high fidelity stereo sound. MTS also provides an extra channel called the Second Audio Program (SAP), which broadcasters can use to transmit a second language or for other purposes.

**1** Press **MTS** on the remote control to select **STEREO, MONO, or SAP**. All the options will be available only when the current TV channel is broadcasting that option. Channels will not always carry programs that have all the MTS options.

 
If **STEREO** appears on the screen when you select a channel, stereo broadcasting is available with the current TV program. You can hear sound from the left and right speakers of the TV.

If the broadcast is not strong or clear, stereo sound is not available. Press the **MTS** button to change to **MONO**. This should eliminate the noise.

If **MONO** appears on the screen when you choose a channel, Stereo is not available.

If **SAP** appears when you select a channel, Second Audio Program broadcasting is available for the current TV program.

Press the **MTS** button to choose **SAP** and you may hear the program in a different language or some other audio.

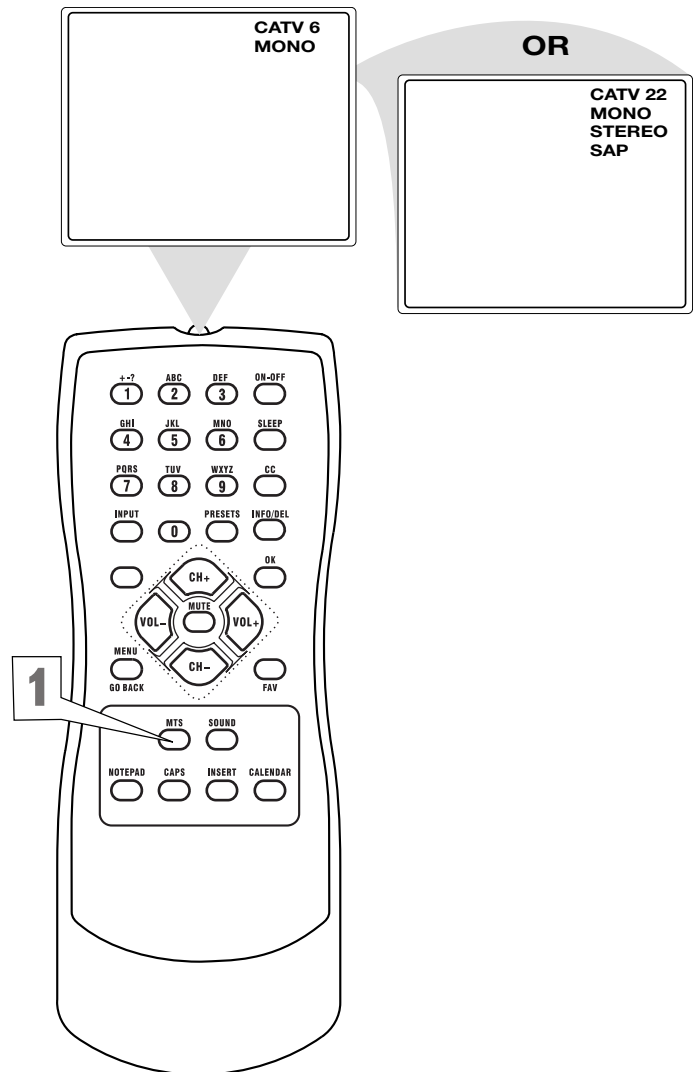






# Notebook


This feature enables you to store personal messages and can be used as a reminder.


- 1 Press **NOTEPAD** to display the notebook screen.
- 2 Press **CAPS repeatedly** to toggle the entry mode between uppercase or lowercase letters.
- 3 Use **number buttons** to enter letters, numbers, or some special symbols.
- 4 Press **DEL(ETE)** to delete the unwanted text.
- 5 Press **INS(ERT)** to select **INS(ERT)** or **OVR(overwrite)** on the screen, then use number buttons to insert or overwrite the letter or number in the text.

 
After finishing message inputting and editing, if you want to display the message when the TV is turned on, proceed with these steps:

- 6 Press **CH+/CH-** and **VOL+/VOL-** to select .
- 7 Press **OK** to turn  into , or vice versa.

-  If you select this icon, the notebook window with the stored message will be displayed on the screen first when the TV is turned on.
-  If you select this icon, the notebook window with the stored message will not be displayed on the screen when the TV is turned on.

If you want to display the message at a specified time, select the icon  and proceed with these steps:


- 8 Press **CH+/CH-** and **VOL+/VOL-** to select .
- 9 Press **OK** to turn OFF into AM 12:00.
- 10 Press **CH+ or CH-** to change the time in minutes. (**Press and hold CH+ or CH-** to change the time quickly in 10 minute increments.) e.g. AM 7:30, it means that the notebook window with stored message will be displayed on the screen automatically at AM 7:30. If the TV is in standby mode, the TV will be turned on automatically and display the message.
- 11 Press **OK** to save the settings, and "SAVING" appears on the screen. The Notebook screen will disappear automatically.

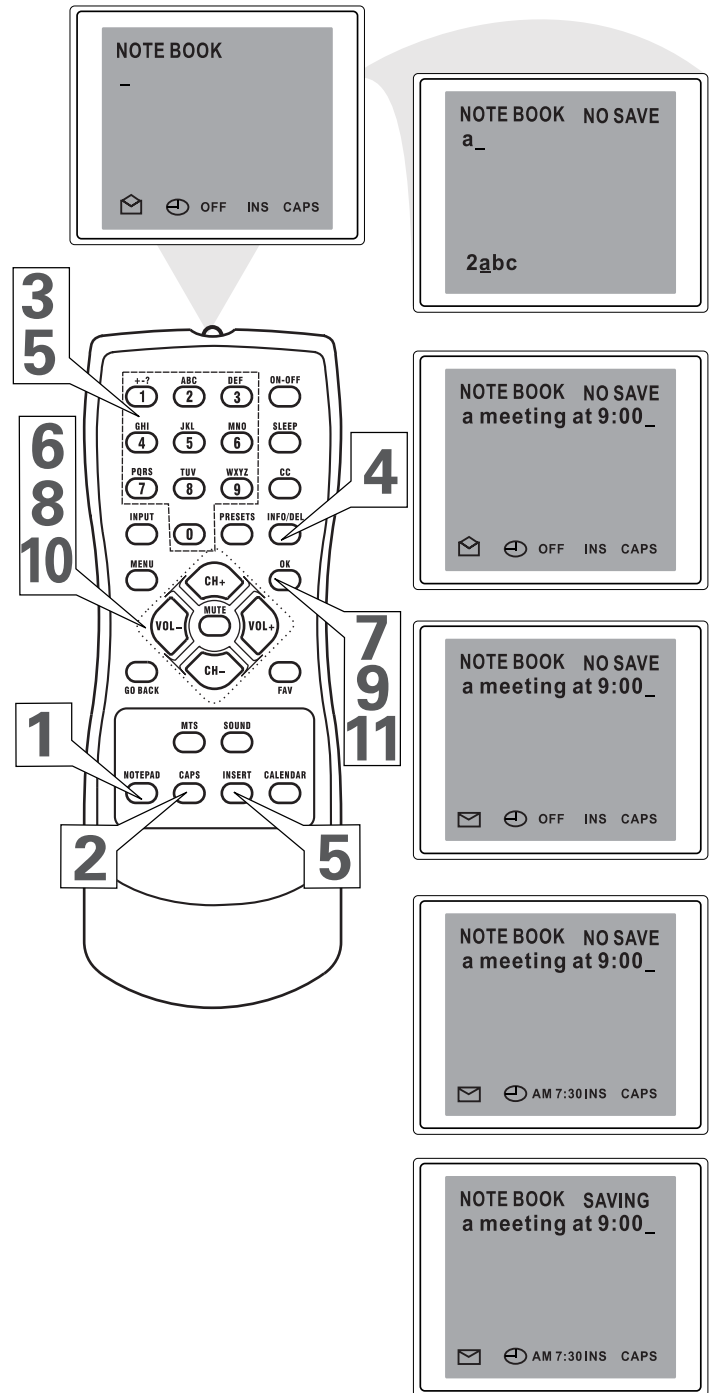

# Calendar

Calendar enables you to look up the date easily.

 - 1** Press **CALENDAR** to display the calendar.
- 2** Press **VOL+** or **VOL-** to display a previous or future month, e.g. MAY.
- 3** Press **CH+** or **CH-** to to display a previous or future year, e.g. 2004.
- 4** Press **MENU** repeatedly to exit the menu or the menu will automatically disappear within a few seconds if no buttons are pressed on the remote control.

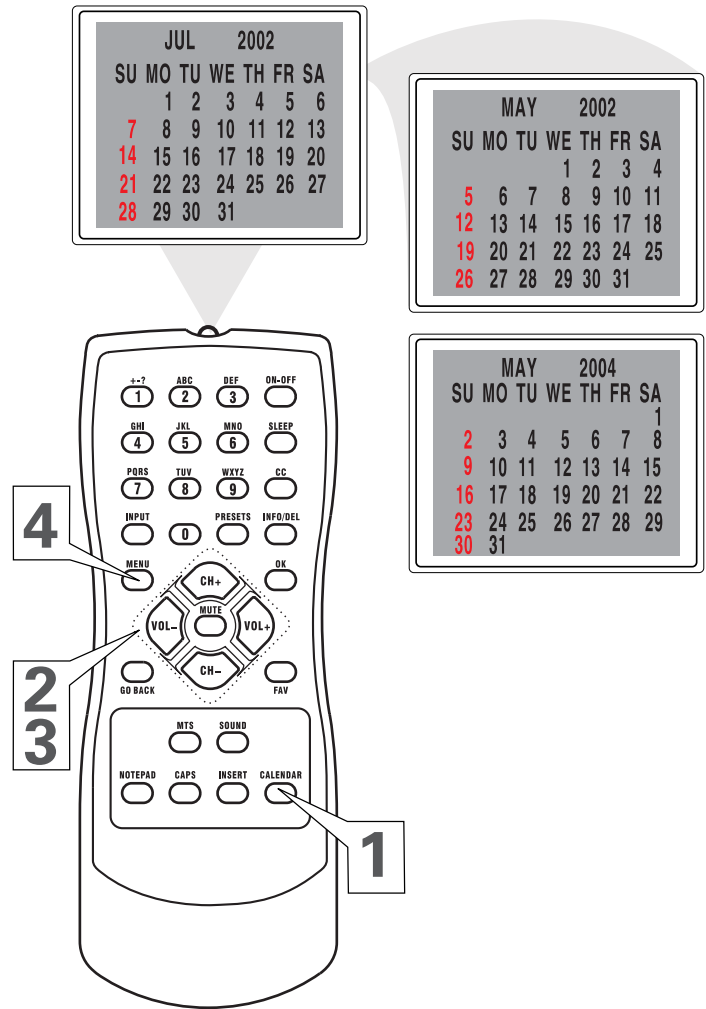

# Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

**Note for U.S. customers:** If you prefer, we can provide you with the name of an Authorized Service Representative who will visit your home for a fee to install your electronic entertainment system and to instruct you in its operation. For details about this service, call 1-888-206-3359. For additional assistance while using your RCA product, please visit [www.rca.com/customersupport](http://www.rca.com/customersupport).

## TV Problems

---

### TV won't turn on

- Make sure the TV is plugged in.
- Check the wall receptacle (or extension cord) to make sure it is "live" by plugging in something else.
- Something might be wrong with your remote control. Press the **POWER** button on the front of the TV. If the TV turns on, check the remote control.
- The Child Lock may be set. Go to page 29 for more information.

### Buttons don't work

- The Child Lock may be set. Go to page 29 for more information.

### TV turns off unexpectedly

- Sleep timer might have been activated. Go to page 23 for instructions.
- Off-Timer might have been activated. Go to page 21 for instructions.
- Electronic protection circuit may have been activated because of a power surge. If this happens frequently, the voltage in your house may be abnormally high or low.

### Blank screen

- You may be on an inactive channel. Try another channel.
- Make sure components connected to the TV are turned on.

### No sound, picture okay

- Maybe the sound is muted. Try pressing the volume up button to restore sound.
- If using S-Video or Y, Pb, Pr, remember to also connect the component's left and right audio output jacks to the TV's AUDIO jacks.

### Can't select certain channel

- Channel may be blocked or not approved through Parental Controls.
- If using a VCR, check to make sure the TV/VCR button on the VCR is in the correct mode (press the TV/VCR button on your VCR).

### Noisy stereo reception

- May be a weak station. Press MTS on the remote and choose **Mono** (instructions on page 33).

### No picture, no sound but TV is on

- Maybe the signal type is set wrong. Go to page 12 for more instructions.
- You may have the wrong video input channel selected. Go to the **INPUT** button description on page 10.

### Sound okay, picture poor

- Check antenna connections. Make sure all of the cables are firmly connected to the jacks.
- Try adjusting sharpness to improve weak signals. Go to page 17 for more instructions.

### Black box appears on the screen

- Closed caption might be on. Check CC in the Preferences menu. Go to page 22 for more instructions.

## The Remote Control Doesn't Work

---

- Something might be between the remote and the remote sensor on the component. Make sure there is a clear path.
- Maybe batteries in the remote are weak, dead or installed incorrectly. Put new batteries in the remote.

## Problems with Parental Controls

---

### Can't select a certain channel

- The channel may be blocked or not approved through Parental Controls.

### The rating limits don't work

- You must activate the settings. Go to the **MAIN MENU** (press **MENU** on your remote), select **Par. (Parental) Control** in the Preferences menu. Enter your password and turn on **Master Enable** (Go to page 28 for instructions).

### I don't remember my password and I want to unlock the TV

- If you forget your password you can reset it. Simultaneously press the **VOL+** on the remote and the **CH+** button on the front of the TV. The display will appear for you to enter your new password.

### The Parental Controls won't let me watch a program even though it's not rated as violent.

- Maybe the movie was given an NR (Not Rated) status. Check to see if **BLOCK NO RATING** is turned on in the **Par. (Parental) Control** menu. Go to page 26 for more instructions.

# Care and Cleaning

**CAUTION:** Turn OFF your TV before cleaning.

You can clean the TV as required, using a soft lint-free cloth. Be sure to occasionally dust the ventilation slots in the cabinet to help assure adequate ventilation.

The TV's screen may be cleaned with a soft, lint-free cloth as well. Take care not to scratch or mar the screen. If necessary, you may use a cloth dampened with warm water. Never use strong cleaning agents, such as ammonia-based cleaners, or abrasive powder. These types of cleaners will damage the TV.

While cleaning do not spray liquid directly on the screen, or allow liquid to run down the screen and inside the TV. Also, never place drinks or vases with water on top of the TV. This could increase the risk of fire or shock hazard or damage to the TV.

**Caution:** Using video games or any external accessory with fixed images for extended periods of time can cause them to be permanently imprinted on the picture tube (or projection TV picture tubes). ALSO, some network/program logos, phone numbers, etc. may cause similar damage. This damage is not covered by your warranty.

## Limited Warranty

**What your warranty covers:**

- Defects in materials or workmanship.

**For how long after your purchase:**

- 90 days from date of purchase for labor charges.
- One year from date of purchase for parts.
- Two years from date of purchase for the picture tubes.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

**What we will do:**


- Pay any Authorized RCA Television Service Center the labor charges to repair your television.
- Pay any Authorized RCA Television Service Center for the new or, at our option, refurbished replacement parts and picture tubes required to repair your television.

**How you get service:**

- For screen sizes of 26" and smaller: Take your RCA television to any Authorized RCA Television Service Center and pick up when repairs are complete.
- For screen sizes larger than 26": Request home or pick up, repair, and return service from any Authorized RCA Television Service Center, provided that your television is located within the geographic territory covered by an Authorized RCA Television Service Center. If not, you must take your television to the Service Center location at your own expense, or pay for the cost the Service Center may charge to transport your television to and from your home.
- To identify your nearest Authorized RCA Television Service Center, ask your dealer, visit [www.rca.com](http://www.rca.com), look in the Yellow Pages, or call 1-800-336-1900.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

**What your warranty does not cover:**

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your television. Any additional information should be obtained from your dealer).
- Installation and related adjustments.
- Signal reception problems not caused by your television.
- Damage from misuse or neglect.
- Batteries.
- Customer replacement fuses.

- 
- Damage from images burnt onto the screen.
  - A television that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
  - A television purchased or serviced outside the U.S.A.
  - Acts of nature, such as but not limited to lightning damage.

**Product registration:**

- Please complete and mail the Product Registration Card packed with your TV. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

**Limitation of Warranty:**

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY TTE TECHNOLOGY, INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. TTE TECHNOLOGY, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

**How state law relates to this warranty:**

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

**If you purchased your television outside the United States:**

- This warranty does not apply. Contact your dealer for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

**Visit the RCA website at [www.rca.com](http://www.rca.com)**

---

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

**TTE Technology, Inc.**

**10330 North Meridian Street**

**Indianapolis, IN 46290**

©2004 TTE Technology, Inc.

RCA and the RCA logos are trademarks of THOMSON S.A. used under license to TTE Technology, Inc.

Printed in USA

**TOCOM 1641312B**