

FCC Information

EN

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson multimedia Inc. could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

 
If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

For Your Safety



The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. **Do not attempt to bypass this safety feature.**

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

Model No. RP8070
Remote Control No.
Date of Purchase

 
Place of Purchase

Serial No.

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide

WARNING : TO PREVENT
FIRE OR ELECTRICAL
SHOCK HAZARD, DO NOT
EXPOSE THIS PRODUCT TO
RAIN OR MOISTURE.

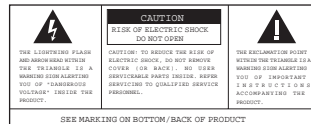



Contents

FCC/ Safety Information

First Things First 2

- Unpack the System 2
- Check for Moisture 2
- Choose a Location 2

Connections 3

- Connecting the CD player
to an amplifier 3

General Controls 4

- Main Unit 4
- VFD (Vacuum fluorescent display)
Messages 5
- Remote Control 6

Using the CD Player 7

- Loading Discs 7
- Playing Discs 7
- Shuffling Play Order 8
- Tracks Introduction 8
- Repeating Play Order 8
- Playing and Loading Discs
Simultaneously 8
- Programming Play Order 8
- Using ATS (Auto Track Skip) 9
- Creating an ATS Program 9
- CD DISPLAY MESSAGES 10

Using the Remote

Control 11

Troubleshooting Tips 12

Care and Maintenance 12


INDEX 13

Limited Warranty 14

EN

First Things First

 EN

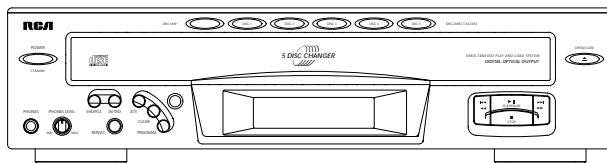

CONGRATULATIONS ON YOUR PURCHASE...

Congratulations on the purchase of your new 5 DISC CHANGER CD PLAYER !

Unpack

Remove all items including packing materials and wrappings from the pack. We recommend that you save the shipping carton and packing materials in case you want to store, transport, or ship the unit in future.

- Your new purchase/gift includes these items:
- one 5 DISC CHANGER CD PLAYER;
- one remote control;
- one audio cable;
- one user's guide.
- important safety leaflet;
- owner registration card.

Choose a Location

Follow the guidelines below when selecting a place to put your player:

- Choose a level and solid surface. Don't place it on a soft surface, such as carpeting or foam rubber.
- Make sure the location is away from direct sunlight, radiators, air ducts, and other sources of heat.

- Avoid locations that are subject to moisture, mechanical vibration, shock, or excessive dust.
- As good ventilation is essential to protect the CD player from internal heat build up, the selected location should have adequate air circulation.

Check for moisture

 
Moisture is your CD player's worst enemy. Do take note of some of the following situations in which condensation might form :

- Immediately after a heater has been turned on;
- In a steamy or very humid room;
- When the system is suddenly moved from a cold environment to a warm, moist one; for example, in moving the unit from a cool air conditioned room to an outside porch on a humid, summer day.

If moisture forms inside this player, it may not operate properly. To correct the problem, turn off the power and wait about 30 minutes for moisture to evaporate.

Connections

EN

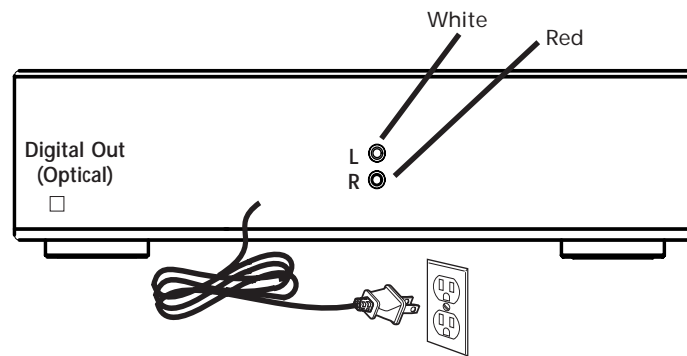

Connecting the CD Player to an amplifier

Prior to or during connections, the CD player should NOT be plugged to an AC power outlet.

1. Connect the cable's red plug to the CD player's red (R) output jack. Connect the white plug at the same end of the cable to the white (L) output jack of the CD player.
2. Repeat step 1 above for connecting the other end of the cable to an amplifier's (R) and (L) input jack.

Note: If the amplifier does not have input jacks labeled "CD", you can use input jacks labeled "AUX" (Auxilliary).

3. Plug the power cord of the CD player into an AC power outlet that accepts the polarized plug (one blade wider than the other) or use the AC outlet, if provided, at the back of your amplifier.

 
4. If your amplifier is equipped with optical input, connect it with an optical cable (not supplied, available at general audio shops) to your CD player to enjoy digital playback. By connecting a CD recorder or MD deck to your player with an optical cable (not supplied), you can make a digital recording from your CD player.

5. For analog device recording (such as a tape recorder), analog cables will be needed if the signal is sent through the amplifier.

IMPORTANT: The polarized plug is an important safety feature. It will fit into the power outlet only one way. If the plug won't go into the outlet completely, reverse it and try inserting it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

General Controls

EN

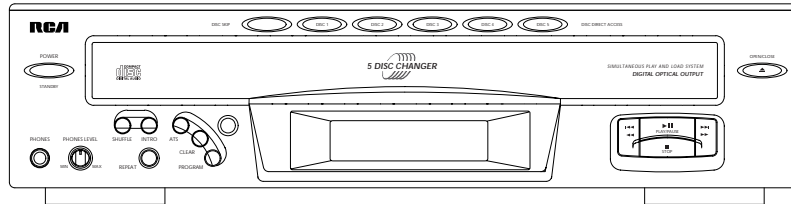

Main Unit

Power

Press this button to turn the player on and off.

Disc 1, disc 2, disc 3, disc 4, disc 5 Direct Disc Access

You can press these buttons to select one of the loaded discs on the CD compartment tray. With Direct Disc Access buttons, the selected disc is accessed and the unit plays the CD from track 1. The corresponding Direct Disc Access button will flash indicating the playing disc number.

Disc Skip

Press **DISC SKIP** to skip to the next disc on the tray without opening the CD compartment tray, the button flashes to indicate disc skip in progress. If the button is pressed while the tray is out and a CD is playing, the tray rotates clockwise or anti-clockwise for loading and unloading CDs.

Open/Close

Press this button to slide out or close the CD compartment tray automatically.

Program

The CD player can store up to 32 tracks in memory and play back the programmed tracks in the same sequence as you stored them.

Auto Track Skip (ATS)

ATS is the opposite of programmed play. Instead of programming the tracks you want to hear, you specify and store into memory those ones that you don't like hearing. You can block up to 32 tracks from playing.

Repeat

You can set the CD player to play repeatedly a track, a disc or all discs. Press **REPEAT** to toggle between these modes: **REPEAT 1**, **REPEAT 1 DISC**, **REPEAT ALL DISCS**, **ALL DISCS**.

Shuffle

Select this mode to randomize the order of track play. Randomization between discs depends on the selected repeat mode (see **REPEAT** above).

Stop ■

Press this button to end CD play mode. play/pause

Press once to begin CD play, press again to temporarily suspend play mode and a third time to resume play.

Play/Pause ►||

This button controls the CD play mode. Press once to begin CD play, press again to pause and a third time to resume play.

Clear

To clear the stored program in memory (either program play or ATS program), press and hold the button until the display shows **CLEAR** which indicates the memory is cleared and empty.

Intro

Use this feature to listen, in play mode, the first 10 seconds of each track on a disc.

General Controls

EN

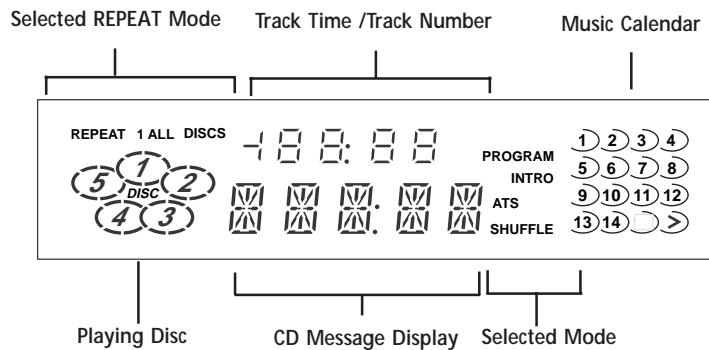 


Fig. 1 Vacuum Fluorescent Display



Press once to skip to the beginning of the next track or repeatedly to skip forward to the beginning of other tracks. Press and hold during play to search forward at high speed within the current track. Play resumes to normal when button is released.

Music Calendar

You can see at a glance how many tracks there are on the playing disc. A ">" appears if there are more than 14 tracks. In play mode, one of the numbers flashes to indicate the playing track; the ">" flashes for the track numbers greater than 14.



Press once to skip to the beginning of the current track or repeatedly to skip to previous tracks. Press and hold during play to search backward at high speed within the current track. Play resumes when button is released.

Have a Blast - Just Not in Your Ears!

Make sure you turn the volume down (towards MIN) on the unit before you put on headphones. Increase the volume to the desired level only *after* headphones are in place.



Phones Jack

Insert the plug of a headphone set (not included) into this jack for private listening.

Phones Level (for headphones)

When listening to music with headphones (not included), adjust this knob to your desired volume level.

Vacuum Fluorescent Display (VFD) messages

As you select various modes, the VFD shows the settings and current status of the unit. Fig.1 shows the majority of messages that may appear on display. Also refer to page 13 for more display messages.

General Controls

EN

Remote Control

POWER

Press to turn system on and off.

MUTE

Press once to silence sound output, press again to resume.

TRACK SEARCH

In play mode, press once to skip to the beginning of the playing track; press again/repeatedly to skip to the beginning of previous track(s). Press and hold to scan backwards through the playing track.

TRACK SEARCH

In play mode, press once to skip to the beginning of the next track; press again/repeatedly to skip to the next/ other track(s). Press and hold to scan forward through the playing track.

PLAY/PAUSE

Press once to play CD. Press again to temporarily suspend play mode. Play mode resumes upon another press of the button.

STOP

Press to end CD play mode.

REPEAT

Press to toggle between these modes: **ALL DISCS, REPEAT 1, REPEAT 1 DISC, and REPEAT ALL DISCS.**

DISC SKIP

 
Press once or repeatedly to skip to the next disc(s) in the CD compartment tray.

SHUFFLE

Press this button to play tracks in a randomized order. Randomization within one disc or among discs depend on the selected REPEAT mode.

VIDEO, TUNER, CD, TAPE, EQ PRESET, VOL < > PRESET, TUNING, SEEK

These buttons are not active for this model.

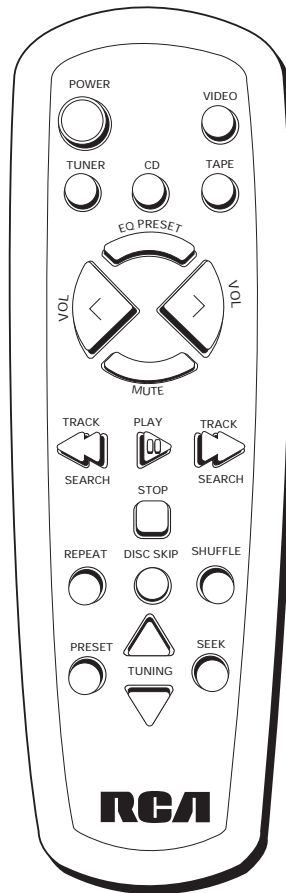

Using the CD Player

EN

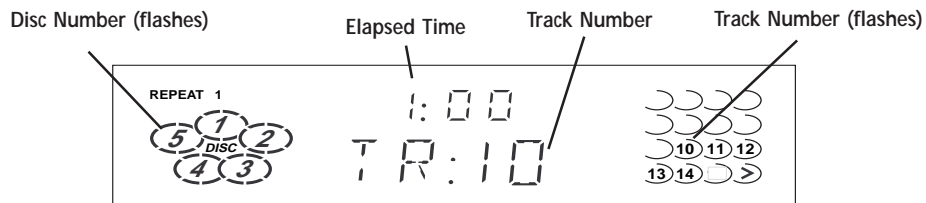 
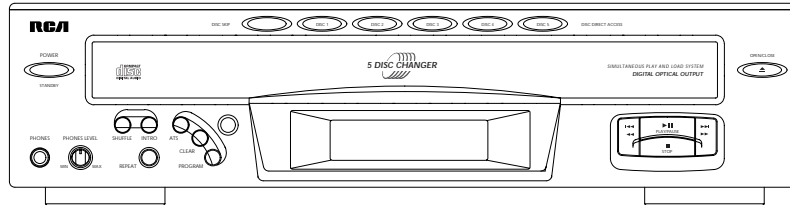 


Fig. 2

This section contains a set of step-by-step procedures on how to use your new *5 DISC CD CHANGER PLAYER*. Press **POWER** to turn on the unit, the display will show the "NO DISC" message. Select your favourite CDs and start loading!

Loading Discs

1. Press **OPEN/CLOSE** to slide out the CD compartment tray automatically.
2. Load one to five discs onto the tray.
3. Press **DISC SKIP** to rotate the tray for loading more CDs onto the other parts of the tray.
4. When you've finished loading, press **OPEN/CLOSE** to close the tray.

Playing Discs

Now you can select a disc by pressing one of the **DISC DIRECT ACCESS** buttons or press **DISC SKIP**. After you have made your selection, the unit starts playing from track 1. The display shows a flashing disc number, track number, elapsed time of track play, a flashing track number, and a flashing Direct Disc Access button indicating the playing disc. (Also refer to Fig. 2) Press **STOP** to end CD play mode.

Using the CD Player

EN

Shuffling Play Order

Select the **SHUFFLE** feature to randomize the order of track play.

1. Press **SHUFFLE** to start random track play. The display shows **SHUFFLE** in red to indicate activation of shuffle mode.
2. Press **SHUFFLE** a second time to de-activate the function.

Note: Shuffling tracks among discs depends on the selected **REPEAT** mode. (see Repeating Play Order)

Tracks Introduction

This feature is most useful for newly purchased CDs. You can listen to the first ten seconds of each track as brief introduction. In play mode, press **INTRO** once, **INTRO** lights up at the selected mode section on the display. To de-activate, press **INTRO** again and the unit begins playing track 1 of the disc.

Repeating Play Order

You can repeat one track, one disc or all discs. You can toggle between various modes.

Providing that the display shows **ALL DISCS**:

1. Press **REPEAT** once to play a specific track on a particular disc over and over. The display shows **REPEAT 1**.
2. Press **REPEAT** a second time and the display shows **REPEAT 1 DISC**. With this mode selected, the CD player plays the selected disc repeatedly from start to finish.
3. Press **REPEAT** a third time, the display shows **REPEAT ALL DISCS**. Selecting this mode sets the unit playing all loaded discs repeatedly.

Repeating a Program

When you program tracks into memory, you can repeat playing the program by pressing **REPEAT** after the program begins playing.

Playing and Loading Discs Simultaneously

You can open the CD compartment tray without interrupting the playing music. Simply press **OPEN/CLOSE** once to slide out the tray. While the disc is playing, you can change the rest of the four discs by pressing **DISC SKIP** to rotate the tray clockwise and anti-clockwise to load

and unload CDs. Press **OPEN/ CLOSE** again to close the tray. To play or select disc, refer to the section on Playing Discs.

Programming Play Order

You must be in Stop mode to program/store your desired track sequence.

1. Press **PROGRAM**.
2. Press **DISC SKIP** or one of the Disc Direct Access buttons to choose a disc.
3. Press **I◀◀** or **▶▶I** to choose a track.
4. Press **PROGRAM** to save the selected track number into memory.
5. Repeat the above steps 2 to 4 for programming up to 32 tracks.
6. Press **PLAY/PAUSE** to begin programmed play.

Recalling and Editing the Program

You must be in Stop mode in order to recall and edit the program.

1. Press **PROGRAM** to enter Program mode.
2. Press **PROGRAM** to the next program number until you get to the programmed track you want to change.
3. Press **DISC SKIP** to choose the disc and then press **I◀◀** or **▶▶I** to choose a replacement track.
4. Press **PROGRAM** to change the current programmed track to the one you just selected.

Playing the Program

To play your programmed tracks, press **PROGRAM** then **PLAY/PAUSE**.

Clearing the Program

You cannot select tracks within a program to clear. Upon completion of the following steps, the entire program will be cleared.

1. Press **PROGRAM** to enter Program mode.
2. Press and hold the **CLEAR** button until **CLEAR** shows in the display. If the program is already empty, **EMPTY** will show in the display.

Using the CD Player

EN

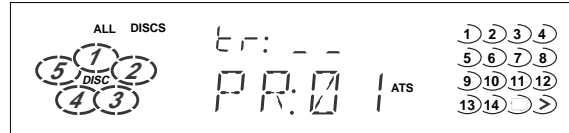 


Fig. 3

Using Auto Track Skip (ATS)

ATS is the opposite of programmed play. Rather than programming into memory the tracks that you want to hear, with ATS you set the unit to skip those tracks that you don't like.

Clearing the ATS Program

Clearing the ATS program is also a lot like clearing a regular program.

1. Press **ATS**.
2. Press and hold **CLEAR** until **CLEAR** shows on the display.

Creating an ATS Program

1. Press **ATS** to activate the feature. The VFD display will be similar Fig. 3 with a flashing disc number and “_ _”.
2. Press **DISC SKIP** to choose a disc.
3. Press **◀◀** or **▶▶** to choose the first track to be skipped.
4. Press **PROGRAM** to add the selected track to the ATS program.
5. Repeat the preceding steps to add more tracks to the ATS program.
6. Press **PLAY/PAUSE** to begin playing the ATS program.

Recalling and Editing the ATS Program

Editing the ATS program is a lot like editing a regular program.

1. Press **ATS** to go to Auto Track Skip mode.
2. Press **PROGRAM** to move to the next program number until you get to the programmed track you want to change.
3. Press **DISC SKIP** to choose the disc, and then press **◀◀** or **▶▶** to choose a replacement track.
4. Press **PROGRAM** to change the current skipped track to the one you just selected.

Using the CD Player

EN

CD Display Messages

When using the CD function, you may encounter the following messages:

C L O S E

CD compartment tray is in.

O P E N

CD compartment tray is out.

N O D I S C

No disc is loaded onto the CD compartment tray.

E M P T Y

No tracks are programmed (applies to both Program and ATS mode).

F U L L

Program is full (applies to both Program and ATS mode).

R E A D

Reading disc's table of contents (how many tracks there are and the total time for the disc). This information is displayed when the unit is in Stop mode.

C H D I S C

Disc change in process.

S T D B Y

Unit is in Standby mode

E R R O R

Obstruction to the opening and/ or closing of CD compartment tray. (Prevent obstruction and press **OPEN/ CLOSE** to close tray.)

 
M U T E

Sound output of the unit is temporarily suspended. (Press **MUTE** on the remote control to cancel Mute.)

Using the Remote Control


EN

Open the battery compartment lid. Insert 2 AAA-size batteries with the correct polarities by following the engraved diagram in the compartment. Replace and close the lid. Refer to the button-by-button description of the remote control on page 6. Now you can operate the unit from a distance!

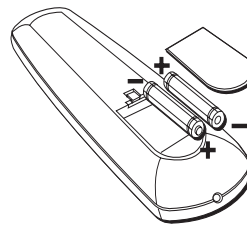

"...don't point, it's rude!" But... with a remote control, you MUST!

 The remote control works by line-of-sight, which means you should aim and point the remote directly at the front of the unit so that the sensor on the unit senses the transmission from your remote.

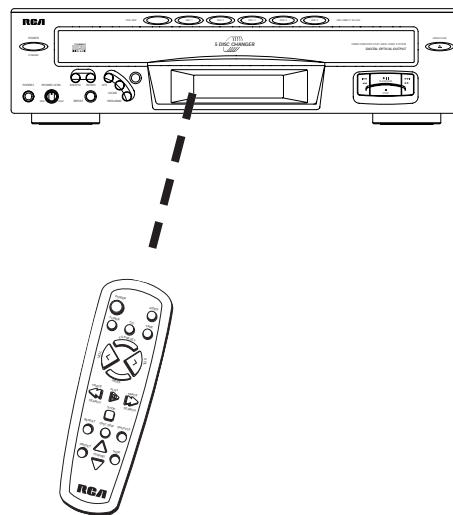

11

Troubleshooting Tips

EN

Problem	Solution
CD Player doesn't turn on	<ul style="list-style-type: none">• Make sure power cord is securely plugged into the AC power outlet.• Unplug the unit for a moment, then plug it back in.• Check the outlet by plugging in another device.
No sound	<ul style="list-style-type: none">• Ensure that a disc is loaded on the CD compartment tray.• Adjust volume setting.• Check for proper connection of cables between speakers and amplifier and CD player.• Make sure volume is not muted. To de-activate, press MUTE on the remote control.
CD Player doesn't play	<ul style="list-style-type: none">• Make sure the tray contains at least one disc.• Make sure that discs' labels are facing up.• Make sure that Pause mode is not activated.
CD sound skips	<ul style="list-style-type: none">• Clean the disc (refer to Care and Maintenance).• Clean the CD lens with lens cleaner.• Check disc for warping, scratches, or other damage.• Ensure that the CD player is placed on a solid and level surface.• Check for vibrations or shock that may affect the CD player. Move the CD player to another location if necessary.
Remote control doesn't work	<ul style="list-style-type: none">• Make sure the CD player is plugged into a working AC outlet.• Make sure that the batteries are correctly installed in the remote control.• Replace weak batteries (DO NOT mix old batteries with fresh ones, it can cause damage to the remote control).• Point the remote directly at the front of the unit when pressing the buttons.• Move closer to the CD player with the remote control.• Make sure that there are no obstacles between the remote and the unit.

Care & Maintenance

Cleaning the Exterior

Disconnect the system from AC power before cleaning the exterior of the system with a soft clean cloth.

Handling Compact Discs

- Do not touch their signal surfaces. Hold by the edges, or by one edge and the hole.
- Do not affix labels or adhesive tape to the label surfaces. Also, do not scratch or damage the label.
- Discs rotate at high speeds inside the player. Do not use damaged (cracked or warped) discs.

Cleaning Compact Discs

- Dirty discs can cause poor sound quality. Always keep discs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a disc becomes very dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
- Do not use record cleaning sprays or antistatic agents on discs. Also, never clean the discs with benzene, thinner, or other volatile solvents which may cause damage to the disc surface.

Index

A

AC power outlet 3
Amplifier 3
ATS (Auto Track Skip) 4
Auxiliary 3

C

Cables 2,3
Care and maintenance 12
CD display messages 10
Cleaning compact discs 12
Clearing 4
Clearing the program 8
Clearing the ATS program 9
Connections 3
Creating an ATS program 9

D

Digital Optical Output 3
Direct disc access 4
Disc Skip 4, 6

H

Handling compact discs 12

I

Input jack 3

L

Limited Warranty 14, 15
Loading Discs 7
Locations 2

M

Main Unit 4
Moisture 2
Music Calendar 5
Mute 6

O

Open/close 4

P

PHONES (jack) 5
Phones level 5
PLAY/PAUSE 4, 6
Playing discs 7
Polarized Plug 3
POWER 4, 6
Program 4
Programming play order 8

R

Recalling and editing program 8
Recalling and editing ATS program 9
Remote control 6, 11
Repeat 4, 6, 8

S

Shuffle 4, 6, 8
Stop 4, 6, 8

T

Track Search 6
troubleshooting Tips 12

U

Unpack 2

V

Vacuum Fluorescent Display 5

EN



Limited Warranty (For U.S.)

EN

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase for labor and parts
- Warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Pay any Authorized RCA Audio Service Center the labor charges to repair your unit.
- Pay any Authorized RCA Audio Service Center for the new or, at our option, refurbished replacement parts required to repair your unit.

How you get service:

- Take your unit to any Authorized RCA Audio Service Center. To identify your nearest Authorized RCA Audio Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your evidence of purchase date or first rental.
- Pick up your unit when repairs are completed.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your unit.
- Damage from misuse or neglect.
- Cleaning of audio heads.
- Batteries.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A unit purchased or serviced outside the U.S.A.

Product Registration:

- Please complete and mail the Product Registration Card packed with your product. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.



Limited Warranty (For U.S.)

EN

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How State Law relates to warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your unit outside the United States:

- This warranty does not apply. Contact your dealer for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.



Limited Warranty (For Canada)

EN

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase for labor and parts
- The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Pay any Authorized RCA Audio Service Center the labor charges to repair your unit.
- Pay any Authorized RCA Audio Service Center for the new or, at our option, refurbished replacement parts required to repair your unit.

How you get service:

- Take your unit to any Authorized RCA Audio Service Center. To identify your nearest Authorized RCA Audio Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your evidence of purchase date or first rental.
- Pick up your unit when repairs are completed.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

What your warranty *does not* cover:

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your unit.
- Damage from misuse or neglect.
- Cleaning of audio heads.
- Batteries.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A unit purchased or serviced outside Canada.
- Acts of nature, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your product. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.



Limited Warranty (For Canada)

EN

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA LTD., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA LTD. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE PROVINCIAL LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How Provincial Laws relates to warranty:

- This warranty gives you specific legal rights which are in addition to statutory warranties that may vary from province to province.

If you purchased your unit outside Canada:

- This warranty does not apply. Contact your dealer for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.