




5-in-1 Family Favorites Remote

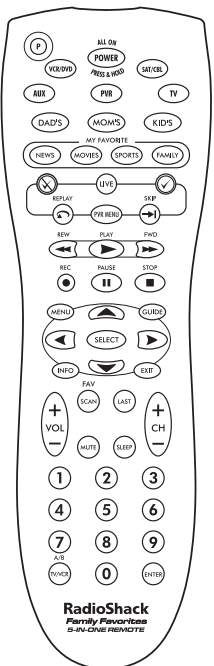

USER GUIDE

INTRODUCTION

Thank you for purchasing a **RadioShack** 5-1 Family Favorites Remote. Your remote lets you control up to five home entertainment devices with one easy-to-use, compact unit. You can set up different groups of family favorite channels—one for Mom, one for Dad, and one for the kids.

After installing batteries (see next section), you can immediately use the **RadioShack** 5-1 Family Favorites Remote to control an RCA TV, DVD player, and satellite receiver. To control other brands, perform the instructions in "Programming a Device". For best results, please read and perform all the remaining instructions. Also, keep this guide for future reference.

INSTALLING BATTERIES

Your **RadioShack** 5-1 Family Favorites Remote requires four AAA batteries (not supplied) for power.

Battery Use And Safety

- Use only fresh batteries of the required size and recommended type.
 - Do not mix old and new batteries, different types of batteries (that is, standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- CAUTION:** If you do not plan to use the remote for an extended period, remove the batteries. They can leak chemicals that can destroy electronic parts.
- WARNING:** Dispose of old batteries promptly and properly. Do not burn or bury them.

To Install Batteries:

1. Open the battery compartment cover (located on the back of the remote).
2. Place the AAA batteries in the compartment and match the + and - polarity symbols inside.
3. Replace the cover.

NOTE: When the **RadioShack** 5-1 Family Favorites Remote stops operating properly, replace the batteries within 10 minutes to protect the programming information.

A QUICK LOOK AT THE CONTROLS

Press this key...	To...
	Increase or decrease the sound level.
	Turn the sound off or on.
	Switch the TV's, VCR's, SAT's, or DVD's input to view TV or video programs, or act as your cable box's A/B switch.
	Recall the last-viewed channel.
	Scan favorite channels (and/or all channels). See "Programming Favorite Channel Scan" and "Using Channel Scan".
	Directly enter channels (for example, 09 or 31).
	Input channel number entries on some TV models or make a selection on a VCR's menu.
	Control your VCR, DVD player, or Video On Demand (VOD) if available on your cable/satellite service.
	Control the functions of your PVR.
	Record a video program on a record-capable device (press twice).

Press this key...	To...
	Increase or decrease the sound level.
	Turn the sound off or on.
	Switch the TV's, VCR's, SAT's, or DVD's input to view TV or video programs, or act as your cable box's A/B switch.
	Recall the last-viewed channel.
	Scan favorite channels (and/or all channels). See "Programming Favorite Channel Scan" and "Using Channel Scan".
	Directly enter channels (for example, 09 or 31).
	Input channel number entries on some TV models or make a selection on a VCR's menu.
	Control your VCR, DVD player, or Video On Demand (VOD) if available on your cable/satellite service.
	Control the functions of your PVR.
	Record a video program on a record-capable device (press twice).

PROGRAMMING A DEVICE

The **RadioShack** 5-1 Family Favorites Remote comes pre-programmed to operate an RCA TV, DVD player, and satellite receiver. To control devices other than those default brands, follow these steps; otherwise, skip this section.

Before proceeding, find the codes for the devices you want to program in Manufacturer's Codes and write them down or highlight them.

NOTE:

To program a TV/DVD, TV/VCR/DVD, or TV/VCR Combo, use the **TV** or **AUX** mode key. To program a Personal Video Recorder (PVR), use the **PVR** or **Program** key. If you have a VCR/DVD combo, you may need to set up both a VCR and DVD code.

1. Turn on the device (for example, DVD player) and, if needed, load media (for example, a DVD).
2. On the remote, press a device key (that is, **AUX**, **VCR/DVD**, **SAT/CBL**, **PVR**, or **TV**).
3. Press and hold **P** until the LED blinks twice, then release.
4. Enter the first four-digit code for your device. The LED blinks once as you enter each digit. If the code is correct, the LED blinks twice.
5. If the LED does not blink twice, repeat steps 2 to 4 and try entering the code again.

Aim the remote at the device and press **Power** (or **PLAN**, if it does not have a **Power** key). The device should turn off. If it does not, repeat steps 2 to 5, trying each code for your brand until you find one that works. If you cannot find a code that works, see "Searching for Your Code".

6. Repeat steps 1 to 5 for each device you want to control. For future reference, write down each working device code in a safe place.

SEARCHING FOR YOUR CODE

If your device does not respond to the remote after trying all codes listed for your brand, or if your brand is not listed, try searching for your code. For example, to search for a code for your TV:

1. Press **TV** once.
 2. Press and hold **P** until the LED blinks twice, then release.
 3. Enter **9 9 1**. The LED blinks twice.
 4. Aim the remote at the TV and press **Power**. The remote sends IR codes from its library to the selected device, starting with the most popular code first.
 5. If the TV responds, go to step 6. If the TV does not respond, press **CH+**. The remote tries the next code. Continue to press **CH+** until the TV responds.
- NOTE:** Press **CH-** to try the previous code.
6. To lock in the code, press **P** once. The LED blinks twice.
 7. To search for other device codes, repeat steps 1 to 6, substituting the appropriate device key.

CHECKING THE CODES

If you have set up the remote using the procedure in "Searching for Your Code", you may want to learn which four-digit code is operating your equipment. For example, to find out which code is assigned to your TV:

1. Press **TV** once.
2. Press and hold **P** until the LED blinks twice, then release.
3. Enter **9 9 0**. The LED blinks twice.
4. To view the code for the first digit, press **1**. Count the LED blinks (for example, three blinks = 3), and write down the number.
5. If a code digit is 0, the LED does not blink.
6. If a code digit is 0, the LED does not blink.
7. Repeat step 4 for the three remaining digits, using 2 for the second digit, 3 for the third digit, and 4 for the fourth digit.
8. To check for other device codes, repeat steps 1 to 5, substituting the appropriate key for each device you are checking.

REASSIGNING DEVICE KEYS

You can set the remote to control a second TV, DVD player, or other device (see Manufacturer's Codes). For example, if you have two DVD players, but no PVR, and you wish to control both DVD players with the remote, you can reassign the unused **PVR** key to the DVD player:

1. Press and hold **P** until the LED blinks twice, then release.
2. Enter **9 9 2**. The LED blinks twice.

3. Press **VCR/DVD**, then **PVR**. The LED blinks twice. The **PVR** key is now ready to be programmed as your second DVD player. (see Programming A Device).

To reassign other device keys to the **PVR** key, repeat steps 1 to 3 above, substituting **TV** or **SAT/CBL** for **DVD** in step 3. To use another unused device key, substitute the desired key for the **PVR** key in step 3.

To clear a reassigned mode and reset it to its original device type, perform steps 1 and 2 above, then press the mode to be cleared twice. The LED blinks twice.

PROGRAMMING FAVORITE CHANNEL SCAN

The remote allows you to store a list of up to 10 favorite channels, in any order, that are immediately scanned when you press **FAV** (**SCAN**).

NOTE: You can only store channels from one device for Favorite Channel Scan.

1. Press a device key (**TV**, **VCR**, **CBL/SAT**, **AUX**, or **PVR**).
 2. Press and hold **P** until the LED blinks twice, then release.
 3. Enter **9 9 6**. The LED blinks twice.
- NOTE:** If you use 5-digit channel numbers or 4-digit channel numbers and **Enter**, you do not have to press **P** between the channel numbers.
4. Enter the first channel number using the number keys (for example, **031**).
 5. Press **P** (if your device requires that you press **Enter** after entering a channel number, then do so instead of pressing **P**).
 6. Enter the next channel number (for example, **055**).
 7. Press **P** (if your device requires that you press **Enter** after entering a channel number, then do so instead of pressing **P**).
 8. Continue entering channel numbers followed by **P** (or **Enter**) until you get up to 10 channels programmed.
 9. As soon as you enter the 10th channel, the remote automatically exits the programming mode (if you decide you need fewer than 10 channels, then exit programming by pressing and holding **P** until the LED blinks twice).

NOTE: If you try entering more than 10 channels, or if more than 10 seconds elapse between key presses, the remote automatically exits programming mode.

NOTE: If you have entered fewer than 10 favorite channels and wish to add more, you need to re-enter all of the channels.

NOTE: If you have programmed 10 favorite channels, you need to reset Favorite Channel Scan to program new channels (see "Resetting Favorite Channel Scan Programming").

Resetting Favorite Channel Scan Programming

1. Press the device key (**TV**, **VCR**, **CBL/SAT**, **AUX**, or **PVR**).
2. Press and hold **P** until the LED blinks twice, then release.
3. Enter **9 9 6**. The LED blinks twice.
4. Press and hold **P** until the LED blinks twice. Favorite Channel Scan programming is now reset. When you press **SCAN**, the remote changes the channel to the next channel up. Pressing **SCAN** is the same as pressing channel up.

USING CHANNEL SCAN

Use **FAV** (**SCAN**) to start a three-second scan of all favorite channels (if programmed; see "Programming Favorite Channel Scan") or all channels (if Favorite Channel Scan is not programmed).

1. Press a device key.
2. Press **SCAN** once.
 - If Favorite Channel Scan has been set up, the device scans favorite channels, and then continues to scan all channels for the device.
 - If Favorite Channel Scan has not been set up, scanning starts with the current channel.
3. To stop scanning channels at any time, press any key once.

SETTING FAMILY FAVORITES

Your new **RadioShack** 5-1 Family Favorites Remote includes four genre keys (News, Movies, Sports, and Family) that can be customized for each of three users (Mom, Dad, and the kids). This allows each family member to set up and scan their favorite channels. You can include up to three channels for each genre key.

1. Press and hold **P** until the LED blinks twice, then release.
 2. Press **9 9 5**. The LED blinks twice.
 3. Press a user key (e.g., **Mom's**).
 4. Press a genre key (e.g., **News**).
 5. Press the device key that controls your channels (e.g., **TV**), followed by the desired channel number, up to 5 channel digits.
- NOTE:** If your device requires you to press **Enter** after channel numbers, you must press it after entering your channel number when programming. If you use the **Enter** key, you can only enter up to 4 channel digits.
6. Press and hold **P** for three seconds. The LED blinks twice.
 7. Repeat steps 1-6 for each channel to be included. If you enter more than three channels, the first channel is overwritten.

NOTE: If you have entered fewer than three channels and wish to add more, you must re-enter all of the channels for the selected user and genre.

To clear a genre key, follow steps 1-6 above, but do not enter a mode or channel at step 5.

USING FAMILY FAVORITES

To access **Mom's**, **Dad's**, or **Kid's** programmed favorite channels:

1. Press the user key (**Mom's**, **Dad's**, **Kid's**).
2. Press the genre key (e.g., **Sports**). The remote now accesses the 1st channel programmed for the selected user and genre.
3. Press the genre key again. Each press of the genre key accesses the next channel programmed for the selected user.

SETTING THE POWER MACRO

You can use your new **RadioShack** 5-1 Family Favorites Remote to simply turn on a particular device, or you can set up the **Power** key to perform several actions. For example, you could program the **Power** key to turn on both your TV and cable box and select a particular channel.

- To set the **Power** macro:
1. Press and hold **P** until the LED blinks twice, then release.
 2. Press **9 9 5**. The LED blinks twice.
 3. Press **Power**.
 4. Enter the series of commands you want the macro to execute (up to 15 commands).

Haier	1034
Hallmark	0178
Harley Davidson	1094
Harrman/Kardon	0054
Harvard	0180
Havermy	0093
Hellow	0865
Heilo Kitty	0451
Himbas	0180
Hionee	0748

Hitachi	0016, 0032, 0036, 0145, 0409, 1145, 1904
Infinity	0054
Insignia	1238
Insignia	0017
Intell	0015, 0797
JBL	0054
JCB	0000
Jensen	0761, 0813, 0817
JVC	0035, 0731, 1253
KEC	0180
Kenwood	0019, 0030
KHL	0765, 0767
Kool	1262
KTV	0030, 0039, 0180
Lc	0178, 0700, 0856, 1178, 1265
Lloyd's	0104
Logik	0006
Luxman	0056
LXI	0047, 0054, 0134, 0156, 0178, 0747
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	0015, 0303, 0315, 0797, 0883
RCA	0021
Realistic	0207
Riano	0000
Samsung	0144
Pulsar	0000
Quasar	0000
RadioShack	