OPERATING INSTRUCTIONS EA Electronic Safe

- > Open safe using emergency key provided.
- Insert batteries in the box inside the door.
- ➤ Opening the Safe Pre-set factory code "159"

Input "159" (the yellow light will "flash & the buzzer will "beep"), then press B or A button, the green light will be on, rotate the knob clockwise, pull outwards, the door is opened.

Closing the Safe

Close the door, input the code (the green light will "flash" for 5 seconds). Turn the knob anti clockwise, the control system will activate and the Safe will be locked.

Changing the Code

Open the Safe, Press the Red button located inside the door, the yellow light will go on indicating the code can be changed. Input the new code (1-8 digits), then press A or B button, it shall be confirmed by two "beeps" indicating the new code has been accepted & stored. If the yellow light & Buzzer "beeps" 3 times the code is invalid - try again.

Emergency Key - store in a secure place not inside the safe
Remove the override cover in the centre of the face of Safe, insert override
key & turn anti clockwise, rotate the knob clockwise to open the door.

> Changing the Battery

If the Red & Green light are on this indicates the Batteries are low and require changing. To ensure the batteries have been installed correctly test before closing the door.

Note: Do not leave your emergency keys inside the Safe!