

GT-B7330

user manual



SAMSUNG

using this manual

This user manual has been specially designed to guide you through the functions and features of your device. To get started quickly, refer to the quick start guide.

Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:



Warning—situations that could cause injury to yourself or others




Caution—situations that could cause damage to your device or other equipment



Note—notes, usage tips, or additional information

- ▶ **Refer to**—pages with related information; for example: ▶ p. 12 (represents "see page 12")

- **Followed by**—the order of options or menus you must select to perform a step; for example: Press <Start> → <More> → **Windows Media** (represents **Start**, followed by **More**, followed by **Windows Media**)
- [] **Square brackets**—device keys; for example: [] (represents the End/Power key)
- < > **Angled brackets**—softkeys that control different functions at each screen; for example: <**Select**> (represents the **Select** softkey)

Copyrights and trademarks

Rights to all technologies and products that comprise this device are the property of their respective owners:

- This product includes software licensed from MS, an affiliate of the Microsoft Corporation. Microsoft and software bearing the Microsoft name are registered trademarks of the Microsoft Corporation.
- Java™ is a trademark of Sun Microsystems, Inc.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. Bluetooth QD ID: B015816
- Windows Media Player® is a registered trademark of Microsoft Corporation.
- Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

CE 0168!

contents

safety and usage information	1
Safety warnings	1
Safety precautions	4
Important usage information	6
quick start guide	12
Unpack	12
Phone layout	13
Keys	14
Icons	15
Assemble and prepare your device	16
Turn on your device on and off	19
Work with applications	20
Use basic call functions	21
Send and view text messages	22
Add and find contacts	23
Use basic camera functions	24
Listen to music	25
Customise your device	27
Download applications from the web	28

communication	29
Calls	29
Messaging	30
media	34
Camera	34
Contents Manager	38
Photo Slides	40
FM Radio	41
Streaming Player	43
Audio Notes	43
Voice Notes	44
personal productivity	45
Contacts	45
Calendar	46
Anniversary	47
Office Mobile	47
Adobe® Reader LE	50
Tasks	50
Smart Reader	51

web	53
Internet Explorer	53
Messenger	54
RSS Reader	55
Podcast	57
Communities	58
Fring™	59
Microsoft My Phone	59
Search Widget	59
connectivity	60
Wi-Fi	60
Bluetooth	61
USB	63
ActiveSync	64
Internet Sharing	66
Connections	67
additional programs	69
Games	69
Java	69

World Clock	70
Alarms	70
Calculator	71
Tip Calculator	71
Smart Converter	71
StopWatch	72
Search	72
My Files	72
Settings	73
troubleshooting	a
index	e

safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your device.



Safety warnings

Keep your device away from small children and pets

Keep your device and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile devices and equipment with caution

Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted. Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.

- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile devices and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your device is interfering with a pacemaker or other medical device, turn off the device immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the device in potentially explosive environments


Do not use your device at refuelling points (service stations) or near fuels or chemicals. Turn off your device whenever directed by warning signs or instructions. Your device could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your device, hold the device with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Do not use the phone if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hand and face. Bring the phone to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.

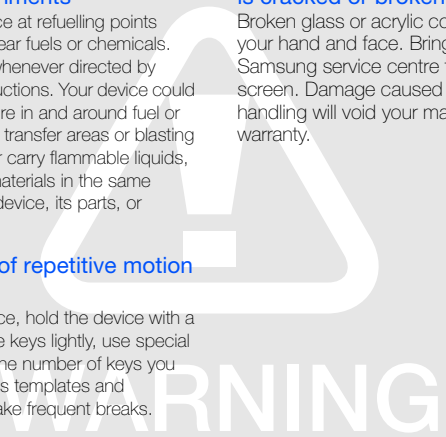



CAUTION

Safety precautions

Drive safely at all times

Avoid using your device while driving and obey all regulations that restrict the use of mobile devices while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile device in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your device or cause injury.

Turn off the device near medical equipment

Your device can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the device or disable the wireless functions when in an aircraft

Your device can cause interference with aircraft equipment. Follow all airline regulations and turn off your device or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your device carefully and sensibly

- Do not disassemble your phone due to a risk of electric shock.

- Do not allow your phone to get wet—liquids can cause serious damage and will change the color of the label that indicates water damage inside the phone. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your device in dusty, dirty areas to prevent damage to moving parts.
- Your device is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your device, as paint can clog moving parts and prevent proper operation.
- If your device has a camera flash or light, avoid using it close to the eyes of children or animals.

CAUTION

- Your device may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

Your device emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your device in the normal position

Avoid contact with your device's internal antenna.

Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.

- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards and memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your device conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram.

During testing, the maximum SAR recorded for this model was 0.814 watts per kilogram. In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your device reduces your overall exposure to RF energy.

The Declaration of Conformity at the back of this manual demonstrates your device's compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile website.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.


To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

"THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE.

SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES."

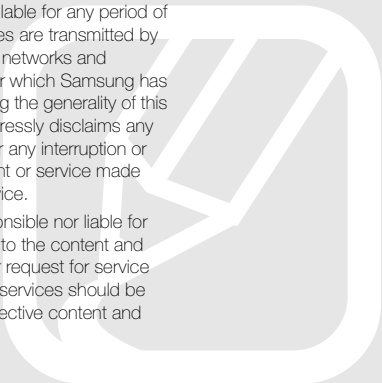

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

quick start guide

Unpack

Check your product box for the following items:

- Mobile device
- Headset
- Battery
- Travel adapter (charger)
- PC data cable
- User manual
- CD-ROM¹




- The items supplied with your device may vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Samsung dealer.
- The supplied accessories perform best for your phone.


1. The CD-ROM contains Microsoft ActiveSync software, add-on software, and other applications.

Phone layout



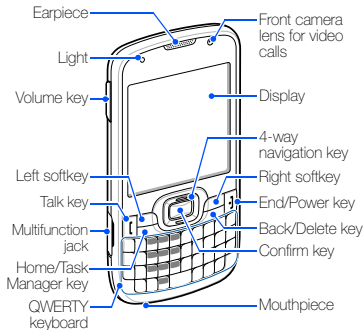

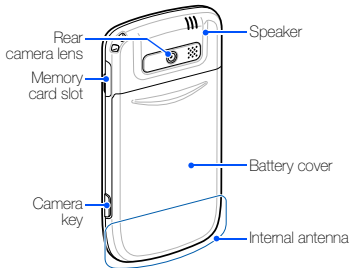

The front of your device includes the following keys and features:

 
 







 




The rear of your device includes the following keys and features:



Keys








Key	Function
	Open the dialling screen; Make or answer a call
	Perform actions indicated at the bottom of the display
	Scroll through lists or menus; Move the cursor up, down, left, or right
	Confirm your selection or execute the selected application
	Turn the device on and off (press and hold); End a call; Return to the Home screen
	Switch to the Home screen from a program; Open Task Manager (press and hold)



Key	Function
	Return to the previous menu or screen; Delete characters
	Enter numbers, characters, and symbols
	Delete characters
	Change case in a text input field
	Confirm your selection; Start a new line in a text input field
	Use characters on the upper half of the keys in a text input field
	Open the symbol screen in a text input field (press and hold)

Key	Function
	Insert a space in the text input screen; Activate or deactivate the silent profile from the Home screen (press and hold)
	Open Messaging
	Open the Quick list screen; Lock the keys (press and hold)
	Turn on the camera (press and hold); In Camera mode, take a photo or record a video
	Adjust the device's volume; During an incoming call, mute the call ringer; Press and hold the Volume key up to zoom in the screen

Icons

Learn about the icons that appear on your display.

Icon	Definition
	Signal strength
	Voice call in progress
	Data call in progress
	Call on hold
G	GPRS network available
	GPRS network connected
E	EDGE network available
	EDGE network connected
	Roaming in GPRS network
3G	UMTS network available
H	HSDPA network available

Icon	Definition
	Battery power level
	Ringer set to vibrate
1/2	Phone line 1 or 2 (network service)
	Roaming (outside of normal service area)
	Bluetooth activated
	Bluetooth headset connected
	Sync error
	New text message
	New multimedia message
	New instant message
	New voice mail message
	Missed call
	Calls are forwarded

Assemble and prepare your device

Get started by assembling and setting up your mobile device for its first use.


Install the SIM or USIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services.

To use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card.


To install the SIM or USIM card and battery,

1. Remove the battery cover.

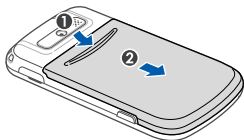


If the device is on, press and hold [] to turn it off.

2. Insert the SIM or USIM card.

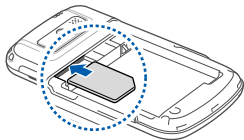


- Place the SIM or USIM card in the device with the gold-coloured contacts facing down.
- Without inserting a SIM or USIM card, you can use your device's non-network services and some menus.

3. Insert the battery.

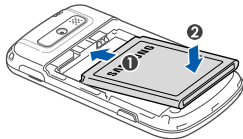


4. Replace the battery cover.

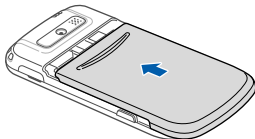


Charge the battery

Before using the device for the first time, you must charge the battery.

1. Open the cover to the multifunction jack on the side of the device.
2. Plug the small end of the travel adapter into the multifunction jack.

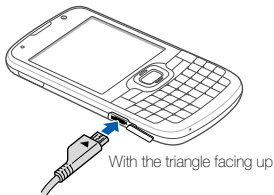

Improperly connecting the travel adapter can cause serious damage to the device. Any damages by misuse are not covered by the warranty.

3. Plug the large end of the travel adapter into a power outlet.
4. When the battery is fully charged (the  icon is no longer moving), unplug the travel adapter from the power outlet.
5. Unplug the travel adapter from the device.
6. Close the cover to the multifunction jack.



About the low battery indicator

When your battery is low, the device will emit a warning tone and a low battery message. The battery icon will also be empty and blinking. If the battery level becomes too low, the device will automatically power off. Recharge your battery to continue using your device.


Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your device accepts microSD™ or microSDHC™ memory cards up to 32 GB (depending on memory card manufacturer and type).



Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.


1. Open the cover to the memory card slot on the side of the device.
2. Insert a memory card with the label side facing down.

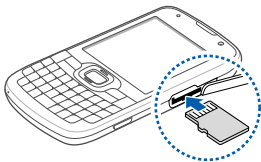

3. Push the memory card in the memory card slot until it locks in place.

To remove the memory card, push it gently until it disengages from the device, and then pull the memory card out of the memory card slot.


Turn on your device on and off

To turn your device on, press and hold [] to turn on your device.

Your device will automatically connect to the cellular network.

To turn your device off, press and hold [].

Lock or unlock the keys



You can lock the keys to prevent any unwanted device operations. On the Home screen, press and hold [].


To unlock the keys, press [] → <Unlock> → [*].

Disable wireless functions

By disabling your device's wireless functions, you can use non-network services in areas where wireless devices are prohibited, such as aeroplanes and hospitals.

To disable wireless functions,

1. On the Home screen, press [] → **Wireless Manager**.
2. Select **Phone**.
Your device will show  on the Home screen.
3. Press <Done>.

To enable wireless functions, repeat steps 1-2 above. Your device will show  on the Home screen.

Work with applications

Open applications or folders

1. On the Home screen, press <Start>.
2. Select an application or a folder.

To use the home screen shortcuts, on the Home screen, scroll up or down to move among the shortcuts or menus.


Switch applications

Your device allows you to multi-task by running multiple applications at the same time.


To switch from one active application to another,

1. Press [] → <Start>.
2. Select an application or a folder.

Close applications

To close the current application window, press [].

To close an application that is running in the background,



1. Press and hold [] to open Task Manager.
2. Scroll to an application and press **<End Task>**.

To close all applications press **<Menu>** → **End All Tasks** → **<Yes>**.



Use basic call functions

Learn to make or answer calls and use basic call functions.

Make a call

1. On the Home screen, enter an area code and phone number.
2. Press [] to dial the number.
For a video call, press **<Menu>** → **Video Call**.
3. To end the call, press [].

Answer a call

1. When a call comes in, press [].
2. For a video call, press **<Show me>** to allow the caller to see you via the front camera lens.
3. To end the call, press [].

Adjust the volume

To adjust the volume during a call, press the Volume key up or down.

View and dial missed calls

Your device will display calls you have missed on the display. To dial the number of a missed call,

1. Press [].
2. Scroll to the missed call you want to dial.
3. Press [] to dial.

Call a recently dialled number

1. On the Home screen, press [] to display a list of recent numbers.
2. Scroll to the number you want and press [] to dial.

Send and view text messages

Learn to send or view text (SMS) messages.

Send a text message

1. On the Home screen, press <Start> → **Messaging** → **SMS/MMS**.
2. Press <Menu> → **New**.
3. Enter a phone number or press the Confirm key to select a contact.
4. Scroll down and enter text.
5. Press <Send> to send the message.

Enter text

Your device is equipped with a QWERTY keyboard to support easy and quick text input. You can enter text as you would when using a computer's keyboard.

When entering text, use the following keys:

- **←**: delete characters
- **↵**: start a new line
- **⇧**: change case; set Caps lock (press twice quickly)
- **Alt**: enter numbers and symbols on the upper part of the keys; set Number and Symbol lock (press twice quickly)
- **sym**: open the symbols list (press and hold)
- **Space**: insert a space

View a text message

1. On the Home screen, press **<Start>** → **Messaging** → **SMS/MMS**.
2. Select a text message.

Add and find contacts

Learn the basics of using the Contacts feature.

Add a new contact

1. On the Home screen, enter a phone number and press **<Save>**.
2. Press the Confirm key → a contact type.
3. Enter contact information.
4. When you are finished entering information, press **<Save>** or **<Done>** to save the contact card.

Find a contact

1. On the Home screen, press **<Start>** → **Contacts**.
2. Enter the first few letters of the name you want to find.
3. Scroll to the contact's name from the search list.



Once you have found a contact, you can:

- call the contact by pressing [**☎**]
- edit the contact information by pressing **<Menu>** → **Edit**

Use basic camera functions

Learn the basics to capture and view photos and videos.

Capture photos

1. Press and hold the Camera key to turn on the camera.
2. Aim the lens at the subject and make any adjustments.
 - To change the viewfinder, press the Navigation key up (↑).
 - To select the time delay, press the Navigation key down (↓).
 - To change the camera focus, press the Navigation left (←).
 - To set the exposure value, press the Navigation key right (→).

3. Press the Confirm key or Camera key to take a photo.
4. Press <Save> to save the photo.
After capturing photos, press <View> to view photos quickly.

View photos

On the Home screen, press <Start> → **Contents Manager** → **My Pictures** → a photo file.

Capture videos

1. Press and hold the Camera key to turn on the camera.
2. Press [1] to switch to Recording mode.

3. Aim the lens at the subject and make any adjustments.
 - To change the viewfinder, press the Navigation key up (⬆️).
 - To select the time delay, press the Navigation key down (⬇️).
 - To set the exposure value, press the Navigation key right (⬇️).
4. Press the Confirm key or Camera key to start recording.
5. Press <⏏️> to stop recording.
6. Press <Save> to save the video.

After capturing videos, press <View> to view videos quickly.

View videos

On the Home screen, press <Start> → **Contents Manager** → **My Videos** → a video file.

Listen to music

Learn how to listen to music via the music player.

Add music files to your device

Start by adding files to your device or memory card:

- Download from the wireless web.
- Receive via Bluetooth.
- Copy to your memory card.
- Synchronise with ActiveSync.

Play music files

1. Add music files to your device.
2. On the Home screen, press <Start> → <More> → **Windows Media**.
3. Press <Menu> → **Update Library**.
4. When libraries have been updated, press <Done>.

5. Select **My Music**.
6. Select a music category → a music file.
7. Control playback using the following keys:

Key	Function
Confirm	Pause or resume playback
Volume	Adjust the volume
Navigation	<ul style="list-style-type: none"> • Left: Restart playback; Skip backward (press within 3 seconds); Scan backward in a file (press and hold) • Right: Skip forward; Scan forward in a file (press and hold) • Up/Down: Adjust the volume
0	Switch to the full screen view (video file only)

8. When you are finished, press <Menu> → **Stop**.

Create a playlist

1. On the Home screen, press <Start> → <More> → **Windows Media**.
2. Press <Menu> → **Library** → **My Music**.
3. Select a music category and scroll to a music file.
4. Press <Menu> → **Queue Up**.
5. Repeat steps 3-4 to add more files.
6. Press <Menu> → **Now Playing** → <Menu> → **Save Playlist**.
7. Enter a name for the playlist and press <Done>.

The new playlist will be saved in **My Playlists**.

Customise your device

Get more from your device by customising it to match your preferences.

Adjust the volume of the key tones

On the Home screen, press the Volume key up or down to adjust the key tone volume.

Change your ringtone

1. On the Home screen, press <Start> → **Settings** → **Sounds** → **Ringtone**.
2. Scroll left or right to a ringtone.
3. Press <Done>.

Set your device profile

Activate a profile

1. On the Home screen, press <Start> → **Settings** → **Profiles**.
2. Scroll to a profile and press <Done>.



To quickly change profiles, press [Lock Quick] and select a different profile.

Personalise a profile

1. On the Home screen, press <Start> → **Settings** → **Profiles**.
2. Scroll to a profile and press <Menu> → **Edit**.
3. Change the settings as desired.
4. When you are finished personalising the profile, press <Done>.

Select a theme for the display or wallpaper

1. On the Home screen, press <Start> → **Settings** → **Display** → **Home Screen**.
2. Scroll left or right to change the theme in **Home screen layout**.
3. Scroll down to **Background image**.
4. Scroll left or right to your background image.
5. When you are finished, press <Done>.

Download applications from the web

You can find, purchase, and download Windows Mobile applications directly from the online store and post your reviews about applications. You can also find links to access other web pages.

On the Home screen, press <Start> → <More> → **Marketplace**.

communication

Your device allows you to send and receive many types of calls and messages over cellular networks and the internet.

Calls

Learn to use advanced call functions.

Call an international number

1. On the Home screen, press and hold [0] to insert the + character.
2. Enter the complete number you want to dial (country code, area code, and phone number), and then press [↵] to dial.

Call a contact from Contacts

You can call numbers directly from Contacts using stored contacts. ► p. 23

1. On the Home screen, press <Start> → **Contacts**.
2. Scroll to the number you want to dial and press [↵] to dial.

Make a call from Call History

1. On the Home screen, press <Start> → **Applications** → **Call History**.
2. Scroll up or down to a number or name and press [↵] to dial.

Forward calls

1. On the Home screen, press <Start> → **Settings** → **Phone** → **Voice Calls** → **Call Forwarding**.
2. Select a forwarding option and enter a phone number.

Bar (block) calls

1. On the Home screen, press <Start> → **Settings** → **Phone** → **Voice Calls** → **Call Barring**.
2. Select a call type → a barring option.

Messaging

Learn to use messaging functions. For instructions on entering text, see the quick start guide.

Send a multimedia message

1. On the Home screen, press <Start> → **Messaging** → **SMS/MMS**.
2. Press <Menu> → **New**.
3. Enter a destination number or press <Menu> → **Add Recipients** to select a contact.
4. Press <Menu> → **Switch to MMS**.
5. Scroll down and enter your message text.
6. Press <Menu> → **Add** and add an item.
7. Press <Send> to send the message.

Create an email account

Before you can send or receive email messages, you must create an email account.

1. On the Home screen, press <Start> → **Messaging** → **Setup Email**.
To easily create an email account, press <Start> → **Email Wizard**.
2. Enter your email address and password, and press <Next>.
3. To manually set up email account, clear the check box next to **Try to get e-mail settings automatically from the Internet**.
4. Press <Next>.
5. Select the predefined email provider and press <Next>.
6. Enter your name and account name, and press <Next>.
7. Enter the incoming mail server and select the account type, and press <Next>.

8. Enter a user name and password, and press <Next>.
9. Enter the outgoing mail server and press <Next>.
10. Set how often your device connects to the server and checks for incoming email messages in **Automatic Send/Receive** (if necessary).
11. Press <Finish>.

Send an email message

1. On the Home screen, press <Start> → **Messaging**.
2. Select the name of an email account.
3. Press <Menu> → **New**.
4. Enter an email address in the To field or press <Menu> → **Add Recipient** to select a contact.
5. Scroll down and enter a message subject.

6. Scroll down and enter your message text.
7. Press <Menu> → **Insert** and attach a file (if necessary).
8. Press <Send> to send the message.

Retrieve email from an email server

Before you retrieve email from an internet service provider or VPN connection, you must create an email account.

To retrieve messages from your Outlook account, see "Synchronise your data." ► p. 65

1. On the Home screen, press <Start> → **Messaging**.
2. Select the name of an email account.
3. Press <Menu> → **Send/Receive**.

View messages

You can access message folders for your text and multimedia messages in one location, and for email messages.

To view messages,

1. On the Home screen, press <Start> → **Messaging**.
2. Select **SMS/MMS** or the name of an email account.
The Inbox for the account you selected will open.
3. To download the complete contents of email, select an email from the list or press <Menu> → **Download Message**.

View or save email attachments



Email attachments may contain viruses that can damage your device. To protect your device, open attachments only if you trust the sender.

To view an attachment,

1. From an open email, scroll to the attachment and press the Confirm key.
2. Press the Confirm key → **<Open>** to open the attachment.

The attachment opens with the corresponding application.

To save an attachment,

1. From an open email, scroll to the attachment and press the Confirm key to download.
2. Press the Confirm key → **<Open>** to open the attachment.
3. Press **<Menu>** → **Save As...**
4. Set a file name and memory location and press **<Save>**.



media

Learn to use Camera, Contents Manager, Photo Slides, FM Radio, Streaming Player, Audio Notes, and Voice Notes.

Camera

Learn how to capture photos in various modes and customise camera settings.

Capture a series of photos

1. Press and hold the Camera key to turn on the camera.
2. Press <Menu> → **Shooting Mode** → **Multi Shot**.
3. Make any necessary adjustments.
4. Press and hold the Confirm key or Camera key to take a series of photos.
5. Press <Save> to save the photo.

Capture photos with decorative frames

1. Press and hold the Camera key to turn on the camera.
2. Press **<Menu>** → **Shooting Mode** → **Frame Shot**.
3. Press **<Change>** → **<List>**.
4. Select a frame and press the Confirm key.
5. Make any necessary adjustments.
6. Press the Confirm key or Camera key to take a photo with the frame.
7. Press **<Save>** to save the photo.

Capture divided photos

1. Press and hold the Camera key to turn on the camera.
2. Press **<Menu>** → **Shooting Mode** → **Mosaic Shot**.
3. Press **<Change>** → **<List>**.
4. Select an image layout and press the Confirm key.
5. Make any necessary adjustments.
6. Press the Confirm key or Camera key to take the divided photos for each segment.
7. Press **<Save>** to save the photo.

Capture photos in Smile shot mode

1. Press and hold the Camera key to turn on the camera.
2. Press **<Menu>** → **Shooting Mode** → **Smile Shot**.
3. Make any necessary adjustments.
4. Press the Confirm key or Camera key.
5. Aim the camera lens at your subject.

Your device recognises people in an image and detects their smiles. When the subject smiles, the device automatically takes a photo.

6. Press <**Save**> to save the photo.

Capture photos by using options preset for various scenes

1. Press and hold the Camera key to turn on the camera.
2. Press <**Menu**> → **Scene** → a scene.
3. Make any necessary adjustments.
4. Press the Confirm key or Camera key to take a photo.
5. Press <**Save**> to save the photo.

Use camera options

Before capturing a photo, press <**Menu**> to access the following options:

Option	Function
Shooting Mode	Change the shooting mode
Scene	Change the scene mode
Resolution	Change the resolution option
White Balance	Adjust the colour balance
ISO	Adjust the sensitivity of the camera imaging sensor
Metering	Select a type of exposure metre
Effect	Apply a special effect

Before capturing a video, press <Menu> to access the following options:

Option	Function
Recording Mode	Change the recording mode
Resolution	Change the resolution option
White Balance	Adjust the colour balance
Effect	Apply a special effect

Customise camera settings

Before capturing a photo, press <Menu> → **Settings** → **Photo** or **Setup** to access the following options:

Setting	Function
Image Quality	Adjust the quality of your images
Shutter sound	Select a sound to accompany the shutter action

Setting	Function
Review screen	Set the camera to switch to the review screen after capturing photos
Zoom sound	Turn the zoom sound on or off
Brightness sound	Turn the brightness sound on or off
Storage	Select a memory location to store new images

Before capturing a video, press <Menu> → **Settings** → **Video** or **Setup** to access the following options:

Setting	Function
Video Quality	Adjust the quality of your video clips
Recording sound	Select a sound to accompany the shutter action

Setting	Function
Audio recording	Turn the audio on or off
Encoding format	Select an encoding format of your video clips
Review screen	Set the camera to switch to the review screen after capturing videos
Zoom sound	Turn the zoom sound on or off
Brightness sound	Turn the brightness sound on or off
Storage	Select a memory location to store new video clips

Contents Manager

With Contents Manager, you can view and access all the files and folders on your device.

View a photo

1. On the Home screen, press <Start> → **Contents Manager** → **My Pictures**.
2. Scroll to a photo thumbnail and press the Confirm key to open it.

While viewing photos, you can perform the following functions:

- To scroll through your photos, scroll left or right.
- To zoom, press the Confirm key and then press the left softkey or right softkey. To exit the zoom screen, press [↵].
- To edit the picture, press <Menu> → **Edit Image**.

- To set a photo as a background or caller ID image, press <Menu> → **Set as** → an option.
- To view your photos as a slideshow, press <Menu> → **Play Slide Show**.

Play a video

1. On the Home screen, press <Start> → **Contents Manager** → **My Videos**.
2. Scroll to a video thumbnail and press the Confirm key to open it.

Open documents

1. On the Home screen, press <Start> → **Contents Manager**.
2. Locate and open the folder where the document is stored.
3. Scroll to the document and press the Confirm key to open it.

Send a file

1. On the Home screen, press <Start> → **Contents Manager**.
2. Locate and open the folder where the file is stored.
3. Select a file.
4. Press <Menu> → **Send** → a sending option.
 - To send as a multimedia message, select **via Multimedia Msg**. See "Send a multimedia message." ► p. 30
 - To send as an email message, select **via e-mail**. See "Send an email message." ► p. 31
 - To send via the Bluetooth wireless feature, select **via Bluetooth**. See "Bluetooth." ► p. 61

Photo Slides

Photo Slides allows you to create photo albums, edit photos, and view slideshows with background music.

Create a photo album

1. On the Home screen, press <Start> → **Applications** → **Photo Slides**.
2. Press <Menu> → **Create album**.
3. Enter an album name, set the creation date, and select **OK**.
4. Locate a photo in another album or folder and press <Menu> → **Edit** → **Copy**.
5. Select the name of your new album or folder and then press <Menu> → **Edit** → **Paste**.

Edit photos

1. On the Home screen, press <Start> → **Applications** → **Photo Slides**.
2. Select a thumbnail to open the photo.
3. Press <Menu> → an editing option (**Rotate Left**, **Rotate Right**, or **Effect**).
4. Select an effect option (if necessary).
5. To save the photo with your changes, press [↵].

View slideshows with background music

1. On the Home screen, press <Start> → **Applications** → **Photo Slides**.
2. Select a photo.
3. Press <Menu> → **Slide Show**.


4. During a slideshow, press the Confirm key to display the following controls:

Icon	Function
	Pause the slideshow
	Stop the slideshow
	Play the slideshow
	Skip to the previous photo
	Skip to the next photo
	Rotate the photo
	Change the background music
	Quit the slideshow

FM Radio

You can listen to your favourite stations with the FM radio.

Listen to the FM radio

1. Plug a headset into the multifunction jack.
2. On the Home screen, press **<Start>** → **FM Radio**.
3. Press **<OK>** to start automatic tuning.
The radio scans and saves available stations automatically.
 The first time you turn on the FM radio, you will be prompted to start automatic tuning.
4. When automatic tuning is finished, press **<Done>**.
5. Scroll left or right to scan through available radio stations.

6. Control the FM radio using the following keys:

Key	Function
Volume	Adjust the volume
Confirm	Turn the FM radio on or off
Navigation	<ul style="list-style-type: none"> • Left/Right: Tune a radio station • Up/Down: Adjust the volume

Store radio stations by automatic tuning

1. From the radio screen, press the Confirm key to start the FM radio.
2. Press <Menu> → **Channel list**.

3. Press <Scan> → <Yes>.

The radio scans and saves available stations automatically.

4. Press <Done>.

You can access the radio station list by pressing <Menu> → **Channel list** from the radio screen.

Set up your favourite list

1. From the radio screen, press the Confirm key to start the FM radio.
2. Scroll left or right to tune a radio station you want.
3. Press <Set as favourite> to save the radio station to the Favourite list.
4. Press <OK> to confirm.
5. To add more radio stations, repeat steps 2-4 above.

Streaming Player

You can play streaming files on the web.

1. On the Home screen, press **<Start>** → **Applications** → **Streaming Player**.
2. Press **<Open>**.
3. Enter a URL address of the streaming file and press **<Connect>**.

You can select a URL address on the Recent history list.

Audio Notes

You can record sounds from various sources and save them as mp3 files.

Record an audio note

1. On the Home screen, press **<Start>** → **Organizer** → **Audio Notes**.
2. Press **<Record>**.

3. Press the Confirm key to begin the recording.
4. When you are finished recording, press **<Stop>**.
The audio note is automatically saved.

Play an audio note

1. On the Home screen, press **<Start>** → **Organizer** → **Audio Notes**.
2. Scroll to an audio note and press the Confirm key.
Playback begins automatically.
3. Control playback using the following keys:

Key	Function
Volume	Adjust the volume
Confirm	Pause or resume playback
Navigation	<ul style="list-style-type: none"> • Left: Skip backward • Right: Skip forward
<Stop>	Stop playback

Voice Notes

You can use Voice Notes to record and play back voice memos and sound clips.

Record a voice clip

1. On the Home screen, press **<Start>** → **Applications** → **Voice Notes**.
2. Press **<Record>** to begin the recording.
3. When you are finished recording, press **<Stop>**.
The voice clip is automatically saved.

Play a voice clip

1. On the Home screen, press **<Start>** → **Applications** → **Voice Notes**.
2. Scroll to a voice clip and press the Confirm key.
The playback begins automatically.



personal productivity

Learn to use Contacts, Calendar, Anniversary,
Office Mobile, Adobe Reader LE, Tasks,
and Smart Reader.

Contacts

Learn to use contact cards to store personal information, such as names, phone numbers, and addresses.

Copy contact cards

You can copy your contact cards from your device to your SIM card and vice versa. When you copy an Outlook contact to your SIM card, you can only store the contact's name and phone number.

1. On the Home screen, press **<Start>** → **Contacts**.
2. To copy a contact card, press **<Menu>** → **Copy Contact** → **To SIM** or **To Contacts**.

To retain all the contact information, synchronise your Outlook contacts with a PC (see "Synchronise your data" ► p. 65).

Assign a speed dial number to a contact card

1. On the Home screen, press **<Start>** → **Contacts**.
2. Scroll to a contact card and press the Confirm key.
3. Scroll to a phone number and press **<Menu>** → **Add to Speed Dial**.
4. Scroll left or right to set a speed dial number in the keypad assignment field (if necessary).
5. When you are finished, press **<Done>**.

Assign an image or a ringtone to a contact card

1. On the Home screen, press **<Start>** → **Contacts**.
2. Scroll to a contact card.
3. Press **<Menu>** → **Edit**.

4. To assign a ringtone, scroll to **Custom ring tone** and scroll left or right to a ringtone.
5. To assign an image, scroll to **Picture** and scroll right to an image.
6. When you are finished, press **<Done>**.

Calendar

Use Calendar to keep track of appointments, birthdays, or other events.

Create a calendar event

1. On the Home screen, press **<Start>** → **Calendar**.
2. Press **<Menu>** → **New Appointment**.
3. Complete the fields and adjust the settings for your event.
4. When you are finished, press **<Done>**.

Change the calendar view

1. On the Home screen, press <Start> → **Calendar**.
2. Press the left softkey to change the calendar view.

Stop an event alarm

When the alarm sound for a calendar event you set previously, press <Dismiss>.

Anniversary

With Anniversary, you can manage your anniversaries and special days.

Schedule an anniversary

1. Press <Start> → **Organizer** → **Anniversary**.
2. Press <New>.

3. Set the anniversary details.
4. When you are finished, press <Done>.

Stop an anniversary alarm

When the alarm sound for the anniversary you set previously, press <OK>.

Office Mobile

With Office Mobile, you can open and edit Word, Excel, and PowerPoint files on your device. Your device supports files created with Office 97 and newer versions.

Open and edit an Excel workbook

To open and view an Excel workbook,

1. On the Home screen, press <Start> → **Applications** → <More> → **Office Mobile** → **Excel Mobile**.
2. Locate an Excel file and select the file name to open it.

3. To zoom in or out on part of a document, press any softkey → **<View>** → **Zoom** → a zoom option.
4. To close the workbook, press **<Menu>** → **Close File**.

To edit an Excel workbook,

1. On the Home screen, press **<Start>** → **Applications** → **<More>** → **Office Mobile** → **Excel Mobile**.
2. Locate an Excel file and select the file name to open it.
3. Press any softkey → **<Menu>** → **Edit**.
4. Scroll to a cell and press the Confirm key to select it.
5. Enter values or text and press **<Done>**.
6. Repeat steps 4-5 as necessary.

7. To save the workbook, press **<Menu>** → **File** → **Save As...**
8. Enter a file name and select the memory location and press **<Save>**.

Open and edit a Word document

To open and view a Word document,

1. On the Home screen, press **<Start>** → **Applications** → **<More>** → **Office Mobile** → **Word Mobile**.
2. Locate a Word file and select the file name to open it.
3. To zoom in or out on part of a document, press **<View>** → a zoom option.
4. To close the document, press **<Menu>** → **Close File**.

To edit a Word document,

1. On the Home screen, press **<Start>** → **Applications** → **<More>** → **Office Mobile** → **Word Mobile**.
2. Locate a Word file and select the file name to open it.
3. Press **<Menu>** → **Edit**.
4. Edit your document.
5. To save the document, press **<Menu>** → **File** → **Save As...**
6. Enter a file name and select the memory location and press **<Save>**.

Open and view a PowerPoint slideshow

1. On the Home screen, press **<Start>** → **Applications** → **<More>** → **Office Mobile** → **PowerPoint Mobile**.
2. Locate a PowerPoint file and select the file name to open it.

3. To begin the slideshow, press any softkey → **<Menu>** → **Custom Show**.
4. To end the slideshow, press **<End>**.

Create and edit a note

1. On the Home screen, press **<Start>** → **Applications** → **<More>** → **Office Mobile** → **OneNote Mobile**.
2. Press **<New>** to create a new note.
3. Create your note.
4. To change the format, press **<Menu>** → **Format** → a type.
To clear all formatting, press **<Menu>** → **Format** → **Clear All**.
5. To add pictures or voice memos, press **<Menu>** → **Take Picture**, **Insert Picture**, or **Insert Recording**.
6. To save the note, press **<Done>**.

Adobe® Reader LE

With Adobe Reader LE, you can open and view PDF documents.

1. On the Home screen, press <Start> → **Applications** → **Adobe Reader LE**.
2. Locate a PDF file and select the file name to open it.
3. To zoom in or out on part of a document, press <Tools> → **Zoom** → a zoom option.
To skip to another page, press <Tools> → **Go To** → an option.

Tasks

With Tasks, you can create to-do lists and reminders.

Create a task

1. On the Home screen, press <Start> → **Organizer** → **Tasks**.
2. Press <Menu> → **New Task**.
3. Enter details for the task.



To set a reminder for the task, select the due field and set a due date. Select the check box under **Reminder** and specify the date and time of the reminder.

4. When you are finished, press <Done>.

Mark a task as completed

When you have completed a task, return to the Tasks screen, scroll to the task name, and press <Complete>. Once you have marked a task completed, you will no longer receive any scheduled reminders for that task.

Smart Reader

Smart reader allows you to capture information from a business card or document and save it as a new contact or convert it to an editable note file. You can also capture words and translate them to another language.



This feature may be unavailable depending on your region or service provider.

Recognise a business card

1. On the Home screen, press <Start> → **Organizer** → **Smart Reader**.
2. Position the device over the business card, so that the frame on the viewfinder aligns with the edges of the business card.
See Tips for recognising business cards.

3. Press the Confirm key.



As you align the frame in the viewfinder with the edges of the business card, they will change to green. If you can align all four edges of the frame at once, your device will automatically capture the image.

Your device recognises the business card and converts it to contact card format.

4. Press <Add to Contacts> to save the contact card.
5. Press <OK>.

Tips for recognising business cards

- Hold the device steady while capturing a photo of the business card.
- Be careful not to allow any shadows to fall on the business card.
- Place the business card on level, evenly lit surface when capturing information from it.

Capture a document

1. On the Home screen, press **<Start>** → **Organizer** → **Smart Reader**.
2. Press **<Menu>** → **Mode** → **Text Recognition**.
3. Position the device over the document.
4. Press the Confirm key.
Your device recognises the document and converts it to a note file.
5. Press **<Add to Note>** to save the note.
6. Press **<OK>**.



web

Learn to use Internet Explorer, Messenger, RSS Reader, Podcast, Communities, Fring™, Microsoft My Phone, and Search Widget.

Internet Explorer

Use Internet Explorer to browse web pages and bookmark your favourite web pages.

Browse a web page

1. On the Home screen, press **<Start>** → **Internet Explorer**.
2. Access a web page:
 - Press **<Menu>** → **Go to Web Address** to enter a web address and find a specific web page.
 - Press **<Menu>** → **Favourites** and select a bookmark.
 - Press **<Menu>** → **History** to select a web address from the history list.



To close the web connection. Press and hold [, scroll to **Internet Explorer**, and press **<End Task>**.

Add a bookmark

1. On the Home screen, press <Start> → **Internet Explorer**.
2. Access a web page you want and press <Menu> → **Add to Favourites**.
3. Enter the bookmark name and address (if necessary).
4. Change the folder under which you want to add the bookmark (if necessary).
5. Press <Add>.

Change browser settings

From the browser, press <Menu> → **Tools** → **Options**:

- **Home Page**: set a WAP address for homepage
- **Browsing History**: view information about the memory currently in use for temporary files, cookies, and history

- **Privacy and Security**: set a degree of the security
- **Languages**: set your preferred languages to display
- **Connections**: configure connection settings
- **Other**: set sound and display settings for the browser

Messenger

With Windows Live Messenger, you can remain available to other users and stay up-to-date with your email without a constant connection to the internet. When a new message arrives or you want to access internet services, the connection will be restored.

Set up Messenger and sign in

1. On the Home screen, press <Start> → <More> → **Messenger**.
2. Scroll left or right to select your login status.
3. Press <Sign in>.

Chat with Messenger

1. From the messenger screen, locate and select a contact's name, and then press <Send IM>.
2. Enter a message in the text field at the bottom of the screen, and then press <Send>.
3. While chatting, you can perform the following actions:
 - Insert emoticons: press <Menu> → **Add emoticon**
 - Invite a contact to chat: press <Menu> → **Options** → **Add participant**

- Transfer a file: press <Menu> → **Send** → a file type → a file
- Record and send a voice clip: select **Voice clip**, record your voice clip, and then press <Send>
- Switch between the contact list and chat: scroll left or right

To end the chat, press <Menu> → **End conversation**.

RSS Reader

Learn to use RSS reader to get the latest news and information from your favourite websites.

Create feeds

1. On the Home screen, press <Start> → **Applications** → **RSS Reader**.
2. Press <Menu> → **Edit** → **New folder** (if necessary).

3. Press **<Menu>** → **Edit** → **New feed**.
4. Enter the address of a RSS feed and select the folder under which you want to add the RSS feed and press **<OK>**.

Import feeds

You can add feeds by importing OPML files.

1. On the Home screen, press **<Start>** → **Applications** → **RSS Reader**.
2. Press **<Menu>** → **OPML** → **Import** → **Select OPML file** or **Enter OPML URL**.
3. Locate an OPML file or enter the address of an OPML URL.

Read RSS feeds

1. On the Home screen, press **<Start>** → **Applications** → **RSS Reader**.
2. Scroll to a feed and press **<Update>** to get the latest contents.

3. When the update is finished, press **<Done>**.
4. Press the Confirm key to select an updated feed.

Find new feeds

1. On the Home screen, press **<Start>** → **Applications** → **RSS Reader**.
2. Press **<Menu>** → **Feed search**.
3. Enter a keyword and press **<Search>**.
Your device searches for related feeds on the internet and displays the results.
4. Scroll to the feed and press **<Add>** to add it to the RSS feed list.

Podcast

Use Podcast to download audio or video files from a web and play them on your device.

Subscribe to a podcast

1. On the Home screen, press **<Start>** → **Applications** → **Podcast** → **Podcasts**.
2. Press **<Menu>** → **Subscribe to Podcast**.
3. Enter a web address (URL) and press **<Subscribe>** → **<Yes>**.
4. Follow the on-screen instructions to complete the setup.

Search for a podcast

1. On the Home screen, press **<Start>** → **Applications** → **Podcast** → **Podcasts**.
2. Press **<Menu>** → **Search Podcast**.

3. Enter a keyword and press **<Search>**.
Your device searches for related reports on the internet and displays the results.
4. Scroll to the report and press **<Add>** to add it to the podcast list.

Download and play a podcast

1. On the Home screen, press **<Start>** → **Applications** → **Podcast** → **Podcasts**.
2. Scroll to a podcast and press **<Get>** to download it.
The podcast automatically plays in Windows Media Player.

Communities

With Communities, you can upload photos and videos to your favourite websites and blogs and get the latest updates from them.



This is available only if supported by your service provider or region.

Set your favourite destination list

1. On the Home screen, press **<Start>** → **Applications** → **Communities**.
2. Press **<Accept>** to confirm that you agree to general disclaimer.
3. Press **<OK>** to set your favourite destination list (if necessary).
4. Select the websites or blogs you want to add and press **<Done>**.
If you pressed **<Options>** → **Update lists**, new destination sites are added to the list automatically.

Upload a file

1. On the Home screen, press **<Start>** → **Applications** → **Communities**.
2. Scroll to a website and blog.
3. Press **<Upload>**.
4. Enter your use name and password (if necessary).
5. Press **<Menu>** → **Add file** → a photo or video.
6. Enter the title for the photo or video and press **<Done>**.

Fring™

Fring is a mobile internet and community service that enables you to chat with friends who use other types of messengers, make affordable local and international calls through the internet, and transfer media files. With Fring, you can experience PC-like benefits on your mobile device. For more information, contact your service provider.

On the Home screen, press <**Start**> → <**More**> → **Fring**.

Microsoft My Phone

You can synchronise the device with your Microsoft account.

1. On the Home screen, press <**Start**> → <**More**> → **Microsoft My Phone**.
2. Press <**Next**>.

3. Press <**Accept**>.
4. Enter your user name and password and press <**Sign in**>.
5. Synchronise the data with your device and the web.
You will be able to access and use the data on your My Phone page.

Search Widget

You can search for information on the web.

1. On the Home screen, press <**Start**> → <**More**> → **Search Widget**.
2. Press <**Continue**>.
3. Enter a letter of a word of the data to search on the web and press <**Search**>.
4. Select the data you want to access.

connectivity

Learn to connect to a wireless LAN, transfer data to and from your device via the Bluetooth wireless feature or the PC data cable and synchronise your device to a PC with ActiveSync. You can also set up data or network connections for connecting to the internet or your private network.

Wi-Fi

You can activate and connect to a wireless LAN (WLAN). When you are in range of a WLAN network, your device can detect and connect to an active WLAN to make calls or send data over the internet, or browse the web.



This device uses non-harmonised frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

Activate and connect to a WLAN

1. In range of WLAN network, access an application or menu that needs a wireless connection.
2. On the Home screen, press **<Start>** → **Settings** → **Connections** → **Wi-Fi**.
3. Press **<Menu>** → **Turn On Wi-Fi**.
The device will display available WLAN connections.

4. Select a network profile from the list.
The device will attempt to connect to the WLAN.
5. Select a network type and press **<Next>**.
6. Enter a pre-shared key for WLAN and press **<Finish>**.

Create a new WLAN

1. On the Home screen, press **<Start>** → **Settings** → **Connections** → **Wi-Fi**.
2. Press **<Menu>** → **Add**.
3. Enter a network name and configure connection settings.
4. When you are finished, press **<Next>**.
5. Enter network authentication settings and press **<Next>**.
6. Set the IEEE 802.1x access option and the extensible authentication protocol (EAP) type (if necessary).

Bluetooth

You can connect with other Bluetooth-enabled wireless devices over a distance of 10 metres (30 feet). Walls or other obstacles between devices may block or impair the wireless connection.

Turn on the Bluetooth wireless feature

1. On the Home screen, press **<Start>** → **Settings** → **Connections** → **Bluetooth** → **Bluetooth**.
2. Press **<Menu>** → **Turn On Bluetooth**.
3. To allow other devices to find and connect to your device, press **<Menu>** → **Turn On Visibility**.

Search for and pair with a Bluetooth-enabled device

1. On the Home screen, press **<Start>** → **Settings** → **Connections** → **Bluetooth** → **Bluetooth**.
2. Select **Add new device...**
Your device will search for and display the list of Bluetooth-enabled devices.
3. Scroll to a device and press **<Next>**.
4. Enter the Bluetooth PIN and press **<Next>**.



To pair with another Bluetooth enabled device, both devices must use the same PIN. Headsets or hands-free car kit may use a fixed PIN, such as **0000**.

5. Press **<Done>**.

Send data via the Bluetooth wireless feature

1. Select the file or item from one of your device's applications that you want to send.
2. Press **<Menu>** → **Send** → **via Bluetooth** or **<Menu>** → **Send Contact** → **Beam**.
3. Scroll to a device from the list and press **<Beam>**.

Receive data via the Bluetooth wireless feature

To set your device to receive data from other devices,

1. On the Home screen, press **<Start>** → **Settings** → **Connections** → **Beam**.
2. Select the check box next to **Receive incoming beams** (if necessary).
3. Press **<Done>**.

After receiving data from other devices, press <Yes> to save the data on your device.



Received items are placed in the My Documents folder.

Set up a Bluetooth COM port

When you connect to a Bluetooth device supporting the Serial profile, you can establish a Bluetooth COM port.

1. On the Home screen, press <Start> → **Settings** → **Connections** → **Bluetooth** → **Bluetooth**.
2. Press <Menu> → **COM Ports** → <Menu> → **New Outgoing Port**.
3. Select the name of a device and press <Select>.
4. Select a COM port.

5. Select the check box next to **Secure Connection** to create a secure connection between the devices.
6. Press <Done>.

USB

You can connect with other devices as a network device or external memory device by using USB interface.

Set a default action for your USB connection

To set your device to perform a default action when you connect the device to a PC with the PC data cable,

1. On the Home screen, press <Start> → **Settings** → **Connections** → **USB**.
2. Set the default USB mode (**ActiveSync** or **Mass storage**).

3. Press <Done>.

To use ActiveSync, see "ActiveSync."

Copy files to a memory card

1. Insert a memory card into the device.
2. Change the USB connection to **Mass storage**.
3. Connect your device to a PC with the PC data cable.
4. Open a folder to view files.
5. Copy files to the memory card and vice versa.
6. When you are finished, disconnect the device from the PC.

ActiveSync

With ActiveSync, you can synchronise your device with a PC and back up and restore your data.

Install ActiveSync on your PC

Before you can synchronise your data, you must install ActiveSync, either from the supplied CD-ROM or the Microsoft website (<http://www.microsoft.com>).

To install ActiveSync from the supplied CD-ROM,

1. Insert the CD-ROM into your PC.
2. Follow the on-screen instructions to complete the setup.
3. When installation is complete, follow the on-screen instructions in the Synchronisation Setup Wizard to connect your device to the PC and create a data sharing partnership.

Synchronise your data

1. On the Home screen, press **<Start>** → **Settings** → **Connections** → **USB**.
2. Change the USB connection to **ActiveSync** and press **<Done>**.
3. Connect one end of the PC data cable to the multifunction jack on your device and the other end to the USB port on your PC.

When you connect your device to a PC, ActiveSync should begin synchronising your data automatically. You can begin the synchronisation manually by clicking **Sync**. To stop a synchronisation in progress, click **Stop**.

You can also manually find and copy files from your device to a PC and vice versa—from the Microsoft ActiveSync window, click **Explore**.

For more details on synchronising your data, refer to the ActiveSync Help.

Configure an Exchange server

1. On the Home screen, press **<Start>** → **ActiveSync**.
2. Press **<Menu>** → **Add Server Source**. If you have set up the synchronisation with an Exchange server, this will say **Configure Server**.
3. Enter your email address and press **<Next>**.
4. Enter a user name, password, and domain address.
5. Press **<Next>**.
6. Enter a server address.
7. To establish a secure connection, select the check box next to **This server requires an encrypted (SSL) connection**.
8. Press **<Next>**.
9. Select the types of data to synchronise.
10. When you are finished, press **<Finish>**.

Change the synchronisation schedule

If you routinely synchronise your data via an Exchange server, you can configure settings for both peak and off-peak schedules.

To change the synchronisation schedules,

1. Press **<Menu>** → **Schedule**.
2. Set the following options:
 - **Peak times:** set the frequency of synchronisations during peak hours
 - **Off-peak times:** set the frequency of synchronisations during non-peak hours
 - **Use above settings when roaming:** set to use the synchronisation schedules even when roaming
 - **Send/receive when I click Send:** set to synchronise each time you send or receive email
3. When you are finished, press **<Done>**.

Internet Sharing

You can set your device as a wireless modem for a PC and access the internet from the PC.

1. Connect your device to a PC with the PC data cable or with the Bluetooth wireless feature.
2. On the Home screen, press **<Start>** → **Internet Sharing**.
3. Select the PC connection and network connection type, and then press **<Connect>**.



While you are connected to the internet via Internet Sharing, ActiveSync is deactivated.

Connections

To connect to the internet or your network and transfer data, create data and network connections.

Before you begin, obtain the following information:

- From your cellular network service provider: data connectivity plan information, server phone number, user name, and password.
- From your Internet service provider (ISP) or wireless service provider: ISP server phone number or access point, user name, and password.



Your device should already be configured with internet access. If you have trouble accessing the internet, you need to edit connections. If you are not sure about the information to enter, ask your service provider.

Set up GPRS connections

1. On the Home screen, press **<Start>** → **Settings** → **Connections** → **GPRS**.
2. Press **<Menu>** → **Add** to add a new connection.
3. Set the connection information (see "GPRS" for details ► p. 77).
4. When you are finished, press **<Done>**.

Set up proxy server connections

1. On the Home screen, press **<Start>** → **Settings** → **Connections** → **Proxy**.
2. Press **<Menu>** → **Add** to add a new connection.
3. Set the connection information (see "Proxy" for details ► p. 78).
4. When you are finished, press **<Done>**.

Set up VPN server connections

1. On the Home screen, press <Start> → **Settings** → **Connections** → **VPN**.
2. Press <Menu> → **Add** to add a new connection.
3. Set the connection information (see "VPN" for details ► p. 78).
4. When you are finished, press <Done>.



additional programs

Learn to use Games, Java, World Clock, Alarms, Calculator, Smart Converter, StopWatch, Search, and My Files.

Games

To play games,

1. On the Home screen, press **<Start>** → **Games**.
2. Select a game from the list and follow the on-screen instructions.



Available games may vary, depending on your service provider or region. Game controls and options may vary.

Java

Java is a folder where downloaded games and applications are stored.

Download applications

1. On the Home screen, press **<Start>** → **Applications** → **Java**.
2. Press **<Download>**.

Launch applications

1. On the Home screen, press **<Start>** → **Applications** → **Java** → an application.
2. Press **<Menu>** to access a list of various options and settings for your application.

World Clock

With a world clock, you can monitor the time in another region.

To create a world clock,

1. On the Home screen, press **<Start>** → **Organizer** → **World Clock**.
2. Press **<Add>**.
3. Scroll left or right to a country.
4. Scroll down, and then scroll left or right to a country and city.
5. To set daylight saving time, press **<Menu>** → **Apply DST**.
6. Press **<Done>** or **<Yes>**.

Alarms

Learn to set and control alarms for important events.

Set a new alarm

1. On the Home screen, press **<Start>** → **Organizer** → **Alarms**.
2. Press **<Menu>** → **New**.
3. Set alarm details.
4. When you are finished, press **<Done>**.

Stop an alarm

When the alarm sounds,

- Press **<OK>** to stop an alarm without snooze.
- Press **<Dismiss>** to stop an alarm with snooze or press **<Snooze>** to silence the alarm for the snooze period.

Calculator

1. On the Home screen, press <Start> → **Organizer** → **Calculator**.
2. Use the keys that correspond to the calculator display to perform basic mathematical operations.

Tip Calculator

Use Tip Calculator to calculate tips at a restaurant.

1. On the Home screen, press <Start> → **Organizer** → **Tip Calculator**.
2. Enter an amount.
3. Scroll down and select a percentage.
4. Scroll down and enter a number of people to split the bill with (if necessary).
The device displays the tip amount, total bill, and the amount of the cost per person.

Smart Converter

With Smart Converter, you can convert measurements or currencies from one unit to another.

1. On the Home screen, press <Start> → **Organizer** → **Smart Converter**.
2. Select the type of measurement.
3. Scroll left or right to change the base unit (if necessary).
4. Scroll down and enter the base amount.
5. Scroll down and scroll left or right to change the conversion unit (if necessary).
The device displays the conversion result.

StopWatch

1. On the Home screen, press <Start> → **Organizer** → **StopWatch**.
2. Press <Start> to begin the stopwatch.
3. Press <Record> to record lap times.
4. When you are finished, press <Stop>.
5. Press <Reset> to clear recorded times.

Search

1. On the Home screen, press <Start> → **Organizer** → **Search**.
2. Enter part of a file or folder name in the search field.



You can restrict your search by selecting a data type from the category list.

3. Press <Search>.
4. To open an item in the result list, select the item's name.

My Files

With My Files, you can browse all the files and folders on your device.

On the Home screen, press <Start> → **My Files**.

Press <Menu> to rename, delete, or edit your files and folders.

Settings

Learn about your device settings. To access your device settings,

On the Home screen, press <Start> → **Settings**.



To access more setting options, scroll down or select **More...**

Phone

Control how your device handles calls with caller ID, call waiting, and other call settings.

All Calls

- **Band Selection:** set to operate your device on UMTS or GSM networks
- **Call Options:** set the following call options
 - Any key answer:** set to answer a call when you press any key (except [])
 - Show SIM contacts:** set to show contact cards stored on the SIM or USIM card
 - Phone number:** view your phone number

Voice mail number: set the voice mail number provided by your service provider

Text messages service centre: set the text message service number provided by your service provider

Country code: set your country code

Dialling Code: set your area code

- **Caller ID:** set to send your caller ID based on your preferences or network settings
- **Channels:** set the following options for receiving cell broadcast messages

Enable channels: set to receive cell broadcast messages

Receive channel list: set to receive a list of all available broadcast channels from the network

Language: set your preferred languages to display cell broadcast messages

- **Fixed Dialling:** set to allow outgoing calls only to the limited set of phone numbers
- **Fixed Dialling Mode:** activate the FDN (Fixed Dialling Number) mode
- **Fixed Dialling Number:** set up the FDN list
- **Networks:** set the following options for connecting to a network
- **Current network:** view the current network
- **Network selection:** set the device to automatically or manually select a list of cellular networks



To receive service on another network, you must select one that has a roaming agreement with your home network.

Voice Calls

- **Auto Answer:** set the time delay before the device automatically accepts an incoming call while you are using hands-free accessories
- **Call Waiting:** set to alert you of an incoming call while you are on a call

- **Call Barring:** restrict incoming or outgoing calls
Block incoming calls: activate or deactivate incoming call barring
Block outgoing calls: activate or deactivate outgoing call barring
- **Call Forwarding:** divert incoming calls to another number
Unconditional: set to divert all voice calls
Busy: set to divert calls when you are on another call
No Reply: set to divert calls when you do not answer
Unavailable: set to divert calls when your device is off or out of service

Video Calls

- **Outgoing Image:** set an image to use during a video call
- **Call Fail Options:** set the device to retry the video call or send a text message when a video call is not connected

- **Call Barring:** restrict incoming or outgoing calls
- **Call Forwarding:** divert incoming calls to another number

Own Numbers

Save your phone number on the SIM or USIM card. The saved number does not affect the actual subscriber phone number of your SIM or USIM card.

Sounds

Customise various sound settings.

- **Ringtone:** set a ringtone for incoming calls
- **Other Sounds:** set a tone for various kinds of sounds

Display

Change the display settings.

Home Screen

- **Home screen layout:** set a layout for the Home screen
- **Show Recent Programs:** set to display the Recent Programs screen when you press <Start>
- **Colour scheme:** set a skin colour
- **Background image:** set a wallpaper
- **Time out:** set the time delay before the current screen switches to the Home screen

Start Menu Style

Set the menu style when you press <Start>.

Profiles

Change the sound profile. ► p. 27

Date and Time

Control the appearance and behaviour of the date and time.

- **Time zone:** set the time zone
- **Date:** set the current date
- **Time:** set the current time
- **Auto update:** set to receive time information from the network and automatically update the current time. This option is available only if supported by your network.

Connections

Control the Bluetooth wireless feature or USB connection and set up dial-up, GPRS, proxy, and VPN connections so that you can connect to the internet or your private network.

Wireless Manager

Set to disable or enable your device's wireless functions or Bluetooth wireless feature.

Beam

Set the device to receive beams for receiving data from other Bluetooth devices.

Bluetooth

- **Bluetooth:** control the Bluetooth wireless feature (see "Bluetooth" ► p. 61)
- **Headset Manager:** find and pair with other Bluetooth headsets
- **Smart Pairing Setting:** set the device to automatically pair with other Bluetooth devices
- **Limited Discoverable Mode Setting:** set duration that your device is visible
- **Bluetooth FTP Server Setting:** change the folder that received data is saved
- **Default Printer Manager:** set a default Bluetooth printer when Bluetooth printers are paired with your device



Once the default Bluetooth printer is selected, you can print images from Contents Manager.

- **SIM Access Profile:** set your device to make or answer calls with a connected Bluetooth hands-free car kit via the SIM or UIM card on your device
- **My Information:** check your device's name and other information

USB

Control how your device behaves when you connect it to a PC.

GPRS

To set up GPRS connections, select **New...** to access the following options:

- **Description:** set a name for the GPRS connection
- **Connects to:** set a network type to use to connect to the internet
- **Access point:** set an access point name
- **User name:** set a user name
- **Password:** set a password for the GPRS connection

- **Authentication Type:** set an authentication type
- **Primary DNS:** set the primary domain name server (DNS) address
- **Secondary DNS:** set the secondary domain name server (DNS) address
- **IP address:** enter the gateway IP address provided by your service provider

Proxy

To set up proxy connections, select **New...** to access the following options:

- **Description:** set a name for the proxy connection
- **Connects from:** set a network type to use to connect from
- **Connects to:** set a network type to use to connect to the internet
- **Proxy (name:port):** set a name and port number of the proxy server

- **Type:** set a network type to use to connect to the proxy server
- **User name:** set a user name
- **Password:** set a password for the proxy connection

VPN

To set up VPN connections, select **New...** to access the following options:

- **Description:** set a name for the VPN connection
- **VPN type:** set a VPN type
- **Server:** set a name of the VPN server
- **Connects from:** set a network type to use to connect from
- **Connects to:** set a network type to use to connect to the internet
- **User name:** set a user name
- **Password:** set a password for the VPN connection

- **Domain:** set a domain name
- **IPSec authentication:** set the type of authentication if you set the VPN type to IPSec/L2TP
- **IPSec Pre-shared key:** set a pre-shared key if you set the authentication type to **Pre-Shared Key**

Wi-Fi

Control the use of wireless LAN availability.

Wi-Fi Status

View your device's address.

Wi-Fi Always On

Set your Wi-Fi connection to be always activated.

Enhanced GPS Settings

Improve the speed and accuracy of positioning capability and expand your navigation to areas where cellular networks are accessible.

Domain Enrol

Register new domain names to your company resources.

Security

Set security codes and manage security certificates or security modules.

- **Device Lock:** set a lock code for the device
- **Enable SIM PIN:** set the device to request a PIN each time you turn it on
- **Enable SIM Lock:** set the device use only your SIM or USIM card; When SIM or USIM Lock is enabled, you are not able to use another SIM or USIM card on your device
- **Change PIN2:** change the PIN2
- **Certificates:** view security certificates. These certificates help keep your personal data secure and help you avoid viruses and other dangerous software

- **Encryption:** set to encrypt files as they are placed on a memory card
- **Change Barring Password:** change a call barring password
- **Change Reset Password:** change the password for resetting the device
- **Master Clear:** reset settings to their factory defaults
- **Mobile Tracker:** set the device to send the preset tracking message to your family or friends when someone tries to use your device with another SIM or USIM card. This feature may be unavailable due to certain features supported by your service provider.

Message Ticker

Set to display a ticker for new messages. When you have a new message, the message appears with the selected image on the Home screen.

Remove Programs

Remove programs you have installed on your device. Scroll to a program and press <Menu> → **Remove**.

Power Management

- **Main battery:** view the remaining battery
- **Backlight time out on battery:** set the time delay before the backlight turns off
- **Backlight time out on AC:** set the time delay before the backlight turns off when the travel adapter is connected
- **Display time out:** set the time delay before the display turns off
- **Display brightness:** set the brightness of the display
- **Keypad backlight on:** set the time option for the keypad backlight to work. If you select **Custom time**, you can set the options below

- **Start time:** set the starting time for the keypad backlight to work
- **End time:** set the ending time for the keypad backlight to work

Memory Info

View information about the memory currently in use on the device and a memory card.

Alt Key Settings

Set shortcuts to access applications or functions easily by pressing and holding **[Alt]** and specific keys.

Operator Settings

Check your service provider according to the SIM or USIM card you are using.

Regional Settings

- **Language:** set a display language (for all menus and applications)
- **Locale:** set your region
- **Short date style:** set a date format
- **Long date style:** set a date format
- **Time format:** set a time format
- **Positive number:** set how you want positive numbers displayed
- **Negative number:** set how you want negative numbers displayed
- **Positive currency:** set how you want positive currency displayed
- **Negative currency:** set how you want negative currency displayed

Owner Information

Set your contact information.

Accessibility

- **System font size:** set the text size on the display
- **Confirmation time out:** set the delay before an unconfirmed action times out

About

View your device information.

Version

View the version of your device.

Error Reporting

Set your device to send an error report to Microsoft when an error occurs during software operation. This helps Microsoft improve future version of products.

Customer Feedback

Set your device to send some feedback about how you are using Windows Mobile products. This helps identify trends and usage patterns to improve future versions of products.

Managed Programs

View the history of the program installation.

Setup E-mail

Create a new email account.

Device Name

Set your device's name to be used to identify the device in networks.

troubleshooting

If you have trouble with your device, try these procedures before you contact a service professional.

While using your device, the following messages may appear:

Message	Try this to solve the problem:
SIM Failure	Ensure that the SIM or USIM card is installed correctly.
Enter SIM PIN	When using the device for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM or USIM card. To disable this feature, press <Start> → Settings → Security → Disable SIM PIN .

Message	Try this to solve the problem:
PUK Required	Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.

Your device does not show a signal (no bars next to the network icon).

- If you just turned on the device, wait about 2 minutes for your device to find the network and receive a signal.
- You may not be able to receive a signal in tunnels or elevators. Move to an open area.

- You may be between service areas. You should receive a signal when you enter a service area.

You forgot a security, PIN, or PUK code.

If you forget or lose this or another code, contact the seller or your service provider.

Your display shows white lines.

The display may show white lines if you have turned the device on after a long period of disuse or if you removed the battery without first turning off the device. The display should correct itself in a short time.

You enter a number, but the call is not dialed.

- Ensure that you have pressed [**☞**].
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

You select a contact to call, but the call is not dialed.

- Ensure that the correct number is stored in the contact information.
- Re-enter and save the number, if necessary.

Another caller cannot hear you speaking.

- Ensure that you are not blocking the built-in microphone.
- Move the built-in microphone closer to your mouth.
- If using a headset, ensure that it is properly connected.

The sound quality of a call is poor.

- Ensure that you are not blocking internal antenna.
- When you are in areas with weak signals, you may lose reception. Move to another area and try again.

The battery does not charge properly or sometimes your device turns itself off while charging.

- Disconnect the device from the charger, remove and reinstall the battery, and try charging again.
- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery no longer charges completely, dispose of the old battery properly and replace it with a new battery.

Your device is hot to the touch.

When you use applications that require more power, your device may heat up. This is normal and should not affect your device's lifespan or performance.

Your device prompts you to delete some data.

The available memory is low. Move your data to a memory card or delete old items from applications.

Your device cannot connect to the internet.

- Ensure you have entered valid settings for your internet service provider.
- Ensure you have activated the wireless connection to your mobile service provider and that the signal is not obstructed.
- Ensure that you have entered the correct user name and password.

You cannot find a Bluetooth-enabled device.

- Ensure that both devices have activated the Bluetooth wireless feature.
- Ensure that the distance between the devices is not more than 10 metres and that they are not separated by walls or other obstacles.
- Ensure that the settings for each device allow them to be visible to other devices.
- Ensure that both devices are compatible with Bluetooth wireless technology.
- Ensure that the correct PIN has been entered on both devices.

You cannot listen to music on a remote Bluetooth headset.

- Ensure that your device is connected to the headset.
- Ensure that the music format you are trying to listen to is supported by the headset.
- Ensure that the distance between the headset and device is not more than 10 metres and that they are not separated by walls or other obstacles.

index

ActiveSync

- Exchange server, 65
- installing, 64
- schedule, 66
- synchronise, 65

Adobe Reader LE 50

alarm

- setting, 70
- stopping, 70

anniversary 47

audio notes, see media 43

battery

- charging, 18
- inserting, 16
- low battery indicator, 18

Bluetooth

- activating, 61
- COM port, 63
- connecting to other devices, 62
- receiving data, 62
- sending data, 62

calculator 71

calendar

- changing views, 47
- creating events, 46
- stopping event alarms, 47

calls

- answering, 21
- barring, 30
- dialling missed calls, 22
- forwarding, 30
- from Call History, 30
- from Contacts, 29
- international numbers, 29
- making, 21
- recently dialled, 22

certificate 79

clock

- creating world clock, 70
- setting alarms, 70
- stopping alarms, 70

Communities 58

contacts

- adding, 23
- assigning images or ringtones, 46
- assigning speed dial numbers, 46
- copying contact cards, 45
- finding, 23

contents manager, see media

converter 71

date and time 76

display 76

Exchange server, see ActiveSync

f

FM radio

- favourite list, 42
- listening to, 41
- storing stations, 42

games 69

images

- capturing 24
- editing, 38
- viewing, 38

Internet Explorer, see web browser 53

Java 69

language 81

media

- capturing photos in various modes 34

- opening files in contents manager, 38
- recording audio 43
- recording voice clips, 44
- viewing slideshows, 40

memory card 19

messages

- sending email, 31
- sending instant, 54
- sending multimedia, 30
- sending text, 22
- viewing email 32
- viewing messages, 32
- viewing text, 23

music player

- adding files to device, 25
- creating playlists, 26

My Files 72

Office Mobile

- Excel workbooks, 47
- OneNote, 49
- PowerPoint slideshows, 49
- Word documents, 48

photos

- advanced capturing, 34
- basic capturing, 24
- viewing, 24

podcast

- downloading, 57
- searching, 57
- subscribing, 57

radio, see FM radio

recorder, see media

RSS reader 55

security 79

SIM card 16

smart reader

- business card 51
- document 52

sounds 75

stopwatch 72

Streaming Player 43

tasks

- creating, 50
- marking as completed, 50

text

- entering, 22
- messages, 22

theme 28

tip calculator 71

USIM card 16

videos

- capturing, 24
- viewing, 25

voice notes, see media

volume

- call volume, 21
- key tone volume, 27

wallpaper 28

web browser

- adding bookmarks 54
- browser settings 54
- launching homepage 53

wireless LAN (WLAN) 60

wireless manager 76

world clock, see clock 70

Declaration of Conformity (R&TTE)

We, **Samsung Electronics**

declare under our sole responsibility that the product

GSM WCDMA Wi-Fi Mobile Phone : GT-B7330

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2006 +A11:2009 EN 50332-1 : 2000
SAR	EN 50360 : 2001 EN 62209-1 : 2006
EMC	EN 301 489-01 V1.6.1 (09-2005) EN 301 489-07 V1.3.1 (11-2005) EN 301 489-17 V2.1.1 (05-2009) EN 301 489-24 V1.4.1 (09-2007)
RADIO	EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.7.1 (10-2006) EN 301 908-1 V3.2.1 (05-2007) EN 301 908-2 V3.2.1 (05-2007)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[V] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House,
Churchfield Road
Walton-on-Thames
Surrey, KT12 2TD, UK*
Identification mark: 0168



The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*



2010.11.15

Joong-Hoon Choi / Lab Manager

(place and date of issue)

(name and signature of authorised person)

* It is not the address of Samsung Service Centre.
For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.

Some of the contents in this manual may differ from your device depending on the software of the device or your service provider.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-25367A
English (EU). 12/2010. Rev. 1.4