

TFT LCD CAR MONITOR



Operating instructions

NOTICE: Please read the user manual carefully before using this product

Specification

Type: TFT LCD

Screen size: 7.0 "

Display format : 16:9

Pillow Model: GMSP-007VS、GMSP-007AO

Pillow Specification: GS-10/130-180mm (Suitable

Tube ϕ 12mm ϕ 12.7mm)

GS-12/130-180mm (Suitable

Tube ϕ 12.7mm ϕ 14mm)

Power consumption: 8.5W

Power supply : DC 12V

Brightness:250 nits

System:PAL/NTSC/SECAM

Video input:V1/V2

Operation Temperature:-10 $^{\circ}$ C \sim +60 $^{\circ}$ C

Storage Temperature:-20 $^{\circ}$ C \sim +70 $^{\circ}$ C

Resolution:480(W)R/G/B \times 234(H)

Accessories

Manual	1 PC
Remote controller	1 PC
Installing tube	1 Pair
Packing cable	1 PC
Inserted piece	1 Pair

Dear User

Thanks a lot for your support and purchasing of our TFT LCD headrest monitor. We appreciate your purchase of our product. For maximum enjoyment and prolonged life of this unit, we strongly recommend you read this owner's manual in detail before attempting to operate the unit. Please retain this manual for future reference.

The unit you have purchased has the following advantages

- 1、Radiation shielded
- 2、Power saving
- 3、High clarity of LCD screen
- 4、High Brightness/contrast
- 5、Wide view angle
- 6、Quick response time
- 7、On Screen Display (OSD) and Infrared Remote Control
- 8、Multiple video/audio cabling options i.e.: VCD /DVD, portable video camera, webcam, GPS and portable electronic games

WARNING

This unit is not intended for installation in the front driver/passenger area where it may be seen by the driver. Installation of this unit where it may impair the driver's concentration is dangerous. The manufacturer or retailer assumes no responsibility for failing to obey the above warnings. To reduce the risk of electric shock, please do not expose this unit to rain, moisture or attempt to open the unit. There are no user serviceable parts inside the unit.

Caution:

1. Please read these instructions carefully before operating the unit and observe the relevant warnings.
2. Please keep away from moisture and direct sunlight.
3. Do not attempt to disassemble or remodel the unit yourself to avoid electric shock.
4. Please clean the display with a dry and soft cloth. Do not clean the display with any alcohol or chemical cleaner.
5. Please ask a qualified engineer to install the unit.
6. Do not try to recharge the remote control battery.
- 7 Please keep the remote control battery away from children.
8. The display may sometimes show pixels (light dots or dark dots) during use. This is normal and does not indicate any malfunction.

COLOR



ZOOM 16:9

◀ SYSI

SLEEP 0

ENGLISH 中文

IR function

1. Audio IR Transmitter function: left transmitter frequency: 2.3MHZ, right transmitter frequency: 2.8MHZ
2. When the monitor is on, choose the visual-audio channel to activate IR function. You can control the volume by the earphone

■ Notice: IR function is optional

operating instruction

Press "MENU" button to select menu:
press "◀" or "▶" to select options, press
"MENU" to enter option, then press "◀"
or "▶" to select sub-menu, press "MENU",
"◀"、"▶" to confirm option and make
adjustment.

BRIGHT



 
CONTRAST



Functionality

- 1、OSD function
- 2、Support PAL/NTSC/SECAM system
- 3、Blue panel function: if no signal, the panel will be auto-shift to blue mode
- 4、Up down/ left right revolving
- 5、When the unit has no signal, the monitor will auto-shift blue screen and in few minutes, the monitor will shut down automatically


Control panel

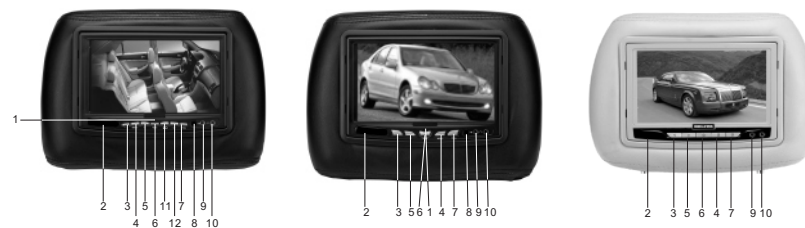



- | | |
|---------------------------|------------------|
| 1、PI Power indicator | 2、 IR |
| 3、 Function- | 4、 Menu |
| 5、 Function+ | 6、 Power switch |
| 7、 V1/V2 | 8、 Remote window |
| 9、 Audio/Video Input | 10、 Earphone |
| 11、 Screen display format | 12、 Reverse |

1. Power: Press this button for power On or Off.
2. Video Select: Press this button to switch Video 1 or Video 2 inputs.
3. Menu: Enter to function menu.
4. "◀" and "▶": Navigate through the various menu options.
5. Reverse: up down/left right revolving with diagram.

 Method of wiring

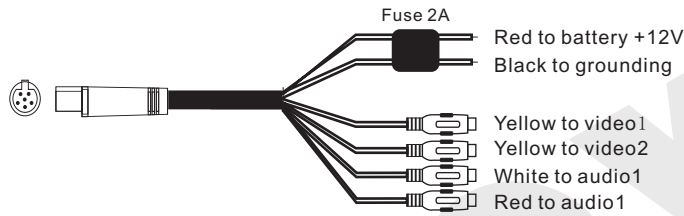


Guide for pole adjustment

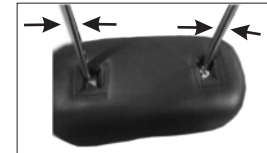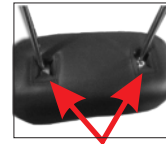  

1. take apart the screw

 2. adjust the steel pipes (left or right)

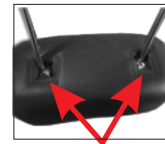


3. fix the screw



4. connect the cable for complete

 Remote control

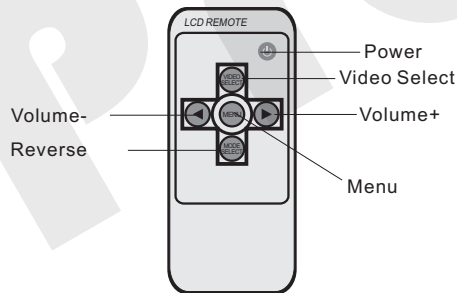

4

5

INSTALLATION

