


# SHARP®

## VIDEO CASSETTE RECORDER OPERATION MANUAL

Please read this operation manual carefully  
before using the VCR.

MODEL  
VC-A410U  
VC-A411U  
VC-A420U  
VC-H810U  
VC-H811U  
VC-H820U

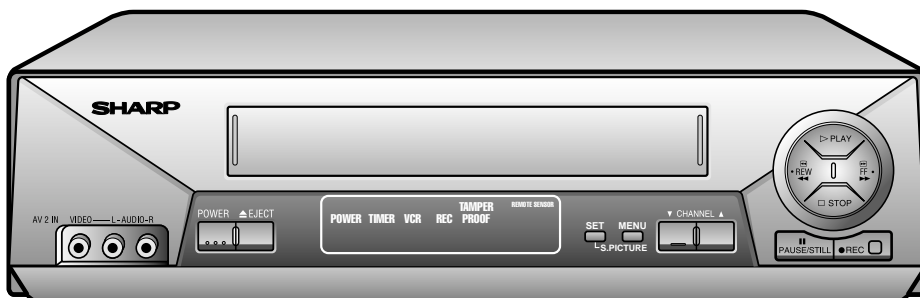





(VC-H820U)



### MID-DRIVE

VHS HQ HIGH QUALITY

### [IMPORTANT] EZ SET UP (AUTO CHANNEL/CLOCK SET UP)

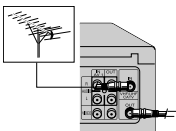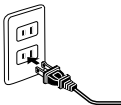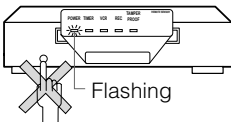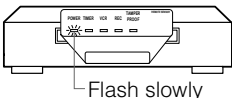 <p>1 Connect Antenna/Cable to VCR first.</p>	 <p>2 Then, plug into AC Power Outlet.</p>	 <p>3 Do not press the <b>POWER</b> button until completion of EZ SET UP.</p>	 <p>4 EZ SET UP complete.</p>
--	---	--	--

Detail: Please see page 15

General Information

Setting Up

Basic Operations

Recording

Special Functions

Helpful Hints

This video cassette recorder (VCR) uses "ONLY" **VHS** cassette tapes, NTSC video signals and 120 V AC, 60 Hz (standard household current).

For future reference, record the model and serial number (located on the rear of the VCR) in the space provided.

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol warns the user of uninsulated voltage within the unit that can cause dangerous electric shocks.



This symbol alerts the user that there are important operating and maintenance instructions in the literature accompanying this unit.

**WARNING**—Keep your VCR away from electrical and magnetic appliances which could impair performance. Be sure to position your VCR away from your TV or video monitor by at least 8".

## WARNING OF DEW FORMATION

Whenever your VCR is moved from a cold to a warm environment, it is important that you plug the unit in, turn the power on and allow it to sit for about 2 hours before attempting to play a tape. This period will allow any dew formation to evaporate. Failure to do so may result in tape and/or video head damage.

After the 2 hour evaporation period, you may witness a "snowy" picture for the first few minutes of VCR operation. This picture noise will disappear shortly thereafter.

As an ENERGY STAR® Partner, SHARP has determined that this product meets the ENERGY STAR® guidelines for energy efficiency. ENERGY STAR is a U.S. registered mark.

### WHAT IS ENERGY STAR®

TVs and VCRs use energy both when they are on and when they are off. North Americans spend more than \$1 billion a year of energy consumed by TVs and VCRs when they are not in use. The new ENERGY STAR® models will reduce that energy "leakage" by up to 75 percent. Ultimately, this will mean more than \$500 million a year in energy savings for consumers.

The energy savings will help reduce the burning of fossil fuels and the related carbon dioxide pollution that contributes to global warming. If every North American family replaced their TVs and VCRs with ENERGY STAR® models, it would reduce carbon dioxide emissions by five million tons every year -- equivalent to eliminating the pollution from more than one million cars.

By using ENERGY STAR® products, you will save money on your electric bills and use less energy. This not only makes good economic sense but also good for our environment.

# IMPORTANT SAFEGUARDS AND PRECAUTIONS

## CAUTION

READ THE SAFETY AND OPERATING INSTRUCTIONS before operating your VCR.  
FOLLOW INSTRUCTIONS AND HEED ALL WARNINGS on your VCR and in this manual.

## INSTALLATION

1. Operate only from a power source indicated on your VCR or in this manual. If you are unsure of your power supply, ask your local power company.

2. As a safety feature, your VCR is equipped with either a 2-wire polarized plug (one plug blade bigger than the other) or a 3-wire grounded plug (a third pin for grounding). The 2-wire polarized plug will fit only one way into the power outlet. The 3-wire grounded plug will fit only into a grounding-type power outlet.

If the plug does not fit, ask your electrician to replace your obsolete outlet. Do not modify the plug. To do so will void the safety feature.

3. Protect and route power cords so they will not be stepped on or pinched by anything placed on or against them. Be especially careful at plug-ins, convenience receptacles or cord exit points from the VCR. Frayed power cords or damaged plugs are hazardous. Have them replaced by a qualified service technician.

Overloaded wall outlets and extension cords may cause fire or electrical shock hazards.





4. Do not cover or block ventilation holes in the VCR cabinet. Doing so may damage the VCR or cassette or cause fire.

Do not place your VCR on a soft surface which could block ventilation holes on the bottom. Avoid enclosed installations such as bookshelves or racks unless ventilation is adequate.

5. Avoid excessive humidity, sudden temperature changes or temperature extremes. Dew may form inside your VCR or on the cassette.

6. To avoid costly damage or injury, place your VCR flat on a solid, stable surface free from vibrations; do not place any heavy objects on top of it. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer; follow all instructions regarding their use exactly.

7. An appliance and cart combination should be moved with care. Quick stops, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.

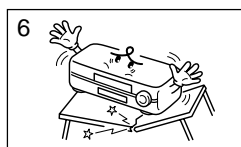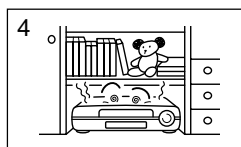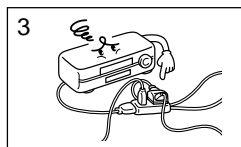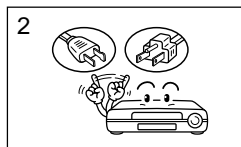

## OPERATION/CLEANING

1. Keep your VCR away from electrical and magnetic appliances which could impair performance. Be sure to position your VCR away from your TV or video monitor by at least 8".

2. Keep your VCR away from wet locations such as bathtubs, sinks, laundries, wet basements and swimming pools.




3. Use only accessories recommended by the manufacturer to avoid fire, shock or other hazards.

4. If your VCR has been exposed to rain, moisture or strong impact, unplug it and have it inspected by a qualified service technician before resuming use.

5. Unplug your VCR and disconnect it from the antenna and/or cable system during a lightning storm or an extended period of discontinued use.


6. Unplug your VCR before cleaning. Use a damp cloth for cleaning. Do not use cleaning fluids or aerosols which could enter the unit and cause damage, fire or electrical shock. These substances may also mar the finish of your VCR.

7. Never open or remove covers or make any adjustments not described in this manual. Attempting to do so could expose you to dangerous electrical shock or other hazards. It may also cause serious damage to your VCR.

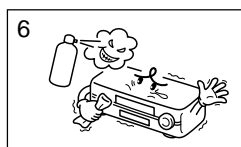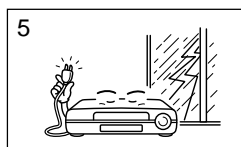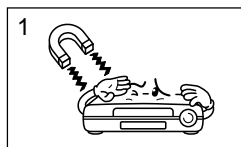




8. Keep liquids and foreign objects away from your VCR. Never operate your VCR if any liquid or foreign object has entered it. Electrical shorts could result and possibly cause fire or shock hazards. Unplug your VCR immediately and have it inspected by a qualified service technician.

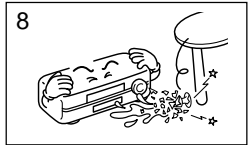

## OUTDOOR ANTENNA GROUNDING AND POWER LINES

1. If an outside antenna or cable system is connected to your VCR, be sure the antenna or cable system is grounded, thus providing some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No.70-1984, provides information regarding proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See diagram below.

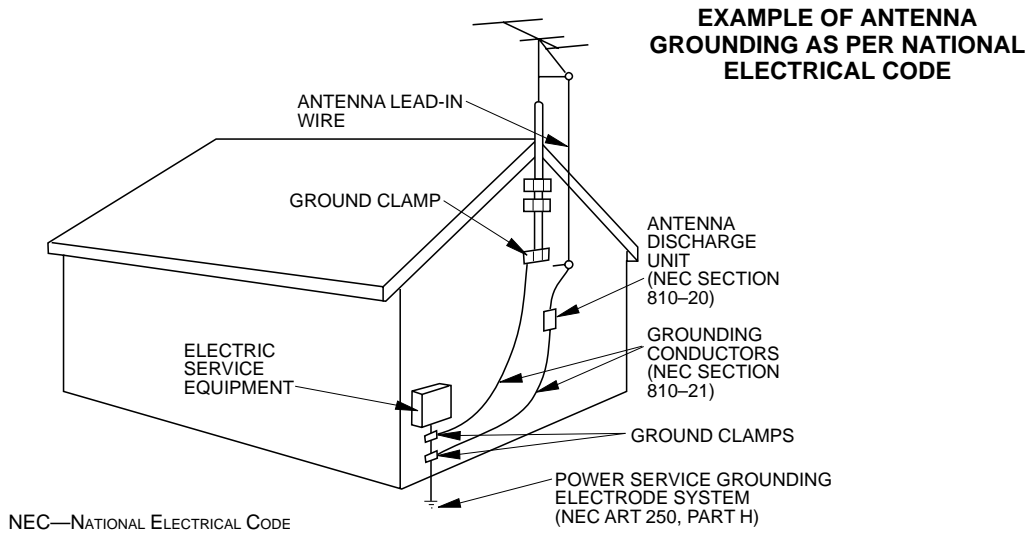

2. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come into contact with power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from coming into contact with power lines or circuits; contact with them might be fatal.

## SERVICE

1. Do not attempt to service this VCR yourself. Instead, unplug it and contact a qualified service technician. (See **LIMITED WARRANTY** at the end of this manual.)
2. Be sure the service technician uses authorized replacement parts or their equivalents. Unauthorized parts may cause fire, electrical shock, or other hazards.
3. Following any service or repair, be sure the service technician performs safety checks to certify that your VCR is in safe operating order.

## OTHERS

1. For Your Information: Your full understanding of the following is appreciated. Parliament by statute has decreed that it is illegal to make copies of copyrighted material of any manner or kind without the consent of the copyright owner, subject to the "Fair Dealing" exceptions in the Act penalties may be imposed on those guilty of making such copies.
2. Normally, your VCR does not require head cleaning. However, the heads may become clogged when an old or damaged tape is used. If the playback picture becomes blurred, the heads may need cleaning. Head cleaning should be performed by a qualified technician. Contact the nearest Sharp Factory Service Center or Authorized Service Station. Do not use a cleaning tape unless it is new and of high quality. Excessive use of cleaning tapes may also damage the heads.

# CONTENTS



## General Information

<b>IMPORTANT SAFEGUARDS AND PRECAUTIONS</b> .....	<b>3</b>
<b>Features</b> .....	<b>6</b>
<b>Accessories</b> .....	<b>6</b>
<b>Major Components of Your VCR</b> .....	<b>7</b>
<b>Remote Control</b> .....	<b>8</b>
• Inserting the Batteries	



## Setting Up

<b>Connecting the VCR</b> .....	<b>9</b>
• RF Connection	
• AV Connection	
• After the Connection	
• Setting the 3 ↔ 4 Output Channel Selector	
<b>Cable TV Connections</b> .....	<b>10</b>
<b>Menu Screen</b> .....	<b>14</b>
<b>OSD (On Screen Display)</b> .....	<b>14</b>
• How to Display Indicators	
<b>EZ Set Up (With Auto Clock Setting)</b> .....	<b>15</b>
<b>Setting the Language</b> .....	<b>16</b>
<b>Setting the Clock</b> .....	<b>16</b>
• Auto Clock Setting	
• Manual Clock Setting	
• Automatic Daylight Saving-Time (D.S.T.) Adjustment	
<b>Setting the Channels</b> .....	<b>19</b>
• Adding Channel Memory/Erasing Channel Memory	
<b>Mode Selection</b> .....	<b>21</b>



## Basic Operations

<b>Playback</b> .....	<b>22</b>
• Inserting a Video Cassette	
• Playback	
• Fast Forward and Rewind	
• Video Search	
• Slow Motion Playback (only with the remote control)	
• Still Picture and Frame Advance	
• Automatic Tracking Control System	
• Manual Tracking Control	
• Blue Screen Noise Elimination	
• Quick Start with Full Loading Mechanism	
• Full Automatic Playback	
• Audio Output Mode	



## Recording

<b>Recording a TV Program</b> .....	<b>25</b>
• Without a Cable Box or Digital Satellite Receiver	
• With a Cable Box or Digital Satellite Receiver	
• To Watch Another TV Program While Recording	
• Cassette Erase Protection	
• Recording Speeds	
• Recording Hi-Fi Stereo Sound	
• Recording MTS (Multi-channel TV Sound) Broadcasts	
• Monitor Output When Receiving a SAP Broadcast	
• Tape Dubbing Connection Instructions	
<b>Simple Recording Timer</b> .....	<b>28</b>
• Changing the Contents of the Simple Recording Timer	
• Cancelling the Simple Recording Timer	
<b>Recording with the Timer</b> .....	<b>29</b>
• Confirming Timer Programs	
• Cancelling Timer Programs	



## Special Functions

<b>Sharp Super Picture</b> .....	<b>32</b>
<b>Recorded Section Auto Repeat</b> .....	<b>32</b>
<b>Auto Zero Back</b> .....	<b>32</b>
<b>DPSS (Digital Program Search System)</b> .....	<b>33</b>
<b>Skip Search</b> .....	<b>33</b>
<b>Instant Replay</b> .....	<b>33</b>
<b>Tamper Proof</b> .....	<b>34</b>



## Helpful Hints

<b>Specifications</b> .....	<b>35</b>
<b>Troubleshooting</b> .....	<b>36</b>
<b>Service Information</b> .....	<b>36</b>
<b>LIMITED WARRANTY</b> .....	<b>38</b>



## Features

### Only for VC-H810U, VC-H811U, VC-H820U

- **VHS Hi-Fi Stereo Sound**
- **Built-in MTS (Multi-channel TV Sound) Decoder** — Lets you record stereo or SAP (Separate Audio Program) broadcasts.

### Common Features

- **EZ Set Up** — VCR tuner channels and clock are automatically set for both Air and Cable channels.
- **S-VHS Quasi Playback**  
*Notes for S-VHS tape*
  - Playback of S-VHS recorded tapes is possible.
  - Playback of S-VHS image quality is not available.
  - Picture noise or distortion may appear on the screen during playback in the SLOW or STILL mode.
  - S-VHS recording is not available. However, HQ recording is possible with S-VHS tape.
- **Double-Azimuth 4-Heads**
- **19 $\mu$  Clear Picture System (in EP mode)** — For enhanced picture quality in EP (Extended Play) mode.
- **HQ System for Better Resolution and Color Reproduction**
- **Multi-Language (English/Spanish/French) OSD (On Screen Display) with Menu Screen Guidance** — On-screen setting and recording instructions.
- **181-channel PLL Quartz Synthesized Random Access Tuner with Automatic Channel Setting**
- **Quick Start with Full Loading Mechanism**
- **1-Year, 8-Event Programmable Timer**
- **Simple Recording Timer**
- **Unified Remote Control**

- **Sharp Super Picture** — Enhances picture quality during playback.
- **5 Seconds Timer Backup**
- **Field-Still/Variable Slow/Frame Advance**
- **Automatic Daylight Saving-Time (D.S.T.) Adjustment** — Automatically adjusts VCR clock to daylight saving-time.
- **Blue Screen Noise Elimination**
- **Auto Tracking Control System** — Automatically adjusts tracking during playback.
- **Digital Program Search System (DPSS)** — Quickly locates the beginning of a specific recording.
- **Skip Search** — Quickly operates a forward video search in 30 second intervals, then resumes playback.
- **Instant Replay** — Quickly operates a reverse video search in 20 second intervals, then resumes playback.
- **Auto Zero Back** — Quickly finds "0:00.00" point and stops there.
- **Recorded Section Auto Repeat** — Continually plays back a recorded section of the tape.
- **Full Automatic Playback**
- **Tamper Proof** — Prevents accidental change of the operation mode.
- **Up to 8 Hours of Recording and Playback (with T-160 cassette)**


### Only for VC-A420U, VC-H820U

- **Built-in Front AV Jacks** — For easy connection of audio/video equipment such as the Sharp Viewcam.



## Accessories


Be sure that the following accessories are all included with your VCR.

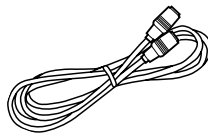

Round coaxial cable  
(75 Ohm, 1 m [3-1/4 ft.])  
QCNW-8115AJZZ  
or  
(75 Ohm, 0.9 m [3-11/18 ft.])  
QCNW-8530AJZZ  
or  
QCNW-8533GEZZ  
or  
QCNW-8555AJZZ  
or  
QCNW-8614AJZZ



 Remote control unit  
RRMCG1236AJSA  
or  
RRMCG1236AJSB  
or  
RRMCG1236AJSC




AA batteries for  
the remote  
control unit



# Major Components of Your VCR

[Front]

Cassette compartment (see **Playback/Recording**)

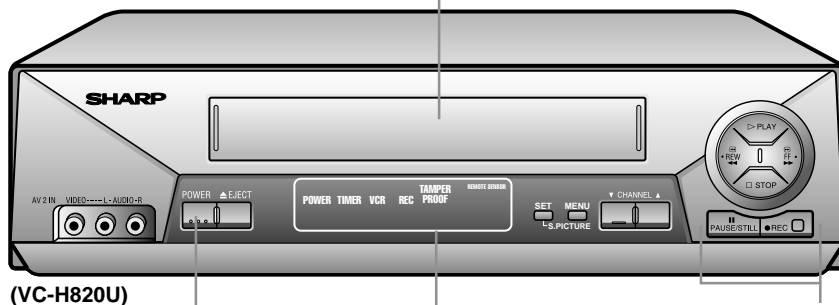

(VC-H820U)

**POWER** button


(When pressed to turn on the VCR, POWER LED indicator will light up. When the power is turned off, POWER LED indicator will turn off.)

Basic function controls (see **Playback/Recording**)

### NOTE

- The design may be slightly different depending on the model.

## LED Indicator (explained throughout the operation instruction)

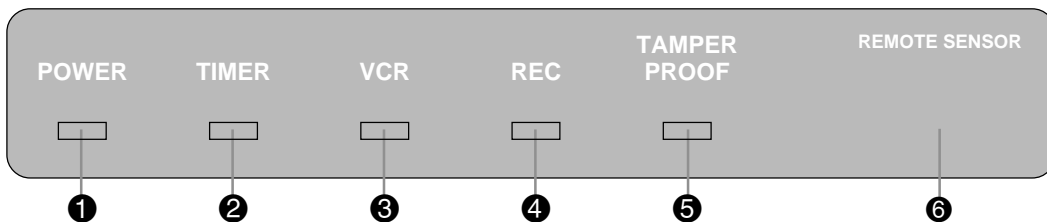

- ① **POWER LED indicator**  
This indicator lights up whenever the VCR is turned on.
- ② **TIMER LED indicator**  
This indicator lights up when the VCR is set for timer recording. Simple Recording Timer and Recording with the Timer.
- ③ **VCR LED indicator**  
This indicator lights up when selecting "VCR" by using the **TV/VCR** button.
- ④ **REC LED indicator**  
This indicator lights up during recording. This indicator flashes during REC-Pause.
- ⑤ **TAMPER PROOF (Ⓢ) LED indicator**  
This indicator lights up when the set mode is locked.
- ⑥ **Remote Sensor**  
Point Remote Control at this window.

[Rear]

### (VC-H810U, VC-H811U, VC-H820U)

Connection terminals (see **Connecting the VCR and Cable TV Connections**)

Connection terminals (see **Tape Dubbing**)



3 ↔ 4 OUTPUT CHANNEL selector (see **Setting the 3 ↔ 4 Output Channel Selector**)

### (VC-A410U, VC-A411U, VC-A420U)

Connection terminals (see **Connecting the VCR and Cable TV Connections**)


Connection terminals (see **Tape Dubbing**)



3 ↔ 4 OUTPUT CHANNEL selector (see **Setting the 3 ↔ 4 Output Channel Selector**)



# Remote Control

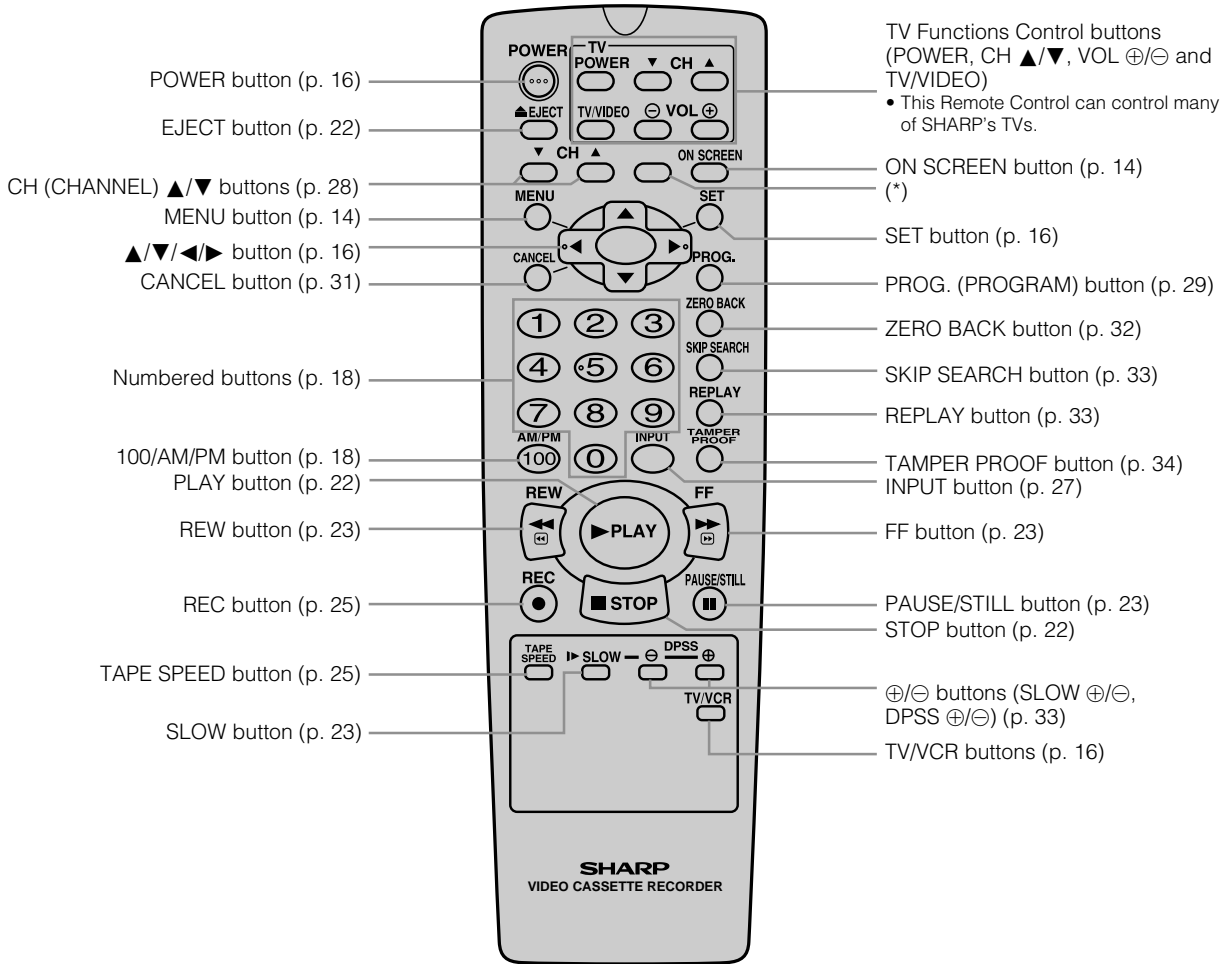

## NOTE

\*: This button cannot be used for this model.


## Inserting the Batteries

Make sure that the batteries have been properly installed first. Fit two batteries type "AA". If the remote control stops working, fit new batteries.

Ensure the batteries are fitted correctly, matching the polarities (⊕/⊖) indicated in the remote control.

## NOTE

- Do not subject the remote control to shock, water or excessive humidity.
- The remote control may not function if the VCR sensor is in direct sunlight or any other strong light.
- Incorrect use of batteries may cause them to leak or burst. Read the battery warnings and use the batteries properly.
- Do not mix old and new batteries, or mix brands in use.
- Remove the batteries if the remote control will not be operated for an extended period of time.
- If the remote control does not function properly when new batteries are installed, remove the batteries and keep pressing any button for 10 seconds before re-installing them.

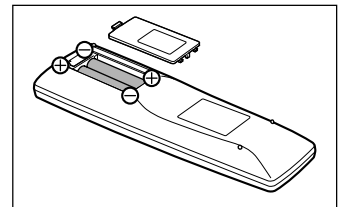





# Connecting the VCR

The connection method differs depending on the type of TV.

If you have cable TV (CATV), see **Cable TV Connections**.

## RF Connection (for connection to a TV without AV terminals)


- ❶ Disconnect the TV antenna from the TV.
- ❷ Connect the TV antenna cable to the ANTENNA IN terminal on the rear of the VCR.
- ❸ Connect the TV OUT terminal on the rear of the VCR with the antenna terminal on the TV using a coaxial cable. Select the TV channel 3 or 4 corresponding to the 3 ↔ 4 output channel selector of the VCR. (See **Setting the 3 ↔ 4 Output Channel Selector** below.)

## AV Connection (for connection to a TV with AV terminals)

- ❶ Disconnect the TV antenna from the TV.
- ❷ Connect the antenna, VCR, and TV using the Audio/Video cable and coaxial cable (supplied) as shown.
- ❸ Select the video input mode or A/V input mode on your TV. (See the **TV operation manual** for details.)

### NOTE

- If your VCR is a monaural model, connect the audio cable to "AUDIO OUT" on the VCR.

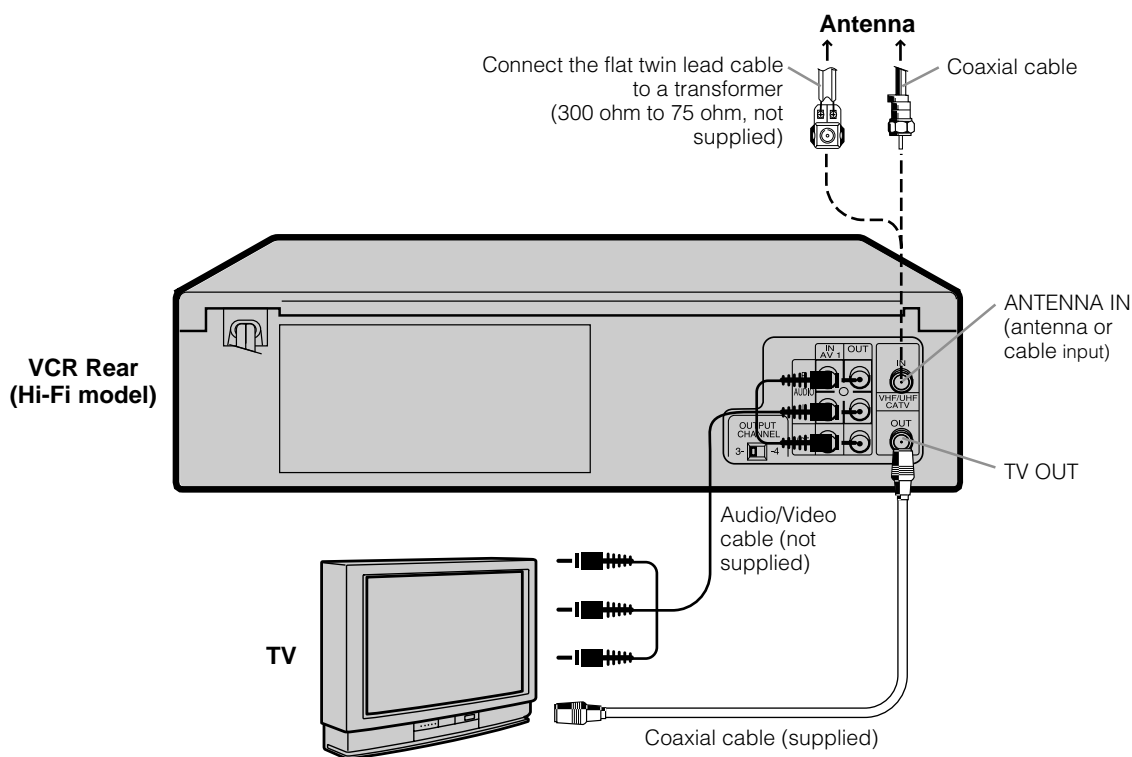

## After the Connection


Plug in the power cord of the TV. Then go to **EZ Set Up**.

## Setting the 3 ↔ 4 Output Channel Selector

The 3 ↔ 4 OUTPUT CHANNEL selector changes the VCR OUTPUT to standard TV broadcasting signals. Both your TV and VCR must be set to the same channel (i.e. TV on channel 3 and VCR OUTPUT CHANNEL selector on 3).

Your VCR is set to channel 3 at the factory, so your TV should be tuned to channel 3 as well. If channel 3 is an active broadcast channel in your area, set the VCR 3 ↔ 4 OUTPUT CHANNEL selector to 4 and tune your TV to channel 4.

Rear of Your VCR

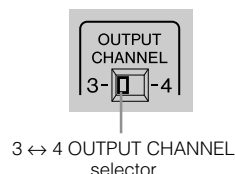



# Cable TV Connections

Your VCR is capable of receiving the following non-scrambled channels.

- Scrambled channels can be received with the cable box supplied by your cable TV company.

## PREPARATION >>>

Set the 3 ↔ 4 OUTPUT CHANNEL selector on the rear of the VCR to 3 or 4. (Factory preset: 3)

### First check your TV/CATV system

#### Step ① Is your TV cable compatible with the VCR?

- YES → Go to **Step ②**
- NO → Go to **Step ③**

#### Step ② Does your CATV system have some or all channels scrambled?

- YES → Go to **D**
- NO → Go to **A**

#### Step ③ Does your CATV system have some or all channels scrambled?


- YES → Go to **D**
- NO → Go to **Step ④**

#### Step ④ Choose the type below.

- Basic connection (only for descrambled CATV signals.) → Go to **B**-**1** or **2**
- To watch a CATV program while recording a TV program by using the A/B switch. → Go to **C**

### **A** Connection without a cable box


- Connect as shown. Then go to "After the Connection".

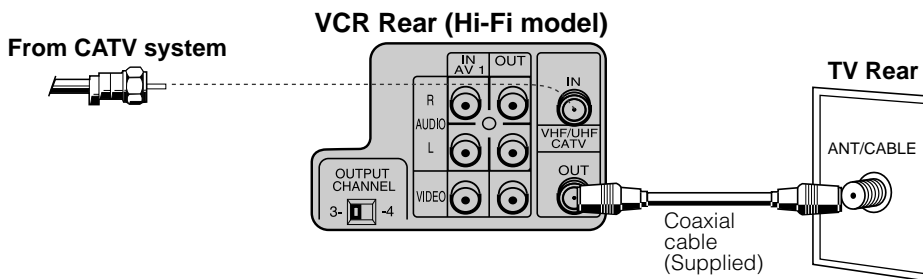



## B Connection with cable box


- 1
- Connect as shown. With this connection, it is possible to record descrambled CATV signals. Then go to “**After the Connection**”.

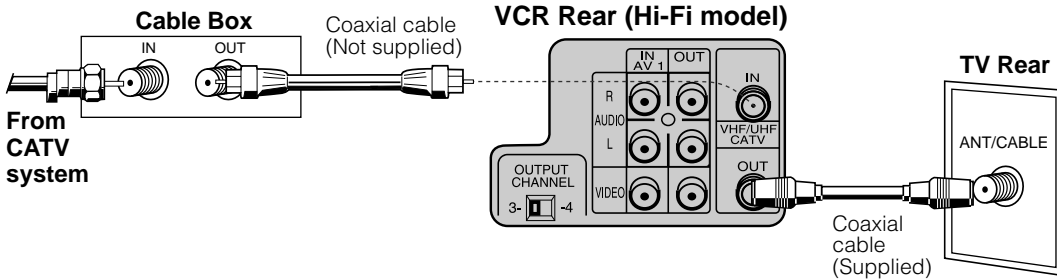

### NOTE

- If the cable box is turned off, it will not output any signals, thus making it impossible to record or view a program from the CATV system.
- In the case of the above connections, it is not possible to change channels using the VCR remote control. Only the cable box can be used to change channels.
- Only one channel at a time can be programmed for recording programs with the timer. It is not possible to watch a TV program different from the one being recorded.
- Depending on which terminals the TV has, a separate combiner (mixer) or separator (splitter) may be necessary.

- 2
- Connect as shown. With this connection, it is not possible to record CATV programs which have been scrambled, but is possible to record one channel and watch the other one. Then go to “**After the Connection**”.

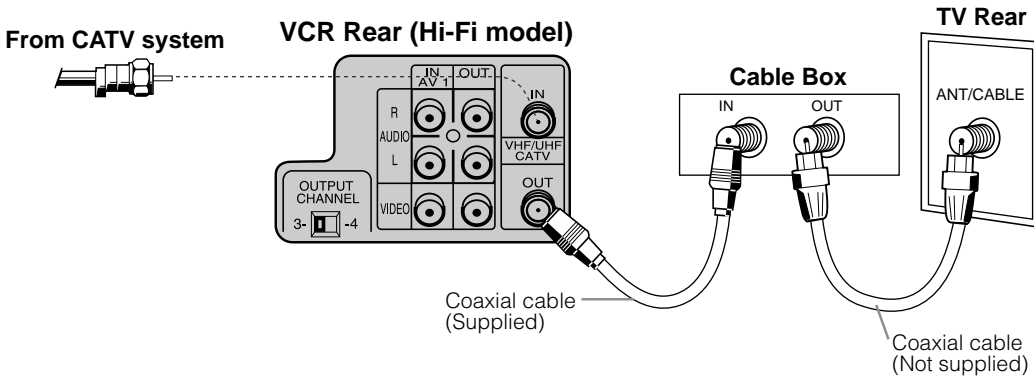

### NOTE


- With the above connection, ▲/▼ of the VCR or the numbered buttons on the remote control can be used to select channels.
- Depending on which terminals the TV has, a combiner (mixer) or separator (splitter) may be necessary.
- To record one channel and watch another, the VCR must be set to the TV mode.



### C Connection with cable box, A/B switch and splitter

By using an A/B switch or splitter, it is possible to switch between the cable box and the VCR output. For example, while recording a TV program with the VCR, it is possible to watch a CATV program (including descrambled programs) using the A/B switch.

- Connect as shown. Then go to **“After the Connection”**.

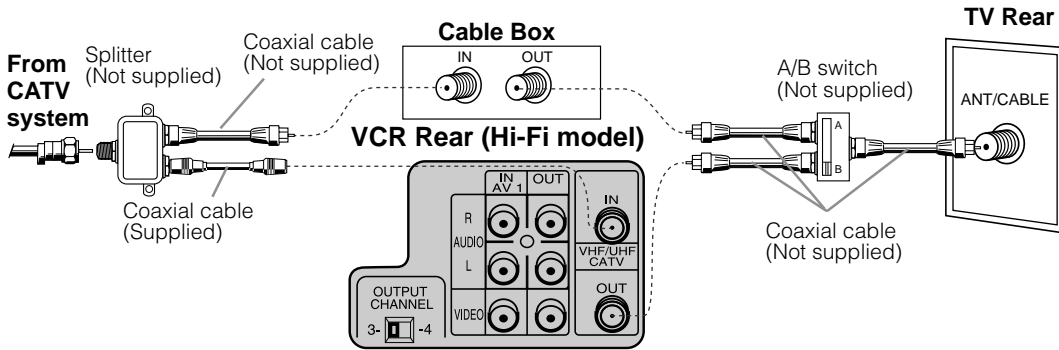

### Using the A/B Switch

1. Set the A/B switch to the “A” position in the following situations.
  - ❶ To watch a cable TV program while recording another program.
  - ❷ To watch a scrambled cable TV program.
  - ❸ To watch a cable TV program when the VCR is turned off.

#### NOTE


- Use the cable box to change channels.
  - If you turn off the cable box, you cannot watch a CATV program.
2. Set the A/B switch to the “B” position in the following situations.
    - ❶ To play back a cassette on the VCR.
    - ❷ To watch a program which is being recorded with the VCR tuner.
    - ❸ To watch a program using the VCR tuner.



### D Connection with two cable boxes, A/B switch and splitter

The following connection is necessary to record a cable TV program (even those scrambled by a cable company) while watching another cable TV program. The following connection requires two cable boxes, a 2-way splitter and an A/B switch.

- Connect as shown. Then go to “After the Connection”.

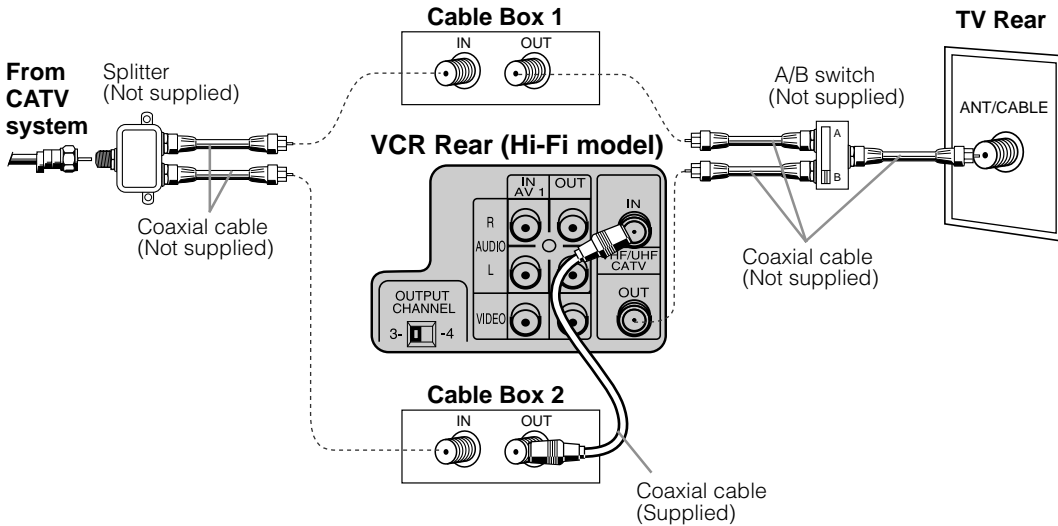

### Using the A/B Switch

1. Set the A/B switch to the “A” position in the following situations.
  - ① To watch a cable TV program while recording another program.
  - ② To watch a cable TV program when the VCR is turned off.
2. Set the A/B switch to the “B” position in the following situations.
  - ① To play back a cassette on the VCR.
  - ② To watch a program being recorded, or to change (or watch) channels with the cable box 2. The output channel of the cable box 2 and the VCR must be the same.

#### NOTE

- If you turn off the cable box, you cannot record or view a CATV program.
- If you have questions regarding any connection procedure, please contact your cable company or the nearest Sharp Authorized Service.

### After the Connection

Plug in the power cords of the TV and cable box.


Then go to **EZ Set Up**.



# Menu Screen

MENU screen is a home screen used to select various screen functions. A sub-menu will appear once you select an item for the menu.

- 1 Turn on the TV and select the video channel. (See **Setting the 3 ↔ 4 Output Channel Selector** on page 9.)
- 2 Press **POWER** (POWER LED indicator will light up) and then **TV/VCR** to select "VCR" (VCR LED indicator will light up).
- 3 Press **MENU** to display the MENU screen.

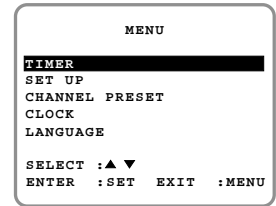

The following 5 items can be set by using the MENU screen.


- TIMER..... Setting a timer recording (and checking it). (See page 29.)
- SET UP ..... VCR operating conditions are set according to the broadcast reception and tape playback conditions. (See page 21.)
- CHANNEL PRESET ..... Setting the channels. (See page 19.)
- CLOCK ..... Setting the present time. (See pages 16–18.)
- LANGUAGE ..... Selection of language to be used for the MENU screen. (See page 16.)

- 4 Press **▲/▼** and then **SET**. The screen changes to the one which you have selected.
- 5 To cancel the MENU screen, press **MENU**.



# OSD (On Screen Display)

To facilitate the operation and check the current VCR mode information, the following OSD (On Screen Display) will appear on the TV screen when using this VCR.

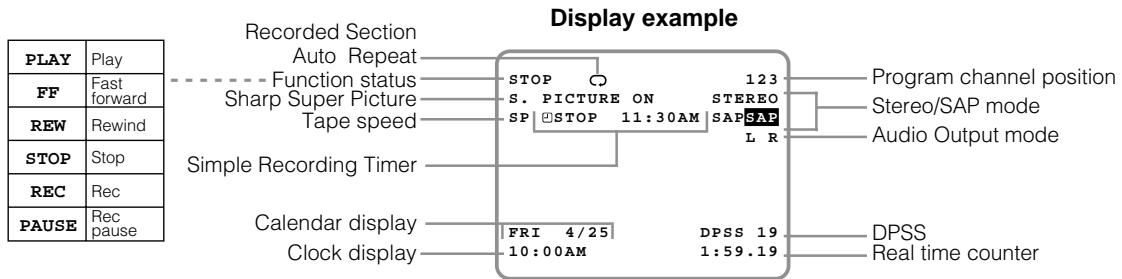


### NOTE

- If the clock is not set, the time and date will not be displayed.
- Stereo/SAP and Audio Output modes are only for Hi-Fi models.

## How to Display Indicators

 Each time **ON SCREEN** is pressed, the screen changes as follows:



### AUTO Display

When an operation button, numbered button or **CH ▲/▼** is pressed, the current function status or the number of the channel will be displayed in the upper section of the TV screen for about 3 seconds.




### NOTE

- When the VCR power is turned off, the display mode is retained in memory.
- When you record a video signal output from this VCR on another VCR, press **ON SCREEN** to select Display Off. (If the function status is displayed on the screen, it is also recorded on the tape.)



## EZ Set Up (With Auto Clock Setting)

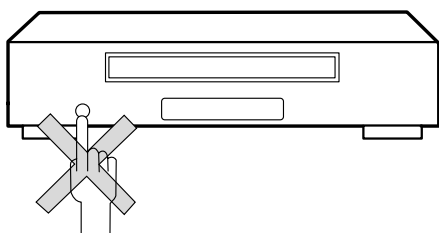

### IMPORTANT (Caution during EZ Set Up):

- Do not press the **POWER** button on the **VCR** or remote control.
- Do not insert a video cassette into the **VCR**.

 
The EZ Set Up function automatically sets the tuner channels and clock when the antenna cable is connected to the rear of the VCR and the power plug is then connected to an AC outlet.

### IMPORTANT:

When using a cable box:

- See **Cable TV Connections**.
- Leave **POWER** on the cable box turned on and select a channel that carries EDS signals.


During Auto Channel Setting and  
Auto Clock Setting



Flashes quickly



 EZ Set Up complete



Flash slowly

### PROCEDURE

- 1 Make sure that the antenna cable is connected. For connection configuration, refer to **Connecting the VCR**.
- 2 Connect the VCR power plug to an AC outlet.
- 3 The tuner channels and clock will automatically be set. The **POWER** LED indicator will flash quickly to indicate the setting.
  - This VCR can monitor and use time-signals (EDS signals), which are provided by some TV stations, to automatically adjust the VCR clock. This VCR automatically searches EDS signals, but if you are in a hurry to use timer recording or know the channel of the EDS signal carrier in your area, follow the procedure in **Auto Clock Setting** or **Manual Clock Setting**.
- 4 When the setting is completed, **POWER** LED indicator will flash slowly.

### NOTE

- If power is supplied to the VCR before the cable is connected, EZ Set Up will not be able to preset the channels into memory. If this occurs unplug the VCR from the power source and wait a few minutes. Check the cable/antenna connection and supply power to the VCR. EZ Set Up will automatically begin again.
- If the power is turned on during EZ Set Up, the Auto Channel setting will be interrupted and the tuner channels will not be able to be preset.
- Auto Clock Setting may take several minutes.
- If the Auto Clock Setting is not completed within 30 minutes, there may be no channels with EDS signals. In this case, set the clock manually. (See **Manual Clock Setting**.)
- If the antenna signal is weak, the Auto Clock Setting function may not operate.
- During initial channel setting, the channels are set into the AIR channel setting. To watch a cable TV channel, select "CATV" on the CHANNEL PRESET screen. (See **Setting the Channels**.)




# Setting the Language

When you use the VCR for the first time or the power is interrupted for more than 5 seconds (power failure, etc.), you should set the language to be used for the MENU screen.

## PREPARATION >>>

- Turn on your TV and select the video channel.  
(See **Setting the 3 ↔ 4 Output Channel Selector.**)
- Press **POWER** (POWER LED indicator will light up) and then **TV/VCR** to select "VCR". (VCR LED indicator will light up.)

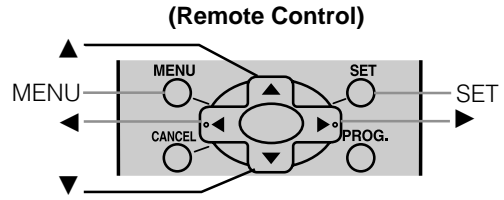

→	<p>❶ Press <b>MENU</b>. LANGUAGE screen will appear.</p>
→  → <b>Normal Screen</b>	<p>❷ Select the language with ▲/▼. <i>Ex.: ENGLISH</i></p> <p>❸ Press <b>SET</b> to enter. To return to the normal screen, press the <b>MENU</b> button.</p>

## NOTE

- If you press **MENU** to exit the LANGUAGE screen in Step ❸, the data will not be stored.
- You can also use the ▲ (**CHANNEL ▲**), ▼ (**CHANNEL ▼**), ► (**FF ►►**), ◀ (**REW ◀◀**), **MENU** or **SET** buttons on the VCR to set the On Screen Display (OSD).



# Setting the Clock

## Auto Clock Setting (If you DO know a channel that carries EDS signals)

## PREPARATION >>>

- Make sure that the antenna cable is connected and connect the power cord.
- Turn on your TV and select the video channel. (See **Setting the 3 ↔ 4 Output Channel Selector.**)
- Press **POWER** (POWER LED indicator will light up) and then **TV/VCR** to select "VCR". (VCR LED indicator will light up.)

## IMPORTANT:


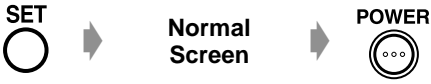
When using a cable box:

- See **Cable TV Connections.**
- Leave POWER on the cable box turned on and select a channel that carries EDS signals.

→  →	<p>❶ Press <b>MENU</b>. Select "CLOCK" with ▲/▼ and then press <b>SET</b>.</p>
→	<p>❷ Select "AUTO" with ▲/▼ and then press <b>SET</b>.</p>
→	<p>❸ Set EDS CH SET mode to "MANUAL" with ◀/▶ and then press ▼.</p>





	<p>④ Select a channel that carries EDS signals with ◀/▶.</p> <p>Ex.: 07</p> <ul style="list-style-type: none"> <li>The number of channels that can be selected depends on the mode setting on the CHANNEL PRESET screen. See <b>NOTE</b>.</li> </ul> <p>When using a cable box: Input the output channel (02, 03 or 04) of the cable box.</p>
	<p>⑤ Press <b>SET</b> to enter. The screen returns to normal. Press <b>POWER</b> to turn off the VCR (VCR LED indicator will turn off and POWER LED indicator will turn off). The Auto Clock Setting function will automatically set the clock.</p>

### NOTE

- If the EDS CH SET mode is set to MANUAL mode in Step ③ and a channel that does not carry EDS signal is selected in Step ④, the Auto Clock Setting function will not operate.
- In Step ④, the number of channels that can be selected depends on the mode setting on the CHANNEL PRESET screen. See the table below.



AIR/CATV	Channels to be selected
AIR	02 ↔ 03 ↔ 04 ..... 68 ↔ 69 ↔ 02
CATV	01 ↔ 02 ↔ 03 ..... 124 ↔ 125 ↔ 01

- In Step ①, if you press **MENU** when operating the screen setting for the first time or after a power failure of more than 5 seconds, the LANGUAGE screen will appear.
- If you entered incorrect data during the setting procedure, re-enter the correct data in the following manner:
  - ① Use ◀/▶ to select the data to be corrected.
  - ② Set the correct data with ▲/▼.
  - ③ After correcting the data in Step ②, press **SET** to enter.
- If you press **MENU** in Step ⑤, the data will not be stored.
- If a button is not pressed within 3 minutes during the setting procedure, the screen will return to the normal screen.



## Manual Clock Setting

### PREPARATION

- Turn on your TV and select the video channel. (See **Setting the 3 ↔ 4 Output Channel Selector**.)
- Press **POWER** (POWER LED indicator will light up) and then **TV/VCR** to select "VCR". (VCR LED indicator will light up.)

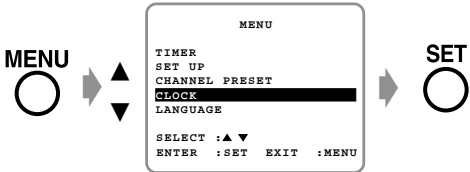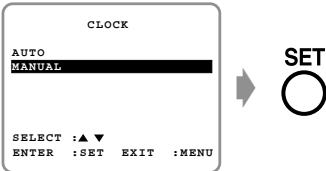	<p>① Press <b>MENU</b>. Select "CLOCK" with ▲/▼ and then press <b>SET</b>.</p>
	<p>② Select "MANUAL" with ▲/▼ and then press <b>SET</b>.</p>

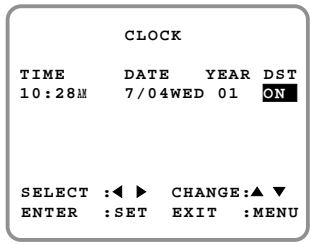

 <p> <b>CLOCK</b>  <b>TIME</b>    <b>DATE</b>    <b>YEAR</b>    <b>DST</b>  10:28H    7/04WED 01    ON </p> <p> SELECT : ◀ ▶    CHANGE : ▲ ▼  ENTER : SET    EXIT : MENU </p> <p>◀/▶ and ▲/▼</p>	<p>③ Select "TIME" with ◀/▶ and set time by holding ▲/▼.  <i>Ex.: 10:28 AM</i>  Numbered buttons can be used instead of ▲/▼ to set time and date. Press <b>AM/PM (100)</b> to select AM or PM during time setting.</p>
<p>SET  <b>Normal Screen</b></p>	<p>④ Select and set "DATE", "YEAR" and "DST" in turn, in the same manner as in Step ③.  • See <b>Automatic Daylight Saving-Time (D.S.T.) Adjustment</b>.  <i>Ex.: Jul. 4, 2001, DST: ON</i></p> <p>⑤ If the data is correct, press <b>SET</b> to enter. The screen returns to normal.</p>

### NOTE


- In Step ①, if you press **MENU** when operating the screen setting for the first time or after the power is interrupted for more than 5 seconds, the LANGUAGE screen will appear.
- If you entered incorrect data during the setting procedure, re-enter the correct data in the following manner:
  - ① Use ◀/▶ to select the data to be corrected.
  - ② Set the correct data with ▲/▼.
  - ③ After correcting the data in Step ②, press **SET** to enter.
- If you press **MENU** to exit the CLOCK screen in Step ⑤, the data will not be stored.
- If a button is not pressed within 3 minutes during the setting procedure, the screen will return to the normal screen.

## Automatic Daylight Saving-Time (D.S.T.) Adjustment

This VCR is equipped with an internal Automatic Daylight Saving-Time Adjustment function. In spring (first Sunday in April) and autumn (last Sunday in October), the time is adjusted as shown below. This function has been preset to ON at the factory. Set the D.S.T. mode in the clock setting screen.


### Spring

Programmed timer recording set within this time frame (2:00 AM to 3:00 AM) will not be carried out.

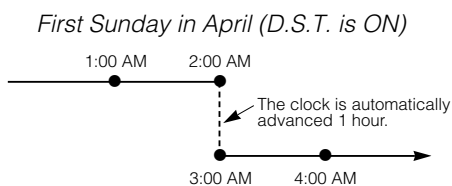

### Autumn

Because there will be two time frames from 1:00 AM to 2:00 AM, timer programming set between these times will be influenced by the time change.

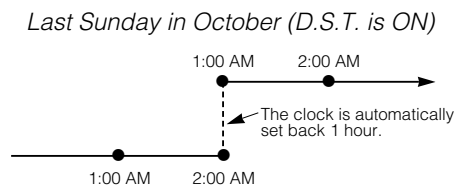

### NOTE

- If the timer recording program is affected by the D.S.T. time change, check your TV listing and find out when it reflects the time change. Some TV listings will indicate the time change in the same manner as is programmed in this VCR, but others do not show the time change until the next morning. In that case, when programming a timer, use the CLOCK screen to set the D.S.T. mode to OFF so the time change will not be carried out.



# Setting the Channels

Your VCR can receive a maximum of 181 channels as shown below by presetting the channels into memory. (VHF: 2 to 13, UHF: 14 to 69, CATV: 1 to 125)

## PREPARATION >>>

- Make sure that the cable (antenna or CATV) is connected to the IN terminal on the rear of the VCR.

	<p>① Press <b>MENU</b>. Select "CHANNEL PRESET" with ▲/▼ and then press <b>SET</b>.</p>
	<p>② Select "AIR" or "CATV" with ◀/▶ and then press ▼. <i>Ex.: AIR</i></p> <ul style="list-style-type: none"> <li>• To watch cable TV after EZ Set Up, select "CATV", press <b>SET</b>.</li> </ul>
	<p>③ Set "CH SET" to "AUTO" with ◀/▶ and then press <b>SET</b>.</p>
	<p>④ The auto tuning will start. The channel display will count up and when finished, the screen returns to normal.</p>

## NOTE

- Automatic tuning will not start unless the arrow is at "CH SET-AUTO" position.
- If a button is not pressed within 3 minutes during the setting procedure, the screen will return to normal.
- If the power is interrupted for more than 5 seconds, AIR/CATV selection must be set again.
- Automatic tuning will be interrupted if **PLAY**, **REC** or **MENU** buttons are pressed before the screen returns to normal.



# Adding Channel Memory/Erasing Channel Memory

Use this function to manually add or erase channels to/from the memory.

<p><b>1</b> Select the channel to be added with the numbered buttons and the channel to be erased with the <b>CH</b> ▲/▼ or numbered buttons.</p>	
	<p><b>2</b> Press <b>MENU</b>. Select “CHANNEL PRESET” with ▲/▼ and press <b>SET</b>.</p>
	<p><b>3</b> Select “CH SET” with ▲/▼ and then select “MANUAL” with ◀/▶. Then press <b>SET</b>.</p>
<p><b>[ADD]</b></p> <p style="text-align: center;">↕ ◀/▶</p> <p><b>[ERASE]</b></p>	<p><b>4</b> Select “ADD” if you want to add the channel memory or “ERASE” if you want to erase the channel memory with ◀/▶.</p>
	<p><b>5</b> Press <b>MENU</b> to return to the normal screen.</p>

**NOTE**

- If the power is interrupted for more than 5 seconds, the channel memory may be erased. If this happens, reset the channels again and reset AIR/CATV selection.
- If a button is not pressed within 3 minutes during the setting procedure, the screen will return to normal.


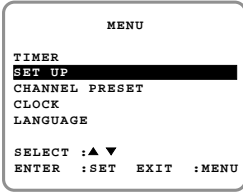












 

 


# Mode Selection

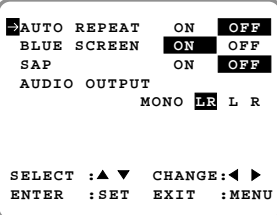You can use the SET UP–selection screen to select the mode for basic features.
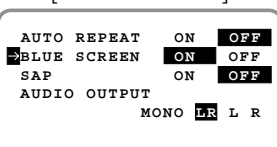
## PREPARATION ▶▶▶

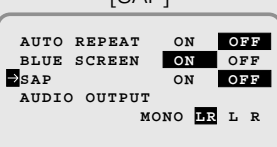- Turn on the TV and select the video channel. Press **POWER** (POWER LED indicator will light up) and then **TV/VCR** to select “VCR” (VCR LED indicator will light up).

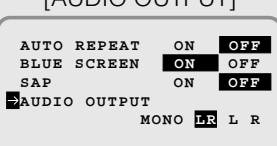 →  → 	<p>① Press <b>MENU</b>.</p> <p>② Select “SET UP” with ▲/▼ and then press <b>SET</b>.</p>
 →  → 	<p>③ Set AUTO REPEAT mode to ON or OFF with ◀/▶. Then press ▼. (See <b>Recorded Section Auto Repeat.</b>)</p> <ul style="list-style-type: none"> <li>• SAP and AUDIO OUTPUT are displayed only with Hi-Fi models. See the shaded area below.</li> </ul>
 →  → 	<p>④ Set BLUE SCREEN mode to ON or OFF with ◀/▶. Then press ▼. (See <b>Blue Screen Noise Elimination.</b>)</p>
 →  → 	<p><i>(Only for Hi-Fi models)</i></p> <p>⑤ Set SAP (Separate Audio Program) mode to ON or OFF with ◀/▶. Then press ▼. (See <b>Recording MTS (Multi-channel TV sound) Broadcasts.</b>)</p>
 →  → 	<p><i>(Only for Hi-Fi models)</i></p> <p>⑥ Set AUDIO OUTPUT mode to MONO, LR, L or R with ◀/▶. (See <b>Audio Output Mode.</b>)</p>
 → 	<p>⑦ Press <b>SET</b> to enter. The screen returns to normal.</p>

## NOTE ▶

- If you press **MENU** to exit the mode selection screen in Step ⑦, the data will not be stored. Be sure to press **SET** to store the data.
- SAP is used for bilingual broadcasting. Check your local broadcast station or cable company.

# Playback

## Inserting a Video Cassette



Gently insert the video cassette into the cassette compartment. The VCR turns on automatically and POWER LED indicator light up. If the cassette is inserted incorrectly, the loading system will not function. Do not force the cassette into the VCR.

To remove the cassette, press **EJECT** during stop mode.

## Playback

### PREPARATION ►►

- Turn on the TV and select the video channel. (See **Setting the 3 ↔ 4 Output Channel Selector.**)

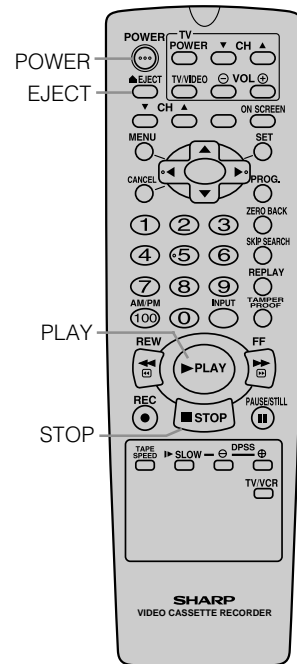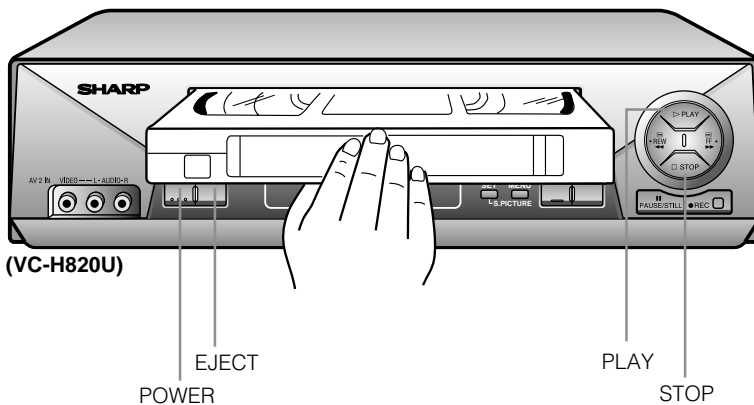

### PROCEDURE

- 1 Press **POWER** to turn on the VCR. The POWER LED indicator light up.
- 2 Insert a cassette.
- 3 Press **PLAY**. (The automatic tracking control system engages and "PLAY" flashes on the TV screen for a few seconds. See **Automatic Tracking Control System.**) VCR LED indicator will light up.
- 4 To stop playback, press **STOP**. (If the tape reaches its end, the VCR will automatically rewind the tape to the beginning, eject the cassette and turn off the power.)

### NOTE

- If noise should remain on the TV screen after tracking adjustment has been completed by the Automatic Tracking Control System, use the manual tracking mode.
- Press **CH ▲/▼** during playback mode to change to manual tracking mode. Adjust the tracking using **CH ▲/▼** until the noise is minimized or eliminated.
- For tapes recorded in EP on another VCR that still have vertical jitter even after manual adjustment, hold down **PLAY** for about 2 seconds. (On screen display may be blurred.) Ejecting the tape or turning off the power will return playback to its normal mode.

### Notes for S-VHS tape

- Playback of S-VHS recorded tapes is possible.
- Playback of S-VHS image quality is not available.
- Picture noise or distortion may appear on the screen during playback in the SLOW or STILL mode.
- S-VHS recording is not available. However, HQ recording is possible with S-VHS tape.



## Fast Forward and Rewind

- 1 When the VCR is in stop mode, press **FF** or **REW** to fast forward or rewind the cassette. (The picture cannot be viewed in this mode.)
- 2 Press **STOP** to halt fast forward or rewind.

### NOTE

- The FF and REW speeds may be slower for cassette tapes other than T-60, T-90 or T-120.
- After rewinding the T-120 cassette tape for about 2 minutes, you can fast forward the cassette tape.

## Video Search

Use the following procedure to quickly find the section you want, while viewing the picture.

- 1 During playback, press **FF** for forward video search or **REW** for reverse video search. There are 2 search speeds in each direction. The VCR switches between them each time the button is pressed.
- 2 Press **PLAY** to resume normal playback.

## Slow Motion Playback (only with the remote control)

- 1 Press **SLOW** during playback.
- 2 Press **SLOW** ⊕/⊖ (to the right of SLOW) to vary the slow motion playback speed between  $\frac{1}{5}$  and  $\frac{1}{30}$  of the normal playback speed.  
If noise bars appear on the screen, use **CH** ▲/▼.  
If the picture experiences vertical jitter during the slow mode, set your VCR to the still mode and press **CH** ▲/▼ to stabilize the picture. Then press **SLOW** again.
- 3 Press **PLAY** to resume normal playback.

## Still Picture and Frame Advance

- 1 Press **PAUSE/STILL** during playback. This will freeze the picture on your TV.
- 2 If the picture vibrates vertically during still mode, use **CH** ▲/▼ to adjust for minimum distortion. If noise bars appear on the screen during still mode, set your VCR to the slow mode and press **CH** ▲/▼ to make the noise disappear. Then press **PAUSE/STILL** again.
- 3 Press **PAUSE/STILL** during still mode for frame advance.
- 4 Press **PLAY** again to resume normal playback.

### NOTE


- Sound is muted during still picture, video search, frame advance and variable slow motion.
- The picture quality in still picture, video search, frame advance and variable slow motion is best with tapes recorded in SP or EP mode.

## Automatic Tracking Control System


This function automatically adjusts the tracking to match the recorded tape. Auto tracking engages in the following cases:

- When you insert the cassette and begin playback.
- When you press **CH** ▲/▼ at the same time.
- When the VCR has been playing back an unrecorded section of tape, and then reaches a recorded tape segment.

When auto tracking engages, "PLAY" on the TV screen flashes for a few seconds.

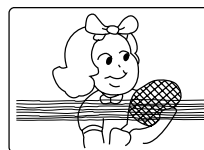

Poor Tracking

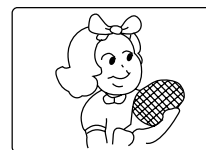

Normal Picture

## Manual Tracking Control

When a poorly recorded tape is played back or the VCR is near an electrical or magnetic field, auto tracking may not operate normally. In this event, manually adjust the tracking with **CH** ▲/▼ to make any noise disappear.



## Blue Screen Noise Elimination

Set the BLUE SCREEN mode to ON on the SET UP–selection screen. (See **Mode Selection**.) This function eliminates monitor noise and mutes sound during playback of unrecorded portions of a tape and when receiving a non-broadcasting channel. Blue Screen will also appear if the VCR is set to the Auxiliary mode but no video signal is fed to the VCR. (The BLUE SCREEN mode is set to ON at the factory.)

### NOTE

- Blue Screen does not function during still picture, variable slow motion and video search.
- Blue Screen may not function properly if the broadcast signal is too strong or too weak.
- Blue Screen does not function during playback of a tape with noise recorded.
- If the antenna signal is weak while recording a TV program or if the input signal is weak while tape dubbing, the monitor screen may turn blue since the unit may not recognize whether or not a proper signal is being received. In this event, set the BLUE SCREEN mode to OFF.

## Quick Start with Full Loading Mechanism

Your VCR has a standby function (Full Loading Mechanism) to allow immediate recording and playback. After pressing **REC** or **PLAY**, it takes about 2 seconds until recording or playback is engaged when in the standby mode.

## Full Automatic Playback

The Full Automatic Playback lets you enjoy playback with ease. When you insert a cassette with the erasure protection tab removed, your VCR automatically turns on the power and plays back the tape. When the tape reaches its end, the VCR automatically rewinds the tape, ejects it and turns off the power.

### NOTE

- If the erasure protection hole is covered, press **PLAY** after the power turns on automatically.

## Only for Hi-Fi models

### Audio Output Mode

Your VCR has 3 channels for audio recording (2 on the Hi-Fi track and 1 on the linear track). You can select the audio output channels in playback mode on the SET UP–selection screen. The following shows which audio channels will be heard when a stereo Hi-Fi video cassette is played back while a stereo system is properly connected to the VCR. (See **Mode Selection**.)

#### Hi-Fi **L** + **R** mode: **LR**

Normally, select Hi-Fi **L** + **R** mode on the SET UP–selection screen: both the left (L) and right (R) audio channels will be taken from the Hi-Fi audio track.

Normally you will not have to change to another mode.

(See **Recording MTS (Multi-channel TV Sound Broadcasts)**.)

#### Hi-Fi **L** mode: **L**

The left channel of the Hi-Fi audio track will be played back through both speakers.

#### Hi-Fi **R** mode: **R**


The right channel of the Hi-Fi audio track will be played back through both speakers.

#### Linear mode: **MONO**

The audio signal recorded on the linear audio track will be played back through both speakers.

### NOTE

- When video cassettes recorded on a non-Hi-Fi VCR are played back or the Hi-Fi audio output level is poor, the audio signal recorded on the linear audio track will automatically be played back regardless of the audio output mode.

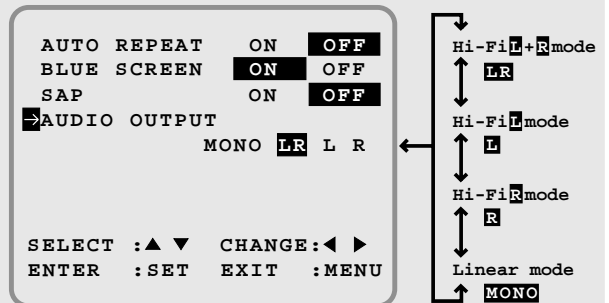





# Recording a TV Program

## PREPARATION >>>

- Turn on the TV and select the video channel. (See **Setting the 3 ↔ 4 Output Channel Selector.**)
- Press **POWER** (POWER LED indicator will light up) and then **TV/VCR** to select "VCR" (VCR LED indicator will light up).

### Only for Hi-Fi models

- If necessary, set "SAP" on the SET UP-selection screen. (See **Mode Selection.**)

## Without a Cable Box or Digital Satellite Receiver

- 1 Insert the cassette, with the erasure protection tab covered. (See **Cassette Erase Protection** below.)
- 2 Press **TAPE SPEED** on the remote control to set the recording speed (SP or EP). (See **Recording Speeds** below.)
- 3 Select the desired channel with **CH ▲/▼** or the numbered buttons on the remote control.
- 4 Press **REC**. The REC LED indicator light up (If the erasure protection tab has been removed, the cassette will be ejected.)
- 5 To stop recording, press **STOP**. The REC LED indicator will turn off.

\* To pause recording during the REC mode, press **PAUSE/STILL** on the remote control (The REC LED indicator will flash). To resume recording, press **PAUSE/STILL** or **REC** and at the same time REC LED indicator will turn on. (Pause disengages automatically after about 5 minutes to avoid damage to the tape and the VCR and stop mode is engaged.)

## With a Cable Box or Digital Satellite Receiver

- 1 Insert the cassette, with the erasure protection tab covered. (See **Cassette Erase Protection** below.)
- 2 Press **TAPE SPEED** on the remote control to set the recording speed (SP or EP). (See **Recording Speeds** below.)
- 3 Set the TV and VCR channels to output CH of cable box or digital satellite receiver.
- 4 Set the cable box or digital satellite receiver to the desired channel to record.
- 5 Press **REC**. The REC LED indicator light up (If the erasure protection tab has been removed, the cassette will be ejected.)
- 6 To stop recording, press **STOP**. The REC LED indicator will turn off.

### NOTE

- You will be unable to watch a scrambled channel while recording.
- It is not necessary to set the clock to use this recording operation.
- "PAUSE" will flash on the TV screen if **PAUSE/STILL** is pressed in stop mode. Press **STOP** to disengage the pause mode or press **REC** to enter the record standby mode at the same time REC LED indicator will flash, then press **REC** or **PAUSE/STILL** button again to enter record. (The REC LED indicator will light up.)
- The VCR can record a TV program even with the TV turned off.


## To Watch Another TV Program While Recording

While recording, press **TV/VCR** to select "TV" (the VCR LED indicator will turn off to indicate TV mode), then select the program you wish to view using the TV tuner.

At the end of the tape, your VCR will automatically stop recording, rewind the tape, eject it and turn off the power.

## Cassette Erase Protection

A **VHS** cassette has a removable tab to prevent accidental erasure of recorded material. Removing the tab prevents recording. To record on a video cassette with the tab removed, place adhesive tape over the tab opening.

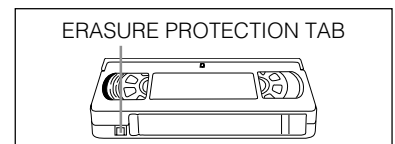

## Recording Speeds

This VCR lets you select a recording speed (SP or EP). SP provides a better picture, although the recording time is shorter. Select the tape speed that best suits your needs.

### NOTE

- This VCR can play back tapes recorded in LP (Long Play) mode.

MODE \ CASSETTE	SP (Standard Play)	EP (Extended Play)
T-60	1 hr.	3 hrs.
T-120	2 hrs.	6 hrs.
T-160	2 hrs. & 40 min.	8 hrs.



# Only for Hi-Fi models

## Recording Hi-Fi Stereo Sound

Your VCR records AUDIO signals on two types of audio tracks.

### Hi-Fi:

Using specialized rotary heads, audio signals are recorded on the video track in FM format. Multi-sound broadcasts (Stereo or SAP [Separate Audio Program]) are recorded on two channels.

### Linear:

All audio signals are recorded in mono on the linear audio track.

### NOTE

- Video cassettes recorded on a non-Hi-Fi VCR can also be played back. However, if the audio signals are recorded on two linear channels, stereo programs will be played back in monaural and SAP (Separate Audio Program) will be played back with both the MAIN and SAP audio mixed together.
- Video cassettes recorded on this VCR can be played back on a non-Hi-Fi VCR. However, only the linear track will be played back.

## Recording MTS (Multi-channel TV Sound) Broadcasts

Your VCR can record stereo or SAP (Separate Audio Program) broadcasts, where available.


If the broadcast is in stereo, the VCR automatically records the stereo sound in dynamic Hi-Fi. If the broadcast is in SAP, you can record both the MAIN and the SAP sound by using the SET UP-selection screen to set the SAP mode to ON. If the broadcast is in stereo/SAP, you can record either the SAP sound by using the SET UP-selection screen to set the SAP mode to ON, or stereo sound by setting the SAP mode to OFF. (See **Mode Selection.**)

### MTS/SAP RECORDING

\*The monitor output listed in the table shows that the audio output mode is in the Hi-Fi **L** + **R** mode.

Broad-cast Re-ceived	SAP Mode Position	*Monitor Output		Recording		
		L-Speaker	R-Speaker	Hi-Fi L-CH	Hi-Fi R-CH	Linear Track
Stereo	OFF	L	R	L	R	L + R
	ON	L	R	L	R	L + R
SAP	OFF	MAIN	MAIN	MAIN	MAIN	MAIN
	ON	MAIN	SAP	MAIN	SAP	SAP
Stereo/SAP	OFF	L	R	L	R	L + R
	ON	L + R	SAP	L + R	SAP	SAP

### On the TV screen

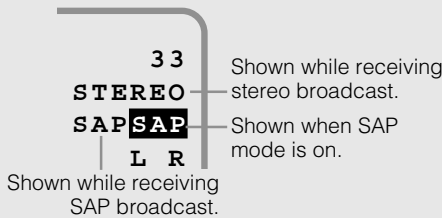

## Monitor Output When Receiving a SAP Broadcast

When receiving a SAP broadcast, if the SAP position is set to ON, change the audio output mode to select Monitor Output (MAIN or SAP) with the SET UP-selection screen. (See **Mode Selection.**)

### When enjoying a TV program with MAIN sound:

Select **L** on the SET UP-selection screen. (See **Audio Output Mode.**)

### When enjoying a TV program with SAP sound:

Select **R** or **MONO** on the SET UP-selection screen. (See **Audio Output Mode.**)



# Tape Dubbing Connection Instructions

Your VCR can dub (copy) video material from another video device. It can also output video and audio signals for recording on other video or audio equipment. Audio/Video dubbing cannot be done separately.


- 1 Switch your VCR to the auxiliary input by pressing **INPUT** on the remote control. (You can also use **CHANNEL ▲/▼** on the VCR or **CH ▲/▼** on the remote control.)
- 2 Begin recording on the dubbing VCR and playback on the source VCR simultaneously.

### NOTE

- When using special playback functions (still picture, video search, frame advance and variable slow motion) during dubbing, a blue screen may appear. Set BLUE SCREEN mode on the dubbing VCR (for recording) to OFF. (See **Mode Selection.**)
- To use the TV as a monitor while dubbing, press **TV/VCR** to "VCR" on the dubbing VCR.
- Use an RCA pin-type connection cable (not supplied with VCR, but supplied with VIEWCAM) to connect source VCR to dubbing VCR.
- Refer to the manual of the VCR connected to this unit when dubbing a tape.

**Only for Hi-Fi models**

- If source VCR is a monaural mode, connect the audio cable to "AUDIO-L" of the dubbing VCR.

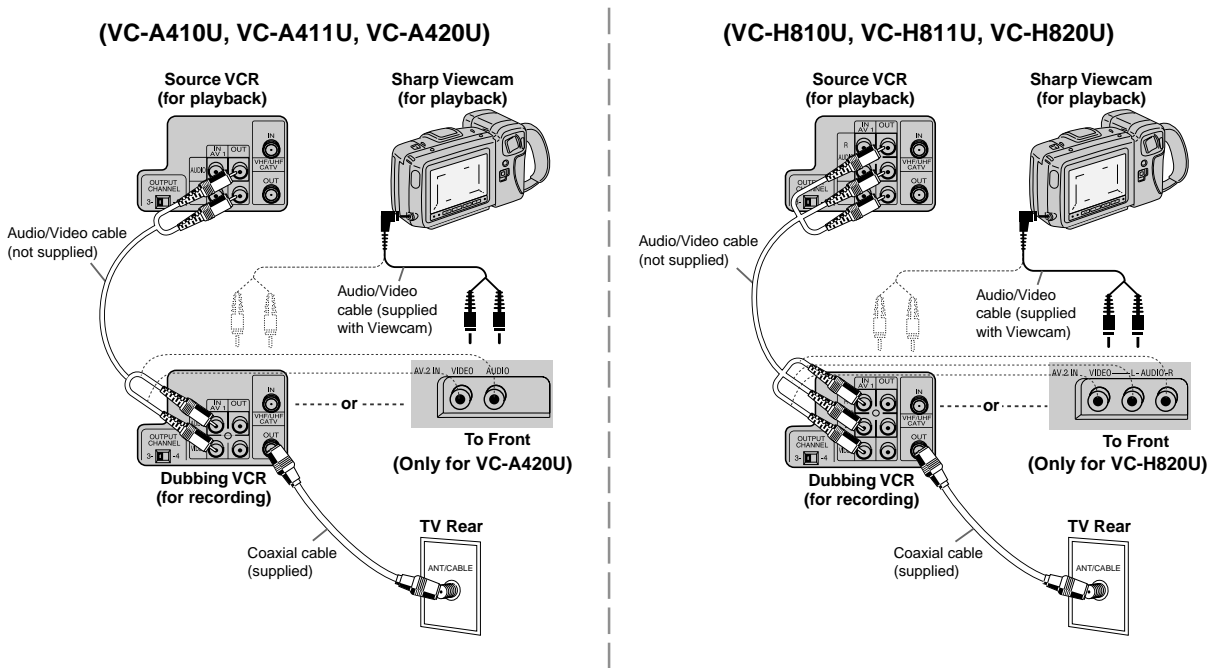



# Simple Recording Timer

The Simple Recording Timer (SRT) enables you to set the recording stop time. The SRT can be set on the TV screen by using the remote control.

**The SRT cannot be set if the clock has not been set. Make sure the clock is set before setting the SRT.**

## PREPARATION >>>


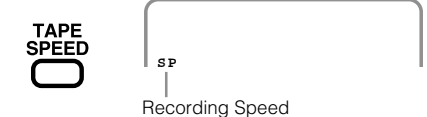
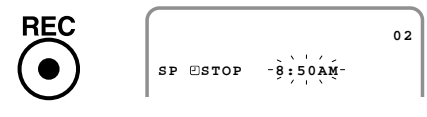

- Turn on the TV and select the video channel. (See **Setting the 3 ↔ 4 Output Channel Selector.**)
- Insert a cassette with the erasure protection tab opening covered. Power will turn on automatically (POWER LED indicator will light up).
- Press **TV/VCR** to select "VCR" (VCR LED indicator will light up).

### Only for Hi-Fi models

- If necessary, set "SAP" on the SET UP-selection screen. (See **Mode Selection.**)

## PROCEDURE

**Example:** Recording a TV program in the SP mode. The program is on Channel 2, ending at 9:50 AM. The present time is 8:43 AM.

	<p>❶ Select the desired channel with the numbered buttons or <b>CH ▲/▼</b>. Ex.: Channel → 02</p>
	<p>❷ Set the recording speed (SP or EP) with <b>TAPE SPEED</b> on the remote control. Ex.: SP</p>
	<p>❸ Press <b>REC</b> to enter the recording mode (REC LED indicator will light up). Then, press <b>REC</b> again to enter the simple recording timer mode (TIMER LED indicator will light up). The recording stop time is displayed. Ex.: 8:50 AM</p>
	<p>❹ Each press of <b>REC</b> increases the stop time by 10 minutes. Ex.: 9:50 AM</p> <p><b>NOTE</b> ▶</p> <ul style="list-style-type: none"> <li>• The recording stop time will flash for a few seconds before the stop time is fixed.</li> </ul>
<p>❺ When the stop time comes, recording is finished and the power turns off.</p>	

## Changing the Contents of the Simple Recording Timer

- ❶ Press **REC**. The stop time flashes on the TV screen.
- ❷ Change the stop time as desired using **REC**.

## Cancelling the Simple Recording Timer

 
- ❶ Press **STOP**.

### NOTE

• **The Simple Recording Timer has priority over other recordings.**

- Ordinary timer programs will not be recorded when portions of the time setting of the simple recording timer and of the time setting of the ordinary timer recording overlap.

Example:





# Recording with the Timer

## PREPARATION >>>

- Turn on the TV and select the video channel.
- Insert a cassette with the erasure protection tab opening covered. Power will turn on automatically (POWER LED indicator will light up).
- Press **TV/VCR** to select "VCR" (VCR LED indicator will light up).
- Check that the clock is displaying the correct time.

### Only for Hi-Fi models




- If necessary, set "SAP" on the SET UP-selection screen. (See **Mode Selection.**)

## PROCEDURE

**Example:** Recording a TV program in the SP mode: the TV program is on channel 7 starting at 9:05 PM and stopping at 10:35 PM on August 10th. The present time is 6:35 PM on August 10th.

	<p>❶ Press <b>PROG.</b>. The Timer screen will appear and then press <b>SET</b>.</p>
	<p>❷ Select the desired month/day (DATE) with ▲/▼ and then press ▶. The cursor will move to the next column. <i>Ex.: August 10th</i></p> <ul style="list-style-type: none"> <li>• If you want to record every day or week at the same time, hold ▼ when you select the date.</li> </ul> <p><b>When pressing:</b> The recording date changes in this sequence:</p> <ul style="list-style-type: none"> <li>▼ 8/10→MO-FR→MO-SA→DAILY→SAT→SUN→8/9→8/8... (next year)</li> <li>▲ 8/10 → 8/11 → 8/12 → 8/8 → 8/9 → SUN → SAT → ... (present) (tomorrow) (next year)</li> </ul>
	<p>❸ Select the desired channel with ▲/▼ and then press ▶. <i>Ex.: Channel 07</i></p>
	<p>❹ Set the recording start time (hour digits and minute digits) with ▲/▼ and then press ▶. <i>Ex.: 9:05 PM</i></p> <p>Press the <b>AM/PM (100)</b> to select AM or PM.</p>
	<p>❺ Set the recording stop time with ▲/▼ and then press ▶. <i>Ex.: 10:35 PM</i></p>
	<p>❻ Select the tape speed with ▲/▼. <i>Ex.: SP</i></p>

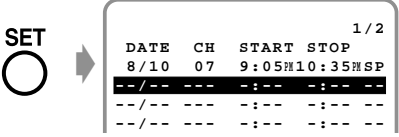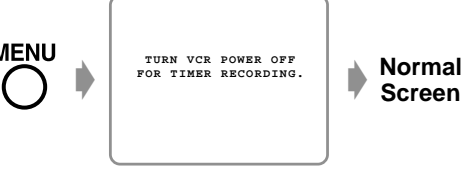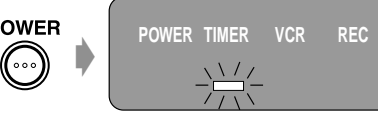

	<p><b>7</b> Press <b>SET</b>.</p> <ul style="list-style-type: none"> <li>To program the additional timer settings, press <b>SET</b> and repeat steps <b>2</b>–<b>7</b>.</li> </ul>
	<p><b>8</b> Press <b>MENU</b> to finish settings. The display shown to the left appears on the screen for 5 seconds, after which the normal screen returns.</p>
	<p><b>9</b> Press <b>POWER</b> to enter the timer standby mode. Be sure that the <b>TIMER LED</b> indicator light up.</p>

**NOTE**

- If the power is interrupted for more than 5 seconds (power failure, etc.) during timer recording, the Auto Clock Setting will reset the time after the power is returned (the POWER LED indicator will flash) but the timer settings will be cancelled.
- Numbered buttons can be used instead of ▲/▼ to set the data.
- If the cassette ends before recording all the programs, the VCR will stop, eject the cassette and turn the power off automatically.
- In Step **9**, if **POWER** is pressed with no cassette inserted, the **TIMER LED** indicator flashes for 5 seconds indicating that timer recording is not possible.
- In Step **9**, if the inserted cassette is without the erasure protection tab, **TIMER LED** indicator flashes and the cassette is ejected.
- To stop timer recording, press **STOP**.
- If a button is not pressed within 3 minutes during the setting procedure, the screen will return to the normal screen.
- There are two timer setting screens (1/2, 2/2).






## Confirming Timer Programs

You can see on the Timer setting screen a list of all timer programs that are already set.

### PREPARATION ▶▶▶

- Turn on the TV and select the video channel.
- Press **POWER** (POWER LED indicator will light up) and then **TV/VCR** to select "VCR" (VCR LED indicator will light up).

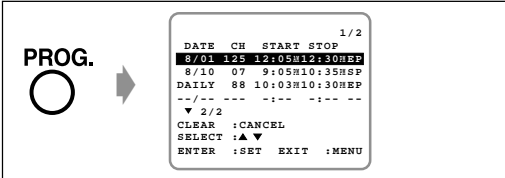
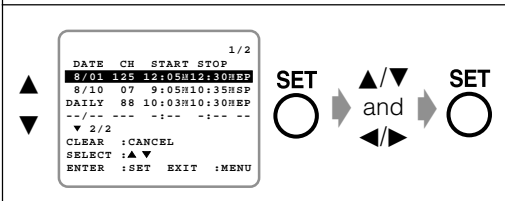
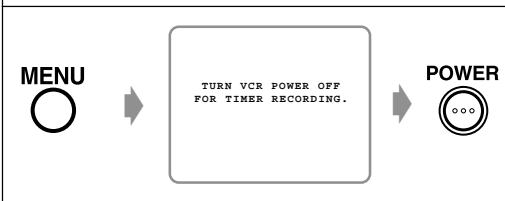
	<p>❶ Press <b>PROG.</b> TIMER screen will appear.</p> <ul style="list-style-type: none"> <li>• Check the information displayed.</li> </ul>
	<p>❷ If you want to correct the data, select the data to be changed with ▲/▼ and then press <b>SET</b>. Correct the data as desired using ▲/▼/◀/▶. Then press <b>SET</b>. See 2/2 screen also.</p>
	<p>❸ Pressing <b>MENU</b> will clear the screen. The display shown to the left appears for 5 seconds, after which the normal screen returns.</p> <ul style="list-style-type: none"> <li>• After checking or correcting the program contents, press <b>POWER</b> to enter the Timer Standby mode. (At the same time, TIMER LED indicator will light up.)</li> </ul>

## Cancelling Timer Programs

Perform the following procedure to cancel timer programs that have already been set.


### PREPARATION ▶▶▶

- Turn on the TV and select the video channel.
- Press **POWER** (POWER LED indicator will light up) and then **TV/VCR** to select "VCR" (VCR LED indicator will light up).

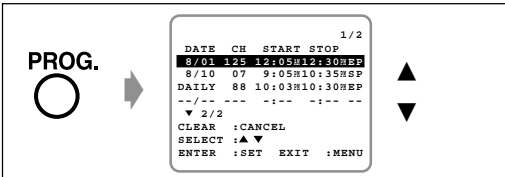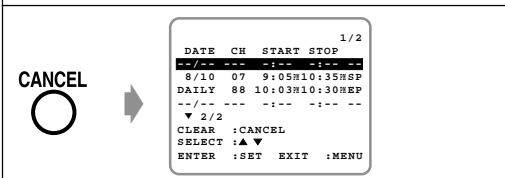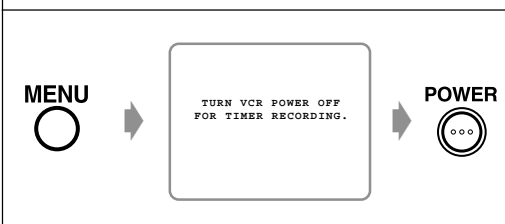	<p>❶ Press <b>PROG.</b> TIMER screen will appear.</p> <ul style="list-style-type: none"> <li>• Select the program you wish to cancel with ▲/▼.</li> </ul>
	<p>❷ Double-check that it is the program you wish to cancel and press <b>CANCEL</b>. It will be cleared on the screen.</p>
	<p>❸ Pressing <b>MENU</b> will clear the screen. The display shown to the left appears for 5 seconds, after which the normal screen returns.</p> <ul style="list-style-type: none"> <li>• If there are still some programs set, press <b>POWER</b> to enter the Timer Standby mode. (At the same time, TIMER LED indicator will light up.)</li> <li>• If you press <b>MENU</b> when all of the timer programs are cancelled, the screen will return to normal.</li> </ul>

## Sharp Super Picture

This function creates clearer picture quality only during playback.

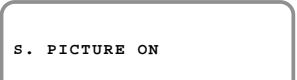

S. PICTURE ON



Press **S. PICTURE** on the VCR.

“S.PICTURE ON (or OFF)” will appear on the TV screen for a few seconds. Each time the button is pressed, the mode switches between ON and OFF. (The Sharp Super Picture is preset to ON at the factory.)

### ON:

Normally leave the mode set to ON. This high picture quality function will create a clearer image during playback.

### OFF:

Set to OFF when playing back a tape on the VCR while editing or when strong noise appears on the screen.

### NOTE

- This function only operates during playback. It will not operate when recording or watching a TV program with the VCR tuner.
- **When playing S-VHS tape**
  1. Sharp Super Picture is set to off automatically. When finished playback, the setting will return to the previous setting.
  2. You cannot change ON/OFF setting manually.
- The ON/OFF status of the Sharp Super Picture can be checked when **ON SCREEN** is pressed to display OSD.
- This function can not be set to ON/OFF with the MENU screen displayed. First close the MENU screen before operating this function.
- When the VCR power is turned off, the Sharp Super Picture setting is retained in memory.
- If power is interrupted for more than 5 seconds (power failure, etc.), the setting will return to ON.


## Recorded Section Auto Repeat

Set the AUTO REPEAT mode to ON on the SET UP selection screen. (See **Mode Selection**.) If the recorded portion has finished and a non-recorded portion has continued for 15 seconds, the tape will automatically stop, rewind to the beginning and repeat playback. (The AUTO REPEAT mode is preset to OFF at the factory.)




PLAY 

### NOTE

- The ON/OFF status of the Recorded Section Auto Repeat can be checked when **ON SCREEN** is pressed to display OSD. (The “” mark lights when the Recorded Section Auto Repeat is on.)
- If the Recorded Section Auto Repeat is on and the tape is rewinded to the beginning with rewind or reverse video search, the tape will automatically start playback.

## Auto Zero Back

This function automatically forwards or rewinds the cassette to the “0:00.00” point. Use this function to return to a recording start point.

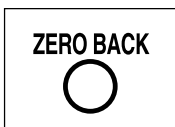

### PROCEDURE

- ① Reset the counter to “0:00.00” with **CANCEL** before recording.
- ② Press **REC** to start recording (REC LED indicator will light up).
- ③ After recording the desired program, press **STOP** to stop recording (REC LED indicator will turn off).
- ④ Press **ZERO BACK** to return to the recording start point (0:00.00).

### NOTE

- During Auto Zero Back, if the VCR rewinds (or fast forwards) the tape all the way without finding the “0:00.00” point, it will stop at the beginning (or end) of the tape.
- The counter start point “0:00.00” may differ slightly from the starting point on the tape.
- This function is not operable during recording, recording pause, simple recording timer or timer recording.





# DPSS (Digital Program Search System)

You can quickly locate a desired section of the tape with this feature.

## Index Signal

An index signal is automatically recorded on the tape at the start of ordinary recording, simple recording timer and timer recording.

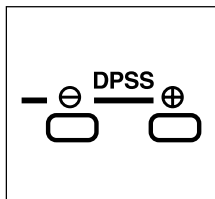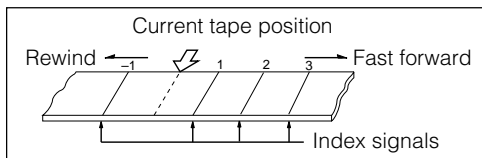

## PROCEDURE

- ① Insert a tape containing index signals.
- ② Select the index number of the desired program with **DPSS**  $\ominus/\oplus$  on the remote control.
  - With each press of the button, the number changes. One of 19 programs can be selected in either direction (one of up to 38 programs).  
(Ex.: DPSS 3=Third program after the current one.)

### On the TV screen



- ③ Search starts immediately when you press **DPSS**  $\ominus/\oplus$ . (When a signal is located, the displayed number decreases.)
- ④ When the selected section is found, playback begins automatically.

## NOTE

- DPSS may not work if recordings are too close (within 3 minutes of each other).
- Press **PLAY** or **STOP** to cancel DPSS.
- If the tape reaches its end or beginning before locating the desired point, DPSS is cancelled.
- DPSS may not function for damaged or worn tapes.
- DPSS cannot be used with tapes that contain no index signals.
- The starting point of a program may vary slightly.
- DPSS does not operate during the slow, record, timer stand-by, and timer recording modes, or when there is no cassette loaded.
- Index signals for DPSS cannot be entered manually.

Special Functions

# Skip Search



With this feature, you can set a forward video search time to approx. 30, 60, 90 or 120 seconds of recorded material. After searching, normal playback will resume automatically.

- Press **SKIP SEARCH** on the remote control during playback (ex. during commercials).

Number of Times Pressed	1 Time	2 Times	3 Times	4 Times
Video Search Time	Approx. 30 sec.	Approx. 60 sec.	Approx. 90 sec.	Approx. 120 sec.

# Instant Replay



With this feature, you can set a reverse video search time to approx. 20, 40, 60, or 80 seconds of recorded material. After searching, normal playback will resume automatically.


- Press **REPLAY** on the remote control during playback.

Number of Times Pressed	1 Time	2 Times	3 Times	4 Times
Video Search Time	Approx. 20 sec.	Approx. 40 sec.	Approx. 60 sec.	Approx. 80 sec.



# Tamper Proof

---

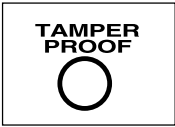

With this feature, you can lock all VCR modes to prevent accidental change. This function works even when the VCR power is off, thus preventing children from operating the VCR or viewing select programs while you are away from home.

## Tamper Proof

- 1 Press **TAMPER PROOF** on the remote control for about 2 seconds. The TAMPER PROOF LED indicator will flashing for about 2 seconds and remain lit. Tamper Proof has been activated.
- 2 Now regardless of what other operating buttons are touched, the VCR will continue to operate in the present mode and the TAMPER PROOF LED indicator will flash.  
(If Tamper Proof is activated during playback, once the tape reaches its end, the VCR automatically rewinds the tape, ejects it and turns the power off.)

## Disengaging Tamper Proof

- Press **TAMPER PROOF** for about 2 seconds. The TAMPER PROOF LED indicator starts flashing and then disappears. Now, Tamper Proof is disengaged.

### **NOTE**

- If power is interrupted for more than 5 seconds (power failure, etc.), Tamper Proof may disengage.
- If, Tamper Proof is on, you attempt to change modes by pressing any button, the TAMPER PROOF LED indicator will flash.



# Specifications

Format: VHS NTSC Standard  
 Video Recording System: Rotary Two-Head Helical Scanning  
 Number of Video Heads: 4  
 Video Signal Standard: NTSC Color System  
 Audio Recording System: 1 Stationary Head for Linear Audio  
     2 Rotary Heads for Hi-Fi stereo (Only for Hi-Fi models)  
 Tape Width: 12.7 mm (1/2 inch)  
 Tape Speed: (SP) 33.35 mm/sec (1.31 i.p.s.)  
               (LP) 16.67 mm/sec (0.66 i.p.s.) (playback only)  
               (EP) 11.12 mm/sec (0.44 i.p.s.)  
 Maximum Recording Time: (SP) 160 min (T-160)  
                                   (EP) 480 min (T-160)  
 Channel Coverage: VHF 2–13  
                           UHF 14–69  
                           CATV 1–125  
 Antenna Input: 75 Ohm  
 Video Input: 0.5 to 2.0 Vp-p, 75 Ohm unbalanced  
 Video Output: 1.0 Vp-p, 75 Ohm unbalanced  
 Audio Input: –8 dBs, 47 kOhm unbalanced (0 dBs = 0.775 Vrms)  
 Audio Output: –8 dBs, 1 kOhm unbalanced (0 dBs = 0.775 Vrms)

## Hi-Fi Audio (Only for Hi-Fi models)

*Dynamic Range:* 90 dB  
*Frequency Response:* 20 Hz–20 kHz  
 Memory Backup: 5 seconds  
 Operating Temperature: 5°C to 40°C (41°F to 104°F)  
 Storage Temperature: –20°C to 60°C (–4°F to 140°F)  
 Power Source: 120 V AC, 60 Hz  
 Power Consumption: 18 W  
 Dimensions (approx.): VC-A411U, VC-H811U:  
                                   360 (W) × 92 (H) × 254 (D) mm  
                                   (14-3/16" × 3-5/8" × 10")  
                                   VC-A410U, VC-A420U, VC-H810U, VC-H820U:  
                                   360 (W) × 92 (H) × 255 (D) mm  
                                   (14-3/16" × 3-5/8" × 10-3/64")  
 Weight (approx.): 2.7 kg (6 lbs)

## NOTE

- Hi-Fi models: VC-H810U, VC-H811U, VC-H820U
- Specifications are subject to change without notice.



# Troubleshooting

Check this list before calling for service.

Problem	Possible Cause/Solutions
<ul style="list-style-type: none"> <li>• NO OPERATION WHEN ANY BUTTON IS PRESSED.</li> </ul>	<ul style="list-style-type: none"> <li>• MAKE SURE THAT THE "TAMPER PROOF" MODE IS NOT ENGAGED (The TAMPER PROOF LED indicator will light up).</li> </ul>
<ul style="list-style-type: none"> <li>• No power.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure the power cord is plugged in.</li> <li>• Check the outlet, fuse or circuit breaker.</li> </ul>
<ul style="list-style-type: none"> <li>• VCR does not receive CATV channels.</li> </ul>	<ul style="list-style-type: none"> <li>• Use the CHANNEL PRESET screen to change from AIR mode to CATV. (See <b>Setting the Channels.</b>)</li> </ul>
<ul style="list-style-type: none"> <li>• VCR does not operate.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn on the power.</li> <li>• Press <b>EJECT</b> several times.</li> <li>• Safety device in VCR is functioning. Unplug VCR and plug it in again after a few minutes.</li> </ul>
<ul style="list-style-type: none"> <li>• VCR does not record.</li> </ul>	<ul style="list-style-type: none"> <li>• Cassette erasure protection tab is removed. Use a different cassette or place adhesive tape over the tab opening.</li> <li>• Check for a cassette loaded in the unit.</li> </ul>
<ul style="list-style-type: none"> <li>• No color or poor TV picture during normal viewing.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure the "TV" has been selected by pressing <b>TV/VCR</b>.</li> <li>• Make sure all cables are connected properly.</li> </ul>
<ul style="list-style-type: none"> <li>• No tape movement.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure the VCR is not in PAUSE/STILL mode.</li> <li>• Make sure the tape has not reached the end or beginning.</li> </ul>
<ul style="list-style-type: none"> <li>• No picture appears during playback.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure the TV is set to the same channel as the VCR's 3 ↔ 4 OUTPUT CHANNEL selector.</li> <li>• Check all connecting cables.</li> </ul>
<ul style="list-style-type: none"> <li>• Cassette cannot be loaded.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure there is no other cassette inside.</li> <li>• Make sure the cassette is properly positioned and reinsert.</li> <li>• Make sure the "TAMPER PROOF" mode is not engaged.</li> </ul>
<ul style="list-style-type: none"> <li>• Timer recording does not work.</li> </ul>	<ul style="list-style-type: none"> <li>• Power failure may have occurred.</li> </ul>
<ul style="list-style-type: none"> <li>• Noise appears on the screen when the automatic tracking control system is operating.</li> </ul>	<ul style="list-style-type: none"> <li>• Adjust the tracking manually by pressing <b>CH ▲/▼</b>.</li> <li>• In some cases, with a worn or damaged tape, noise cannot be eliminated completely.</li> </ul>
<ul style="list-style-type: none"> <li>• Cannot record a signal through the rear external input jack.</li> </ul>	<ul style="list-style-type: none"> <li>• The VCR may not be set to external input mode. Press <b>INPUT</b> to set the VCR to external input mode. (See <b>Tape Dubbing.</b>)</li> </ul>
<ul style="list-style-type: none"> <li>• Picture or sound is not stable during playback.</li> </ul>	<ul style="list-style-type: none"> <li>• Keep your VCR away from electrical and magnetic appliances. Be sure to position your VCR at least <b>8"</b> away from your TV or video monitor.</li> </ul>
<ul style="list-style-type: none"> <li>• "DEW"</li> </ul>	<ul style="list-style-type: none"> <li>• See page 2 for information.</li> </ul>
<ul style="list-style-type: none"> <li>• If remote control fails to operate.</li> </ul>	<ul style="list-style-type: none"> <li>• See page 8 for information.</li> </ul>
<b>Only for Hi-Fi models</b>	
<ul style="list-style-type: none"> <li>• Stereo TV puts out monaural sound only, even when cassettes recorded in Hi-Fi stereo are played back.</li> </ul>	<ul style="list-style-type: none"> <li>• Use RCA pin type connection cables (not the supplied coaxial cable) to connect the TV to the VCR, and set the TV to external video input mode.</li> <li>• Adjust the tracking or try another Hi-Fi stereo cassette.</li> </ul>
<ul style="list-style-type: none"> <li>• Cassettes recorded in stereo mode are not played back in stereo.</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure the sound was recorded in Hi-Fi stereo. (Any stereo signals recorded on the linear track will not be played back in stereo.)</li> </ul>

**This unit is equipped with a microprocessor. Its performance could be adversely affected by external electrical noise or interference. If this should happen, unplug the VCR and plug it in again after a few minutes and reset EZ Set Up for AIR/CATV operation.**



## Service Information

To obtain the name and address of the nearest Sharp Factory Service Centre or Authorized Service Centre, please contact:

HEADQUARTERS: 335 Britannia Road East, Mississauga, Ontario L4Z 1W9  
Tel: (905) 568-7140 or 1-(877) SHARP-CC



# Memo

---

**SHARP®**

## LIMITED WARRANTY

### *Consumer Electronics Products*

## Congratulations on your purchase!

Sharp Electronics of Canada Ltd. (hereinafter called "Sharp") gives the following express warranty to the first consumer purchaser for this Sharp brand product, when shipped in its original container and sold or distributed in Canada by Sharp or by an Authorized Sharp Dealer:

Sharp warrants that this product is free, under normal use and maintenance, from any defects in material and workmanship. If any such defects should be found in this product within the applicable warranty period, Sharp shall, at its option, repair or replace the product as specified herein.

This warranty shall not apply to:

- (a) Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
- (b) Any Sharp product tampered with, modified, adjusted or repaired by any party other than Sharp, Sharp's Authorized Service Centres or Sharp's Authorized Servicing Dealers.
- (c) Damage caused or repairs required as a result of the use with items not specified or approved by Sharp, including but not limited to head cleaning tapes and chemical cleaning agents.
- (d) Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the product including but not limited to earphones, remote controls, AC adapters, batteries, temperature probe, stylus, trays, filters, belts, ribbons, cables and paper.
- (e) Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.
- (f) Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.
- (g) Any product received without appropriate model, serial number and CSA/CUL markings.
- (h) Any products used for rental or commercial purposes.
- (i) Any installation, setup and/or programming charges.

Should this Sharp product fail to operate during the warranty period, warranty service may be obtained upon delivery of the Sharp product together with proof of purchase and a copy of this LIMITED WARRANTY statement to an Authorized Sharp Service Centre or an Authorized Sharp Servicing Dealer. In home warranty service may be provided at Sharp's discretion on any Sharp television with the screen size of 27" or larger and on any Sharp Over The Range Microwave Oven.

This warranty constitutes the entire express warranty granted by Sharp and no other dealer, service centre or their agent or employee is authorized to extend, enlarge or transfer this warranty on behalf of Sharp. To the extent the law permits, Sharp disclaims any and all liability for direct or indirect damages or losses or for any incidental, special or consequential damages or loss of profits resulting from a defect in material or workmanship relating to the product, including damages for the loss of time or use of this Sharp product or the loss of information. The purchaser will be responsible for any removal, reinstallation, transportation and insurance costs incurred. Correction of defects, in the manner and period of time described herein, constitute complete fulfillment of all obligations and responsibilities of Sharp to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

#### WARRANTY PERIODS

Colour Television	1 year (picture tube 1 additional year)
LCD Projector	1 year (bulb 90 days)
LCD TV	1 year
Video Cassette Recorder	1 year
Camcorder	1 year
TV/VCR Combo	1 year (picture tube 1 additional year)
Audio Products	1 year
Microwave Oven	2 years (magnotron 3 additional years for part only)
Vacuum Cleaner	1 year
DVD Player	1 year

To obtain the name and address of the nearest Authorized Sharp Service Centre or Dealer, please contact:  
SHARP ELECTRONICS OF CANADA LTD.

SHARP ELECTRONICS OF CANADA LTD.  
335 Britannia Road East  
Mississauga, Ontario  
L4Z 1W9  
(905)568-7140 or 1-(877) SHARP-CC  
Web site: [www.sharp.ca](http://www.sharp.ca)



**SHARP CORPORATION**  
Osaka, Japan

Printed in Malaysia  
TINS-3969AJZZ  
1P02-MSF