

 
THE SHARPER IMAGE®

Ionic
Breeze® *GP*

SI730 Instructions

INCLUDES IMPORTANT
SAFETY INFORMATION
READ ALL INSTRUCTIONS
BEFORE USING THIS
APPLIANCE
SAVE THESE
INSTRUCTIONS

SHARPER IMAGE DESIGN™

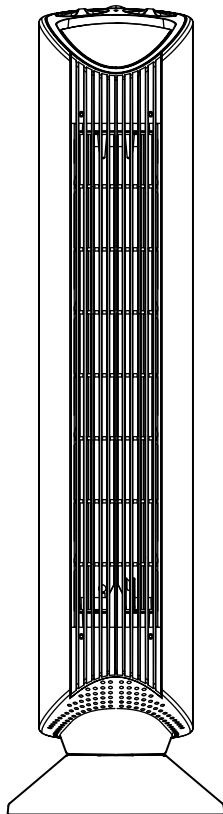

WARNING: To reduce the risk of fire, electric shock, or injury when using any electrical appliance, basic precautions should always be followed, including:

- This appliance operates at 110-120v AC and 60Hz only.
- Connect to a properly grounded outlet only.
- Use indoors only.
- Unplug from outlet when not in use and before servicing.
- Do not allow the appliance to be used as a toy. Close attention is necessary when the appliance is operated near children.
- Use only as described in this user manual.
- Do not use if cord or plug appears to be damaged. If the appliance is not working properly, or has been dropped, damaged, left outdoors, or dropped into water, return it to a service center or to the original place of purchase.
- Do not pull, lift, or carry by the power cord. Do not use the cord as a handle, close a door on the cord, or pull the cord around or against sharp edges or corners.
- Keep the cord away from heated surfaces.

READ AND SAVE THESE INSTRUCTIONS

- Damaged power cord must only be replaced by qualified service personnel. There are no user-serviceable parts inside the unit. Any attempt to open the unit will void the warranty and could lead to serious damage to the unit and/or personal injury to the operator.
- Turn off all controls before unplugging unit from outlet.
- Do not unplug by pulling the cord. Grasp the plug itself, not the cord, when unplugging from an outlet.
- Do not handle the plug or appliance with wet hands.
- Do not put any object into openings. Do not continue to use with any opening blocked. Keep all openings free of dust, lint, hair, or anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings.
- Do not operate the unit in areas where flammable or combustible products or vapors may be present.

CAUTION: This product generates invisible ultraviolet light. To avoid overexposure when the lamp is on, persons must stay at least one foot away from the unit if the total duration of exposure to the unit will be more than 1 hour per day. Shorter durations of exposure at close proximity are safe. If the enclosure is damaged, do not use the product.

Never stare at the U.V. lamp or place your face directly against the front or rear grill during operation.

Failure to follow these warnings can result in direct exposure to germicidal light, which can cause temporary or chronic damage to your eyesight, or may even result in blindness.

The collection grid has many edges and areas that can trap water. If running water is used to clean the grid, allow the collection grid to dry completely.

If candles or oil lamps are burned, the collection grid must be cleaned immediately or the collected soot may be released back into the room. In any area where this product will be subjected to heavy pollution it will be necessary to clean the collection grid more frequently.

Frequently Asked Questions About the Ionic Breeze®

How often is cleaning required?

At least every two weeks or anytime the Ionic Breeze makes an audible sound or the CLEANING INDICATOR lights.

How should it be cleaned?

Wipe the removable collection grid with a damp cloth, paper towel or sponge. **It is very important that the collection grid be allowed to dry completely before returning it to the main housing.**

What is the clean fresh scent I smell?

This scent is ozone, (O³), a combination of three oxygen atoms. (The U.S. government has set safe standards for ozone, and the Ionic Breeze complies with those standards.)

Which power setting should I use?

If the odor of ozone is strong (for instance in a smaller room), you may prefer to have the power setting on medium or low.

Please read this product instruction manual for important safety information and operating instructions.

Set-Up and Operation

Place the Ionic Breeze GP at least twelve inches from the wall and in a location where children cannot stare directly into the unit at a close range.



Plug into a grounded 110v outlet (read warnings for details).

Switch the **MODE CONTROL** to the desired setting:

ON - The unit will clean, and circulate the air but the germicidal lamp is not activated.

ON/G.P. - Air is also passed through UV light produced by a germicidal lamp.


Blue Glow coming from within the unit indicates that the germicidal lamp is operating.

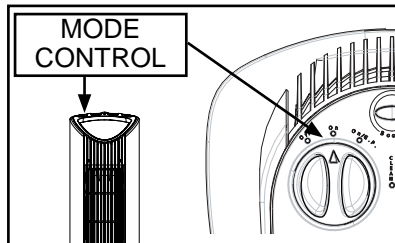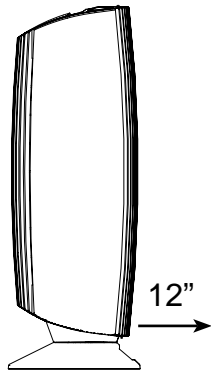

Set-Up and Operation


Switch the POWER CONTROL to the desired HI, MED, or LO setting.

Normal operation at all power levels involves a pre-programmed cycle of altering high and low air movement.

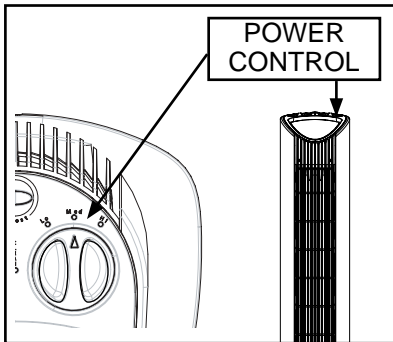

Press BOOST to override the POWER CONTROL setting and run the unit at maximum power for five minutes.

Your previously selected power level will resume after the five minutes has elapsed.

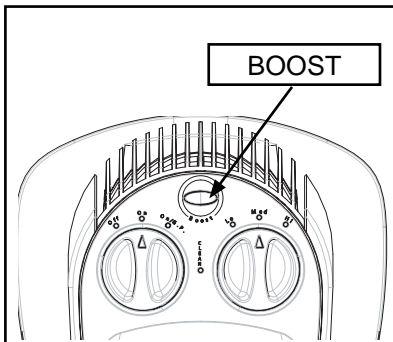

Cleaning the Collection Grid


Cleaning the grid every one or two weeks. As a reminder, the cleaning indicator light will turn amber after two weeks. If the cleaning indicator light turns red, the unit has shut down because of excessive dirt or circuitry problems. In most cases a thorough cleaning will return the unit to normal operation.

Unplug the unit before cleaning.

Remove the collection grid by pulling it from the top of the unit.

Use a dry or slightly damp towel or sponge to quickly wipe the dust from each of the three collection bars.

Invert the entire unit for two or three times before replacing the grid.

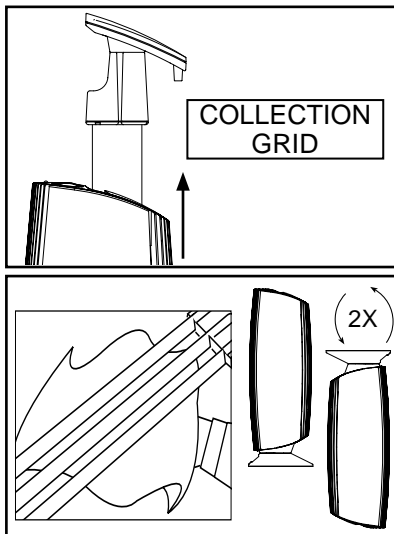


Thorough Cleaning


If the unit makes noise during operation, a thorough cleaning of the grid and ionizing wires may be required.

Remove the collection grid by pulling it from the top of the unit.

Wash the grid with warm soapy water, rinse, and **allow to dry for 24 hours** before returning to unit.

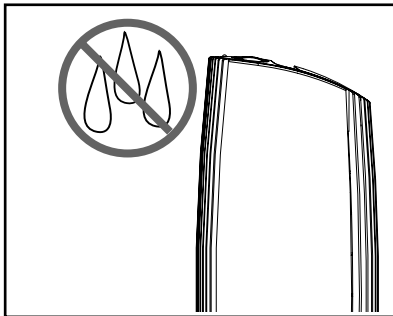

Use a compressed gas dusting product to remove any accumulated particles from the ionizing wires and to blow out any dust that is settled in the base of the unit. (Because of the dust, it is advisable to do this outside.)

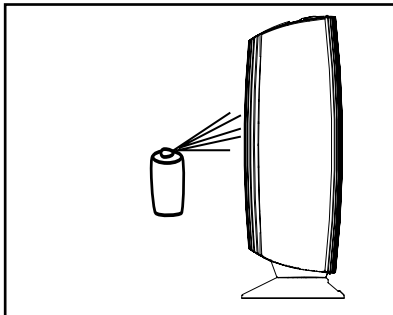

Additional Information

The exterior of the unit can be cleaned using a cloth or sponge and a solution of one part household bleach to five parts water or any bleach based spray cleaner.

Allow the surface to dry completely before plugging it back into an outlet.

The unit will not function while the collection grid is removed and/or the germicidal lamp cover is removed.

The Ionic Breeze has been independently tested and found to comply with U.S. government limits on the maximum acceptable level of ozone, less than 50 parts per billion by volume of air circulating through the device. Persons with a history of asthma, heart disease, or any lung disease or breathing problem should consult with their physician before using this product.

Germicidal Lamp Replacement


Lamps are effective for about 12 months of continuous use. Replace earlier if there is no "blue glow" inside the housing, when the unit is running in G.P. mode.

Oil from fingers will reduce the germicidal performance of the U.V. lamp. DO NOT allow fingers to come in contact with the glass. Use gloves or handle only by the metal area of the lamp. If you touch the lamp or need to clean it for any reason, wipe with a paper towel dampened with alcohol or any ammonia-based cleaner (such as Windex brand).

Remove the cover by lifting up on the RELEASE TAB at the bottom of the cover and sliding the cover upward.

Turn the lamp 1/4 turn (two "clicks") and slide it from its fixture. Replace with a new lamp of the same type.

Replacement lamps are available directly from The Sharper Image.

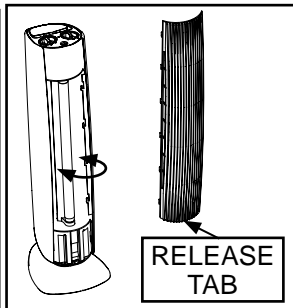

Consult your local regulations for the proper disposal method of used fluorescent lamps.

Statement of FCC/DHHS compliance
Model: SI730

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This product complies with DHHS Rule 21 subchapter J at date of manufacture.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

FULL THREE-YEAR WARRANTY

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for three years from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the instruction manual, or damage caused by failure to properly clean and maintain this product.

What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If You Have Questions

Please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.