



ANDROID™
Operating System

SYLVANIA

10" Magni Tablet User Guide

 


MODEL NUMBER: **SYTAB10ST**

Wireless Mobile Internet Tablet

Powered by **ANDROID™**

Getting to Know Your New Tablet:

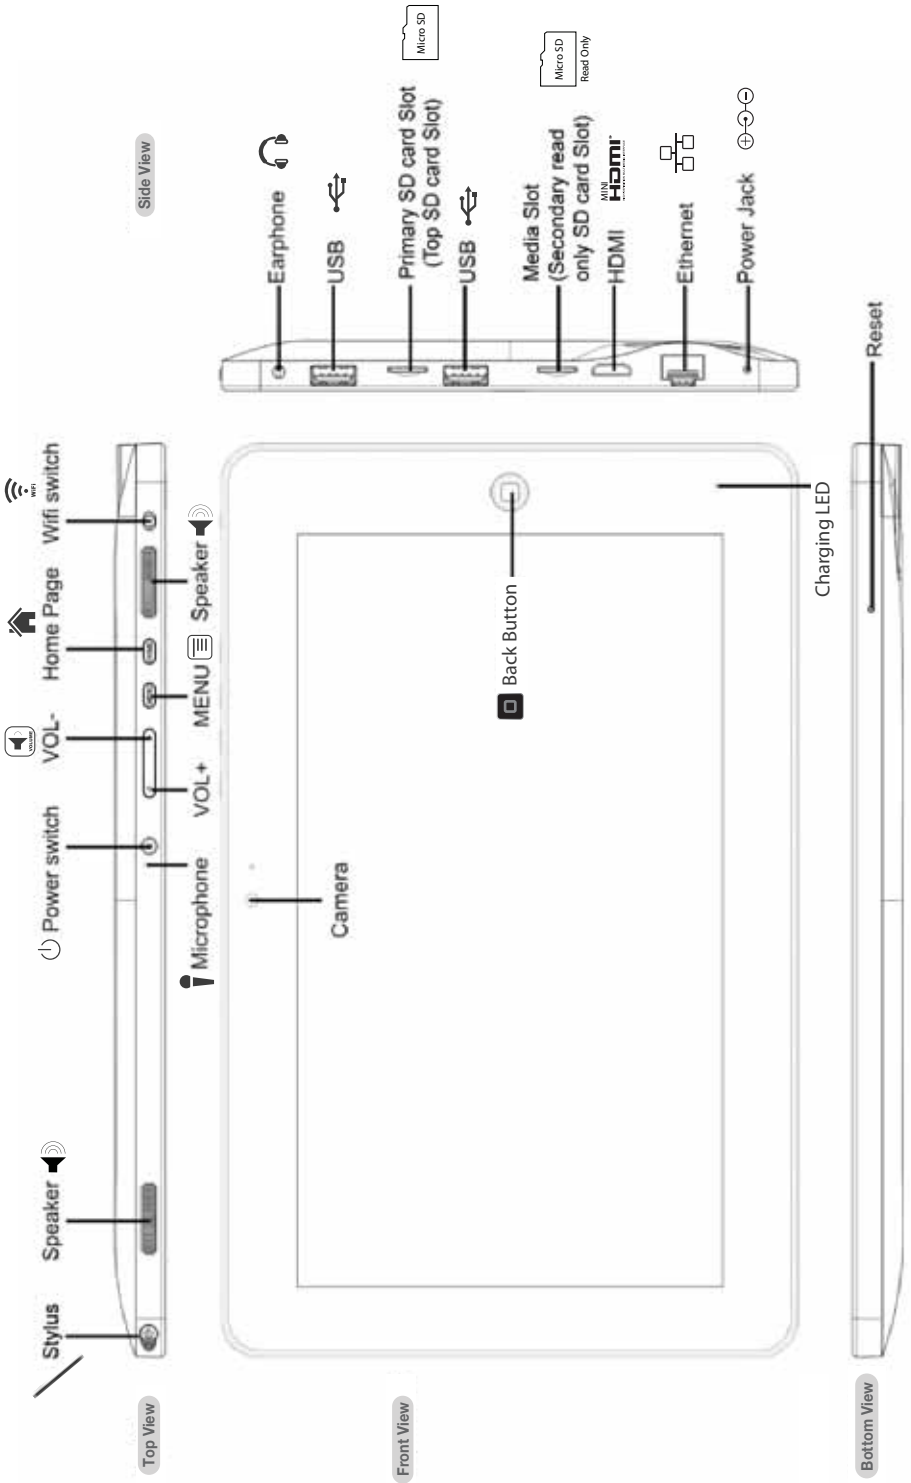




Important Notes



 Tap screen with the stylus or fingernail rather than the pad of your finger.


- Note that this product has a resistive touch screen. This machine senses pressure applied to it in specific areas and acts on this pressure. Please use a stylus or your fingernail when tapping the screen for optimal usage. Note that simply touching the screen with your finger will not produce optimal results.
- Please note that this product is not a computer. It is a Wireless Mobile Internet Device with an Android Operating System.
- Along with WiFi settings, make sure the WiFi manual switch is turned on.



-  The standard USB port is used primarily to connect USB storage devices.
-  Inserting an SD Memory Card helps add additional storage capacity, for importing files, downloading applications, taking pictures, reading books and playing stored media.

To protect your SD card's file and directory structure integrity, it should be unmounted before removed.

To do this, tap Menu > Settings > SD card & device storage > and under SD card tap Unmount SD card.

-  The Mini HDMI port is an "OUT" port designed to output to HDMI devices.
- The software on your tablet is updated frequently to ensure your tablet is always optimized. Make sure to check for and run updates. Read on for details on how to update your device.

 
NOTE: The icons shown here in this product manual may be different than the icons of the actual product.

Getting Started

1. CHARGING YOUR DEVICE

Plug the power adapter into an electrical outlet and connect your device to the adapter. It is recommended that you fully charge the battery before use, for **at least six hours**.

2. TURNING YOUR DEVICE ON



Press the power button on the top of the device to turn it on. You can use the device while the battery is charging. To turn the power off, hold the power button of your device for about five seconds. Then slide **Power Off** when it appears on the screen, followed by **OK**.



Sleep Mode: Your device will go into sleep mode after a period of inactivity or if ON/OFF button pressed. (Go to Settings, under display to modify the sleep time.) To get out of sleep mode, press the **power button** to start using it again.

3. CONFIGURING THE TOUCH SCREEN

1. Press the **MENU** button on the top of the product.
2. Tap **Settings** on the bottom menu.
3. Scroll down and tap **Touch Screen Calibrate**.
4. Use the stylus to tap the middle of the displayed crosshairs to calibrate the touch screen.

Note: After a system reset, it may be necessary to re-calibrate your screen.

4. INSERTING AN SD CARD

Using an SD Card allows you to import other files, download applications and play stored media.

Insert a Micro SD Card (supports up to 32GB) into the top SD Card Slot. You will hear a click when the card is inserted properly.




SD Card Slots

Please use the Primary SD Card Slot (top SD card slot) as the primary card slot for Android application storage and operations.

The Media slot (**secondary read only SD card slot**) is intended to be used for read-only playback of videos, music, photos etc. Your tablet will not write or save information to the Media Slot. It is intended only for media playback.

Please make sure that the Media Slot is only used to play Media files and not used to store files from your tablet.

Home Screen Features

1. You can go back directly to the Home screen by tapping on the Home icon 
2. Wi-Fi Connection Status
3. Battery Level
4. Time Display
5. Screen Shot: tap to take a picture of your screen
6. Settings Menu
7. Using the back button  (only button on the tablet front) or the return icon  will bring the screen page backwards.
8. Search Bar
9. Application Quick Launch Bar:
Frequently used applications can be dragged to the bar to be displayed. Tap the icon to access the application.




Display Preferences

Landscape (default)



Portrait

The screen orientation is set to rotate automatically between portrait and landscape (and vice versa) during use.

To manually switch between Landscape and Portrait mode, tap on the Screen Orientation icon on the top menu bar. 

(If the Orientation icon is not present, press the menu button. Tap the **Sounds and Display** icon and then tap the Orientation icon. Then **Orientation** icon should show up on the top as shown in the screen shot).

Setting Date And Time

1. Tap **Settings** from the Home Screen to access the device settings.
2. By default, your device should be set to "**Automatic**" that will update your time and date via the internet.
3. Tap Time zone and select your region and GMT offset.
4. Change the way in which the date and time are displayed by tapping the **Use 24-hour** format and **Select date format** options.

NOTE: When Automatic option to deactivated, you can manually set the date and time.



 
INTERNET

This tablet gives you the option to connect to the internet, with either a wi-fi or an Ethernet LAN Connection.

When connecting to the internet, please make sure it is a network you can trust such as your own home network, that of a friend or a public Wi-Fi hotspot such as library, restaurant, hotel or school campus. It is unsafe to connect to internet or Wi-Fi sources that you do not own or cannot be trusted. If you do not have an Internet connection in your home you may have to contact your local ISP to purchase service.


Wi-Fi Setup

Make sure the Wi-Fi manual switch on the top of the tablet is turn to the ON position.



1. To set up Wi-Fi, tap Wi-Fi settings on the Application Home Screen Panel. Tap or make sure the "Network notification setting" is active and check.
2. Tap Turn on Wi-Fi. The device will automatically scan and list local Wi-Fi networks that it finds. A lock image indicates a secure network that requires a password for access.

 You must be connecting to your tablet to your own home or office Wi-Fi Access Point (AP) or a trusted free unsecured Wi-Fi hotspot

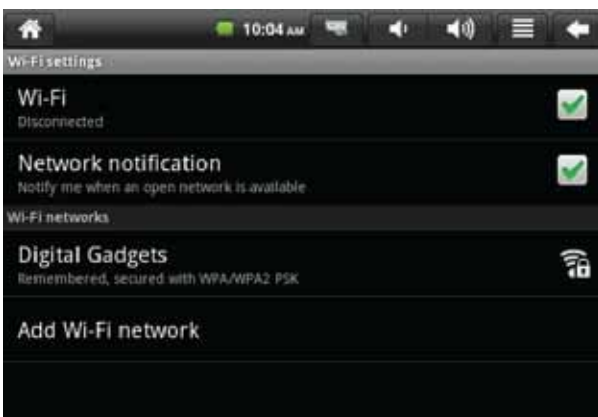

Secure Wi-Fi network; must have a password.



Unsecured Wi-Fi network; anyone can access.

3. Tap the network that you would like the device to connect to.
4. If a password is required, a notification screen will appear to allow you to enter the password. Tap the Wireless password box to access the keyboard and enter the password. Tap Done when finished.
5. A wireless icon will appear in the toolbar to indicate that you are connected to the wireless network.
6. Tap the back arrow to exit to the Home Screen.


Ethernet

Ethernet connection



Insert the end of a LAN line into the RJ-45 of this tablet Ethernet port. Notice the icon to verify connection to the Internet.



NOTE: If the Ethernet is not working or the icon  is not visible; you may need to configure this Ethernet connection.

In the setting menu, tap the Ethernet configuration and confirm the Ethernet ON box is checked.

Email Setup



* POP3, IMAP, and other common email accounts are supported.

1. To set up Email, tap **Email** on the Application Home Screen Panel.
2. Enter your email address and password.
3. Tap **Next**. This will be your default account unless you add another email address. After you have more than one account set up, you can select a different address as the default account.

(optional)

To select the account type, or modify individual account settings, tap **Manual Setup** after entering your email address and password. Tap **Settings Menu** then tap **Account Settings** to change your email Settings.

Navigating The Home Screen And Application Panels

Your device displays the Home Screen when there are no other applications or menus open. The Home Screen allows you to organize all of your favorite applications, widgets and other tools for easy access.

The Home Screen is divided into three panels: the Search Panel, the Widget Panel and the Application Panel. Slide the stylus across the screen to the right or left to change panels.

 


- The **Search Panel** allows you to quickly search the web.
- The **Widget Panel** allows you to customize a variety of tools, or “Widgets” that run right on the Home Screen, such as a calendar, mp3 player and local weather updates.
- The **Application Panel** displays the Android® applications pre-installed on the device. To go from the Home Screen to the Application Panel, tap the middle icon, which is a group of white small boxes, on the bottom part of the screen. Tap an application icon to launch the application on your device. To return to the Home Screen tap the icon of the house.

Taking Photos And Videos

Your tablet is equipped with a built-in 2.1 megapixel camera. With this camera you can take both still photos and videos.

- 1) To operate the camera, first click the **camera icon** located on the Application Panel.
- 2) When in the camera application, click the icon in the lower right corner to shoot a photo.
- 3) Then, save the picture to DCIM/CAMERA under SD1 root directory.
- 4) If you want to take a video, use your stylus to slide the switch from picture to video mode and follow the same instructions above to shoot.
- 5) To review, delete, share photos and more; click on the icon in the upper right hand corner. To return to the shooting interface, click **finish**.
- 6) To set picture size, quality and more; tap on the vertical lines on the left hand side of the device.

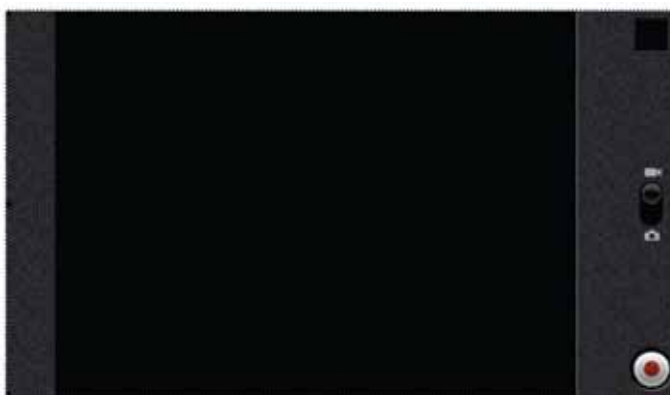

HDMI Instructions

Connect HDMI to your HDTV.  MINI HDMISM
HIGH-DEFINITION MULTIMEDIA INTERFACE

The mini HDMI port is an “out” port designed to output from the tablet to to an HDTV.

Once the HDMI cable is plugged into this device and the HDTV, the notification drop down list shows a notification labeled “HDMI Support – Connected”. This does not need to be tapped, in order for the HDMI to work; however, this notification verifies when HDTV is on and tablet is connected.

After you locate and play a video file that is being viewed using the ‘Movies’ or ‘Video Player’ option; press in the Menu button to activate the video on the HDTV screen. Pressing the menu button again, brings the picture back to the tablet screen.

Other Settings:

ANIMATION:

You can change your screen animation from some animations (default) to more animations.

1. Tap on **Settings Menu** and go to **Display** option.
2. Tap **Animation** to change the setting.

ADDING APPLICATIONS

You can easily add applications to your device using the **SAM 4.0** app store to search for and install Android applications.

Please note that not all applications will work with tablets, as some applications were made to work only on Android smartphones. Some applications will not perform properly.

MOVING ICONS

To move any of the icons on your screen, touch and hold the stylus to the icon. The icon will highlight and then increase in size and allow you to drag and drop it anywhere on the screen, or into the trash bin. When you have selected an icon, the trash bin will pop-up on the side of the screen. Dropping an icon into the trash bin will simply remove it from view; it will not uninstall the application from your device.

Included Widgets

Widgets:

1. Analog Clock Displays the time with an animated analog clock.
2. Calendar Displays the date in a monthly calendar view.
3. Music Play and manage audio files (MP3, WAV, AAC, OGG).
4. Gallery Allows you to view photos, play video and audio files.
5. Power Control Turn Wi-Fi, Account Sync and Screen Brightness on and off to save battery life.
6. Weather Displays local weather conditions (Requires Wi-Fi connection).

Included Applications

APPLICATIONS

1. File Manager Manage files stored on the SD Card or on local memory.
2. Browser Access the Internet and surf the web.
3. Email Send and receive email using your existing email accounts.
4. Gallery Allows you to view photos, play video and audio files.
5. Alarm Clock Set and schedule alarms.
6. Settings View and change settings to personalize your device.
7. Contacts Create, view and edit your personal contacts.
8. Calculator Perform simple mathematical calculations.
9. YouTube View and share popular videos online.
10. Wi-Fi Settings View and update Wi-Fi settings and access points.
11. Kobo Download and read millions of eBooks.
12. Recorder Record voice notes or sound using the tablet's on-board microphone.
13. Music Player Play and manage audio files.
14. Sam 4.0 Application store: Choose applications to use on your tablet.
15. Droid Reader Open PDF files.
16. System Update Use this application to update your system to make sure you have the most up to date software for your tablet.

Updating the Software

The software on your tablet is updated frequently to ensure your tablet is always optimized. Make sure to check for updates frequently.

Important: *Make sure all your data is backed up.*

Before performing an update, remove your MicroSD card from the device.

Updating the software will clear all private data stored in your device.

To Update Software or Check for Updates:

1. Tap **Settings Application**
2. Scroll to **System Update** and select
3. Tap **System Update** from the Application screen
4. Tap **OK** to continue

Surfing The Web

Use the Browser application to surf the web easily and securely.

1. Select the Browser from the Application Quick Launch Bar to launch the Internet browser.
2. Tap in the top entry field to enter a web address (e.g. google.com) or tap in the search box to search the Internet. The keypad will appear so that you can type the web address or search term.
3. Tap **Done** when finished.



Sending and Receiving Email

After email setup is complete, you can access your current email account Inbox.

1. Tap **Email** on the Home Screen Application Panel to access your Inbox.
2. Tap an email message in your Inbox to read the message.
3. Reply to or delete the message by tapping the buttons at the bottom of the screen.
4. To compose a new message, tap the **Settings** button while in the Inbox.
5. Tap in any of the message entry fields to display the keypad.
6. Tap **Send** to send the message.



Customer Service

Most issues can be resolved by visiting our web site at:

www.digitalgadgets.com. Locate your product and check out the instructional videos, FAQ, and download section, for the newest updates.

If you are experiencing problems with this product,
please contact customer service before
contacting your retailer.

Call 888-571-0866

or email:

dgsupport@digitalgadgets.com

DIGITALGADGETS

www.digitalgadgets.com | 888-571-0866

Digital Gadgets, 21 Englehard Drive, Monroe, NJ 08831

Notices And Disclaimer

FCC Notices:

The FCC requires that you will be advised of certain requirements involving the use of this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this device. Changes or modifications not expressly approved in writing by the responsible party may void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

(1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio TV technician for help.

SYLVANIA is a registered trademark of OSRAM SYLVANIA INC., used under license.

Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.

All other trademarks are those of their respective owners.