

**How to connect up,
build-in, set up, use and look
after your oven**

Table of contents

Important information	4
Before installation	4
Safety information	4
Reasons for damage	6
Your new cooker	7
The control panel	7
Temperature selector (hot air) – Main oven	7
Function selector – Mini oven	8
Temperature selector – Mini oven	8
Control buttons and display panel	9
Types of heating – Main oven	10
Types of heating – Mini oven	11
Oven and shelving accessories	12
Cooling fan	13
Before using for the first time	13
Heating up the oven	13
Pre-cleaning the accessories	13
Setting the oven	14
Setting procedure – Mini oven	14
Setting procedure – Main oven	15
If the oven is to switch off automatically – Main oven	16
If the oven is to switch on and off automatically – Main oven	17
Time	18
Setting procedure	18
Timer	19
Setting procedure	19

Table of contents

Basic settings – Main oven	20
Changing the basic settings	21
Childproof lock	22
Care and cleaning	22
Oven exterior	22
Oven	23
Cleaning the rails	25
Seal	25
Accessories	25
Troubleshooting	26
Replacing the oven light	26
After-sales service	27
Packaging and old appliances	28
Tables and tips	29
Cakes and pastries	29
Baking tips	32
Meat, poultry, fish	33
Tips for roasting and grilling	34
Convenience Food	36
Defrosting – Main oven	36
Energy saving tips	37
Acrylamide in food	37
What can you do?	38
Test dishes	39
Assembly instructions	40
For the installer and kitchen expert	40
Important installation notes	40
Installation of the built-in oven	41

Important information

Read this instruction manual carefully.
Only then will you be able to operate your cooker safely and correctly.

Please keep the instruction and installation manual in a safe place. Please pass on the instruction manual to the new owner if you sell the appliance.

Before installation

Transport damage

Check the appliance after unpacking it.
Do not connect the appliance if it has been damaged in transport.

Electrical connection

The cooker may only be connected by an approved specialist. Losses resulting from damage caused by incorrect connection will invalidate warranty claims.

Safety information

This appliance is intended for domestic use only.
Only use the cooker for food preparation.



The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

Hot oven



Open the oven door carefully. Hot steam may escape.
Never touch the internal surfaces of the oven or the heating elements. There is a risk of burning. Children must be kept at a safe distance from the appliance.
Never store combustible items in the oven.
Risk of fire.
Never clamp leads of electrical appliances in the hot oven door. The insulation on the leads could melt. There is a risk of short-circuiting.

Be careful with food that is prepared with drinks with a high alcohol content (e.g. cognac, rum). Alcohol evaporates at high temperatures. In unfavourable circumstances, the alcoholic vapours could catch fire in the oven. There is a risk of burning.

Only use small quantities of drinks with a high alcohol content and open the oven door carefully.

Repairs



Incorrectly done repairs are dangerous.

There is a risk of electrocution.

Repairs may only be carried out by after-sales service technicians who have been fully trained by BSH.

If there is a fault, switch off the oven fuse at the fuse box. Call the after-sales service.

Reasons for damage

Baking tray, aluminium foil or dishes on the oven floor

Do not place the baking tray on the oven floor.
Do not cover it with aluminium foil.
Do not place dishes on the oven floor.
This will cause heat accumulation. The baking and roasting times will no longer be correct and the enamel will be damaged.

Slide-in accessories

To avoid damage, insert slide-in accessories carefully.

Water in the oven

Never pour water directly into a hot oven.
This could damage the enamel.

Fruit juice

When baking very moist fruit cakes, do not put too much on the baking sheet. Fruit juice dripping from the baking sheet leaves stains that cannot be removed.
It is recommended that you use the deeper universal pan.

Cooling with the oven door open

Only leave the oven to cool with the door closed. Do not allow anything to become trapped in the oven door. Even if you only leave the oven door open slightly, the fronts of adjacent units may become damaged over time.

Very dirty oven seal

If the oven seal is very dirty, the oven door will no longer close properly when the oven is in use. The fronts of adjacent units could be damaged. Keep the oven seal clean.

Using the oven door as a seat


Do not stand or sit on the oven door.

Your new cooker

Here you will learn more about your new oven. The control panel and its switches and indicators are explained here. The heating modes and the accessories included with your oven will be explained here.


The control panel

Details vary according to the appliance model.

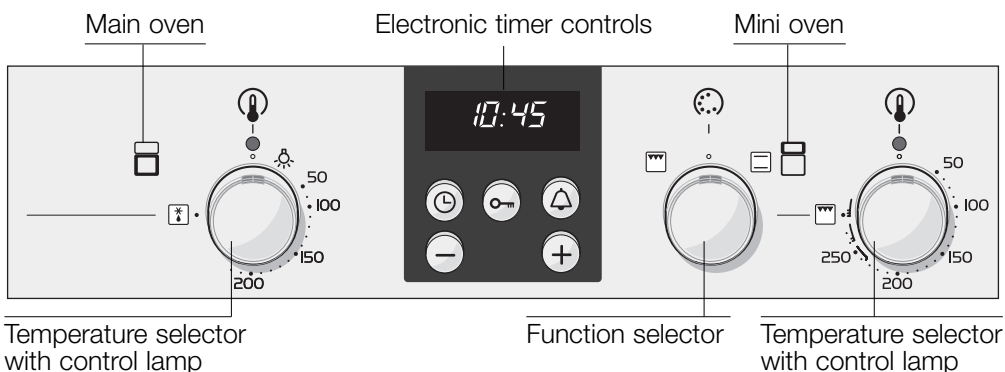



Temperature selector Main oven

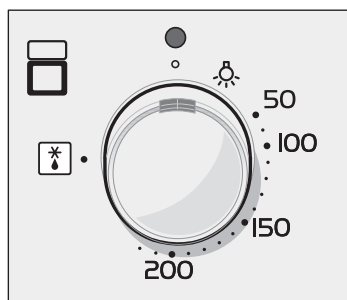Use the temperature selector to select the type of heating for the oven.



Settings


	Oven light
50–200	3D-hot air temperature in °C
	Defrost

The oven light switches on when you select a temperature.

The red oven temperature control lamps illuminate when the oven is first switched on.



The symbol does not come on for defrosting.

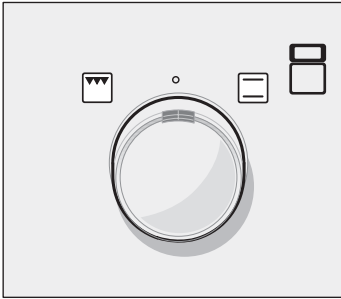Function selector Mini oven




Use the function selector to select the type of heating for the oven.

Settings

	Conventional heat
	Radiant grill – large area

The oven light switches on when you select a function.

Temperature selector Mini oven

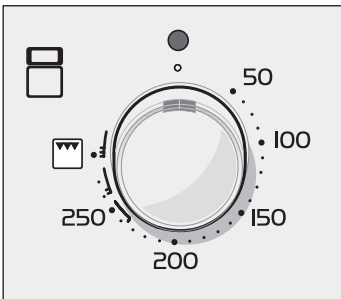




Use the temperature selector to set the temperature or grill setting.

Temperature


50–270	Temperature range in °C
--------	-------------------------

Grill

	Low grill
	Medium grill
	High grill


 

 



The symbol above the temperature selector comes on.

Grill settings

You can select a grill setting on the radiant grill  using the temperature selector.

Control buttons and display panel




Clock button 	Use this button to set the time of day, the cooking time  and the completion time 
Key button 	Use this button to switch the childproof lock on and off.
Timer button 	Use this button to set the timer
Minus button 	Use this button to reduce the values set.
Plus button 	Use this button to increase the values set.

The values set can be seen in the display panel.

Types of heating


Main oven

Different types of oven heating are available. You can therefore select the best method for cooking any dish.

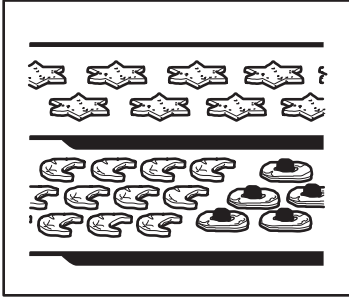

3D-hot air

A fan in the rear panel distributes the heat from the ring heating element evenly inside the oven. Using 3D-hot air, it is possible to bake cakes and pizza on two shelves. You can cook biscuits and puff pastry on three levels at the same time. The required oven temperatures are lower than those for top and bottom heating. Additional baking trays may be obtained from specialist shops. 3D-hot air is ideal for drying food.

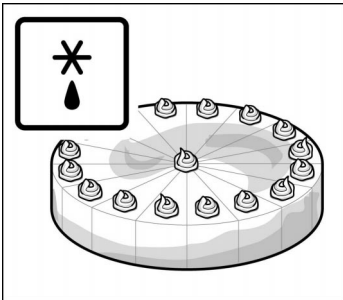

Defrosting

A fan in the rear panel circulates the air in the oven around the frozen food. Frozen pieces of meat, poultry, bread and cakes defrost evenly.


Types of heating

Mini oven

Different types of oven heating are available. You can therefore select the best method for cooking any dish.


Top and bottom heating

This ensures the even distribution of heat onto the cake or roast from the top and bottom of the oven. This type of heating is best for cake mixtures in tins or for bakes. Top and bottom heating is also suitable for cooking lean roasts of beef, veal and game.

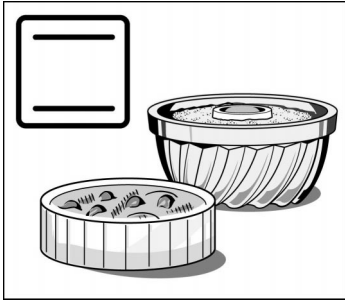


Radiant grill – large area

The entire area under the grill element becomes hot. This is ideal if you wish to cook several steaks, sausages, fish or slices of toast.

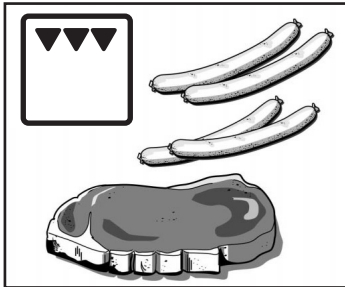


Oven and shelving accessories

Mini oven

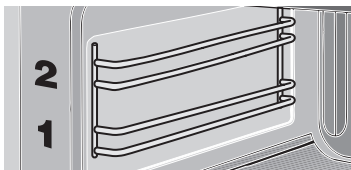

Your oven features 2 shelf positions. The shelf positions are counted from bottom to top. The numbers are marked in the oven.

Main oven

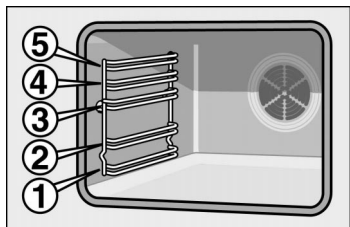


The shelf can be inserted at 5 different heights in the oven.

You can remove the shelf two thirds of the way without it tipping. This makes it easier to take food out of the oven.

Accessories


Accessories may be purchased at a later date from the after-sales service or from specialist shops. Please specify the HZ number.

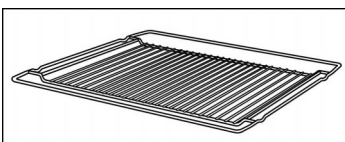

HZ 334000 wire shelf


For ovenware, cake tins, roasts, grilling and frozen meals.

Place the wire shelf curved downwards .

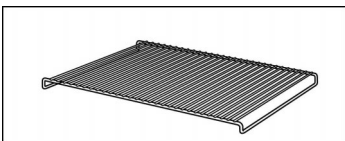

HZ 324000 wire insert

for grilling. Always place the wire insert in the universal pan. Fat and meat juices are collected.

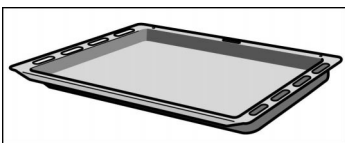

Universal pan HZ 332000

for moist cakes, pastries, frozen food and large roasts. It can also be used to catch dripping fat when you are grilling directly on the wire shelf.

Push the universal pan with the sloping edge facing towards the oven door.

Optional accessory

Optional accessories may be purchased from the after-sales service or from specialist shops.

Protective device for main oven door	440651
Protective device for mini oven door	673716

Cooling fan

The oven is fitted with a cooling fan. It switches itself on and off as necessary. The warm air escapes above the door

Before using for the first time

This section will tell you everything you need to do before using the cooker for the first time.

Heat the oven and clean the accessories. Read the safety instructions in the „Important information“ section.

Firstly, check to see if the \ominus symbol and three zeros are flashing in the display.

If the \ominus symbol and three zeros are flashing

Set the time.

1. Press the \ominus clock button.
12:00 appears and the \ominus clock symbol flashes.
2. Set the time using the + or – button.

The time selected is adopted after a few seconds. The cooker is now ready for use.

Heating up the oven

Method

Heat the empty oven with the door closed to remove the new oven smell.

1. Preheat the empty oven for about 30 minutes.
Select heat for the main and mini oven at a setting of 190 °C.
During the initial burn-in phase, please open the kitchen windows to dissipate unpleasant odours.

Pre-cleaning the accessories

Please wash the accessories thoroughly with soapy water and a cleaning cloth before using them.

Setting the oven

Switching off the oven manually

You have various options for setting the oven.

When your meal is ready, switch off the oven yourself.

The main oven switches off automatically

You can leave the kitchen for a long period.

The main oven switches on and off automatically

You can put your meal in the oven in the morning, for example, and set the oven so that your meal is ready at midday.


Tables and tips

The correct settings for many dishes can be found in the Tables and tips section.


Setting procedure

Example: Mini oven

Top/bottom heating  190° C

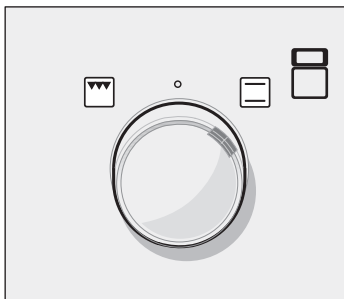

1. Select the desired type of heating using the function selector.

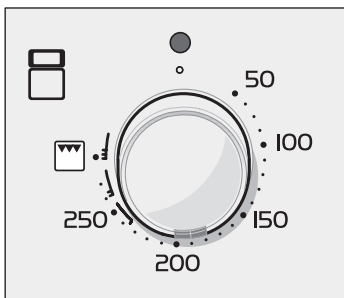

2. Use the temperature selector to set the temperature or grill setting.


Switching off

Switch off the function selector when the meal is ready.

Changing the setting

You may change the temperature or grill setting at any time.

Setting procedure Main oven

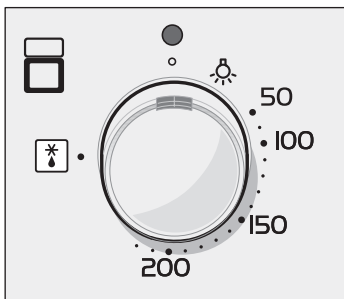

1. Set the temperature control knob to the desired temperature.

The selected temperature will be controlled automatically.

The red oven temperature control lamp illuminates when the oven is first switched on, and extinguishes when the required temperature has been reached.

If the oven is to switch off automatically – Main oven

Example: Cooking time of 45 minutes



Make settings as described in step 1.
Set the cooking time (duration) for your meal.

2. Press the ⌚ clock button.
The cooking time symbol I->I will flash.

3. Set the cooking time using the + or – button.
+ button default value = 30 minutes.
– button default value = 10 minutes.

The oven switches on after a few seconds.
The I->I symbol lights up in the display.

The cooking time has elapsed

A signal sounds. The oven switches off. Press the ⌚ button twice and switch off the function selector.

Changing the setting

Press the ⌚ clock button. Change the cooking time using the + or – button

Cancelling the setting

Press the ⌚ clock button. Press the – button until the display is at zero. Switch off the function selector.

Setting the cooking time when the clock time is hidden

Press the ⌚ clock button twice and perform the setting as described in item 3.

If the oven is to switch on and off automatically – Main oven

Example: Imagine – it's 10:45 a.m. The meal will take 45 minutes to cook and must be ready at 12:45 pm.



Please remember that easily spoiled foods must not be allowed to remain in the oven for too long.

Perform the settings as described in items 1 to 3. The oven starts.

4. Press the ⌚ clock button until the →| end symbol flashes.

In the display you will see the time when the meal will be ready.



5. Use the + button to set a later end time.

The setting is adopted after a few seconds. The display will show the end time until the oven switches on.

The cooking time has elapsed

A signal sounds. The oven switches off. Press the ⌚ button twice and switch off the function selector.

Note

You can change the setting while the symbol is flashing. The setting has been adopted if the symbol lights up permanently. You may change the waiting time that elapses before the setting is adopted. See the Basic settings section for more details.

Time

When the oven is first connected, or following a power cut, the ⌚ symbol and three zeros flash in the display. Set the time.

The function selector must be switched off.

Setting procedure

Example: 13:00



1. Press the ⌚ clock button.
12.00 appears in the display and the ⌚ symbol flashes.



2. Set the time using the + or – button.
The time selected is adopted after a few seconds.

Changing the time e.g. from summer to winter timer

Press the ⌚ clock button twice and change the time with the + or – button.

Hiding the time

You can hide the time. It will then only be visible when you are performing settings.

To do this, you must change the basic setting.

See the Basic settings section.

Timer

You can use the timer as a kitchen timer. It operates independently of the oven.



The timer has a special signal. This means that you can tell whether the set timer period has elapsed or the cooking time is complete.

You can also set the timer if the childproof lock is active.

Setting procedure


Example: 20 minutes




1. Press the  timer button.
The  symbol will flash.




2. Set the timer period using the + or – button.
+ button default value = 10 minutes.
– button default value = 5 minutes

The timer starts after a few seconds. The  symbol lights up in the display. The time counts down visibly.

The time has elapsed

A signal sounds. Press the  timer button. The timer display will go out.

Changing the timer period

Press the  timer button. Change the time using the + or – button.

Cancelling the setting

Press the  timer button. Press the – button until the display is at zero.

The timer and cooking time count down simultaneously

The symbols light up. The timer period counts down visibly in the display.

To call up remaining cooking time $I \rightarrow I$, end time $\rightarrow I$ or time \odot : Press the \odot clock button until the symbol in question flashes.

The value called up will then appear in the display for a few seconds.

Basic settings


Main oven

Your oven has several basic settings. You may change the basic settings for time, the signal duration and the reset time for a setting.

Basic setting	Function	Change to
Time \odot I = Time in the foreground	Time display	Time \square = Time hidden
Signal duration \triangle 2 = approx. 2 minutes	Signal after cooking time or timer period has elapsed.	Signal duration I = approx. 10 seconds 3 = approx. 5 mins
Reset time $I \rightarrow I$ 2 = medium	Waiting time between the adjustment increments before the setting is adopted.	Reset time I = short 3 = long


Changing the basic settings – Main oven

Example: Hiding the time

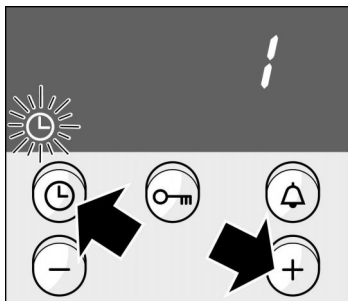


There must be no program set.

1. Press the ⌚ clock button and the + button at the same time until a **!** appears in the display. This is the basic setting for the time in the foreground.

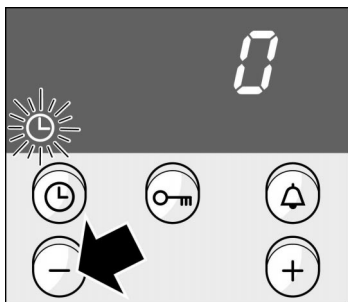

2. Change the basic setting using the + or – button.

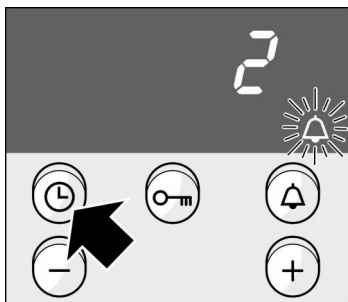

3. Conform with the ⌚ clock button.

A **2** will appear in the display for the basic setting for the signal duration.

Change the basic setting as described in step 2 and confirm with the ⌚ clock button. You can now change the reset time. To finish press the ⌚ clock button.

**You do not wish to change
all the basic settings**

If you do not wish to change a basic setting, press the ⌚ clock button. The next basic setting will appear.



Correcting settings

You may change your settings again at any time.



Childproof lock – for the main oven

The oven has a childproof lock to prevent children switching it on accidentally.

Locking the oven

Press the  key button until the  symbol appears in the display. This will take approximately 4 seconds.

Unlocking

Press the  key button until the  symbol goes out.

Notes

You can set the timer and the clock even when the oven is locked.

The childproof lock setting will be lost if there is a power cut

Care and cleaning

Do not use high-pressure cleaners or steam jets.

Oven exterior

Wipe the oven with water and a little washing-up liquid. Dry it with a soft cloth.

Caustic or abrasive substances are not suitable. If any such substances come into contact with the frontage, wipe it off immediately with water.

Notes

Slight differences in the colours on the appliance front are caused by the use of different materials, such as glass, plastic and metal.

Shadows on the door panel which resemble smears are reflections from the oven light.

Appliances with stainless steel fronts

Always remove any flecks of limescale, grease, cornflour and egg white immediately. Corrosion can form under such flecks.

Use stainless steel care products. Follow the manufacturer's instructions. Try out the product on a small area first, before using on the whole surface.

Appliances with aluminium fronts

Use a mild window-cleaning detergent. Wipe the area with a soft window cloth or a fluff-free micro-fibre cloth, using a horizontal action without applying pressure.

Aggressive cleaning products, scratchy sponges and rough cleaning cloths are not suitable.


Oven

Never use coarse scouring pads or cleaning sponges. Oven cleaner may only be used on enamelled oven surfaces

For ease of cleaning

you can switch on the oven light and detach the oven door.


Detaching the oven door

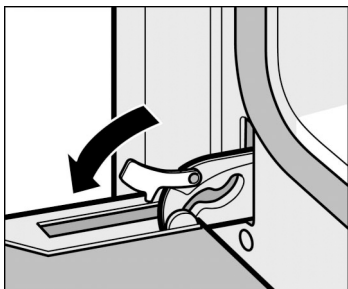

The oven door can be easily detached.

⚠ When pulling the door out, make sure that you do not reach into the hinge. There is a risk of injury.

1. Open the oven door fully.
2. Move the two locking levers on the left and right-hand sides.

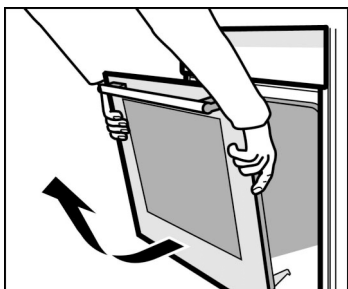

3. Half-close the oven door.
With both hands, grip the door on the left and right-hand sides.
Close the door a little more and pull it out.

After cleaning, refit the oven door in the reverse order to removal.

Self-cleaning surfaces

The back panel of both ovens and the ceiling of the upper oven are coated with self-cleaning enamel. This coating absorbs and disintegrates splashes from baking and roasting while the oven is in operation.

Large splashes only disappear after the oven has been used several times.

Colour variations on the self-cleaning surfaces have no effect on the self-cleaning function.

Caution.

Damage to the self-cleaning surface due to the application of oven cleaner.

- Never clean the self-cleaning surface with oven cleaner.
- If oven cleaner is accidentally applied to the self-cleaning surface, remove it immediately with a sponge and plenty of water.

Caution.

Damage to surface on self-cleaning areas due to the use of abrasive and acidic cleaning agents and aids.

- Do not use cleaning agents containing abrasive substances or acids.
- Do not use abrasive cleaning aids such as steel wool or scourers.

Cleaning the oven floor and the side walls

Use hot soapy water or a vinegar solution.

It is best to use oven cleaner if the oven is very dirty. Only use oven cleaner in a cold oven.

Never use oven cleaner on the self-cleaning surfaces of the oven.

Note:




Enamel is baked on at very high temperatures. This can cause some slight colour variation. This is normal and does not affect the function. Do not use coarse scouring pads or strong cleaning agents to remove such discolorations.

The edges of thin trays cannot be completely enamelled. As a result, these edges can be rough. Anti-corrosion protection is guaranteed.

Cleaning the glass cover for the oven light

It is best to clean the glass cover with washing-up liquid.

Cleaning the rails

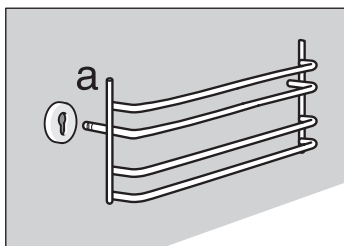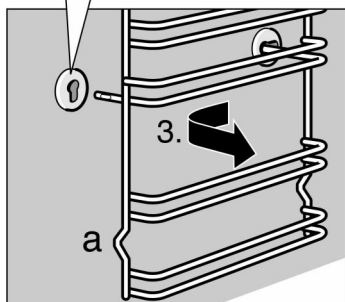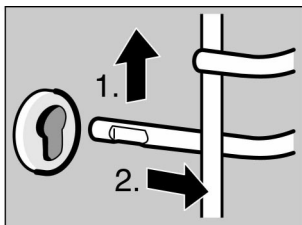

The rails can be removed for cleaning.

To unhook the rails:

1. Lift the rail at the front in an upwards direction
2. and unhook it.
3. Then pull the whole rail forward and take it out.

Clean the rails using either washing-up liquid and a sponge or a brush.

To hook rails back into position:

When installing the rails, do not twist them, otherwise the shelf positions for the accessories will not correspond.

First insert the rail in the rear socket, push it back slightly and then hook it into the front socket.

Main oven:

The rails fit both the left and right sides.
Recess (a) must always be at the bottom.

Mini oven:

The extension (a) must always be at the top.

Seal

Clean the seal on the oven with washing-up liquid.
Never use caustic or abrasive detergents.

Accessories

Immediately after use, soak the accessories in washing-up liquid. Food residues can then be easily removed with a brush or sponge.

Troubleshooting

Should a malfunction occur, it is often only due to a minor fault. Please read the following instructions before calling the after-sales service:

Problem	Possible cause	Comments/remedy
The oven does not work.	Blown fuse	Look in the fuse box and check that the fuse is in working order.
The clock display flashes.	Power cut	Reset the time.

Repairs may only be carried out by fully trained after-sales service technicians.


Improper repairs may constitute serious hazards to the user.

Replacing the oven light

If the oven light fails, it must be replaced. 40 watt heat-resistant spare bulbs can be obtained from the after-sales service or specialist shops.

Only use these bulbs.

Method

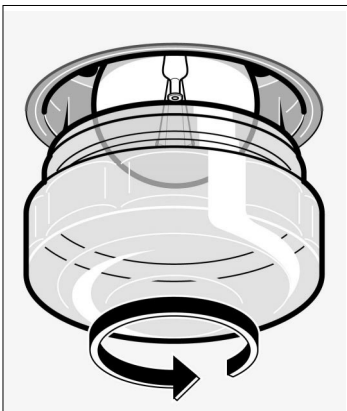

1. Switch off the oven fuse in the fuse box.
2. Place a tea towel in the cold oven to prevent damage.
3. Unscrew the glass cover by turning it anti-clockwise.
4. Replace the oven light with one of the same type.
5. Screw the glass cover back on.
6. Remove the tea towel and switch the fuse back on.

Replacing the glass cover

The glass cover on the oven light must be replaced if it is damaged. Replacement glass covers may be obtained from the after-sales service. To this end, please specify the E number and FD number of your appliance.

After-sales service

Our after-sales service is there for you if your oven needs repairing. You will find the address and telephone number of your nearest after-sales service centre in the phone book. The after-sales service centres listed will also be happy to advise you of a service point in your local area.

E number and FD number

Please quote the E number (product number) and the FD number (production number) of your appliance when contacting the after-sales service. The rating plate containing these numbers is found on the right, on the side of the oven door. You can make a note of these numbers in the space below to save time in the event of your appliance malfunctioning.

E no.	FD no.
-------	--------

After-sales service ☎

Packaging and old appliances

Your new appliance was protected by suitable packaging while it was on its way to you. All materials used for this purpose are environmentally friendly and can be recycled. Please make a contribution to protecting the environment by disposing of the packaging appropriately.

Old appliances are not worthless rubbish. Environmentally-conscious recycling can reclaim valuable raw materials.

Before disposing of your old appliance, please make sure that it is unusable, or label it with a sticker stating „Caution, scrap“.



Up-to-date information on how to dispose of your old appliance and the packaging from the new one can be obtained from your retailer or local authority.

This appliance is labelled in accordance with European Directive 2002/96/EG concerning used electrical and electronic appliances (waste electrical and electronic equipment – WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

Tables and tips

This table contains a selection of dishes and the optimum settings at which to cook them. You can find out which type of heating and temperature is best for your dish, which accessories to use, and at which oven level the dish should be inserted. You will find a variety of tips about ovenware and preparation, and a small troubleshooting section in case anything should go wrong.

Cakes and pastries

Baking tins

It is best to use dark baking tins. You should use 3D-hot air when using thin baking tins, or glass containers. This means, however, that the baking time is increased and the cake does not brown so evenly.

Always place the cake tin on the wire shelf.

Tables

The values in the table apply to dishes placed in a cold oven. This saves energy. Shorten the baking times indicated by 5 to 10 minutes if you have preheated the oven.

The tables show which type of heating is best for different cakes and bakes.

The temperature and cooking time you select depends on the quantity and type of pastry. This is why „ranges“ are given in the tables. You should try to use a lower temperature setting to start with, since this allows more even browning. If necessary, use a higher temperature setting the next time.

More information can be found in the „Baking tips“ section which follows the tables.

Main oven

Baking on 1 level

Food	Dish	Shelf position	Cooking method	Temp. °C	Cooking time, min.
Victoria sandwich	Wire shelf + 2 x 20 cm tins	3	hot-air	150-160	20-25
Light fruit cake	Wire shelf + High 20 cm tin	2	hot-air	150-160	80-90
Rich fruit cake	Wire shelf + ø 23 cm round tin or 20 cm square cake tin	2	hot-air	130-140	180-190
Fruit crumble	Wire shelf + Flat Glass dish	3	hot-air	160-170	35-40
Sponge cake (fatless)	Wire shelf + baking tin (dark coated)	2	hot-air	160-170	35-40
Swiss Roll	Wire shelf + Swiss roll tin	3	hot-air	180-190	10-12
Tart (Apple Pie)	Wire shelf + 20 cm plate or pie tin	2	hot-air	190-200	55-60
Quiches	Wire shelf + Flat Glass dish	3	hot-air	180-190	40-45
(White) Bread	Wire shelf + loaf tin (900 g or 2 x 450 g)	3	hot-air	190-200	25-30
Scones	Universal pan	3	hot-air	180-190	15-20
Cookies	Universal pan	3	hot-air	160-170	10-15
Small cakes	Wire shelf + 12 cup tin	3	hot-air	160-170	15-20
Jam tarts	Wire shelf + 12 cup tin	3	hot-air	180-190	15-20
Meringues	Universal pan	3	hot-air	80-90	100-150
Pavlova*	Universal pan	3	hot-air	150*+ 100	100-150
Soufflés	Wire shelf + 1,2 l soufflé dish	2	hot-air	170-180	40-50
Pies	Wire shelf + Pie dish	3	hot-air	170-180	45-50
Yorkshire Pudding	Wire shelf + 12 cup tin	3	hot-air	200-210	20-25
Jacket potatoes	Universal pan	3	hot-air	160-170	60-70
Pizza, homemade	Universal pan	3	hot-air	200-210	15-20

Preheat oven every time

* preheat at higher temperature, then reduce and insert food.

Main oven

Multishelf Baking

Food	Dish	Shelf position	Cooking method	Temp. °C	Cooking time, min.
Victoria sandwich, 2 levels	Wire shelf + 2 x 20 cm tins	3	hot-air	150-160	30-35
	Wire shelf + 2 x 20 cm tins	1			
Scones, 2 levels*	Universal pan	3	hot-air	170-180	20-25
	Wire shelf with baking tray*	1			
Cookies, 2 levels	Universal pan	3	hot-air	160-170	15-25
	wire shelf with baking tray	1			
Small cakes, 2 levels	Wire shelf + 12 cup tin (lengthwise)	3	hot-air	150-160	25-30
	Wire shelf + 12 cup tin (lengthwise)	1			
Meringues, 2 levels	Universal pan	3	hot-air	80-90	100-150
	Wire shelf with baking tray	1			
Jacket potatoes, 2 levels	Wire shelf	3	hot-air	160-170	60-75
	Wire shelf	1			

Preheat oven every time

* Place the baking tray far left on the wire shelf.

Baking tips

You wish to cook to your own recipe.

Refer to the instructions in the tables for similar types of food.

How to check that a sponge cake is cooked properly.

Approximately 10 minutes before the end of the baking time given in the recipe, pierce the tallest point of the cake with a cocktail stick. The cake is done if the cocktail stick comes out clean.

The cake collapses.

Next time, use less liquid or decrease the oven temperature by 10 degrees. Observe the cooking times in the recipe.

The cake has risen in the centre but is lower at the edges.

Do not grease the sides of the springform cake tin. As soon as the cake is done, carefully loosen the cake around the edges using a knife.

The cake is too dark at the top.

Insert it at a lower level in the oven, select a lower temperature and cook the cake a little while longer.

The cake is too dry.

Use a toothpick to make small holes in the finished cake. Then drizzle fruit juice or alcohol over the top. Next time you should decrease the temperature by around 10 degrees and reduce the baking times.

The bread or cake (e.g. cheesecake) looks fine, but is soggy on the inside (soft, with watery areas).

Next time you should add a little less liquid and cook for a little longer at a lower temperature. Cakes with fruit topping: Precook the base first of all. Sprinkle with almonds or breadcrumbs and then place the topping over this. Please observe the recipe and the baking times.

The pastry is unevenly browned.

Select a slightly lower temperature to ensure that the pastry is baked more evenly. Baking paper that protrudes over the food can affect the air circulation. For this reason, always cut the baking paper to fit the baking tray.

The fruit cake is too light at the bottom. The fruit juice flows over.

Use the deeper universal pan next time.

You were baking on several levels. The food on the top baking tray is darker than that on the bottom baking tray.

Always use 3D-hot air when baking on several levels. Baking trays that are placed in the oven at the same time will not necessarily be ready at the same time.

Condensation is formed when baking cakes containing fresh fruit.

Baking may result in the formation of water vapour. It escapes above the door handle. The steam may settle and form water droplets on the control panel or on the fronts of adjacent units. This is a normal physical process.

Meat, poultry, fish

Ovenware

You may use any heat-resistant dishes. The universal pan is also suitable for larger roasts.

Always place the dishes in the centre of the wire shelf.

Hot glass dishes should be placed on a dry kitchen towel after being removed from the oven. The glass could crack if placed on a cold or wet surface.

Advice on roasting

The roasting result depends on the type and quality of meat.

Meat should be turned half way through the cooking time.

When the roast is ready, switch off the oven and leave the roast to stand for 10 minutes with the oven door closed. This allows the meat juices to distribute more favourably.

Advice on grilling

Always close the oven door when grilling.

If possible, use pieces of meat which are of the same thickness. They should be at least 2 to 3 cm thick. Such pieces will be browned evenly and stay juicy and soft in the middle. Only salt the steaks after they have been grilled.

Place the pieces of meat directly onto the wire shelf. If you are grilling just one piece of meat, it will turn out best if you place it in the centre of the wire shelf. You should also insert the universal pan at level 1. The meat juices are collected here and the oven is kept clean.

Turn the pieces of meat after two thirds of the cooking time indicated.

The grill element automatically switches itself off and back on again. This is normal. The number of times this happens depends on the grill setting you have selected.

Main oven

Roasting

Food	Dish	Shelf position	Cooking method	Temp. °C	Cooking time, min. per 1 lb. + add. Time
Beef rare	Universal pan with wire insert	1	hot-air	190-210	15+30
Beef medium	Universal pan with wire insert	1	hot-air	180-200	16+60
Beef well done	Universal pan with wire insert	1	hot-air	170-190	16+80
Beef fillet, medium	Universal pan with wire insert	1	hot-air	180-200	20+30
Lamb medium	Universal pan with wire insert	1	hot-air	160-180	25+20
Lamb well done	Universal pan with wire insert	1	hot-air	160-180	30+25
Pork well done	Universal pan with wire insert	1	hot-air	180-200	35+35

Turn meat after half of cooking time.

Roasting Poultry





Food	Dish	Shelf position	Cooking method	Temp. °C	Cooking time, min. per 1 lb. + add. Time
Chicken, Duck, up to 6 pound	Universal pan with wire insert	1	hot-air	170-190	15+30
Goose up to 10 pound	Universal pan with wire insert	1	hot-air	150-170	17+20
Turkey, 6 to 16 pound (don't turn)	Universal pan with wire insert	1	hot-air	170-190	10+20
Chops and chicken joints	Universal pan with wire insert	1	hot-air	200-220	9+35

Turn poultry after half of cooking time.

Food	Dish	Shelf position	Cooking method	Temp. °C	Cooking time, min.
Roast dinner/ complete meal	Wire shelf	3	hot-air	180	95
	Universal pan with wire insert	1			

Mini oven

Grilling

Food	Shelf position	Cooking method	Grill setting	Cooking time mins per 1 lb
Meat steaks, bacon	2		2 or 3	12-22
Sausages and Fish fingers	1		3	15-20
Fish	1		2	10-20
Toast	2		3	4-5

Tips for roasting and grilling

The table does not contain information for the weight of the roast.

Select the next lowest weight from the instructions and extend the time.

How can you tell when the roast is ready?

Use a meat thermometer (available from specialist shops) or carry out a „spoon test“. Press down on the roast with a spoon. If it feels firm, it is ready. If the spoon can be pressed in, it needs to be cooked for a little longer.

The roast is too dark and the crackling is partly burnt.

Check the shelf position and temperature.

The roast looks good, but the juices are burnt.

Next time, use a smaller roasting dish or add more liquid.

The roast looks good, but the juices are too clear and watery.

Next time, use a larger roasting dish or add less liquid.

Convenience Food

Please observe the instructions on the packaging.

The values in the table to dishes placed in a preheated oven.


Food	Dish	Shelf position	Cooking method	Temp. °C	Cooking time, min.
Frozen pizza, 1 level	Universal pan	2 or 3	hot-air	190-200	10-15
Frozen pizza, 2 levels	Wire shelf	3	hot-air	180-190	15-20
	Wire shelf	1			
Chilled pizza, 1 level	Universal pan	2 or 3	hot-air	190-200	10-15
Part-baked white bread, 1 level	Universal pan	3	hot-air	190-200	10-15
French fries	Universal pan	3	hot-air	210-220	20-25
Potato wedges	Universal pan	3	hot-air	200-210	20-25
Croquettes	Universal pan	3	hot-air	180-190	20-25
Apple pie, frozen	Universal pan	3	hot-air	190-200	55-65
Apple pie, chilled	Universal pan	2	hot-air	190-200	55-60

Defrosting Main oven

Remove the food from its packaging and place it in a suitable dish on the wire shelf.

Please observe the instructions on the packaging.

The defrosting times depend on the type and amount of food.

Meal	Accessories	Level	Type of heating
Frozen foods* e.g. cream gateaux, cream cakes, cakes with chocolate or icing, fruit, chicken, sausages and meat, bread, rolls, pastries and other baked goods.	Wire shelf	2	

* Cover frozen food with microwave foil. Place poultry onto the plate with the breast side down.

Energy saving tips

Only preheat the oven if it specifies in the recipe or in the table in the instruction manual that you should do so.

Use non-stick, black painted or enamelled tins. They absorb the heat especially well.

If you have several cakes to bake it is best to bake them one after the other. The oven is still warm. This shortens the baking time for the second cake. You can also put two baking tins in one after the other.

For long cooking times, the oven can be switched off 10 minutes before the end of the cooking time and the remaining heat can be used to finish the cooking.

Acrylamide in food

Where does acrylamide come from?

Experts are currently discussing how dangerous acrylamide in food can be. We have compiled this information sheet for you on the basis of current research.

Acrylamide in food does not come from external contamination. It is formed in the food itself during preparation – provided that the food contains carbohydrate and protein. Exactly how this happens has not yet been completely explained. However, it appears that the acrylamide content is strongly influenced by

high temperatures
a low water content in food
intensive browning of the food.

What sort of foods are affected?

Acrylamide forms mostly in grain and potato products that are prepared at high temperatures, e.g.:

crisps, chips,
toast, rolls, bread,
baked goods made from shortcrust pastry (speciality biscuits and cakes).

What can you do?

You can avoid high levels of acrylamide when baking, frying and grilling.

The following recommendations were published by AID¹ and BMVEL² to help you minimise acrylamide levels:

In general

Keep cooking times as short as possible.

„Brown rather than burn“ – cook food only until it is golden brown.

The larger and thicker the food is, the less acrylamide it contains.

Baking

Set the temperature to a maximum of 180 °C for the 3D-hot air setting.

Cookies: Set the temperature to a maximum of 170 °C for the 3D-hot air setting. The presence of egg or egg yolk in a recipe reduces the formation of acrylamide.

Spread oven chips evenly over the baking sheet in one layer where possible. To prevent the food from drying out quickly, place at least 400 g on each baking sheet.

¹ AID “Acrylamide“ information leaflet, published by AID (German Evaluation and Information Service for Nutrition, Agriculture and Forestry) and BMVEL (German Federal Ministry for Consumer Protection, Food and Agriculture), as at 12/02, Internet: <http://www.aid.de>.

² BMVEL press release 365, as at 4.12.2002, Internet: <http://www.verbraucherministerium.de>

Test dishes for the main oven



referring to EN 60350.

Baking

Food	Dish and notes	Shelf position	Cooking method	Temp. °C	Cooking time min
Small cakes (preheat oven)	Universal pan	3	hot-air	150-170	20-30
	Universal pan baking tray on wire shelf*	3 1	hot-air	150-170	25-35
Fatless sponge cake (preheat oven)	baking tin on wire shelf (dark coated)	2	hot-air	160-170	35-40
Apple pie	2 wire shelves + 2 black plate spring forms ∅ 20 cm	3+1 placed in the middle of each wire shelf	hot-air	180-190	70-80
	Wire shelf + 2 black plate spring forms ∅ 20 cm	2 placed diagonally near by each other	hot-air	180-190	70-80

* When baking on two levels, use the universal pan provided, at shelf position three.

Grilling for the mini oven

Food	Dish and notes	Shelf position	Cooking method	Temp. °C	Cooking time min
Small cakes (preheat oven 10 minutes)	wire shelf	2		Setting 3	1-2
Beefburger*	wire shelf	2		Setting 3	25-30

* Turn the burgers over after 12-15 min. Insert the universal pan at level 1.

Assembly Instructions

For the installer
and kitchen expert!

Important installation notes

Properly dispose of **packaging materials**.

Do not use **oven door handle** for transporting or handling the unit during installation.

WARNING: Connection and first start of the appliance may only be performed by an authorised specialist.

Connection have to be made using a mains connection cable not lighter than H05RR-F 300 V / 500 V Rubber Flexible Cable or H05VV-F 300V / 500V PVC Flexible Cable.

Rated consumption, rated voltage and type no. of the appliance:

See appliance nameplate behind the oven door to the left beneath the side edge of the oven.

The unit's nameplate is located at on the sidewall of the unit.

Electrical safety of the appliance can be ensured only if the equipment earth in the building installation has been installed according to regulations.

A separator must be installed in the household circuit. A suitable separator is a switch that has a contact gap of more than 3 mm and interrupts all poles. Other examples are LS switches, fuses and contactors.

In the case of repairs interrupt all power connections to the unit.


The properly installed appliance must be covered on all sides in such a fashion that not even components with rough insulation are exposed to the touch.

The cover must be removable with tools only.

The **connection diagramm** is located on the rear panel of the appliance.



Installation of the built-in oven

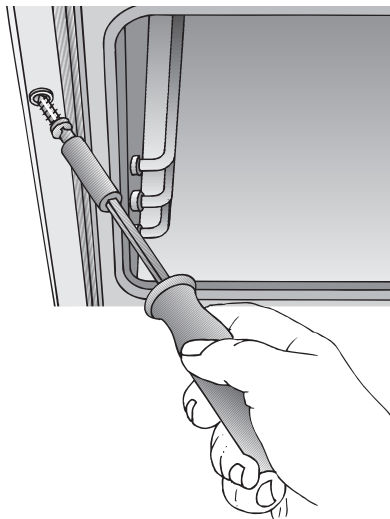


Push the oven into the cabinet aperture and align the unit until it is in a **level position**.

Open the oven door and, using one screw on each side, fasten the built-in oven to the side strips of the conversion cabinet.

When screwing in the two screws (enclosed in a bag with the built-in oven), ensure that they are pointing outwards at a slight angle. Please use these screws only.

Verify that the built-in oven is positioned securely and in a **level position**, and that the required installation dimensions have been maintained.

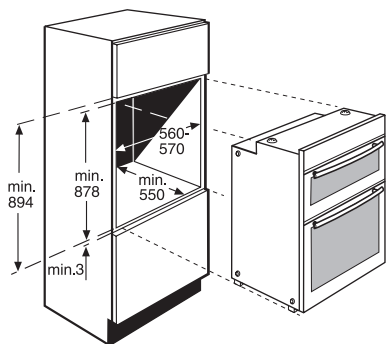

Furniture requirements

Oven housings from virtually all lines of kitchen furniture are suitable for installing the built-in oven. However, the veneers or plastic laminates on the conversion cabinets must be applied with heat-resistant adhesive (90 °C).

If plastic laminates or cement are not sufficiently heat-resistant, warping, bubbling or detachment of the finish may result.

Before you call for service:

Please read the information given in the user manual

In the event a technician is called out for any of the reasons stated above or for consultation purposes charges will be made to the customer either at the time of visit or at a later time in administration.

----- OVENS ONLY -----

Heating appliances will rise in temperature within use and retain their heat for a long period after use. Children should be supervised at all times and should not be allowed to touch the surfaces or be in the vicinity of the appliance when in use up until the time the appliance has cooled after use.

