 





# TIMEX


Model T276

**Auto-Set Stereo Clock Radio  
with Nature Sounds and Dual Alarm**

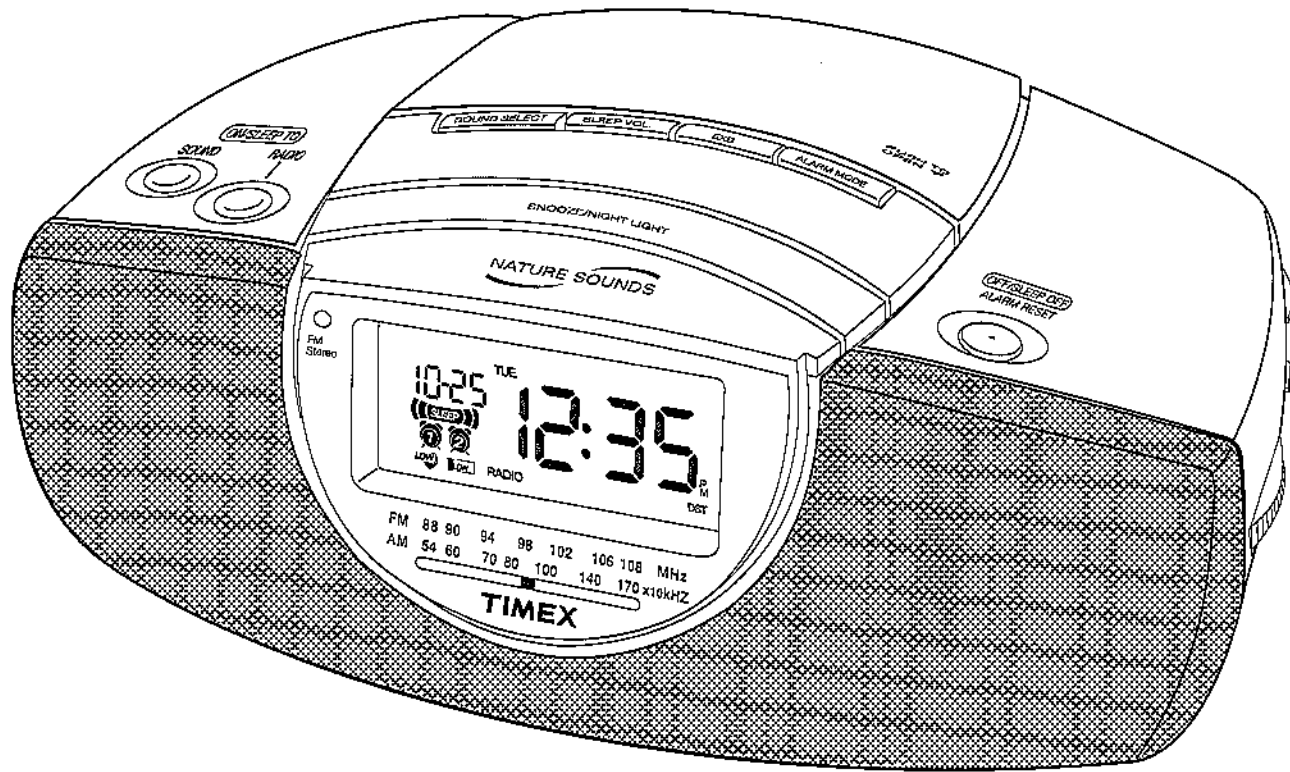

	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK.</b> <b>DO NOT OPEN</b>	
<p><b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b></p> <p><b>WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.</b></p>		

	<p><i>This symbol is intended to alert the user of the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</i></p>
---	---

	<p><i>This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.</i></p>
---	---

These symbols are located at the bottom of the cabinet.

<p><b>CAUTION: To prevent electric shock, match wide blade of plug to wide slot. Fully insert.</b></p> <p><b>ATTENTION: Pour éviter les choc électriques. Introduire la lame la plus large de la fiche dans la borne correspondante de la prises et pousser jusqu'au fond.</b></p>
--

# Table of Contents

---

<b>A Consumer Guide to Product Safety</b> .....	4-5
<b>Preparation for Use</b> .....	6-7
Unpacking and Set Up	
3 "AA" Battery Backup Installation	
Lithium Battery (CR-2032) Backup Installation	
Battery Backup System	
<b>Controls and Indicators</b> .....	8-9
<b>LCD Display</b> .....	9
<b>Preset Time and Date Setting</b> .....	10-11
Time Zones 1-7	
Manual Time and Date Setting	
Manual Date Setting	
<b>Daylight Savings Time and Leap Year</b> .....	11
<b>Listening to the Radio</b> .....	11-12
<b>Listening to Soothing Sounds</b> .....	12
<b>Setting the Alarm Time</b> .....	13-14
Wake to Radio	
Wake to Sounds	
Wake to Buzzer	
<b>Check Your Wake Up Settings</b> .....	14
<b>Turning Off the Alarm</b> .....	15
<b>Snooze/Night Light Operation</b> .....	15
<b>Sleep to Radio</b> .....	16
<b>Sleep to Soothing Sounds</b> .....	16
<b>Trouble Shooting</b> .....	17

## A Consumer Guide to Product Safety

---

This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, adhere to all warnings, and always follow the instruction on the unit and in the instruction and service manuals.

1. **Water and Moisture** - The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
3. **Heat** - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Grounding or Polarization** - This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). As a safety feature this plug will fit into the power outlet only one way. If you are unable to fit the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of your polarized plug.
6. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
7. **Cleaning** - The unit should be cleaned only as recommended by the manufacturer.

## A Consumer Guide to Product Safety

---

8. **Non-Use Periods** - The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.
9. **Objects and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
10. **Damage Require Service** - The unit should be serviced by qualified service personnel when:
  - A. The power supply cord or plug has been damaged.
  - B. Objects have fallen into or liquid has been spilled into the enclosure.
  - C. The unit has been exposed to rain.
  - D. The unit has been dropped or the enclosure damaged.
  - E. The unit does not appear to operate normally or exhibits a marked change in performance.
11. **Antenna** - Do not connect to an external antenna.
12. **Servicing** - The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
13. If you have any questions, call SDI Technologies Inc. Timex Audio Products Division Customer Service, 1-800-888-4491.

**This device complies with Part 15 of the FCC Rules.  
Operation is subject to the condition that this device  
does not cause harmful interference.**

## A Consumer Guide to Product Safety

---

8. **Non-Use Periods** - The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.
9. **Objects and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
10. **Damage Require Service** - The unit should be serviced by qualified service personnel when:
  - A. The power supply cord or plug has been damaged.
  - B. Objects have fallen into or liquid has been spilled into the enclosure.
  - C. The unit has been exposed to rain.
  - D. The unit has been dropped or the enclosure damaged.
  - E. The unit does not appear to operate normally or exhibits a marked change in performance.
11. **Antenna** - Do not connect to an external antenna.
12. **Servicing** - The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
13. If you have any questions, call SDI Technologies Inc. Timex Audio Products Division Customer Service, 1-800-888-4491.

**This device complies with Part 15 of the FCC Rules.  
Operation is subject to the condition that this device  
does not cause harmful interference.**

# Preparation for Use


## Unpacking and Set Up


1. Remove the unit and all packing materials from the carton.
2. It is a good idea to save all the packing materials in case the unit ever needs to be returned for service. If you do dispose of the packing materials, please do so properly.
3. Remove any feature labels, fact tags, or clear protective films from the front or top of the radio, if applicable. Do not remove any labels from the back or bottom of the unit.
4. Place the unit on a level surface, out of direct sunlight, and away from sources of excess dust, dirt, heat, water moisture, vibration, and strong magnetic fields.
5. Do not block the ventilation holes on the back or bottom of the cabinet.
6. Plug the AC cord into an outlet.

**Important!** This unit comes with a "CR-2032" lithium battery already installed. The "CR-2032" is to maintain the time and alarm time settings. We highly recommend installing 3 "AA" batteries for the battery backup and sure alarm system.

## 3 "AA" Battery Backup Installation

1. For the use of the battery backup system and sure alarm, gently turn the unit over and open the battery compartment door.
2. Install 3 "AA" batteries, while making sure that the + and - ends match up with those inside the battery compartment door.
3. Close the battery compartment door and gently turn the unit right side up.

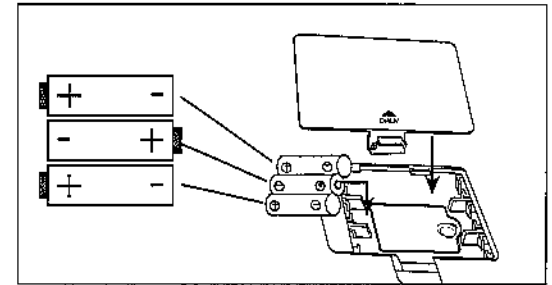


**Note:** We recommend using alkaline batteries for longer life. When the batteries are getting weak a **Battery Low Icon** (  ) will flash on the lower left side of the display.

## Preparation for Use

### Lithium Battery (CR-2032) Backup Installation

**Note:** This unit comes equipped with a lithium battery used for battery backup purposes. When the **Lithium Battery Low Icon** (LOW) appears flashing in the lower left corner of the display, it is time to change the battery.

1. Gently turn the unit over and open the battery compartment door. If necessary, remove the 3 "AA" batteries to get to the lithium battery door.
2. Use a screwdriver to loosen the screw and remove the lithium battery door.
3. Replace the "CR-2032" lithium battery, while making sure that the + and - ends match up with those inside the battery compartment.
4. Place the lithium battery door back on and tighten the screw.

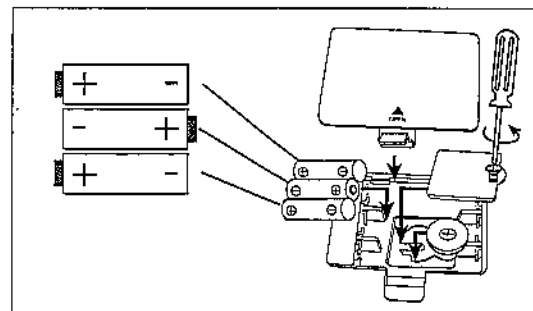

### Battery Backup System


Either the "CR-2032" lithium battery or the 3 "AA" batteries will maintain the time and alarm settings in the event of a temporary power interruption. The 3 "AA" batteries are needed for the Sure Alarm Feature.

If the power is interrupted, the radio and sounds will not play, but the display remains visible and everything continues to run. If you have set the alarm for the radio or sounds and there is a power failure during your wake up time, the radio or sounds will default to buzzer for sure alarm.


If a power failure occurs and the 3 "AA" batteries are not installed or dead, the alarm will not sound. If a power failure occurs and both the lithium battery and the 3 "AA" batteries are not installed or dead, all the settings will be lost.




# Controls and Indicators

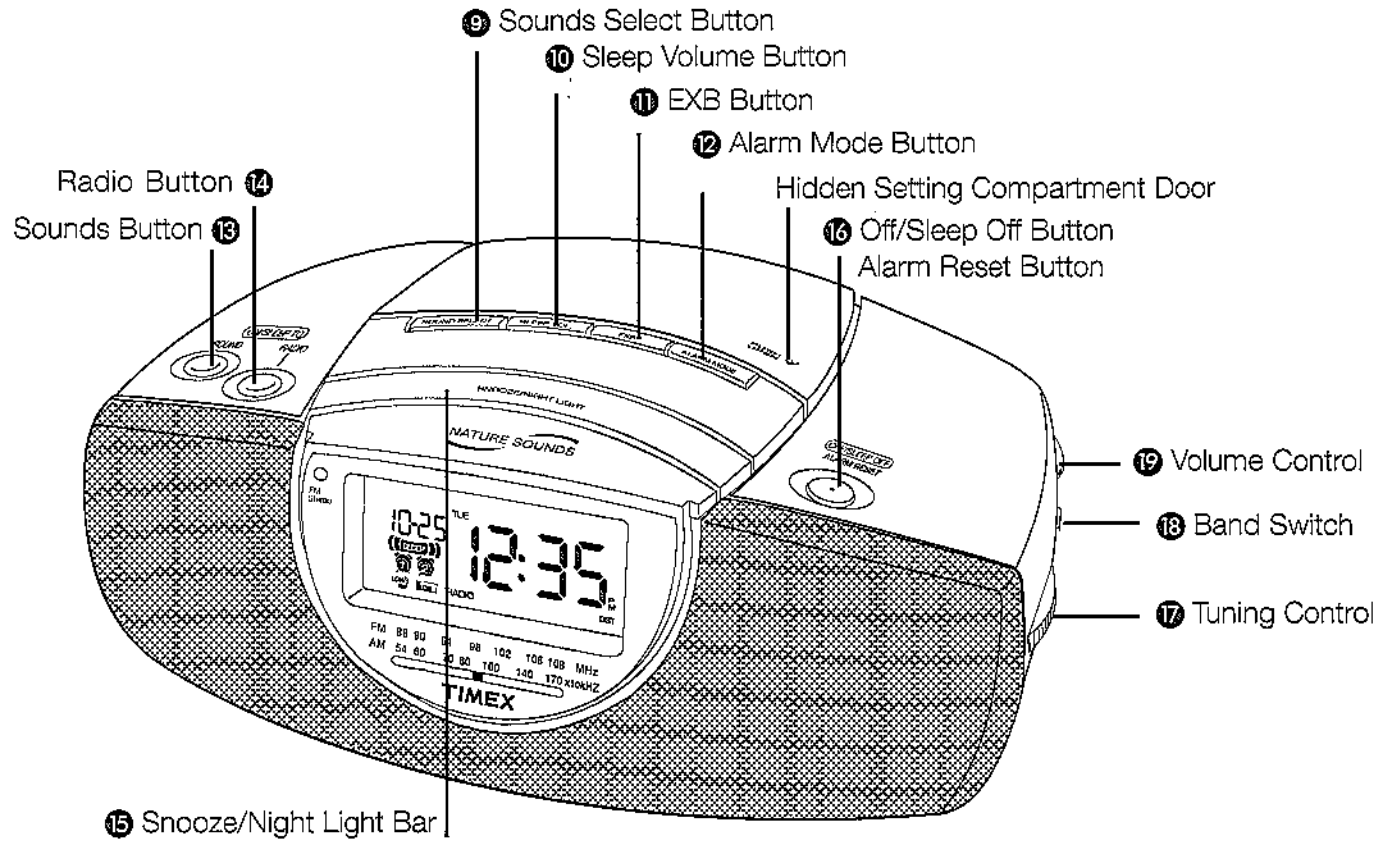

# Controls and Indicators

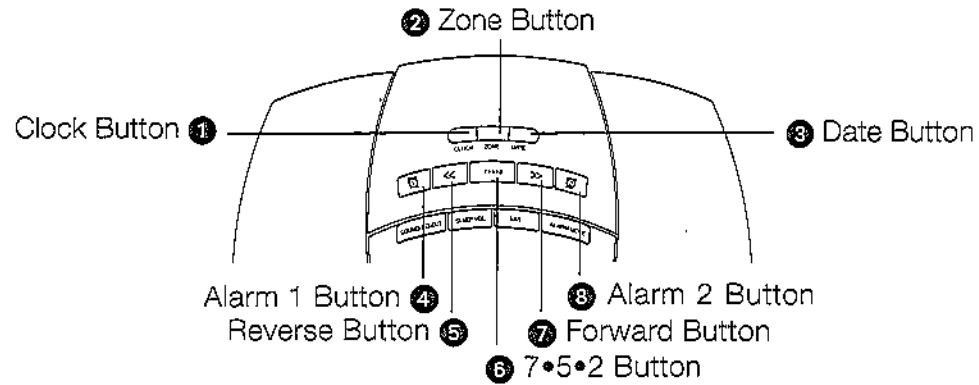

## LCD Display

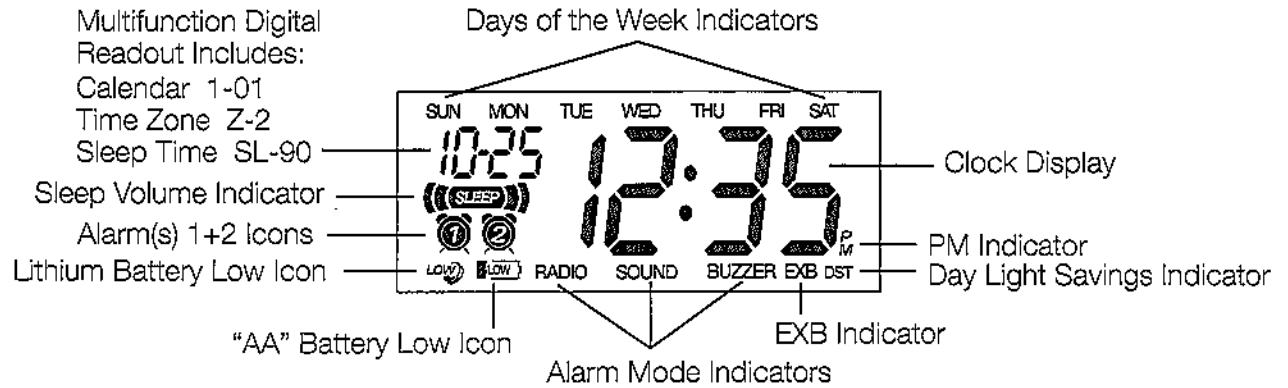

## Preset Time and Date Setting

---

The correct Eastern Standard Time and date have been preset at the factory and should appear on the display. If you do not live in this time zone, you can easily switch the time to one of seven available preset time zones.

1. Push down gently on the lower right side of the **Hidden Setting Compartment Door**.
2. Press and hold the **2 Zone** button and release when the **Z-2** appears on the display with the **2** flashing. (**Z-2** indicates that the time is in the second available time zone.)
3. Press the **7/5 Forward** or **Reverse** button to set the proper time zone. (See the *Time Zones 1-7* list below).
4. When finished you can either press the **2 Zone** button to set the preset time or let the selected time zone indicator flash for approximately 7 seconds. A 'Beep' sound confirms that the time is now set.

**Note:** If you wish to set the time and date manually see *Manual Time and Date Setting*.

### Time Zones 1-7

**Z-1**-----> **Atlantic Time**

**Z-2**-----> **Eastern Time**

**Z-3**-----> **Central Time**

**Z-4**-----> **Mountain Time**

**Z-5**-----> **Pacific Time**

**Z-6**-----> **Yukon Time (Alaskan)**

**Z-7**-----> **Hawaiian Time**

### Manual Time and Date Setting

**Important!** If you wish to set the time manually, make sure you are setting it in the correct time zone, because all the time zones will be automatically adjusted when you are finished resetting the time.

1. Press and hold the **1 Clock** button until the time begins flashing on the display.
2. Press and hold the **7/5 Forward** or **Reverse** button to set the time. REMEMBER to set the correct AM or PM. The **PM Indicator** is located on the lower right side of the display.
3. When finished you can either press the **1 Clock** button to set the time or after approximately 7 seconds it will automatically set for you. A 'Beep' sound confirms that the time is now set.

# Preset Time and Date Setting

---

## Manual Date Setting

1. Press and hold the **Ⓧ** **Date** button until the date begins flashing on the display.
2. Press and hold the **Ⓩ** **Forward** or **Reverse** button to set the date.
3. When finished you can press the **Ⓧ** **Date** button to set the date, or after approximately 7 seconds it will automatically set for you. A 'Beep' sound confirms that the date is now set.

## Daylight Savings Time and Leap Year

---

This unit will automatically adjust the clock at the beginning and end of Daylight Savings time each year. It will also adjust the month/day display for leap year automatically.

This unit automatically advances by one hour at the start of Daylight Savings on the first Sunday of April, and automatically moves back by one hour at the end of Daylight Savings on the last Sunday of October. If you live in an area that does not observe Daylight Savings, it will be necessary for you to manually adjust the clock **back** one hour at the beginning of Daylight Savings and **forward** one hour at the end of Daylight Savings.


## Listening to the Radio

---

### Antenna Information

**FM** – For the best possible reception, fully extend the FM wire antenna.


**AM** – The AM bar antenna is inside the cabinet. Rotate the cabinet until you find the strongest AM signal.

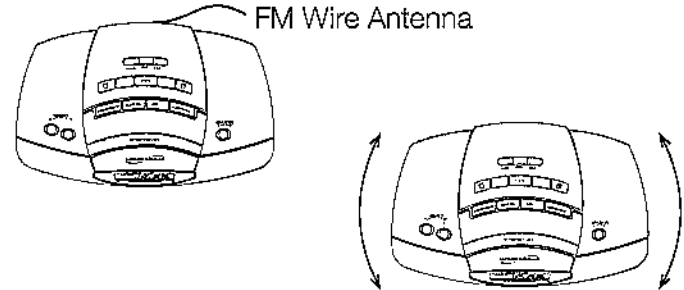

## Listening to the Radio

1. Press the **14 Radio** button *once* to turn the radio on.
2. Slide the **18 Band** switch to select AM or FM.
3. Rotate the **17 Tuning** control to find the station you prefer and adjust the **19 Volume** control to find a comfortable volume level.
4. Press the **11 EXB** button for expanded bass sound if desired.
5. Press the **16 Off/Sleep Off** button when you are finished listening and wish to turn the radio off.


**Note:** If you press the **14 Radio** button more than *once* when turning the radio on, you will enter the Sleep Mode. The date digits will change to the sleep timer digits. (For example: **SL-90**). Press the **16 Off/Sleep Off** button to exit the Sleep Mode, then follow step 1 again.

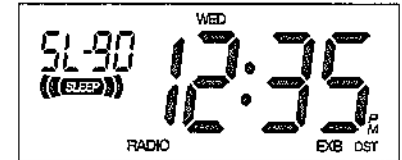

## Listening to Soothing Sounds

1. Press the **13 Sounds** button *once* to turn the sounds on.
2. Press the **9 Sounds Select** button to choose the sound of your choice.
3. Rotate the **19 Volume Control** to find a comfortable volume level.
4. Press the **16 Off/Sleep Off** button when you are finished listening and wish to turn the sounds off.

**Note:** If you press the **13 Sounds** button more than *once* when turning the sounds on, you will enter the Sleep Mode. The date digits will change to the sleep timer digits. (For example: **SL-90**). Press the **16 Off/Sleep Off** button to exit the Sleep Mode, then follow step 1 again.

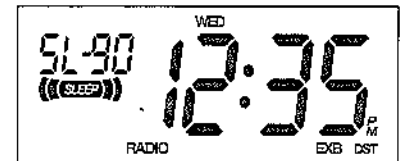

## Setting the Alarm Time

 
---

**Note:** While setting the alarm times, it will return to the current clock time if no button is pressed within approximately 7 seconds.

1. Press and hold the **4 Alarm 1** button to set the alarm 1 wake time, or the **8 Alarm 2** button to set the alarm 2 wake time. The **Alarm 1** or **Alarm 2 Icon, Time, and Days of the Week** will flash on the display.
2. Press and hold the **7/5 Forward** or **Reverse** button to set the alarm time that you wish. REMEMBER to set the correct AM or PM. The **PM Indicator** is located on the lower right side of the display.
3. Press the **6 7•5•2** button to set the amount of days you would like the alarm to be set for. The **Days of the Week** will appear at the top of the display (weekdays, weekends, full week).
4. Press the **12 Alarm Mode** button to select the alarm sound you wish to wake to. The choices will appear on the bottom of the display. (**Radio, Sound, Buzz**). Leave the indicator that you wish to wake to on the bottom of the display and then follow the Wake to instructions that follow.

### Wake to Radio

- Follow steps 1-4 under *Setting the Alarm Time*.
- Make sure the **Radio Indicator** appears flashing on the bottom of the display.
- When you are finished setting the alarm, press the **4/8 Alarm 1** or **Alarm 2** button depending on the alarm you have just set. A 'Beep' will confirm that the alarm is set.

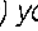**Important!** - Press the **12 Alarm Mode** button until the **Alarm Icon(s)** (  ) ( indicating the alarm(s) you have just set ) appear on the display to indicate the alarm is now turned on.

**Note:** Make sure you do the following after setting the alarm to wake to radio.

- Slide the **13 Band** switch to select AM or FM and rotate the **17 Tuning** control to find the station you desire to wake to.
- Rotate the **19 Volume** control to set the volume level you wish to wake to.



**Note:** Whatever band, radio station, and volume level the unit is left at, will be the same band, radio station, and volume level that the alarm sounds when it turns on.

## Setting the Alarm Time

  ---

### Wake to Sounds



- Follow steps 1-4 in *Setting the Alarm Time*.
- Make sure the **Sound Indicator** appears flashing on the bottom of the display.
- Press the **9 Sounds Select** button to preview the wake to sounds. While a sound is playing, press the **9 Sounds Select** button to hear the next wake to sound. The last sound that is previewed, will be the sound that is set for the alarm.
- When you are finished setting the alarm, press the **4/8 Alarm 1** or **Alarm 2** button depending on the alarm you have just set. A 'Beep' will confirm that the alarm is set.

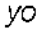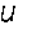**Important!** - Press the **12 Alarm Mode** button until the **Alarm Icon(s)** (   ) ( indicating the alarm(s) you have just set ) appear on the display to indicate the alarm is now turned on.

**Note:** Whatever volume level the unit is left at, will be the maximum volume level the sound will reach when it turns on.

### Wake to Buzzer

  - Follow steps 1-4 under *Setting the Alarm Time*.
- Make sure the **Buzz Indicator** appears flashing on the bottom of the display.
- When you are finished setting the alarm, press the **4/8 Alarm 1** or **Alarm 2** button depending on the alarm you have just set. A 'Beep' will confirm that the alarm is set.

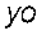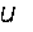**Important!** - Press the **12 Alarm Mode** button until the **Alarm Icon(s)** (   ) ( indicating the alarm(s) you have just set ) appear on the display to indicate the alarm is now turned on.

## Check Your Wake Up Settings

---

Press and hold the **4/8 Alarm 1** or **Alarm 2** button. The alarm settings will flash on the display.

## Turning Off the Alarm

---

1. After the alarm sounds, press the **13 Alarm Reset** button to turn off the alarm. The alarm will be automatically reset for the same time the following day.

**Note:** If more than 1 alarm is set, when you press the **13 Alarm Reset** button to stop the alarm that is sounding, this will not effect the other alarm from turning on at the time it is set for.

2. If you do not want the alarm to turn on again the following day, press the **12 Alarm Mode** button, until the **Alarm Icon(s)** disappears from the display.

3. If the alarm is not turned off after it sounds, it will play for approximately 1 hour, then turn off automatically. This cycle will repeat everyday the alarm is set for (7•5•2) unless the controls are changed.

**Note:** The buzzer will increase in frequency to wake you up gradually. The soothing sounds alarm will begin at a low volume level and gently get louder to wake you up comfortably. The radio alarm will remain at the same volume level.

## Snooze/Night Light Operation

---

1. Press the **15 Snooze/Night Light Bar** after the alarm sounds. The alarm will turn off, then come back on again in approximately 9 minutes. You may repeat this cycle several times during the 1 hour alarm cycle.
2. Press the **15 Snooze/Night Light Bar** to change the display's back lighting. Press once to turn the light on high, twice to turn the light on medium, and a third time to turn the back light on low.
3. Press and hold to listen to the demo introduction.



## Sleep to Radio

---

**Note:** If you have any questions about AM/FM radio operation, see *Listening to the Radio*.

1. Press the **14 Radio** button *twice*. The sleep timer will begin at 90 minutes. A **Sleep Timer Indicator** (SL-90) will appear on the left side of the display.
2. If you would like the sleep timer to be set for less than 90 minutes, continuously press the **14 Radio** button until you reach the amount of time you wish for (90-60-30-15 minute intervals and off).
3. Slide the **18 Band** switch and rotate the **17 Tuning** control to find the station you would like to sleep to.
4. Press the **10 Sleep Volume** button to adjust the volume level. Watch the **Sleep Volume Indicator** (**(SLEEP)**) while pressing the button. This volume will not affect the wake to volume level.

**Note:** If there is no sound at all while adjusting the sleep volume, try and raise the main volume level by rotating the **19 Volume** control.

5. If you would like to turn the radio off before the sleep timer has expired, press the **16 Off/Sleep Off** button.

## Sleep to Soothing Sounds

---

**Note:** If you have any questions about the soothing sounds operation, see *Listening to Soothing Sounds*.

1. Press the **13 Sounds** button *twice*. The sleep timer will begin at 90 minutes. A **Sleep Timer Indicator** (SL-90) will appear on the left side of the display.
2. If you would like the sleep timer to be set for less than 90 minutes, continuously press the **13 Sounds** button until you find the amount of time you wish for (90-60-30-15 minute intervals and off).
3. Press the **9 Sounds Select** button to choose the sound you wish to sleep to.
4. Press the **10 Sleep Volume** button to adjust the volume level. Watch the **Sleep Volume Indicator** while pressing the button. This volume will not affect the wake to volume level.

**Note:** If there is no sound at all while adjusting the sleep volume, try and raise the main volume level by rotating the **19 Volume** control.

5. If you want to turn the radio off before the sleep timer has expired, press the **16 Off/Sleep Off** button.

# Trouble Shooting

PROBLEM	POSSIBLE CAUSE	REMEDY
Sounds and radio will not play	<ul style="list-style-type: none"> <li>• The unit is disconnected from the AC outlet</li> <li>• The AC outlet has no power</li> <li>• The AC outlet is controlled by a wall switch that is "Off"</li> </ul>	<ul style="list-style-type: none"> <li>• Connect to an AC outlet</li> <li>• Try the unit on another outlet</li> <li>• Do not use an outlet that is controlled by a wall switch</li> </ul>
The "AA" or lithium battery icon is "ON"	<ul style="list-style-type: none"> <li>• Batteries have not been installed correctly in the battery compartment</li> <li>• Batteries are weak or exhausted</li> </ul>	<ul style="list-style-type: none"> <li>• Install batteries according to the polarity markings in the battery compartment</li> <li>• Install new CR-2032 lithium or "AA" depending on which low icon is lit on the display</li> </ul>
Poor FM reception on certain stations	<ul style="list-style-type: none"> <li>• Weak or distant station</li> </ul>	<ul style="list-style-type: none"> <li>• Try adjusting the direction of the FM wire antenna</li> </ul>
Poor AM reception on certain stations	<ul style="list-style-type: none"> <li>• Weak or distant station</li> </ul>	<ul style="list-style-type: none"> <li>• Rotate the cabinet to try and gain better reception</li> </ul>
Unit is "ON" but there is low or no volume at all	<ul style="list-style-type: none"> <li>• The main volume has been turned all the way down</li> <li>• The unit is in the Sleep Mode with the Sleep Volume set low</li> </ul>	<ul style="list-style-type: none"> <li>• Raise the volume with the Volume Control</li> <li>• Adjust the main and/or sleep volume</li> </ul>
Unit shuts "Off" unexpectedly	<ul style="list-style-type: none"> <li>• The unit is in the Sleep Mode instead of the Power On Mode</li> <li>• The unit was turned "ON" by the alarm and the alarm time ended</li> </ul>	<ul style="list-style-type: none"> <li>• Press the Sound or Radio Button once</li> </ul>
The wrong radio station or static is heard when the radio alarm turns on	<ul style="list-style-type: none"> <li>• The station you think you are waking to has not been tuned in</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure you have tuned in the radio (See page 13 )</li> </ul>
EXB has no effect	<ul style="list-style-type: none"> <li>• Listening to sounds, AM or FM with small frequency range</li> </ul>	<ul style="list-style-type: none"> <li>• Unit is OK but the frequency of sound source is too narrow to be effected by the EXB feature</li> </ul>
Alarm does not come on	<ul style="list-style-type: none"> <li>• Alarm time was not correctly set for AM or PM</li> <li>• Alarm(s) were not turned on</li> <li>• 7•5•2(days) was not set correctly</li> </ul>	<ul style="list-style-type: none"> <li>• Reset alarm time correctly (See page 14)</li> <li>• Push alarm mode button until correct alarm icon appears on the lower left of display</li> <li>• Make sure the correct date is set and the alarm is set to the correct 7•5•2 days</li> </ul>
<p>If you have any questions, call SDI Technologies Inc.            Timex Audio Products Division Customer Service, 1-800-888-4491</p>		

## Limited 90 Day Warranty

---

Timex Audio Products, Division of SDI Technologies Inc., warrants this product to be free from defects in workmanship and material under normal use and conditions for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts there of, to the store where it was originally purchased. If you need to send the product for service, and it is during the first 90 days of the warranty period, SDI Technologies Inc. will repair, or at its discretion, replace this product with proof of purchase, without charge (except for a \$5 charge for handling, packing, return UPS/postage and insurance). After 90 days the cost of labor is the customer's responsibility. The fee for service after the warranty period or without proof of purchase is \$10.

Before returning this product for service, replace the batteries (if applicable) with fresh ones, because exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Also enclose a check or money order payable to the order of SDI Technologies Inc., for the sum of \$5 (or \$10 after the warranty period).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

### Consumer Repair Department

SDI Technologies Inc.  
Timex Audio Products Division  
8889 Gateway West  
El Paso, Texas 79925

Please Note: This warranty is valid only in the United States of America. Any applicable implied warranties are also limited to 90 days, and SDI Technologies Inc. will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusions of consequential damages, so that these restrictions may not apply to you). This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

**For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.**

**TIMEX is a registered trademark of Timex Corporation in the U.S. and other countries.**

T276-200731-0

Printed in China

3-IST-T276