

# TIMEX®

## TX5170 - INDOOR OUTDOOR ELECTRONIC THERMOMETER WITH CLOCK AND HYGOMETER

### Getting Started

#### Installing the Battery

Open the battery compartment on the back of the unit and install one AAA battery.

#### Guide to LCD Screen


**1. Indoor thermometer/Clock - Share the same LCD Screen**

This window shows the ambient indoor temperature and also show the time as powered by an electronic quartz movement.


**2. Outdoor temperature as transmitted by a 10 foot all weather wire sensor cord.**

Indicate out temperature or recording of temperature.

**3. The electronic hygrometer shows the Relative Humidity in percentage 0% to 100%.**

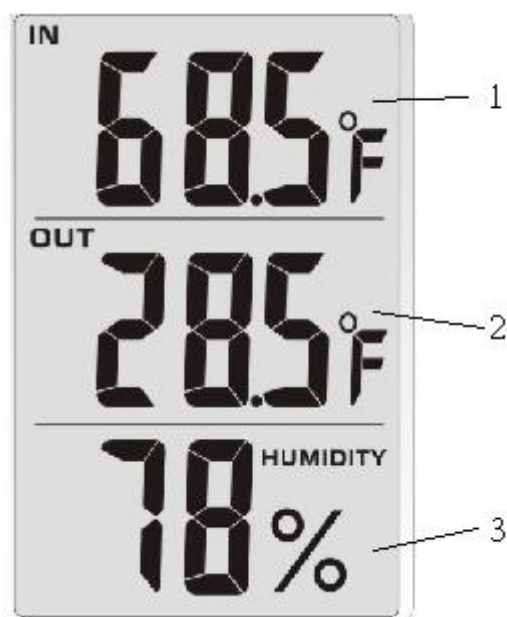

## Guide to Buttons.

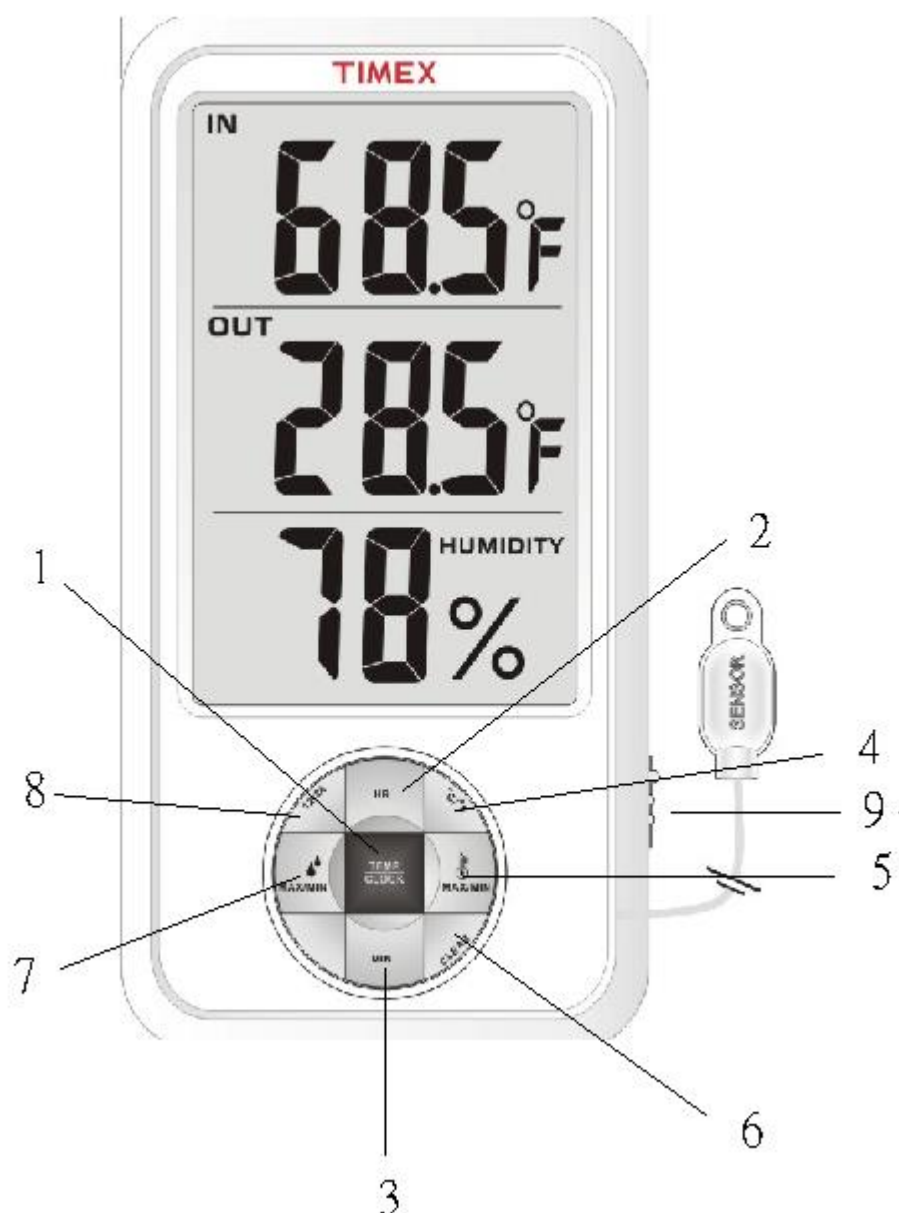

### 1. TEMPERATURE/CLOCK BUTTON.

Press this button to toggle the Indoor temperature or the proper time on the LCD clock.

### 2. HR BUTTON.

Press this button in rapid succession to set the desired number of hours in time set mode. If you hold the button down, the display will advance rapidly through the hours.

### 3. MIN BUTTON.

Press this button in rapid succession to set the desired number of minutes in time set mode. If you hold the button down, the display will advance rapidly through the min.

#### **4. C/F BUTTON**

Press this button to toggle temperature readout in Celsius or Fahrenheit.

#### **5. TEMPERATURE MIN/MAX BUTTON.**

Press this button to read the recorded Minimum/Maximum temperature data.

#### **6. CLEAR BUTTON.**

Press this button to clear the Minimum/Maximum data.

#### **7. HUMIDITY MIN/MAX BUTTON.**

Press this button to read the recorded Minimum/Maximum Humidity data.

#### **8. 12/24 BUTTON.**

Press this data to toggle 12/24 hour clock format.

#### **9. LOCK/CLOCK SET SWITCH.**

Slide switch to enter the Time Set mode. Remember to lock it once you have completed your set task.

#### **GENERAL INSTRUCTION**

##### **TO SET TIME.**

- 1. Slide switch to Clock set.**
- 2. Press Hr or Min button to desired time.**
- 3. Slide switch to Clock after set.**

**Indoor Temperature or Clock.**

**Press Temp/Clock button to select Indoor Temperature or Clock.**

**12 Hour AM/PM or 24 Hour.**

**Press 12/24 Hour button to choose your desired format.**

**To select C° or F° readout:**

**Press C/F button to toggle Celsius or Fahrenheit thermometer scale.**

##### **TO READ MAX-MIN TEMPERATURE.**

**1<sup>st</sup> Press TEMP-MAX/MIN button to read indoor Max and Min Temperature.**

**Press CLEAR button to clear indoor Max-Min temp memory.**

**2<sup>nd</sup> Press TEMP-MAX/MIN button to read outdoor Max and Min Temperature.**

**Press CLEAR button to clear outdoor Max-Min temp memory.**

**3<sup>rd</sup> press TEMP TEMP-MAX/MIN button or if after 8 seconds and no key is pushed, display will resume to normal temp display mode.**

**TO READ MAX-MIN HUMIDITY.**

**1<sup>st</sup> press HU-MAX/MIN button to read Max Humidity. Press CLEAR button to clear Max Humidity memory.**

**2<sup>nd</sup> press HU-MAX/MIN button to read Min Humidity. Press CLEAR button to clear outdoor Min Humidity memory.**

**3<sup>rd</sup> press HU-MAX/MIN button and if after 8 seconds and no key is pushed, the LCD display will revert to the normal temperature display mode.**

**PLACEMENT OF THE SENSOR WIRE -**

**CARE OF THE CASE, SCREEN -**

**TIMEX WEATHER PRODUCTS**

**DIVISION of MAVERICK INDUSTRIES**

**EDISON, NEW JERSEY 08837 USA**