



F RELAY LOCATIONS


[Engine Compartment]

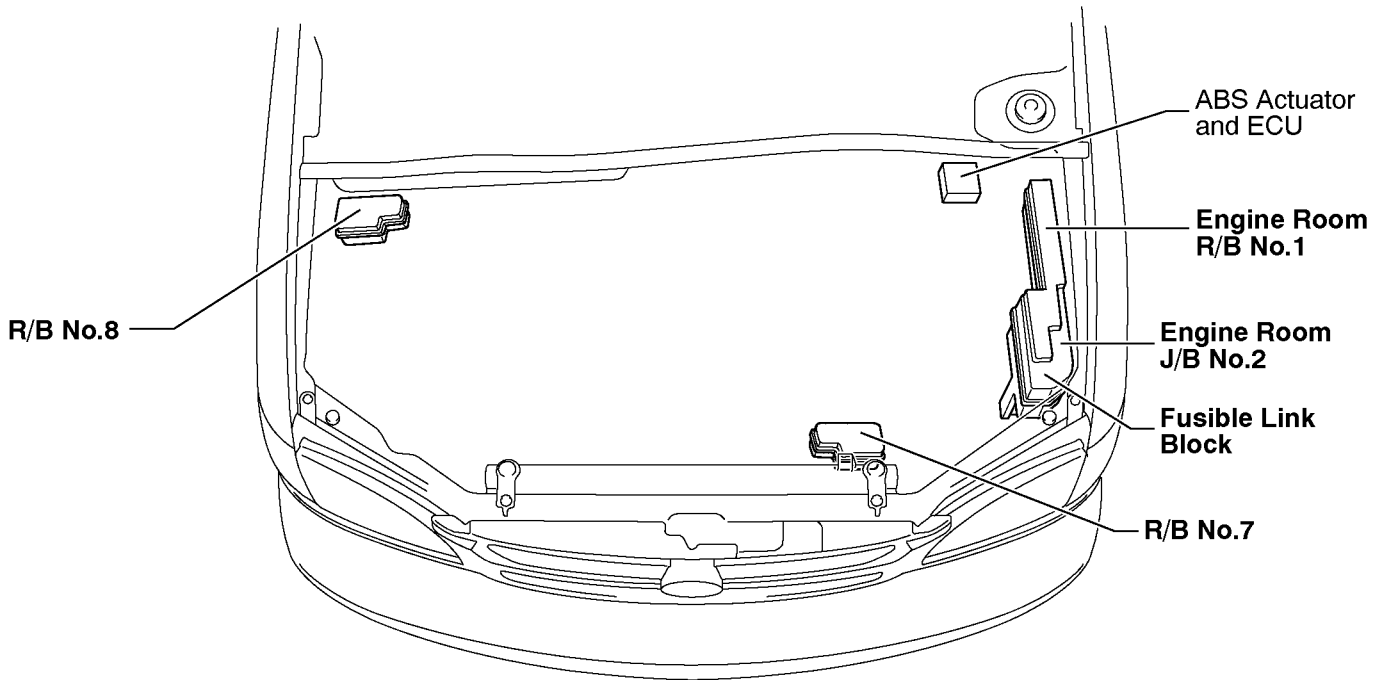

[Instrument Panel]

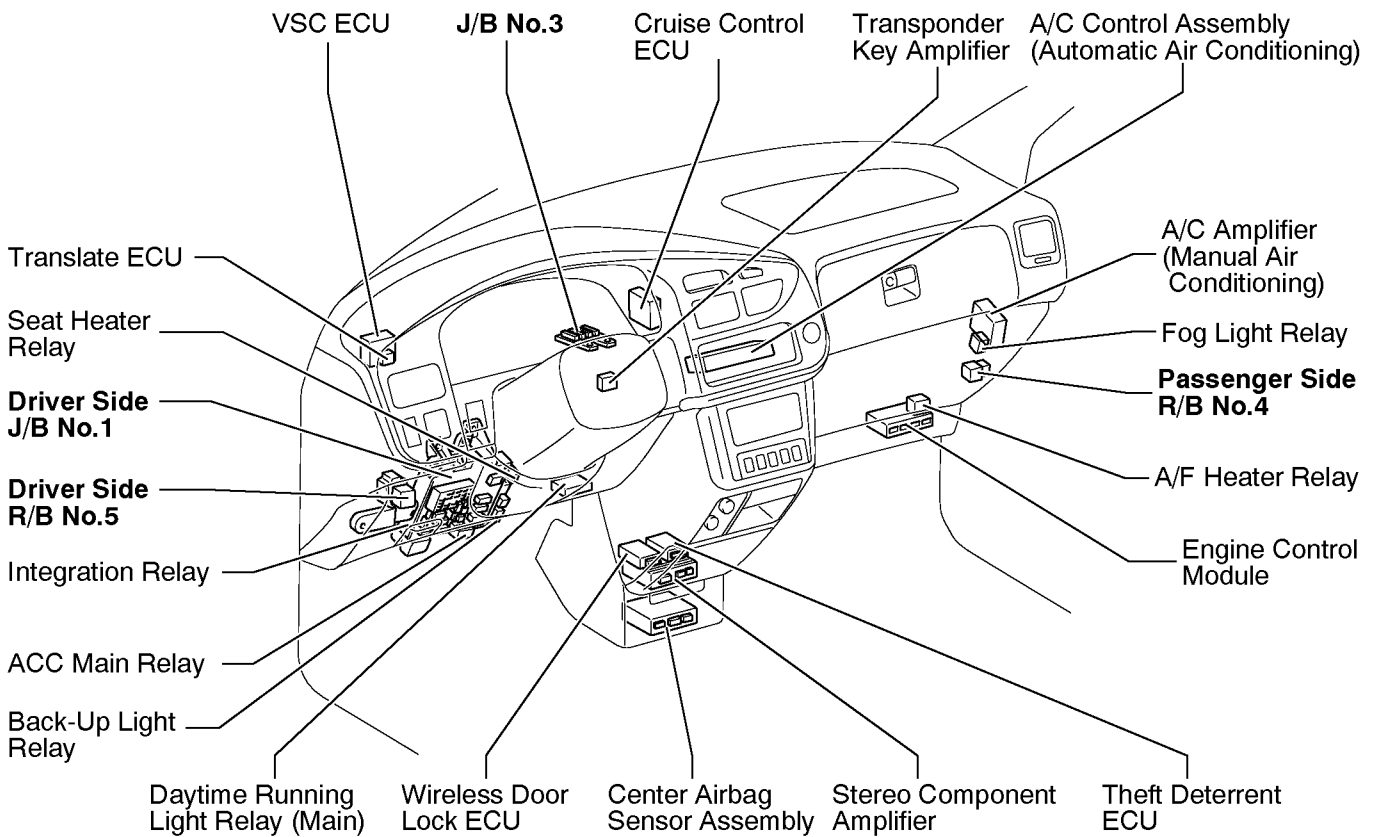


[Body]

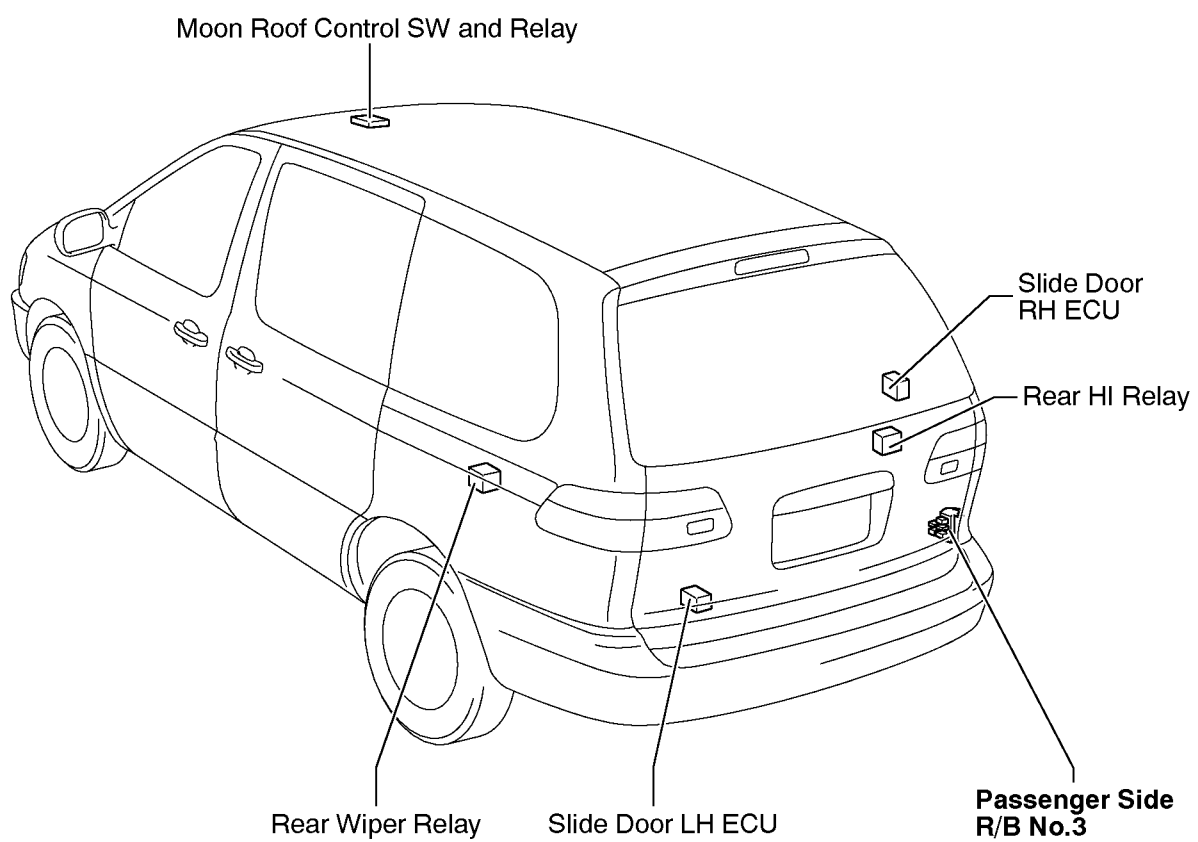


F RELAY LOCATIONS

○ : Driver Side J/B No.1 **Lower Finish Panel (See Page 20)**

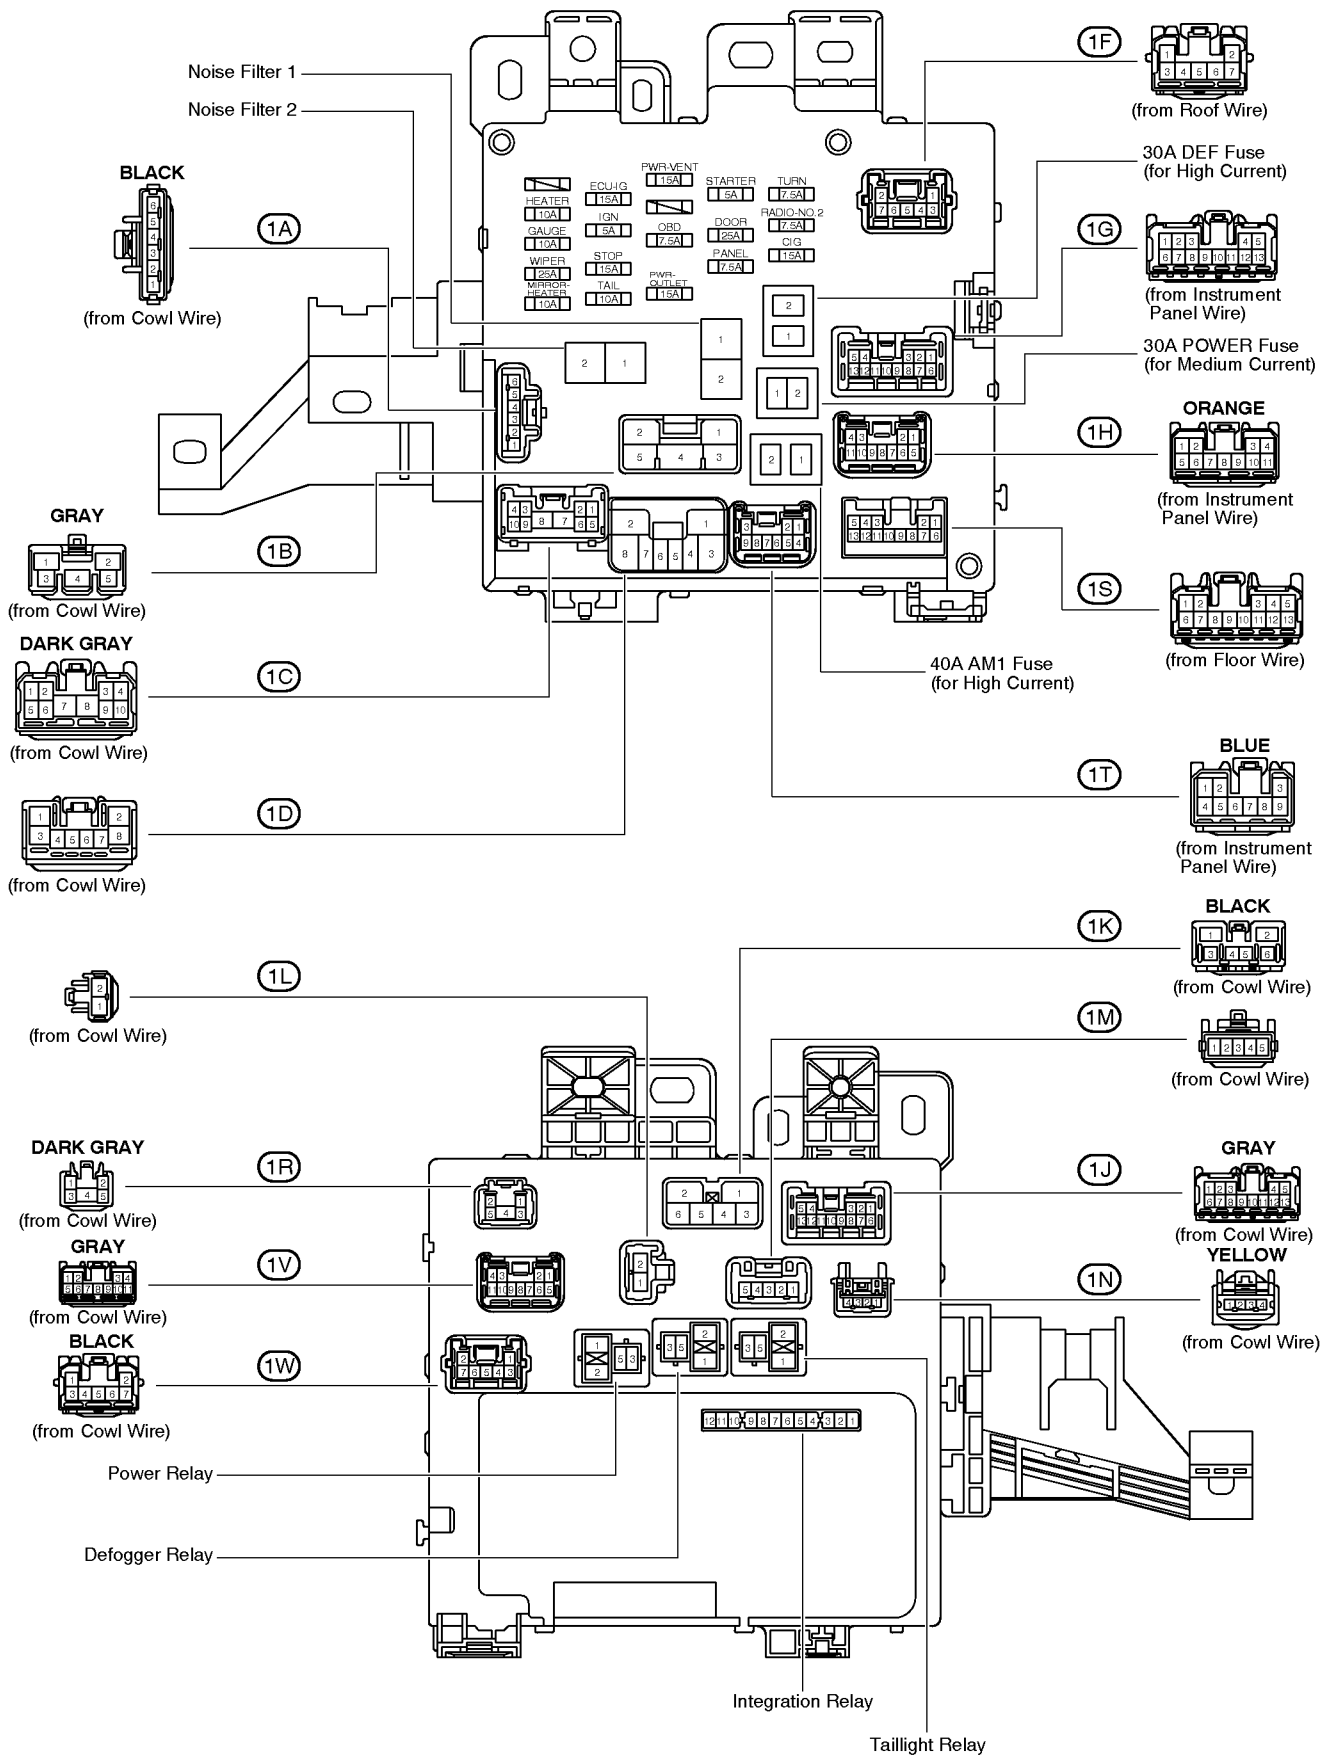



[Driver Side J/B No.1 Inner Circuit]

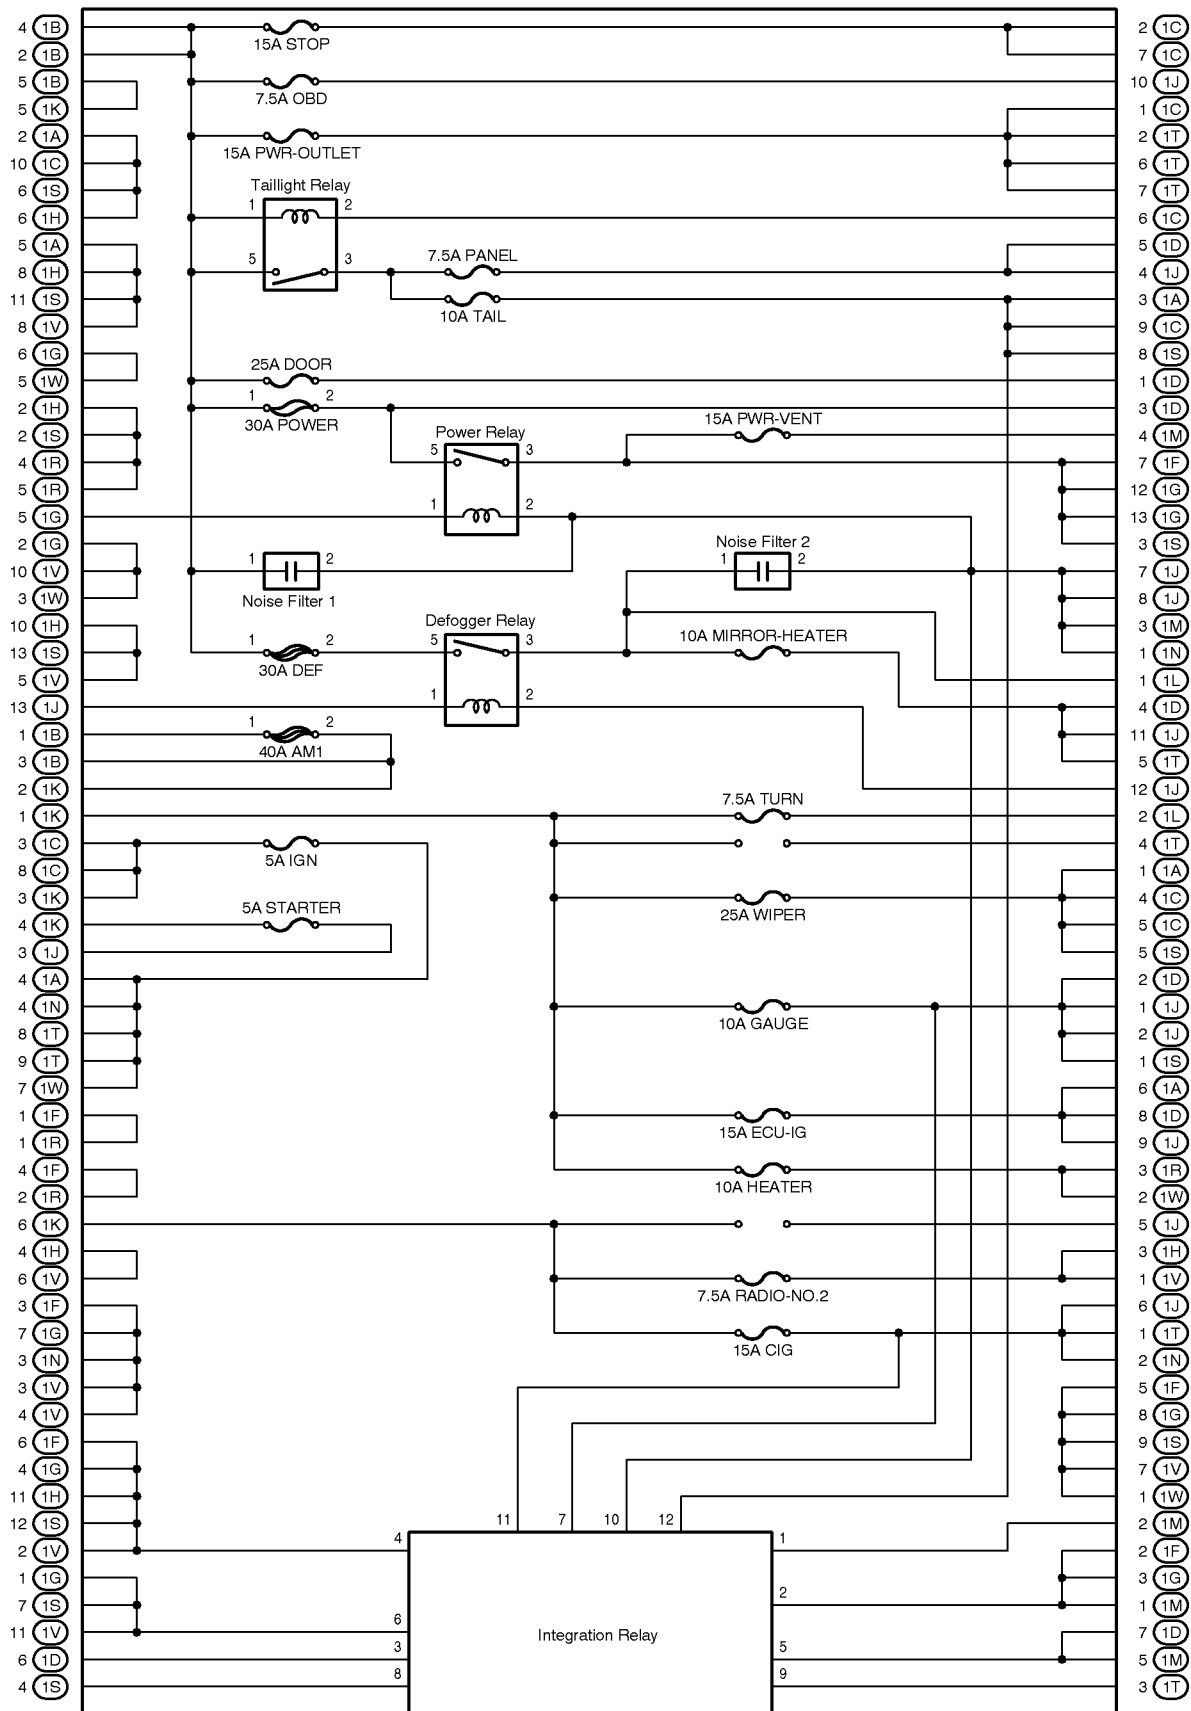

F RELAY LOCATIONS


○ : Engine Room J/B No.2 **Engine Compartment Left (See Page 20)**

*1 : Towing Package
*2 : Except *1

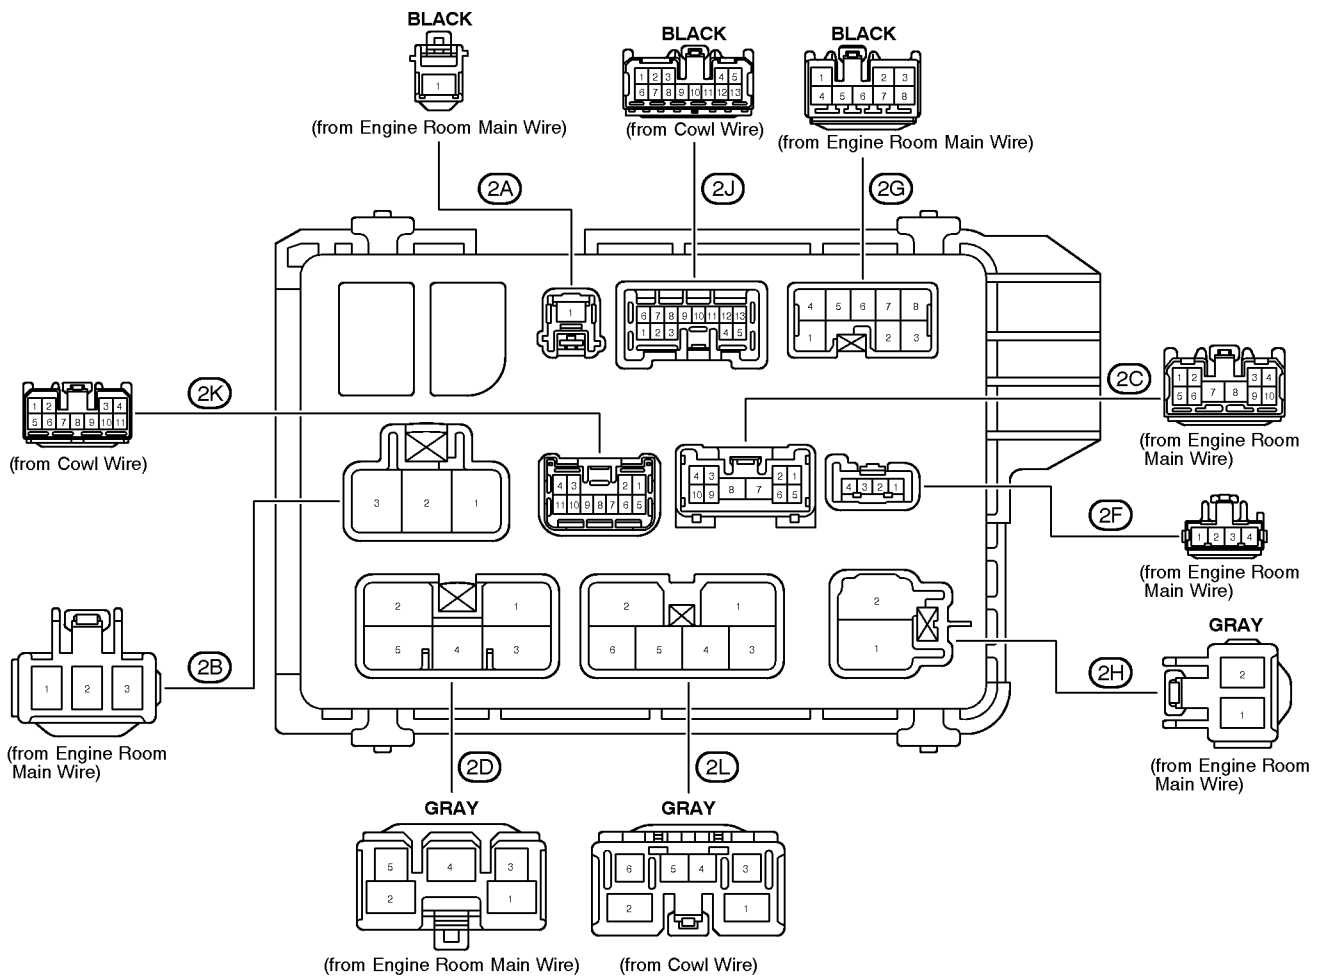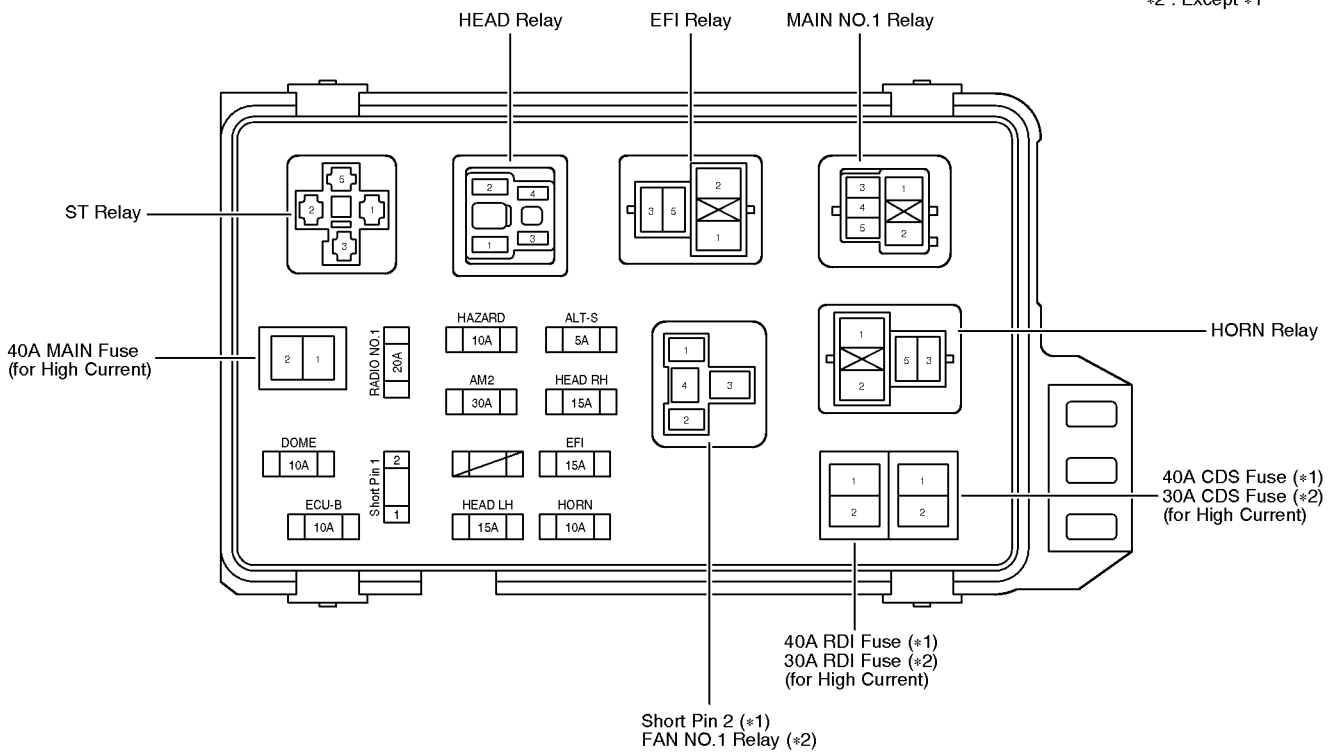

[Engine Room J/B No.2 Inner Circuit]


*1 : Towing Package *3 : 40A RDI (*1) *4 : 40A CDS (*1)
 *2 : Except *1 30A RDI (*2) 30A CDS (*2)

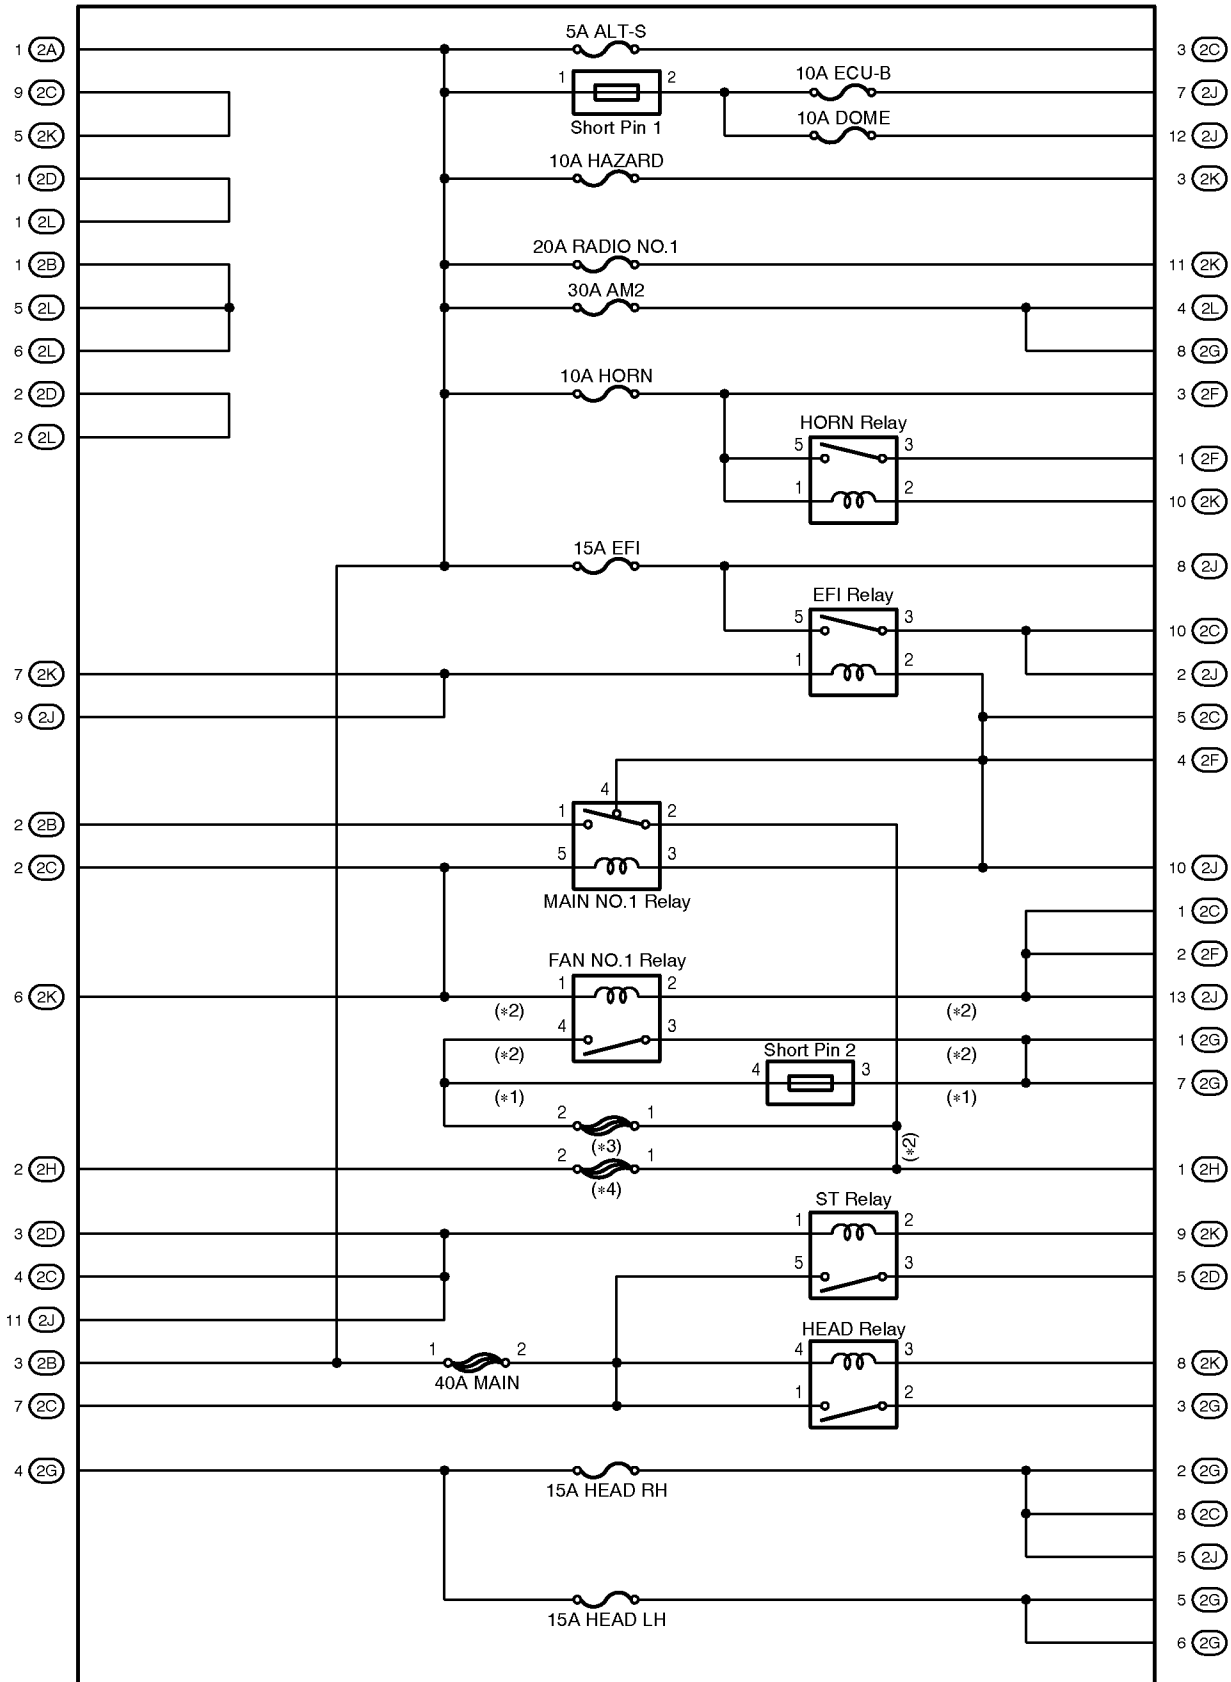


F RELAY LOCATIONS

○ : J/B No.3

Behind the Combination Meter (See Page 20)

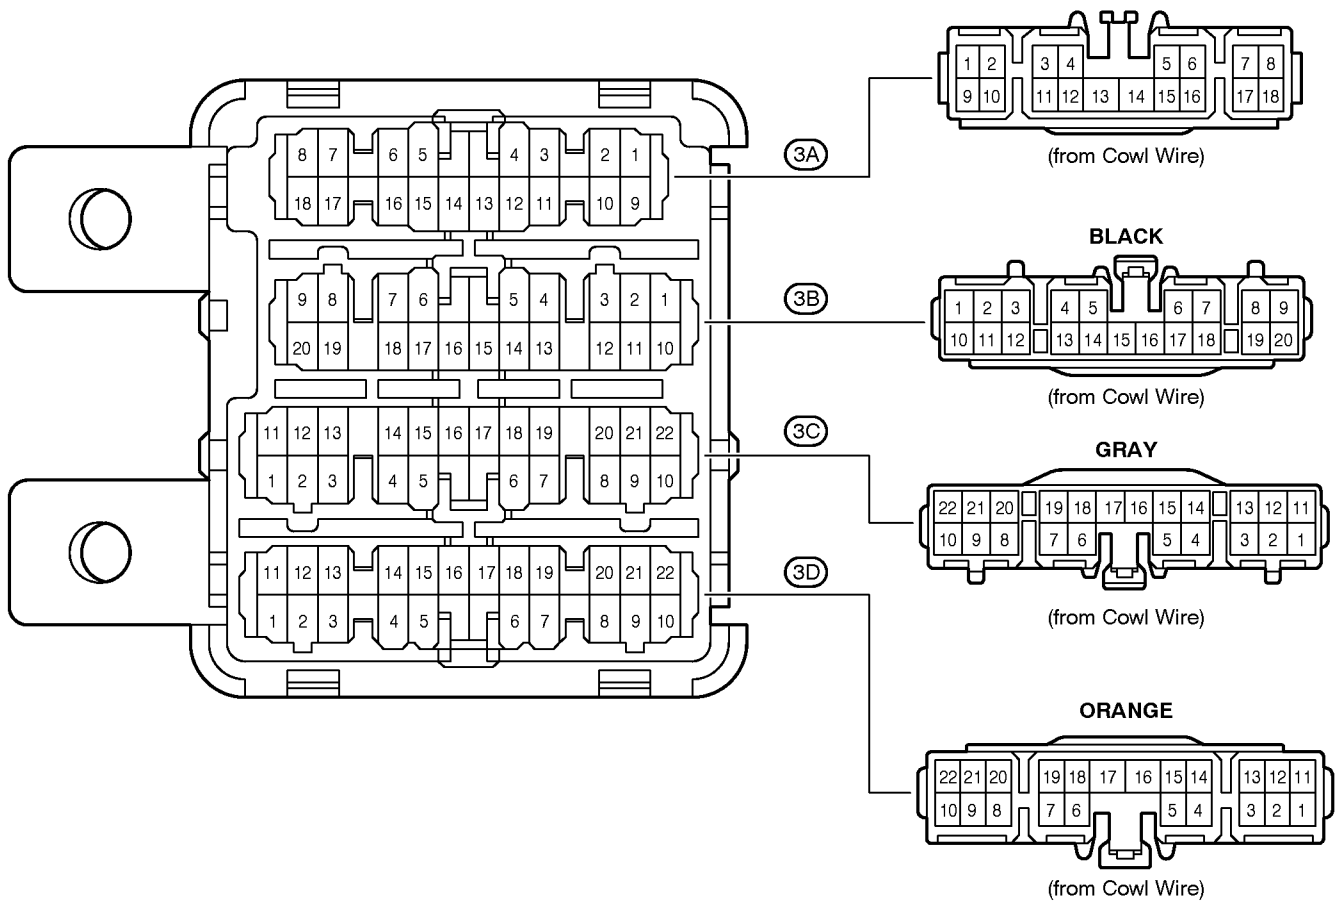


[J/B No.3 Inner Circuit]

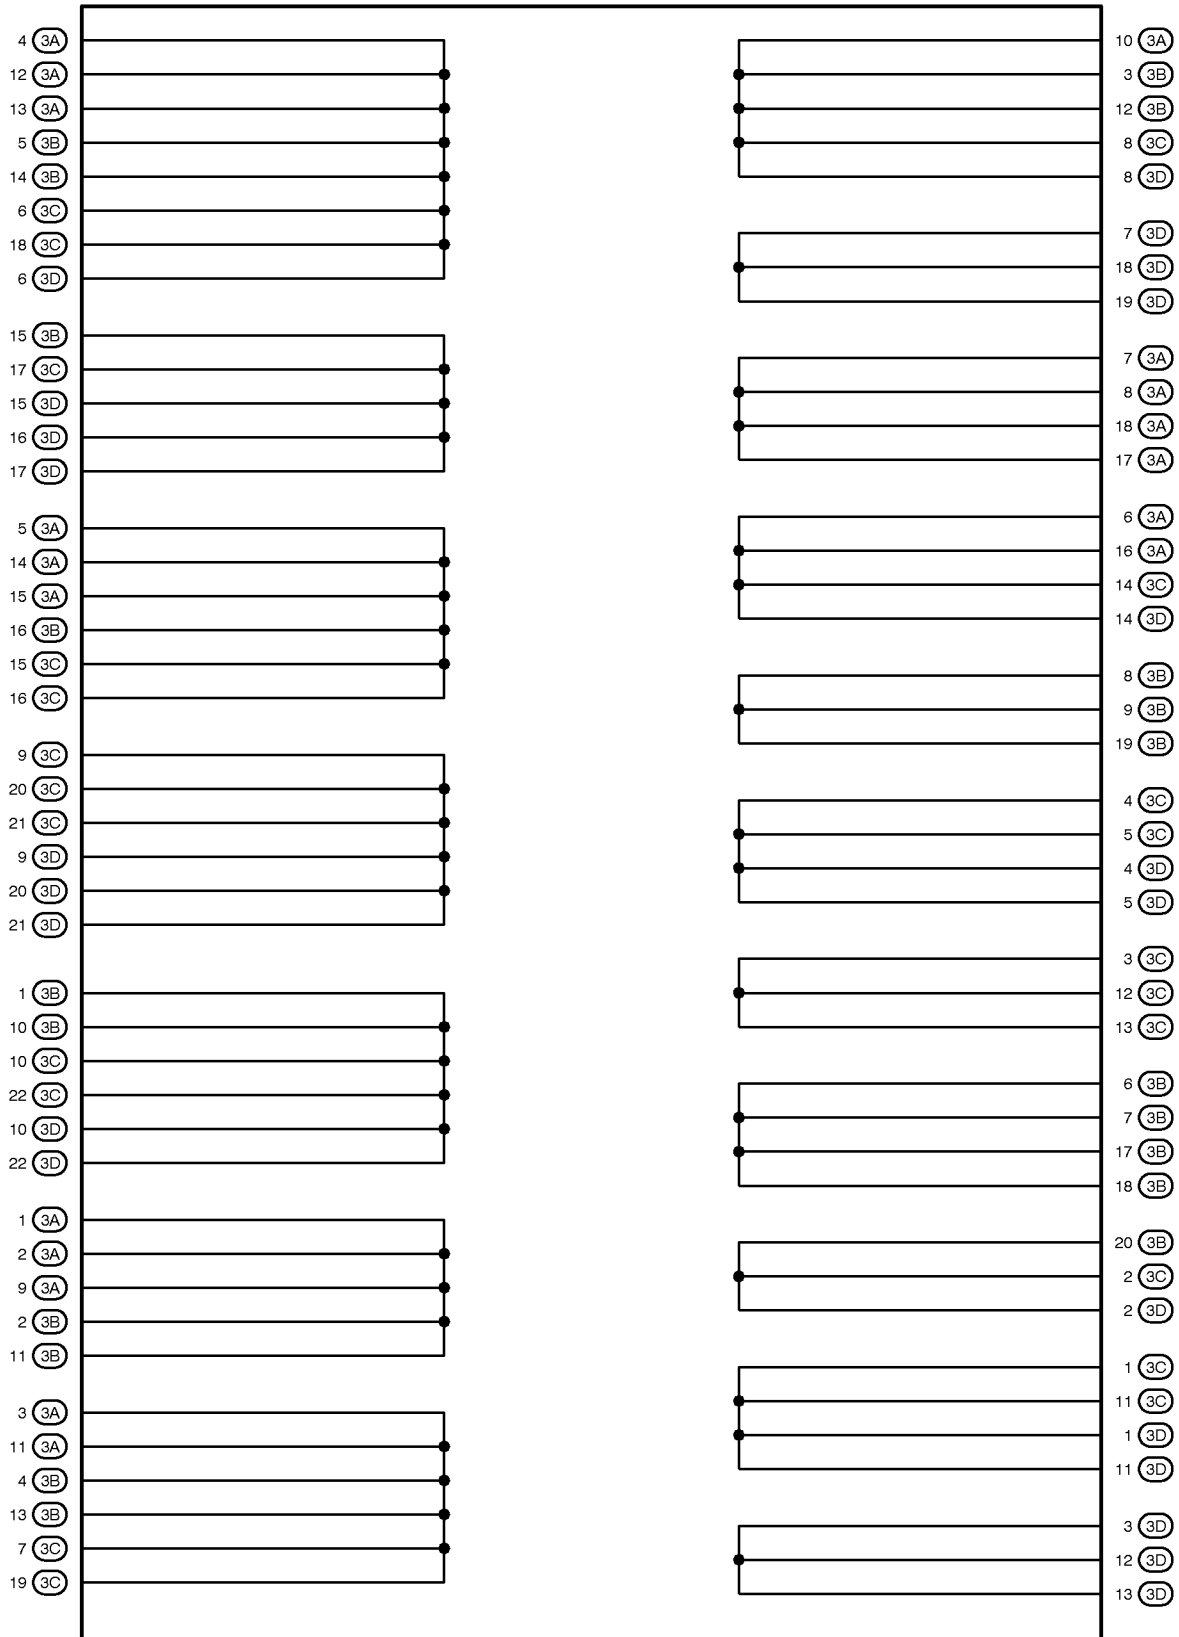


F RELAY LOCATIONS


① : Engine Room R/B No.1 **Engine Compartment Left (See Page 20)**
[Inside Engine Room J/B No.2]

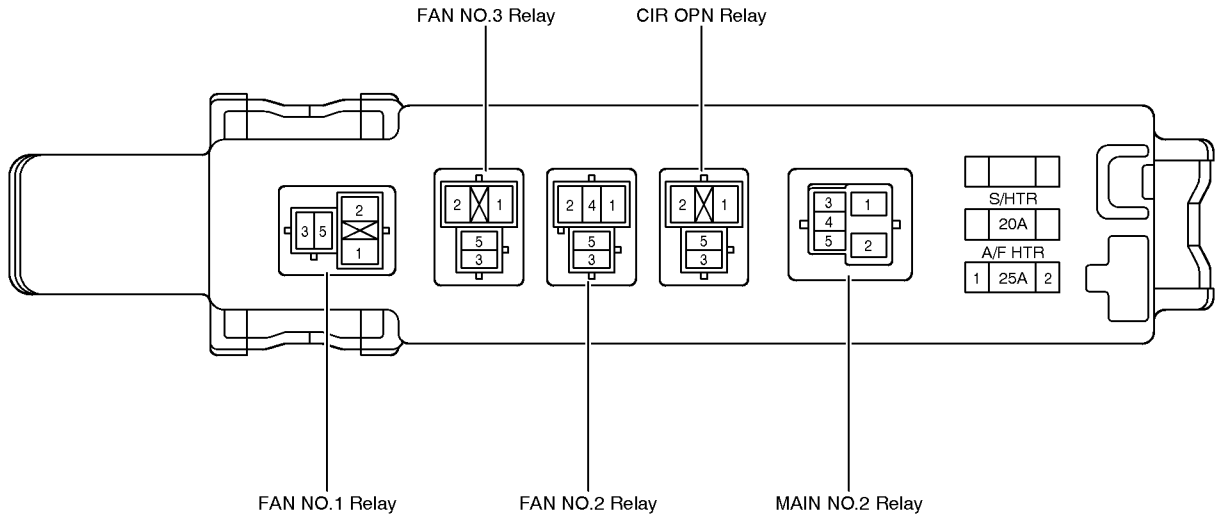


③ : Passenger Side R/B No.3 **Right Rear Quarter Panel (See Page 21)**

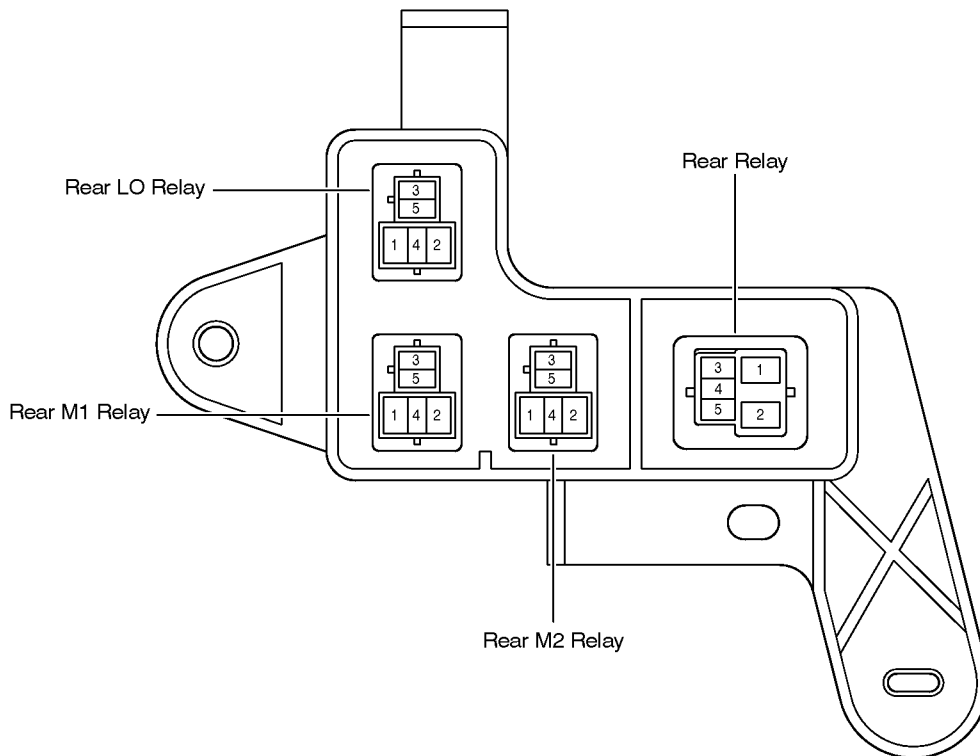


④ : Passenger Side R/B No.4 **Front Side of the Blower Motor (See Page 20)**

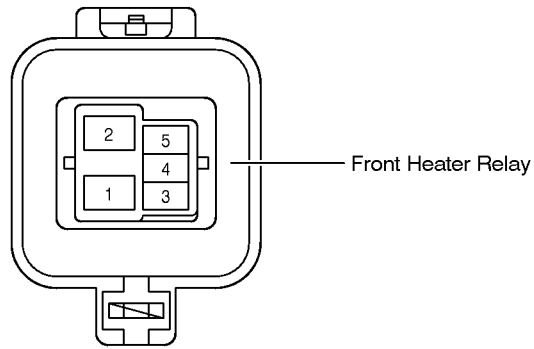

⑤ : Driver Side R/B No.5 **Lower Finish Panel (See Page 20)**

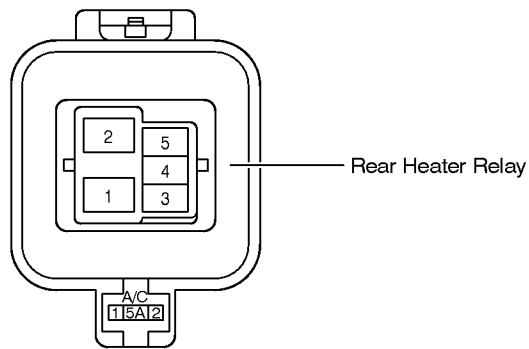


⑦ : R/B No.7 **Engine Compartment Left (See Page 20)**

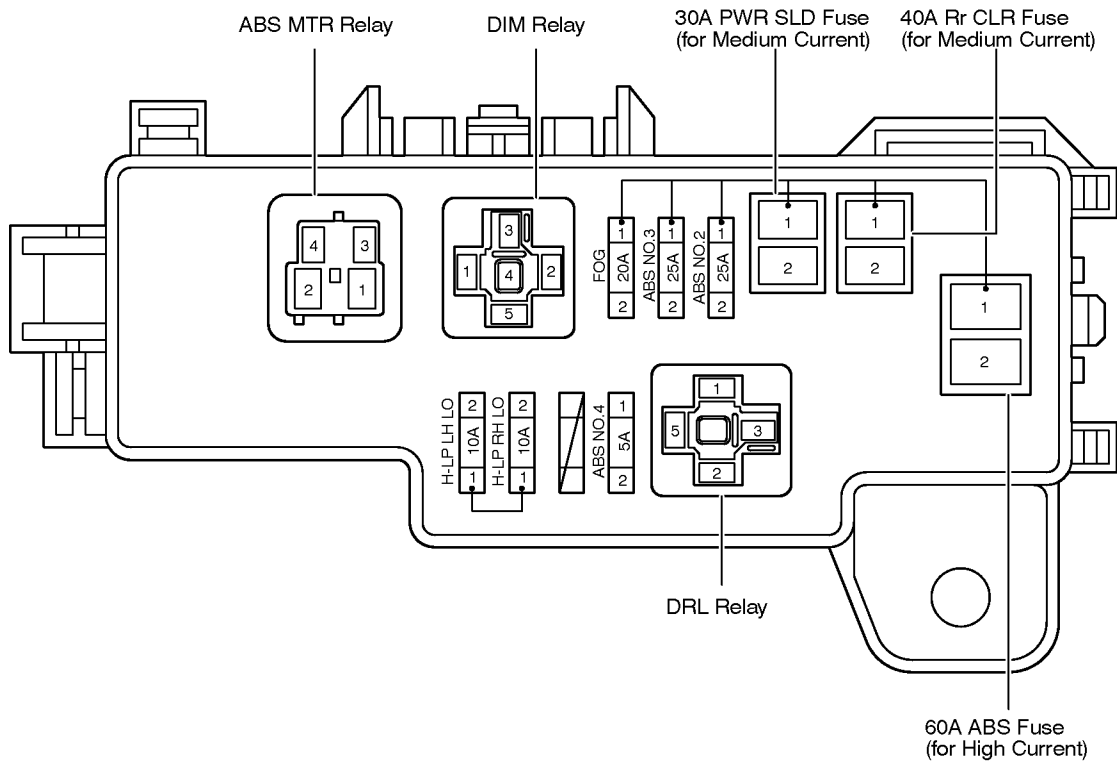

F RELAY LOCATIONS

⑧ : R/B No.8 Engine Compartment Right (See Page 20)

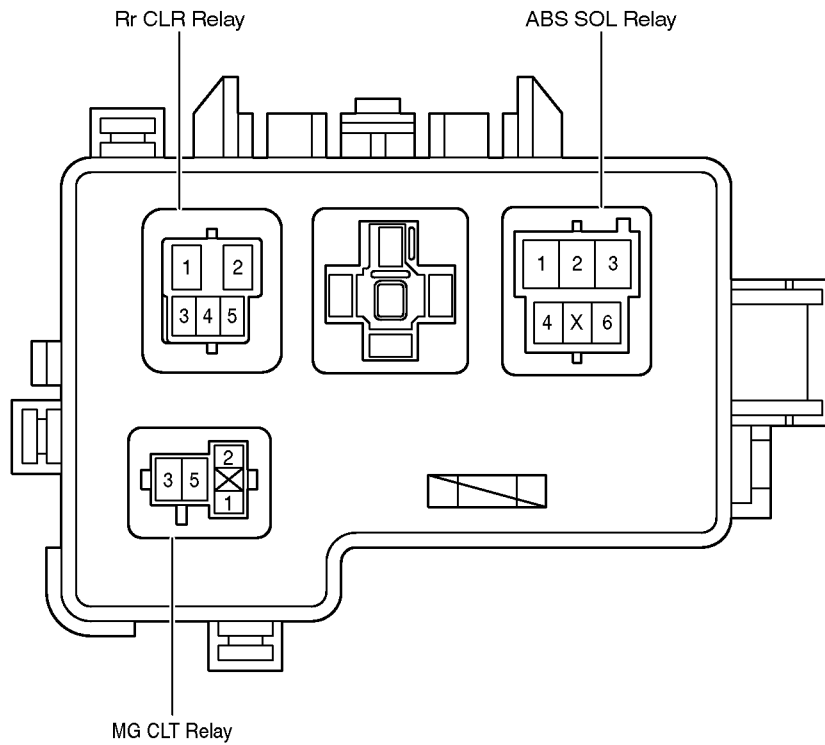

Fusible Link Block Engine Compartment Left (See Page 20)
[Inside Engine Room J/B No.2]

