vtech

USB 7100   *Quick Start Guide*

Dual Line PC Internet Phone

Parts Checklist

Remember to save your sales receipt and original packaging in case you ever need to ship your telephone for warranty service. Check to make sure the telephone packaging includes the following:

1. Telephone Base
2. Telephone Handset
3. Battery Compartment Cover
4. Batteries
5. Belt Clip
6. AC Adapter
7. USB Cable
8. Telephone Cable
9. VTech CDROM – Software and User Documentation
10. Quick Start Guide

Telephone base

Telephone handset

Battery compartment cover

Batteries (2)

CD-ROM

AC adapter

USB cable

Belt clip

Telephone line cord

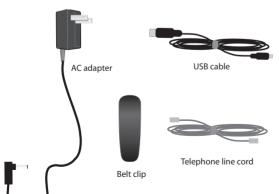**USB 7100**   *Quick Start Guide*
Dual Line PC Internet Phone

Quick S tart Guide

Installing Handset Batteries

1. Insert the supplied batteries in to the handset.

⚠️ **Caution: Do not use alkaline batteries.**
Use only the batteries that came with your telephone. To purchase replacement batteries, visit us on the web at www.vtechphones.com or call our Customer Support Center at 888-347-2005. In Canada, call 888-211-2005 or visit www.vtechcanada.com.

2. Replace the battery cover by sliding it upwards.
3. Place the handset in the base to charge the batteries. Charge the batteries for at least 15 hours before first use.
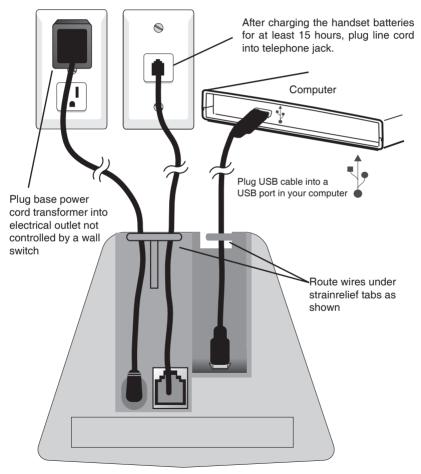Note: The LCD will be blank until the batteries are charged enough to activate it.

Place handset in base to charge for over 15 hours before first use.

Insert supplied batteries

Replace cover

Installing the Telephone Base

Install the base as shown in the diagram below. Choose a location away from electrical equipment, such as television sets or microwave ovens. Avoid excessive heat, cold, dust or moisture.

After connecting the telephone base to an available USB port on your computer, Windows® will automatically detect and install the appropriate drivers.

After charging the handset batteries for at least 15 hours, plug line cord into telephone jack.

Computer

Plug base power cord transformer into electrical outlet not controlled by a wall switch

Plug USB cable into a USB port in your computer

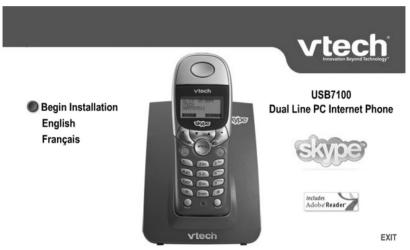Route wires under strainrelief tabs as shown

Underside of telephone base

Installing the Software

Before continuing, make sure the batteries in the handset are fully charged.

1. Insert the CDROM and wait for the opening screen to be displayed.
   If the software installation program does not automatically start, you will
   need to launch it manually. From your desktop, double click **My Computer**,
   double click your **CD-ROM Drive**, and then double click "**vtech_broad
   band_7100.exe**".
2. Click the **Begin Installation** button.

Adobe, the Adobe logo, Acrobat Reader, and the Adobe Acrobat Reader logo are trademarks of Adobe Systems Incorporated in the United States and/or other countries.
The Skype name and logo are trademarks of Skype © 2005 VTech Communications, Inc. All rights reserved. V1.1

3. Click the button to download and install Skype. Instructions to download the software and start the installation are provided on the web page. Follow the instructions in the Setup Wizard to complete the installation. The first time Skype is launched you will have the option to create an account, if you don't already have one.
4. After completing the Skype installation, click the button to download and install the VTech Cordless Phone Suite software. Instructions to download the software and start the installation are provided on the web page.

STEP ONE: Install Skype™

● Skype

Click the Skype™ button to download and install the software.
The first time Skype™ is launched you will have the option to create an account, if you don't already have one.

Important: Skype ™ version 1.0.0.12 or later is required for user with the usb7100. If you already have Skype installed on your computer, please confirm that you are using a compatible version. Visit http://skype.com for the most recent version of software.

STEP TWO: Install Cordless Phone Suite

● VTech Cordless Phone Suite

Click the VTech Cordless Phone Suite button to download and install the software.

Important: After the installation is complete, you will be prompted that the VTech Cordless Phone Suite software is trying to access Skype™. Select "Allow this program to use Skype™" and then click OK.

Install Adobe Reader

● Adobe Reader

Click the Adobe Reader button to start the installation Setup Wizard.
Adobe Reader is required to view the USB7100 User Manual.

BACK | EXIT

Adobe, the Adobe logo, Acrobat Reader, and the Adobe Acrobat Reader logo are trademarks of Adobe Systems Incorporated in the United States and/or other countries. The Skype name and logo are trademarks of Skype © 2005 VTech Communications, Inc. All rights reserved. V1.0
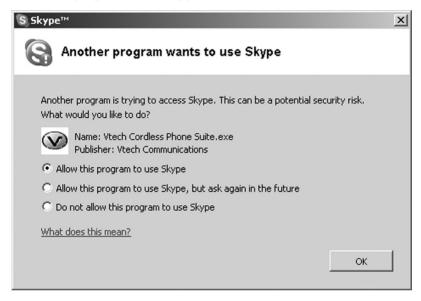
Adobe Reader is required to view the USB7100 User Manual. It is likely that you already have it installed on to your computer. If you don't, click the Adobe Reader button to start the Setup Wizard. Follow the instructions on screen to complete the installation.
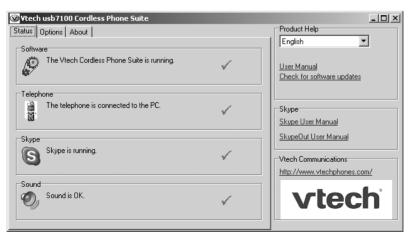5. Click **Exit** to close the Installation CD screen.

Once the applications have been installed, you will be prompted that the VTech Cordless Phone Suite software is trying to access Skype. Select **Allow this program to use Skype** and then click **OK**.

The Cordless Phone Suite Software will display the status of the usb7100. All items checked means the phone is ready to use. From the Cordless Phone Suite software, you can find the user manual and check for software updates.

Handset Quick Reference Guide

⊙

Press to scroll down in menus.
While entering names or numbers, press
to move the cursor to the left.

SOFTKEY

Press a softkey to select an option
displayed just above the key.

CID

Press to display Caller ID log.

List/Call

Press to make or answer an Internet call.
Press to see Skype contact list. Press
again to call highlighted contact.

Redial

Press to view redial memory.

Off/Clear

⊙

Press to scroll up in menus.
While entering names or numbers, press
to move the cursor to the right.

SOFTKEY

Press a softkey to select an option
displayed just above the key.

📖

Press to display Phonebook entries.

Call/Flash

Press to make or answer a telephone call.
During a call, press to answer an incoming
call, if Call Waiting is activated.

Volume

Press to adjust listening volume.

During a call, press to hang up. While using menus, press to cancel an opera-
tion, back up to the previous menu, or exit the menu display.