

# Installation manual: Parrot MKi + Parrot CK3100 range



Parrot

move wireless



## CLIO 3



The brand name RENAULT CLIO 3 and the RENAULT logo are the property of RENAULT.  
This document is only valid for the vehicle model CLIO 3® year 2006 to 2011, excluding all other models in the same range and excluding later modifications made to the vehicle by the manufacturer.  
The Parrot brand name and logos are the exclusive property of Parrot SA.



## Fitting time (estimated) / Main features

<b>Disassembly</b>	15min
<b>Kit installation</b>	20min
<b>Refitting</b>	15min
<b>Testing</b>	15min
<b>Total</b>	1h5min

YES	<b>ACC wire</b>
YES	<b>ISO</b>
N/A	<b>UNIKA</b>
FRONT SPEAKER	<b>TEL mode</b>
ALL	<b>MUSIC mode</b>

## Tools



**Plastic trim removal tools  
FACOM / BERNER**

-Multimeter or Test lamp

-Hose clamp



**FACOM DX-25 kit (n°4 tools)**

- Electrical tape

## Accessories required

"Please contact your Wholesaler to purchase accessories."

## Updating

To get the most out of your hands-free kit we recommend that you update your software regularly. The update procedure can be found at

[www.parrot.com/usa/support/downloads](http://www.parrot.com/usa/support/downloads)



## Disassembly



## Disassembly 1 / 2



Insert the removal tools into the slots on each side of the radio.



Carefully release the radio, without pulling it out completely, so that you can disconnect the connectors and the antenna. Then completely remove the radio.



Using the plastic trim tools, unclip the car stereo and air conditioning surround.



Disconnect the WARNING connector.



Using the plastic trim tools, unclip and remove the central air vent.



Using the plastic trim tools, unclip the panel located on the left side of the dashboard.





## Disassembly 2 / 2




Remove the door seal on the driver's side.



Using the plastic trim tools, unclip and open (without removing) the panel in between the two sun visors.

## Microphone passage

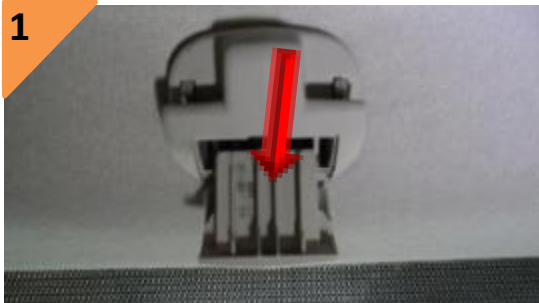

Using a guide, feed the cable inside the sun visor support towards the windscreen.



Affix the bracket provided, after cleaning the sun visor support. Then run the cable under the headliner.



Reclose the sun visor support panel. (**BE CAREFUL** not to cut the cable.)



Run the cable along the driver's side windscreen support while replacing the door seal.



Pass the cable into the dashboard on the left side.



Run the cable under the steering wheel panel towards the radio housing, attaching with wire ties.



## Feeding the accessory cable

1



On the top side of the glove box,  
insert the cable into the hole.

2



Then bring it out leaving sufficient  
length.




## Fitting the hands-free system 1 / 2


1



Swap the fuses (red wire with orange wire) on the kit connector provided. Then connect all of the wires to the blue box as shown in the diagram below.

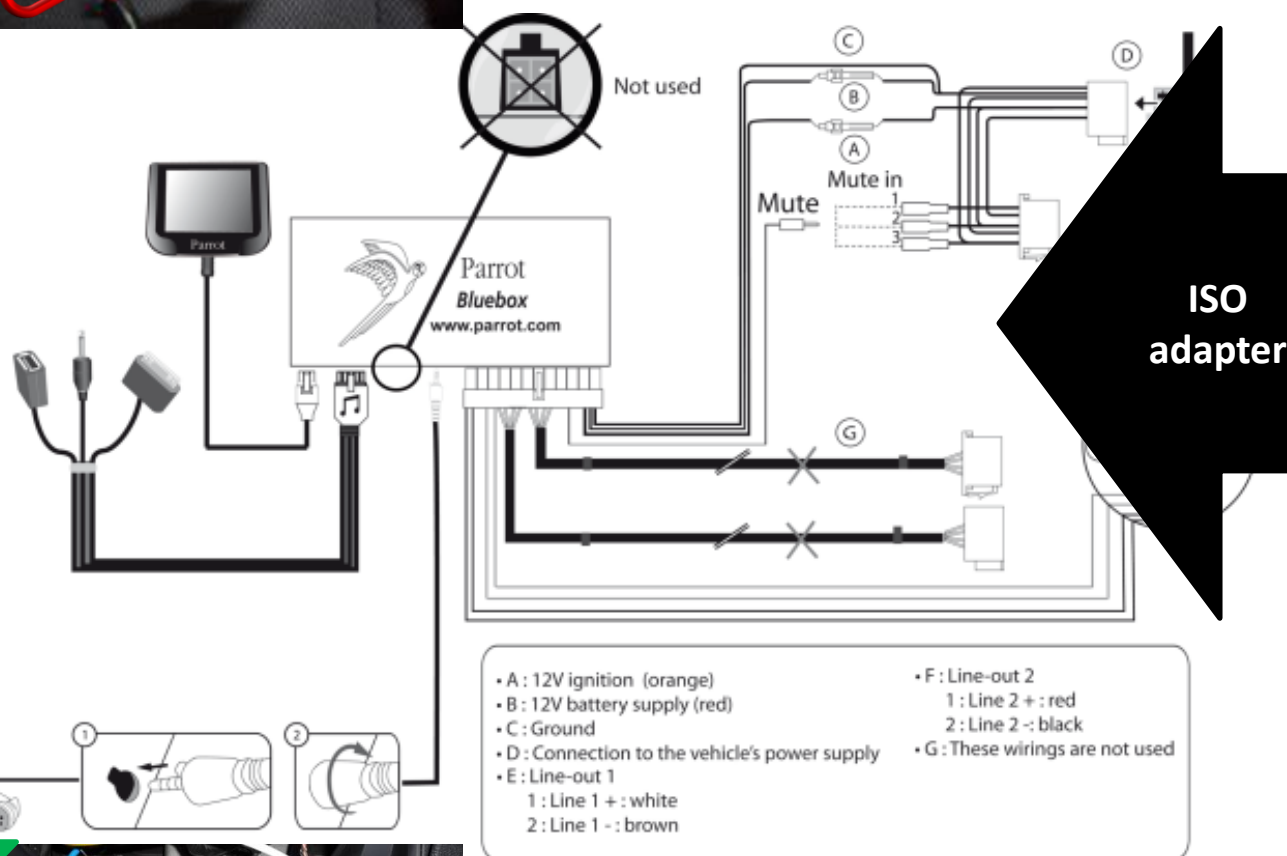

2

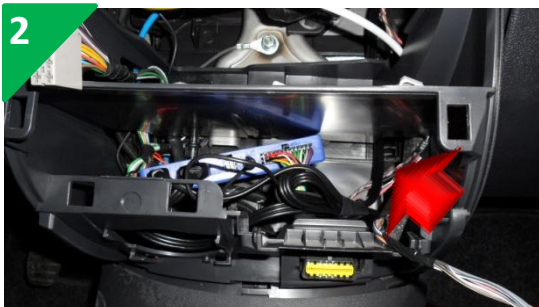

Test the assembly before reassembly, then stow the box under the radio housing.





## Fitting the hands-free system 2 / 2

3



Feed the cable through the central air vent. Glue the support (supplied) after degreasing the upper left corner of the vent located on the dashboard.



4



Clip the central air vent assembly back on. (Make sure that you DO NOT cut the screen cable.)



## Testing



Before refitting the system, switch the kit on using the ignition (or by starting the car). By pushing the central knob of the remote control, check:

- 1 - That the menu is displayed on the screen. (language or iPod.)
- 2 - That the system can be muted. (Click in the blue box.)
- 3 - That there is no sound coming from the speakers.
- 4 - That the sound from the voice menu is coming out of the front speakers.
- 5 - Then turn off the ignition, check that the kit switches off and that the "goodbye" message appears on the screen. (If this fails, reverse the fuses on the kit's wiring harness.)
- 6 - Pair a telephone with the kit to make a call. (Check that both the microphone and the kit are working.)

## Reassembly

Refit the system using the following procedure:

- 1 – Re-fit the panel on the left-hand side of the dashboard.
- 2 – Re-connect and refit the car stereo and air conditioning surround.
- 3 – Re-connect the connectors and the antenna to the radio then slide it into its housing.

