



# YAMAHA

## 2008

### MOTORCYCLE

### SERVICE MANUAL

**Model : YW50X\_**

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

**5PNF81972100**



---

## FORWARD

This supplementary service manual has been prepared to introduce new service and data for YW50BP 2001. For complete service manual procedures it is necessary to use this supplementary service manual together with the following manual.

YW50BP 2001 SERVICE MANUAL : 5PN1-ME1

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

EAS00000

YW50X 2007  
SUPPLEMENTARY SERVICE MANUAL  
©2007 by Yamaha Motor Taiwan Co., Ltd.  
First edition, June 2007  
All rights reserved.  
Any reproduction or unauthorized use  
without the written permission of  
Yamaha Motor Taiwan Co., Ltd.  
is expressly prohibited.  
Printed in CANADA

## NOTICE

This manual was produced by the Yamaha Motor Taiwan Company, Ltd. primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual. Therefore, anyone who uses this book to perform maintenance and repairs on Yamaha vehicles should have a basic understanding of mechanics and the techniques to repair these types of vehicles. Repair and maintenance work attempted by anyone without this knowledge is likely to render the vehicle unsafe and unfit for use.

Yamaha Motor Taiwan Company, Ltd. is continually striving to improve all of its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

**NOTE:**

Designs and specifications are subject to change without notice.

## IMPORTANT MANUAL INFORMATION

Particularly important information is distinguished in this manual by the following.



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

**WARNING**

Failure to follow WARNING instructions could result in severe injury or death to the scooter operator, a bystander or a person checking or repairing the scooter.

**CAUTION:**

A CAUTION indicates special precautions that must be taken to avoid damage to the scooter.

**NOTE:**

A NOTE provides key information to make procedures easier or clearer.

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

# HOW TO USE THIS MANUAL

This manual is intended as a handy, easy-to-read reference book for the mechanic. Comprehensive explanations of all installation, removal, disassembly, assembly, repair and check procedures are laid out with the individual steps in sequential order.

- ① The manual is divided into chapters. An abbreviation and symbol in the upper right corner of each page indicate the current chapter. Refer to "SYMBOLS".
- ② Each chapter is divided into sections. The current section title is shown at the top of each page, except in Chapter 3 ("PERIODIC CHECKS AND ADJUSTMENTS"), where the sub-section title(s) appears.
- ③ Sub-section titles appear in smaller print than the section title.
- ④ To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section.
- ⑤ Numbers are given in the order of the jobs in the exploded diagram. A circled number indicates a disassembly step.
- ⑥ Symbols indicate parts to be lubricated or replaced. Refer to "SYMBOLS".
- ⑦ A job instruction chart accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.
- ⑧ Jobs requiring more information (such as special tools and technical data) are described sequentially.

CYLINDER HEAD, CYLINDER AND PISTON ENG

CYLINDER HEAD, CYLINDER AND PISTON

④ →

⑤ →

⑦ →

Order	Job name/Part name	Q'ty	Remarks
	Cylinder head, Cylinder and piston removal		Remove the parts in the order.
	Engine		Refer to the "ENGINE REMOVAL" section
1	Muffler/Gasket	1/1	
2	Air shroud 2	1	
3	Spark plug	1	
4	Cylinder head/Cylinder head gasket	1/1	
5	Cylinder	1	
6	Piston pin clip	2	
7	Piston pin/ Bearing	1/1	
8	Piston	1	
9	Piston ring set	1	
10	Cylinder gasket	1	
			Reverse the removal procedure for installation.

4-3

CYLINDER HEAD, CYLINDER, PISTON ENG

PISTON PIN AND PISTON REMOVAL

③ →

NOTE:  
Before removing the piston pin clip, cover the crankcase with a clean rag so you will not accidentally drop the clip into the crankcase.

2. Remove:  
 • Piston pin clip ①  
 • Piston ②  
 • Piston pin bearing ③

**CAUTION:**  
Do not use a hammer to drive the piston pin out.

CYLINDER HEAD INSPECTION

1. Eliminate:  
 • Carbon deposits  
 Use a rounded scraper ①.

2. Inspect:  
 • Cylinder head warpage  
 Out of specification → Re-surface.















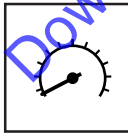
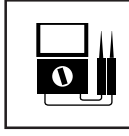






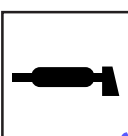


Warpage measurement and re-surfacement steps:  
 • Attach a straight edge ① and a thickness gauge ② on the cylinder head.  
 • Measure the warpage limit.

Warpage limit:  
 0.03 mm (0.0012 in)

• If the warpage is out of specification, reface the cylinder head.

NOTE:  
Rotate the head several times to avoid removing too much material from one side.

4-4

① GEN INFO 	② SPEC 		
③ CHK ADJ 	④ CHAS 		
⑤ ENG 	⑥ COOL 		
⑦ CARB 	⑧ ELEC 		
⑨ TRBL SHTG ?	⑩ 		
⑪ 	⑫ 		
⑬ 	⑭ 		
⑮ 	⑯ 	⑰ 	
⑱ 	⑲ 	⑳ 	㉑ 
㉒ 	㉓ 	㉔ 	㉕ 
㉖ 	㉗ <b>New</b>		

EAS00008

## SYMBOLS

The following symbols are not relevant to every vehicle.

Symbols ① to ⑨ indicate the subject of each chapter.

- ① General information
- ② Specifications
- ③ Periodic checks and adjustments
- ④ Chassis
- ⑤ Engine
- ⑥ Cooling system
- ⑦ Carburetor
- ⑧ Electrical system
- ⑨ Troubleshooting

Symbols ⑩ to ⑰ indicate the following.

- ⑩ Serviceable with engine mounted
- ⑪ Filling fluid
- ⑫ Lubricant
- ⑬ Special tool
- ⑭ Tightening torque
- ⑮ Wear limit, clearance
- ⑯ Engine speed
- ⑰ Electrical data





Symbols ⑱ to ㉕ in the exploded diagrams indicate the types of lubricants and lubrication points.

- ⑱ Engine oil
- ⑲ Gear oil
- ⑳ Molybdenum-disulfide oil
- ㉑ Brake fluid
- ㉒ Wheel-bearing grease
- ㉓ Lithium-soap-based grease
- ㉔ Molybdenum-disulfide grease
- ㉕ Silicone grease

Symbols ㉖ to ㉗ in the exploded diagrams indicate the following.

- ㉖ Apply locking agent (LOCTITE®)
- ㉗ Replace the part

# TABLE OF CONTENTS

GENERAL INFORMATION	
	GEN INFO <b>1</b>
SPECIFICATIONS	
	SPEC <b>2</b>
PERIODIC CHECKS AND ADJUSTMENTS	
	CHK ADJ <b>3</b>
CARBURETOR	
	CARB <b>4</b>

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

---

**CHAPTER 1**  
**GENERAL INFORMATION**

**SCOOTER IDENTIFICATION** ..... 1-1

    VEHICLE IDENTIFICATION NUMBER ..... 1-1

    MODEL LABEL ..... 1-1

**IMPORTANT INFORMATION** ..... 1-2

    PREPARATION FOR REMOVAL AND DISASSEMBLY ..... 1-2

    REPLACEMENT PARTS ..... 1-2

    GASKETS, OIL SEALS AND O-RINGS ..... 1-2

    LOCK WASHERS/PLATES AND COTTER PINS ..... 1-3


    BEARINGS AND OIL SEALS ..... 1-3

    CIRCLIPS ..... 1-3

**CHECKING THE CONNECTIONS** ..... 1-4

**SPECIAL TOOLS** ..... 1-5

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

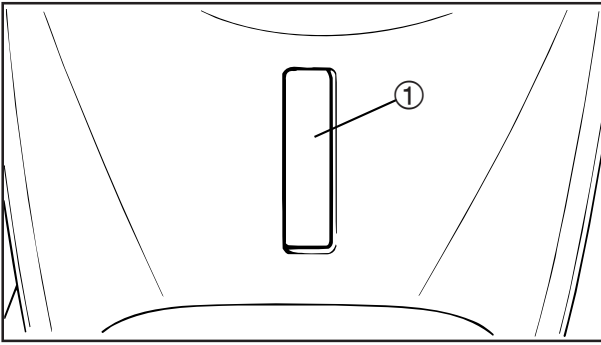


EAS00015

## GENERAL INFORMATION SCOOTER IDENTIFICATION

EAS00017

### VEHICLE IDENTIFICATION NUMBER

The vehicle identification number ① is stamped into the frame.

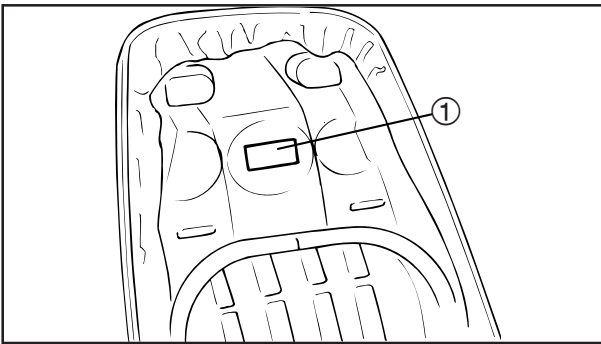

EAS00018

### MODEL LABEL

The model label ① is affixed to the seat. This information will be needed to order spare parts.

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)






EAS00020

**IMPORTANT INFORMATION**

**PREPARATION FOR REMOVAL AND DISASSEMBLY**

1. Before removal and disassembly, remove all dirt, mud, dust and foreign material.
  
2. Use only the proper tools and cleaning equipment.  
Refer to the "SPECIAL TOOLS".
3. When disassembling, always keep mated parts together. This includes gears, cylinders, pistons and other parts that have been "mated" through normal wear. Mated parts must always be reused or replaced as an assembly.
4. During disassembly, clean all of the parts and place them in trays in the order of disassembly. This will speed up assembly and allow for the correct installation of all parts.
5. Keep all parts away from any source of fire.

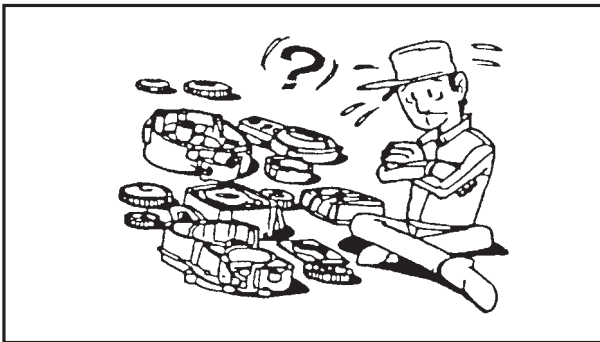

EAS00021


**REPLACEMENT PARTS**

Use only genuine Yamaha parts for all replacements. Use oil and grease recommended by Yamaha for all lubrication jobs. Other brands may be similar in function and appearance, but inferior in quality.

EAS00022

**GASKETS, OIL SEALS AND O-RINGS**


1. When overhauling the engine, replace all gaskets, seals and O-rings. All gasket surfaces, oil seal lips and O-rings must be cleaned.
2. During reassembly, properly oil all mating parts and bearings and lubricate the oil seal lips with grease.

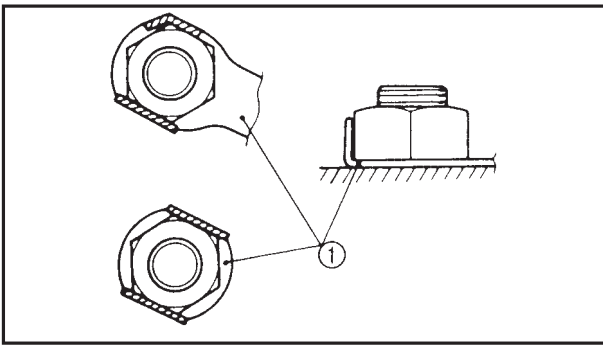

EAS00023

**LOCK WASHERS/PLATES AND COTTER PINS**

After removal, replace all lock washers/plates ① and cotter pins. After the bolt or nut has been tightened to specification, bend the lock tabs along a flat of the bolt or nut.

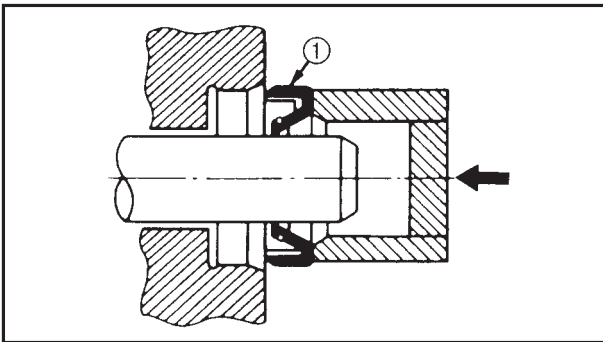


EAS00024

**BEARINGS AND OIL SEALS**

Install bearings and oil seals so that the manufacturer's marks or numbers are visible. When installing oil seals, lubricate the oil seal lips with a light coat of lithium-soap-based grease. Oil bearings liberally when installing, if appropriate.


- ① Oil seal

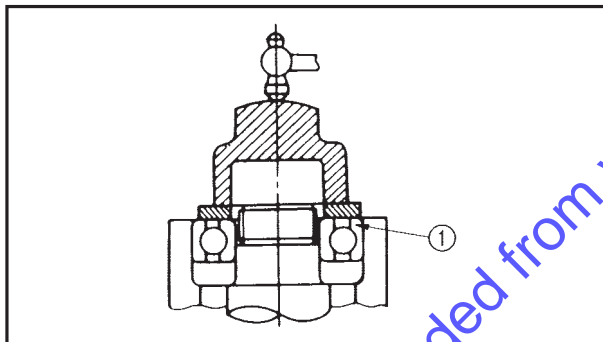

**CAUTION:**

Do not spin the bearing with compressed air because this will damage the bearing surfaces.

- ① Bearing

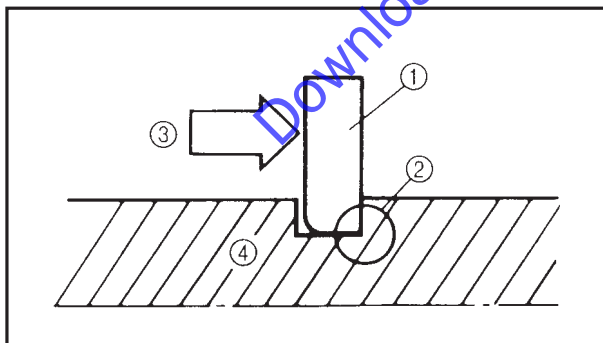

EAS00025

**CIRCLIPS**

Before reassembly, check all circlips carefully and replace damaged or distorted circlips. Always replace piston pin clips after one use. When installing a circlip ①, make sure the sharp-edged corner ② is positioned opposite the thrust ③ that the circlip receives.


- ④ Shaft

EAS00026

**CHECKING THE CONNECTIONS**


Check the leads, couplers, and connectors for stains, rust, moisture, etc.

1. Disconnect:
  - lead
  - coupler
  - connector

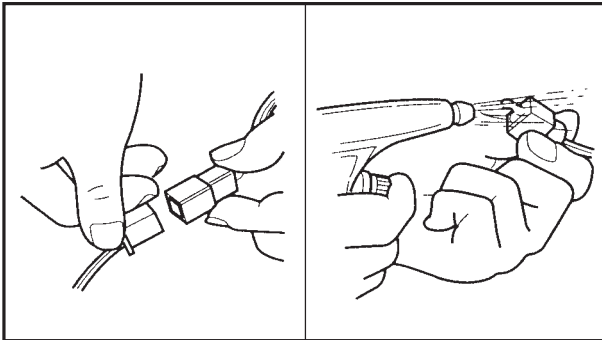

2. Check:
  - lead
  - coupler
  - connector


Moisture → Dry with an air blower.  
Rust/stains → Connect and disconnect several times.

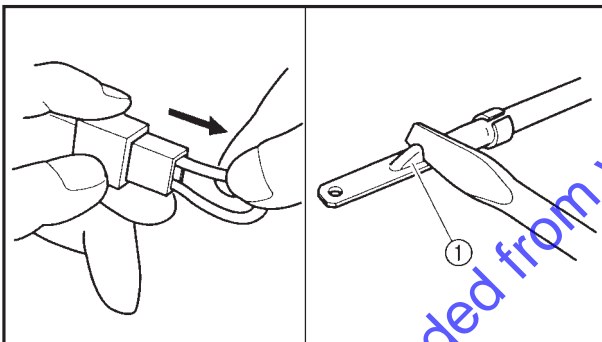

3. Check:
  - all connections

Loose connection → Connect properly.


**NOTE:** \_\_\_\_\_  
If the pin ① on the terminal is flattened, bend it up.

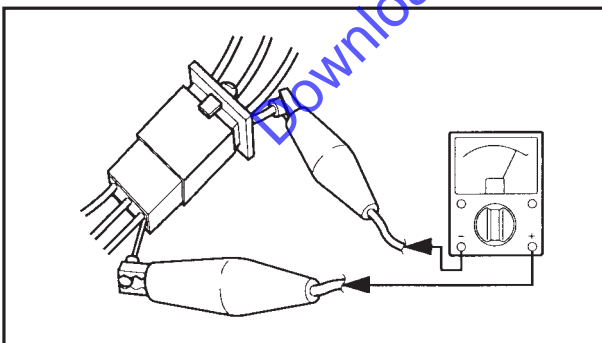

4. Connect:
  - lead
  - coupler
  - connector


**NOTE:** \_\_\_\_\_  
Make sure all connections are tight.

5. Check:
  - continuity  
(with the pocket tester)

	<b>Pocket tester</b> <b>90890-03112(YU-03112-C)</b>
---	--

**NOTE:** \_\_\_\_\_

- If there is no continuity, clean the terminals.
- When checking the wire harness, perform steps (1) to (3).
- As a quick remedy, use a contact revitalizer available at most part stores.

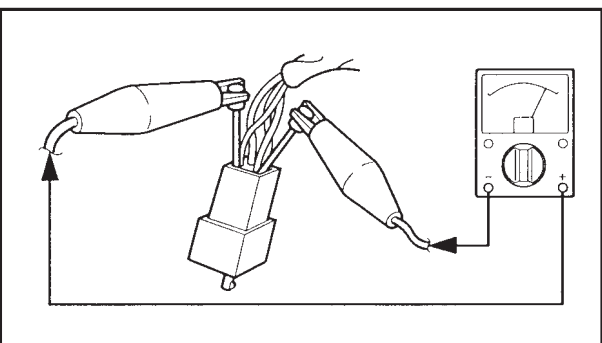

EAS00027



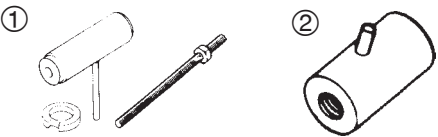



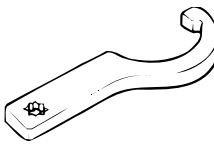
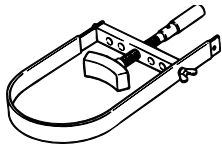
**SPECIAL TOOLS**











The following special tools are necessary for complete and accurate tune-up and assembly. Use only the appropriate special tools as this will help prevent damage caused by the use of inappropriate tools or improvised techniques. Special tools, part numbers or both may differ depending on the country.

When placing an order, refer to the list provided below to avoid any mistakes.


**NOTE:**


- For U.S.A. and Canada, use part number starting with "YM-", "YU-", or "ACC-".
- For others, use part number starting with "90890-".

Tool NO.	Tool name / Function	Illustration
90890-01235 YU-01235	Rotor holding tool  This tool is used to hold the generator rotor when removing or installing and generator rotor bolt.	
90890-01337 YM-33285 YM-33285-6	Clutch spring holder  These tool are used for removing the nut with holding the compression spring.	
90890-01284 YU-90050 90890-01383 YU-90062	Crankshaft installer set ① Adapter ②  These tools are used to install the crankshaft.	
90890-01189 YU-01189	Flywheel puller  This tool is used to remove the generator rotor.	
90890-01135 YU-01135-B	Crankcase separating tool  This tool is used to remove the crankshaft or separate the crankcase.	
90890-01384 YM-33299	Oil seal guide  This tool is used for protecting the oil seal lip when installing the secondary sliding sheave.	
90890-01403 YU-A9472	Steering nut wrench  This tool is used to loosen and tighten the steering ring nut.	
90890-01701 YS-01880-A	Sheave holder  This tool is used for holding the secondary sheave.	

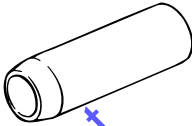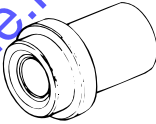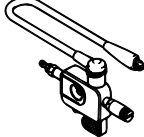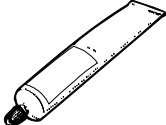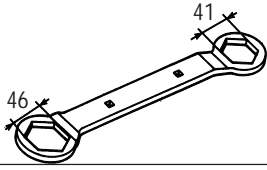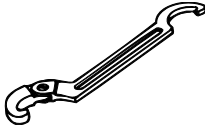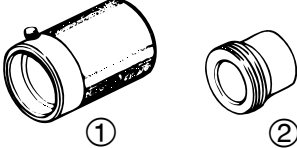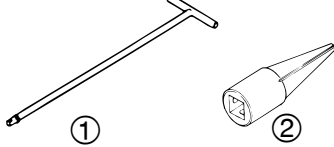Tool NO.	Tool name / Function	Illustration
90890-06760	Digital tachometer  This tool is needed for detecting engine rpm.	
90890-03112 YU-03112-C	Pocket tester  This instrument is invaluable for checking the electrical system.	
90890-01409 YM-01409	Oil seal guide  This tool is used to install the left side crankcase oil seal.	
90890-01410 YM-01410	Oil seal installer  This tool is used to install the left side crankcase oil seal.	
90890-06754 YM-34487	Ignition checker  This tool is used to check the ignition system components.	
90890-85505 ACC-11001-05-01	Yamaha bond NO.1215 Sealant (Quick Gasket®) This sealant (bond) is used on crankcase mating surfaces (e.g., crankcase mating surfaces).	
90890-01348 YM-01348	Locknut wrench  This tool is used when removing or installing the secondary sheave nut.	
90890-01268 YU-01268	Ring nut wrench  This tool is used to loosen and tighten the steering ring nut.	
90890-01367 YM-A9409-7 90890-01400 YM-A9409-3	Fork seal driver weight ① Fork seal driver attachment ②  These tools are used when installing the fork seal.	
90890-01326 YM-01326 90890-01294 YM-01300-1	T-handle ① Damper rod holder ②  These tools are used to hold the damper rod when removing or installing the damper rod.	

SPECIAL TOOLS



Tool NO.	Tool name / Function	Illustration
90890-01312 YM-01312-A	Fuel level gauge  This gauge is used to measure the fuel level in the float chamber.	

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

---

## CHAPTER 2 SPECIFICATIONS

<b>GENERAL SPECIFICATIONS .....</b>	<b>2-1</b>
<b>ENGINE SPECIFICATIONS .....</b>	<b>2-2</b>
<b>CHASSIS SPECIFICATIONS .....</b>	<b>2-6</b>
<b>ELECTRICAL SPECIFICATIONS .....</b>	<b>2-9</b>
<b>CONVERSION TABLE .....</b>	<b>2-12</b>
<b>GENERAL TIGHTENING TORQUE SPECIFICATIONS .....</b>	<b>2-12</b>
<b>TIGHTENING TORQUES .....</b>	<b>2-13</b>
ENGINE .....	2-13
CHASSIS .....	2-14
<b>LUBRICATION POINTS AND LUBRICANT TYPES .....</b>	<b>2-16</b>
ENGINE .....	2-16
CHASSIS .....	2-17
<b>CABLE ROUTING .....</b>	<b>2-18</b>

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)



## SPECIFICATIONS


## GENERAL SPECIFICATIONS

Item	Standard	Limit
<b>Model</b>		
Code	5PJ5 (USA) 5PN6 (CAN)	... ...
<b>Dimensions</b>		
Overall length	1890mm (74.41in)	...
Overall width	705mm (27.76in)	...
Overall height	1110mm (43.70in)	...
Seat height	765mm (30.12in)	...
Wheelbase	1275mm (50.20in)	...
Minimum ground clearance	120mm (4.72in)	...
Minimum turning radius	1800mm (70.87in)	...
<b>Weight</b>		
Wet (without oil and a full fuel tank)	94kg (207lb)	...
Dry (without oil and fuel)	90kg (198lb)	...
Maximun load (total of cargo, rider, passenger, and accessories)	143kg (315lb)	...


Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)





**ENGINE SPECIFICATIONS**

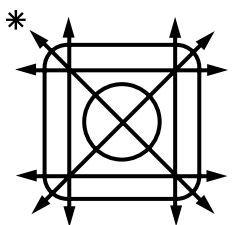Item	Standard	Limit
<b>Engine</b>		
Engine type	Air-cooled 2-stroke reed valve	...
Displacement	0.049L (49cm <sup>3</sup> , 2.99cu-in)	...
Cylinder arrangement	Forward inclined single cylinder	...
Bore x stroke	40.0 x 39.2mm (1.57 x 1.54in)	...
Compression ratio	7.01:1	...
Engine idle speed	1800 ~ 1900r/min	...
<b>Fuel</b>		
Recommended fuel	Unleaded gasoline only (USA) Regular unleaded gasoline only (CAN)	...
Fuel tank capacity Total	5.7L (1.25 Imp gal, 1.50 US gal)	...
<b>Engine oil</b>		
Lubrication system	Separate lubrication	...
Recommended oil	YAMALUBE 2 or air cooled 2-stroke engine oil	...
Quantity Oil tank	1.4L (1.23 Imp qt, 1.48 US qt)	...
<b>Final gear oil</b>		
Recommended oil	SAE85W140 hypoid gear oil	...
Periodic oil change	0.11L (0.10 Imp qt, 0.12 US qt)	...
Total amount	0.13L (0.12 Imp qt, 0.14 US qt)	...
<b>Air filter</b>		
Air filter type	Wet element	...
<b>Starting system type</b>		
	Electric and kick starter	...
<b>Carburetor</b>		
Type	Y14P-13E	...
Manufacturer	TEIKEI	...
<b>Spark plug</b>		
Model (manufacturer) x quantity	BPR7HS (NGK ) x 1	...
Spark plug gap	0.6 ~ 0.7mm (0.024 ~ 0.028in)	...
<b>Cylinder head</b>		
Volume	5.54 ~ 5.84cm <sup>3</sup> (0.34 ~ 0.36cu-in)	...
Maximum warpage	...	0.05mm (0.0020in)
		
* Lines indicate straightedge measurement		

# ENGINE SPECIFICATIONS




Item	Standard	Limit
<b>Cylinder</b>		
Bore	40.000 ~ 40.014mm (1.5748 ~ 1.5754in)	...
Maximum taper	...	0.05mm (0.0020in)
Maximum out-of-round	...	0.05mm (0.0020in)
<b>Piston</b>		
Piston-to-cylinder clearance	0.035 ~ 0.040mm (0.0014 ~ 0.0016in)	0.10mm (0.0039in)
Diameter D	39.960 ~ 39.979mm (1.5732 ~ 1.5739in)	...
Height H	5.0mm (0.1969in)	...
Piston pin bore (in the piston) Diameter	10.004 ~ 10.015mm (0.3939 ~ 0.3943in)	10.045mm (0.3955in)
Piston pin Outside diameter	9.996 ~ 10.000mm (0.3935 ~ 0.3937in)	9.976mm (0.3928in)
Piston rings		
Section sketch (B × T)/type		
Top ring	1.2 × 1.6mm/keystone (0.0472 × 0.0630in)	...
2nd ring	1.2 × 1.6mm/keystone (0.0472 × 0.0630in)	...
End gap (installed)		
Top ring	0.15 ~ 0.35mm (0.0059 ~ 0.0138in)	0.6mm (0.0236in)
2nd ring	0.15 ~ 0.35mm (0.0059 ~ 0.0138in)	0.7mm (0.0276in)
Side clearance (installed)		
Top ring	0.03 ~ 0.05mm (0.0012 ~ 0.0020in)	0.1mm (0.0039in)
2nd ring	0.03 ~ 0.05mm (0.0012 ~ 0.0020in)	0.11mm (0.0043in)
<b>Connecting rod</b>		
Connecting rod length	79.9~80.1mm (3.1457~3.1535in)	...
Small end inside diameter	13.996~14.007mm (0.5510~0.5515in)	...

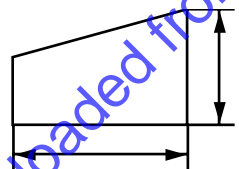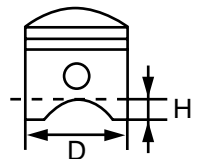


Downloaded from www.ScooterTime.net

# ENGINE SPECIFICATIONS



Item	Standard	Limit
<b>Crankshaft</b>		
Width "A"	37.90 ~ 37.95mm (1.4921 ~ 1.4941in)	...
Maximum runout "C"	...	0.03mm (0.0012in)
Big end side clearance "D"	0.20 ~ 0.50mm (0.0079 ~ 0.0197in)	1.00mm (0.0394in)
Big end radial clearance	0.004 ~ 0.017mm (0.0002 ~ 0.0007in)	...
Small end free play "F"	0.40 ~ 0.80mm (0.0157 ~ 0.0315in)	...
<b>Clutch</b>		
Clutch type	Automatic centrifugal	...
Clutch shoe thickness	2.5mm (0.10in)	1.0mm (0.04in)
Clutch shoe spring free length	26.2mm (1.03in)	...
Clutch housing inside diameter	105mm (4.13in)	105.5mm (4.15in)
Compression spring free length	65.1mm (2.56in)	61.8mm (2.43in)
Weight outside diameter	15.0mm (0.59in)	14.5mm (0.57in)
Clutch - in revolution	2800 ~ 3200r/min	...
Clutch - stall revolution	4500 ~ 5500r/min	...
<b>V-belt</b>		
V-belt width	16.5mm (0.65in)	14.8mm (0.58in)
<b>Kickstarter</b>		
Type	Ratchet	...
Kick clip tension	0.7 ~ 2N (0.07 ~ 0.2kgf) (0.15 ~ 0.44lb)	...
<b>Transmission</b>		
Transmission type	V-belt automatic	...
Primary reduction system	Helical gear	...
Primary reduction ratio	52/13 (4.000)	...
Secondary reduction system	Super gear	...
Secondary reduction ratio	43/13 (3.307)	...
Single speed automatic	2.693 ~ 0.889:1	...
Maximum main axle runout	...	0.02mm (0.0008in)
Maximum drive axle runout	...	0.02mm (0.0008in)

# ENGINE SPECIFICATIONS




Item	Standard	Limit
<b>Carburetor</b>		
ID mark	5PJ5 00	...
Main jet (M.J.)	# 80	...
Needle jet (N.J.)	2.085	...
Jet needle-clip position (J.N.)	3N24-1/1	...
Main air jet (M.A.J.)	2.0	...
Cutaway (C.A.)	3.0	...
Pilot jet (P.J.)	# 44	...
Bypass	0.8	...
Valve seat size (V.S.)	1.8	...
Starter jet (St.J.)	0.45	...
Float height	15 ~ 17mm (0.59 ~ 0.67in)	...
Fuel level height	3.0 ~ 4.0mm (0.12 ~ 0.16in)	...
Engine idle speed	1800 ~ 1900r/min	...
<b>Reed valve</b>		
Thickness	0.132 ~ 0.172mm (0.0052 ~ 0.0068in)	...
Valve stopper height	5.9 ~ 6.5mm (0.23 ~ 0.26in)	...
Valve bending limit	...	0.2mm (0.0078in)

Downloaded from www.ScooterTime.net

**CHASSIS SPECIFICATIONS**


Item	Standard	Limit
<b>Frame</b>		
Frame type	Steel tube underbone	...
Caster angle	26.5°	...
Trail	93mm (3.66in)	...
<b>Front wheel</b>		
Wheel type	Cast wheel	...
Rim		
Size	J10 × MT3.50	...
Material	Aluminum	...
Wheel travel	61mm (2.40in)	...
Wheel runout		
Maximum radial wheel runout	...	1.0mm (0.04in)
Maximum lateral wheel runout	...	1.0mm (0.04in)
Wheel axle bending limit	...	0.45mm (0.02in)
<b>Rear wheel</b>		
Wheel type	Cast wheel	...
Rim		
Size	J10 × MT3.50	...
Material	Aluminum	...
Wheel travel	76mm (2.99in)	...
Wheel runout		
Maximum radial wheel runout	...	1.0mm (0.04in)
Maximum lateral wheel runout	...	0.5mm (0.02in)
<b>Front tire</b>		
Tire type	Tubeless	...
Size	120/90-10 56J	...
Model (manufacturer)	C-6022 (CHENG SHIN)	...
Tire pressure (cold)		
Up to 90kg (198lb) load	200kPa (2.00kgf/cm <sup>2</sup> , 29psi)	...
90kg (198lb) load ~ Maximum load*	200kPa (2.00kgf/cm <sup>2</sup> , 29psi)	...
Minimum tire tread depth	...	0.8mm (0.03in)

# CHASSIS SPECIFICATIONS



Item	Standard	Limit
<b>Rear tire</b> Tire type Size Model (manufacturer) Tire pressure (cold) Up to 90kg (198lb) load 90kg (198lb) load ~ Maximum load* Minimum tire tread depth	Tubeless 130/90-10 59J C-924 (CHENG SHIN) 200kPa (2.00kgf/cm <sup>2</sup> , 29psi) 200kPa (2.00kgf/cm <sup>2</sup> , 29psi) ...	... ... ... ... ... 0.8mm (0.03in)
<b>Front brake</b> Brake type Operation Disk outside diameter × thickness  Pad thickness  Master cylinder inside diameter Caliper cylinder inside diameter Brake fluid type	Single disk brake Right-hand operation 180 × 4.0mm (7.09 × 0.16in) 4.0mm (0.16in)  11mm (0.43in) 30.16mm (1.19in) DOT 4 or DOT3	... ... 180 × 3.5mm (7.09 × 0.14in) 0.8mm (0.03in)  ... ... ...
<b>Rear brake</b> Brake type Operation Brake drum inside diameter  Lining thickness	Drum brake Left-hand operation 130mm (5.12in)  4.0mm (0.16in)	... ... 131mm (5.16in) 2.0mm (0.08in)
<b>Brake lever</b> Brake lever free play (front lever end) Brake lever free play (rear lever end) Throttle cable free play	2 ~ 5mm (0.08 ~ 0.20in) 10 ~ 20mm (0.39 ~ 0.79in) 1.5 ~ 3.5mm (0.06 ~ 0.14in)	... ... ...

# CHASSIS SPECIFICATIONS



Item	Standard	Limit
<b>Front suspension</b>		
Suspension type	Telescopic fork	...
Front fork type	Coil spring/oil damper	...
Front fork travel	70mm (2.76in)	...
Spring		
Free length	217.1mm (8.55in)	212.8mm (8.38in)
Installed length	212.1mm (8.35in)	...
Spring rate (K1)	15.69N/mm (1.60kg/mm, 90lb/in)	...
Spring rate (K2)	23.8N/mm (2.43kg/mm, 136lb/in)	...
Spring stroke (K1)	0 ~ 40mm (0 ~ 1.57in)	...
Spring stroke (K2)	40 ~ 70mm (1.57 ~ 2.76in)	...
Optional spring available	No	...
Fork oil		
Recommended oil	Fork oil 10W or equivalent	...
Quantity (each front fork leg)	0.088L (0.084 Imp qt, 0.092 US qt)	...
Inner tube outer diameter	30mm (1.18in)	...
Inner tube bending limit	...	0.2mm (0.01in)
<b>Steering system</b>		
Steering bearing type	Angular bearing	...
Lock-to-lock angle (left)	45°	...
Lock-to-lock angle (right)	45°	...
<b>Rear suspension</b>		
Suspension type	Unit swing	...
Rear shock absorber assembly type	Coil spring / oil damper	...
Rear shock absorber assembly travel	55mm (2.17in)	...
Spring		
Free length	159.8mm (6.29in)	...
Installed length	152.8mm (6.02in)	...
Spring rate (K1)	71.15N/mm (7.26kg/mm, 407lb/in)	...
Spring stroke (K1)	0 ~ 55mm (0 ~ 2.17in)	...
Optional spring available	No	...




## ELECTRICAL SPECIFICATIONS

Item	Standard	Limit
<b>System voltage</b>	12V	...
<b>Ignition system</b>		
Ignition system type	C.D.I.	...
Ignition timing	14° BTDC at 5000r/min	...
Advancer type	Fixed	...
Pick coil resistance/color	400 ~ 600Ω at 20°C (68°F)/ black - white/red	...
C.D.I. unit model (manufacturer)	5PJ (T-MORIC)	...
<b>Ignition coil</b>		
Model (manufacturer)	2JN (T-MORIC)	...
Minimum ignition spark gap	6mm (0.24in)	...
Primary coil resistance	0.184 ~ 0.276Ω at 20°C (68°F)	...
Secondary coil resistance	6.32 ~ 9.48kΩ at 20°C (68°F)	...
<b>Spark plug cap</b>		
Material	Resin	...
Resistance	4 ~ 6kΩ at 20°C (68°F)	...
<b>Charging system</b>		
System type	AC magneto	...
Model (manufacturer)	F5PJ (T-MORIC)	...
Nominal output	12V 85W/5000r/min	...
Charging current	0.6A at 3000r/min 1.2A at 8000r/min	...
Charging coil resistance/color	0.48 ~ 0.72Ω/white - black	...
Lighting voltage	12V at 3000r/min 15V at 8000r/min	...
Lighting coil resistance/color	0.4 ~ 0.6Ω/yellow/red - black	...
Source coil resistance/color	640 ~ 960Ω at 20°C (68°F)/ black - black/red	...
<b>Rectifier</b>		
Model (manufacturer)	SH614-12 (SHIN DEN GEN)	...
No load regulated voltage (DC)	14 ~ 15V	...
No load regulated voltage (AC)	13 ~ 14V	...
Rectifier capacity	8A	...
Withstand voltage	18V	...
<b>Battery</b>		
Battery type (manufacturer)	GTX5L-BS (GS)	...
Battery voltage/capacity	12V/4AH	...
Specific gravity	1.330	...
Ten hour rate amperage	0.4A	...




# ELECTRICAL SPECIFICATIONS



Item	Standard	Limit
<b>Headlight type</b>	Halogen bulb	...
<b>Indicator light (voltage/wattage × quantity)</b>		
Turn signal indicator light	12V 1.7W × 1	...
High beam indicator light	12V 1.7W × 1	...
Oil level indicator light	12V 1.7W × 1	...
<b>Bulbs (voltage/wattage × quantity)</b>		
Headlight	12V 35/35W × 1	...
Tail/brake light	12V 5/21W × 1	...
Front turn signal light	12V 10W × 2	...
Rear turn signal light	12V 10W × 2	...
License plate light	12V 5W × 1	...
Speedometer light	12V 3.4W × 1, 1.7W × 1	...
<b>Electric starting system</b>		
System type	Constant mesh	...
Starter motor		
Model (manufacturer)	4WX 01 (SHINLIN)	...
Suction voltage	12V	...
Power output	0.14kW	...
Brushes		
Overall length	6.5mm (0.26in)	3.0mm (0.12in)
Spring force	5.49 ~ 8.24N (360 ~ 540gf, 12.69 ~ 19.04oz)	...
Commutator diameter	16.1mm (0.63in)	15.1mm (0.59in)
Armature coil resistance	0.063 ~ 0.077Ω at 20°C (68°F)	...
Mica undercut (depth)	1.05mm (0.04in)	...
<b>Starter relay</b>		
Model (manufacturer)	4WX 00 (SHINLIN)	...
Amperage	20A	...
Coil resistance	54 ~ 66Ω	...
<b>Horn</b>		
Horn type	Plane	...
Model (manufacturer)	AH-368 (SAKURA)	...
Maximum amperage	1.5A	...
Performance	95 ~ 105dB/2m	...
Coil resistance	4.05 ~ 4.55Ω at 20°C (68°F)	...
<b>Turn signal relay</b>		
Relay type	Condenser	...
Model (manufacturer)	5PJ1 (TAYOUNG)	...
Self-cancelling device built-in	NO	...
Turn signal blinking frequency	75 ~ 95cycles/minute	...
Wattage	10W × 2 + 1.7W+ AP	...

# ELECTRICAL SPECIFICATIONS



Item	Standard	Limit
<b>Fuse (amperage x quantity)</b> Main fuse	7A x 1	...
<b>Fuel sender</b> Model (manufacturer) Sender unit resistance - full Sender unit resistance - empty	4VP (TATUNG) 4 ~ 10Ω 90 ~ 100Ω	... ... ...
<b>Oil lever gauge</b> Model (manufacturer)	4VP (LUN PING)	...

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

# CONVERSION TABLE / GENERAL TIGHTENING TORQUE SPECIFICATIONS

**SPEC**



EAS00028

## CONVERSION TABLE

All specification data in this manual are listed in SI and METRIC UNITS.

Use this table to convert METRIC unit data to IMPERIAL unit data.

Ex.

METRIC	MULTIPLIER	IMPERIAL
** mm	0.03937	** in
2 mm	0.03937	0.08 in


## CONVERSION TABLE

METRIC TO IMPERIAL			
	Metric unit	Multiplier	Imperial unit
Tightening torque	m·kg	7.233	ft·lb
	m·kg	86.794	in·lb
	cm·kg	0.0723	ft·lb
	cm·kg	0.8679	in·lb
Weight	kg	2.205	lb
	g	0.03527	oz
Speed	km/hr	0.6214	mph
Distance	km	0.6214	mi
	m	3.281	ft
	m	1.094	yd
	cm	0.3937	in
	mm	0.03937	in
Volume/ Capacity	cc (cm <sup>3</sup> )	0.03527	oz (IMP liq.)
	cc (cm <sup>3</sup> )	0.06102	cu-in
	lt (liter)	0.8799	qt (IMP liq.)
	lt (liter)	0.2199	gal (IMP liq.)
Misc.	kg/mm	55.997	lb/in
	kg/cm <sup>2</sup>	14.2234	psi (lb/in <sup>2</sup> )
	Centigrade (°C)	9/5+32	Fahrenheit (°F)

EAS00030

## GENERAL TIGHTENING TORQUE SPECIFICATIONS

This chart specifies tightening torques for standard fasteners with a standard ISO thread pitch. Tightening torque specifications for special components or assemblies are provided for each chapter of this manual. To avoid warpage, tighten multi-fastener assemblies in a crisscross pattern and progressive stages until the specified tightening torque is reached. Unless otherwise specified, tightening torque specifications require clean, dry threads. Components should be at room temperature.

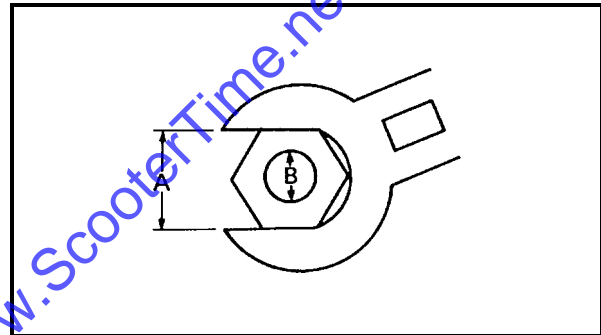

A: Width across flats



B: Thread diameter

A (nut)	B (bolt)	General tightening torques		
		Nm	m·kg	ft·lb
10 mm	6 mm	6	0.6	4.3
12 mm	8 mm	15	1.5	11
14 mm	10 mm	30	3.0	22
17 mm	12 mm	55	5.5	40
19 mm	14 mm	85	8.5	61
22 mm	16 mm	130	13.0	94




## TIGHTENING TORQUES

### ENGINE

Part to be tightened	Part name	Thread size	Q'ty	Tightening torque			Remarks
				Nm	m•kg	ft•lb	
Spark plug	—	M 14	1	20	2.0	14	
Cylinder head and cylinder	Nut	M 7	4	14	1.4	10	
Cylinder	Stud bolt	M 7	4	10	1.0	7	
Air shroud 1	Screw	M 6	3	7	0.7	5.1	
Air shroud 1x 2	Screw	6.0	1	2	0.2	1.4	
Fan	Screw	M 6	3	7	0.7	5.1	
Autolube pump	Screw	M 5	2	4	0.4	2.8	
Reed valve	Bolt	M 6	4	11	1.1	8.0	
Air filter	Screw	M 6	2	9	0.9	6.5	
Carburetor cap	Screw	M 4	2	2	0.2	1.4	
Exhaust pipe	Screw	M 6	2	9	0.9	6.5	
Muffler	Bolt	M 8	2	26	2.6	18.2	
Exhaust protector	Bolt	M 6	3	11	1.1	8.0	
Protector	Screw	M 6	1	9	0.9	6.5	
Crankcase 1x 2	Bolt	M 6	6	12	1.2	8.4	
Transmission case cover	Bolt	M 6	6	12	1.2	8.4	
Crankcase cover 1(left)	Bolt	M 6	12	12	1.2	8.4	
Bolt(case2)	Screw	M 6	1	7	0.7	5.1	
Crankcase cover2(left)	Bolt	M 6	3	7	0.7	5.1	
Drain bolt	Bolt	M 8	1	18	1.8	13	
Oil plug	Plug	M 14	1	3	0.3	22	
Idle gear plate	Screw	M 6	2	8	0.8	5.8	
Kick crank	Bolt	M 6	1	9	0.9	6.5	
Starter motor	Bolt	M 6	2	13	1.3	9.4	
Clutch housing	Nut	M 10	1	40	4.0	29	
Clutch weight	Nut	M 10	1	30	3.0	22	
Magnet base	Screw	M 6	2	8	0.8	5.8	
C.D.I. rotor	Nut	M 10	1	38	3.8	27	

# TIGHTENING TORQUES




## CHASSIS

Part to be tightened	Thread size	Tightening torque			Remarks
		Nm	m•kg	ft•lb	
Frame and engine bracket	M 12	84	8.4	61	See "NOTE"
Engine bracket, compression rod and engine	M 10	45	4.5	31	
Rear carrier	M 6	13	1.3	9.4	
Rear shock absorber and frame	M 10	30	3.0	22	
Rear shock absorber and engine	M 8	16	1.6	12	
Steering ring nut	M 25				
Handle holder and steering shaft	M 10	60	6.0	43.4	
Brake hose and master cylinder	M 8	20	2.0	14	
Fuel tank	M 6	10	1.0	7	
Fuel cock	M 6	7	0.7	5.1	
Fuel sender	M 5	4	0.4	2.9	
Box	M 6	7	0.7	5.1	
Seat lock assembly	M 6	7	0.7	5.1	
Plastic parts & cover	M 5	2	0.2	1.4	
Footrest board	M 6	7	0.7	5.1	
Front wheel axle and nut	M 10	70	7.0	51	
Rear wheel axle and nut	M 14	120	12.0	87	
Rear brake cam lever	M 6	10	1.0	7.2	
Front brake caliper and front fork	M 8	23	2.3	16.6	
Brake disc and hub	M10	20	2.0	14.5	
Brake hose and caliper	M 8	23	2.3	16.6	
Brake caliper and bleed screw	M 5	6	0.6	4.3	

Downloaded from www.ScooterTime.net

**NOTE :**


1. First, tighten the ring nut(lower) approximately 38Nm(3.8m•kg, 27.5ft•lb) by using the torque wrench, then loosen the ring nut 1/4 turn.
2. Second, tighten the ring nut(lower) approximately 12Nm(1.2m•kg, 8.7ft•lb) by using the torque wrench.
3. Installing the rubber washer.
4. Then finger tighten the center ring nut and touch rubber washer. Align the slots both ring nut and install the lock washer.
5. Final, hold the ring nuts(lower and center) and tighten the ring nut(upper) 75Nm(7.5m•kg, 54.2ft•lb) by using the torque wrench.
6. Confirm, adjust the direction handlebar to the right direction, front wheel suspended. Push direction handlebar lightly with the finger (approximately 1.5kgf • cm), direction handlebar should turn slowly without interference or hindrance.

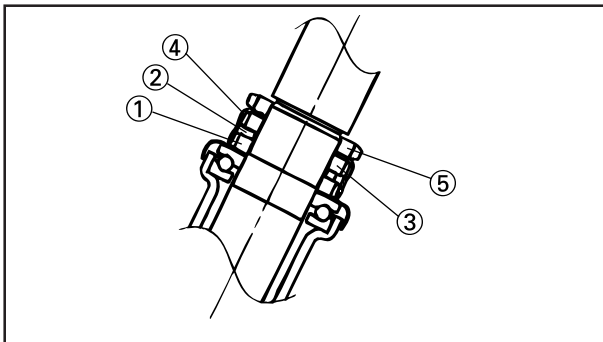

- ① Lower ring nut
- ② Rubber washer
- ③ Center ring nut
- ④ Lock washer
- ⑤ Upper ring nut

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

# LUBRICATION POINTS AND LUBRICANT TYPES




EAS00031

## LUBRICATION POINTS AND LUBRICANT TYPES ENGINE

Lubrication Point	Lubricant
Oil seal lips	
O-rings	
Bearings	
Piston surface	
Piston pin	
Cylinder	
Transmission case (bearing)	
Autolube pump	
Starter wheel gear	
Idle gear plate	
Secondary drive gear	
Kickstarter pinion gear	
Drive axle	
Pump drive gear	
Main axle	
Main axle (bearing)	

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

# LUBRICATION POINTS AND LUBRICANT TYPES



EAS00032

## CHASSIS

Lubrication Point	Lubricant
Oil seal lips	
O-rings	
Bearings	
Speedometer drive gear	
Front brake lever pivot shaft	
Rear brake lever pivot shaft	
Front brake camshaft	
Front brake cable	
Throttle cable	
Tube guide (throttle grip) inner surface	
Upper steering stem ring nut	
Upper bearing outer race	
Lower bearing outer race	
Rear brake camshaft	
Centerstand	

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)




EAS00035

**CABLE ROUTING**

- ① Horn
- ② Rectifier regulator
- ③ Main switch
- ④ Headlight leads
- ⑤ Speedometer cable
- ⑥ Ignition coil
- ⑦ Throttle cable 1
- ⑧ Throttle cable 3
- ⑨ Battery negative lead
- ⑩ Wire brake
- ⑪ Fuel sender lead
- ⑫ Seat lock cable
- ⑬ Oil tank hose
- ⑭ C.D.I. unit


- ⑮ Wire harness
- A Pass the speedometer cable through the right hole of front fender, then through the guide.
- B Pass the wire harness through the inside of ignition coil.
- C Secure the ground lead and the ignition coil base to the ignition coil stay.
- D Pass the wire harness through the inside of oil tank.
- E Pass the seat cable through the inside of frame.
- F Align the clip with the white brand.
- G Clamp the wire harness.
- H Insert the seat cable through the frame tube.
- I Clamp wireharness, rear brake cable throttle cable 1,3.
- J Position the cylinder between the supporter and main switch.

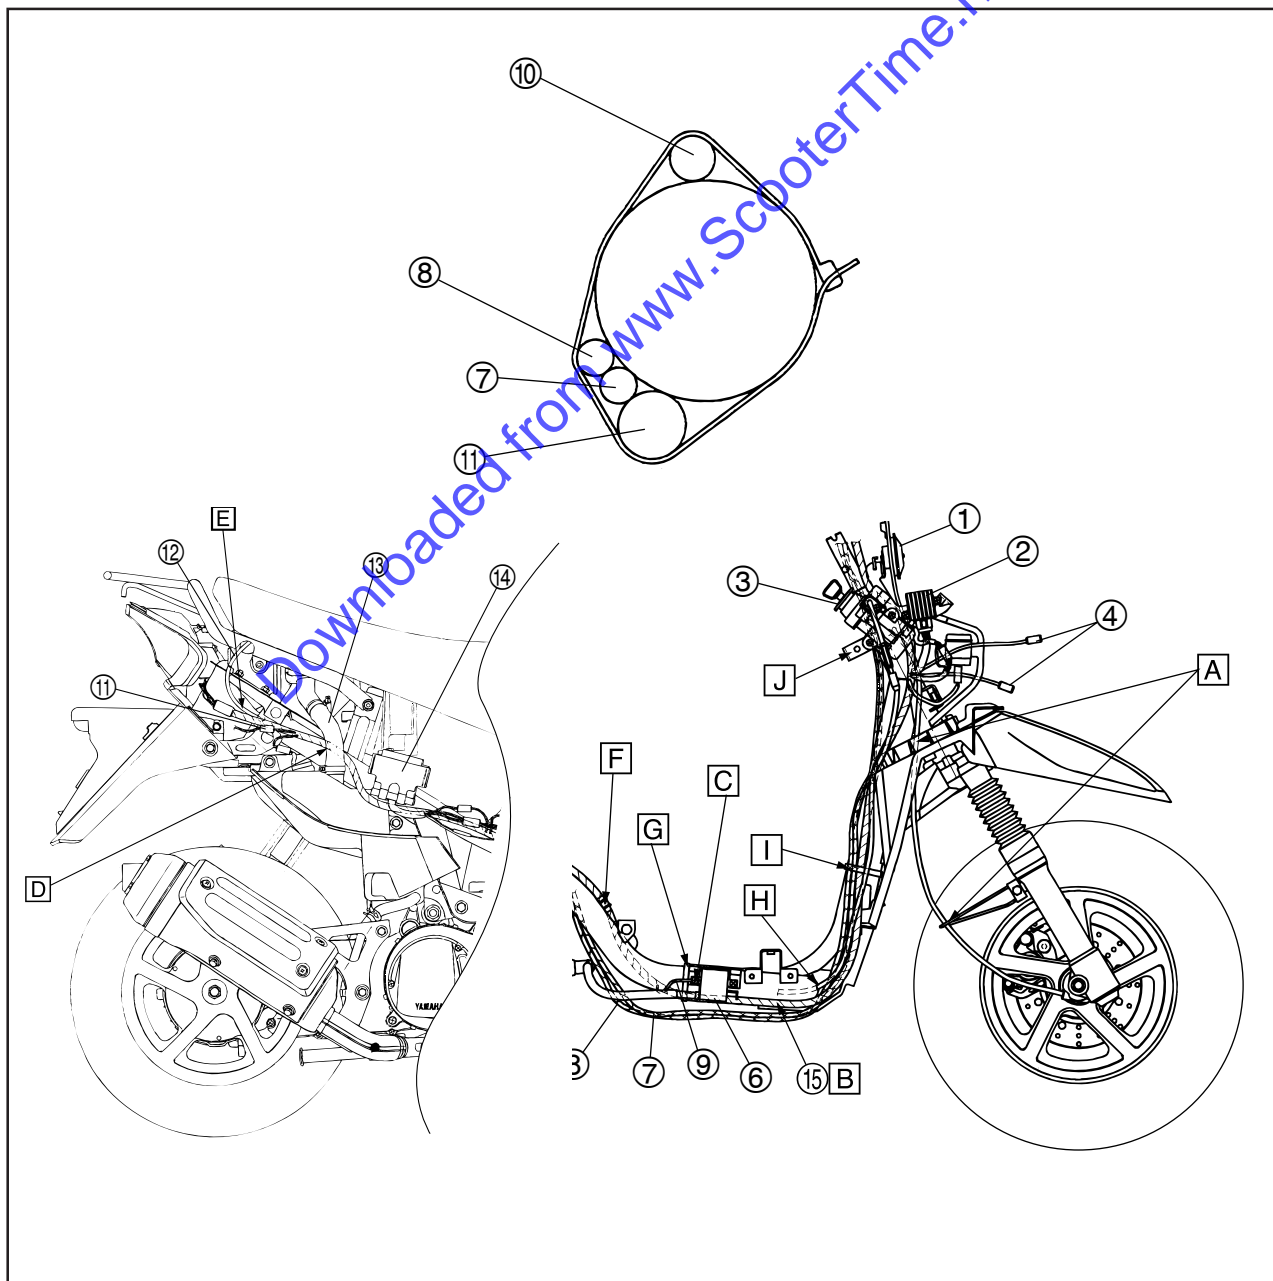



- ① Brake cable
- ② Speedometer cable
- ③ Fuel tank overflow hose
- ④ Brake cable holder
- ⑤ Brake hose
- ⑥ Brake hose holder
- ⑦ License bracket
- ⑧ Flasher relay
- ⑨ Fuel tank breather hose
- ⑩ Fuel hose
- ⑪ Breather hose


- A Pass the brake hose through the holder.
- B Insert the fuel overflowhose bottom.
- C Pass the fuel overflowhose through the rear fender hole.
- D Pass the fuel overflowhose through the holder.
- E Hold the fuel overflowhose with a clamp.
- F Pass the brake cable through the holder.

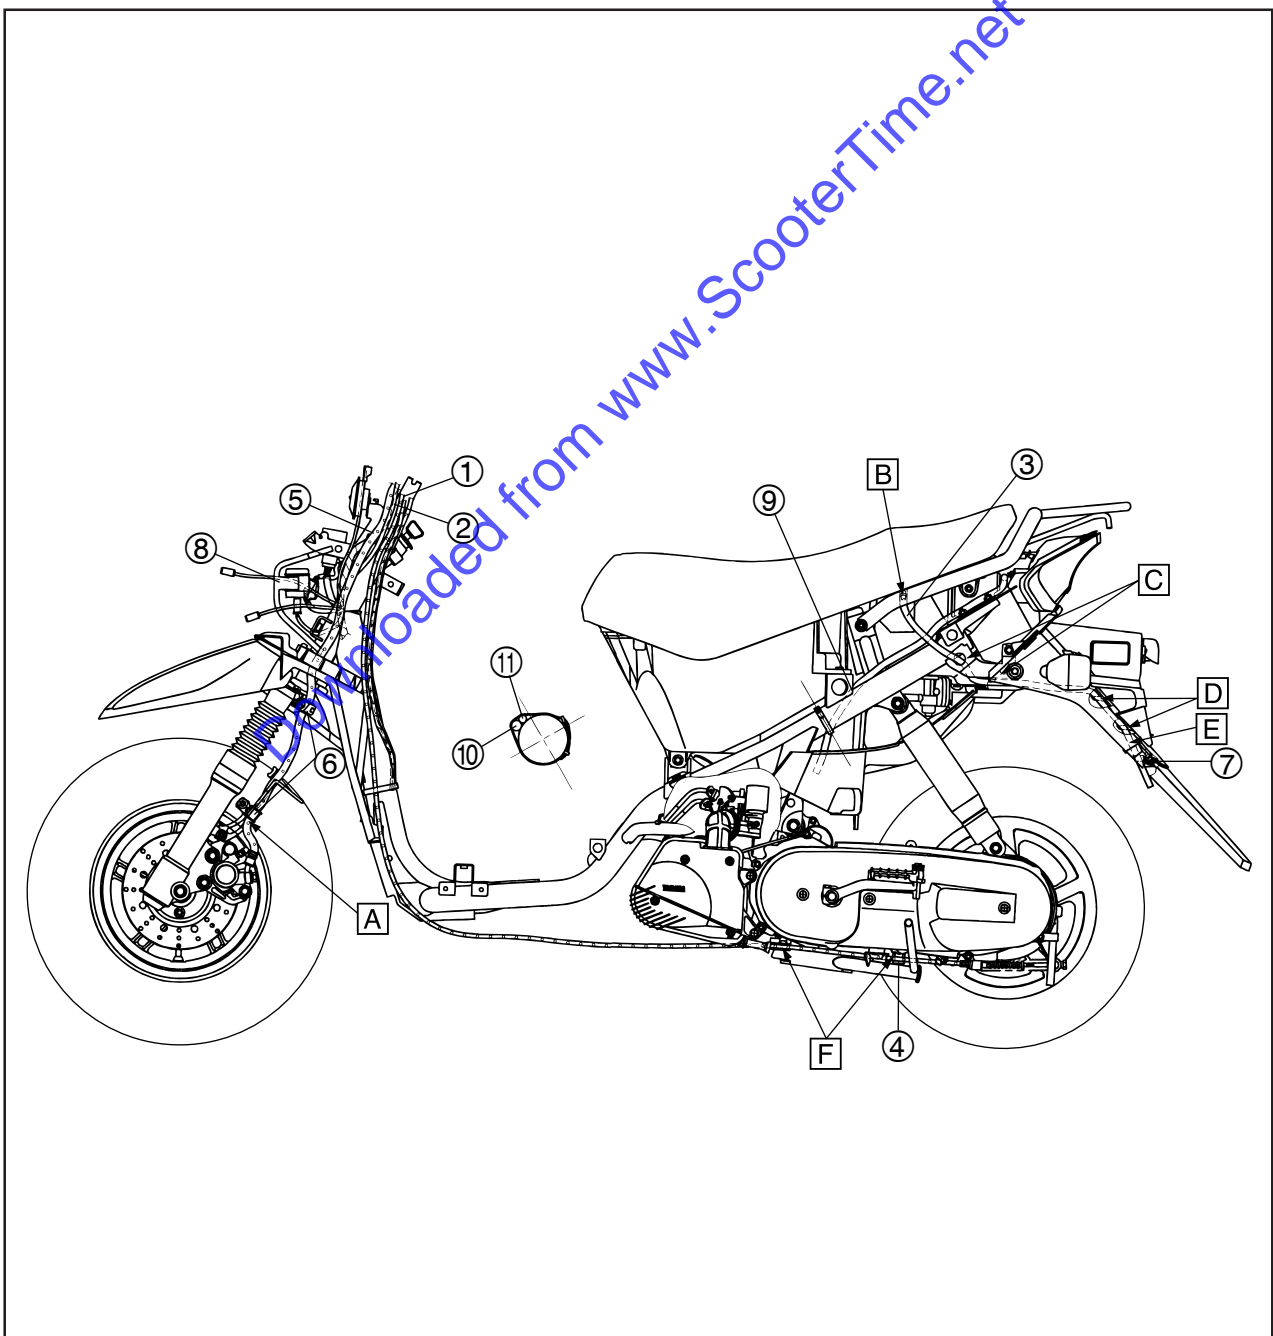



- ① Brake hose
- ② Front fender
- ③ Front fork assembly
- ④ Nut
- ⑤ Plate washer
- ⑥ Brake hose holder 1
- ⑦ Flange bolt
- ⑧ Brake hose holder 2
- ⑨ Bolt
- ⑩ Grommet
- ⑪ Flange bolt
- ⑫ Brake hose holder
- ⑬ Brake hose holder 3

- [A] Tighting torque:3.5 ~ 5.5Nm.
- [B] Assemble the brake hose holder 3 hang hook must certainty hook the brake hose holder.
- [C] Tighting torque:8.5 ~ 14Nm.
- [D] Tighting torque:3.5 ~ 5Nm.
- [E] Tighting torque:3.5 ~ 5.5Nm.
- [F] Pass the brake hose through the brake hose holder.

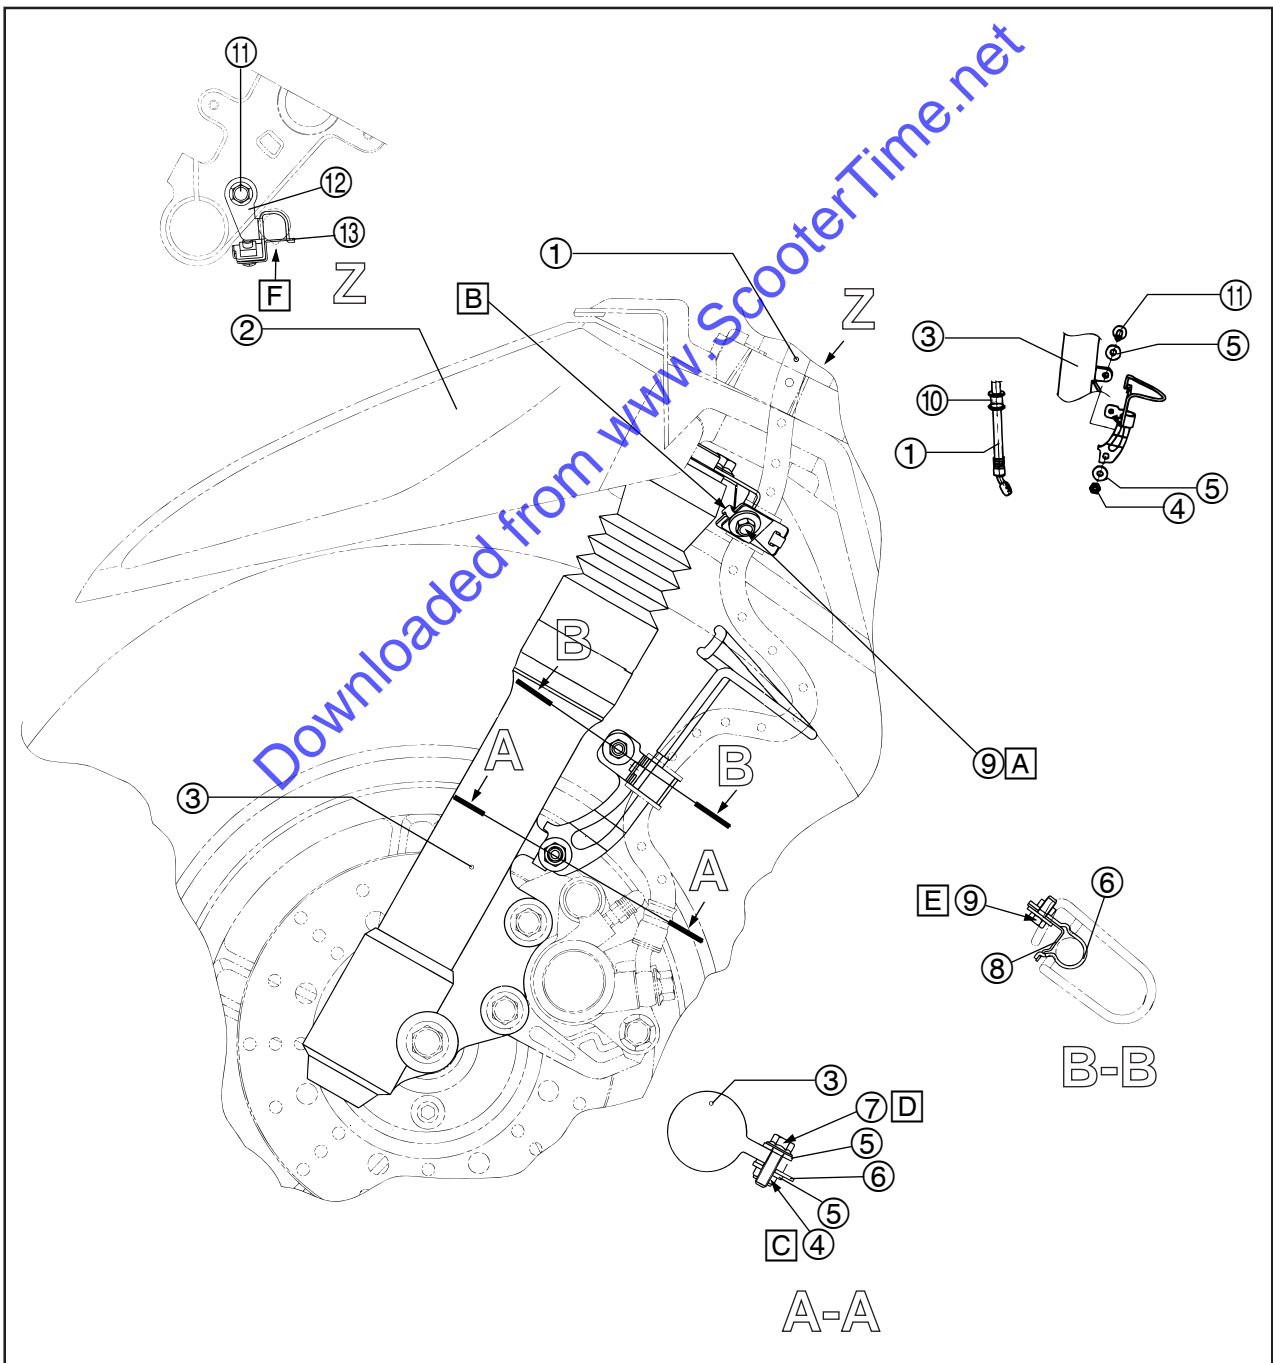




- ① Ignition coil
- ② Spark plug lead
- ③ Starter relay leads
- ④ Auto choke leads
- ⑤ Starter relay
- ⑥ Band
- ⑦ C.D.I. unit
- ⑧ Autolube hose
- ⑨ Seat lock cable
- ⑩ Bracket
- ⑪ Fuel tank breather hose
- ⑫ Band 2

- ⑬ Battery  $\ominus$  lead
- ⑭ Battery  $\oplus$  lead
- [A] Pass battery leads through the slot of footrestboard.
- [B] Cover them after securing starter relay leads.
- [C] Pass the seat lock cable through the hole of bracket.
- [D] Pass the fuel tank breath hose over seat lock cable.
- [E] Clamp carburetor vacuum hose, fuel hose and fuel cock vacuum hose.

- [F] Clamp autochoke leads and autolube hose on to carburetor throttle cable.
- [G] Pass the battery leads through the forward of cross pipe.
- [H] Put fuse box on to footrest board holder.
- [I] Pass throttle cable 1,3 wireharness, autolube pump cable, brake cable through the outside of battery box.

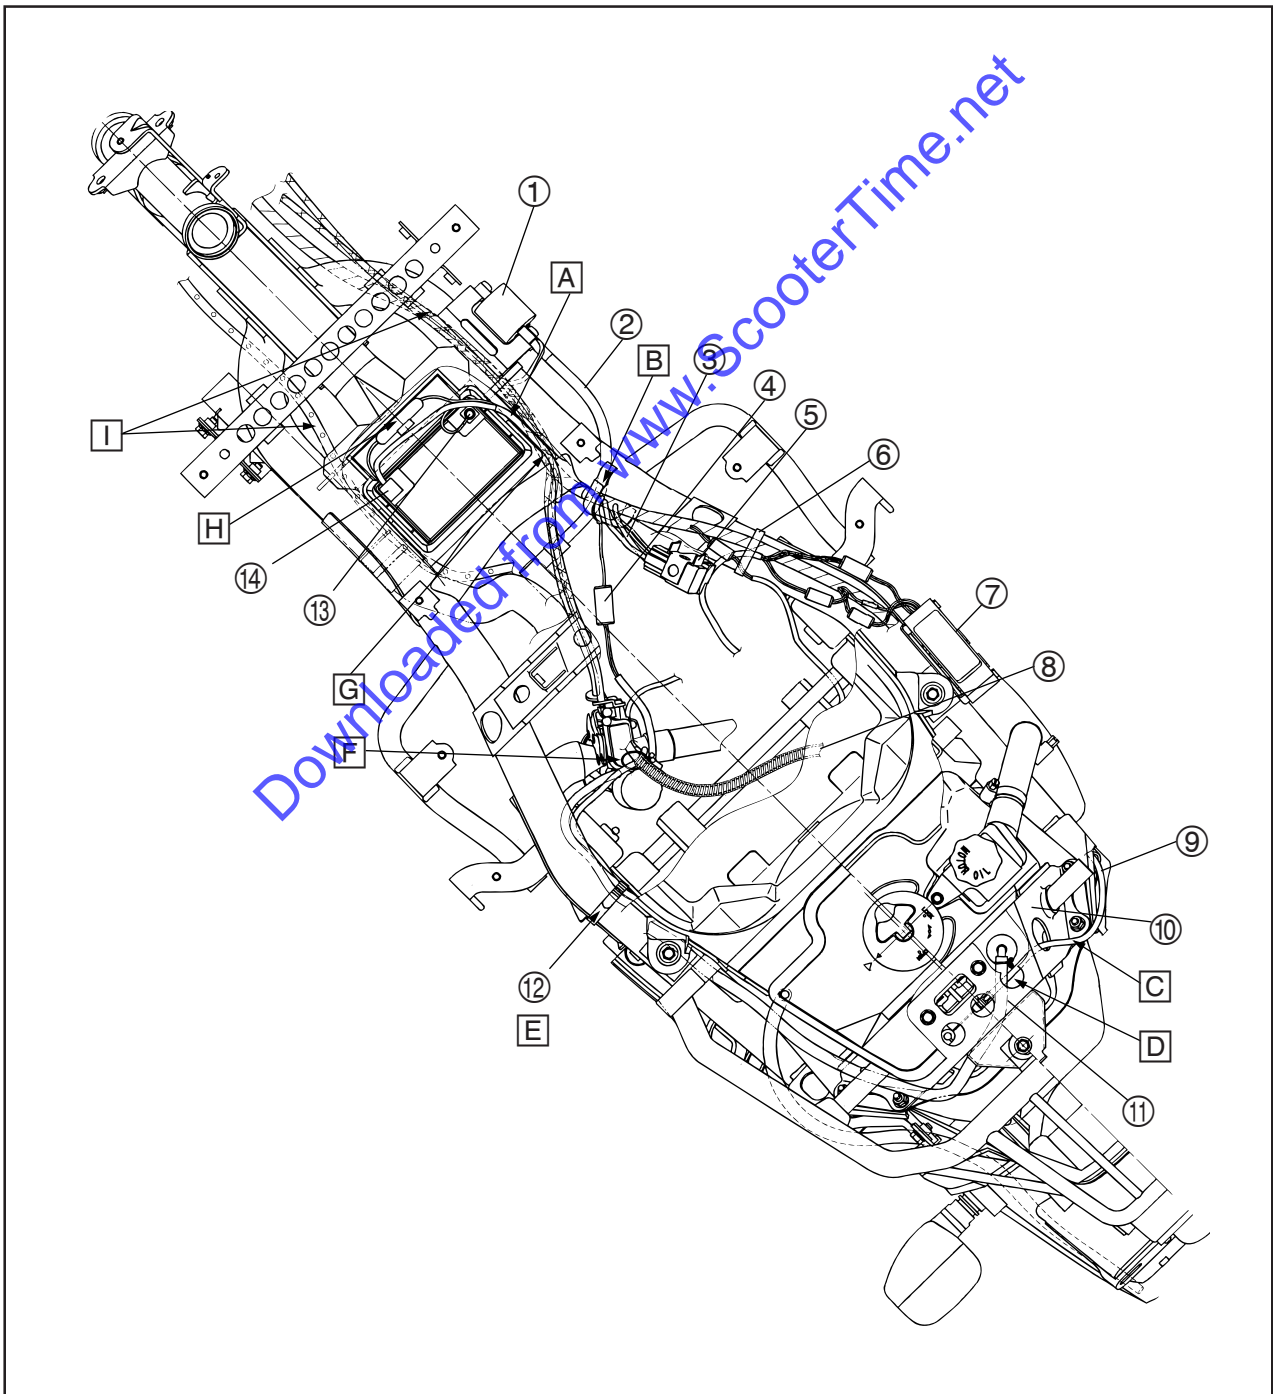




- ① Grip assembly
- ② Handlebar switch(right)
- ③ Front brake light switch
- ④ Speedometer
- ⑤ Rear brake cable
- ⑥ Handlebar switch(left)
- ⑦ Grip
- ⑧ Handlebar assembly
- ⑨ Wire harness
- ⑩ Throttle cable 1
- ⑪ Throttle cable 3
- ⑫ Speedometer cable
- ⑬ Brake hose

- A Route the front brake light switch lead through between the handlebar pipe and the brake hose.
- B Route the front brake light switch lead, left handlebar switch lead and front turn signal light lead through the backward of speedometer cable .

- C Route the front turn signal light lead through the slot of handlebar bracket and through the backward of rear brake cable.
- D Route the left handlebar switch lead through the backward of handlebar pipe.
- E Fasten the throttle cables, brake hose, wire harness, speedometer cable and rear brake cable to the frame and cut the end to be shorter than 5mm and reserve for a finger clearance, the position on the above of guide wire and align white point mark of wire harness.

- F Route the speedometer cable through between the frame and the brake hose to right side.
- G Route the throttle cable1,3 through between the handlebar, wire harness and brake hose to left side.
- H Connect the couplers securely in rear of the brake hose.
- I Pass the throttle cable1,3 through the hole in the handlebar cover1.
- J After adjusting the throttle cable free play, insert into the boots.
- K After tightening must has clearance, and tightening torque 60Nm(6.0m • kg, 43.4ft • lb).

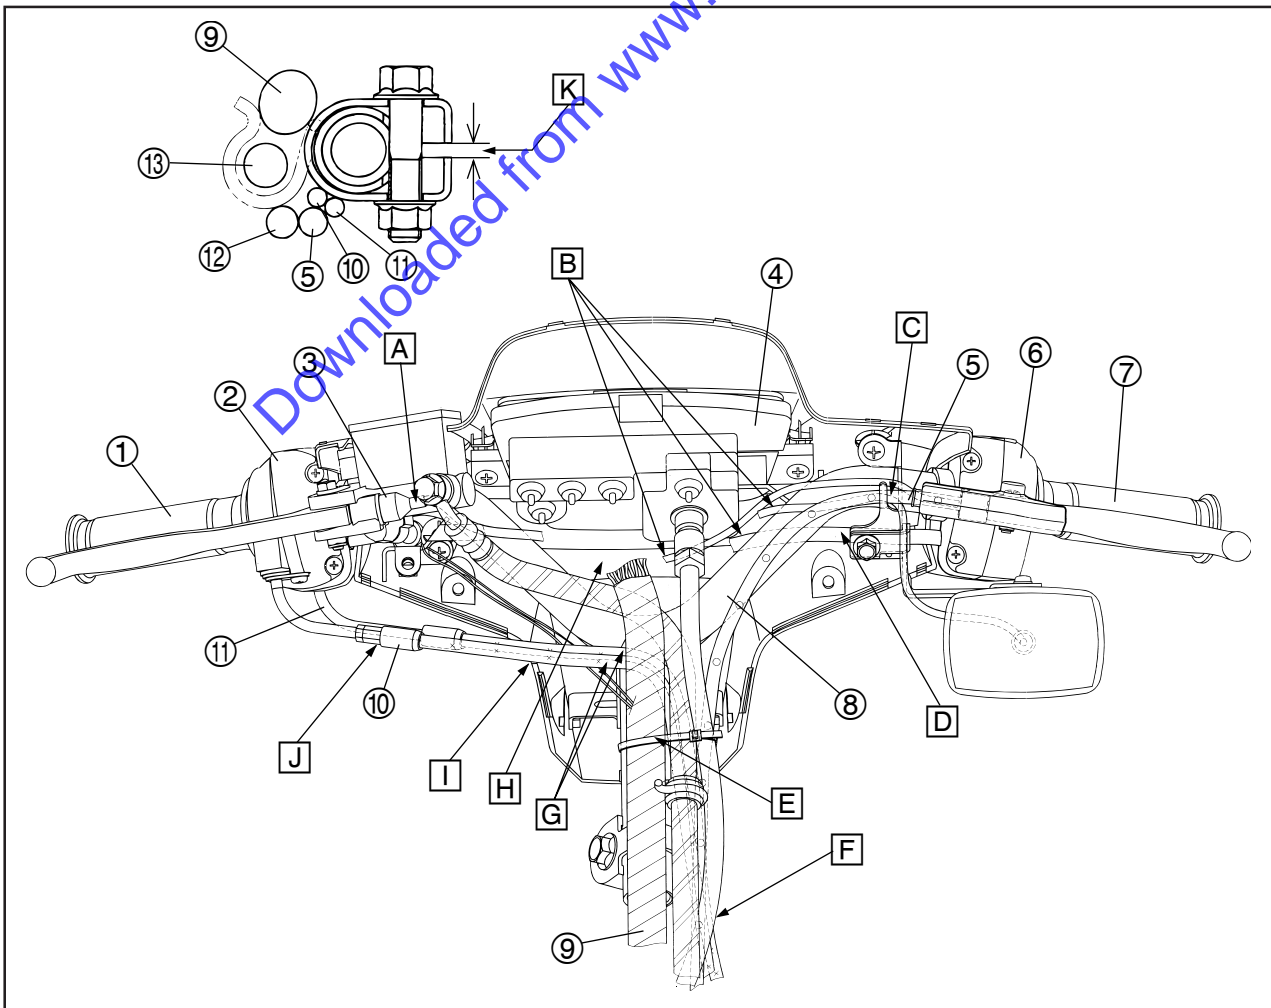

---

**CHAPTER 3**  
**PERIODIC CHECKS AND ADJUSTMENTS**

<b>INTRODUCTION</b> .....	<b>3-1</b>
<b>PERIODIC MAINTENANCE AND MINOR REPAIR</b> .....	<b>3-1</b>
Periodic maintenance chart for the emission control system .....	3-1
General maintenance and lubrication chart .....	3-2
<b>COVER AND PANEL</b> .....	<b>3-4</b>
SEAT AND SIDE COVERS .....	3-4
LOWER COWLING, UPPER COVER AND LEG SHIELD 1 .....	3-5
LEG SHIELD 2 AND FOOTREST BOARD .....	3-6
HANDLEBAR COVER(FRONT AND REAR) .....	3-7
<b>ADJUSTING THE ENGINE IDLING SPEED</b> .....	<b>3-8</b>

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)



EAS00036

## PERIODIC CHECKS AND ADJUSTMENTS

### INTRODUCTION

This chapter includes all information necessary to perform recommended checks and adjustments. If followed, these preventive maintenance procedures will ensure more reliable vehicle operation, a longer service life and reduce the need for costly overhaul work. This information applies to vehicles already in service as well as to new vehicles that are being prepared for sale. All service technicians should be familiar with this entire chapter.

EAS00037

### PERIODIC MAINTENANCE AND MINOR REPAIR

EAU17570

#### Periodic maintenance chart for the emission control system

- \* Since these items require special tools, data and technical skills, have a Yamaha dealer perform the service.

NO.	ITEM	ROUTINE	INITIAL	ODOMETER READING				
			1,000 km (600 mi) or 1 month	4,000 km (2,000 mi) or 6 months	7,000 km (4,000 mi) or 12 months	10,000km (6,000 mi) or 18 months	13,000 km (8,000 mi) or 24 months	16,000 km (10,000 mi) or 30 months
1	* Fuel line	<ul style="list-style-type: none"> <li>• Check fuel and vacuum hoses for cracks or damage.</li> <li>• Replace if necessary.</li> </ul>		√	√	√	√	√
2	* Idle speed	<ul style="list-style-type: none"> <li>• Check and adjust engine idle speed.</li> </ul>	√	√	√	√	√	√
3	* Exhaust system	<ul style="list-style-type: none"> <li>• Check for leakage.</li> <li>• Tighten if necessary.</li> <li>• Replace gasket(s) if necessary.</li> </ul>		√	√	√	√	√
4	* Air induction system	<ul style="list-style-type: none"> <li>• Check the air cut-off valve, reed valve, and hose for damage.</li> <li>• Replace any damaged parts.</li> </ul>		√	√	√	√	√

Downloaded from www.ScooterTime.net

# PERIODIC MAINTENANCE AND MINOR REPAIR



EAU32115

## General maintenance and lubrication chart

NO.	ITEM	ROUTINE	INITIAL	ODOMETER READING					
			1,000 km (600 mi) or 1 month	4,000 km (2,000 mi) or 6 months	7,000 km (4,000 mi) or 12 months	10,000km (6,000 mi) or 18 months	13,000 km (8,000 mi) or 24 months	16,000 km (10,000 mi) or 30 months	
1	* Air filter element	<ul style="list-style-type: none"> <li>Clean with solvent.</li> <li>Replace if necessary.</li> </ul>		√	√	√	√	√	
2	* Front brake	<ul style="list-style-type: none"> <li>Check operation, fluid level, and for fluid leakage.</li> <li>Replace brake pads if necessary.</li> </ul>	√	√	√	√	√	√	
3	* Rear brake	<ul style="list-style-type: none"> <li>Check operation.</li> <li>Adjust cable and replace brake shoes if necessary.</li> </ul>	√	√	√	√	√	√	
4	* Wheels	<ul style="list-style-type: none"> <li>Check runout and for damage.</li> <li>Replace if necessary.</li> </ul>		√	√	√	√	√	
5	* Tires	<ul style="list-style-type: none"> <li>Check tread depth and for damage.</li> <li>Replace if necessary.</li> <li>Check air pressure.</li> <li>Correct if necessary.</li> </ul>		√	√	√	√	√	
6	* Wheel bearings	<ul style="list-style-type: none"> <li>Check bearings for smooth operation.</li> <li>Replace if necessary.</li> </ul>		√	√	√	√	√	
7	* Steering bearings	<ul style="list-style-type: none"> <li>Check bearing assemblies for looseness.</li> <li>Moderately repack with lithium-soap-based grease every 16000 km (10000 mi) or 18 months.</li> </ul>	√	√		Repack.	√	√	
8	* Chassis fasteners	<ul style="list-style-type: none"> <li>Check all chassis fitting and fasteners.</li> <li>Correct if necessary.</li> </ul>			√	√	√	√	
9	Front brake lever pivot shaft	<ul style="list-style-type: none"> <li>Apply silicone grease lightly.</li> </ul>		√	√	√	√	√	
10	Rear brake lever pivot shaft	<ul style="list-style-type: none"> <li>Apply lithium-soap-based grease (all-purpose grease) lightly.</li> </ul>		√	√	√	√	√	
11	Centerstand	<ul style="list-style-type: none"> <li>Check operation.</li> <li>Lubricate.</li> </ul>		√	√	√	√	√	
12	* Front fork	<ul style="list-style-type: none"> <li>Check operation and for oil leakage.</li> <li>Replace if necessary.</li> </ul>		√	√	√	√	√	
13	* Shock absorber assembly	<ul style="list-style-type: none"> <li>Check operation and for oil leakage.</li> <li>Replace if necessary.</li> </ul>		√	√	√	√	√	
14	* Autolube pump	<ul style="list-style-type: none"> <li>Check operation.</li> <li>Bleed if necessary.</li> </ul>	√	√	√	√	√	√	
15	Final transmission oil	<ul style="list-style-type: none"> <li>Check vehicle for oil leakage.</li> <li>Change.</li> </ul>	√		√		√		
16	* V-belt	<ul style="list-style-type: none"> <li>Replace.</li> </ul>		Every 10000 km(6250 mi)					
17	* Control and meter cables	<ul style="list-style-type: none"> <li>Apply Yamaha chain and cable lube or engine oil 10W-30 thoroughly.</li> </ul>	√	√	√	√	√	√	
18	* Throttle grip housing and cable	<ul style="list-style-type: none"> <li>Check operation and free play.</li> <li>Adjust the throttle cable free play if necessary.</li> <li>Lubricate the throttle grip housing and cable.</li> </ul>		√	√	√	√	√	
19	* Lights, signals and switches	<ul style="list-style-type: none"> <li>Check operation.</li> <li>Adjust headlight beam.</li> </ul>	√	√	√	√	√	√	

\* Since these items require special tools, data and technical skills, have a Yamaha dealer perform the service.

**NOTE:**

From 19000 km (12000 mi) or 36 months, repeat the maintenance intervals starting from 7000 km (4000 mi) or 12 months.





EAU17620

**NOTE:**

---


- The air filter needs more frequent service if you are riding in unusually wet or dusty areas.
  - Hydraulic brake system
    - When disassembling the master cylinder or caliper cylinder, always replace the brake fluid. Check the brake fluid level regularly and fill as required.
    - Replace the oil seals on the inner parts of the master cylinder and caliper cylinder every two years.
    - Replace the brake hoses every four years or if cracked or damaged.
- 

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)



EAS00038


**COVER AND PANEL**  
**SEAT AND SIDE COVERS**

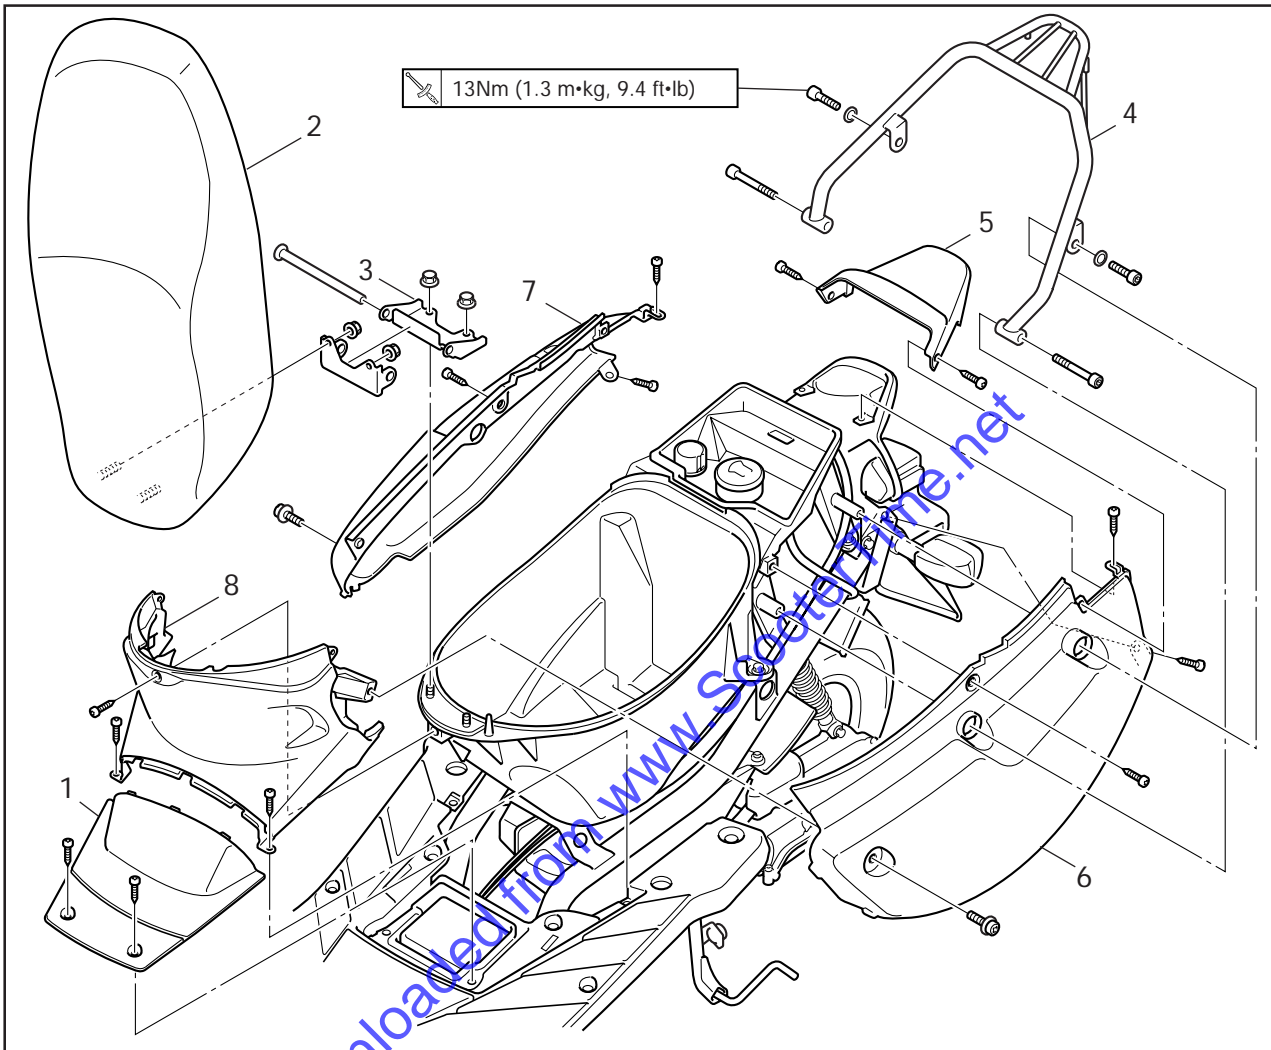

Order	Job/Part	Q'ty	Remarks
	<b>Removing the seat and side covers</b>		Remove the parts in the order listed.
1	Battery box cover	1	<b>NOTE:</b> _____
2	Seat	1	Insert the (-) screwdriver into the slot of battery box cover and pickup then remove.
3	Seat hanger	1	
4	Rear carrier	1	
5	Rear cover	1	
6	Side cover(left)	1	
7	Side cover(right)	1	
8	Center cover	1	




## LOWER COWLING, UPPER COVER AND LEG SHIELD 1

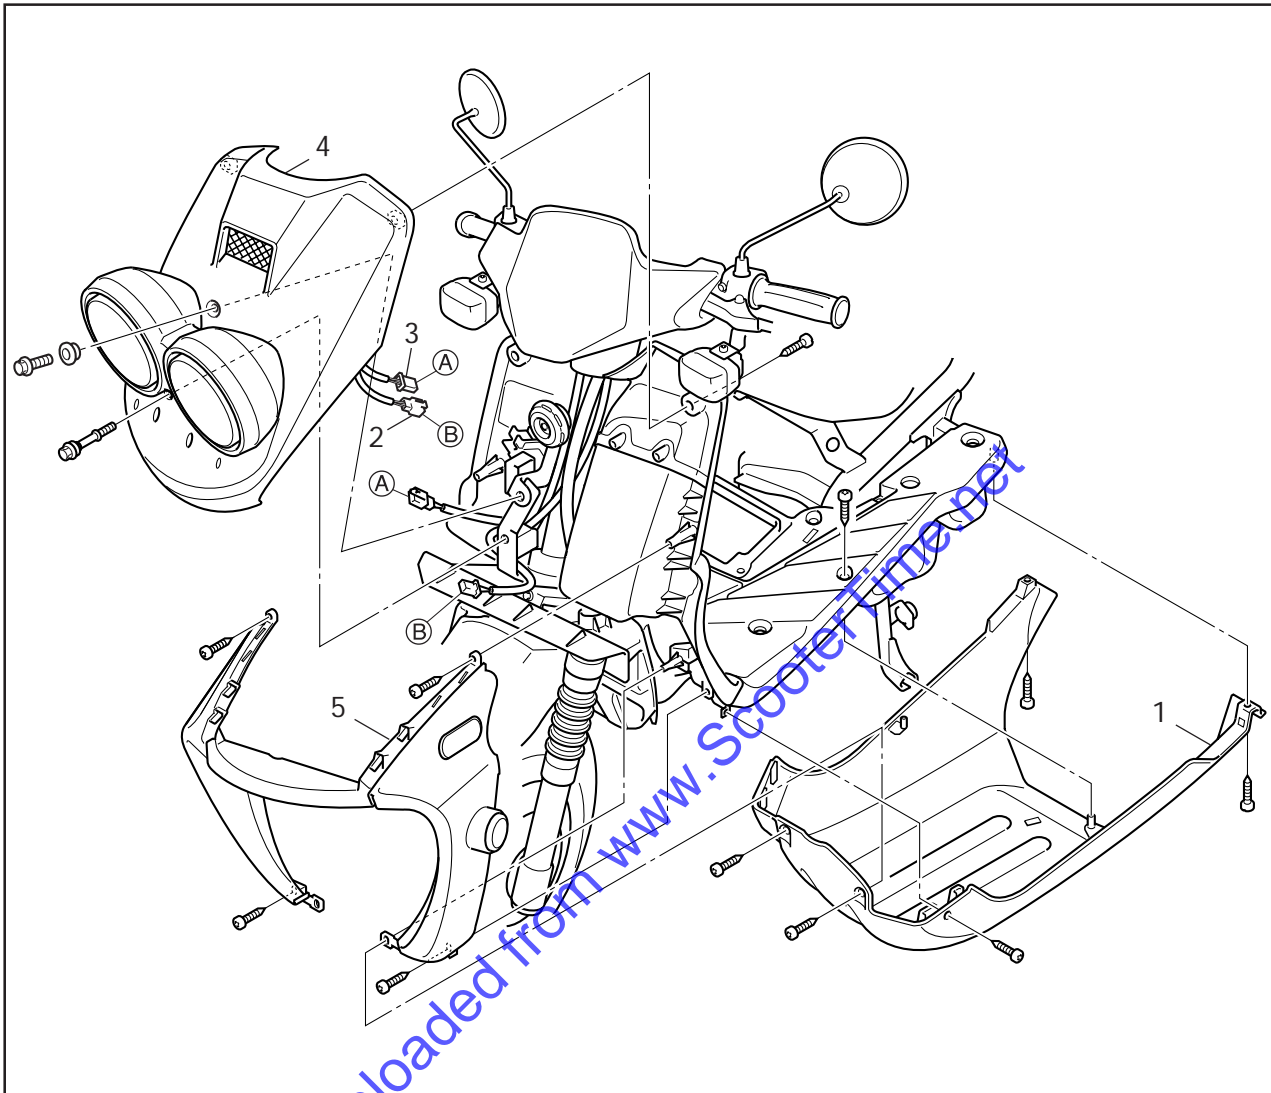

Order	Job/Part	Q'ty	Remarks
	<b>Removing the lower cowling, upper cover, and leg shield 1</b>		Remove the parts in the order listed.
1	Lower cowling	1	
2	Head light lead coupler(low)	1	Disconnect.
3	Head light lead coupler(high)	1	Disconnect.
4	Upper cover	1	
5	Leg shield 1	1	
			For installation, reverse the removal procedure.




LEG SHIELD 2 AND FOOTREST BOARD

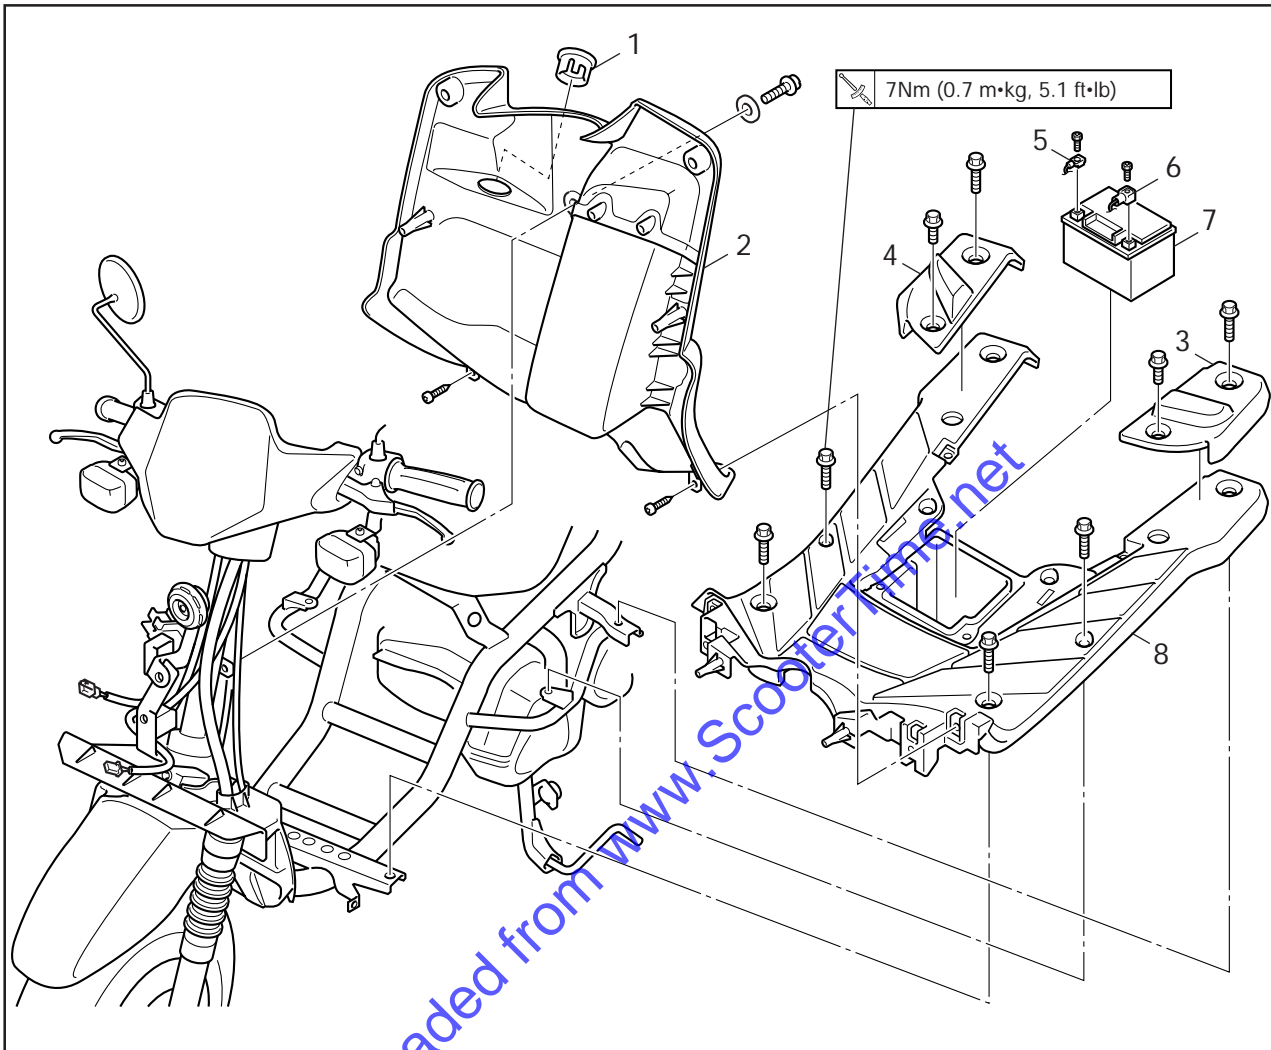

Order	Job/Part	Q'ty	Remarks
	<b>Removing the leg shield 2 and footrest board</b>		Remove the parts in the order listed.
	Leg shield 1		Refer to "LOWER COWLING, UPPER COVER AND LEG SHIELD 1".
1	Main switch cover	1	<p><b>⚠ WARNING</b></p> <p><b>First, disconnect the battery negative lead, and then the battery positive lead.</b></p> <p>For installation, reverse the removal procedure.</p>
2	Leg shield 2	1	
3	Footrest(left)	1	
4	Footrest(right)	1	
5	Battery negative lead	1	
6	Battery positive lead	1	
7	Battery	1	
8	Footrest board	1	



HANDLEBAR COVER(FRONT AND REAR)

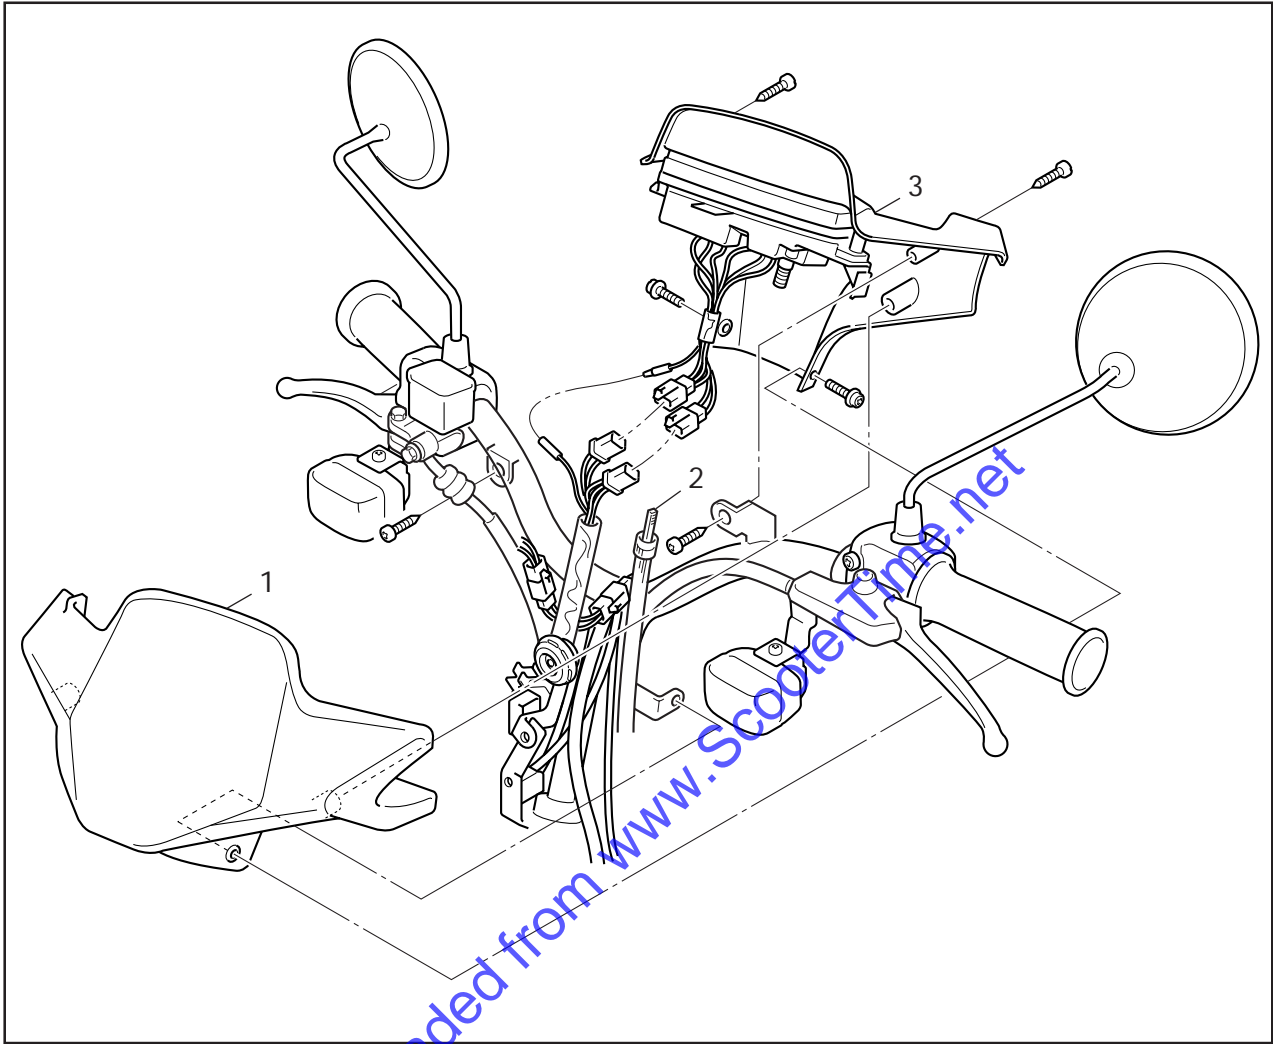

Order	Job,Part	Q'ty	Remarks
	<b>Removing the handlebar cover(front and rear)</b>		Remove the parts in the order listed.
1	Handlebar cover(front)	1	
2	Speedometer cable	1	Disconnect.
3	Handlebar cover(rear)	1	
			For installation, reverse the removal procedure.



EAS00054

## ADJUSTING THE ENGINE IDLING SPEED


### NOTE:

Prior to adjusting the engine idling speed, the air filter element should be clean, and the engine should have adequate compression.

1. Start the engine and let it warm up for several minutes.


### **⚠ WARNING**

Before starting the engine, be sure to use the centerstand for safety.

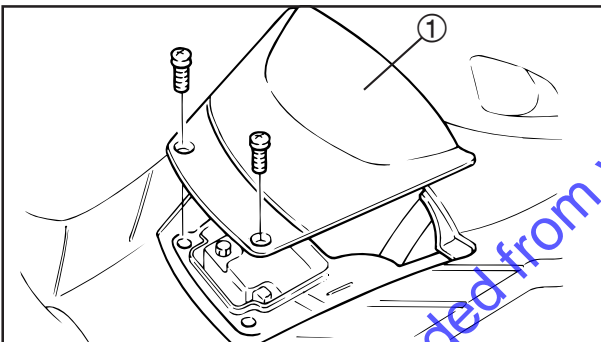

2. Remove:

- battery box cover ①  
Refer to "SEAT AND SIDE COVERS".

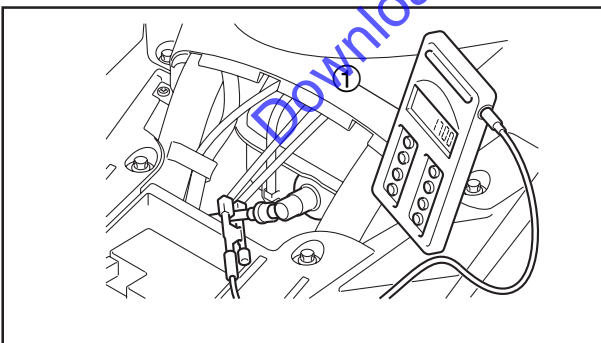

3. Connect:

- digital tachometer ①  
(onto the spark plug lead of cylinder )

	<b>Digital tachometer</b> 90890-06760
--	--


4. Check:

- engine idling speed  
Out of specification → Adjust

	<b>Engine idling speed</b> 1800 ~ 1900 r/min
--	---

## ADJUSTING THE ENGINE IDLING SPEED

CHK  
ADJ

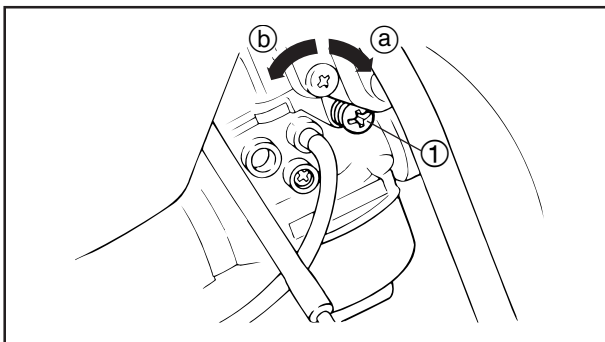

5. Adjust:
- engine idling speed



- a. Turn the throttle stop screw (1) in direction (a) or (b) until the specified engine idling speed is obtained.

Direction (a)	Engine idling speed is increased.
Direction (b)	Engine idling speed is decreased.



6. Install:
- battery box cover
- Refer to "SEAT AND SIDE COVERS".

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

---


**CHAPTER 4  
CARBURETOR**

<b>AIR INDUCTION SYSTEM .....</b>	<b>4-1</b>
<b>AIR FILTER CASE ASSEMBLY .....</b>	<b>4-1</b>
<b>CHECKING THE AIR INDUCTION SYSTEM .....</b>	<b>4-3</b>


Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)



**AIR INDUCTION SYSTEM**  
AIR FILTER CASE ASSEMBLY

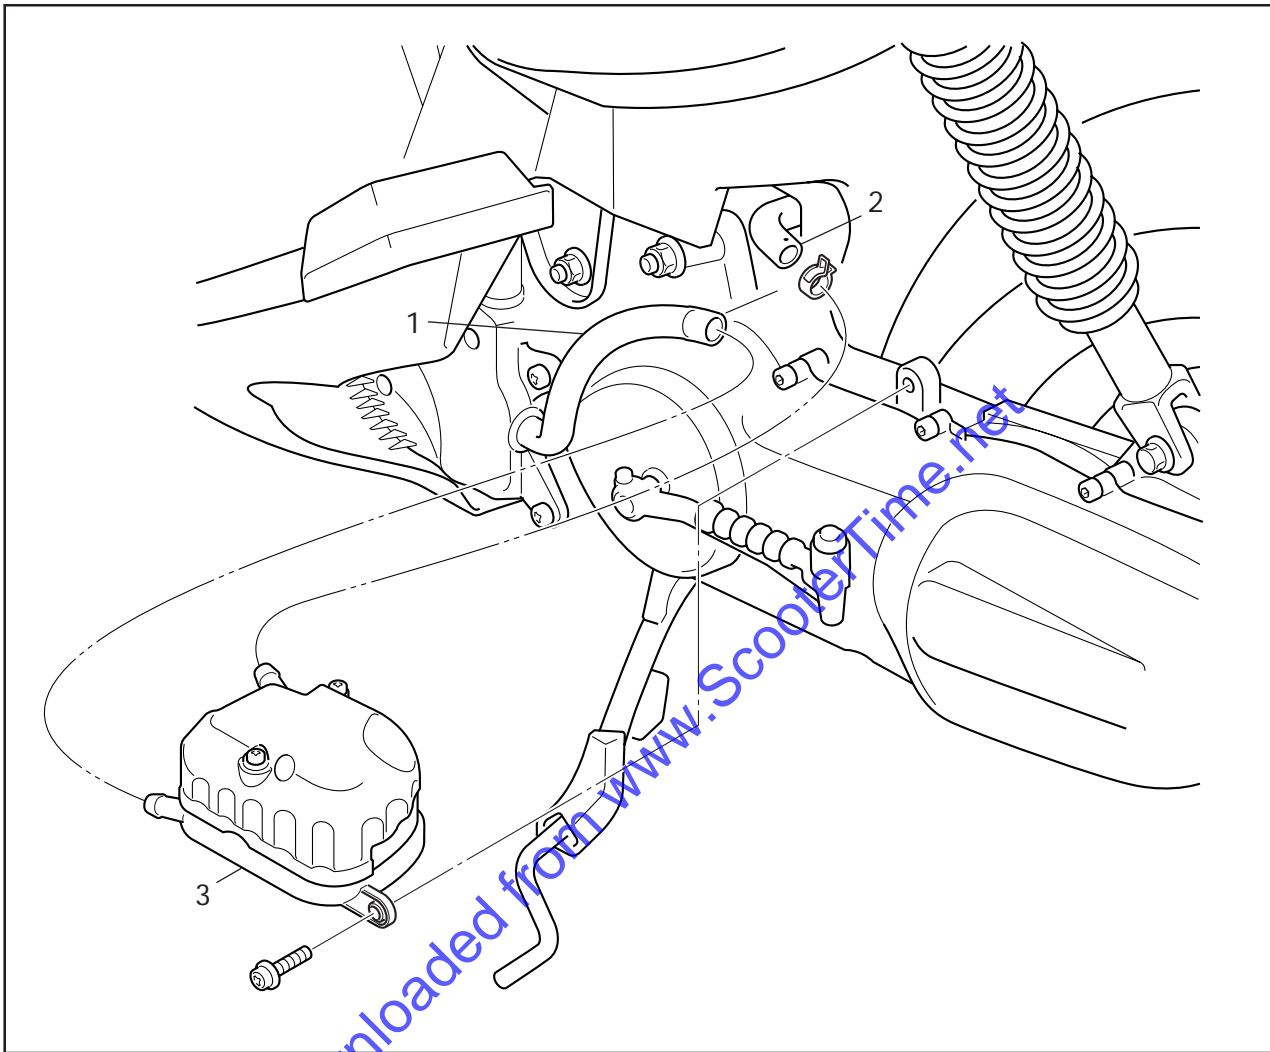

Order	Job/Part	Q'ty	Remarks
	<b>Removing the air filter case assembly</b>		Remove the parts in the order listed.
1	Hose(to air filter)	1	Disconnect.
2	Pipe(to exhaust pipe)	1	Disconnect.
3	Air filter case assembly	1	For installation, reverse the removal procedure.

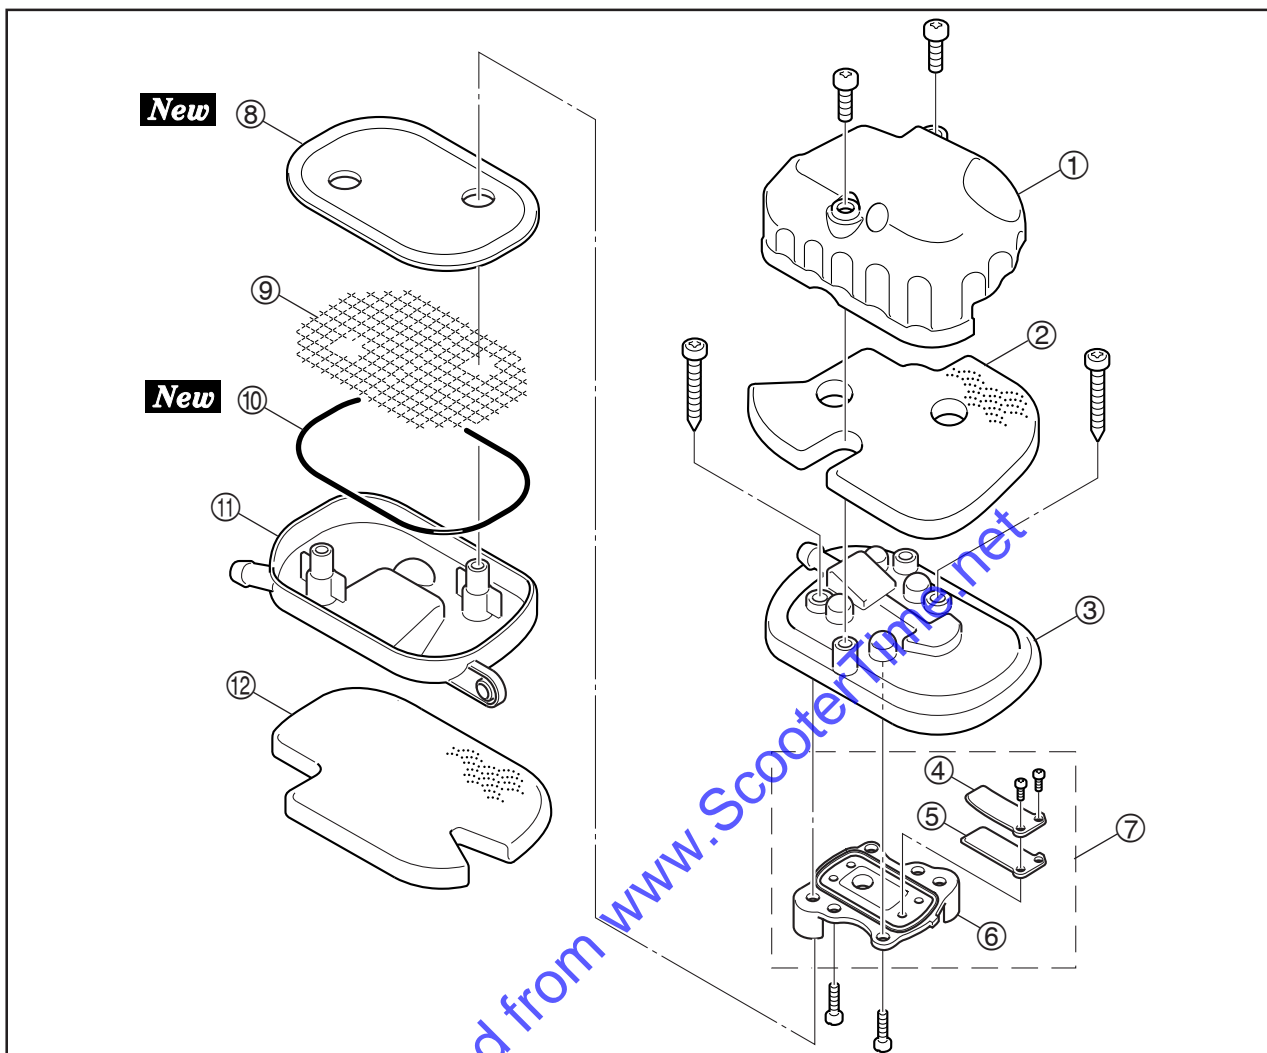


Order	Job/Part	Q'ty	Remarks
	<b>Disassembling the air filter case assembly</b>		Remove the parts in the order listed.
①	Cap	1	
②	Damper	1	
③	Air filter case cap	1	
④	Reed valve	1	
⑤	Reed valve stopper	1	
⑥	Reed valve seat	1	
⑦	Reed valve assembly	1	
⑧	Element	1	
⑨	Plate	1	
⑩	O-ring	1	
⑪	Air filter case body	1	
⑫	Damper		For assembly, reverse the disassembly procedure.




EAS00510

## CHECKING THE AIR INDUCTION SYSTEM

1. Check:
  - hoses  
Loose connection → Connect properly.  
Cracks/damage → Replace.
  - pipes  
Cracks/damage → Replace.

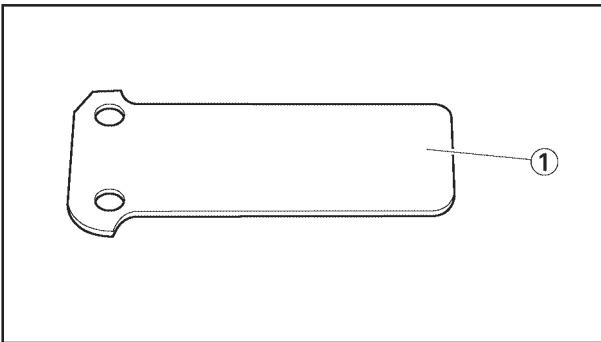

2. Check:
  - reed valve ①
  - reed valve stopper
  - reed valve seat
  - Cracks/damage → Replace the reed valve assembly.

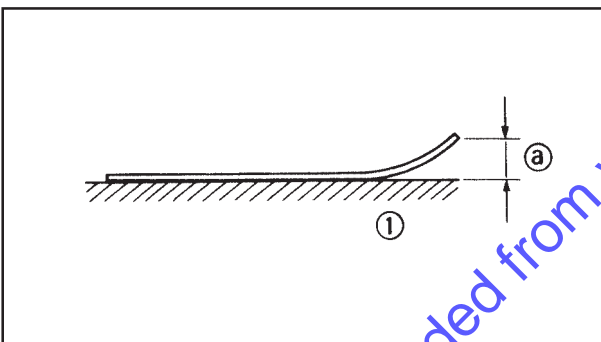


3. Measure:
  - reed valve bending limit ①
  - Out of specification → Replace the reed valve assembly.



<p><b>Reed valve bending limit</b> 0.2 mm (0.0078 in)</p>
---


① Surface plate

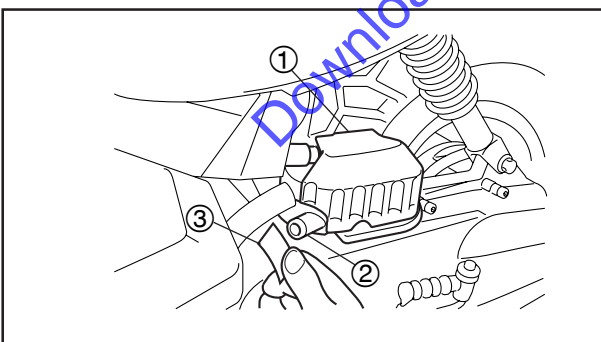

4. Check:
  - air filter case assembly ①  
Cracks/damage → Replace.

- a. Start the engine and let it warm up for several minutes.
  - b. Dismount the intake tube ② of air filter case assembly, and put a piece of thin paper ③ at the opening of the body, the paper will not pulsate (sucking and releasing).
  - c. If there is no pulsation, turn off the engine and check if there is any leakage or clog in the air filter case assembly or not. If there is, repair and repeat the inspection steps in a and b.
  - d. If it is still not pulsating, replace the air filter case assembly.

# YW50X WIRING DIAGRAM

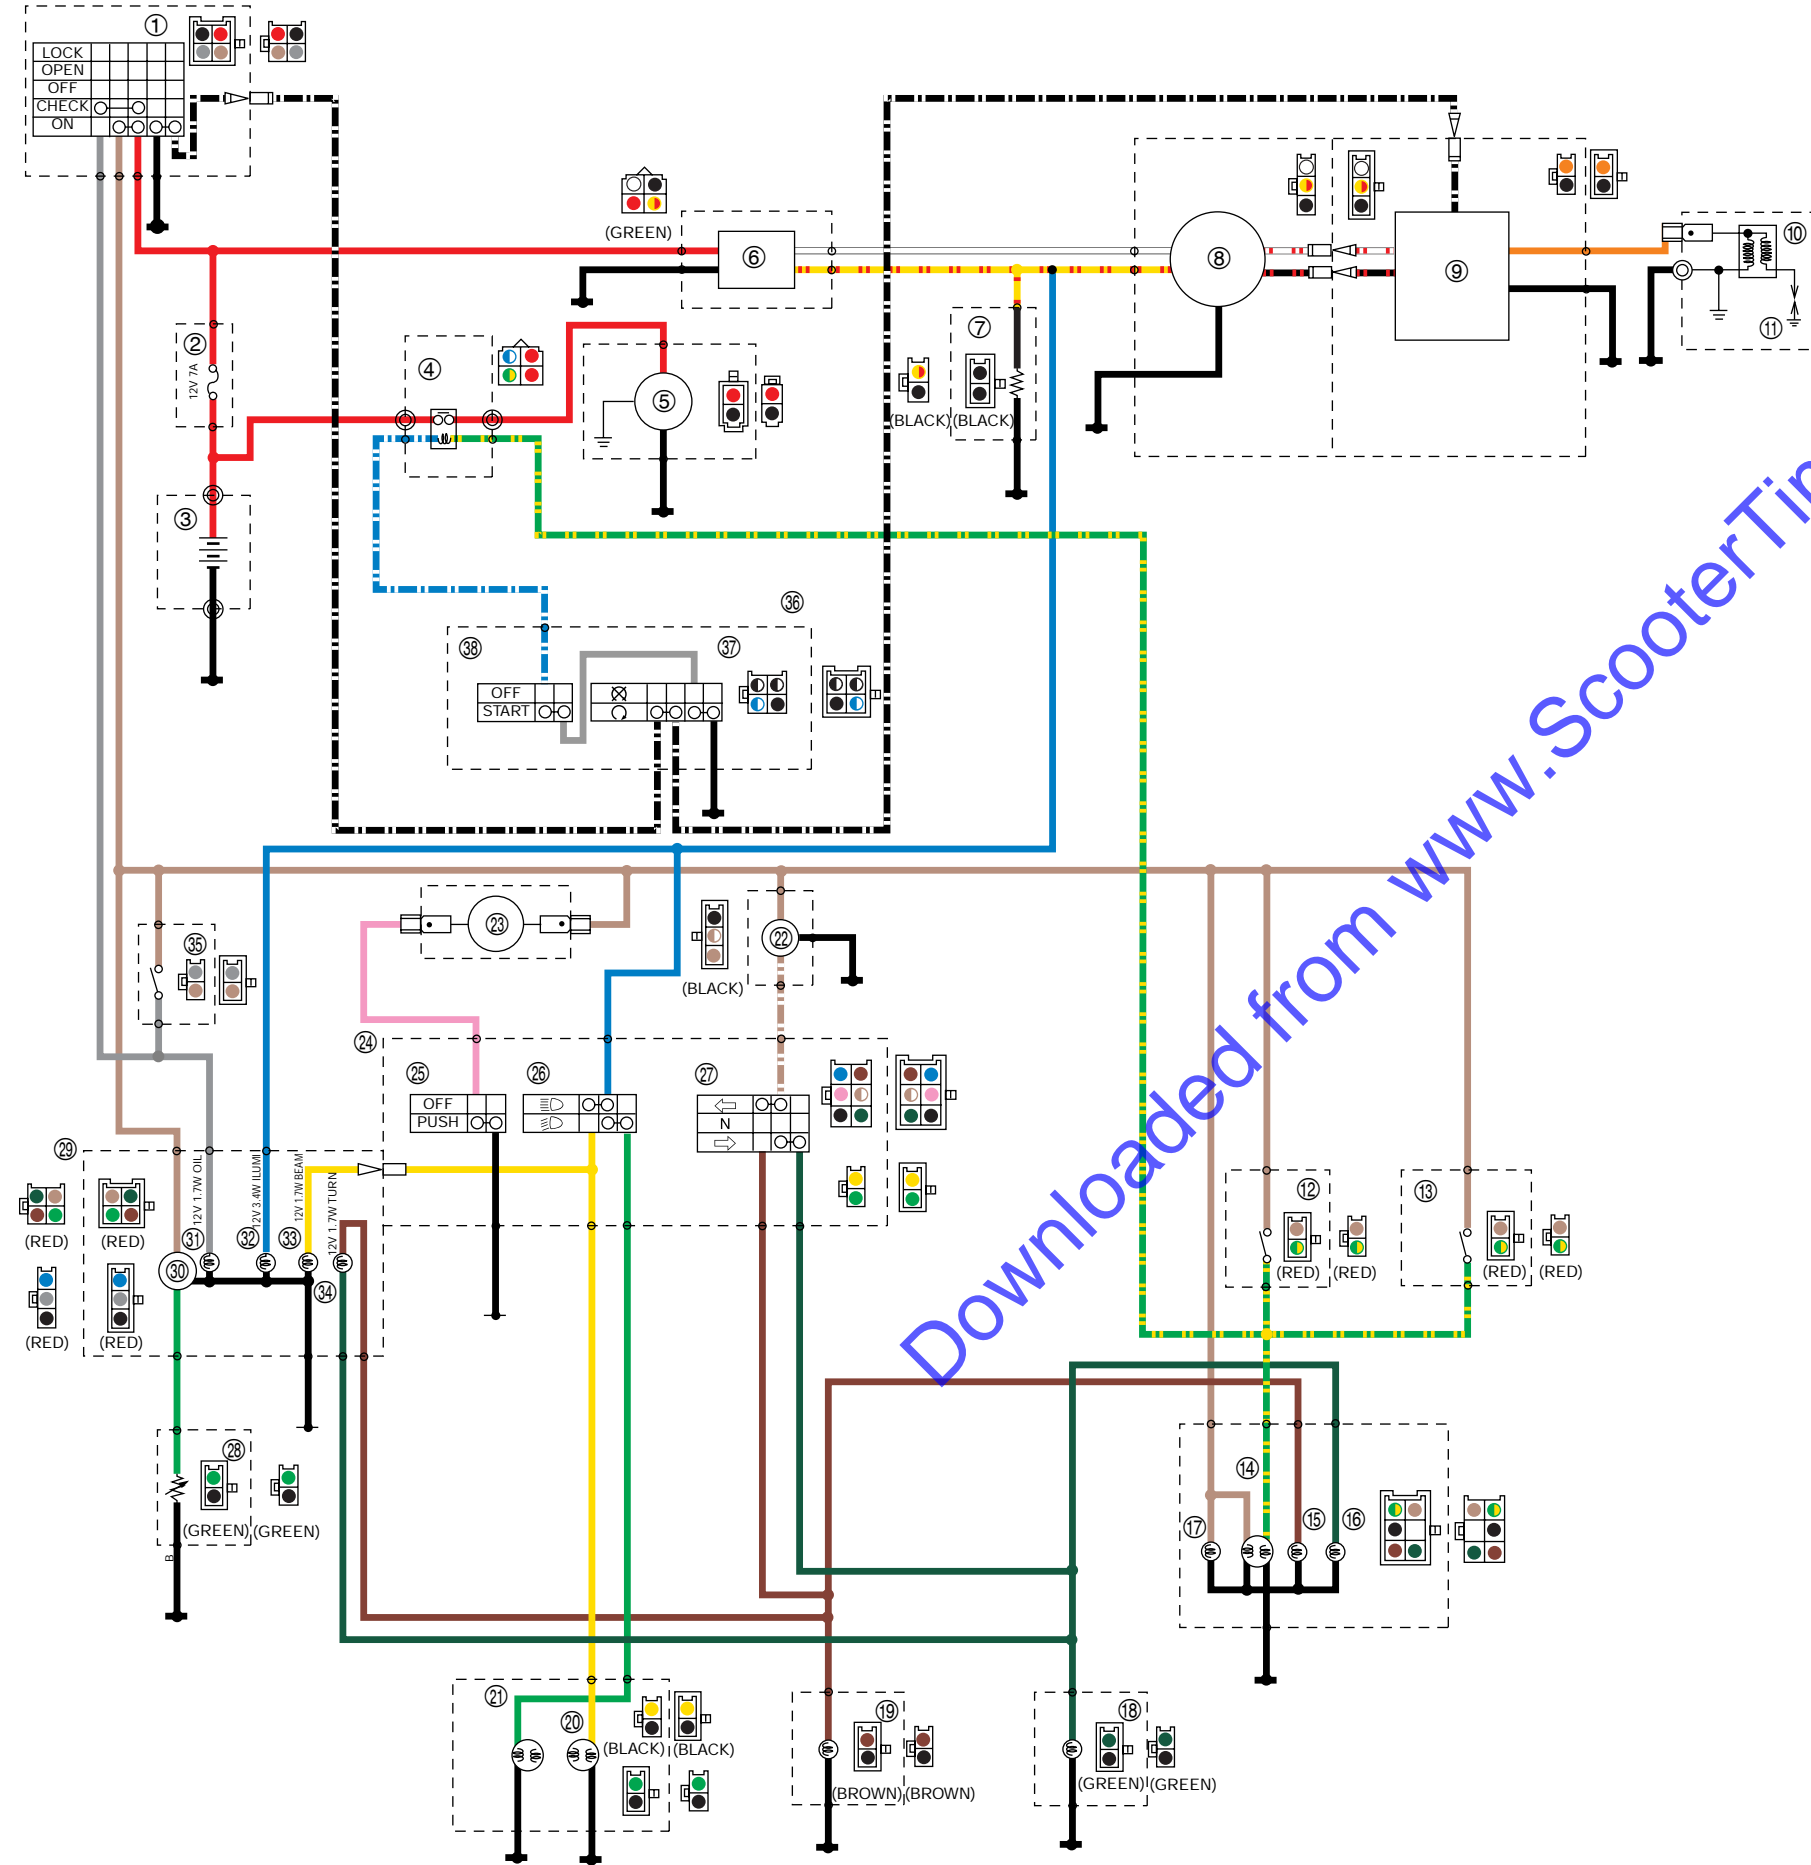

- ① Main switch
- ② Main fuse
- ③ Battery
- ④ Starter relay
- ⑤ Starter motor
- ⑥ Rectifier/regulator
- ⑦ Auto choke
- ⑧ C.D.I. magneto
- ⑨ C.D.I. Unit
- ⑩ Ignition coil
- ⑪ Spark plug
- ⑫ Front brake light switch
- ⑬ Rear brake light switch
- ⑭ Tail/brake light
- ⑮ Rear turn signal light(left)
- ⑯ Rear turn signal light(right)
- ⑰ License plate light
- ⑱ Front turn signal light(right)
- ⑲ Front turn signal light(left)
- ⑳ Headlight(high)
- ㉑ Headlight(low)
- ㉒ Turn signal relay
- ㉓ Horn
- ㉔ Handlebar switch(left)
- ㉕ Horn switch
- ㉖ Dimmer switch
- ㉗ Turn signal switch
- ㉘ Fuel sender
- ㉙ Speedometer
- ㉚ Fuel gauge
- ㉛ Oil level indicator light
- ㉜ Speedometer light
- ㉝ High beam indicator light
- ㉞ Turn signal indicator light
- ㉟ Oil lever gauge
- ㊱ Handlebar switch(right)
- ㊲ Engine stop switch
- ㊳ Start switch

Downloaded from www.ScooterTime.net

MARK	EXPLANATION
R, Br, Br/W...	COLOR CODE
	CONNECTING WITH GRD. WIRE
	GRD.
(A, B, C)	CONNECTOR MARK (BETWEEN MAIN & SUB HARNESS)
	CONNECTOR SYMBOL

	Black		Yellow/Red
	Green		White
	Blue		Yellow
	Orange		Dark green
	Gray		Brown/White
	Green/Yellow		Black/White
	Red		White/Red
	Brown		
	Chocolate		
	Pink		
	Blue/White		
	Black/Red		
	Pink/White		

---

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

EB000000

**YW50BP**

**SERVICE MANUAL**

**©2001 by Yamaha Motor Taiwan Co.,Ltd.**

**First edition, November 2001**

**All rights reserved.**

**Any reprinting or unauthorized use  
without the written permission of  
Yamaha Motor Taiwan Co.,Ltd.  
is expressly prohibited.**

## NOTICE

This manual was produced by the Yamaha Motor Company, Ltd. primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual. Therefore, anyone who uses this book to perform maintenance and repairs on Yamaha vehicles should have a basic understanding of mechanics and the techniques to repair these types of vehicles. Repair and maintenance work attempted by anyone without this knowledge is likely to render the vehicle unsafe and unfit for use.

Yamaha Motor Company, Ltd. is continually striving to improve all of its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

### NOTE:

Designs and specifications are subject to change without notice.

---

## IMPORTANT MANUAL INFORMATION

Particularly important information is distinguished in this manual by the following.



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



Failure to follow WARNING instructions could result in severe injury or death to the scooter operator, a bystander or a person checking or repairing the scooter.

### CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the scooter.

### NOTE:

A NOTE provides key information to make procedures easier or clearer.

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

# HOW TO USE THIS MANUAL

This manual is intended as a handy, easy-to-read reference book for the mechanic. Comprehensive explanations of all installation, removal, disassembly, assembly, repair and check procedures are laid out with the individual steps in sequential order.

- ① The manual is divided into chapters. An abbreviation and symbol in the upper right corner of each page indicate the current chapter. Refer to "SYMBOLS".
- ② Each chapter is divided into sections. The current section title is shown at the top of each page, except in Chapter 3 ("PERIODIC CHECKS AND ADJUSTMENTS"), where the sub-section title(s) appears.
- ③ Sub-section titles appear in smaller print than the section title.
- ④ To help identify parts and clarify procedure steps, there are exploded diagrams at the start of each removal and disassembly section.
- ⑤ Numbers are given in the order of the jobs in the exploded diagram. A circled number indicates a disassembly step.
- ⑥ Symbols indicate parts to be lubricated or replaced. Refer to "SYMBOLS".
- ⑦ A job instruction chart accompanies the exploded diagram, providing the order of jobs, names of parts, notes in jobs, etc.
- ⑧ Jobs requiring more information (such as special tools and technical data) are described sequentially.

CYLINDER HEAD, CYLINDER AND PISTON **ENG**

**CYLINDER HEAD, CYLINDER AND PISTON**

CYLINDER HEAD, CYLINDER AND PISTON

⑥  
⑤

⑦

Order	Job name/Part name	Qty	Remarks
	Cylinder head, Cylinder and piston removal		Remove the parts in the order.
	Engine		Refer to the "ENGINE REMOVAL" section
1	Muffler/Gasket	1/1	
2	Air shroud (cylinder head)	1	
3	Spark plug	1	
4	Cylinder head/Cylinder head gasket	1/1	
5	Cylinder	1	
6	Piston pin clip	2	
7	Piston pin/ Bearing	1/1	
8	Piston	1	
9	Piston ring set	1	
10	Cylinder gasket	1	Reverse the removal procedure for installation.

4-3

CYLINDER HEAD, CYLINDER, PISTON **ENG**

**PISTON PIN AND PISTON REMOVAL**

1. Remove:

- Piston pin clip ①

**NOTE:**  
Before removing the piston pin clip, cover the crankcase with a clean rag so you will not accidentally drop the clip into the crankcase.

2. Remove:

- Piston pin ①
- Piston ②
- Piston pin bearing ③

**CAUTION:**  
Do not use a hammer to drive the piston pin out.

**CYLINDER HEAD INSPECTION**

1. Eliminate:

- Carbon deposits  
Use a rounded scraper ①.

2. Inspect:

- Cylinder head warpage  
Out of specification: No surface.

Warpage measurement and re-surfacement steps:
























- Attach a straight edge ① and a thickness gauge ② on the cylinder head.
- Measure the warpage limit.

Warpage limit:  
0.02 mm

- If the warpage is out of specification, reface the cylinder head.

**NOTE:**  
Rotate the head several times to avoid removing too much material from one side.

4-4

① <b>GEN INFO</b> 	② <b>SPEC</b> 	
③ <b>INSP ADJ</b> 	④ <b>ENG</b> 	
⑤ <b>CARB</b> 	⑥ <b>CHAS</b> 	
⑦ <b>ELEC</b> 	⑧ <b>TRBL SHTG</b> 	
⑨ 	⑩ 	
⑪ 	⑫ 	
⑬ 	⑭ 	
⑮ 	⑯ 	
⑰ 	⑱ 	⑲ 
⑳ 	㉑ 	㉒ 
㉓ 	㉔ <b>New</b>	

EAS00009

## SYMBOLS

The following symbols are not relevant to every vehicle.

Symbols ① to ⑧ are designed as thumb tabs to indicate the chapter's number and content.

- ① General information
- ② Specifications
- ③ Periodic inspection and adjustment
- ④ Engine
- ⑤ Carburetor(s)
- ⑥ Chassis
- ⑦ Electrical system
- ⑧ Troubleshooting

Symbols ⑨ to ⑯ indicate the following.

- ⑨ Serviceable with engine mounted
- ⑩ Filling fluid
- ⑪ Lubricant
- ⑫ Special tool
- ⑬ Tightening torque
- ⑭ Wear limit, clearance
- ⑮ Engine speed
- ⑯ Electrical data

Symbols ⑰ to ㉒ in the exploded diagrams indicate the types of lubricants and lubrication points.

- ⑰ Engine oil
- ⑱ Gear oil
- ⑲ Molybdenum disulfide oil
- ⑳ Wheel bearing grease
- ㉑ Lithium soap base grease
- ㉒ Molybdenum disulfide grease

Symbols ㉓ to ㉔ in the exploded diagrams indicate the following.

- ㉓ Apply locking agent (LOCTITE®)
- ㉔ Replace the part



---

**CHAPTER 1.**  
**GENERAL INFORMATION**

<b>SCOOTER IDENTIFICATION</b> .....	1-1
VEHICLE IDENTIFICATION NUMBER .....	1-1
MODEL CODE .....	1-1
<b>IMPORTANT INFORMATION</b> .....	1-2
PREPARATION FOR REMOVAL AND DISASSEMBLY .....	1-2
REPLACEMENT PARTS .....	1-2
GASKETS, OIL SEALS AND O-RINGS .....	1-2
LOCK WASHERS/PLATES AND COTTER PINS .....	1-2
BEARINGS AND OIL SEALS .....	1-3
CIRCLIPS .....	1-3
<b>CHECKING OF CONNECTIONS</b> .....	1-4
<b>HOW TO USE THE CONVERSION TABLE</b> .....	1-5
CONVERSION TABLE .....	1-5
<b>SPECIAL TOOLS</b> .....	1-6

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

---

**CHAPTER 2.  
SPECIFICATIONS**

<b>GENERAL SPECIFICATION .....</b>	<b>2-1</b>
<b>MAINTENANCE SPECIFICATION .....</b>	<b>2-4</b>
ENGINE .....	2-4
TIGHTENING TORQUES .....	2-6
ENGINE .....	2-6
<b>MAINTENANCE SPECIFICATION .....</b>	<b>2-7</b>
CHASSIS .....	2-7
TIGHTENING TORQUES .....	2-8
CHASSIS .....	2-8
<b>MAINTENANCE SPECIFICATION .....</b>	<b>2-9</b>
ELECTRICAL .....	2-9
<b>GENERAL TORQUE SPECIFICATIONS .....</b>	<b>2-11</b>
<b>LUBRICATION POINTS AND LUBRICATION TYPE .....</b>	<b>2-12</b>
ENGINE .....	2-12
CHASSIS .....	2-13
<b>CABLE ROUTING .....</b>	<b>2-14</b>

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

---

## CHAPTER 3. PERIODIC INSPECTION AND ADJUSTMENTS

<b>INTRODUCTION</b> .....	3-1
<b>PERIODIC MAINTENANCE/LUBRICATION INTERVALS</b> .....	3-1
<b>COVER AND PANEL</b> .....	3-3
SIDECOVER AND SEAT .....	3-3
LOWER COWLING, UPPER COVER, LEG SHIELD 1, 2 AND FOOTREST BOARD .....	3-4
HANDLEBAR COVER(FRONT AND REAR) .....	3-5
<b>ENGINE</b> .....	3-6
IDLE SPEED ADJUSTMENT .....	3-6
THROTTLE CABLE FREE ADJUSTMENT .....	3-7
AUTOLUBE PUMP AIR BLEEDING .....	3-8
SPARK PLUG INSPECTION .....	3-9
ENGINE OIL LEVEL INSPECTION .....	3-10
TRANSMISSION OIL REPLACEMENT .....	3-11
AIR FILTER ELEMENT CLEANING .....	3-12
V-BELT INSPECTION .....	3-14
<b>CHASSIS</b> .....	3-15
FRONT BRAKE LEVER FREE PLAY CHECK .....	3-15
REAR BRAKE LEVER FREE PLAY CHECK .....	3-15
BRAKE PAD INSPECTION .....	3-15
BRAKE SHOE INSPECTION .....	3-16
BRAKE FLUID LEVEL INSPECTION .....	3-16
AIR BLEEDING (HYDRAULIC BRAKE SYSTEM) .....	3-17
STEERING ADJUSTMENT .....	3-18
TIRE INSPECTION .....	3-19
WHEEL INSPECTION .....	3-22
FRONT FORK INSPECTION .....	3-22
REAR SHOCK ABSORBER INSPECTION .....	3-22
SEAT LOCK CABLE ADJUSTMENT .....	3-22
CABLE CHECKING AND LUBRICATING .....	3-23
LEVERS LUBRICATING .....	3-23
CENTERSTAND LUBRICATING .....	3-23
<b>ELECTRICAL</b> .....	3-24
BATTERY INSPECTION .....	3-24
FUSE INSPECTION .....	3-29
HEADLIGHT BEAM ADJUSTMENT .....	3-30
HEADLIGHT BULB REPLACEMENT .....	3-30
TURN SIGNAL AND TAILLIGHT BULB REPLACEMENT .....	3-31
TAILLIGHT BULB REPLACEMENT .....	3-32
LICENSE LIGHT BULB REPLACEMENT .....	3-32

---

## CHAPTER 4. ENGINE

<b>ENGINE OVERHAUL</b> .....	4-1
WIREHARNES AND CABLES .....	4-1
<b>CYLINDER HEAD, CYLINDER AND PISTON</b> .....	4-3
CYLINDER HEAD, CYLINDER AND PISTON .....	4-3
PISTON PIN AND PISTON REMOVAL .....	4-4
CYLINDER HEAD INSPECTION .....	4-4
CYLINDER AND PISTON INSPECTION .....	4-5
PISTON RINGS INSPECTION .....	4-7
PISTON PIN AND PISTON PIN BEARING .....	4-7
PISTON PIN AND PISTON INSTALLATION .....	4-8
CYLINDER AND CYLINDER HEAD .....	4-9
<b>V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE</b> .....	4-11
KICK STARTER AND CRANKCASE COVER(LEFT) .....	4-11
KICK STARTER .....	4-12
KICK STARTER INSTALLATION .....	4-13
V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE .....	4-14
SECONDARY SHEAVE .....	4-15
PRIMARY SHEAVE REMOVAL .....	4-16
SECONDARY SHEAVE REMOVAL .....	4-16
CLUTCH INSPECTION .....	4-17
V-BELT INSPECTION .....	4-18
PRIMARY SHEAVE INSPECTION .....	4-19
SECONDARY SHEAVE .....	4-20
SECONDARY SHEAVE INSTALLATION .....	4-21
PRIMARY SHEAVE .....	4-22
<b>STARTER CLUTCH AND STARTER MOTOR</b> .....	4-24
STARTER CLUTCH AND STARTER MOTOR .....	4-24
STARTER CLUTCH AND GEARS INSPECTION .....	4-26
<b>C.D.I. MAGNET</b> .....	4-27
C.D.I. MAGNETO .....	4-27
C.D.I. MAGNETO REMOVAL .....	4-28
C.D.I. MAGNETO INSTALLATION .....	4-28
<b>AUTOLUBE PUMP</b> .....	4-29
AUTOLUBE PUMP .....	4-29
AUTOLUBE PUMP INSTALLATION .....	4-30
<b>TRANSMISSION</b> .....	4-31
TRANSMISSION .....	4-31
<b>CRANKCASE AND REED VALVE</b> .....	4-33
CRANKCASE AND REED VALVE .....	4-33
CRANKCASE(RIGHT) REMOVAL .....	4-35
CHECKING THE CRANKCASE .....	4-35
CHECKING THE BEARINGS AND OIL SEALS .....	4-35
REED VALVE INSPECTION .....	4-36
CRANKCASE (RIGHT) INSTALLATION .....	4-36
<b>CRANKSHAFT</b> .....	4-38
CRANKSHAFT .....	4-38
CRANKSHAFT REMOVAL .....	4-39
CRANKSHAFT INSPECTION .....	4-39
CRANKSHAFT INSTALLATION .....	4-40

---

**CHAPTER 5**  
**CARBURETION**

<b>CARBURETION</b> .....	5-1
CARBURETOR .....	5-1
CABURETOR DISASSEMBLY .....	5-2
CABURETOR INSPECTION .....	5-3
CARBURETOR ASSEMBLY .....	5-5
FUEL LEVEL ADJUSTMENT .....	5-6
AUTO CHOKE INSPECTION .....	5-7
FUEL COCK INSPECTION .....	5-8

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

---

## CHAPTER 6 CHASSIS

<b>FRONT WHEEL AND BRAKE DISC</b> .....	6-1
FRONT WHEEL AND BRAKE DISC .....	6-1
FRONT WHEEL DISASSEMBLY .....	6-2
FRONT WHEEL DISASSEMBLY .....	6-3
FRONT WHEEL INSPECTION .....	6-3
BRAKE DISC INSPECTION .....	6-4
FRONT WHEEL ASSEMBLY .....	6-4
FRONT WHEEL INSTALLATION .....	6-5
WHEEL STATIC BALANCE ADJUSTMENT .....	6-6
<b>FRONT BRAKE</b> .....	6-8
BRAKE PAD .....	6-8
BRAKE PAD REPLACEMENT .....	6-9
<b>MASTER CYLINDER</b> .....	6-12
<b>MASTER CYLINDER DISASSEMBLY</b> .....	6-13
MASTER CYLINDER INSPECTION .....	6-14
MASTER CYLINDER ASSEMBLY .....	6-14
MASTER CYLINDER INSTALLATION .....	6-15
<b>CALIPER</b> .....	6-17
<b>CALIPER DISASSEMBLY</b> .....	6-18
BRAKE CALIPER DISASSEMBLY .....	6-19
CALIPER INSPECTION .....	6-19
BRAKE CALIPER ASSEMBLY .....	6-20
BRAKE CALIPER INSTALLATION .....	6-20
<b>REAR WHEEL AND REAR BRAKE</b> .....	6-21
REAR WHEEL .....	6-21
REAR BRAKE .....	6-22
REAR WHEEL INSPECTION .....	6-23
REAR BRAKE INSPECTION .....	6-23
REAR BRAKE INSTALLATION .....	6-24
<b>HANDLEBAR</b> .....	6-25
HANDLEBAR .....	6-25
HANDLEBAR INSTALLATION .....	6-27
<b>STEERING</b> .....	6-29
STEERING .....	6-29
STEERING REMOVAL .....	6-30
STEERING INSPCTION .....	6-31
STEERING INSTALLATION .....	6-31
<b>FRONT FORK</b> .....	6-34
FRONT FORK .....	6-34
FRONT FORK DISASSEMBLY .....	6-35
FRONT FORK REMOVAL .....	6-36
FRONT FORK DISASSEMBLY .....	6-36
FRONT FORK INSPECTION .....	6-37
FRONT FORK ASSEMBLY .....	6-37
FRONT FORK INSTALLATION .....	6-39

---

## CHAPTER 7 ELECTRICAL


<b>ELECTRICAL COMPONENTS</b> .....	7-1
ELECTRICAL COMPONENTS .....	7-1
CIRCUIT DIAGRAM .....	7-2
<b>CHECKING SWITCHES</b> .....	7-4
CHECKING STEPS .....	7-4
SWITCH CONNECTION AS SHOWN IN THIS MANUAL .....	7-4
<b>SWITCH POSITION AND TERMINAL CONNECTION</b> .....	7-5
<b>CHECKING THE BLUBS AND BULB SOCKETS</b> .....	7-5
CHECKING THE BULBS AND BULB SOCKETS .....	7-6
TYPES OF BULBS .....	7-6
CHECKING THE CONDITION OF THE BULBS .....	7-7
CHECKING THE CONDITION OF THE BULB SOCKETS .....	7-8
<b>IGNITION SYSTEM</b> .....	7-9
CIRCUIT DIAGRAM .....	7-9
TROUBLESHOOTING .....	7-10
<b>CHARGING SYSTEM</b> .....	7-14
CIRCUIT DIAGRAM .....	7-14
TROUBLESHOOTING .....	7-15
<b>ELECTRIC STARTING SYSTEM</b> .....	7-18
CIRCUIT DIAGRAM .....	7-18
TROUBLESHOOTING .....	7-19
STARTER MOTOR .....	7-22
STARTER MOTOR DISASSEMBLY .....	7-23
INSPECTION AND REPAIR .....	7-24
<b>LIGHTING SYSTEM</b> .....	7-26
CIRCUIT DIAGRAM .....	7-26
TROUBLESHOOTING .....	7-27
LIGHTING SYSTEM CHECK .....	7-29
<b>SIGNAL SYSTEM</b> .....	7-33
CIRCUIT DIAGRAM .....	7-33
TROUBLESHOOTING .....	7-34
SIGNAL SYSTEM CHECK .....	7-36
<b>AUTO CHOKE SYSTEM</b> .....	7-42
CIRCUIT DIAGRAM .....	7-42
TROUBLESHOOTING .....	7-43

---

## CHAPTER 8 TROUBLESHOOTING

<b>STARTING FAILURE/HARD STARTING</b> .....	8-1
FUEL SYSTEM .....	8-1
IGNITION SYSTEM .....	8-2
COMPRESSION SYSTEM .....	8-2
<b>POOR IDLE SPEED PERFORMANCE</b> .....	8-3
POOR IDLE SPEED PERFORMANCE .....	8-3
<b>POOR MEDIUM AND HIGH SPEED PERFORMANCE</b> .....	8-3
POOR MEDIUM AND HIGH SPEED PERFORMANCE .....	8-3
<b>FULTY AUTOMATIC(V-BELT TYPE)</b> .....	8-4
SCOOTER DOES NOT MOVE WHILE ENGINE IS OPERATING .....	8-4
CLUTCH OUT FAILURE .....	8-4
POOR STANDING START(LOW CLIMBING ABILITY) .....	8-4
POOR ACCELERATION(POOR HIGH SPEED) .....	8-4
<b>OVER HEAT</b> .....	8-5
OVERHEAT .....	8-5
<b>POOR SPEED</b> .....	8-5
POOR SPEED .....	8-5
<b>IMPROPER KICKING</b> .....	8-6
SLIPPING .....	8-6
HARD KICKING .....	8-6
KICK CRANK NOT RETURNING .....	8-6
<b>FAULTY BRAKE</b> .....	8-7
POOR BRAKING EFFECT .....	8-7
MALFUNCTION .....	8-7
<b>INSTABLE HANDLING</b> .....	8-8
INSTABLE HANDLING .....	8-8
<b>FAULTY SIGNAL AND LIGHTING SYSTEM</b> .....	8-9
HEADLIGHT DARK .....	8-9
BULB BURNT OUT .....	8-9
FLASHER DOES NOT BLINK .....	8-9
FLASHER KEEPS ON .....	8-9
FLASHER BLINKS SLOWER .....	8-10
FLASHER BLINKS QUICKER .....	8-10
HORN DOES NOT SOUND .....	8-10



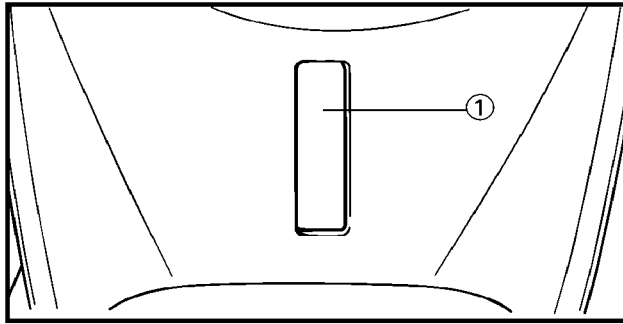

EAS00015

## GENERAL INFORMATION SCOOTER IDENTIFICATION

EAS00017



### VEHICLE IDENTIFICATION NUMBER

The vehicle identification number ① is stamped into the frame.



EAS00018

### MODEL CODE


The model code label ① is affixed to the location shown in the figure. Record the information on this label in the space provided. This information will be needed to order spare parts.

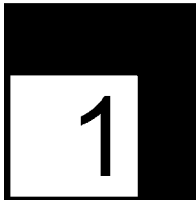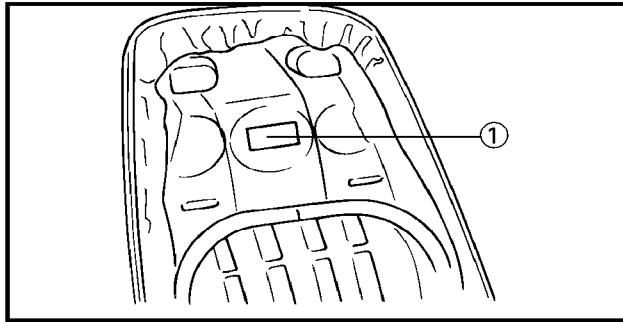

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

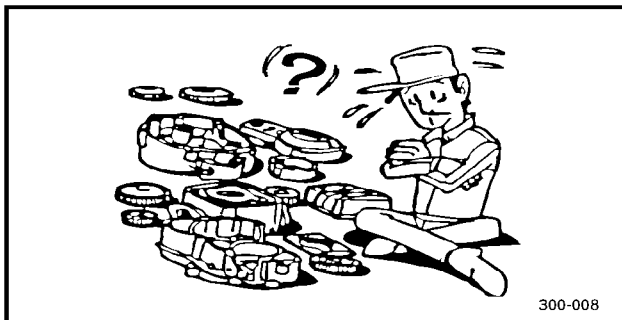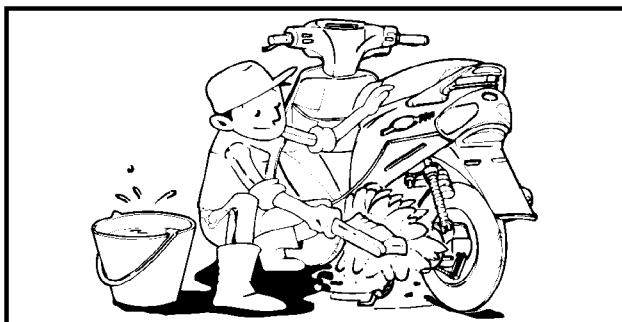

300-008

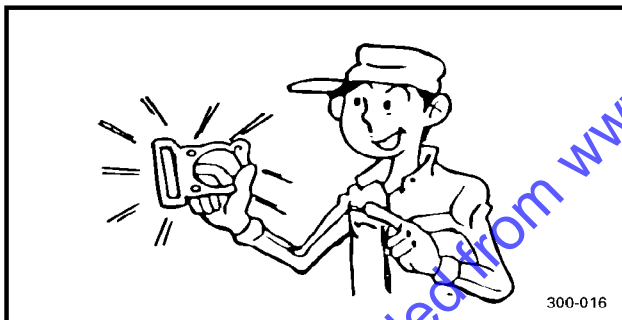

300-016

EAS00020

**IMPORTANT INFORMATION  
PREPARATION FOR REMOVAL AND DISASSEMBLY**

1. Before removal and disassembly, remove all dirt, mud, dust and foreign material.
2. Use only the proper tools and cleaning equipment. Refer to "SPECIAL TOOLS".
3. When disassembling, always keep mated parts together. This includes gears, cylinders, pistons and other parts that have been "mated" through normal wear. Mated parts must always be reused or replaced as an assembly.
4. During disassembly, clean all of the parts and place them in trays in the order of disassembly. This will speed up assembly and allow for the correct installation of all parts.
5. Keep all parts away from any source of fire.

EAS00021

**REPLACEMENT PARTS**

Use only genuine Yamaha parts for all replacements. Use oil and grease recommended by Yamaha for all lubrication jobs. Other brands may be similar in function and appearance, but inferior in quality.

EAS00022


**GASKETS, OIL SEALS AND O-RINGS**


1. When overhauling the engine, replace all gaskets, seals and O-rings. All gasket surfaces, oil seal lips and O-rings must be cleaned.
2. During reassembly, properly oil all mating parts and bearings and lubricate the oil seal lips with grease.

EAS00023

**LOCK WASHERS/PLATES AND COTTER PINS**

After removal, replace all lock washers/plates ① and cotter pins. After the bolt or nut has been tightened to specification, bend the lock tabs along a flat of the bolt or nut.

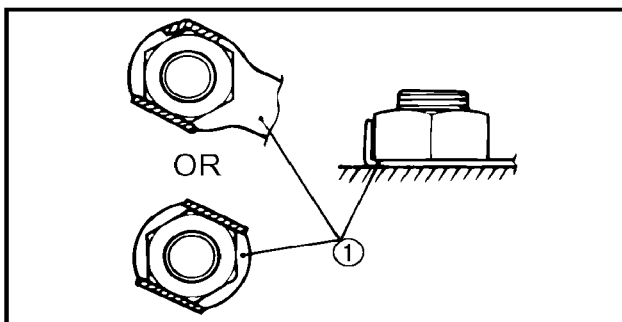

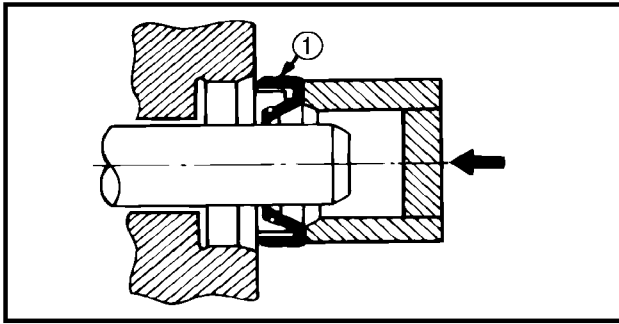


EAS00024

**BEARINGS AND OIL SEALS**

Install bearings and oil seals so that the manufacturer's marks or numbers are visible. When installing oil seals, lubricate the oil seal lips with a light coat of lithium soap base grease. Oil bearings liberally when installing, if appropriate.


① Oil seal

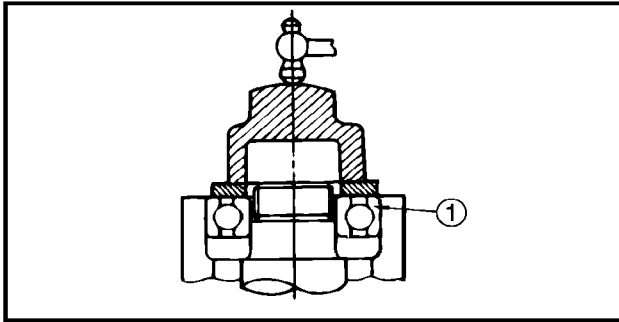

**CAUTION:**

**Do not spin the bearing with compressed air because this will damage the bearing surfaces.**

① Bearing

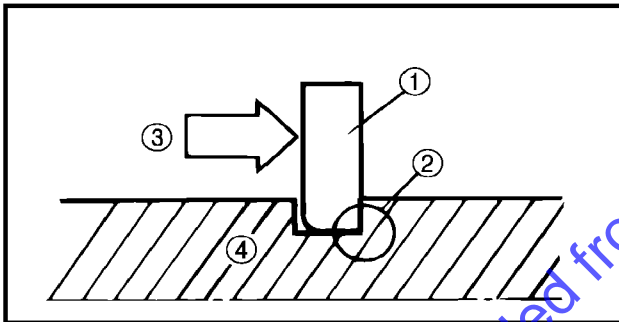


EAS00025





**CIRCLIPS**

Before reassembly, check all circlips carefully and replace damaged or distorted circlips. Always replace piston pin clips after one use. When installing a circlip ①, make sure the sharp-edged corner ② is positioned opposite the thrust ③ that the circlip receives.

④ Shaft

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

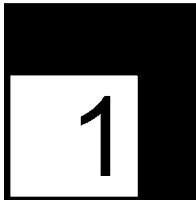

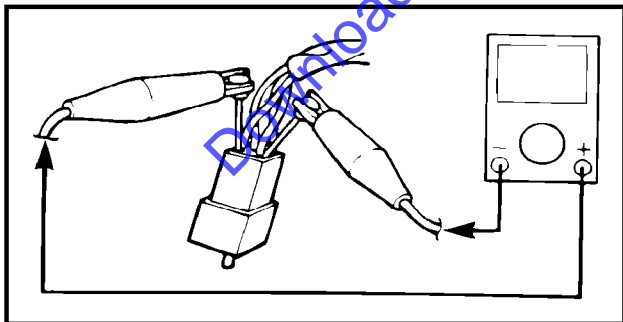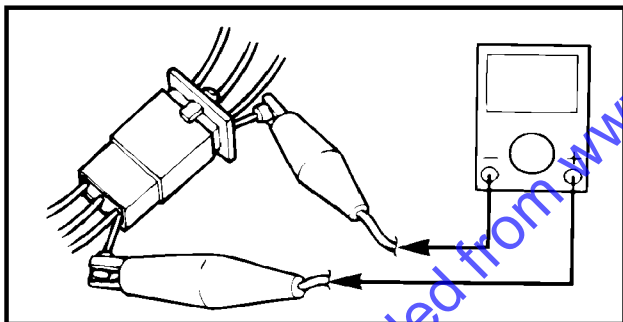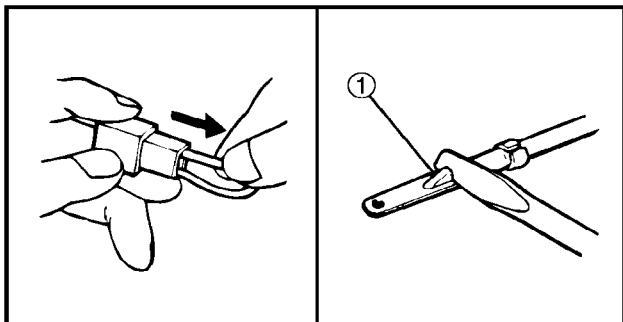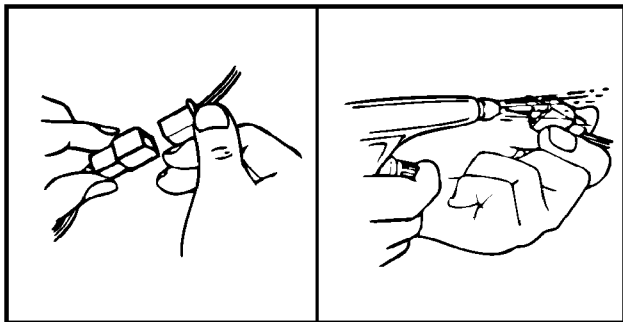

EB901000

**CHECKING OF CONNECTIONS**

Dealing with stains, rust, moisture, etc. on the connector.

1. Disconnect:
  - Connector
2. Dry each terminal with an air blower.
3. Connect and disconnect the connector two or three.
4. Pull the read to check that it will not come off.
5. If the terminal comes off, bend up the pin ① and reinsert the terminal into the connector.

6. Connect:
  - Connector

**NOTE:** \_\_\_\_\_

The two connectors "click" together.

\_\_\_\_\_

7. Check for continuity with a tester.

**NOTE:** \_\_\_\_\_

- If there is no continuity, clean the terminals.
- Be sure to perform the steps 1 to 7 listed above when checking the wireharness.
- For a field remedy, use a contact revitalizer available on the market.
- Use the tester on the connector as shown.

\_\_\_\_\_

## HOW TO USE THE CONVERSION TABLE



EB201000

### HOW TO USE THE CONVERSION TABLE

All specification data in this manual are listed in SI and METRIC UNITS.

Use this table to convert METRIC unit data to IMPERIAL unit data.

Ex.

METRIC	MULTIPLIER	IMP
** mm ×	0.03937	= ** in
2 mm ×	0.03937	= 0.083 in

### CONVERSION TABLE

METRIC TO IMP			
	Known	Multiplier	Result
Torque	m.kg	7.233	ft.lb
	m.kg	86.794	in.lb
	cm.kg	0.0723	ft.lb
	cm.kg	0.8679	in.lb
Weight	kg	2.205	lb
	g	0.03527	oz
Distance	km/h	0.6214	mph
	km	0.6214	mi
	m	3.281	ft
	m	1.094	yd
	cm	0.3937	in
	mm	0.03937	in
Volume/ Capacity	cc(cm <sup>3</sup> )	0.03527	oz (IMP liq.)
	cc(cm <sup>3</sup> )	0.06102	cu.in
	lit(liter)	0.8799	qt(IMP liq.)
	lit(liter)	0.2199	gal(IMP liq.)
Miscellaneous	kg/mm	55.997	lb/in
	kg/cm <sup>2</sup>	14.2234	psi(lb/in <sup>2</sup> )
	Centigrade	9/5(°C)+32	Fahrenheit (°F)

1







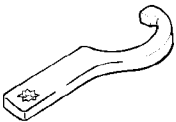




EE102000

## SPECIAL TOOLS

The following special tools are necessary for complete and accurate tune-up and assembly. Use only the appropriate special tools; this Will help prevent damage caused by the use of inappropriate tools or improvised techniques.

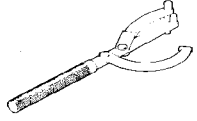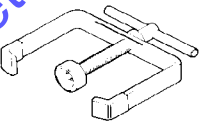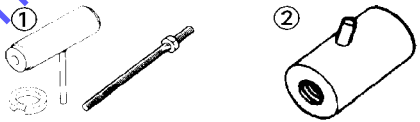
When placing an order, refer to the list provided below to avoid any mistakes.

Tool No.	Tool name / Function	Illustration
YU-01235	Rotor holding tool  This tool is used to hold the generator rotor when removing or installing the generator rotor bolt.	
YS-28891	Clutch spring holder  This tool is used to disassembly and assembly the secondary pulley.	
YU -90050 -90062	Crankshaft Installation set ① Adapter ② These tools are used to install the crankshaft.	
YU-01189	Flywheel puller  This tool is used for removing the rotor.	
YU- 01135-A	Crankcase Separating tool  This tool is used to remove the crankshaft or separate the crankcase.	
YM-33299	Oil seal guide  This tool is used for protecting the oil seal lip when installing the secondary sliding sheave.	
YU-33975	Steering nut wrench  This tool is used to loosen or tighten the steering stem ring nut.	
YU-01701	Sheave holder  This tool is used to hold the clutch housing when removing or installing the clutch housing nut.	
YU-8036-A	Inductive tachometer  This tool is used to check engine speed.	

# SPECIAL TOOLS



Tool No.	Tool name / Function	Illustration
YU-03112	<p>Pocket tester</p> <p>This tool is used to check the electrical system.</p>	
YM-1409	<p>Oil seal guide</p> <p>This tool is used to install the left side crankcase oil seal.</p>	
YM-1410	<p>Oil seal driver</p> <p>This tool is used to install the left side crankcase oil seal.</p>	
YM-34487	<p>Dynamic spark tester</p> <p>This instrument is necessary for checking the ignition system components.</p>	
ACC-1100-15-01	<p>Quick Gasket ®</p> <p>This sealant is used to seal to mating surfaces (e.g., crankcase mating surfaces).</p>	
90890-01348	<p>Locknut wrench</p> <p>This tool is used to loosen and tighten the clutch carrier locknut of the secondary sheave.</p>	
YU-33963 ① -1400 ②	<p>Front fork seal driver Weight ① Adapter ②</p> <p>These tools are used when installing the fork seal.</p>	
T-handle ① YM-01326 Holder YM-01300-1 ②	<p>T-handle ① / Damper rod holder ②</p> <p>These tools are needed to loosen and tighten the damper rod holding bolt.</p>	
YM-01312-A	<p>Fuel level gauge</p> <p>This gauge is used to measure the fuel level in the float chamber.</p>	

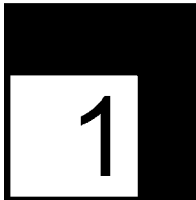



## SPECIFICATION

## GENERAL SPECIFICATION

Model	YW50AP
Model code:	5PJ1
Dimensions: Overall length Overall width Overall height Seat height Wheelbase Minimum ground clearance Minimum turning radius	1,890 mm(74.4 in) 705 mm(27.8 in) 1,110 mm(43.7 in) 765 mm(30.1 in) 1,275 mm(50.2 in) 120 mm(4.7 in) 2,000 mm(78.7 in)
Basic weight: With oil and full fuel tank	94 kg(207 lb)
Engine: Engine type Cylinder arrangement Displacement Bore × stroke Compression ratio Starting system Lubrication system:	Air cooled 2 stroke, gasoline torque induction Forward- inclined single cylinder 49cm <sup>3</sup> (2.99 cu.in) 40.0 × 39.2 mm(1.57 × 1.54 in) 7.2:1 Electric and kick starter Separate lubrication
Oil Type or Grade: Engine Oil	For YAMAHA brand: Yamalube 2 or Air cooled 2-stroke engine oil (ISO EG-C, EG-D grade)
Transmission Oil Oil Capacity: Oil Tank (Engine Oil) Transmission Oil: Periodic Oil Change Total Amount	Yamalube 4 SAE 10W/30 SE or GL gear oil 1.4 L (1.23 Imp.qt, 1.48 US qt) 0.11 L(0.096 Imp.qt, 0.12 US qt) 0.13 L(0.11 Imp.qt, 0.13 US qt)
Air Filter:	Wet type element
Fuel: Type Tank Capacity	Regular unleaded gasoline 5.7 L (1.25 Imp.gal, 1.5 US gal)
Carburetor: Type / Manufacturer	Y14P/1/ TEIKEI



# GENERAL SPECIFICATION

**SPEC**



Model	YW50A
Spark Plug: Type/Manufacturer Gap	BPR7HS/NGK 0.6 ~ 0.7 mm(0.02 ~ 0.03 in)
Clutch Type	Dry, Centrifugal automatic
Transmission: Primary Reduction System Primary Reduction Ratio Secondary Reduction System Secondary Reduction Ratio Transmission Type Operation	Helical gear 4.000 Supur gear 3.666 V-belt Automatic
Chassis: Frame type Caster angle Trail	Steel tube underbone 26.5° 93mm(3.7 in)
Tire: Type Size front rear Manufacturer front rear Type front rear	Tubeless 120/90-10 130/90-10 CHENG SHIN CHENG SHIN 56J 59J
Maximum load* Cold tire Pressure: Up to 90 kg Front Rear 90 kgload~Maximum load* Front Rear	143 kg(315 lb)  200kpa(2.0 kg/cm <sup>2</sup> , 29 psi) 200kpa(2.0 kg/cm <sup>2</sup> , 29 psi)  200kpa(2.0 kg/cm <sup>2</sup> , 29 psi) 200kpa(2.0 kg/cm <sup>2</sup> , 29 psi)
Brake: Front brake type operation Rear brake type operation	Single disc brake Right hand operation Drum brake Left hand operation
Suspension: Front suspension Rear suspension	Telescopic fork Unit swing
Shock absorber: Front shock absorber Rear shock absorber	Coil spring/oil damper Coil spring/oil damper
Wheel travel: Front wheel travel Rear wheel travel	65 mm(2.56 in) 60 mm(2.36 in)
Electrical: Ignition system Generator system Battery type Battery capacity	C.D.I Flywheel Magneto YTX5L-BS 12V 4AH

# GENERAL SPECIFICATION

**SPEC**




Model	YW50A
Headlight type:	Bulb
Bulb wattage x quantity:	
Headlight	12V 35W/35W×2
Tail/brake light	12 V 5W/21W×1
Flasher light	10W×4
Licence plate light	5W×1
Meter light	3.4W×1/1.7W×1
High beam indicator light	1.7W×1
Oil indicator light	1.7W×1
Turn indicator light	1.7W×1

**2**

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)




**MAINTENANCE SPECIFICATION**  
**ENGINE**

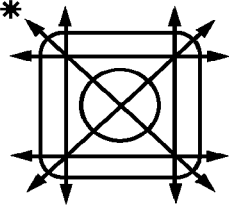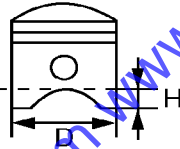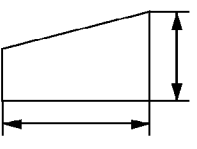Item	Standard	Limit
Cylinder head: Warp limit 	...	0.03 mm (0.0012 in)
*Lines indicate straightedge measurement		
Cylinder: Bore size	40.000~40.014mm (1.5748~1.5754 in)	40.10 mm (1.5787 in)
Taper limit	...	0.05 mm (0.0020 in)
Out of round limit	...	0.03 mm (0.0012 in)
Piston: Piston to cylinder clearance Piston size "D" Measuring point "H" Piston pin bore inside diameter Piston pin outside diameter	 0.035~0.040 mm (0.0014~0.0016 in) 39.958~39.972 mm (1.5731~1.5737 in) 5 mm(0.2 in) 10.004~10.015 mm (0.3939~0.3943 in) 9.996~10.000 mm (0.3935~0.3937 in)	0.10 mm (0.0039 in) ... ... 10.045 mm (0.4 in) 9.975 mm (0.39 in)
Piston Ring: Sectional Sketch (B × T)/Type Top Ring 2nd Ring End Gap (Installed): Top Ring 2nd Ring Side Clearance ( Installed): Top Ring 2nd Ring	 1.2 × 1.6 mm/ keystone (0.05 × 0.06 in) 1.2 × 1.6 mm/ keystone (0.05 × 0.06 in) 0.15~0.35 mm (0.005~0.01 in) 0.15~0.35 mm (0.005~0.01 in) 0.03~0.05 mm (0.0012~0.0020 in) 0.03~0.05 mm (0.0012~0.0020 in)	0.6 mm(0.02 in) 0.6 mm(0.02 in) 0.1 mm(0.0039 in) 0.1 mm(0.0039 in)

# MAINTENANCE SPECIFICATION

**SPEC**



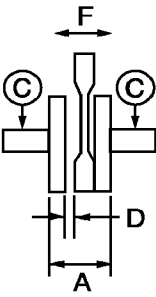

Item	Standard	Limit
<p><b>Crankshaft:</b></p> <div style="text-align: center;">  </div> <p>Crank Width "A" Run Out Limit "C" Connecting Rod Big End Side Clearance "D" Small End Free Play "F"</p>	<p>37.90~37.95 mm(1.49~1.49 in) 0.03 mm(0.0012 in) 0.2~0.5 mm (0.0029~0.020 in) 0.4~0.8 mm (0.016~0.031 in)</p>	<p>... ... 1.0 mm(0.04 in) ...</p>
<p><b>Automatic centrifugal clutch:</b> Clutch shoe thickness Clutch housing inside diameter Clutch shoe spring free length Clutch - in revolution Clutch - stall revolution</p>	<p>4.0 mm(0.16 in) 105 mm (4.13 in) 94 mm(3.7 in) 3,300~3,700 r/min 5,500~6,500 r/min</p>	<p>2.5 mm(0.1 in) 105.5 mm (4.15 in) 91 mm(3.58 in) ... ...</p>
<p><b>V-belt:</b> V-belt width</p>	<p>16.6 mm(0.65 in)</p>	<p>14.6 mm(0.57 in)</p>
<p><b>Kick Starter:</b> Type Kick Clip Tension</p>	<p>Ratchet type 1.5~2.5 N (0.15~0.25 kgf) (0.34~0.56 lb)</p>	
<p><b>Carburetor:</b> I.D. Mark Main Jet (M.J.) Needle jet (NJ) Jet Needle-clip Position (J.N.) Main Air Jet (M.A.J.) Cutaway (C.A.) Pilot Jet (P.J.) Bypass Valve Seat Size (V.S.) Starter Jet (G.S.) Float Height Fuel level height Engine Idling Speed</p>	<p>5DA-01 #80 2.085 3N24-3/5 2.0 3.5 #44 0.8 1.8 #48 15~17 mm(0.59 ~ 0.67 in) 3.0~4.0 mm(0.12 ~0.16 in) 1,750~1,850 r/min</p>	
<p><b>Reed Valve:</b> Thickness Valve Stopper Height Valve bending limit</p>	<p>0.150~0.154 mm(0.059~0.0060 in) 6.0~6.4 mm(0.24~0.25 in) 0.2 mm (0.0078)</p>	

2



**TIGHTENING TORQUES  
ENGINE**

Part to be tightened	Part name	Thread size	Q'ty	Tightening torque			Remarks
				Nm	m•kg	ft•lb	
Spark plug	—	M 14	1	20	2.0	14	
Cylinder head and cylinder	Nut	M 7	4	14	1.4	10	
Cylinder	Stud bolt	M 7	4	10	1.0	7	
Air shroud 1	Screw	M 6	3	7	0.7	5.1	
Air shroud 1×2	Screw	6.0	1	2	0.2	1.4	
Fan	Screw	M 6	3	7	0.7	5.1	
Autolube pump	Screw	M 5	2	4	0.4	2.8	
Reed valve	Bolt	M 6	4	11	1.1	8.0	
Air filter	Screw	M 6	2	9	0.9	6.5	
Carburetor cap	Screw	M 4	2	2	0.2	1.4	
Exhaust pipe	Screw	M 6	2	9	0.9	6.5	
Muffler	Bolt	M 8	2	26	2.6	18.2	
Exhaust protector	Bolt	M 6	3	11	1.1	8.0	
Protector	Screw	M 6	1	9	0.9	6.5	
Crankcase 1×2	Bolt	M 6	6	12	1.2	8.4	
Transmission case cover	Bolt	M 6	6	12	1.2	8.4	
Crankcase cover 1(left)	Bolt	M 6	12	12	1.2	8.4	
Bolt(case2)	Screw	M 6	1	7	0.7	5.1	
Crankcase cover2(left)	Bolt	M 6	3	7	0.7	5.1	
Drain bolt	Bolt	M 8	1	18	1.8	13	
Oil plug	Plug	M 14	1	3	0.3	22	
Idle gear plate	Screw	M 6	2	8	0.8	5.8	
Kick crank	Bolt	M 6	1	9	0.9	6.5	
Starter motor	Bolt	M 6	2	13	1.3	9.4	
Clutch housing	Nut	M 10	1	40	4.0	29	
Clutch weight	Nut	M 10	1	30	3.0	22	
Magnet base	Screw	M 6	2	8	0.8	5.8	
C.D.I. rotor	Nut	M 10	1	38	3.8	27	




CHASSIS

Item	Standard	Limit
Steering system: Steering bearing type No /size of steel balls:      Upper Lower	Ball and race bearing 22 pcs 19 pcs	... ... ...
Front suspension: Front fork travel Fork spring free length Fork length (Installed) Spring rate (K1) (K2) Inner tube vend limit	70 mm(2.8 in) 236.6 mm(9.31 in) 212.1 mm(8.35 in) 15.68 Nm/mm(1.6 kg/mm,90lb/in) 23.5 Nm/mm(2.43 kg/mm,136lb/in) ...	... 233.6 mm ... ... ... 0.2 mm (0.008 in)
Rear suspension: Shock absorber stroke Shock absorber free length (Installed) Spring free length (Installed) Spring rate (K1)	55 mm(2.2 in) 281.8 mm(11.1 in) 159.8 mm(6.29 in) 71.15 N/mm(7.26 kg/mm,407lb/in)	... ... ... ...
Front wheel: Type Rim size Rim material Rim runout limit               radial lateral	Cast wheel MT3.50×10 Aluminum ... ...	... ... ... 1 mm(0.04 in) 1 mm(0.04 in)
Rear wheel: Type Rim size Rim material Rim runout limit               radial lateral	Cast wheel MT3.50×10 Aluminum ... ...	... ... ... 1 mm(0.04 in) 1 mm(0.04 in)
Front disc brake: Type Disc outside diameter × thickness  Pad thickness Master cylinder inside diameter Caliper cylinder outside diameter Brake fluid type	Single 180×4.0mm (7.1×0.16 in)  6 mm(0.24 in) 11 mm(0.4 in) 34.93 mm(1.38 in) DOT #4(or DOT #3)	... 180×3.5 mm (7.1×0.14in)  0.8 mm(0.03 in) ... ... ...
Rear drum brake: Type Drum inside diameter Shoe thickness	Leading, trailing 130 mm(5.12 in) 4 mm(0.16 in)	... 131 mm(5.16 in) 2 mm(0.08 in)
Brake lever: Brake lever free play (front at lever side) Brake lever free play (rear) Throttle cable free play	2~5 mm(0.08~0.20 in) 10~20 mm(0.39~0.79 in) 3~5 mm(0.12~0.20 in)	... ... ...





**TIGHTENING TORQUES  
CHASSIS**

Part to be tightened	Thread size	Tightening torque			Remarks	
		Nm	m•kg	ft•lb		
Frame and engine bracket	M 12	84	8.4	61	See "page3-18"	
Engine bracket, compression rod and engine	M 10	45	4.5	31		
Rear carrier	M 6	13	1.3	9.4		
Rear shock absorber and frame	M 10	30	3.0	22		
Rear shock absorber and engine	M 8	16	1.6	12		
Steering ring nut	M 25	22	2.2	16		
Handle holder and steering shaft	M 10	43	4.3	37		
Brake hose and master cylinder	M 8	20	2.0	14		
Fuel tank	M 6	10	1.0	7		
Fuel cock	M 6	7	0.7	5.1		
Fuel sender	M 5	4	0.4	2.9		
Box	M 6	7	0.7	5.1		
Seat lock assembly	M 6	7	0.7	5.1		
Plastic parts & cover	M 5	2	0.2	1.4		
Footrest board	M 6	7	0.7	5.1		
Front wheel axle and nut	M 10	70	7.0	51		
Rear wheel axle and nut	M 14	120	12.0	87		
Rear brake cam lever	M 6	10	1.0	7.2		
Front brake caliper and front fork	M 8	23	2.3	16.6		
Brake disc and hub	M10	20	2.0	14.5		
Brake hose and caliper	M 8	23	2.3	16.6		
Brake caliper and bleed screw	M 5	6	0.6	4.3		

Downloaded from www.ScooterTime.net

**ELECTRICAL**

Item	Standard	limit
Ignition timing: Ignition timing (B.T.D.C.) Advanced type	14° at 5,000 r/min Fixed	... ...
C.D.I.: Pickup coil resistance/color Source coil resistance/color C.D.I. unit model/manufacture	248 ~ 372Ω at 20°C (68°F) (W/R-W/L) 640 ~ 960 Ω at 20°C (68°F) (B/ R-G/W) 5PJ/TIIC	... ... ... ...
Ignition coil: Model/manufacture Minimum spark gap Primary winding resistance Secondary winding resistance	4WX/TIIC 6 mm (0.24 in) 0.32~0.48 Ω at 20°C (68°F) 5.68~8.52kΩ at 20°C (68°F)	... ... ... ...
Spark plug cap: Type Resistance	Resin 5 kΩ	... ...
Charging System/Type:	Flywheel magneto	...
C.D.I. Magneto: Model/Manufacturer Nominal output Charging current Charging voltage Charging Coil Resistance (Color) Lighting Coil Resistance (Color) Lighting Voltage Rectifier: Model/Manufacturer Capacity Withstand voltage	5PJ/TIIC 12V 85W/5,000 rpm 0.6A at 3,000r/min 1.2A at 8,000r/min 13~14V at 4,000 rpm 0.48~0.72 Ω (White-Black) 0.4~0.6 Ω (Yellow/Red- Black) 12~15V (3,000~8,000 rpm) 3GF/Taichung 8A 18V	... ... ... ... ... ... ... ... ... ... ...
Battery: Specific gravity	1.320	...
Electric starter system: Type Starter motor: Model/manufacture/ID number Output Armature coil resistance Brush overall length Spring force Commutator diameter Mica undercut (depth)	Constant mesh type 4WX/shulin 0.14 kw 0.0648 ~ 0.0792 Ω at 20°C (68°F) 6.5 mm (0.26 in) 5.49 ~ 8.24 N (360~540 g) (12.69~19.04 oz) 16.1 mm (0.63 in) 1.05 mm (0.04 in)	... ... ... ... 3 mm (0.12 in) 400g 15.1 mm (0.59 in) ...
Starter relay: Model/manufacture Amperage rating Coil resistance	4WX/Shulin 20A 54~66 Ω	... ... ...



# MAINTENANCE SPECIFICATION

**SPEC**


Item	Standard	limit
Horn: Model/manufacture Maximum amperage	4KP/Asian 1.5A	... ...
Flasher relay: Type Flasher frequency	Capacitor 60~120 Cycle/min	... ...
Fuel gage: Model/manufacture Sender unit resistance     - full - empty	4VP/San Chu 4~10 Ω 90~100 Ω	... ... ...
Oil level gauge: Model/manufacture	4VP/Lun Ping	...
Circuit breaker: Type MAIN	Fuse 7Ax1pc.	... ...

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

**GENERAL TORQUE SPECIFICATIONS**

This chart specifies torque for standard fasteners with standard I.S.O. pitch threads. Torque specifications for special components or assemblies are included in the applicable sections of this book. To avoid warpage, tighten multi-fastener assemblies in a crisscross fashion, in progressive stages, until full torque is reached. Unless otherwise specified, torque specifications call for clean, dry threads. Components should be at room temperature.

A (Nut)	B (Bolt)	General torque specifications		
		Nm	m•kg	ft•lb
10 mm	6 mm	6	0.6	4.3
12 mm	8 mm	15	1.5	11
14 mm	10 mm	30	3.0	22
17 mm	12 mm	55	5.5	40
19 mm	14 mm	85	8.5	61
22 mm	16 mm	130	13.0	94

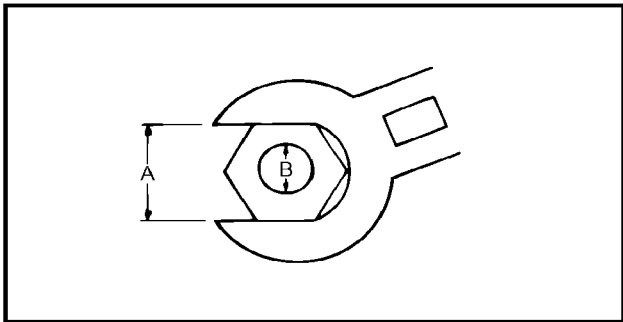

A: Distance across flats  
B: Outside thread diameter

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

# LUBRICATION POINTS AND LUBRICATION TYPE

**SPEC**



## LUBRICATION POINTS AND LUBRICATION TYPE

### ENGINE

Lubrication Point	Lubricant Type
Oil seal lips	
O-rings	
Bearings	
Piston surface	
Piston pin	
Cylinder	
Transmission case (bearing)	
Autolube pump	
Starter wheel gear	
Idle gear plate	
Secondary drive gear	
Kickstarter pinion gear	
Drive axle	
Pump drive gear	
Main axle	
Main axle (bearing)	

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)



**CHASSIS**

Lubrication Point	Lubricant Type
Oil seal lips	
O-rings	
Bearings	
Speedometer drive gear	
Front brake camshaft	
Front brake cable	
Throttle cable	
Tube guide (throttle grip) inner surface	
Upper steering stem ring nut	
Upper bearing outer race	
Lower bearing outer race	
Rear brake camshaft	
Centerstand	


Downloaded from www.ScooterTime.net



**CABLE ROUTING**

- ① Horn
- ② Rectifier regulator
- ③ Main switch
- ④ Headlight leads
- ⑤ Speedometer cable
- ⑥ Ignition coil
- ⑦ Throttle cable 1
- ⑧ Throttle cable 3
- ⑨ Battery negative(-)
- ⑩ Wire brake
- ⑪ Fuel sender lead
- ⑫ Seat lock cable
- ⑬ Oil tank hose
- ⑭ C.D.I. unit


- ⑮ Wire harness brand.
- [A] Pass the speedometer cable through the right hole of front fender, then through the guide.
- [B] Pass the wire harness through the inside of ignition coil.
- [C] Secure the ground lead and the ignition coil base to the ignition coil stay.
- [D] Pass the wire harness through the inside of oil tank.
- [E] Pass the seat cable through the inside of frame.
- [F] Align the clip with the white
- [G] Clamp the wire harness.
- [H] Insert the seat cable through the frame tube.
- [I] Clamp wireharness, rear brake cable throttle cable 1,3.
- [J] Position the cylinder between the supporter and main switch.

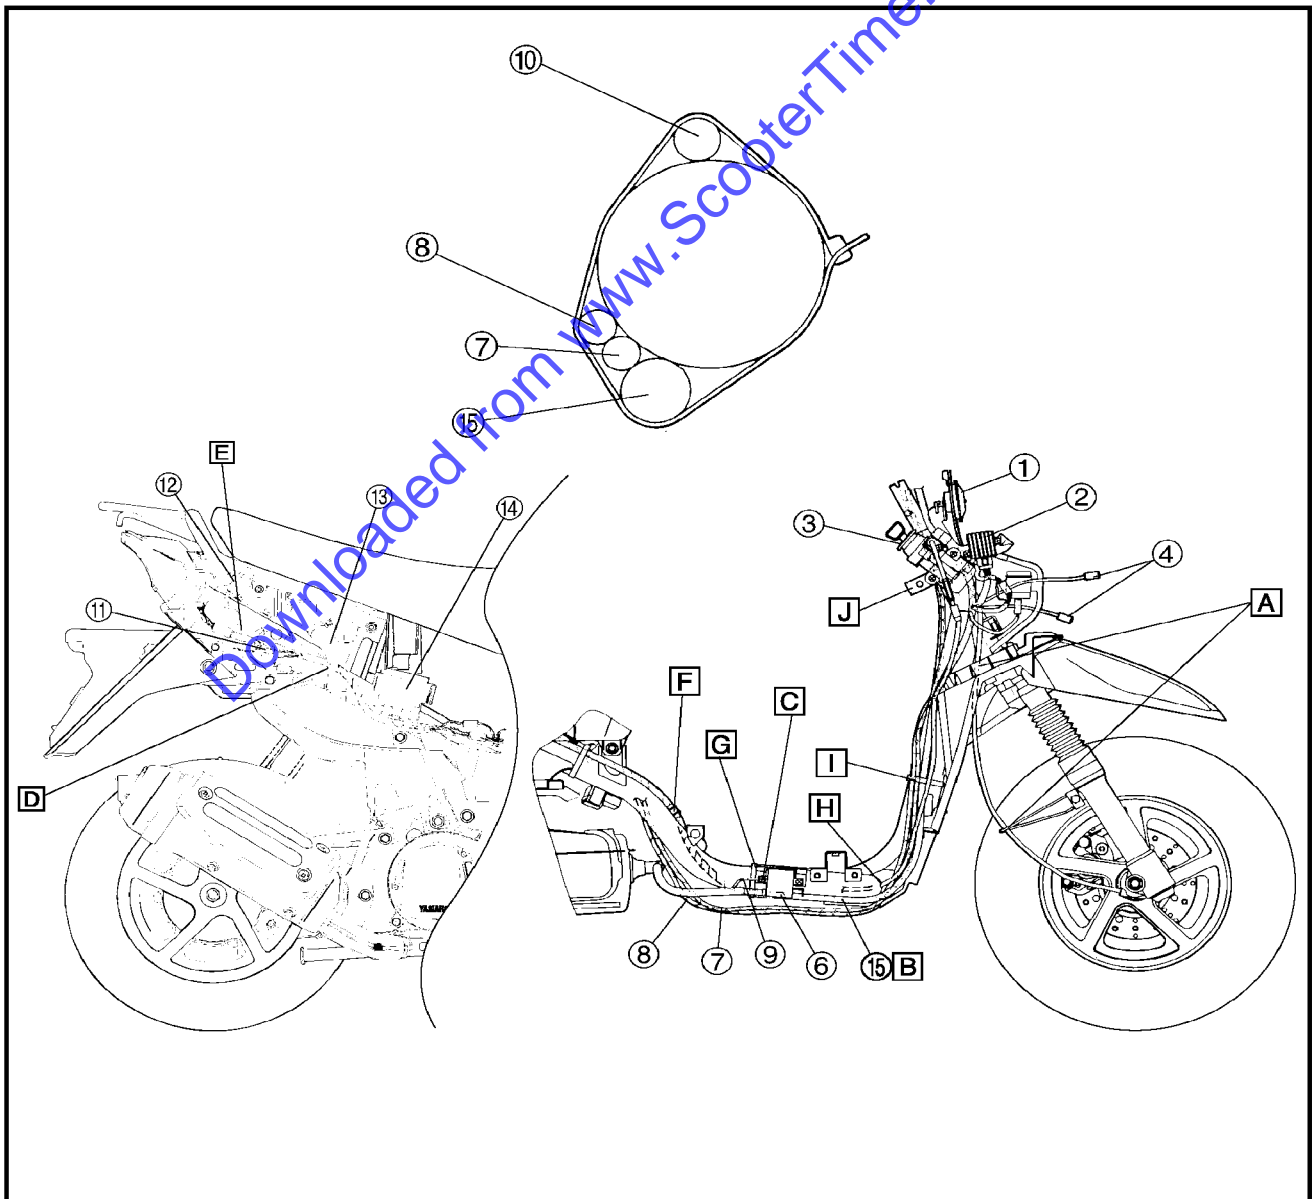



- ① Brake cable
- ② Speedometer cable
- ③ Fuel tank overflow hose
- ④ Brake cable holder
- ⑤ Brake hose
- ⑥ Brake hose holder
- ⑦ License bracket
- ⑧ Flasher relay
- ⑨ Fuel tank breather hose
- ⑩ Fuel hose
- ⑪ Breather hose


- [A] Pass the brake hose through the holder.
- [B] Insert the fuel overflowhose bottom.
- [C] Pass the fuel overflowhose through the rear fender hole.
- [D] Pass the fuel overflowhose through the holder.
- [E] Hold the fuel overflowhose with a clamp.
- [F] Pass the brake cable through the holder.

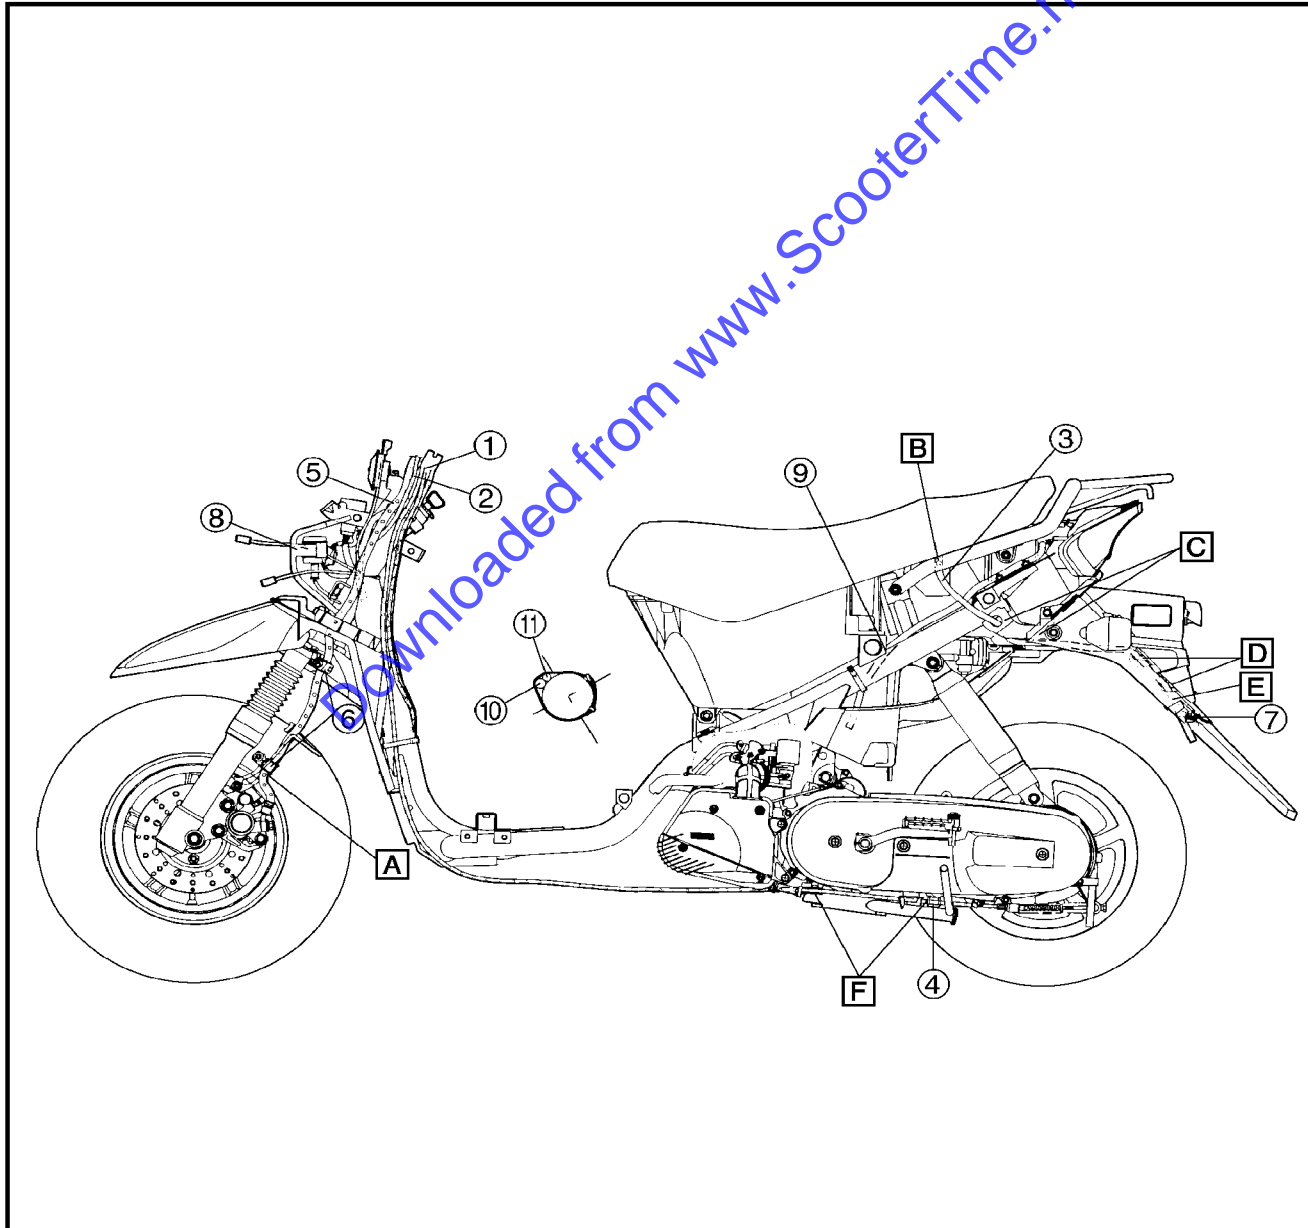




- ① Brake hose
- ② Front fender
- ③ Front fork assembly
- ④ Nut
- ⑤ Plate washer
- ⑥ Brake hose holder
- ⑦ Flange bolt
- ⑧ Bolt
- ⑨ Brake hose holder
- ⑩ Flange bolt

[A] Pass the brake hose through the holder.

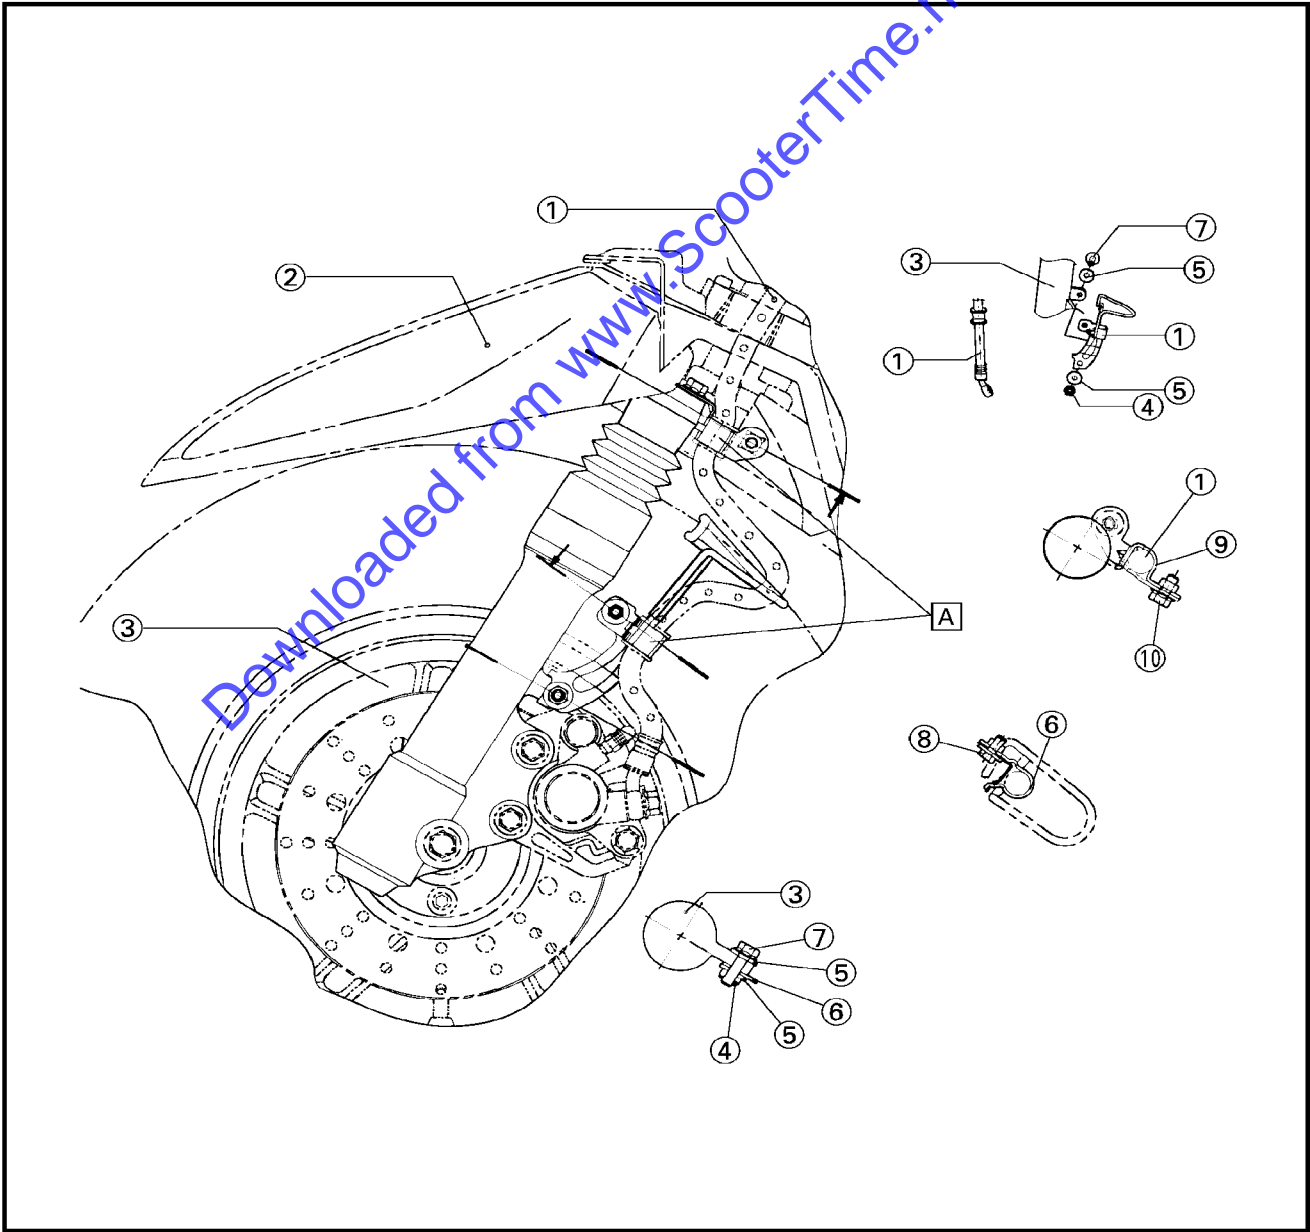



- |                           |  |  |
|---------------------------|--|--|
| ① Ignition coil           | ⑭ Battery(+)lead   | and autolube hose on to carburetor throttle cable.   |
| ② Spark plug lead         | A Pass battery leads through the slot of footrestboard.              | G Pass the battery leads over frame member.  |
| ③ Starter relay leads     | B Cover them after securing starter relay leads.                     | H Put fuse box on to footrest board holder.  |
| ④ Auto choke leads        | C Pass the seat lock cable through the hole of bracket.              | I Pass throttle cable, 1,3 wireharness, autolube pump cable, brake cable through the outside of battery box. |
| ⑤ Starter relay           | D Pass the fuel tank breath hose over seat lock cable.               |  |
| ⑥ Bind                    | E Clamp carburetor vacuum hose, fuel hose and fuel cock vacuum hose. |  |
| ⑦ C.D.I. unit             | F Clamp autochoke leads  |  |
| ⑧ Autolube hose           |  |  |
| ⑨ Seat lock cable         |  |  |
| ⑩ Bracket                 |  |  |
| ⑪ Fuel tank breather hose |  |  |
| ⑫ Bind 2                  |  |  |
| ⑬ Battery(-)lead          |  |  |

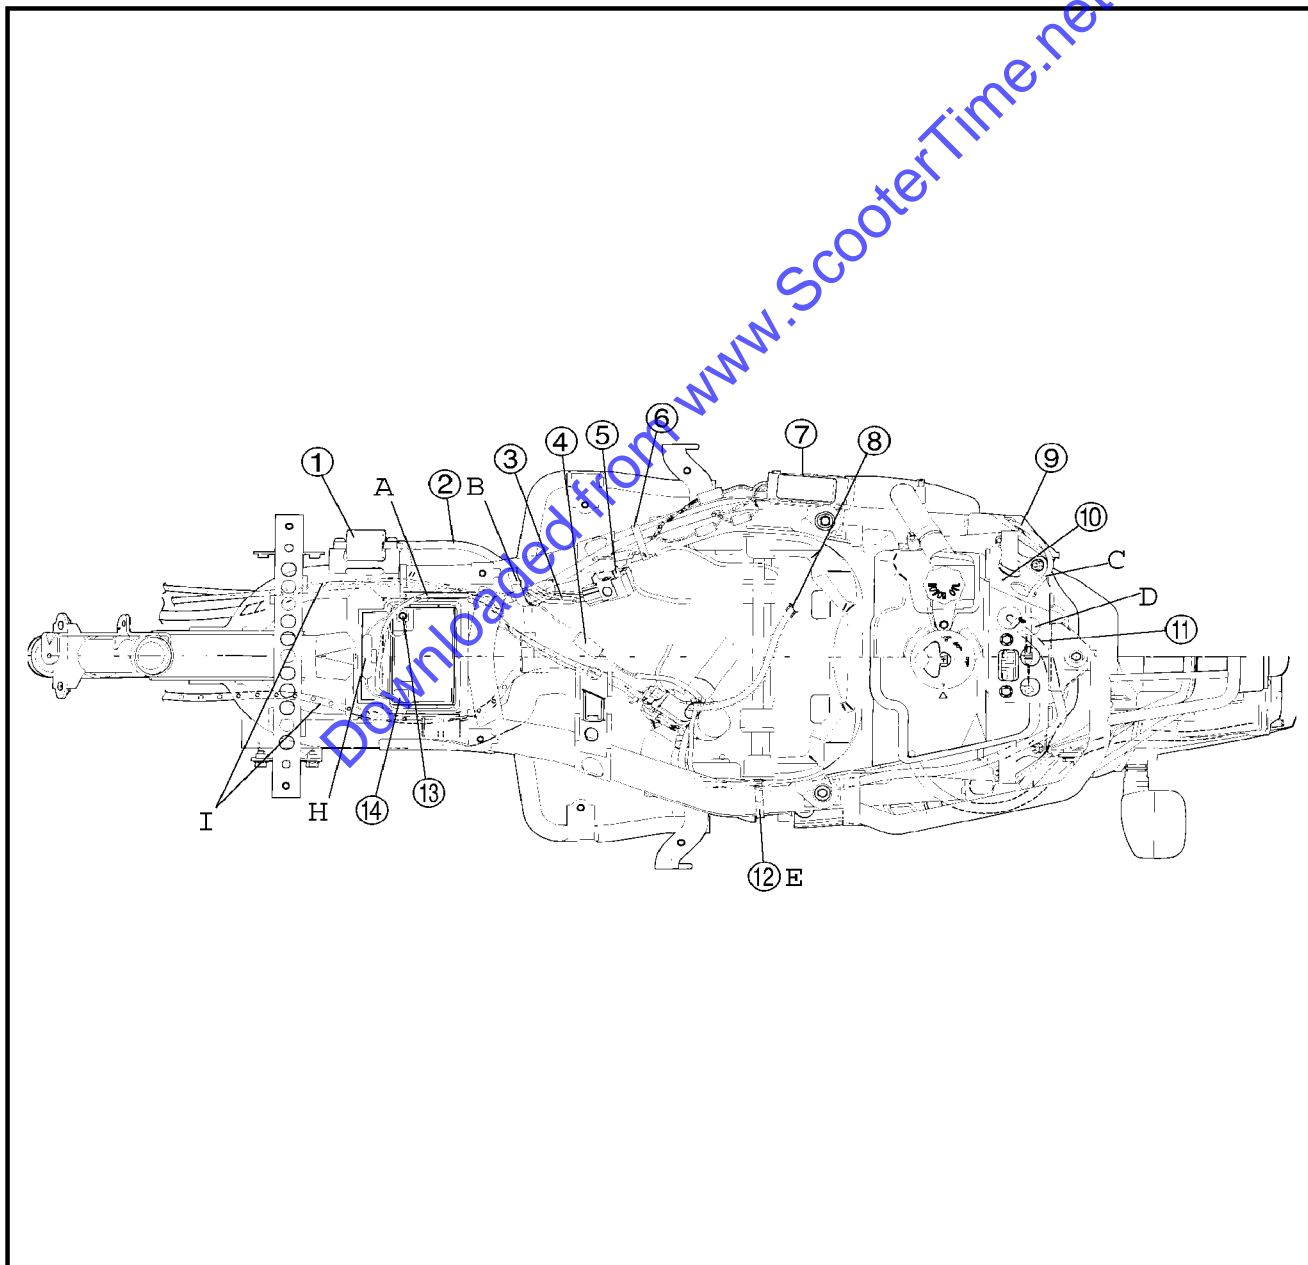






- ① Handlebar switch(right)
- ② Speedometer
- ③ Wire brake
- ④ Handlebar switch(left)
- ⑤ Wire harness
- ⑥ Brake hose
- ⑦ Speedometer cable
- ⑧ Throttle cable1
- ⑨ Throttle cable 3
- ⑩ Front flasher leads

- A Pass brake cable through the slot of bracket.
- B Avoid clamping front flasher leads when installing handlebar covers.
- C Pass throttle cable1,3 through between handlebar and wireharness.
- D Hang the wireharness bind on to the bracket.

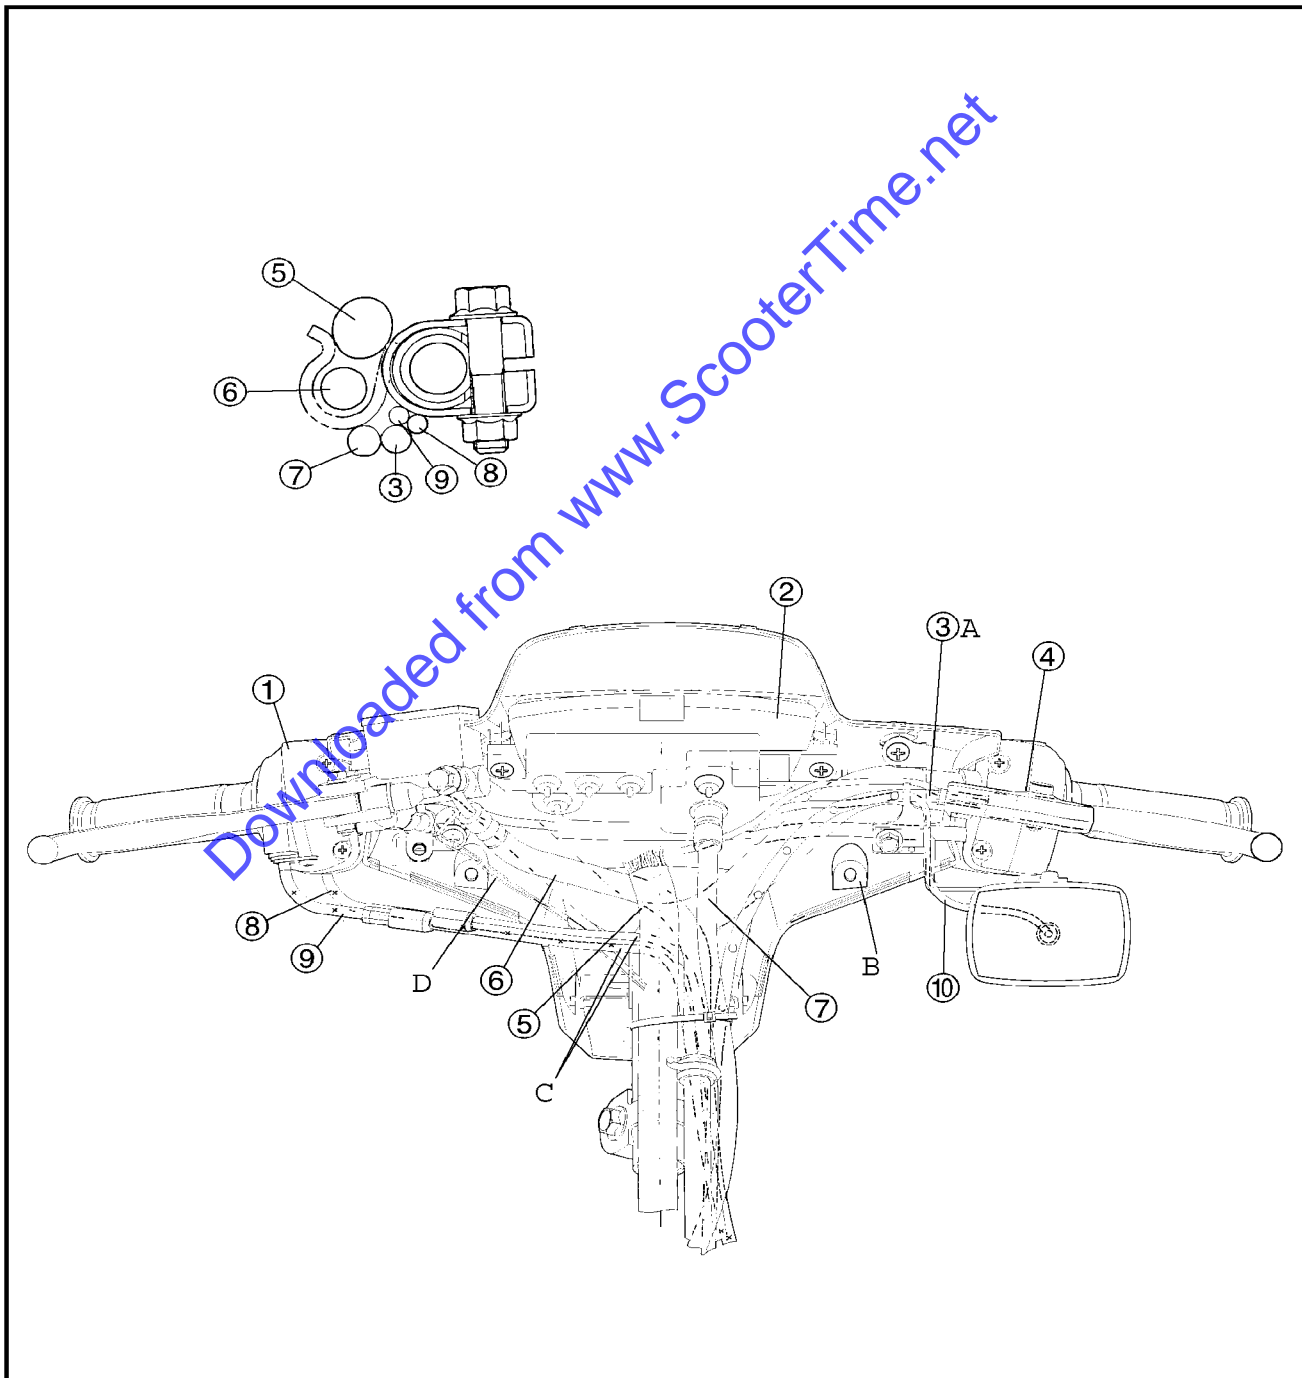

EB300000

## PERIODIC INSPECTIONS AND ADJUSTMENTS

### INTRODUCTION

This chapter includes all information necessary to perform recommended inspections and adjustments. These preventive maintenance procedures, if followed, will ensure more reliable vehicle operation and a longer service life. The need for costly overhaul work will be greatly reduced. This information applies to vehicles already in service as well as to new vehicles that are being prepared for sale. All service technicians should be familiar with this entire chapter.

YP301000

### PERIODIC MAINTENANCE/LUBRICATION INTERVALS

NO.	ITEM	ROUTINE	TYPE	BREAK-IN	EVERY	
				INITIAL 1,000 km (600 mi)	3,000 km (2,000 mi) or 6 months (whichever comes first)	6,000 km (4,000 mi) or 12 months (whichever comes first)
1 *	Fuel line	<ul style="list-style-type: none"> <li>• Check fuel hoses and vacuum hose for cracks or damage.</li> <li>• Replace if necessary.</li> </ul>	–		○	○
2	Spark plug	<ul style="list-style-type: none"> <li>• Check condition.</li> <li>• Clean, regap or replace if necessary.</li> </ul>	Refer to SPARK PLUG INSPECTION	○	○	○
3	Air filter element	<ul style="list-style-type: none"> <li>• Clean or replace if necessary.</li> </ul>	Same as engine oil		○	○
4 *	Front brake	<ul style="list-style-type: none"> <li>• Check operation, fluid level and vehicle for fluid leakage.</li> </ul>	Brake fluid DOT 4 (or DOT 3)	○	○	○
		<ul style="list-style-type: none"> <li>• Replace brake pads.</li> </ul>		Whenever worn to the limit.		
5 *	Rear brake	<ul style="list-style-type: none"> <li>• Check operation.</li> <li>• Adjust brake lever free play.</li> </ul>	–	○	○	○
		<ul style="list-style-type: none"> <li>• Replace brake shoes.</li> </ul>		Whenever worn to the limit.		
6 *	Wheels	<ul style="list-style-type: none"> <li>• Check balance, runout and for damage.</li> <li>• Replace if necessary.</li> </ul>	–		○	○
7 *	Tires	<ul style="list-style-type: none"> <li>• Check tread depth and for damage.</li> <li>• Replace if necessary.</li> <li>• Check air pressure.</li> <li>• Correct if necessary.</li> </ul>	–	○	○	○
8 *	Wheel bearings	<ul style="list-style-type: none"> <li>• Check Bearing for looseness or damage.</li> <li>• Replace if necessary.</li> </ul>	–		○	○
9 *	Steering bearings	<ul style="list-style-type: none"> <li>• Check bearing play and steering for roughness.</li> </ul>		○	○	○
		<ul style="list-style-type: none"> <li>• Lubricate with lithium soap base grease.</li> </ul>	–	Every 12,000 km(8,000 mi) or 24 months(whichever occurs first).		
10 *	Chassis fasteners	<ul style="list-style-type: none"> <li>• Make sure that all nuts, bolts and screws are properly tightened.</li> </ul>	–		○	○

## PERIODIC INSPECTION AND ADJUSTMENTS



NO.	ITEM	ROUTINE	TYPE	BREAK-IN	EVERY	
				INITIAL 1,000 km (600 mi)	3,000 km (2,000 mi) or 6 months (whichever comes first)	6,000 km (4,000 mi) or 12 months (whichever comes first)
11	Centerstand	<ul style="list-style-type: none"> <li>• Check operation.</li> <li>• Lubricate with lithium soap base grease (all purpose grease).</li> </ul>	Same as engine oil		○	○
12	* Front fork	<ul style="list-style-type: none"> <li>• Check operation and for oil leakage.</li> </ul>	-		○	○
13	* Rear shock absorber assembly	<ul style="list-style-type: none"> <li>• Check operation and shock absorber for oil leakage.</li> <li>• Replace shock absorber assembly if necessary.</li> </ul>	-		○	○
14	* Carburetor	<ul style="list-style-type: none"> <li>• Check engine idling speed.</li> <li>• Adjust if necessary.</li> </ul>	-	○	○	○
15	* Autolube pump	<ul style="list-style-type: none"> <li>• Check operation.</li> <li>• Correct if necessary.</li> <li>• Bleed if necessary.</li> </ul>		○	○	○
16	* Final transmission oil	<ul style="list-style-type: none"> <li>• Check oil level and vehicle for oil leakage.</li> </ul>	-	○	○	○
		<ul style="list-style-type: none"> <li>• Replace.</li> </ul>	Yamalube 4 SAE 10W 30 SE or GL gear oil	○	Every 12,000 km (8,000 mi) or 24 months (whichever occurs first).	
17	* V-belt	<ul style="list-style-type: none"> <li>• Replace.</li> </ul>	-		Every 9,000 km (6,000 mi)	

Items marked with an asterisk (\*) require special tools, data and technical skills for servicing. Take the scooter to a Yamaha dealer.


**NOTE:** \_\_\_\_\_

- The air filter needs more frequent service if you are riding in unusually wet or dusty areas.
- Brake fluid replacement:
  1. Replace the brake fluid after disassembling the master cylinder or caliper cylinder. Check the brake fluid level and add fluid as required.
  2. Replace the master cylinder and caliper cylinder oil seals every two years.
  3. Replace the brake hoses every four years, or if cracked or damaged.

**NOTE:** \_\_\_\_\_

From 6,000 mi (9,000 km)-or 18 months, repeat the maintenance intervals starting 2,000 mi (3,000 mi) or 6 months.


**COVER AND PANEL**  
**SIDECOVER AND SEAT**

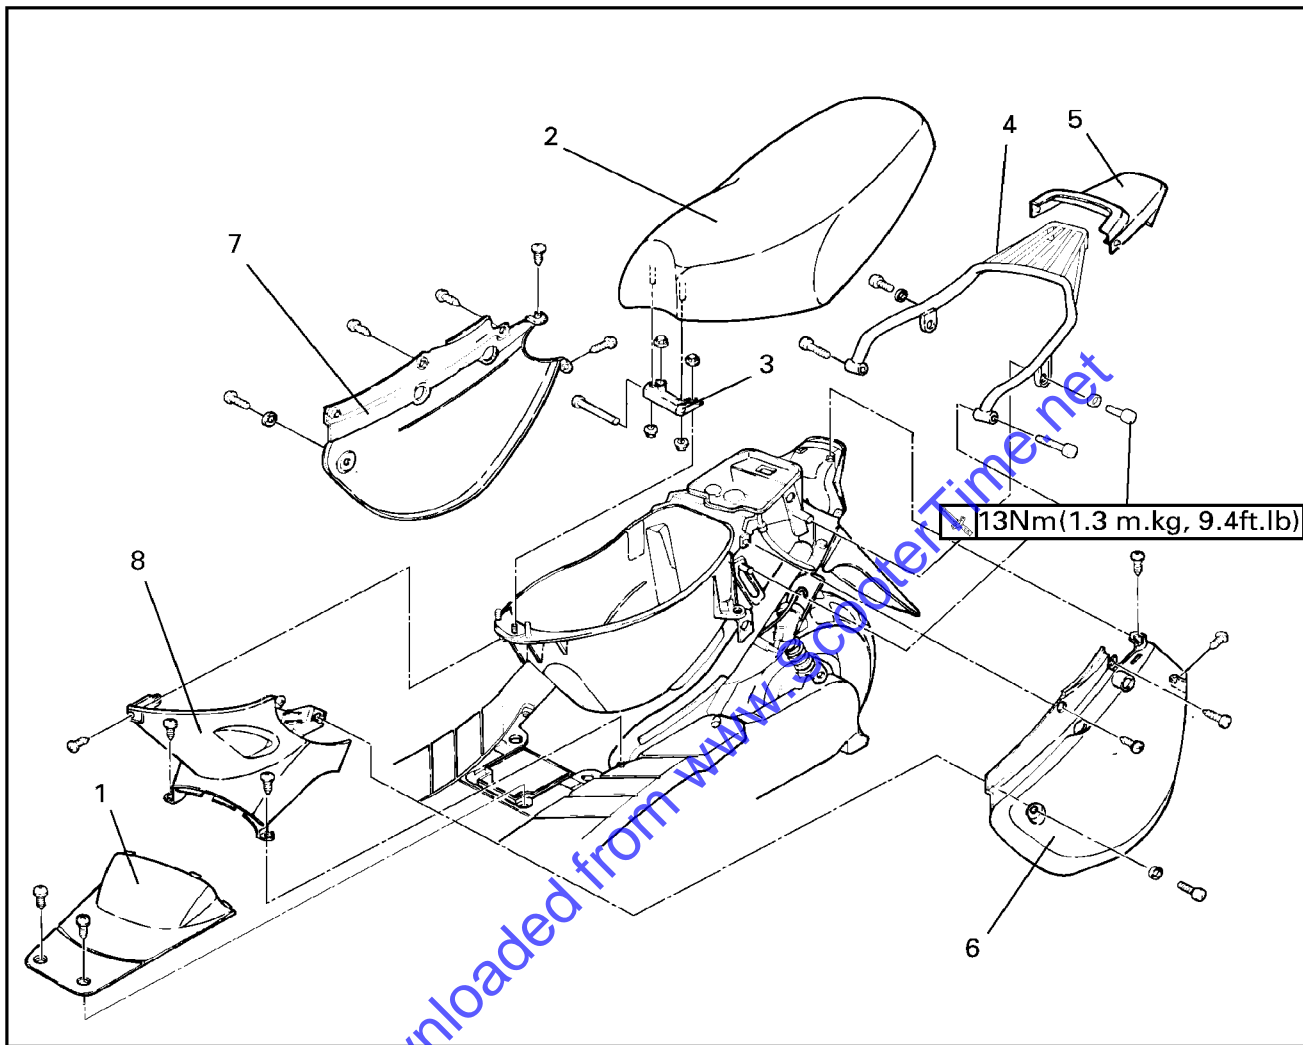

3


Order	Job name/Part name	Q'ty	Remarks
1.	Sidecover and seat removal Battery box cover	1	Remove the parts in order. <b>NOTE:</b> _____ Insert the (-) screwdriver into the slot of battery cover and pickup then remove. _____
2.	Seat	1	
3.	Seat hange	1	
4.	Rear carrier	1	
5.	Rear cover	1	
6.	Left side cover	1	
7.	Right side cover	1	
8.	Center cover	1	Reverse the removal procedure for installation.

LOWER COWLING, UPPER COVER, LEG SHIELD 1, 2 AND FOOTREST BOARD

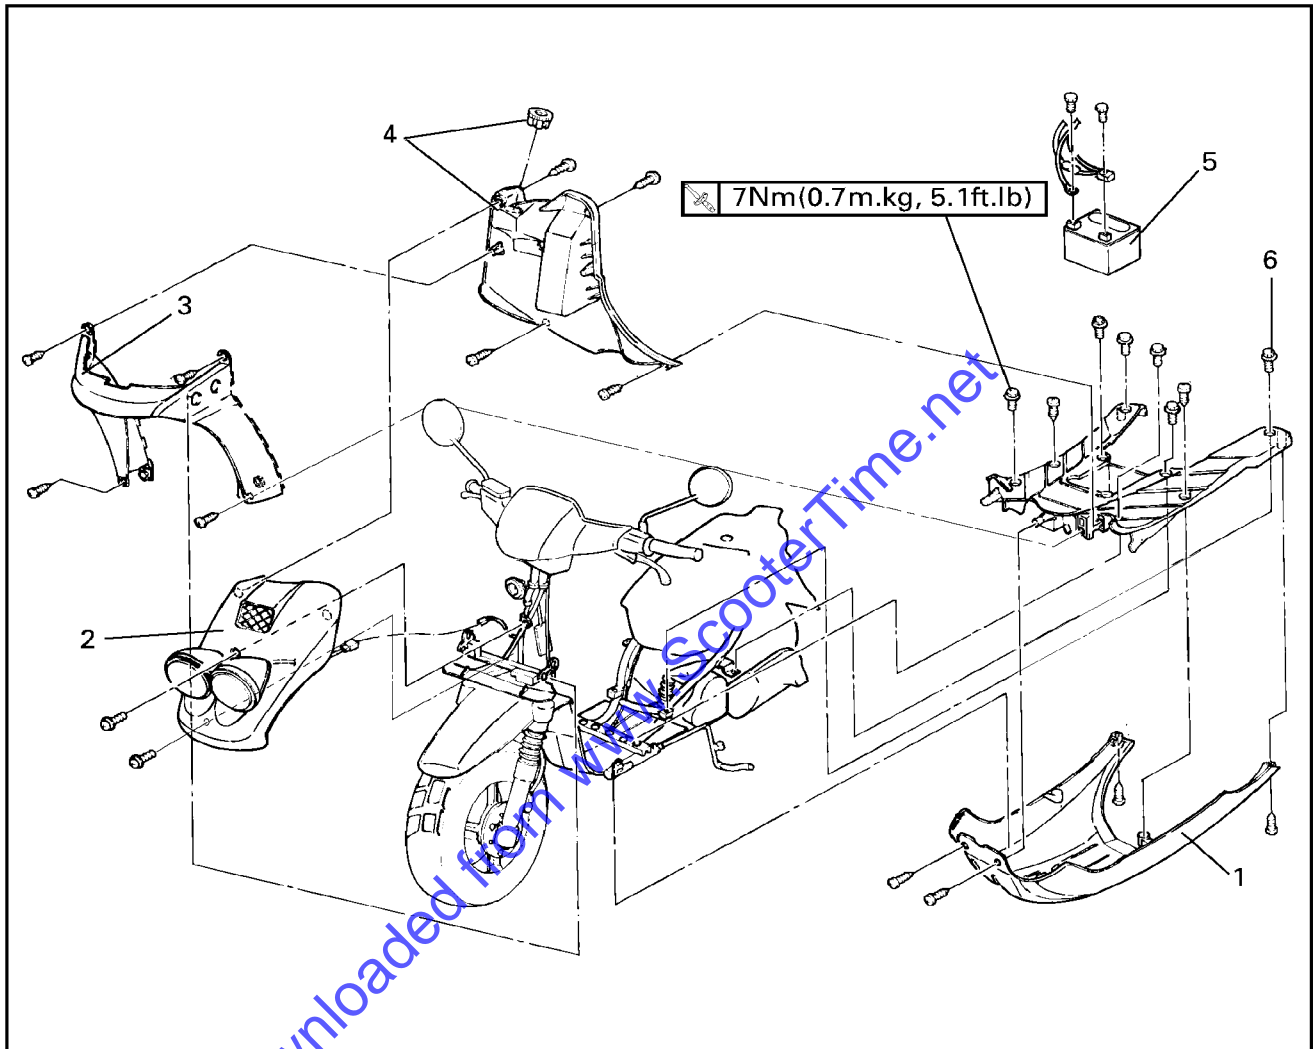





Order	Job name/ part name	Q'ty	Remarks
	Lower cowling, upper cover, leg shield 1,2 and footrest board removal		Remove the parts in order.
1.	Lower cowling	1	
2.	Upper cover	1	
3.	Leg shield 1	1	
4.	Main switch cover/ leg shield 2	1/1	
5.	Battery	1	
6.	Footrest board	1	
			Reverse the removal procedure for installation.

HANDLEBAR COVER(FRONT AND REAR)

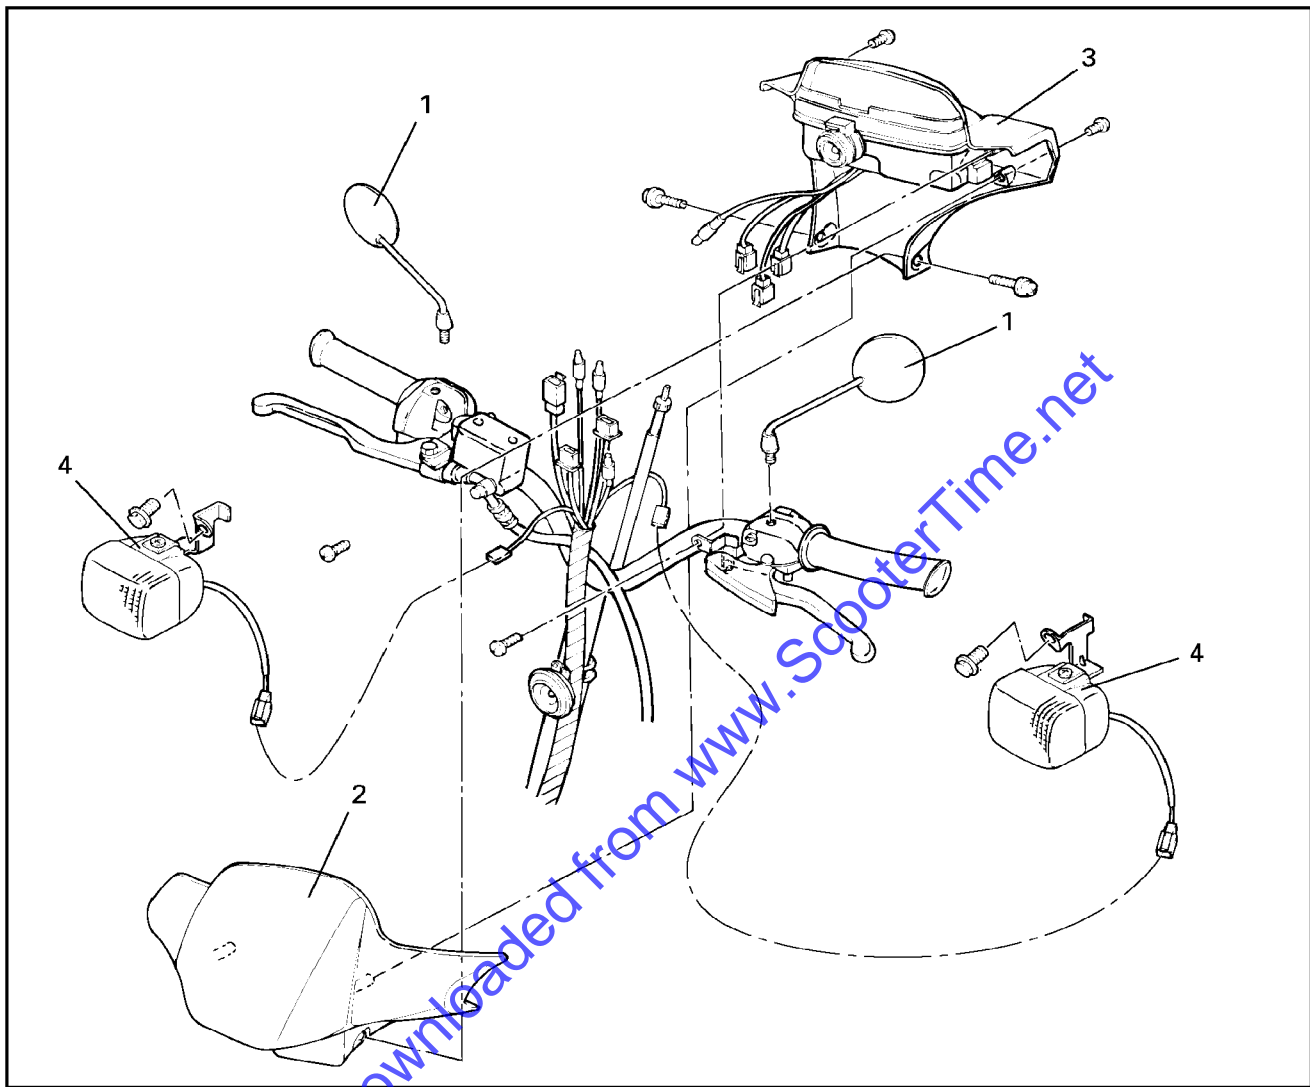

3

Order	Job name / Part name	Q'ty	Remarks
	Handlebar cover(Front and Rear) re- moval.		Remove the part in order.
1.	Mirrors	2	
2.	Front handlebar cover	1	
3.	Rear handlebar cover	1	
4.	Flasher light(Left/Right)	1/1	
			Reverse the removal procedure for instal- lation.

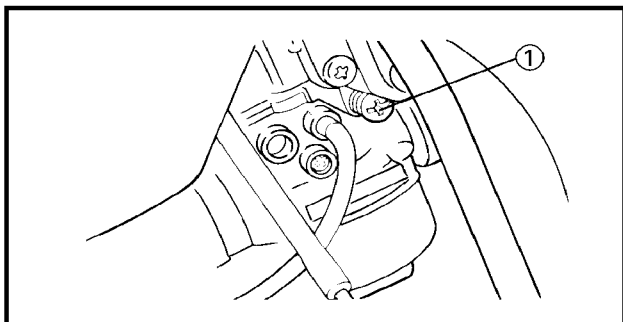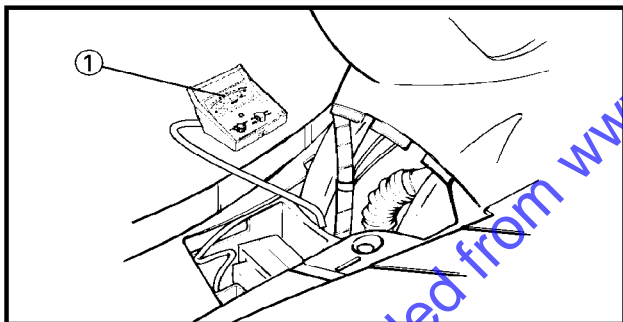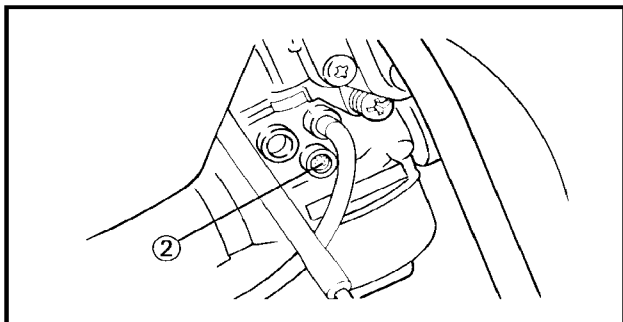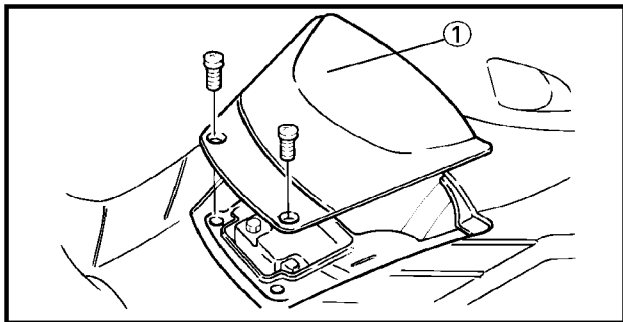

## ENGINE

### IDLE SPEED ADJUSTMENT

1. Remove
  - Battery box cover ①
2. Tighten:
  - Pilot air screw ②
 Turn the pilot air screw in until lightly seated.
3. Loosen:
  - Pilot air screw
 Back it out from its lightly seated position.

Pilot air screw turn out:  
load 1-1/4

2. Start the engine and let it warm up.


**⚠ WARNING**

**Before starting the engine, be sure to use the centerstand for safety.**

3. Attach:
  - Inductive tachometer ①
 To the spark plug lead

 Inductive tachometer:  
YU-8036-A

4. Check:
  - Engine idle speed
 Out of specification → Adjust.

 Engine idle speed:  
1,750~1,850 r/min

5. Adjust:
  - Engine idle speed

\*\*\*\*\*



#### Adjustment steps.

- Turn the throttle stop screw ① in or out until specified idle speed is obtained.

Turn in	Idle speed becomes higher.
Turn out	Idle speed becomes lower.

\*\*\*\*\*

Downloaded from www.ScooterTime.net

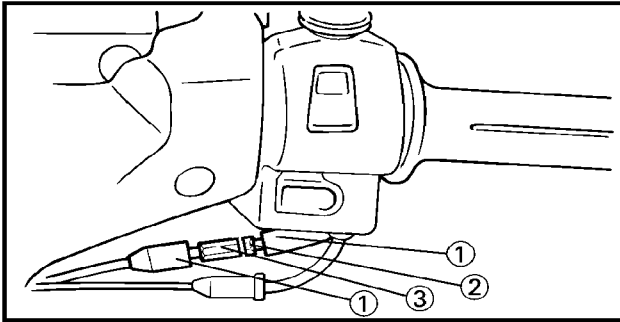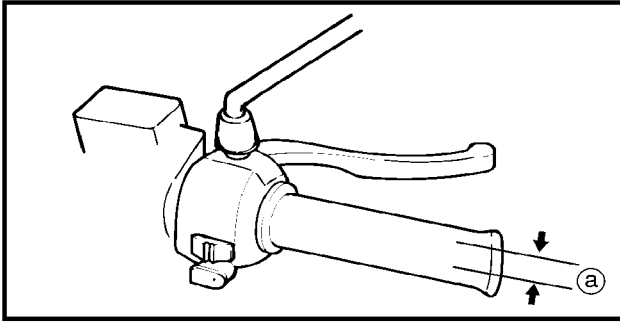

**THROTTLE CABLE FREE ADJUSTMENT**

1. Check:
  - Throttle cable free play (a)
  - Out of specification → Adjust.

	Free play: 3 ~ 5 mm (0.12 ~ 0.20 in)
---	---

\*\*\*\*\*

Throttle cable free play adjustment steps;

**NOTE:**

Before adjusting the throttle cable free play, the engine idle speed should be adjusted.

- Remove the adjuster cover (1)
- Loosen the locknut (2) on the throttle cable.
- Turn the adjuster (3) in or out until the specified free play is obtained.

Turning in → Free play is increased.
Turning out → Free play is decreased.



- Tighten the locknuts.
- Install the adjuster cover

**⚠ WARNING**

After adjusting the throttle cable free play, start the engine and turn the handlebar to the right and to the left to ensure that this does not cause the engine idling speed to change.

Downloaded from www.ScooterParts.net



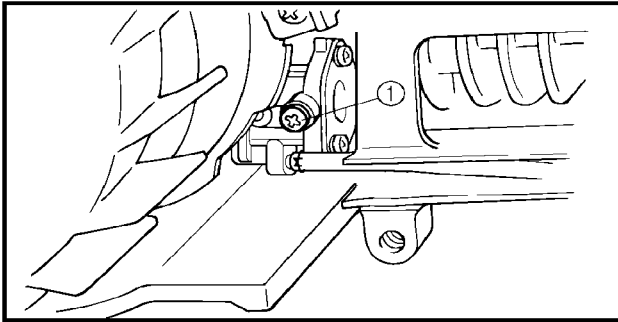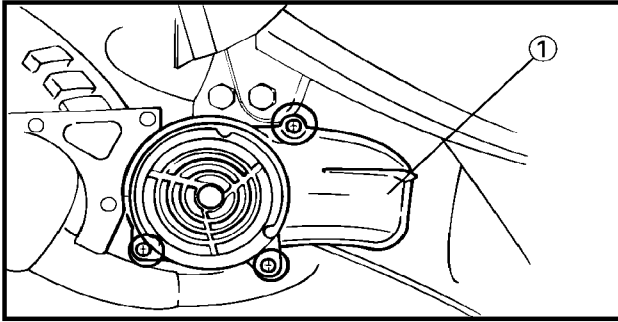

**AUTOLUBE PUMP AIR BLEEDING**

1. Remove
  - Lower cowling
  - Air shroud 1 ①
2. Air bleeding:
  - Pump case and / or oil hose.

\*\*\*\*\*

**Air bleeding steps:**

- Place a rag under the autolube pump to catch the oil.
- Remove the bleed screw ①.
- Keep the oil running out until air bubbles disappear.
- When air bubbles are expelled completely, tighten the bleed screw.

**NOTE:**

Check the bleed screw gasket. If damaged, replace with a new one.  
Place a oil pan under the autolube pump to catch oil.

\*\*\*\*\*

3. Air bleeding:
  - Pump distributor and/or delivery hose

\*\*\*\*\*

**Air bleeding steps:**

- Start the engine.
- Run the engine for 2-3 minutes at 2000 r/ min.  
This will completely remove autolube pump system of air.


\*\*\*\*\*

Downloaded from www.ScooterTime.net

## SPARK PLUG INSPECTION


1. Remove:
  - Battery box cover
2. Inspect:
  - Spark plug type  
Incorrect→Replace.

Standard spark plug:  
BPR7HS/NGK

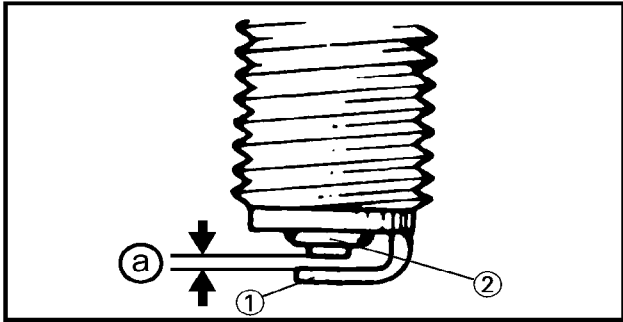


3. Inspect:
  - Electrode ①  
Wear/Damage→Replace.
  - Insulator ②  
Abnormal color→Replace.  
Normal color is a medium-to-light tan color.
4. Clean the spark plug with a spark plug cleaner or wire brush.
5. Measure:
  - Plug gap (a)  
Use a wire gauge or feeler gauge.  
Out of specification→Regap.

3




Spark plug gap:  
0.6 ~ 0.7 mm (0.02 ~ 0.03 in)

6. Tighten:
  - Spark plug  20 Nm (2.0 m.kg, 14 ft.lb)
7. Install:
  - Battery box cover.

Downloaded from [www.coolerme.net](http://www.coolerme.net)



# ENGINE OIL LEVEL INSPECTION

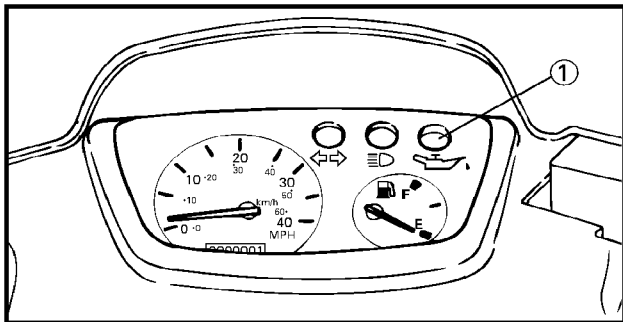

## ENGINE OIL LEVEL INSPECTION



1. Inspect:
  - Engine oil level Oil level low → Add sufficient oil by the following inspection steps.

① "OIL" indicator light

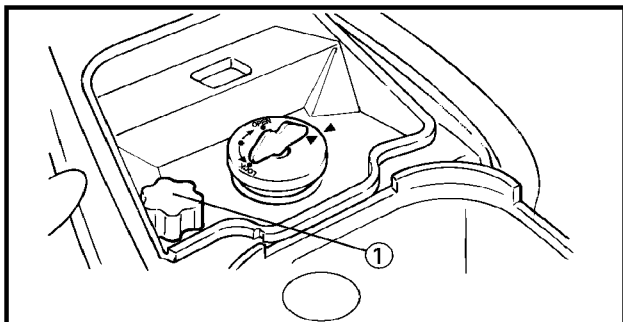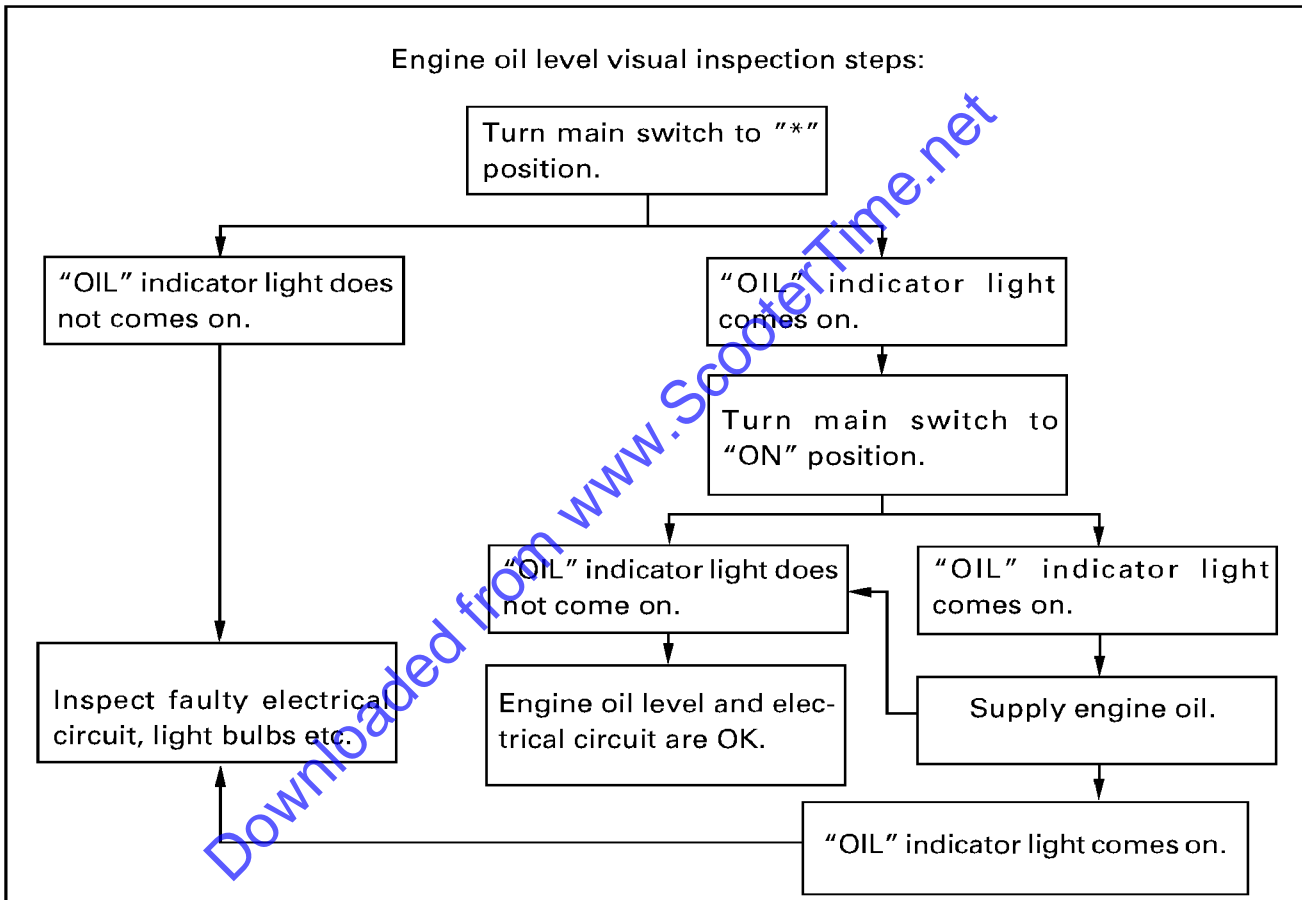

**Recommended oil:**  
 For Yamaha:  
 Yamalube 2 or 2-stroke engine oil  
 (ISO EG-C, EG-D grade)  
**Total:**  
 1.4L (1.23 Imp. qt, 1.48 US. qt)

**NOTE:** \_\_\_\_\_  
 Install the oil tank filler cap ① and push it fully into the filler.

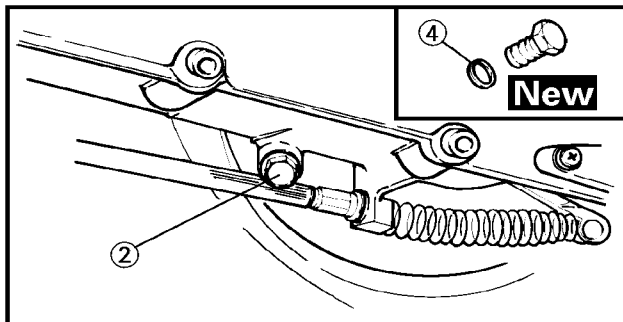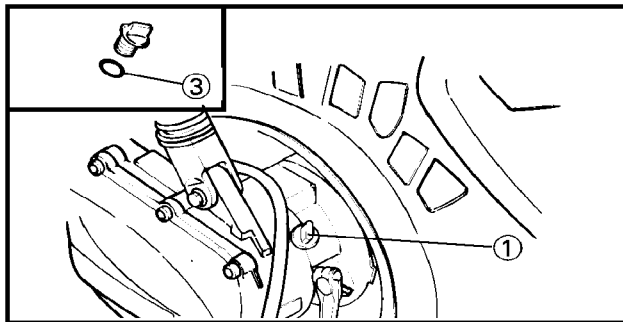


## TRANSMISSION OIL REPLACEMENT

1. Warm up the engine for several minutes, then stop the engine.
2. Place a container under the drain hole.
3. Remove:
  - Oil filler plug ①
  - Drain bolt (with gasket) ②

**NOTE:** \_\_\_\_\_

Drain the transmission oil completely. While draining, slightly tilt the scooter to the right and to the left.

4. Inspect:
  - Gasket (drain bolt) ④ **New**
  - O-ring (oil filler plug) ③
  - Damage → Replace.

5. Install:
  - Drain bolt  18 Nm (1.8 m.kg, 13 ft.lb)
6. Fill:
  - Transmission case

	Recommended oil:
	Yamalube 4 SAE 10W 30SE or GL gear oil
	Oil capacity:
	Total amount 0.13 L (0.11 Imp.qt, 0.13 US.qt)
	Periodic oil change 0.11 L (0.096 Imp.qt, 0.12 US qt)

**CAUTION:** \_\_\_\_\_


- Always use the same type of oil; mixing oils may result in a harmful chemical reaction and lead to poor performance.
- Do not allow foreign material to enters the transmission case.

7. Install:
  - Oil filler plug (with O-ring)
8. Inspect:
  - Oil leaks
  - Oil level

**NOTE:** \_\_\_\_\_


Wipe off any oil spilt on the transmission, tire or wheel.

Downloaded from www.ScooterTime.net

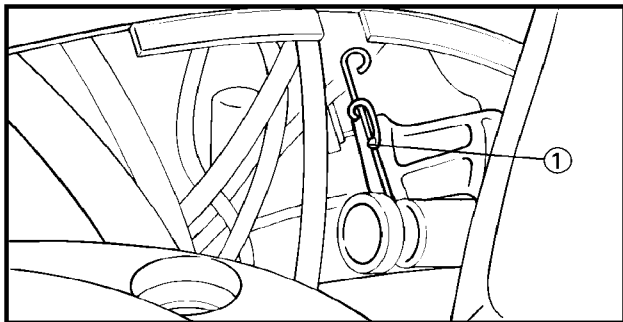


## AIR FILTER ELEMENT CLEANING

1. Remove:
  - Battery box cover
2. Remove:
  - Carburetor joint clamp ①

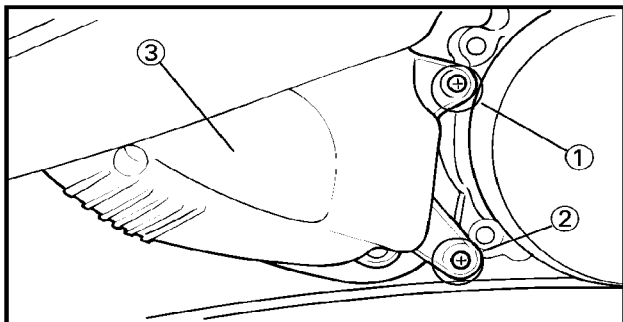


3. Remove:
  - Screw ①②
  - Air filter ③

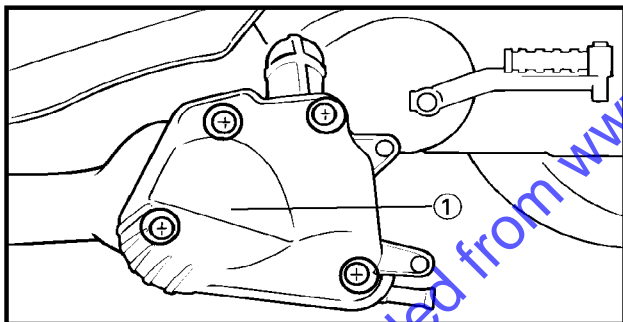

4. Remove:
  - Air filter case ①
  - Air filter element

### CAUTION:

Never operate the engine with the air filter element removed. This will allow unfiltered air to enter, causing rapid wear and possible engine damage. Additionally, operation without the cleaner element will affect carburetor jetting with subsequent poor performance and possible engine overheating. Be careful not to have rags or the like blocking the intake area of the air filter.

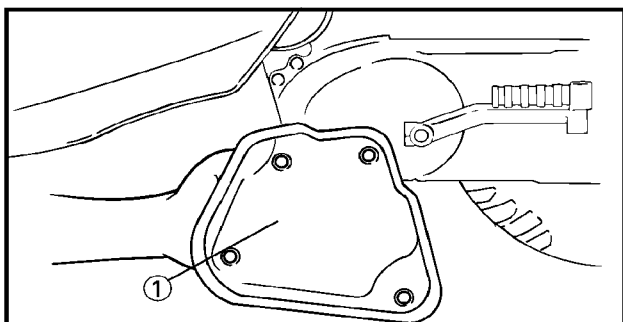


5. Inspect:
  - Element ①
  - Damage → Replace.
6. Clean:
  - Air filter element

\*\*\*\*\*

Air filter element cleaning steps:

- Wash the element gently, but thoroughly in solvent.

# AIR FILTER ELEMENT CLEANING

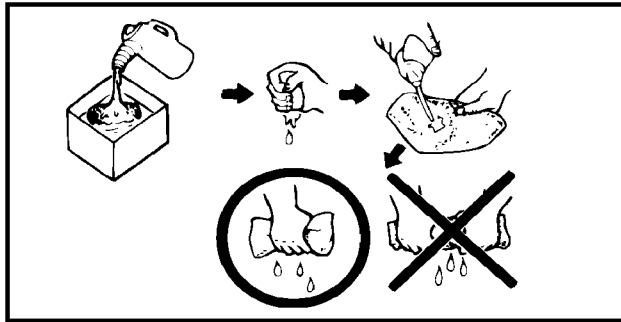

## **⚠ WARNING**

Never use low flash point solvents such as gasoline to clean the element. Such solvent may lead to a fire or explosion.

- Squeeze the excess solvent out of the element and let dry.

## **CAUTION:**

Do not twist the element when squeezing the element.

\*\*\*\*\*

- Apply the foam -air filter oil or engine oil .
- Squeeze out the excess oil.

## **NOTE:**





The element should be wet but not dripping.

\*\*\*\*\*

### 7. Install:

- Air filter
- Battery box cover

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

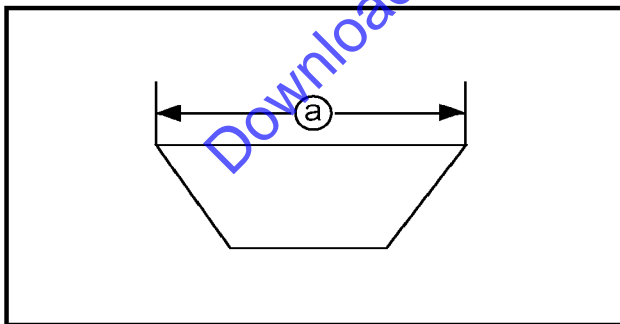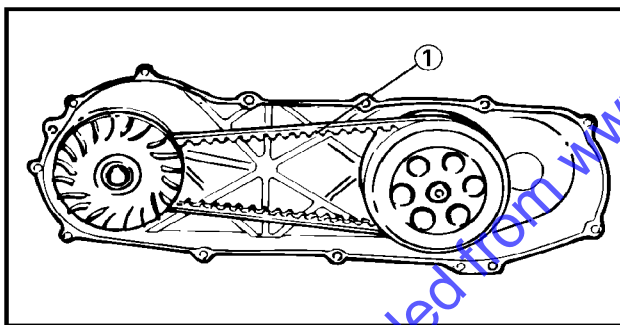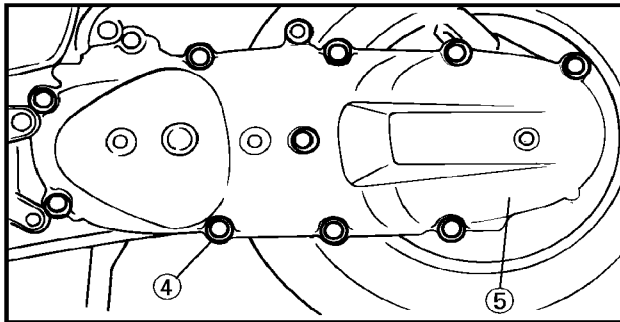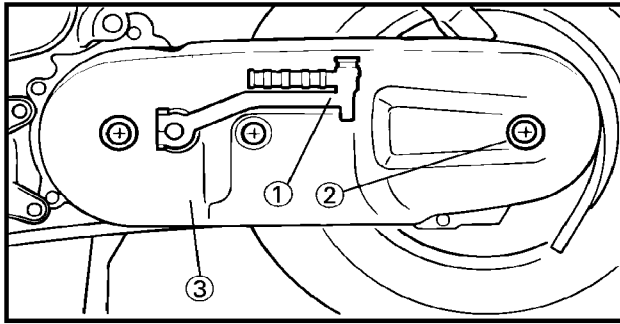

## V-BELT INSPECTION

### 1. Remove:


- Kick crank ①
- Screws ②
- Crankcase cover 2(left) ③
- Screws(Air cleaner and left crankcase cover) ④
- Crankcase cover 1(left) ⑤

### Inspect

- V-belt ①  
Cracks/Wear/Damage→Replace.  
Oil or grease adhere to the V-belt→Check the primary and secondary sheaves.  
Refer to "ENGINE OVERHAUL - INSPECTION AND REPAIR" section in the CHAPTER 4.

### 3. Measure:

- V-belt width ①  
Out of specification→Replace.  
Refer to "ENGINE OVERHAUL" section in the CHAPTER 4.


	V-belt width:
	16.6 mm (0.65 in)
	<Limit> 14.6 mm (0.57 in)

### NOTE:


Measure the V-belt width on several points.

### 4. Install:


- Crankcase cover 1 (left)
- Air cleaner
- Crankcase cover 2 (left)

	12Nm(1.2m.kg, 8.4 ft.lb)
---	--------------------------

	9Nm(0.9m.kg, 6.5 ft.lb)
---	-------------------------

	7Nm(0.7m.kg, 5.1 ft.lb)
---	-------------------------

- Kick crank
- |   |                         |
|---|-------------------------|
|  | 9Nm(0.9m.kg, 6.5 ft.lb) |
|---|-------------------------|

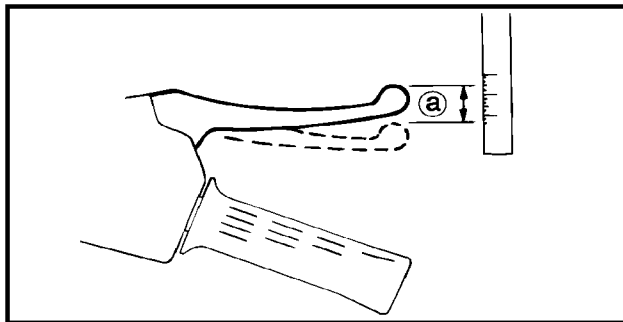

**CHASSIS**

**FRONT BRAKE LEVER FREE PLAY CHECK**


1. Check:
  - Front brake lever free play

	2~5 mm(0.08~0.20 in)
--	----------------------

**⚠ WARNING**

A soft or spongy feeling in the brake lever can indicate the presence of air in the brake system. This air must be removed by bleeding the brake system before the motorcycle is operated. Air in the system will cause greatly diminished braking capability and can result in loss of control and an accident. Inspect and bleed the system if necessary.


3

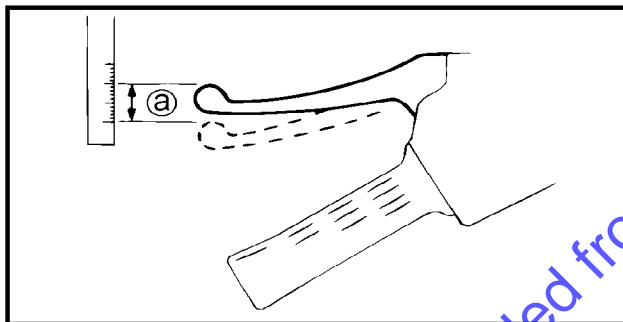


**REAR BRAKE LEVER FREE PLAY CHECK**

1. Check:
  - Rear brake lever free play ①
  - Out of specification → Adjust.

	10 ~ 20 mm(0.39~0.79 in)
--	--------------------------

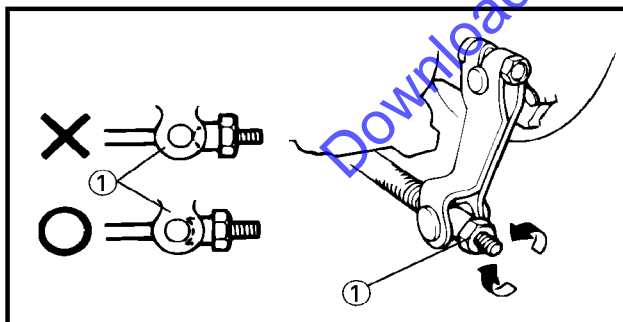

\*\*\*\*\*  
 Rear brake lever free play adjustment steps:  
 • Turn the adjuster ① in or out until the correct free play is obtained.  
 \*\*\*\*\*

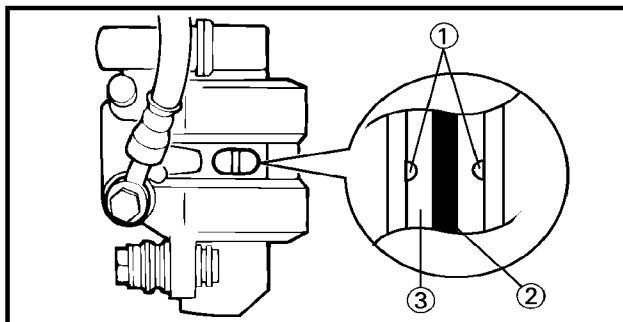


**BRAKE PAD INSPECTION**

1. Activate the brake lever.
2. Inspect:
  - Brake pad  
Wear indicator ① nearly contacting brake disc → Replace brake pads as a set. Refer to the "BRAKE PAD REPLACEMENT" section in the CHAPTER 6.
  - ② Brake disc
  - ③ Brake pads




## BRAKE SHOE INSPECTION/ BRAKE FLUID LEVEL INSPECTION

INSP  
ADJ

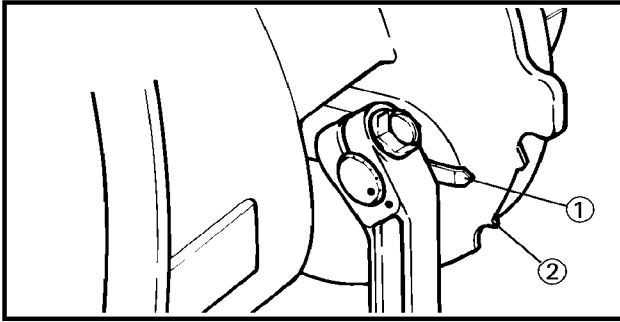

### BRAKE SHOE INSPECTION

1. Activate the brake lever.
2. Inspect:
  - Wear indicator ①Indicator at wear limit line ② → Replace brake shoes.

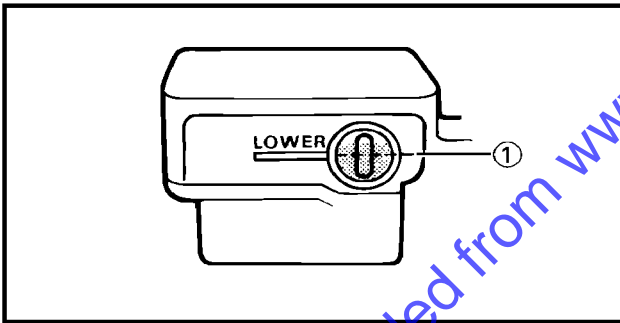

### BRAKE FLUID LEVEL INSPECTION

#### NOTE:

Position the scooter straight up when inspecting the fluid level.

1. Inspect:
  - Fluid level is under "LOWER" level line ① → Fill to proper level.



Recommended fluid:  
DOT#4(or DOT#3)

#### CAUTION:

The fluid may corrode painted surfaces or plastic parts. Always clean up spilled fluid immediately.

#### ⚠ WARNING

- Use only the designated quality fluid. Otherwise, the rubber seals may deteriorate causing leakage and poor brake performance.
- Refill with the same type of fluid. Mixing fluids may result in a harmful chemical reaction leading to poor brake performance.
- Be careful that water does not enter the master cylinder when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock.


**AIR BLEEDING (HYDRAULIC BRAKE SYSTEM)**

- 1. Bleed:
  - Brake fluid

\*\*\*\*\*

**Air bleeding steps:**

- a. Add proper brake fluid to the reservoir.
- b. Install the diaphragm. Be careful not to spill any fluid or allow the reservoir to overflow.
- c. Connect the clear plastic tube ① tightly to the caliper bleed screw.
- d. Place the other end of the tube into a container.
- e. Slowly apply the brake lever several times.
- f. Pull the lever in. Hold the lever in position.
- g. Loosen the bleed screw and allow the lever to travel towards its limit.
- h. Tighten the bleed screw when the limit has been reached, then release the lever.
- i. Repeat steps (e) to (h) until the air bubbles have been removed from the system.
- j. Add brake fluid to proper level.

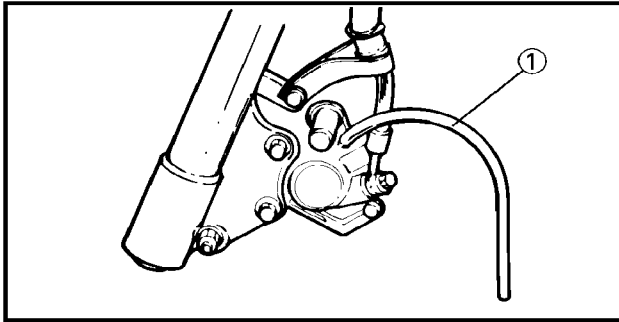


**⚠ WARNING**

**Check the operation of the brake after bleeding the brake system.**

\*\*\*\*\*

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

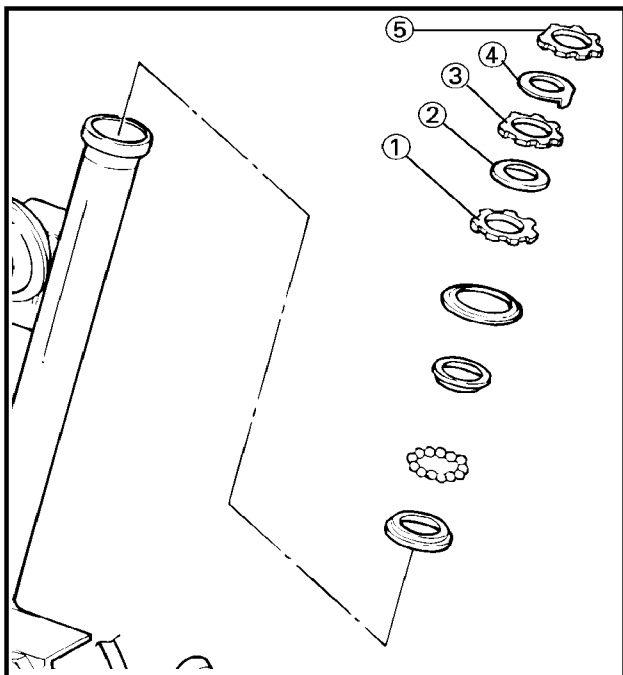

**STEERING ADJUSTMENT**


1. Check:

- Steering assembly bearings  
Gap the bottom of the forks and gently rock the fork assembly back and forth.  
Loosen→Adjust.


\*\*\*\*\*

Adjustment steps:

- Remove upper cover, lower cowling, leg shield 1,2. refer to "COVER AND PANEL" section.
- Remove all ringnuts using ringnut wrench.

	Ring nut wrench: YU-33975
---	------------------------------

- Tighten the ring nut 3 ① using nut wrench.

 22 Nm(2.2 m.kg, 16 ft.lb)

**NOTE:**

Set the torque wrench to the ring nut wrench so that they form a right angle.

- Loosen the ring nut 3 ① 1/4 turn.
- Install rubber ring ② and ring nut 2 ③, then tighten the ring nut 2 until it contacts with rubber ring.

**CAUTION:**

**Aligning the slot of ring nut 2 with the slot of ring nut 3. If not, slightly tighten ring nut 2 until the slots alignment.**

- Install special washer ④

**NOTE:**

Insert the projections of special washer into the slots of ring nut 3, 2

- Install ring nut 1 ⑤  66Nm(6.6 m.kg, 47.8 ft.lb)

- Move the handlebar up and down, and/or back and forth. If handlebar play is excess, remove the front fork assembly and check the balls/ball races. Refer to chapter 6.

\*\*\*\*\*


Downloaded from www.ScooterTime.net

FRONT

Manufacturec	Size	Type
CHENG SHIN	120/90-10	56J

REAR

Manufacturec	Size	Type
CHENG SHIN	130/90-10	59J

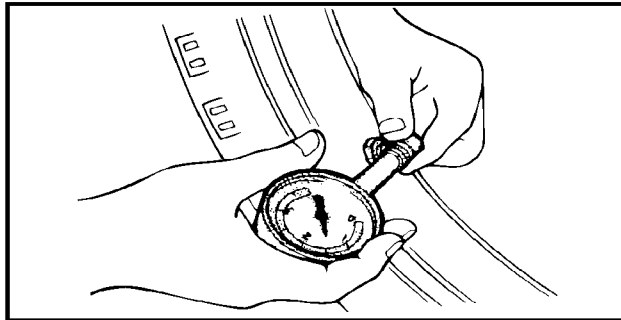

TIRE INSPECTION

**⚠ WARNING**

- The tire pressure should only be checked and regulated when the tire temperature equals the ambient air temperature.
- The tire pressure must be adjusted according to the total weight (including cargo, rider passenger and accessories) and the anticipated riding speed.
- Operation of an overloaded scooter could cause tire damage, an accident or an injury. **NEVER OVERLOAD THE SCOOTER.**

Basic weight (with oil and a full fuel tank)	94 kg (207 lb)	
Maximum load*	143 kg (315 lb)	
	Front	Rear
Cold tire pressure	200 kpa (2.0 kgf/cm <sup>2</sup> , 29 psi)	200 kpa (2.0 kgf/cm <sup>2</sup> , 29 psi)


\* Total of cargo, rider, passenger and accessories.

**⚠ WARNING**


It is dangerous to ride with a worn-out tire. When the tire tread reaches the wear limit, replace the tire immediately.

2. Inspect:

- Tire surfaces  
Wear/Damage → Replace.


	Minimum tire tread depth ① (front and rear): 1.6 mm (0.06 in)
---	---

- ① Tread depth
- ② Side wall
- ③ Wear indicator

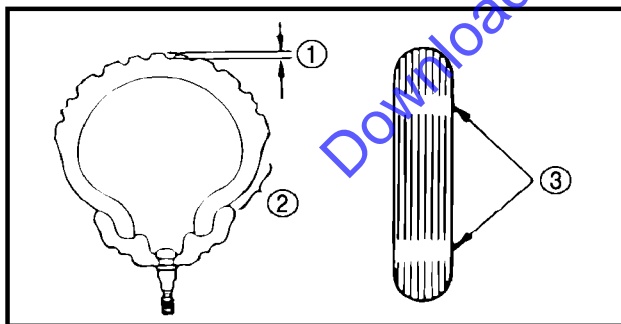

**⚠ WARNING**

- Do not use a tubeless tire on a wheel designed only for tube tires to avoid tire failure and personal injury from sudden deflation.
- When using tube tires, be sure to install the correct tube.
- Always replace a new tube tire and a new tube as a set.
- To avoid pinching the tube, make sure the wheel rim band and tube are centered in the wheel groove.
- Patching a punctured tube is not recommended. If it is absolutely necessary to do so, use great care and replace the tube as soon as possible with a good quality replacement.

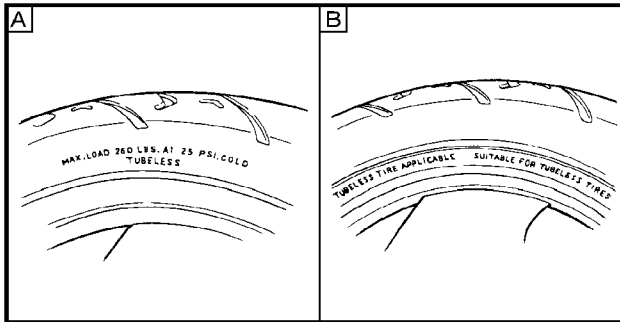

- A Tire
- B Wheel

Tube wheel	Tube tire only
Tubeless wheel	Tube or tubeless tire

- After extensive tests, the tires listed below have been approved by Yamaha Motor Co., Ltd. for this model. The front and rear tires should always be by the same manufacturer and of the same design. No guarantee concerning handling characteristics can be given if a tire combination other than one approved by Yamaha is used on this scooter.

Downloaded from www.ScooterTime.net


**⚠ WARNING**




New tires have a relatively low grip on the road surface until they have been slightly worn. Therefore, approximately 100 km should be traveled at normal speed before any high-speed riding is done.

**NOTE:**

For tires with a direction of rotation mark ①:

- Install the tire with the mark pointing in the direction of wheel rotation.
- Align the mark ② with the valve installation point.

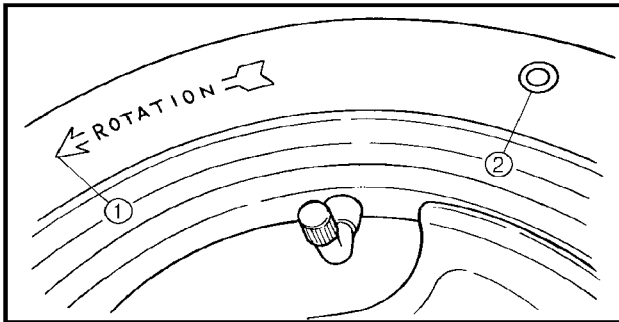

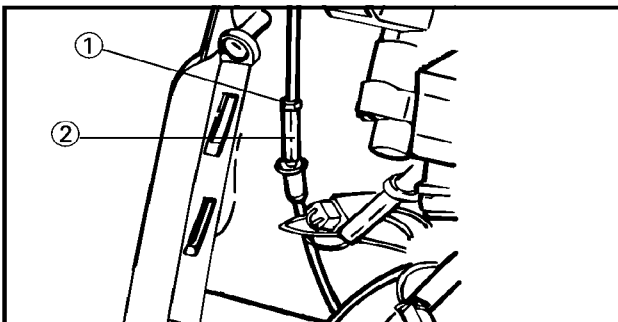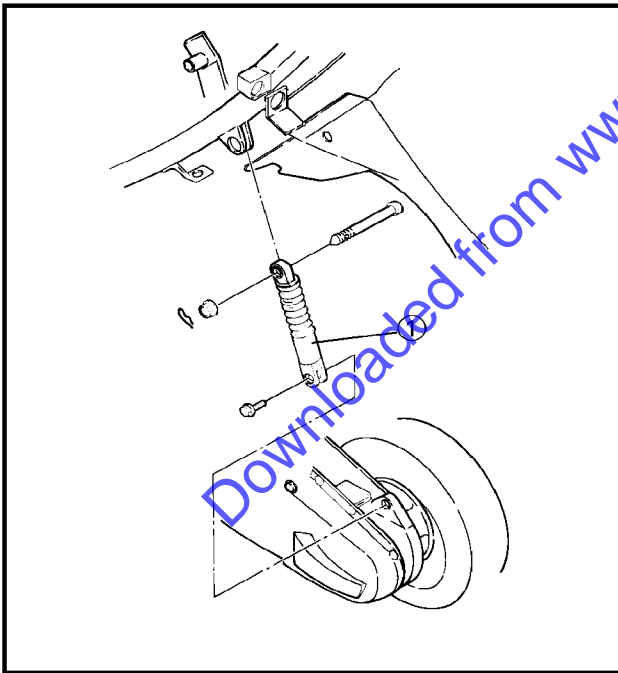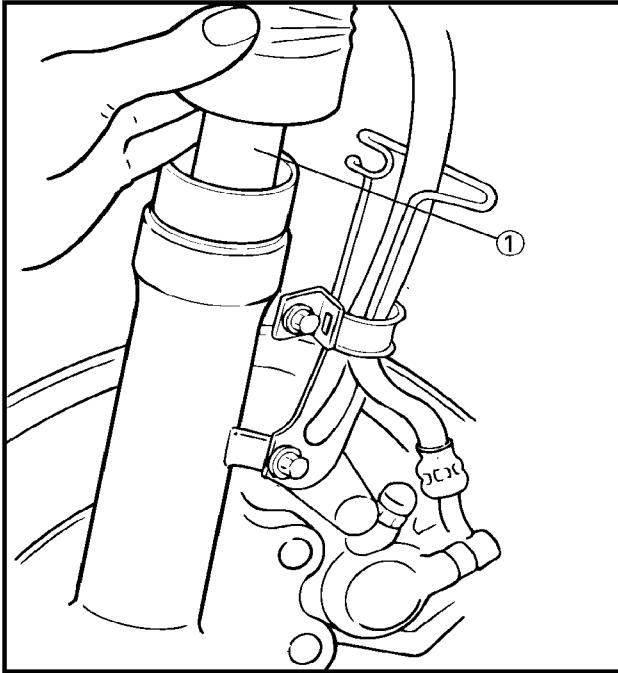

**WHEEL INSPECTION**

1. Inspect:
  - wheels
 Damage/Bends→Replace.

**⚠ WARNING**

Never attempt to make any repairs to the wheel.

**NOTE:**


After a tire or wheel has been changed or replaced, always balance the wheel.

**FRONT FORK INSPECTION**

1. Inspect:
  - Front fork<sup>①</sup>
 Bends/Damage→Replace inner tube comp, fork ass'y.  
 Grease leakage→Replace inner tube comp. fork ass'y.  
 Unsmooth operation→Replace fork ass'y.

**REAR SHOCK ABSORBER INSPECTION**

1. Inspection:
  - Rear shock absorber<sup>①</sup>
 Oil leaks/Damage→Replace.
2. Check
  - Tightening torque

	Upper(nut)	30Nm (3.0 m.kg, 22ft.lb)
	Lower (bolt)	16 Nm(1.6 m.kg, 12ft.lb)

**SEAT LOCK CABLE ADJUSTMENT**

1. Remove:
  - Upper cover
 Refer to "COVER AND PANEL" section.
2. Adjust:
  - Seat cable

\*\*\*\*\*

**Seat cable adjustment steps:**

- Loosen lock nut <sup>①</sup>
- Turn adjuster <sup>②</sup> in or out to adjust the seat lock cable.
- Tighten the lock nut.

\*\*\*\*\*

3. Install:
  - Upper cover

EAS00170


### CABLE CHECKING AND LUBRICATING

The following procedure applies to all of the cable sheaths and cables.

#### **⚠ WARNING**

**Damaged cable sheaths may cause the cable to corrode and interfere with its movement. Replace damaged cable sheaths and cables as soon as possible.**

1. Check:
  - cable sheath  
Damage → Replace.
2. Check:
  - cable operation  
Rough movement → Lubricate.

	Recommended lubricant Engine oil or a suitable cable lubricant
---	---


#### **NOTE:**

Hold the cable end upright and pour a few drops of lubricant into the cable sheath or use a suitable lubricating device.

EAS00171

### LEVERS LUBRICATING


Lubricate the pivoting point and metal-to-metal moving parts of the levers.

	Recommended lubricant Lithium soap base grease
---	---

EAS00173

### CENTERSTAND LUBRICATING

Lubricate the pivoting point and metal-to-metal moving parts of the centerstand.

	Recommended lubricant Lithium soap base grease
---	---



**ELECTRICAL****BATTERY INSPECTION****NOTE:** \_\_\_\_\_

Since the MF battery is of a sealed-type construction, it is impossible to measure the specific gravity of the electrolyte in order to check the state of charge in the battery. Therefore, to check the state of charge in the battery, voltage must be measured at the battery terminals.

**CAUTION:** \_\_\_\_\_**CHARGING METHOD**

- This battery is sealed type. Never remove sealing caps even when charging. With the sealing cap removed, this balancing will not be maintained, and battery performance will lower gradually.

- Never add water. If distilled water is added, chemical reaction in the battery will not proceed in the normal way, thus making it impossible for the battery to operate regularly.

- The charging time, charging current and charging voltage for the MF battery is different than general type batteries.

The MF battery should be charged as instructed in the "Charging method". Should the battery be overcharged, the electrolyte level will lower extremely. Therefore, use special care when charging the battery.

- Avoid using any electrolyte other than specified. The specific gravity of the MF battery electrolyte is 1.32 at 20°C (68°F). (The specific gravity of the general type battery electrolyte is 1.28. ) If the electrolyte whose specific gravity is less than 1.32, the sulfuric acid will decrease and thus low battery performance will result.

Should any electrolyte, whose specific gravity is 1.32 or more, be used, the battery plates will corrode and battery life will shorten.

1. Remove:

- Battery box cover

Refer to "COVER AND PANEL" section.

2. Remove:

- Battery

**NOTE:** \_\_\_\_\_

Remove the (-) lead first.



**⚠ WARNING**

Batteries generate explosive hydrogen gas and contain electrolyte which is made of poisonous and highly caustic sulfuric acid.

Therefore, always follow these preventive measures:

- Wear protective eye gear when handling or working near batteries.
- Charge batteries in a well-ventilated area.
- Keep batteries away from fire, sparks or open flames (e.g., welding equipment, lighted cigarettes).
- DO NOT SMOKE when charging or handling batteries.
- KEEP BATTERIES AND ELECTROLYTE OUT OF REACH OF CHILDREN.
- Avoid bodily contact with electrolyte as it can cause severe burns or permanent eye injury.

**FIRST AID IN CASE OF BODILY CONTACT:**



**EXTERNAL**

- Skin — Wash with water.
- Eyes — Flush with water for 15 minutes and get immediate medical attention.

**INTERNAL**

- Drink large quantities of water or milk followed with milk of magnesia, beaten egg or vegetable oil. Get immediate medical attention.

3

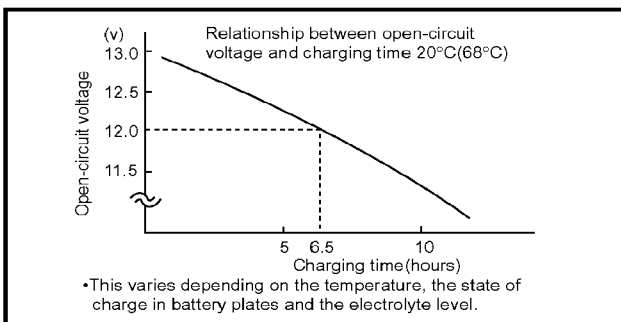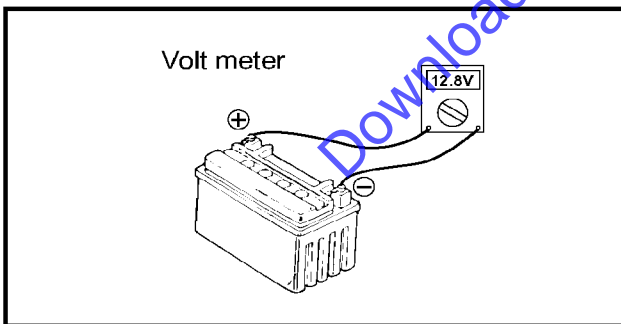

3. Check:

- Battery condition

\*\*\*\*\*


Battery condition checking steps:

- Connect a digital volt meter to the battery terminals.

Tester (+) lead Battery (+) terminal.  
Tester (-) lead Battery (-) terminal.

**NOTE:**

The state of a discharged MF battery can be checked by measuring open circuit voltage (the voltage measured with the positive terminals being disconnected).

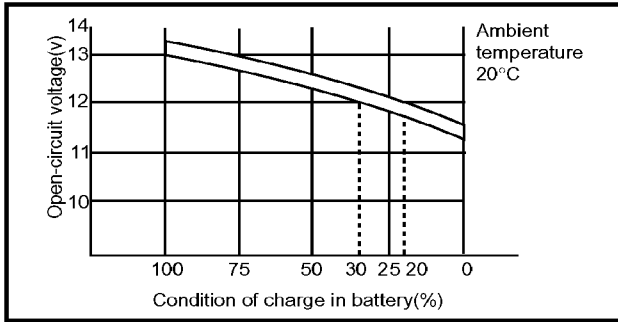

Open circuit voltage	Charging time
12.8 v or more	No charging is necessary.

- Check the battery condition using figures.

EXAMPLE:

Open circuit voltage = 12.0v

Charging time = 6.5 hours


Condition of charge in battery = 20 ~ 30%

\*\*\*\*\*

2. Charging method of MF battery



**CAUTION:** \_\_\_\_\_

- If it is impossible to set the standard charging current, be careful not to overcharge.
- When charging the battery, be sure to remove it from the motorcycle. (If charging has to be done with the battery mounted on the motorcycle for some reason, be sure to disconnect the wire at the negative terminal.)
- Never remove the sealing plug from the MF battery.
- Use special care so that charging clips are in a full contact with the terminal and that they are not shorted. (A corroded clip of the charger may cause the battery to generate heat at the contact area. A weak clip spring may cause sparks.)
- Before removing the clips from the battery terminals, be sure to turn off the power switch of the charger.
- Change in the open-circuit voltage of the MF battery after being charged is shown below. As shown in the figure, the open circuit voltage is stabilized 30 minutes after charging has been completed. Therefore, to check the condition of the battery, measure the open-circuit voltage 30 minutes after has been completed.

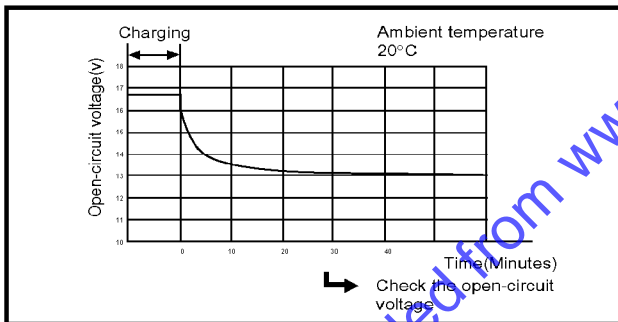


Downloaded from www.ScooterTime.com

## Charging method using a variable-current (voltage) type charger

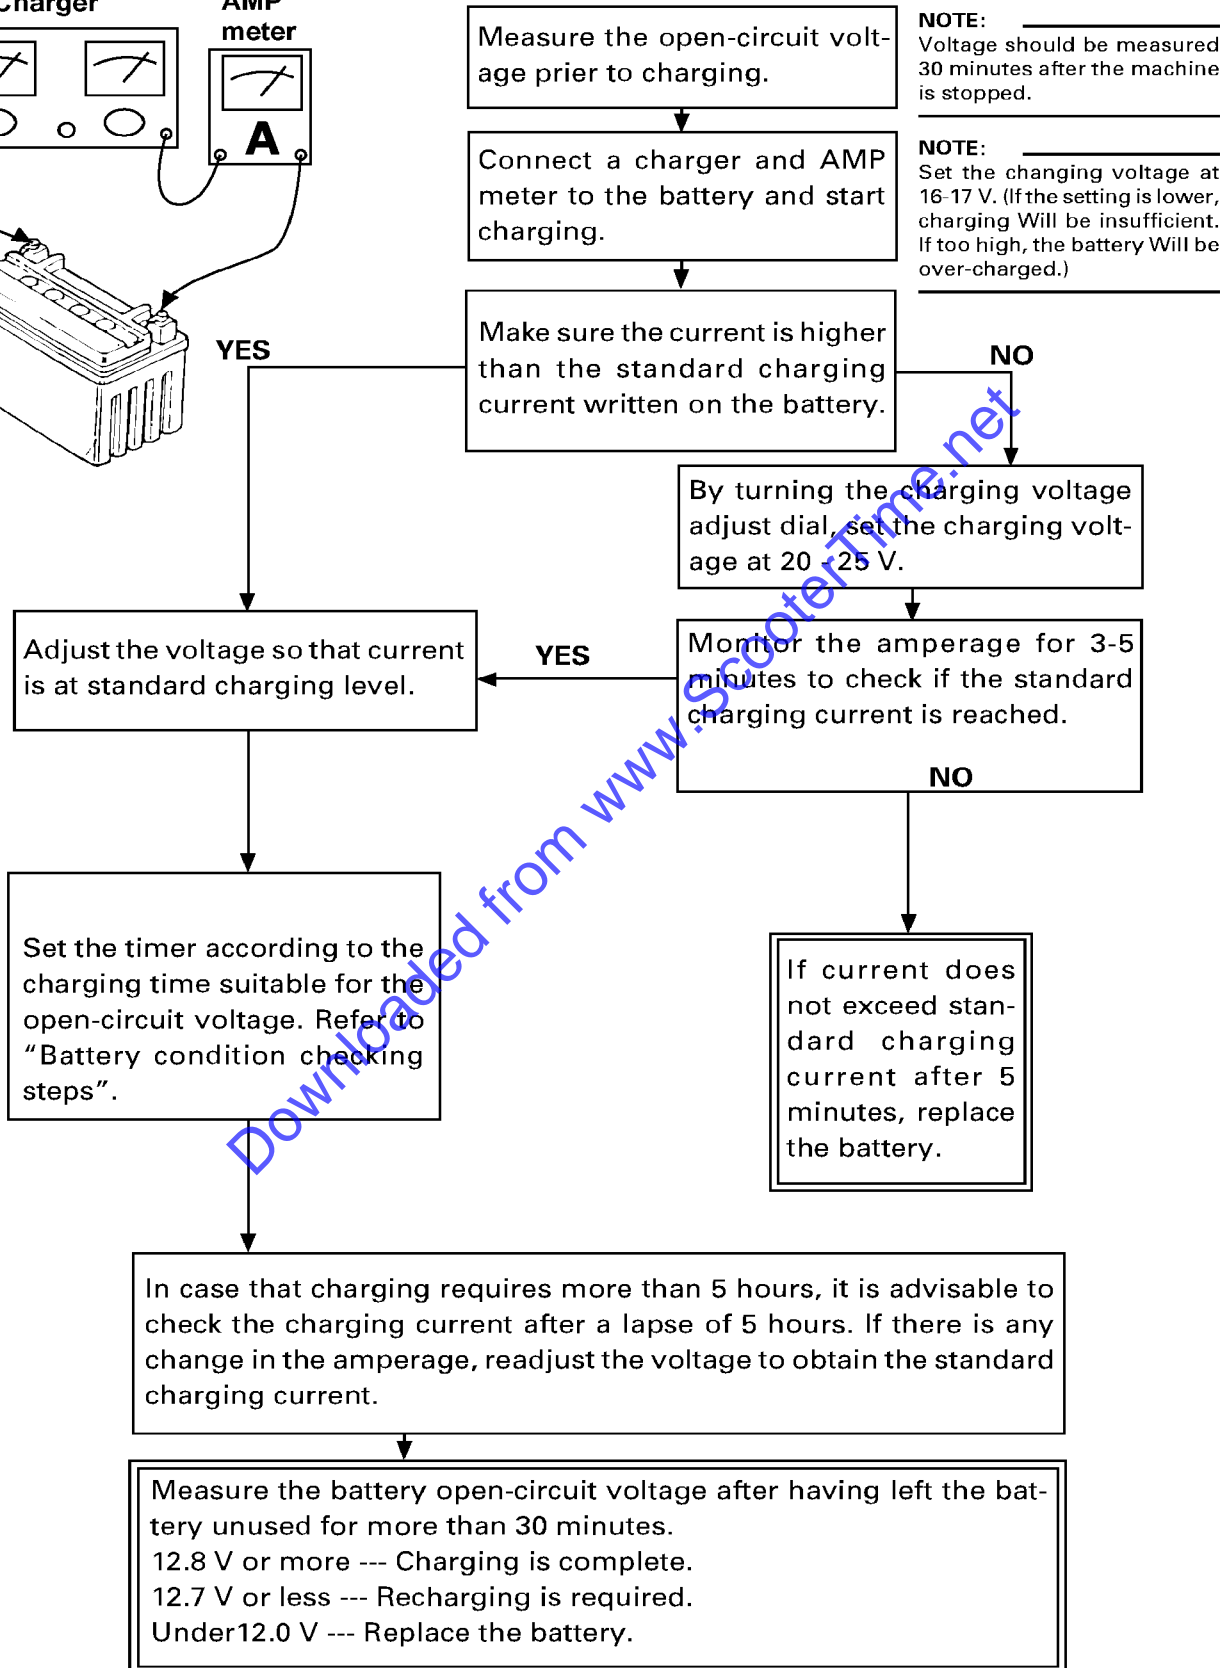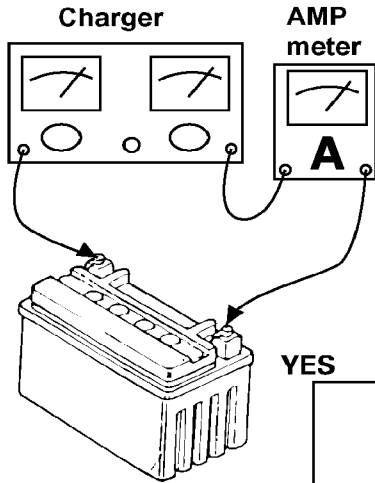

## Charging method using a constant-voltage type charger

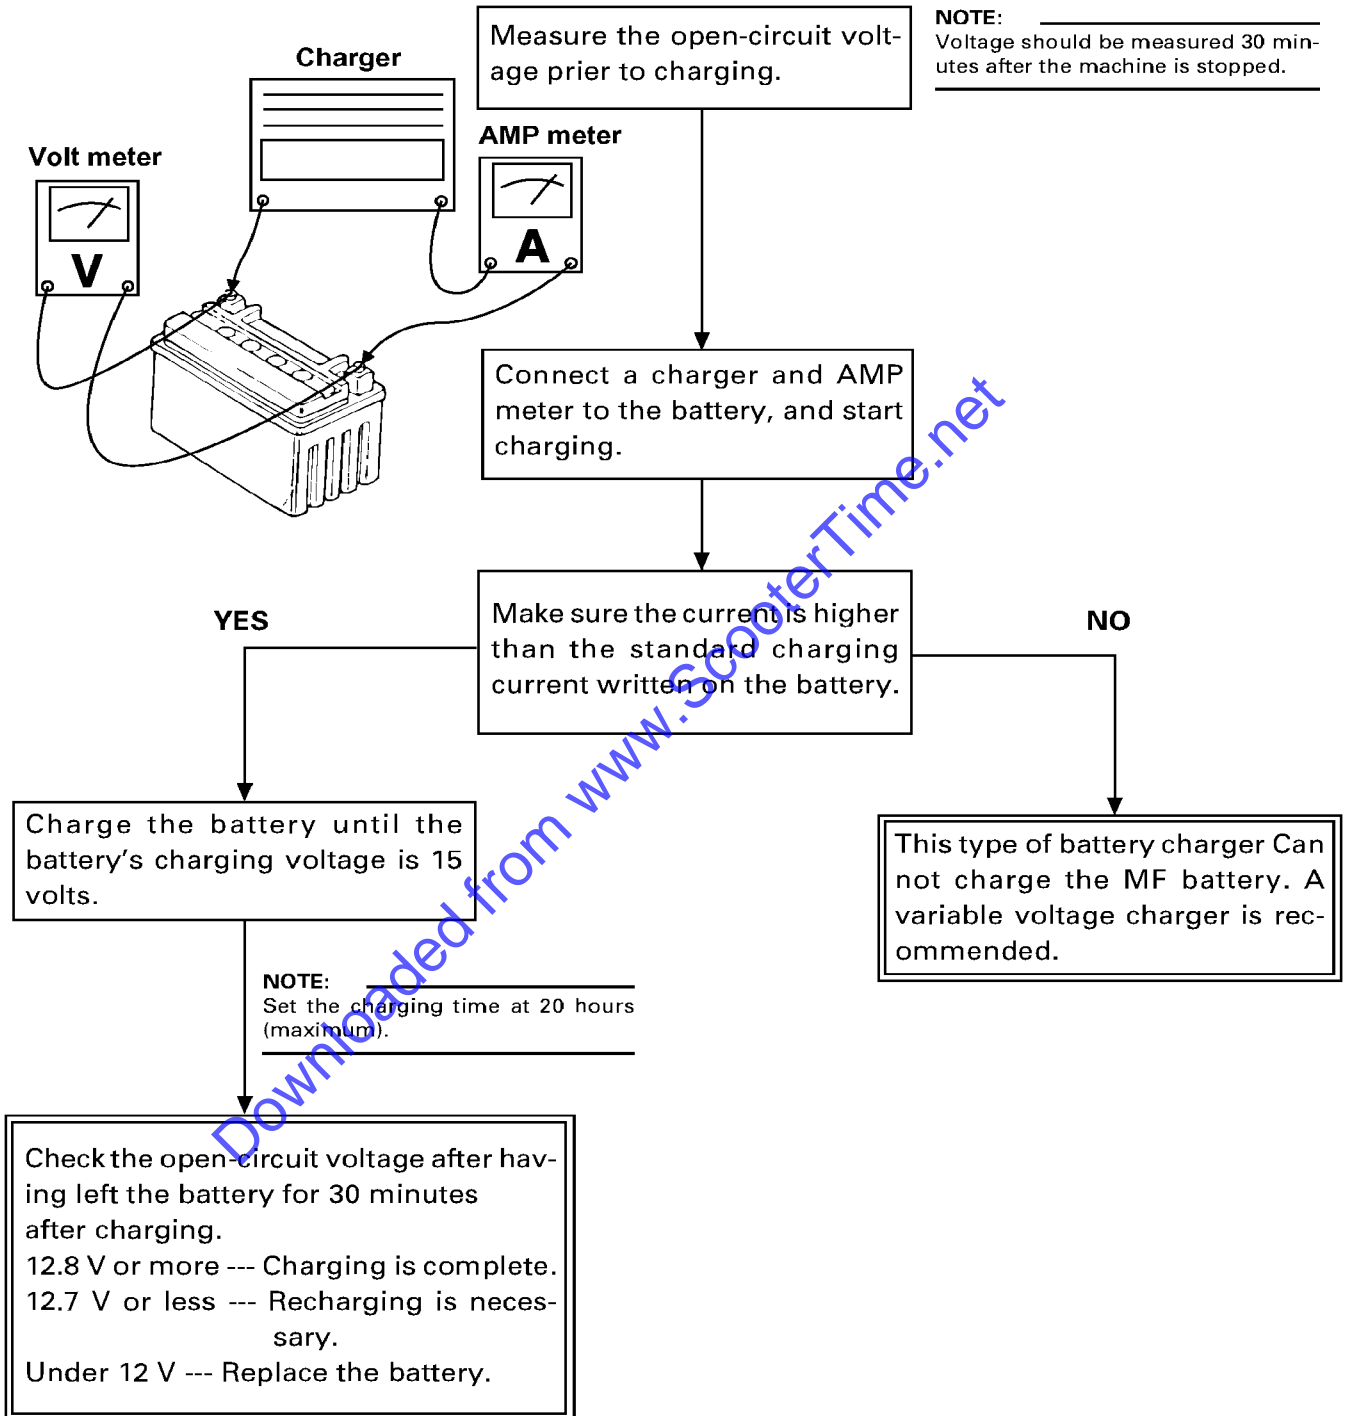

## Charging method using a constant current type charger


This type of battery charger Can not charge the MF battery.

4. Inspect:
  - Battery terminal
  - Dirty terminal → Clean with wire brush.
  - Poor connection → Correct.

**NOTE:** \_\_\_\_\_

After cleaning terminals, apply lightly to the terminals.

5. Install
  - Battery
  - Battery box cover

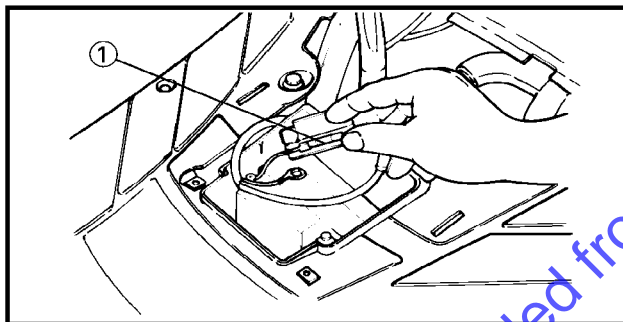

**FUSE INSPECTION**

1. Remove:
  - Battery box cover
  - Refer to "COVER AND PANEL" section.
2. Remove:
  - Fuse ①
3. Inspect:
  - Fuse ①
  - defective → Replace

\*\*\*\*\*

Blown fuse procedure steps:

- Turn off ignition and the circuit.
- Install a new fuse of proper amperage.
- Turn on switches to verify operation of electrical device.
- If fuse blows immediately again, check circuit in question.

\*\*\*\*\*

**⚠ WARNING** \_\_\_\_\_

**Never use a fuse with an amperage rating other than that specified. Improvising or using a fuse with the wrong amperage rating may cause extensive damage to the electrical system, cause the lighting and ignition systems to malfunction and could possibly cause a fire.**


Description	Amperage	Quantity
Main	7A	1

4. Install:
  - Fuse
  - Battery box cover

Downloaded from www.CopierTime.net

## HEADLIGHT BEAM ADJUSTMENT /HEADLIGHT BULB REPLACEMENT

INSP  
ADJ

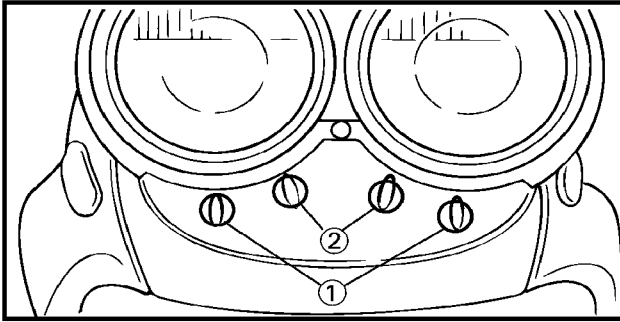


### HEAD LIGHT BEAM ADJUSTMENT


1. Adjust:
  - Head light (vertically)  
Turn the adjusting screw ① in or out to adjust headlight beam.
  - Head light (Horizontal)  
Turn the adjusting screw ② in or out to adjust headlight beam.

### HEADLIGHT BULB REPLACEMENT

1. Remove:
  - Upper cover  
Refer to "COVER AND PANEL" section.

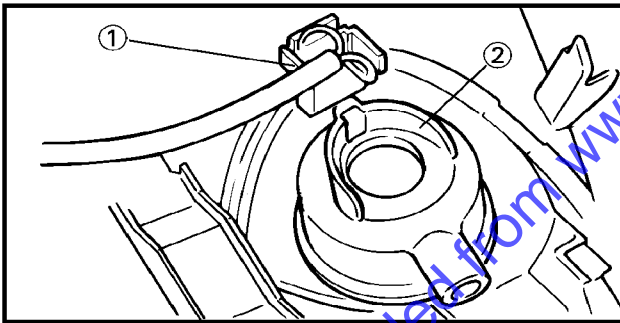

2. Disconnect:
  - Headlight coupler ①
3. Remove:
  - Bulb holder cover ②

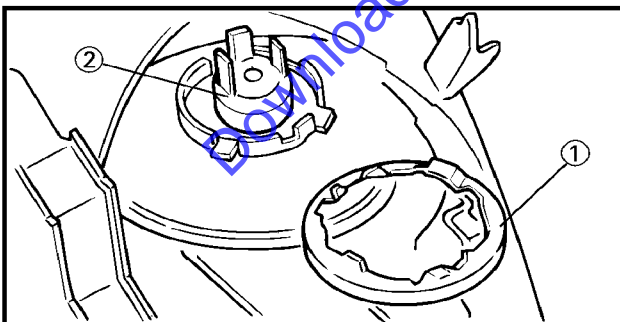

4. Remove:
  - Headlight bulb holder ①  
Turn the bulb holder counterclockwise to remove it.
5. Remove:
  - Bulb(defective) ②

### **⚠ WARNING**

Since the headlight bulb gets extremely hot, keep flammable products and your hands away from the bulb until it has cooled down.

6. Install:
  - Bulb(new)



**CAUTION:** \_\_\_\_\_

Avoid touching the glass part of the head-light bulb to keep it free from oil, otherwise the transparency of the glass, the life of the bulb and the luminous flux will be adversely affected. If the headlight bulb gets soiled, thoroughly clean it with a cloth moistened with alcohol or lacquer thinner.

7. Install:
  - Bulb holder
  - Turn the bulb holder clockwise to install it.
8. Install:
  - Bulb holder cover
9. Connect:
  - Headlight coupler
10. Install:
  - Upper cover
11. Adjust:
  - Headlight beam

Refer to "HEADLIGHT BEAM ADJUSTMENT" section

3

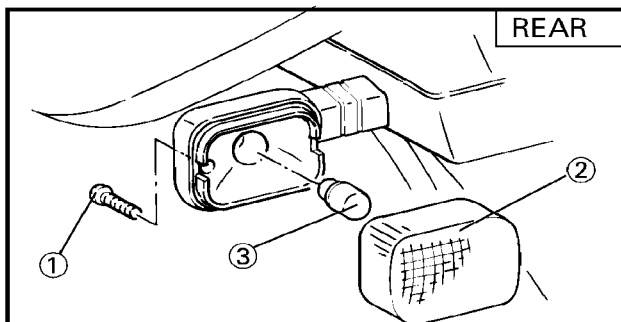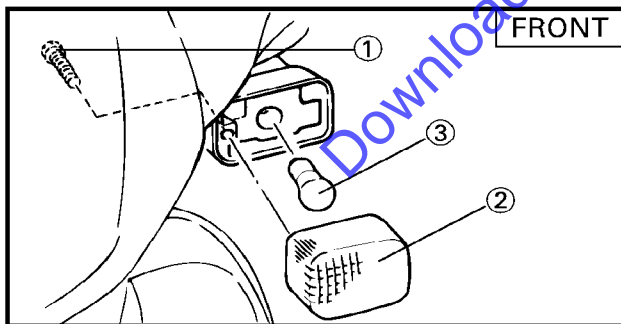

## TURN SIGNAL BULB REPLACEMENT

1. Remove:
  - Screw ①
  - Lens ②
2. Replace:
  - Bulb (defective)③
3. Install:
  - Lens ②
  - Screw ①


**CAUTION:** \_\_\_\_\_

Do not over-tighten the screws as the lens may break.




**CAUTION:**

Avoid touching the glass part of the head-light bulb to keep it free from oil, otherwise the transparency of the glass, the life of the bulb and the luminous flux will be adversely affected. If the headlight bulb gets soiled, thoroughly clean it with a cloth moistened with alcohol or lacquer thinner.

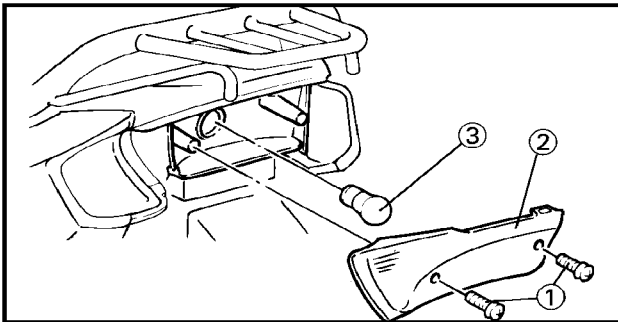

**TAILLIGHT BULB REPLACEMENT**

1. Remove:
  - Screws ①
  - Lens ②
2. Replace:
  - Bulb (defective) ③
3. Install:
  - Lens ②
  - Screws ①

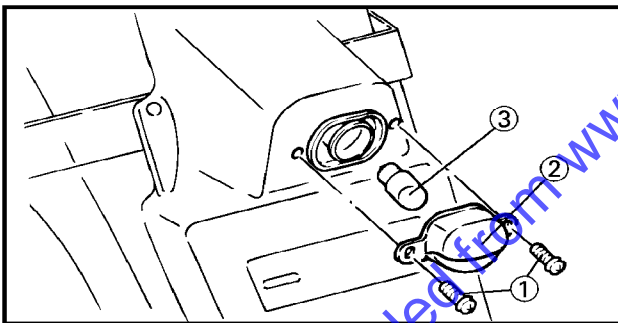

**LICENSE LIGHT BULB REPLACEMENT**

1. Remove:
  - Screws ①
  - Lens ②
2. Replace:
  - Bulb (defective) ③
3. Install:
  - Lens ②
  - Screws ①

Downloaded from www.Scooterline.net




EB400000

ENGINE OVERHAUL


ENGINE REMOVAL

WIREHARNESS AND CABLES

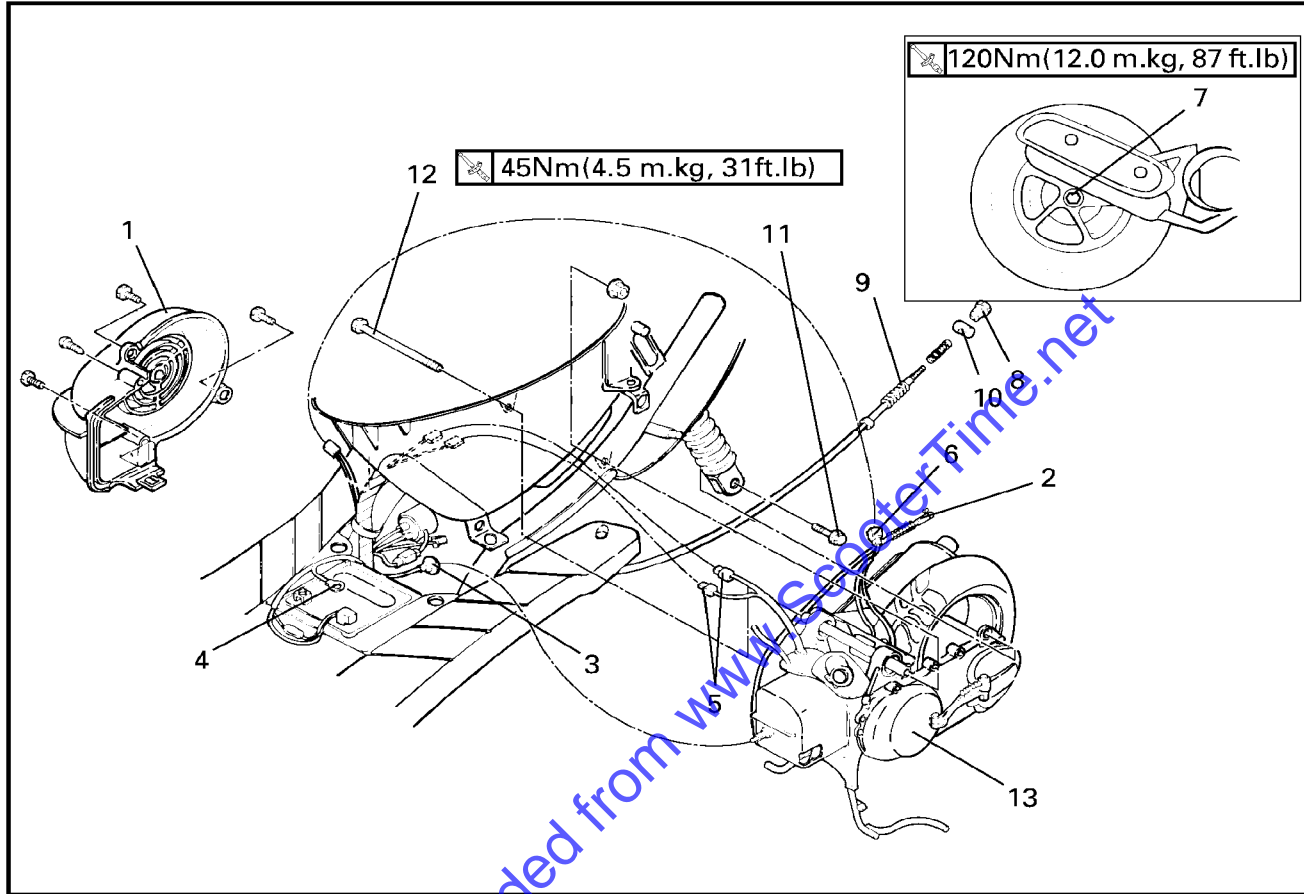

4

Order	Job name/Part name	Q'ty	Remarks
	<b>Wireharness and cables removal</b>		Remove the parts in order.
	Rear carrier		Refer to "COVER AND PANEL" section in CHAPTER 3.
	Tail cover		
	Left side panel		
	Right side panel		
	Battery box cover		
	Center cowling		
	Air filter case		
	Carburetor		
1	Air shroud 1	1	
2	Autolube delivery hose	1	

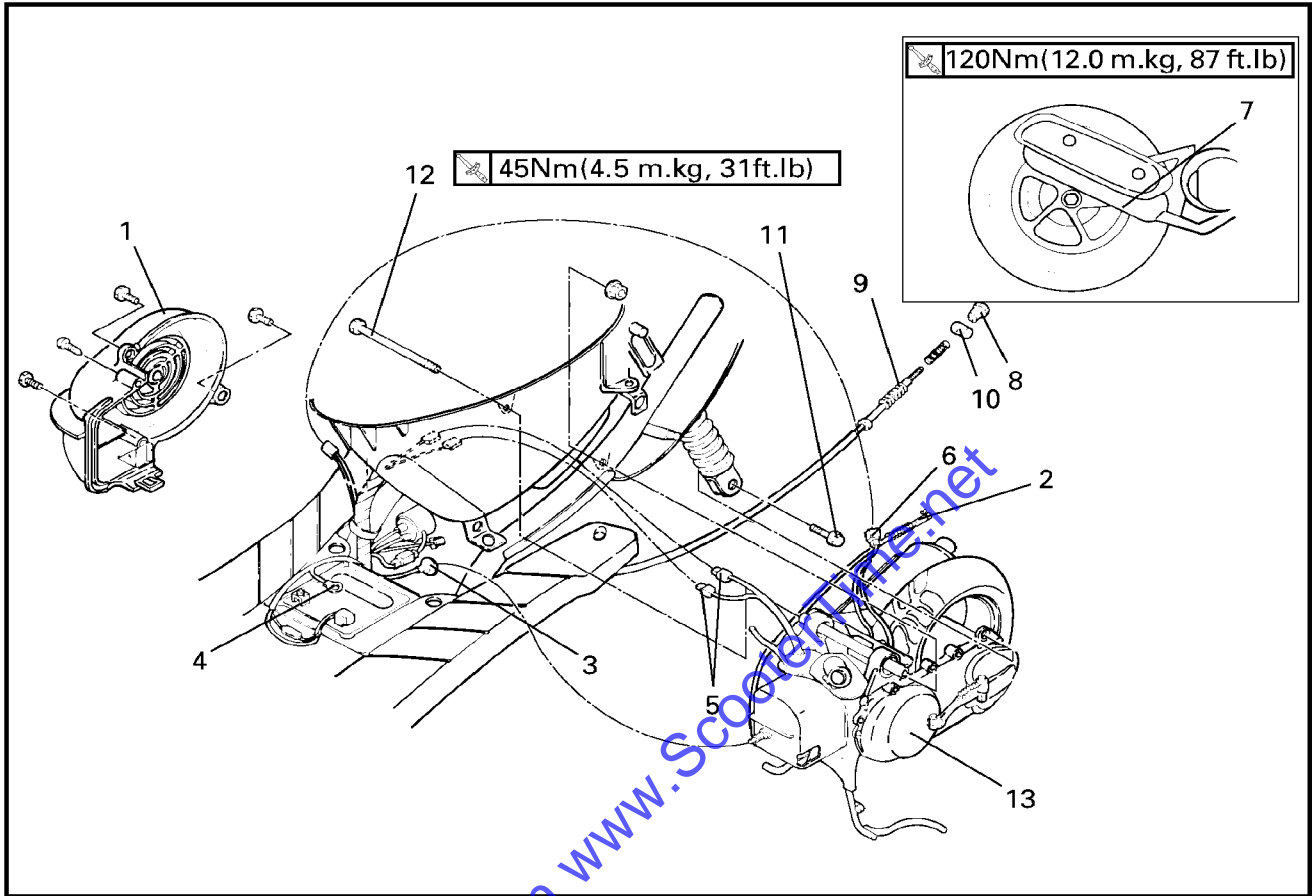


Order	Job name/Part name	Q'ty	Remarks
3	Spark plug cap	1	
4	Battery (-) lead	1	
5	C.D.I magneto leads coupler	1	
6	Starter motor leads coupler	1	
7	Rear wheel nut	1	<b>NOTE:</b> Loosen the rear wheel nut.
8	Rear brake adjuster	1	
9	Rear brake cable	1	
10	Pin	1	
11	Bolt	1	
12	Engine mount bolt	1	
13	Engine	1	Reverse the removal proceure for instal- lation.




CYLINDER HEAD, CYLINDER AND PISTON

CYLINDER HEAD, CYLINDER AND PISTON

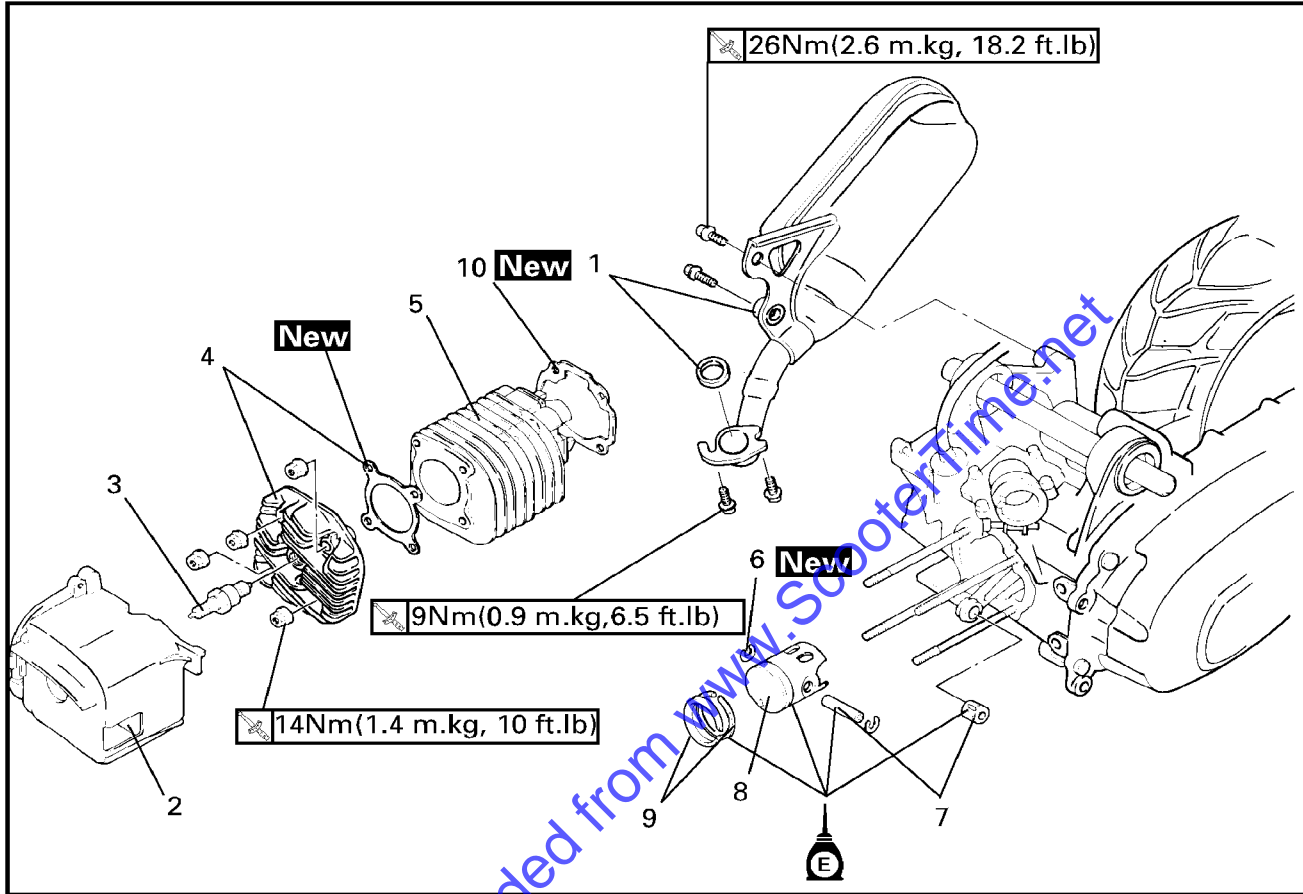

4

Order	Job name/Part name	Q'ty	Remarks
	Cylinder head, Cylinder and piston removal		Remove the parts in the order.
	Engine		Refer to the "ENGINE REMOVAL" section
1	Muffler/Gasket	1/1	
2	Air shroud 2	1	
3	Spark plug	1	
4	Cylinder head/Cylinder head gasket	1/1	
5	Cylinder	1	
6	Piston pin clip	2	
7	Piston pin/ Bearing	1/1	
8	Piston	1	
9	Piston ring set	1	
10	Cylinder gasket	1	
			Reverse the removal procedure for installation.

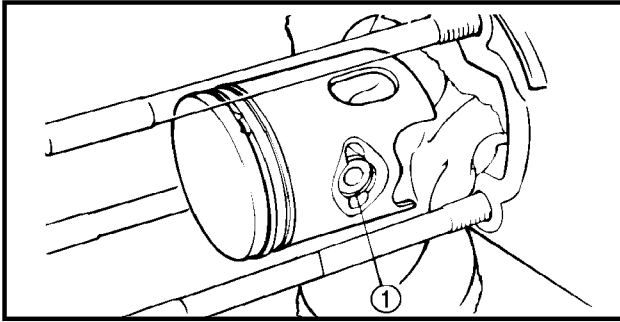


**PISTON PIN AND PISTON REMOVAL**

1. Remove:
  - Piston pin clip ①

**NOTE:**


Before removing the piston pin clip, cover the crankcase with a clean rag so you will not accidentally drop the clip into the crankcase.

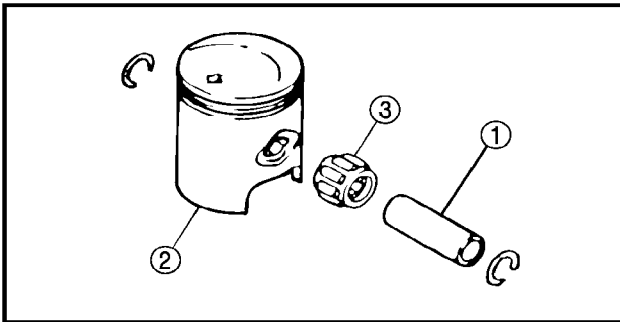

2. Remove:
  - Piston pin ①
  - Piston ②
  - Piston pin bearing ③


**CAUTION:**

Do not use a hammer to drive the piston pin out.

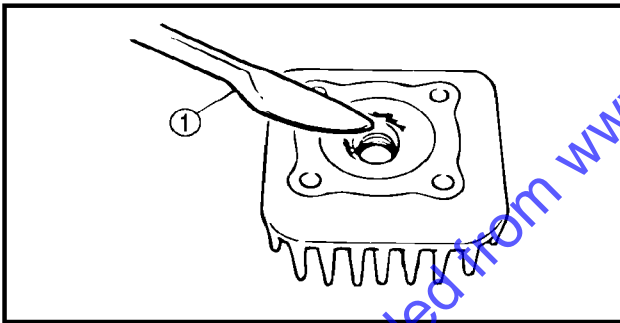

**CYLINDER HEAD INSPECTION**

1. Eliminate:
  - Carbon deposits
  - Use a rounded scraper ①.

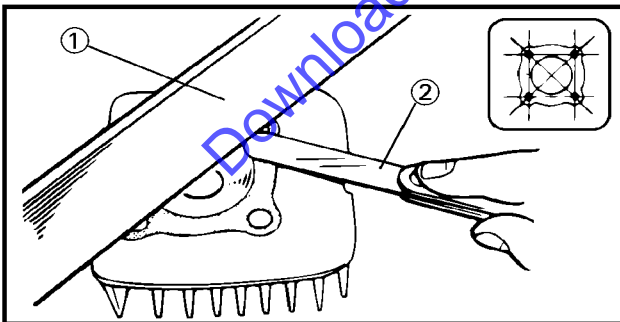

2. Inspect:
  - Cylinder head warpage
  - Out of specification → Re-surface.


\*\*\*\*\*

Warpage measurement and re-surfacement steps:

- Attach a straight edge ① and a thickness gauge ② on the cylinder head.
- Measure the warpage limit.







Warpage limit:  
0.03 mm (0.0012 in)

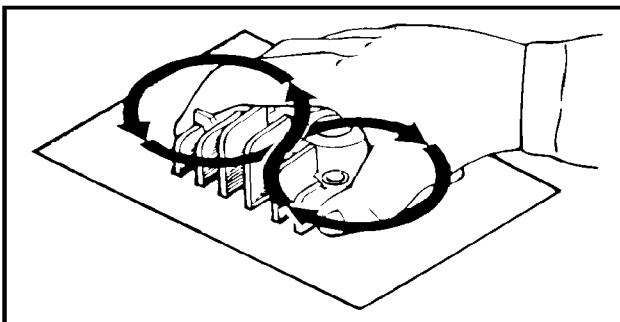

- If the warpage is out of specification, reface the cylinder head.

**NOTE:**

Rotate the head several times to avoid removing too much material from one side.

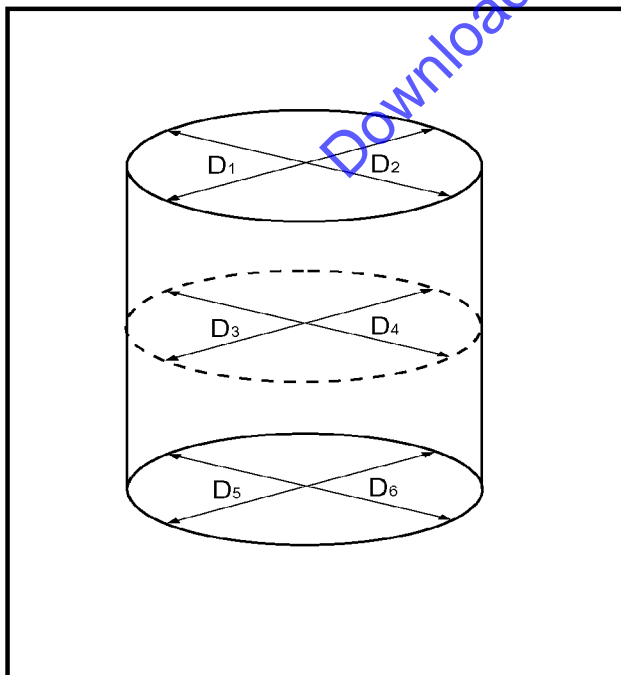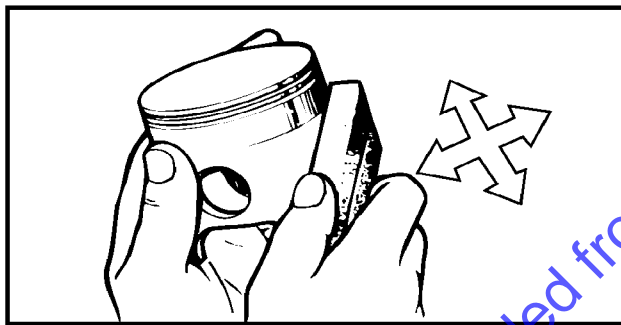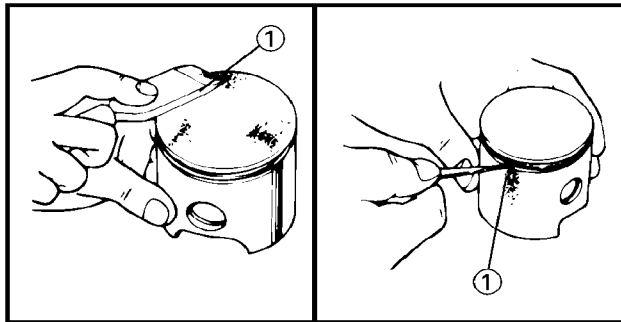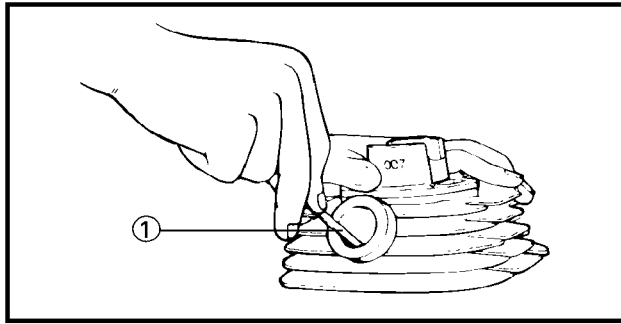

CYLINDER AND PISTON INSPECTION

1. Eliminate:
  - Carbon deposits  
Use a rounded scraper ①.
2. Inspect:
  - Cylinder wall  
Wear/Scratches→Rebore or replace.
3. Eliminate:
  - Carbon deposits ①  
From the piston crown and ring grooves.
4. Remove:
  - Score marks and lacquer deposits  
From the sides of piston.
5. Inspect:
  - Piston wall  
Wear/Scratches/Damage→Replace.
6. Measure:
  - Piston-to cylinder clearance

Downloaded from www.ScooterTime.net

**Piston to cylinder clearance measurement steps: First step:**


- Measure the cylinder bore "C" with a cylinder bore gauge.

**NOTE:** \_\_\_\_\_

Measure the cylinder bore "C" in parallel to and at right angles to the crankshaft. Then, find the average of the measurements.

\_\_\_\_\_




	Standard	Wear limit
Cylinder bore "C"	40.000~40.014mm (1.5748~1.5754 in)	40.10 mm (1.5787 in)
Taper "T"	-	0.05 mm (0.0020 in)
Out of round "R"	-	0.03 mm (0.0012 in)
C = Maximum D T=( Maximum D1 or D2 ) - ( Maximum D5 or D6 ) R=( Maximum D1 D3 or D5 ) - ( Maximum D2 D4 or D6 )		


- If out of specification, rebore or replace cylinder, and replace piston and piston rings as a set.

2nd step:

- Measure the piston skirt diameter "p" with a micrometer.

Ⓐ 10 mm from the piston bottom edge.

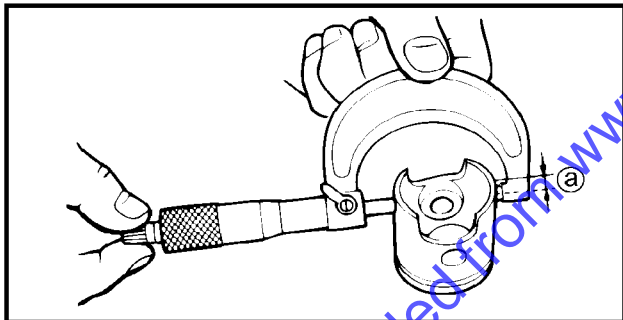

	Piston size P
	39.958~39.972 mm(1.5731~1.5737 in)

- If out of specification, replace piston and piston rings as a set.


3rd step:

- Calculate the piston-to cylinder clearance with following formula:

$\text{Piston-to cylinder clearance} = \text{Cylinder bore "C"} - \text{Piston skirt diameter "p"}$
---


- If out of specification, rebore or replace cylinder, and replace piston and piston rings as a set.

Piston-to cylinder clearance: 0.035 ~ 0.040mm (0.014 ~ 0.0016 in) Limit : 0.10 mm (0.0039 in)
---

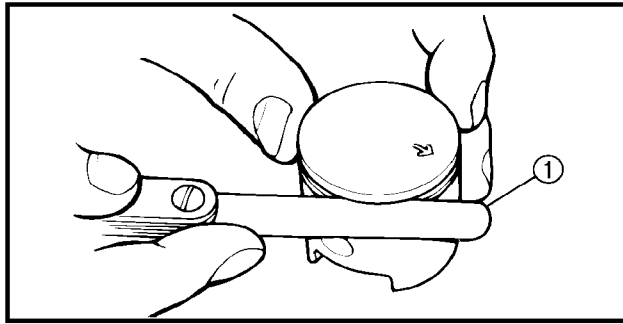


**PISTON RINGS INSPECTION**


1. Measure:
  - Side clearance  
Out of specification → Replace piston and/or rings.  
Use a feeler gauge ①

	Standard	Limit
Top ring	0.03 ~ 0.05 mm (0.0012 ~ 0.002 in)	0.1 mm (0.0039 in)
2nd ring	0.03 ~ 0.05 mm (0.0012 ~ 0.002 in)	0.1 mm (0.0039 in)

2. Install:
  - Piston ring  
Into the cylinder  
Push the ring with the piston crown.

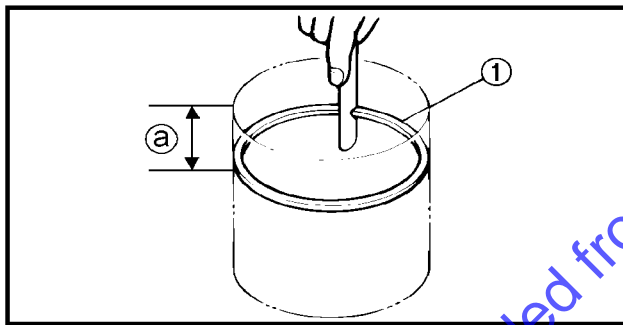

3. Measure:
  - End gap  
Out of specification → Replace rings as a set.  
Use a feeler gauge ①.

	Standard	Limit
Top ring	0.15 ~ 0.35 mm (0.005 ~ 0.01 in)	0.6 mm (0.02 in)
2nd ring	0.15 ~ 0.35 mm (0.005 ~ 0.01 in)	0.6 mm (0.02 in)


① Measuring Point 20 mm (0.79 in)

**PISTON PIN AND PISTON PIN BEARING**

1. Inspect:
  - Piston pin  
Blue discoloration/Groove → Replace, then inspect lubrication system.

Downloaded from www.Spoortime.net



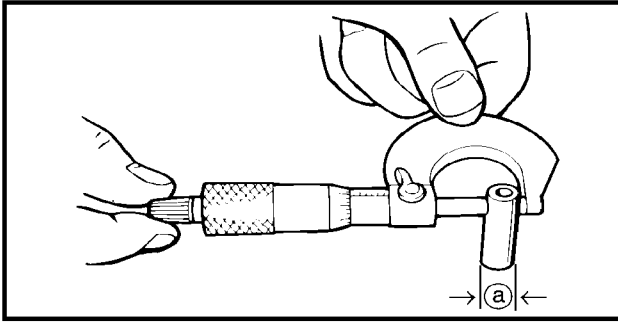


### 2. Measure:

- Outside diameter (a) (piston pin)  
Out of specification → Replace.



Out side diameter (piston pin):  
9.996~10.000 mm(0.3935~0.3937in)

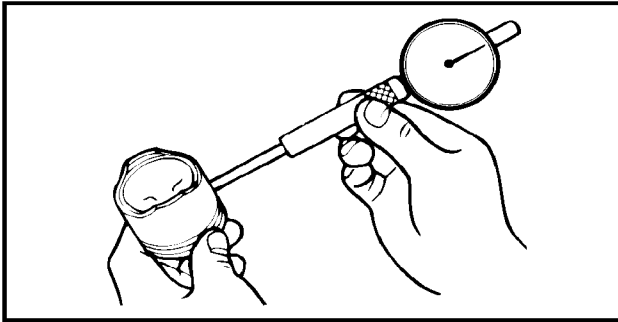


### 3. Measure:

- Piston pin-to-piston clearance  
Out of specification → Replace piston.

Piston pin-to-piston clearance =  
Bore size (piston pin)  
Outside diameter (piston pin)




Piston pin-to-piston clearance:  
0.004~0.019 mm(0.0016~0.00075 in)  
Limit: 0.07 mm>(0.003 in)

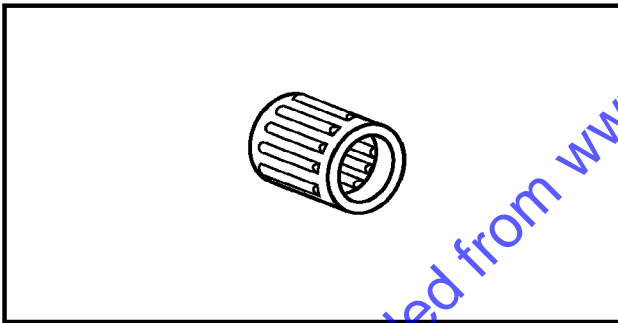

### 4. Inspect:


- Bearing(piston pin)  
Pitting/Damage → Replace.

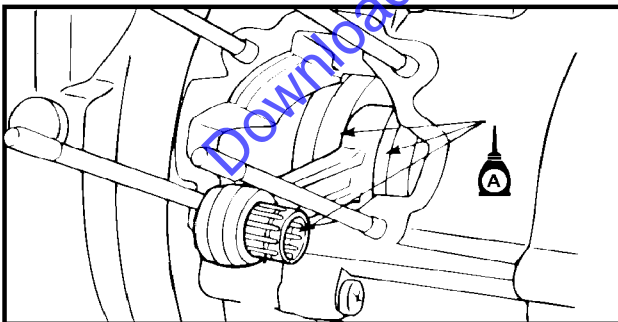


## PISTON PIN AND PISTON INSTALLATION


### 1. Apply:

- Engine oil  
(to the crankshaft bearing, connecting rod big end bearing, small end bearing, piston pin, piston ring grooves and piston skirt areas.)

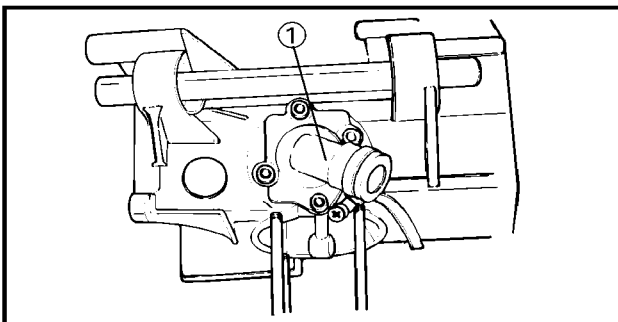

### 2. Install:


- Reed valve gasket
- Reed valve
- Carburetor joint ①  11Nm(1.1 m.kg, 8ft.lb)

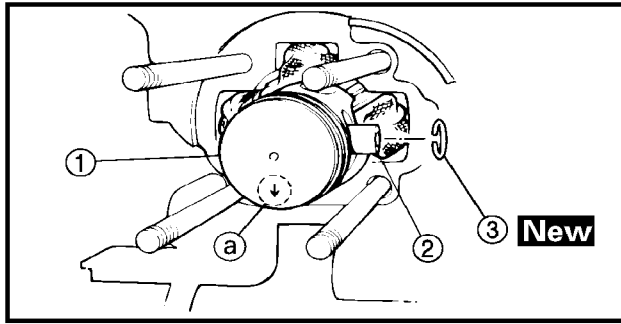

3. Install:
  - Small end bearing
  - Piston ①
  - Piston pin ②
  - Piston pin clip ③ **New**

**NOTE:**

- The arrow ① on the piston to the exhaust side.
- Before installing the piston pin clip, cover the crankcase with a clean towel or rag so you will not accidentally drop the pin clip material into the crankcase.
- Always use a new piston pin clip.

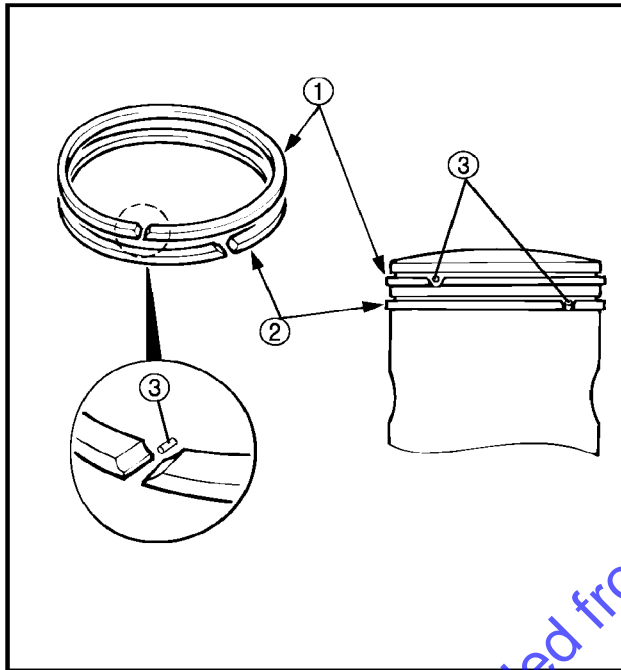


**CYLINDER AND CYLINDER HEAD**

1. Install:
  - Cylinder gasket (new gasket)
2. Check:
  - Piston rings

- ① 1st ring
- ② 2nd ring

**NOTE:**

Make sure the ring ends ① are properly fitted around the ring locating pins ③ in the piston grooves.

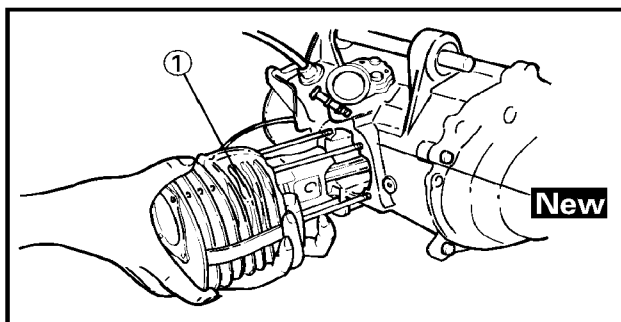

3. Install:
  - Cylinder ①


**NOTE:**

Install the cylinder with one hand while compressing the piston rings with the other hand.



Downloaded from www.ScooterTime.net

## CYLINDER HEAD, CYLINDER AND PISTON

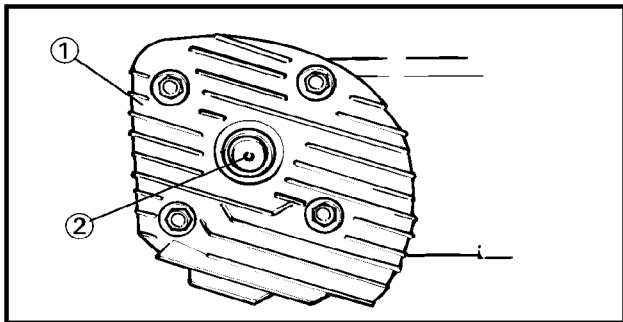ENG



4. Install:
  - Cylinder head gasket (new gasket)
5. Install:
  - Cylinder head ①
  - Spark plug ②
  - Air shroud

	14Nm(1.4m.kg,10ft.lb)
	20Nm(2.0m.kg,14ft.lb)


**NOTE:** \_\_\_\_\_  
Tighten the cylinder head holding nuts in stage, using a crisscross pattern.

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

# V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE



## V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE KICK STARTER AND CRANKCASE COVER (LEFT)

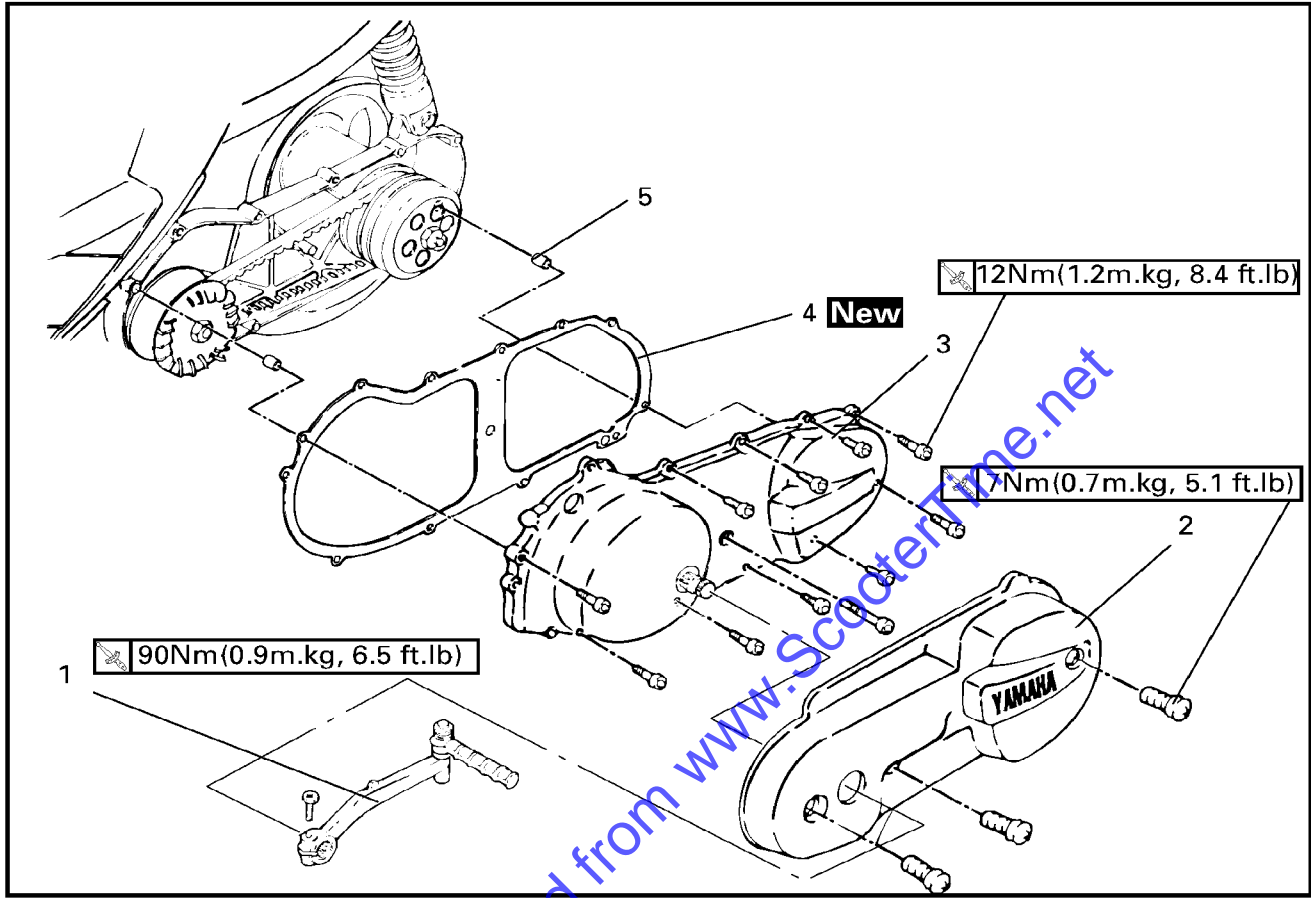


4

Order	Job name/Part name	Q'ty	Remarks
	Kick starter and crankcase cover (left) removal		Remove the parts in order.
1	Kick starter	1	
2	Crankcase cover 2 (left)	1	
3	Crankcase cover 1 (left)	1	
4	Gasket	1	
5	Pin	1	
		2	Reverse the removal procedure for installation.




V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE  
KICK STARTER

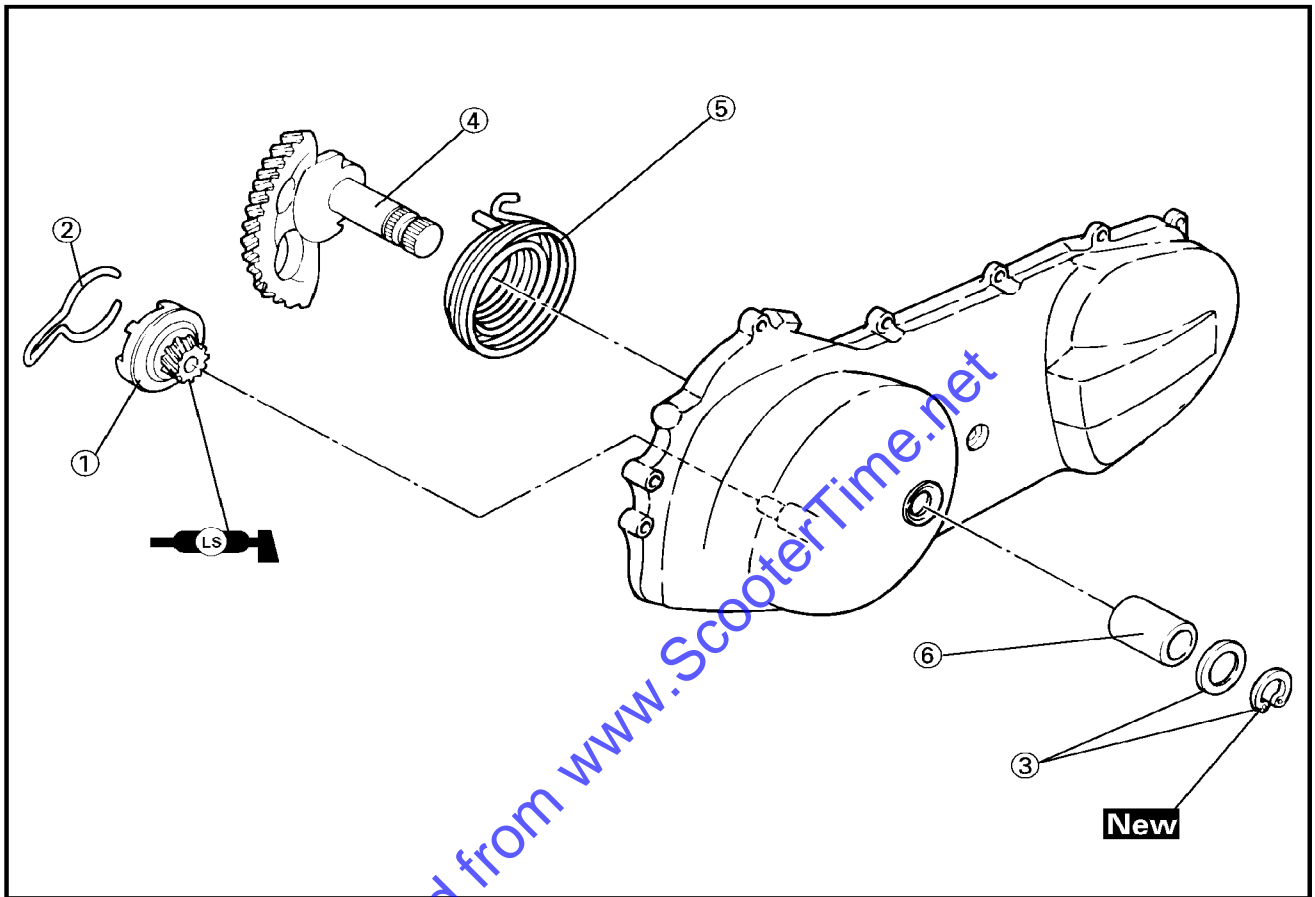

Order	Job name/Part name	Q'ty	Remarks
	Kick starter removal		Remove the parts in order.
	Crankcase cover 1 (left) removal		
①	Kickstarter pinion gear	1	
②	Kickstarter pinion gear clip	1	
③	Circlip/Plain washer	1/1	
④	Kickstarter segment gear	1	
⑤	Return spring	1	
⑥	Collar	1	Reverse the removal procedure for installation.


# V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE

ENG

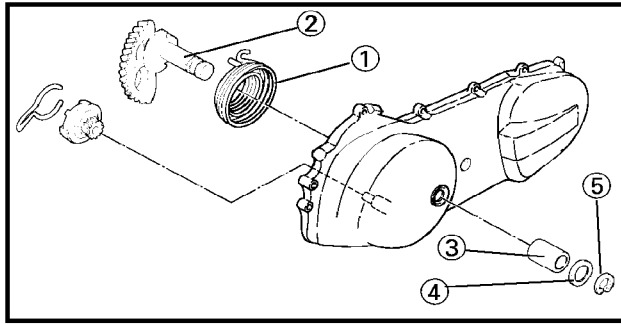

## KICK STARTER INSTALLATION

1. Install:
  - Return spring ①
  - Kickstarter segment gear ②
  - Collar ③
  - Plain washer ④
  - Circlip ⑤



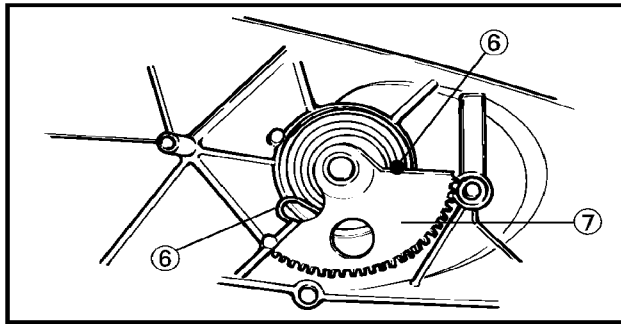


\*\*\*\*\*

### Installation steps:

- a. Install return spring ⑥ and segment gear ⑦ as shown.
- b. Install clip ⑤.
- c. Hook the spring onto the crankcase projection ⑧.
- d. Install the kick starter pinion gear ⑨ and the kick starter.

\*\*\*\*\*

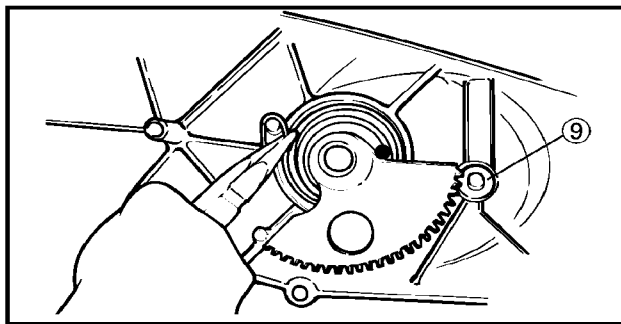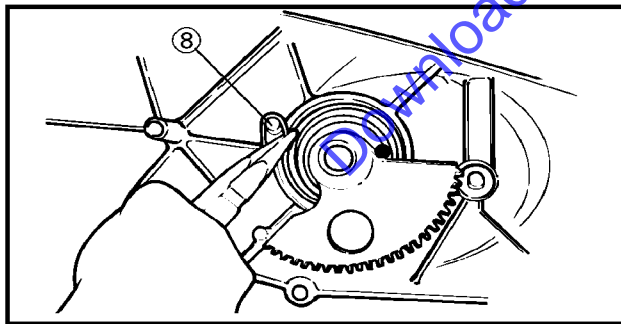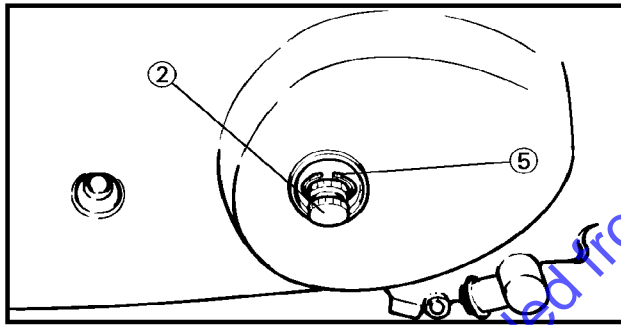


4

# V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE

ENG



## V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE

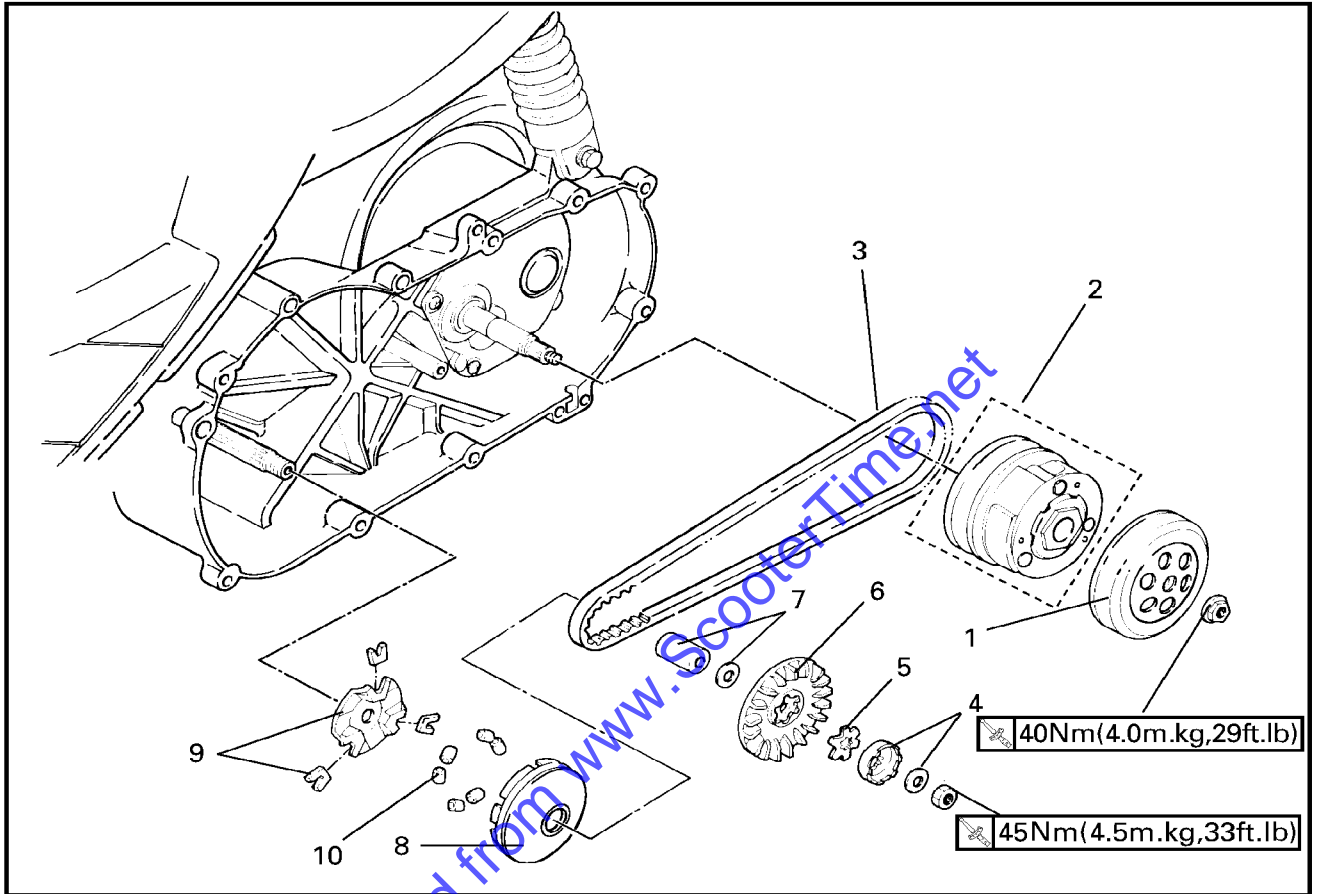


Order	Job name/Part name	Q'ty	Remarks
	V-belt, clutch and secondary/primary sheave removal Lower cowling Air shroud 3		Remove the parts in order. Refer to "COVER AND PANEL" section in chapter 3.
1	Crankcase cover (left)		Refer to "ENGINE REMOVAL" section.
1	Clutch housing	1	Refer to "SECONDARY SHEAVE AND V-BELT REMOVAL" section.
2	Secondary sheave assembly	1	
3	V-belt	1	
4	Conical washer/One-way clutch	1/1	Refer to "PRIMARY SHEAVE REMOVAL ASSEMBLY" section.
5	Crow washer	1	
6	Primary fixed sheave	1	
7	Collar/Washer	1/1	
8	Primary sliding sheave	1	
9	Cam/ Slider	1/3	
10	Weight	6	
			Reverse the removal procedure for installation

# V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE



## SECONDARY SHEAVE

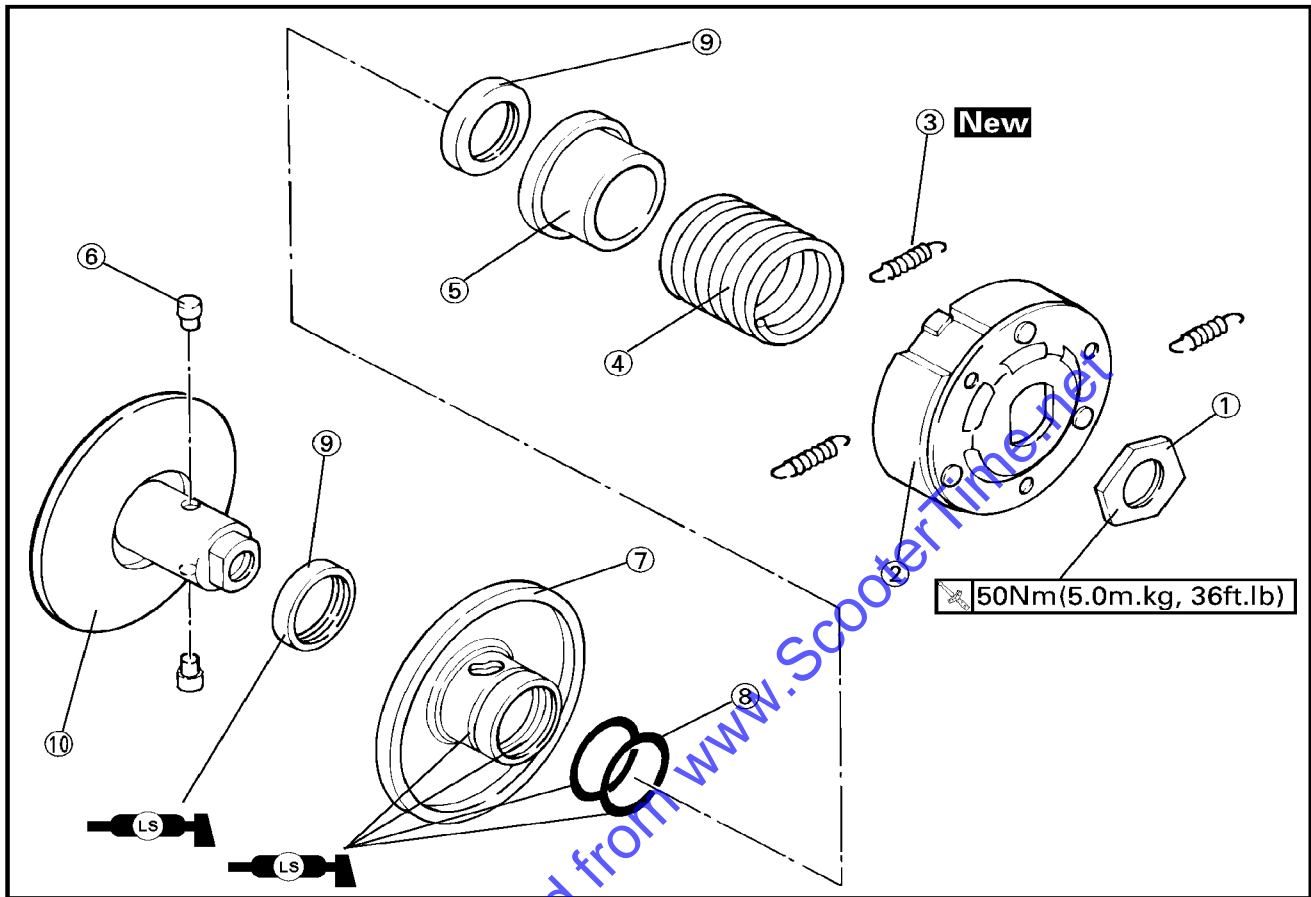


4

Order	Job name/Part name	Q'ty	Remarks
	Secondary sheave disassembly		Disassemble the parts in order.
①	Nut	1	Refer to "SECONDARY SHEAVE DISASSEMBLY" section.
②	Clutch carrier	1	
③	Clutch shoe spring	2	Refer to "SECONDARY SHEAVE INSTALLATION" section.
④	Compression spring	1	
⑤	Spring seat	1	Refer to "SECONDARY SHEAVE INSTALLATION" section.
⑥	Guide pin	2	
⑦	Secondary sliding sheave	1	
⑧	O-ring	2	
⑨	Oil seal	2	Reverse the disassembly procedure for assembly.
⑩	Secondary fixed sheave	1	



# V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE

ENG

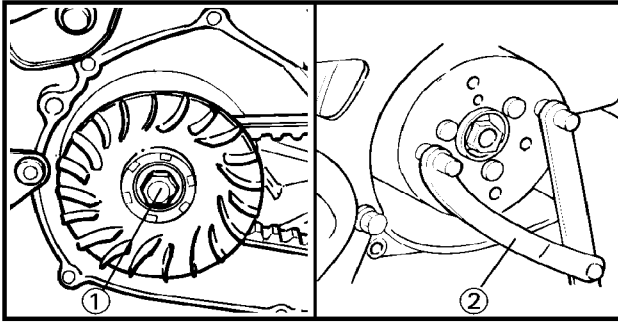


## PRIMARY SHEAVE REMOVAL

1. Remove:
  - Fan
2. Remove:
  - Nut ① (primary sheave)



### NOTE:

When loosening the nut (primary sheave), hold the C.D.I. magneto using flywheel holding tool ②.

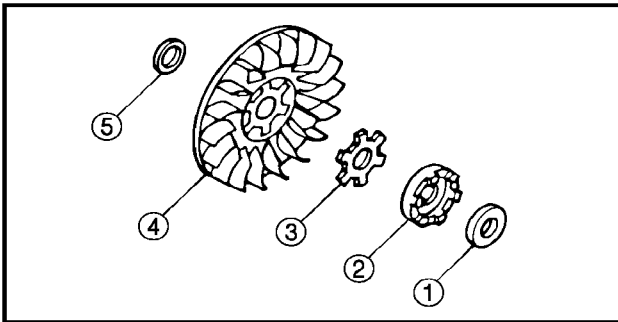

Rotor holding tool:  
YU-01235

3. Remove:
  - Conical spring washer ①
  - One-way clutch ②
  - Washer ③
  - Primary fixed sheave ④
  - Shim ⑤
  - V-Belt
4. Remove:
  - Collar ①
  - Primary sheave assembly ②

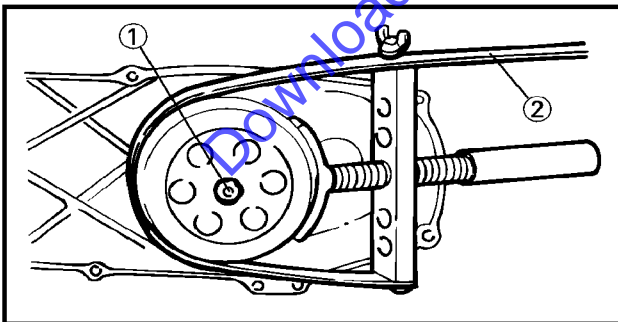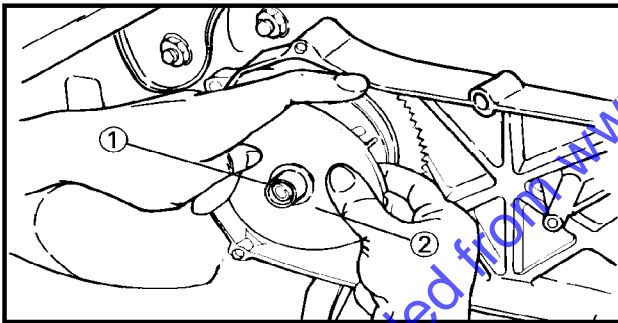

## SECONDARY SHEAVE REMOVAL

1. Remove:
  - Nut ① (secondary sheave)

### NOTE:

Hold the secondary sheave using sheave holder ②.




Sheave holder:  
YU-01701

2. Remove:
  - Clutch housing
  - Secondary sheave assembly
  - Dowel pins

## V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE

ENG

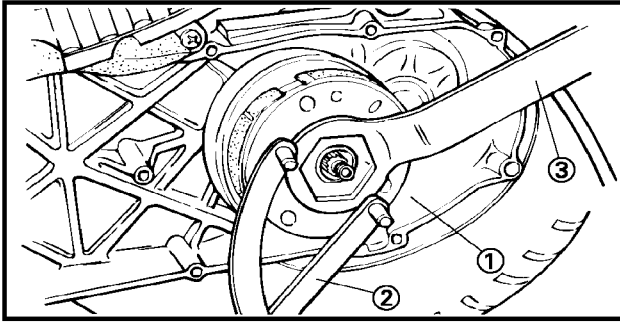

3. Loosen:
  - Nut(Clutch carrier)(1)

**NOTE:** \_\_\_\_\_


Install the secondary sheave to primary drive shaft as shown, and hold the secondary sheave by Universal Roter Holder (2) to loosen the nut (1).



Roter holding tool:  
YU-01235

**CAUTION:** \_\_\_\_\_

Do not remove the clutch securing nut yet. If the nut is removed without compressing the secondary sheave, it jumps and causes injury.

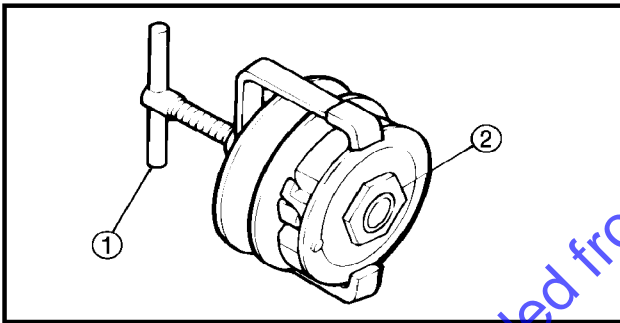


4. Attach:
  - Clutch spring holder (1)



Clutch spring holder:  
YS-28891

5. Remove:
  - Clutch securing nut (2)

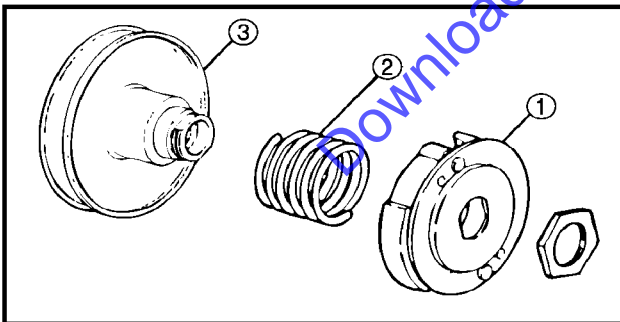

6. Remove:
  - Clutch assembly (1)
  - Clutch spring (2)
  - Spring seat (3)
  - Guide pins
  - Secondary sliding sheave

**CLUTCH INSPECTION**

1. Inspect:
  - Clutch shoes

Glazed parts→Sand with coarse sandpaper.


**NOTE:** \_\_\_\_\_

After using the sand paper, clean of the polished particles with cloth.

4

# V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE

ENG

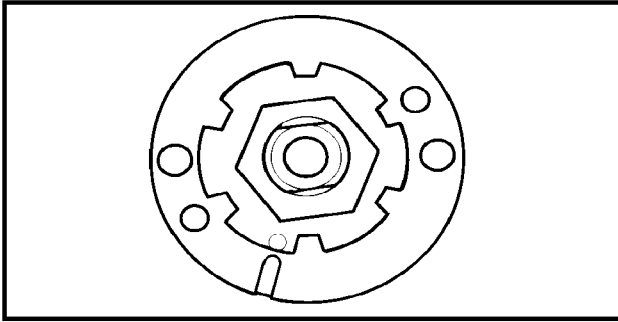

2. Measure:

- Clutch shoe thickness (a)  
Out of specification → Replace.




Clutch shoe thickness:

4 mm (0.16 in)

<Wear limit>:

2.5 mm (0.1 in)

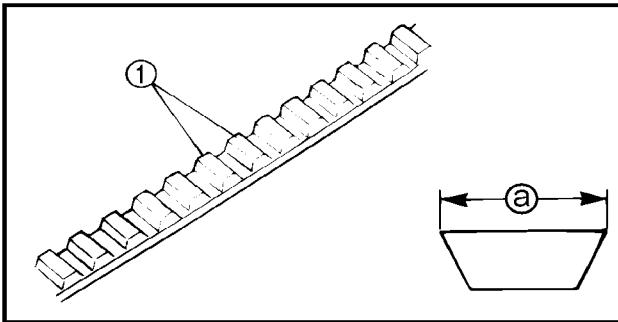

## V-BELT INSPECTION

1. Inspect:

- V-belt (1)  
Crack → Replace.

### NOTE:

Replace the V-belt smeared with a lot of oil or grease.

2. Measure:

- V-belt width (a)  
Out of specification → Replace.



V-belt width:

16.6 mm (0.65 in)


<Wear limit>:

14.6 mm (0.57 in)

Downloaded from www.ScooperTime.net

# V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE


ENG

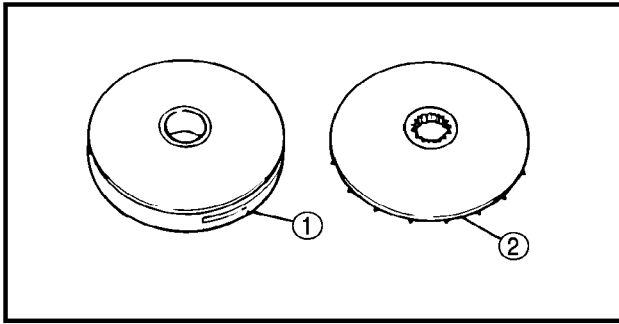

## PRIMARY SHEAVE INSPECTION


### 1. Inspect:

- Primary sliding sheave ①
  - Primary fixed sheave ②
- Wear/Cracks/Scratch/Damage  
→Replace.

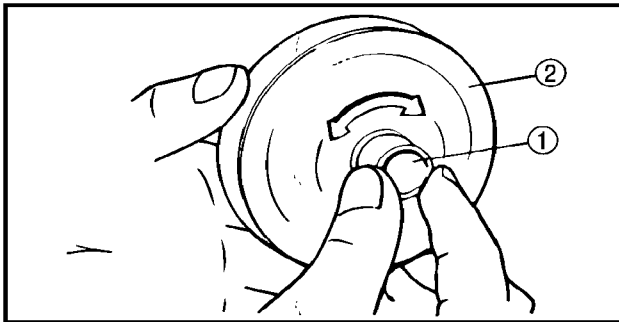

### 2. Check:

- Free movement
- Insert the collar ① into the primary sliding sheave ②, and check for free movement.  
Stick or excessive play → Replace the sheave or collar.

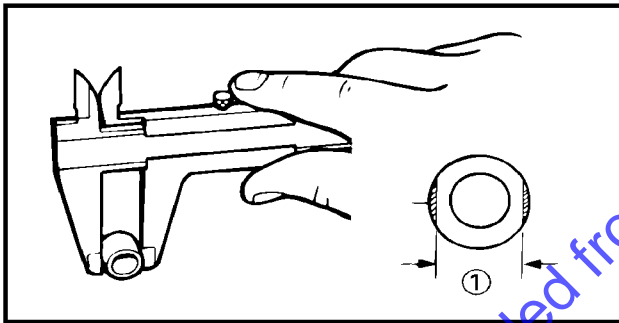


### 3. Measure:

- Out side diameter ① (weight)
- Out of specification → Replace.



Out side diameter (weight)  
15.0 mm (0.59 in)  
<Limit 14.5 mm> (0.57 in)


4

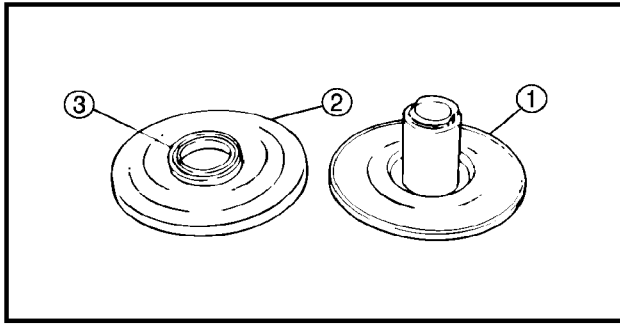

## SECONDARY SHEAVE


### 1. Inspect:

- Secondary fixed sheave ①
- Secondary sliding sheave ②  
Scratch/Crack/Damage→Replace as a set.
- Oil seal ③  
Damage→Replace

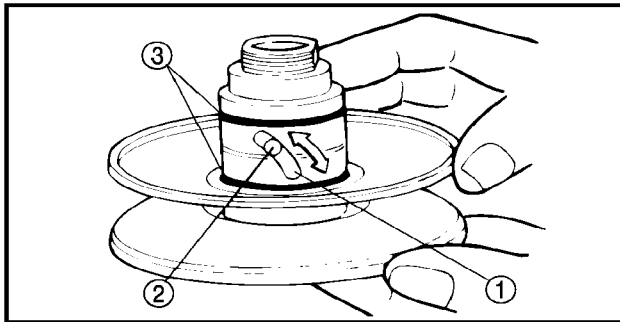

### 2. Inspect:

- Torque cam groove ①
- Guide pin ②  
Wear/Damage→Replace as a set.
- O-rings ③  
Damage→Replace.

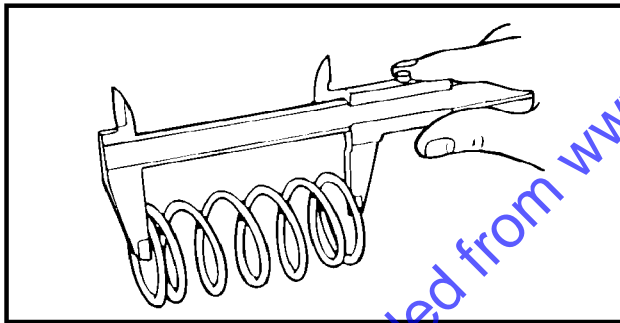


### 3. Measure:

- Clutch spring free length  
Out of specification→Replace.




Clutch spring free length:  
94 mm(3.7 in)  
<Limit>:  
91 mm(3.58 in)

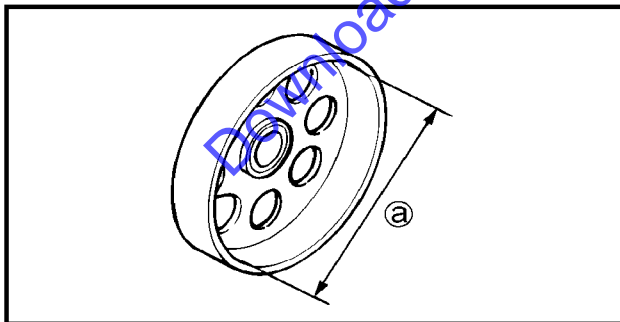

### 4. Inspect:

- Clutch housing inner surface  
Oil/Scratches→Remove.

Oil	Use a rag soaked in lacquer thinner or solvent.
Scratches	Use an emery cloth (lightly and evenly polishing).

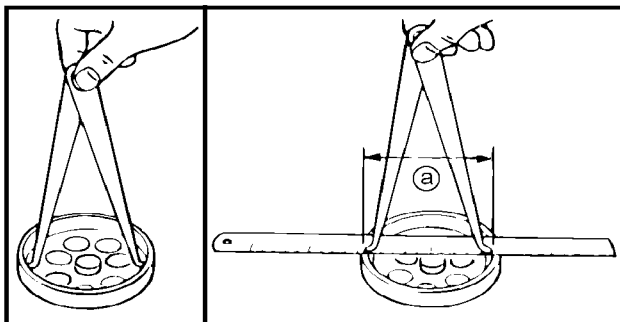


### 5. Measure:

- Clutch housing inside diameter ①  
Out of specification→Replace.




Clutch housing inside diameter:  
105 mm(4.13 in)  
<Wear limit>:  
105.5 mm(4.15 in)

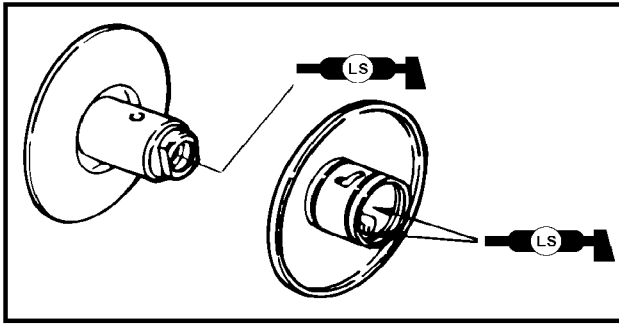

## SECONDARY SHEAVE INSTALLATION

When assembling the secondary sheave, reverse the disassembly procedure. Note the following points.


1. Apply:
  - Lithium soap base grease (to the inside of the sliding/fixed sheave)

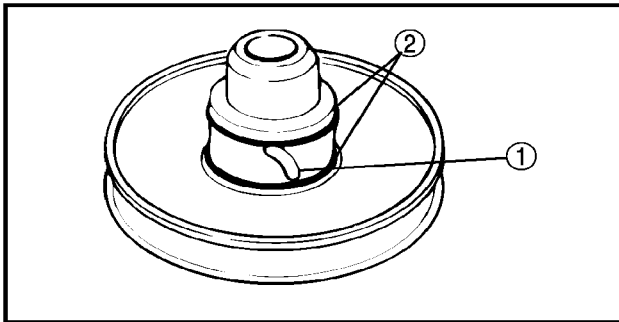

2. Install:
  - Sliding sheave ①

**NOTE:**


Be careful so that the oil seal ② lips are not turned over when installing the sheave.

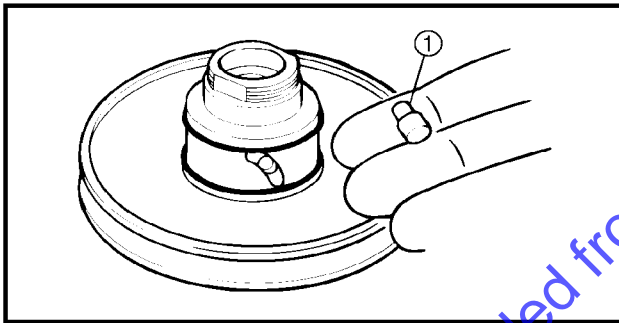

3. Apply:
  - Lithium soap base grease (to the torque cam grooves and O-rings)

4. Install:
  - Guide pin ①


5. Check:
  - Sliding sheave Unsmooth operation → Repair.

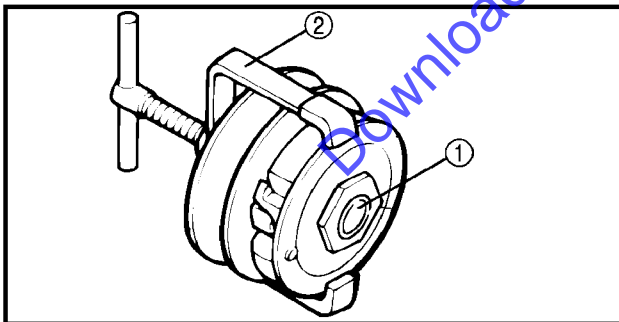

6. Install:
  - Clutch securing nut ① Use clutch spring holder ②



Clutch spring holder:  
YS-28891

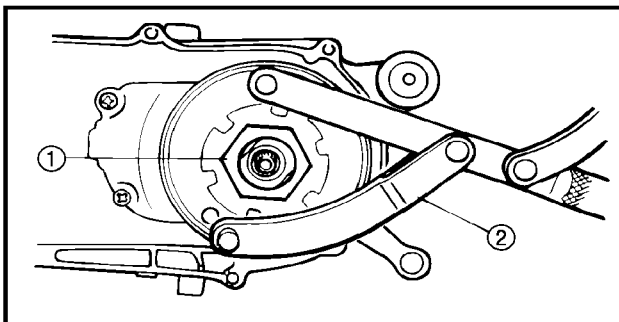

7. Tighten:
  - Clutch securing nut ①

50 Nm (5.0 m.kg, 36 ft.lb)


Use Flywheel holding tool ②



Rotor holding tool  
YU-01235

# V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE


ENG

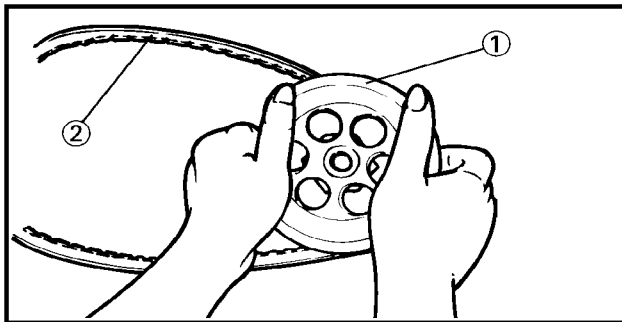

8. Install:
- Secondary sheave assembly
  - Clutch housing ①
  - V-belt ②

**NOTE:**

The V-belt must be installed with the arrow frontward.

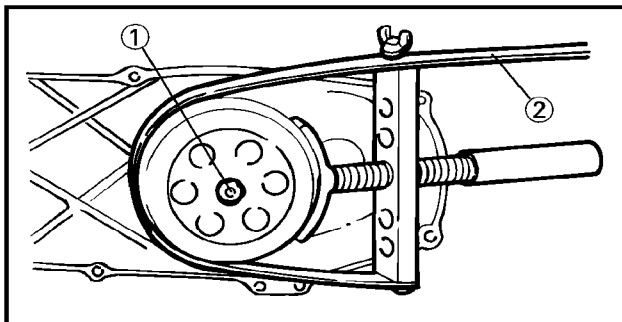


9. Tighten:
- Nut ① (secondary sheave)

40 Nm(4.0 m.kg, 29 ft.lb)

Use sheave holder ②




Sheave holder:  
YU-01701

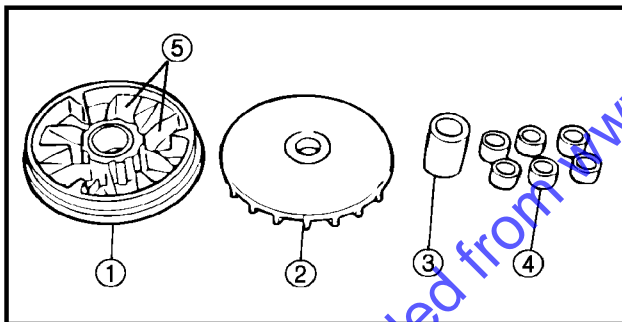


## PRIMARY SHEAVE

1. Clean:
- Primary sliding sheave face ①
  - Primary fixed sheave face ②
  - Collar ③
  - Weight ④
  - Primary sliding sheave cam surface ⑤

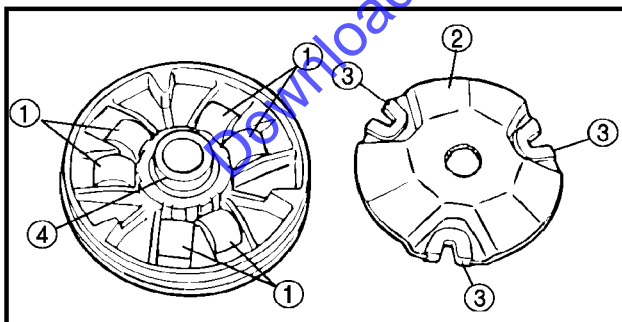

2. Install:
- Weight ①
  - Cam ②
  - Slider ③
  - Collar ④


3. Check:
- Cam operation  
Not smooth → Repair.

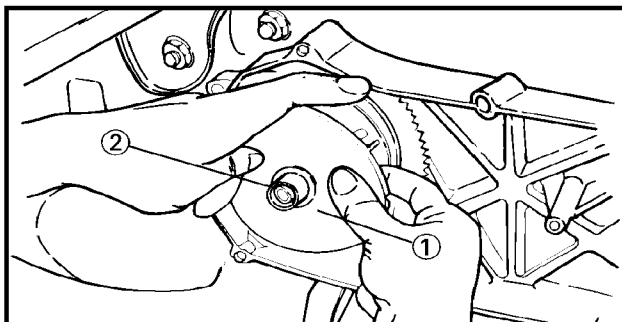


4. Install:
- Primary sheave assembly ①
  - Collar ②
5. Install:
- V-belt

# V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE

ENG

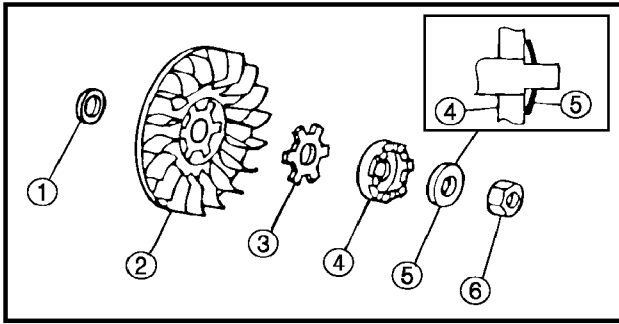

6. Install:
- Shim ①
  - Primary fixed sheave ②
  - Washer ③
  - One-way clutch ④
  - Conical spring washer ⑤
  - Nut ⑥

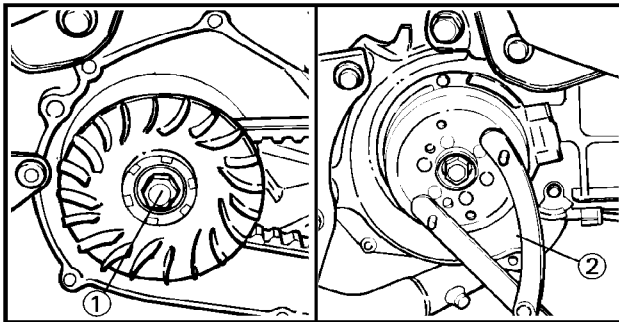


7. Tighten:
- Nut ① (primary sheave)
- 45 Nm (4.5 m.kg, 31ft.lb)

**NOTE:** \_\_\_\_\_  
 When tightening the nut (primary sheave), hold the C.D.I. magneto using Flywheel Holding Tool ②.

	Rotor holding tool: YU-01235
--	---------------------------------

4

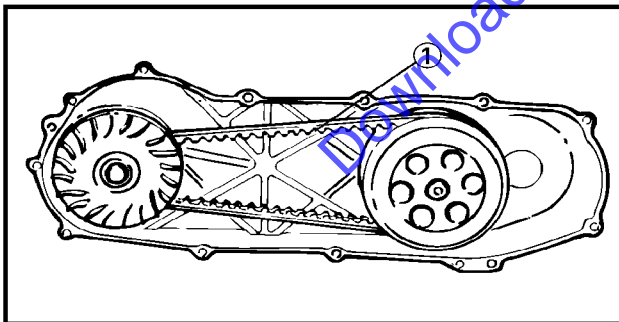

8. Adjust:
- V-belt ①
- Tense the V-belt by turning the primary sheave several times.

9. Install:
- Fan
- 7 Nm (0.7 m.kg, 5.1 ft.lb)







STARTER CLUTCH AND STARTER MOTOR



STARTER CLUTCH AND STARTER MOTOR

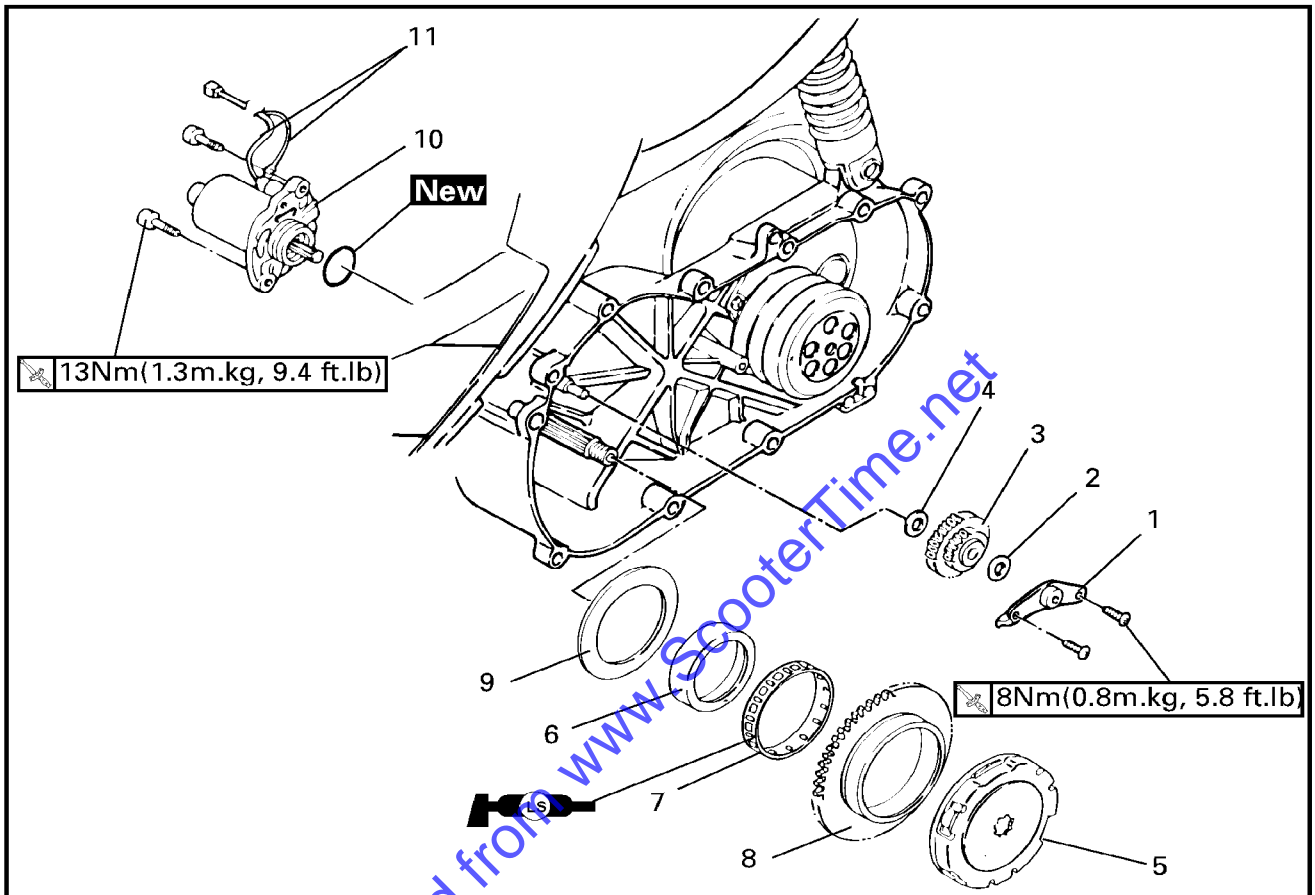

Order	Job name/Part name	Q'ty	Remarks
	Starter clutch and starter motor removal		Remove the parts in order.
	Left/Right side cover		Refer to "COVERS AND PANEL" section in chapter 3.
	Center cover		
	Lower cowling		
	Air shroud 3		
	Cooling fan		Refer to "C.D.I. MAGNETO" section
	Rear wheel		Refer to "REAR WHEEL" section in chapter 6.
	Crankcase cover (left) 1,2		Refer to "KICKER STARTER" section.
	Primary sheave		Refer to "V-BELT, PRIMARY SHEAVE" section.
1	Plate	1	
2	Plain washer	1	
3	Idle gear	1	
4	Plain washer	2	
5	Starter clutch	1	

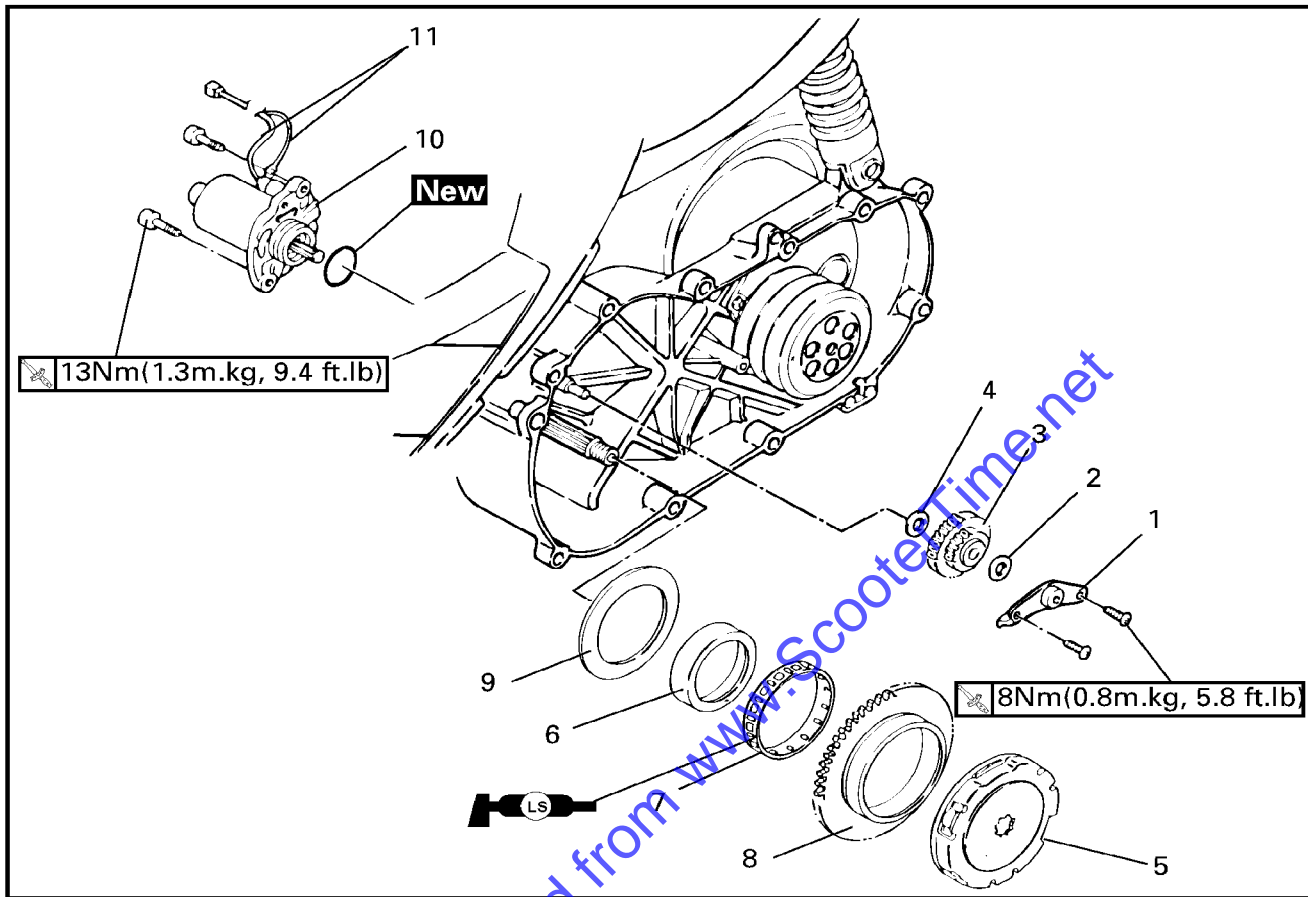

4


Order	Job name/Part name	Q'ty	Remarks
6	Gear boss	1	Reverse the removal procedure for installation
7	Bearing	1	
8	Starter wheel gear	1	
9	Plate washer	1	
10	Starter motor	1	
11	Starter motor coupler	2	



## STARTER CLUTCH AND GEARS INSPECTION


### 1. Inspect:

- Starter clutch
  - Push the dowel pin to arrow direction.
  - Unsmooth operation → Replace starter clutch assembly.

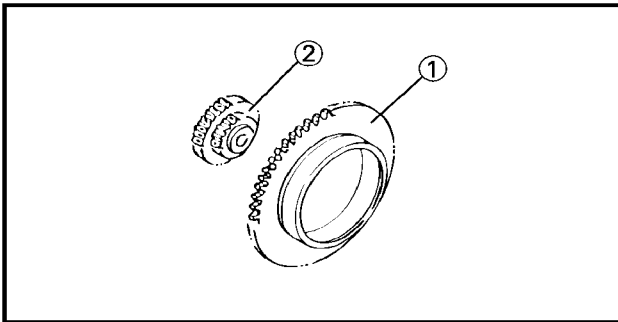

### 2. Inspect:

- Starter wheel gear teeth ①
- Idle gear teeth ②
  - Burrs/Chips/Roughness/Wear → Replace.

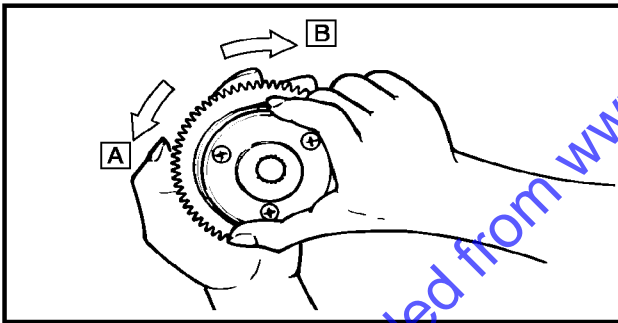

### 3. Inspect:

- Starter clutch operation

\*\*\*\*\*

Clutch operation checking steps:

- Install the starter wheel gear to the starter clutch, and hold the starter clutch.
- When turning the wheel gear clockwise [A] the starter clutch and the wheel gear should be engaged.
  - If not the starter clutch is faulty. Replace it.
- When turning the wheel gear counter clockwise [B], the wheel gear should turn freely. If not, the starter clutch is faulty. Replace it.

\*\*\*\*\*


Downloaded from www.ScooterTime.net



C.D.I. MAGNETO







C.D.I. MAGNETO

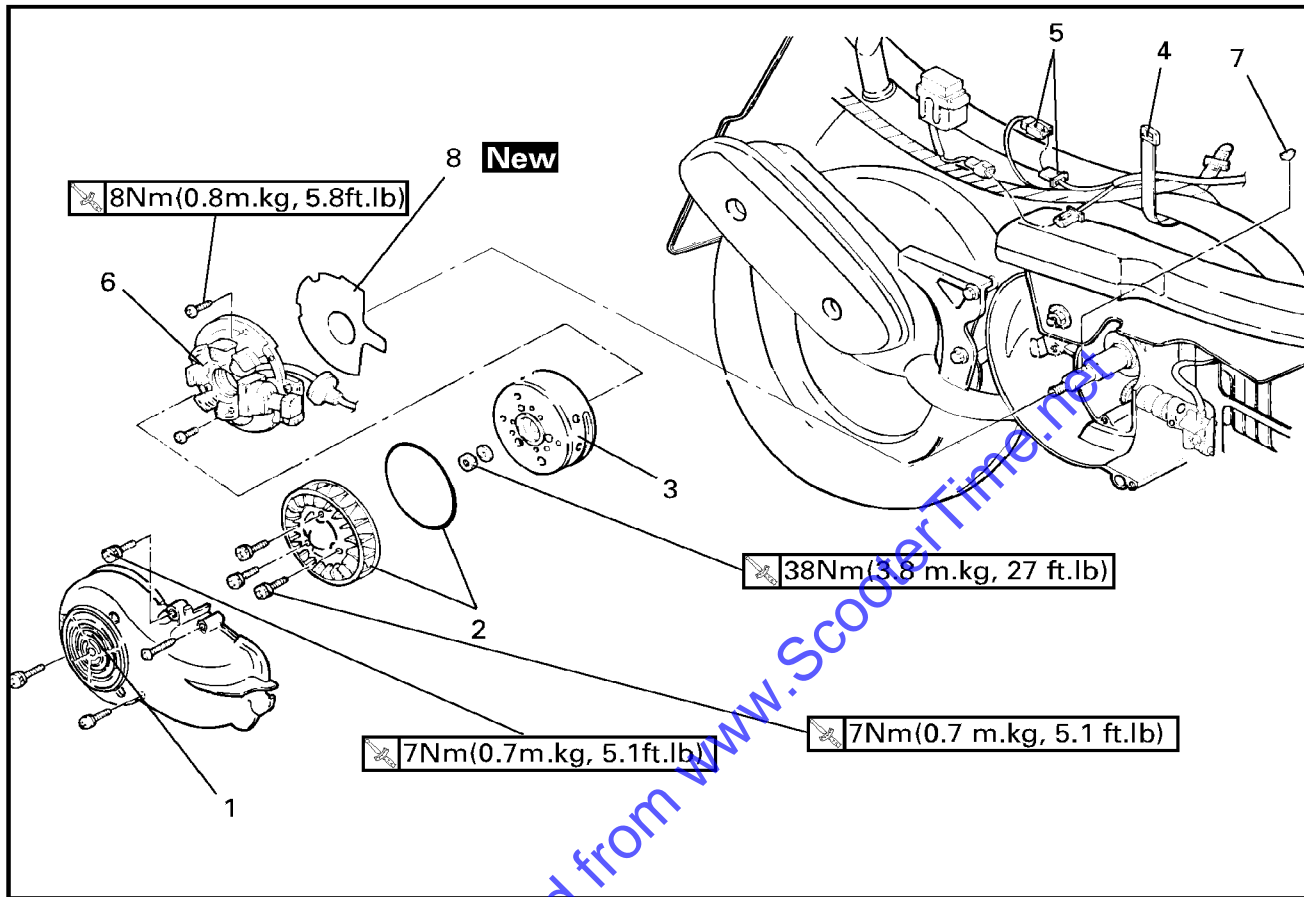

4

Order	Job name/Part name	Q'ty	Remarks
	C.D.I. magneto removal		Remove the parts in order.
	Rear carrier		Refer to "COVER AND PANEL" section in chapter 3.
	Tail cover		
	Left side cover		
	Right side cover		
	Center cover		
	Lower cowling		
1	Air shroud 1	1	
2	Fan /O-ring	1/1	
3	Magneto rotor	1	
4	Bind	1	
5	Couplers (magneto leads)	1	
6	Stator coil	1	
7	Woodruff key	1	
8	Gasket (Magneto cover)	1	
			Reverse the removal procedure for installation.

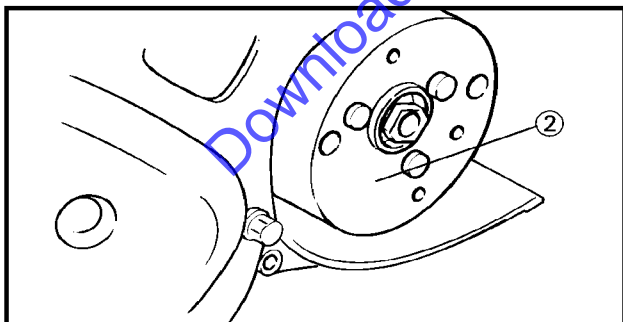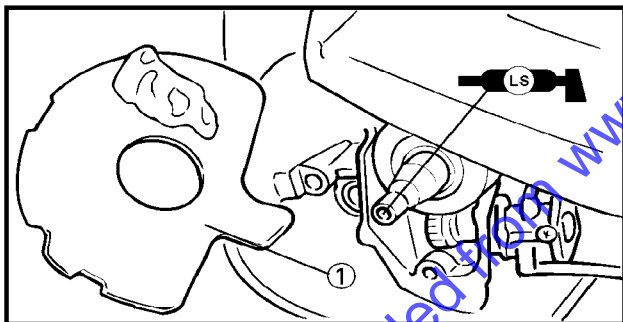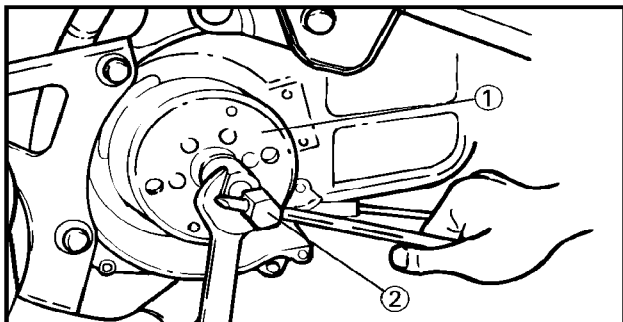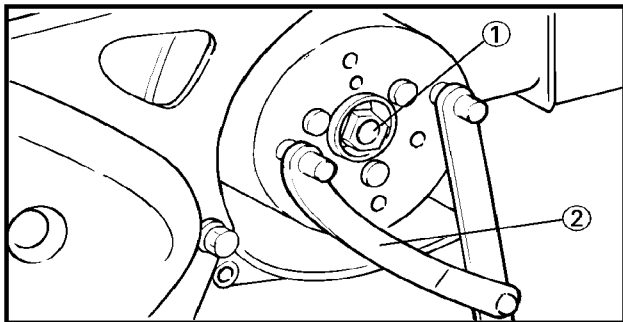

### C.D.I. MAGNETO REMOVAL

- Remove:
  - Nut ①(rotor)
  - Plain washer

#### NOTE:

Hold the rotor to loosen the nut by the flywheel holding tool ②.



Rotor holding tool:  
YU-01235



- Remove:
  - Rotor ①
  - Woodruff key
 Use the flywheel magneto puller ②.



Flywheel puller:  
YU-01189

- Stator assembly
- Gasket

### C.D.I. MAGNETO INSTALLATION

- Install:
  - Gasket ①
- Apply:
  - Lithium soap base grease (to oil seal)
- Pass the C.D.I. magneto lead through the crankcase hole.
- Install:
  - Stator assembly  8 Nm(0.8 m.kg, 5.8 ft.lb)
- Install:
  - Woodruff key
  - C.D.I. magneto Rotor ②
  - Plain washer
  - Nut  38Nm(3.8 m.kg, 31.1ft.lb)

#### NOTE:


- Clean the tapered portion of the crankshaft and the magneto rotor hub.
- When installing the magneto rotor, make sure the woodruff key is properly seated in the keyway of the crankshaft.
- Do not allow the rotor holding tool to touch the projection on the magneto rotor.



AUTOLUBE PUMP





AUTOLUBE PUMP

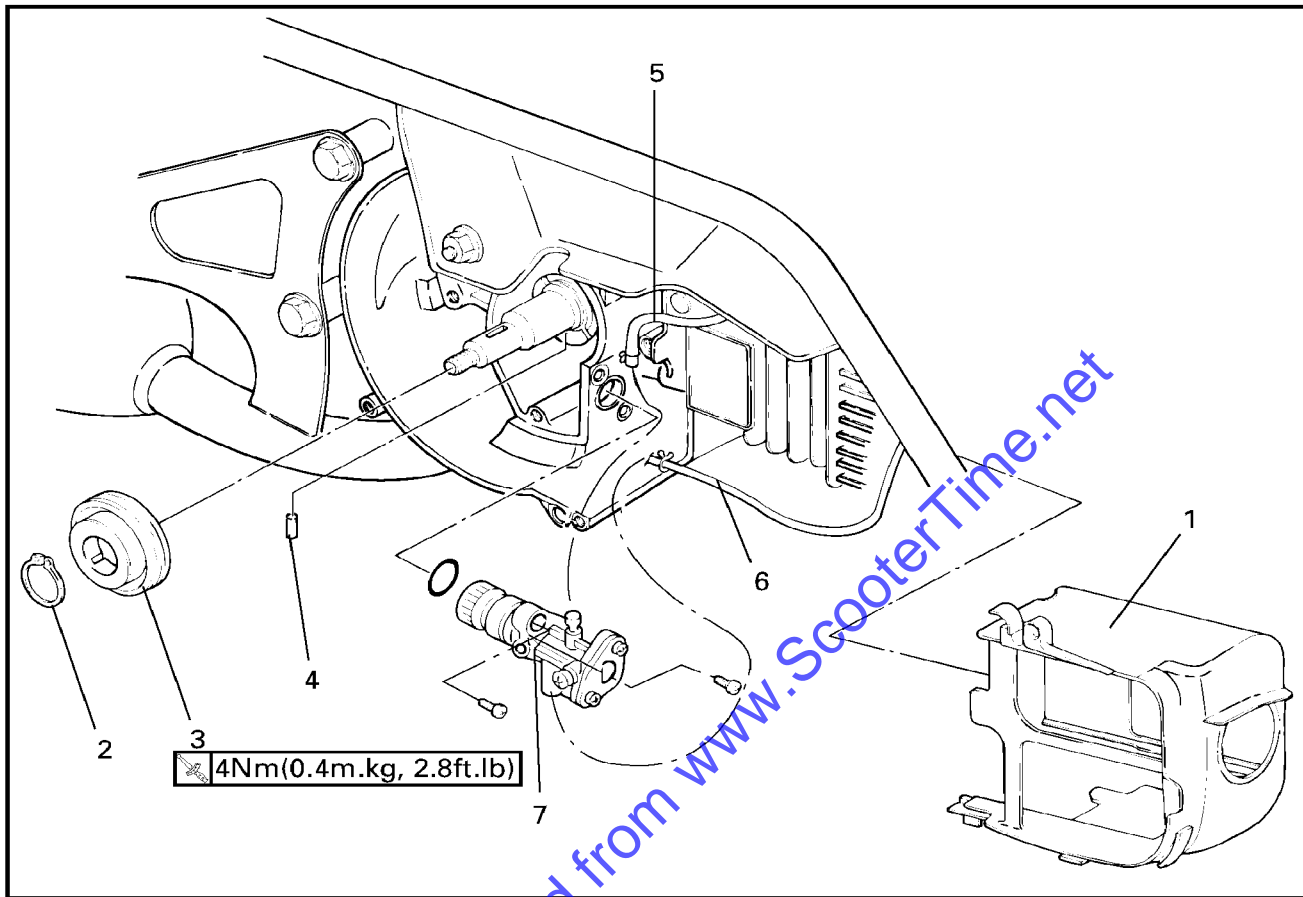


4


Order	Job name/Part name	Q'ty	Remarks
	Autolube pump removal		Remove the parts in order.
	C.D.I. magneto		Refer to "C.D.I. magneto" section.
1	Air shroud 2.	1	
2	Circlip	1	
3	Pump drive gear	1	
4	Pin	1	
5	Oil hose	1	
6	Oil delivery hose	1	
7	Autolube pump ass'y	1	Refer to "Autolube pump installation" section
			Reverse the removal procedure for installation.

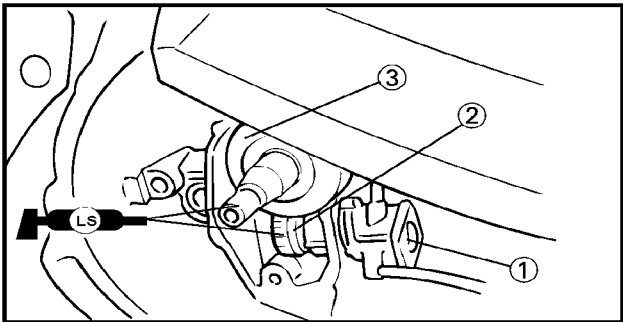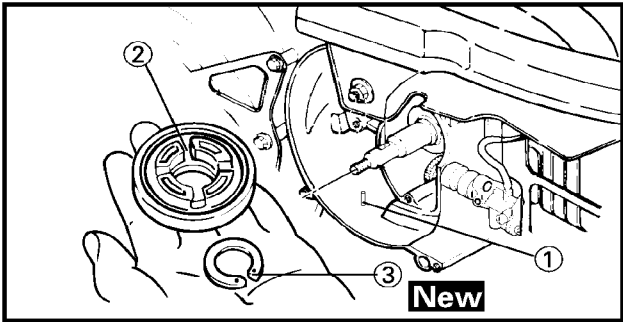

**AUTOLUBE PUMP INSTALLATION**

**CAUTION:** \_\_\_\_\_  
After installing autolube pump, it must be bled.

1. Install
  - Pin ①
  - Pump drive gear ②
  - Circlip ③ **New**
2. Apply:
  - Lithium soap base grease (to O-ring)
3. Install:
  - Autolube pump ①  4 Nm(0.4m.kg, 2.8ft.lb)
4. Apply:
  - Lithium soap base grease (to autolube pump gear ②,③)

 15 cc (0.92 cu • in)


Downloaded from www.ScooterTime.net



TRANSMISSION




TRANSMISSION

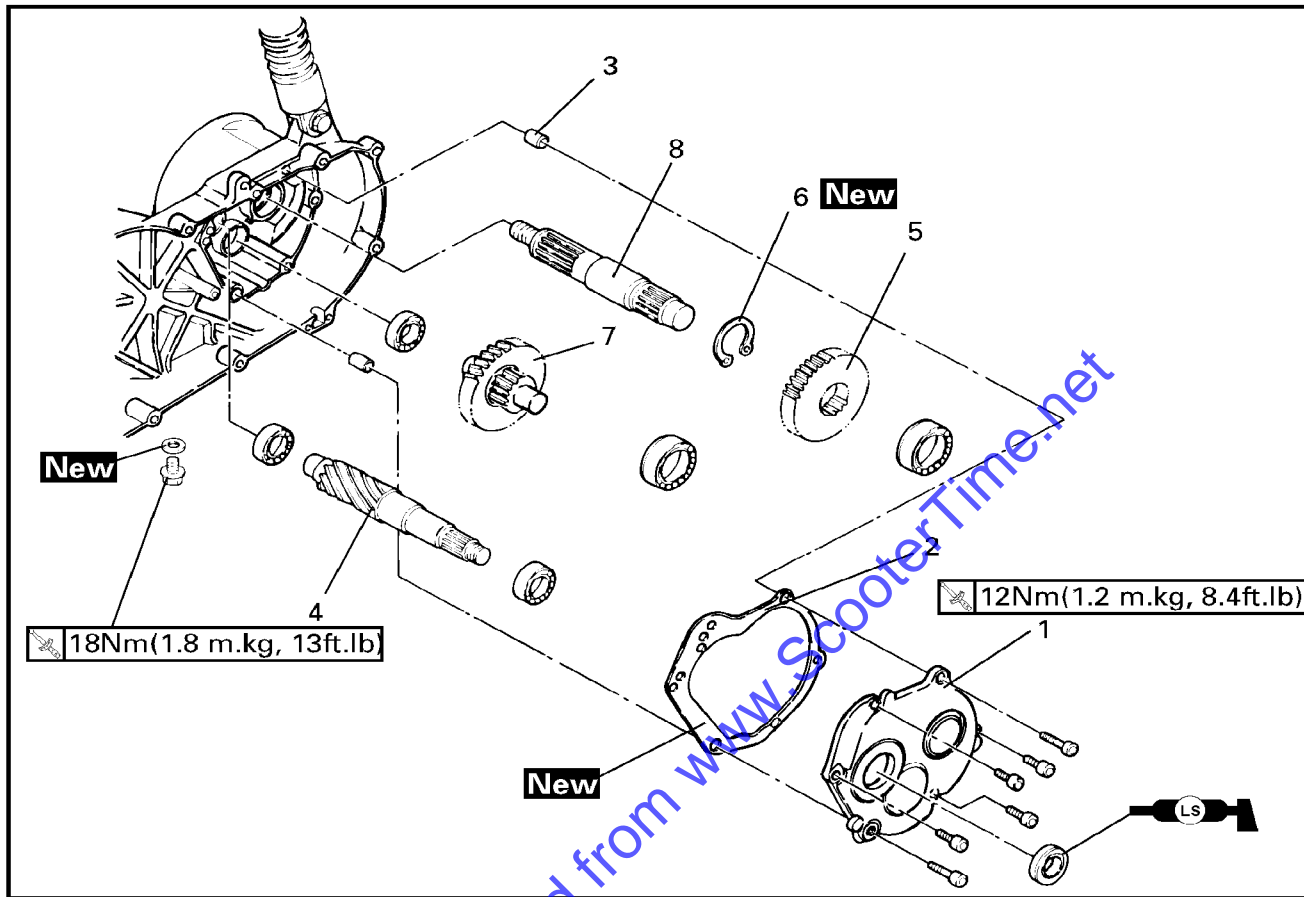

4

Order	Job name/Part name	Q'ty	Remarks
	Transmission removal		Remove the parts in order.
	Rear wheel		Refer to "REAR WHEEL/REAR BRAKE " section in chapter 7.
	Secondary sheave		Refer to "V-BELT, CLUTCH, SECONDARY/ PRIMARY SHEAVE" section
	Drain the transmission oil.		Refer to "TRANSMISSION OIL REPLACEMENT " section in chapter 3.
1	Transmission case cover	1	
2	Gasket (transmission case cover)	1	
3	Dowel pin	2	
4	Primary drive gear	1	
5	Drive gear	1	
6	Circlip	1	
7	Main axle	1	




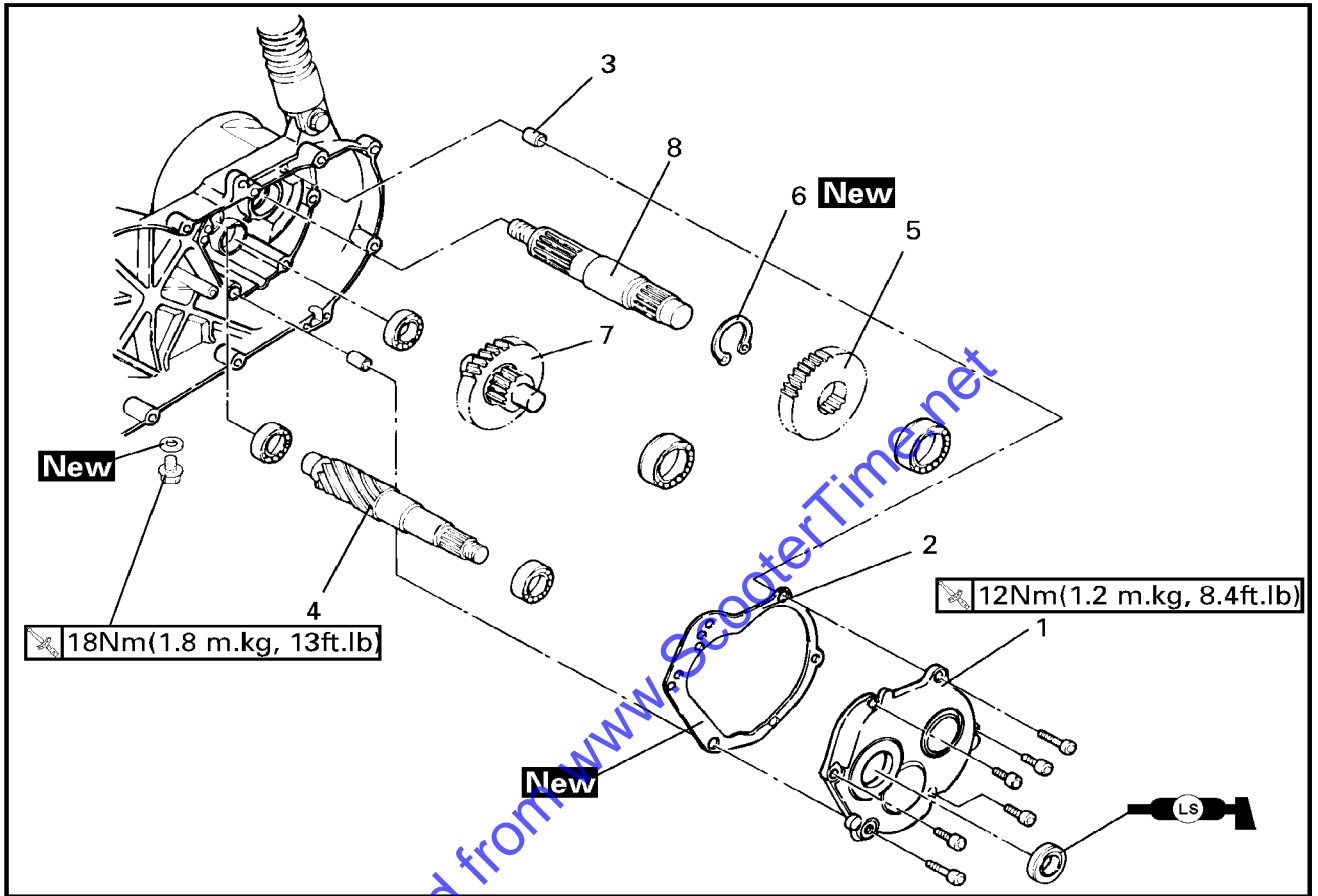

Order	Job name/Part name	Q'ty	Remarks
8	Drive axle	1	Reverse the removal procedure for installation.




**CRANKCASE AND REED VALVE**  
**CRANKCASE AND REED VALVE**


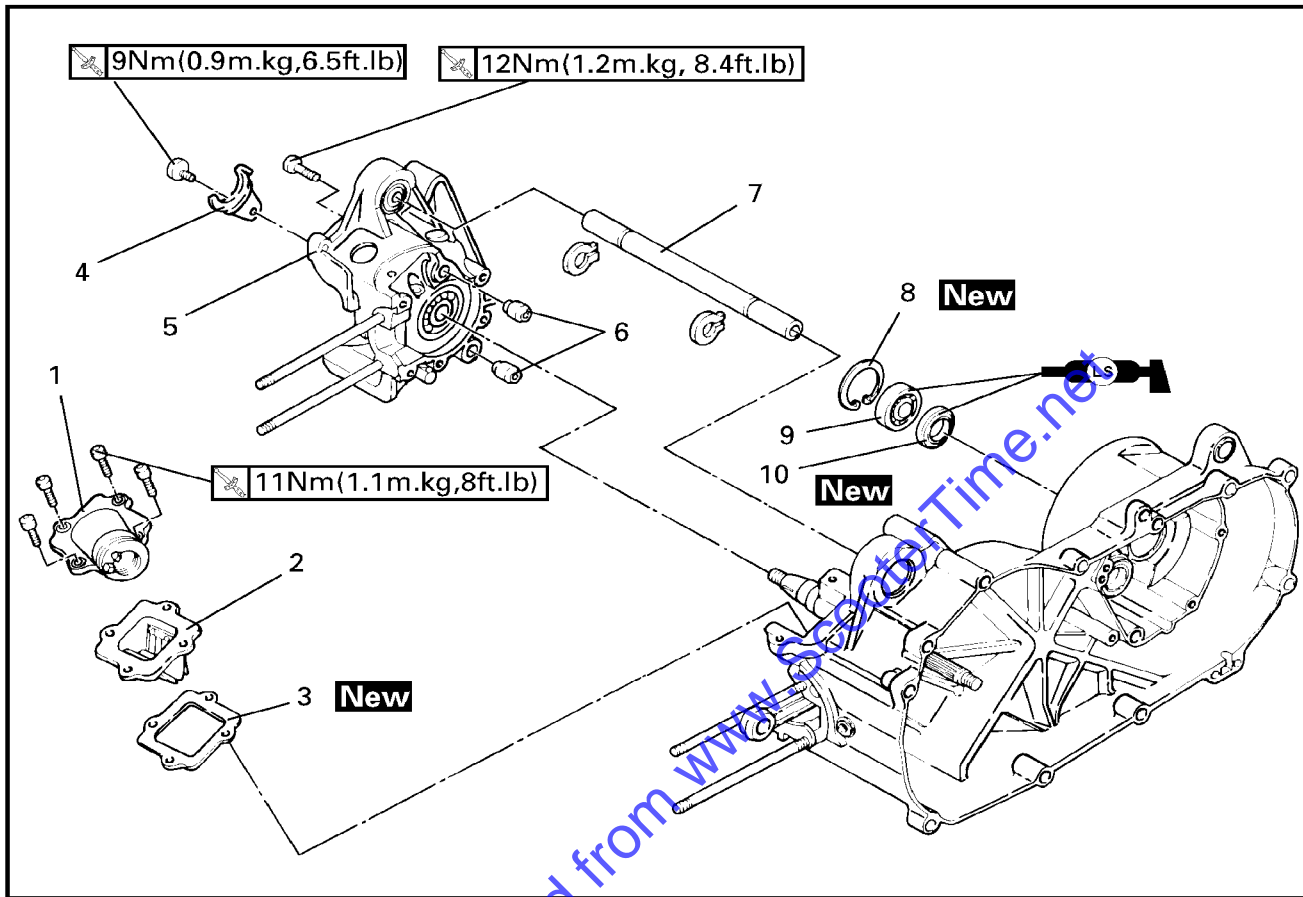


4

Order	Job name/Part name	Q'ty	Remarks
	<b>Crankcase and Reed valve removal</b>		Remove the parts in order.
	Engine removal		Refer to "ENGINE REMOVAL" section.
	Cylinder head, cylinder, piston		Refer to "CYLINDER HEAD CYLINDER AND PISTON" section.
	Crankcase cover (left)		Refer to "KICK STARTER AND CRANKCASE COVER (LEFT) " section.
	V-belt, clutch, secondary/primary sheave		Refer to "V-BELT, CLUTCH AND SECONDARY/PRIMARY SHEAVE " section.
	C.D.I . magneto		Refer to "C.D.I. MAGNETO" section.
	Starter clutch, starter motor		Refer to "STARTOR CLUTCH AND STARTOR MOTOR" section.
	Autolube pump		Refer to "AUTOLUBE PUMP" section.
	Rear wheel		Refer to "REAR WHEEL AND REAR BRAKE" section in chapter 6.
	Transmission		Refer to "TRANSMISSION" section.

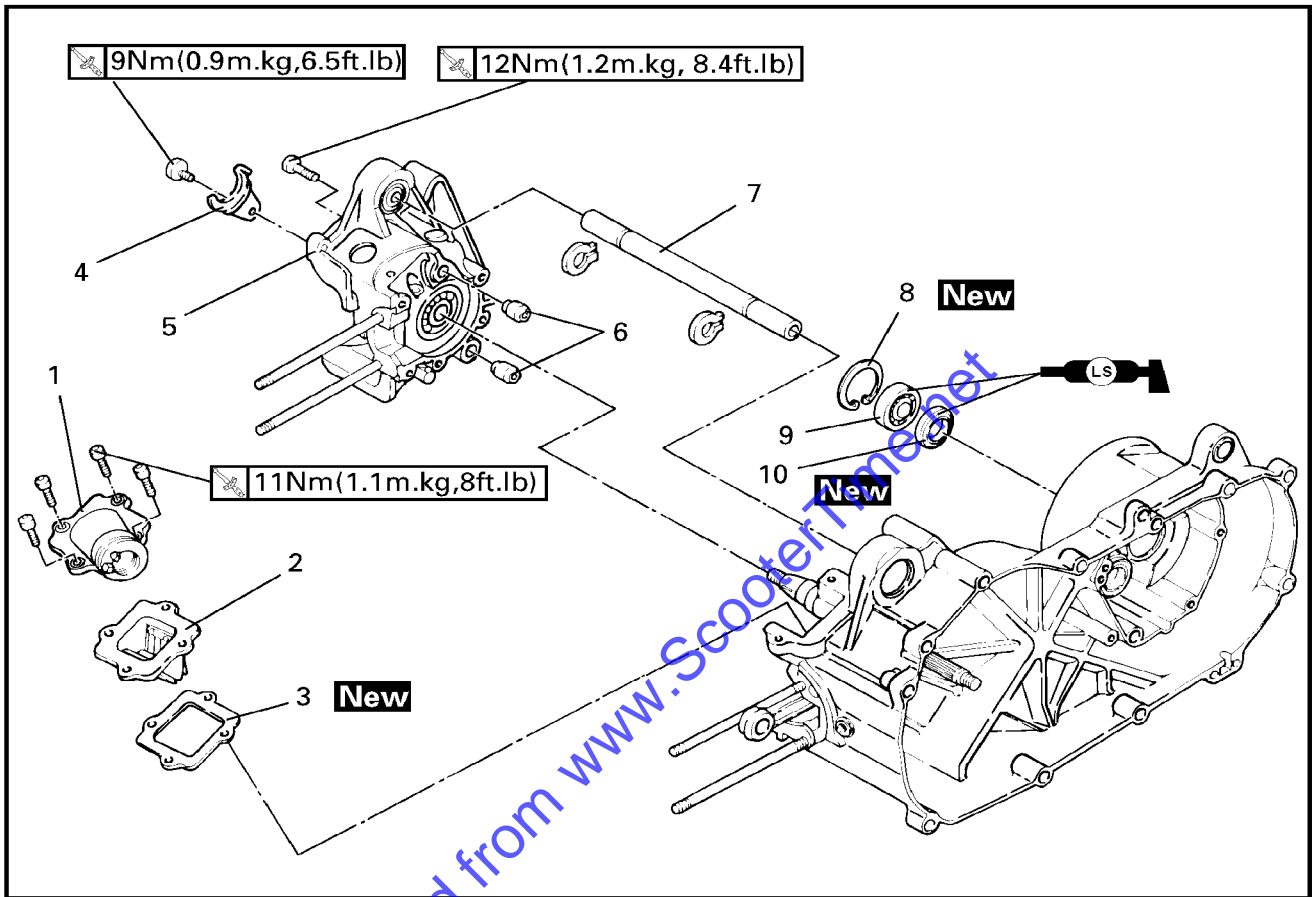

Order	Job name/Part name	Q'ty	Remarks
1	Intake manifold	1	Reverse the removal procedure for installation.
2	Reed valve	1	
3	Valve seat gasket	1	
4	Stopper	1	
5	Crankcase 2	1	
6	Dowel pin	2	
7	Engine mount spacer	1	
8	Circlip	1	
9	Bearing	1	
10	Oil seal	1	

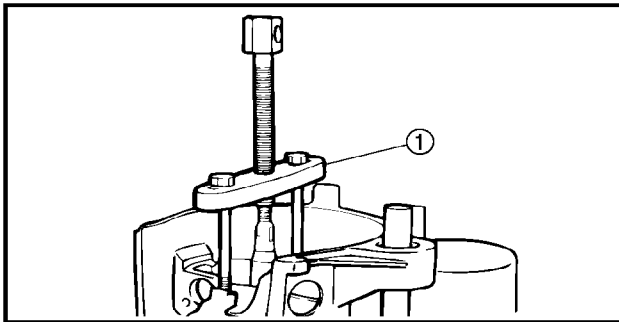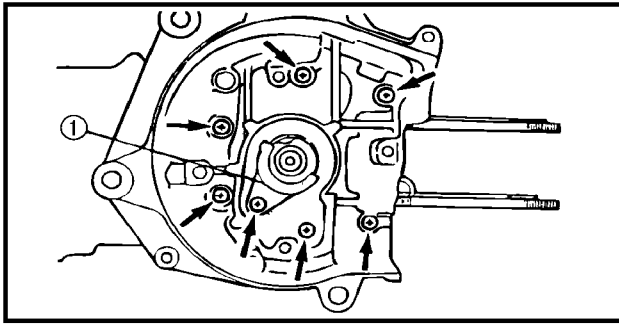

### CRANKCASE(RIGHT) REMOVAL

1. Remove:

- Oil seal stopper ①

- Screws (crankcase)  9Nm(0.9 m.kg,6.5ft.lb)

**NOTE:** \_\_\_\_\_

Loosen each screw 1/4 turn, and remove them after all are loosened.

2. Attach:

- Crankcase separating tool ①



Crankcase separating tool:  
YU-01135

**NOTE:** \_\_\_\_\_

Fully tighten the tool holding bolts, but make sure the tool body is parallel with the case. If necessary, one screw may be backed out slightly to level tool body.

3. Remove

- Crankcase (right)

As pressure is applied, alternately tap on the engine mounting bosses.


### CHECKING THE CRANKCASE

1. Thoroughly wash the crankcase halves in a mild solvent.
2. Thoroughly clean all the gasket surfaces and crankcase mating surfaces.
3. Check:
  - crankcase  
Cracks/damage → Replace.
  - oil delivery passages  
Obstruction → Blow out with compressed air.

### CHECKING THE BEARINGS AND OIL SEALS

1. Check:
  - bearings  
Clean and lubricate the bearings, then rotate the inner race with your finger.  
Rough movement → Replace.
2. Check:
  - oil seals  
Damage/wear → Replace.

Downloaded from www.ScooterTime.net

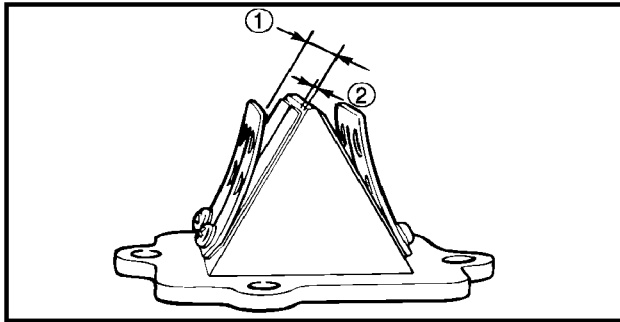

## REED VALVE INSPECTION

1. Measure:

- Valve stopper height ①  
Out of specification → Adjust stopper/Replace valve stopper.





Valve stopper height ①  
6.0~6.4 mm (0.24~0.25 in)

2. Measure:

- Reed valve clearance ②  
Out of specification → Replace reed valve.



Reed valve clearance ②  
Less than 0.2 mm (0.0079 in)

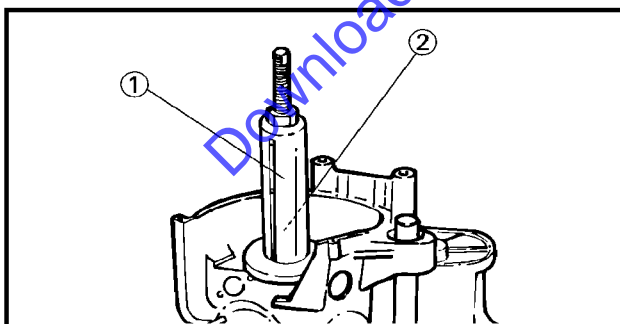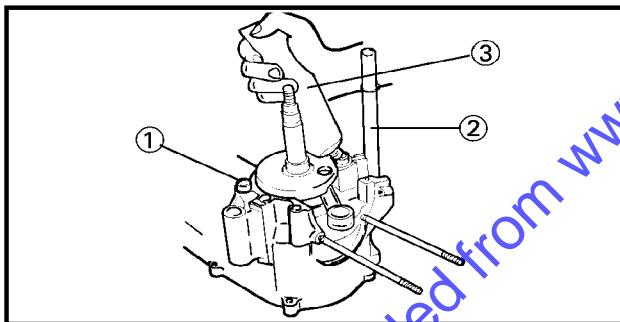

## CRANKCASE (RIGHT) INSTALLATION

1. Install:

- Dowel pins ①
- Engine mount spacer ②

2. Apply:

- Sealant ③  
To the mating surfaces of both case halves.



Quick gasket®:  
ACC-1100-15-01

### NOTE:

Do not allow any sealant to come into contact with the oil galley.

3. Attach:


- Crankshaft installing tool ①,②




Crankshaft installation set ①  
YU-90050  
Crankshaft installer adapter  
(M10)②  
YU-90062

## CRANKCASE AND REED VALVE

ENG

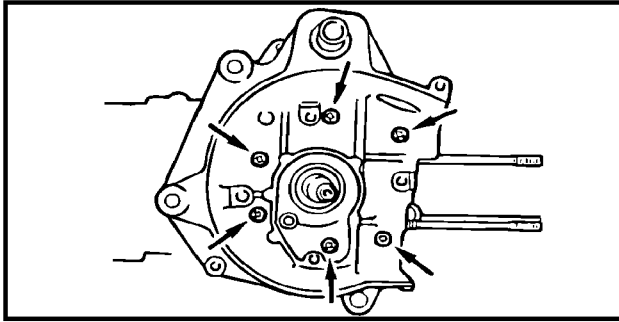


4. Tighten:
- Crankcase holding screws


 12 Nm(1.2 m.kg, 8.4 ft.lb)

**NOTE:**


Tighten the crankcase holding screws in stage, using a crisscross pattern.

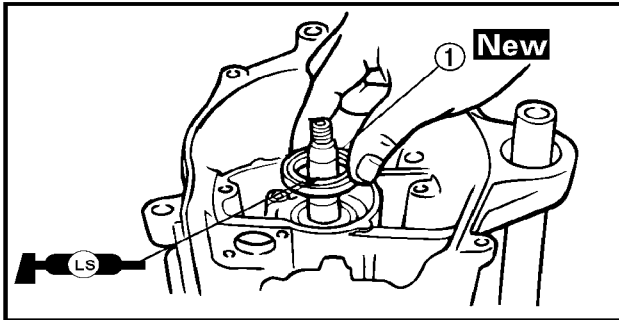


5. Check:
- Crankshaft operation  
Unsmooth operation Repair.
6. Install:
- Oil seal (right crank case) ① **New**  
Apply grease on to oil seal lip.

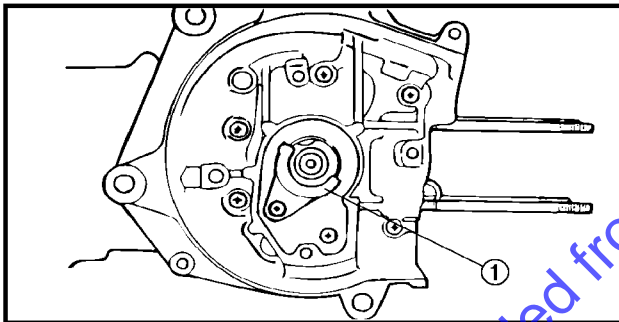

7. Install:
- Oil seal stopper plate ①

 9 Nm(0.9 m.kg, 6.5 ft.lb)

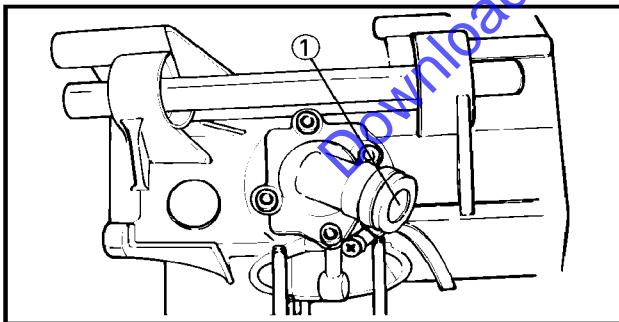


8. Install:
- Gasket
  - Reed valve
  - Intake manifold ①  11 Nm(1.1 m.kg, 8 ft.lb)

4




CRANKSHAFT

CRANKSHAFT

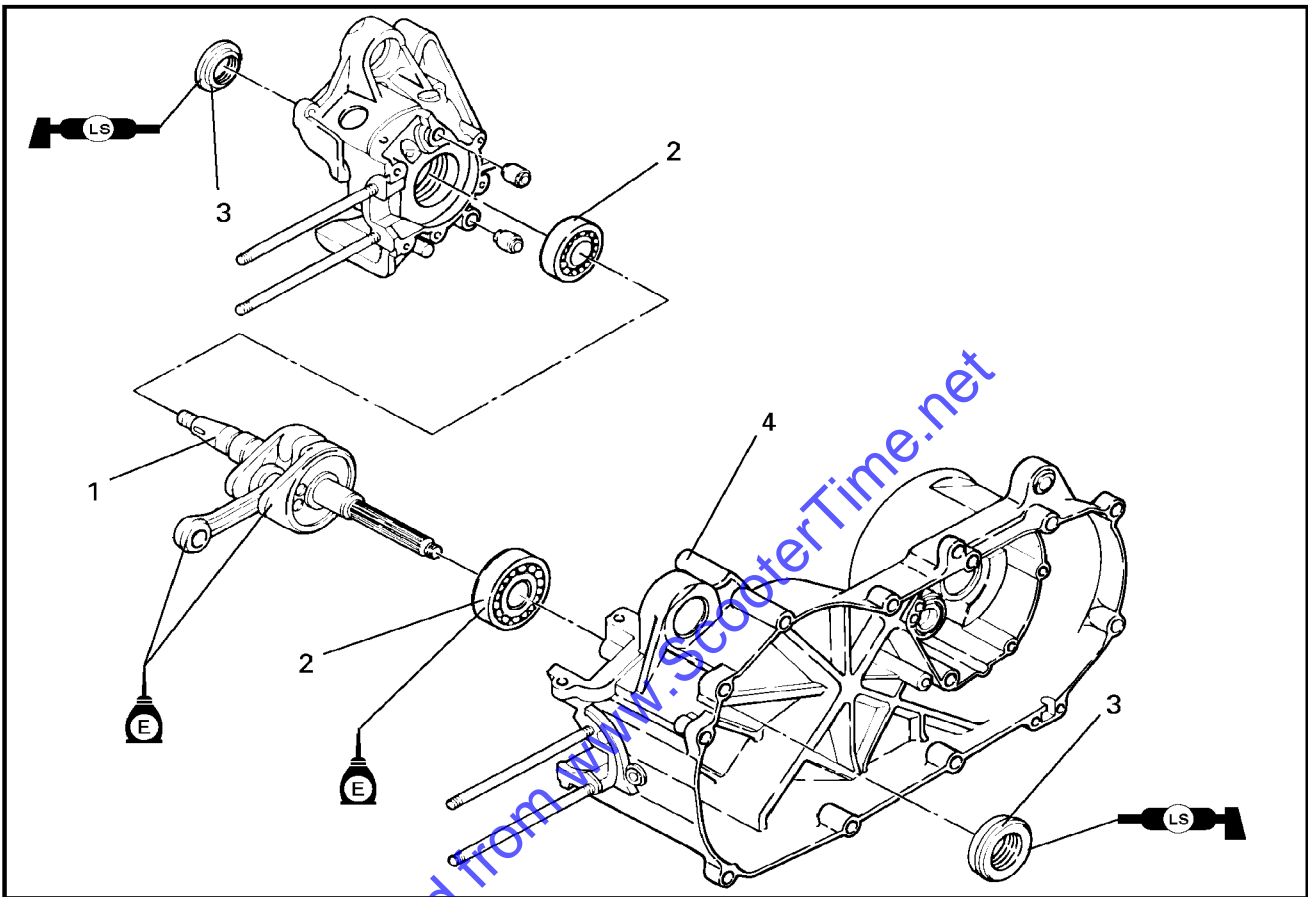

Order	Job name/Part name	Q'ty	Remarks
	Crankshaft removal Right crankcase removal		Remove the parts in order. Refer to "CRANK CASE AND REED VALVE" section.
1	Crankshaft	1	
2	Bearing	2	
3	Oil seal	2	
4	Crankcase cover (left)	1	
			Reverse the removal procedure for installation.

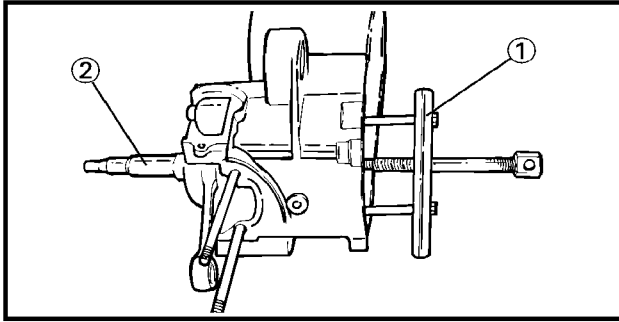

**CRANKSHAFT REMOVAL**


1. Attach:
  - Crankcase separating tool ①

	Crankcase separating tool: YU-01135-A
--	--

2. Remove:
  - Crankshaft ②

**NOTE:** \_\_\_\_\_

Make sure the crankcase separating tool is centered over the crankshaft assembly.

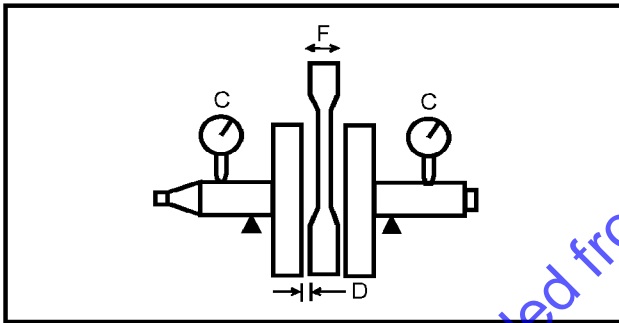

**CRANKSHAFT INSPECTION**

1. Measure:
  - Runout limit "C"
  - Connecting rod big end side clearance "D"
  - Small end free play limit "F"


Out of specification → Replace.  
Use V-blocks, dial gauge and thickness gauge.

	Runout limit "C": 0.03 mm(0.0012 in)
	Connecting rod big end side clearance "D": 0.2 ~ 0.5 mm(0.0079 ~ 0.020 in)
	Small end free play "F": 0.4 ~ 0.8 mm(0.016 ~ 0.031 in)

2. Inspect:
  - Bearings (crankshaft)  
Spin the bearing inner race.  
Excessive play/Roughness → Replace.  
Pitting/Damage → Replace.

Downloaded from www.SpotterTime.net



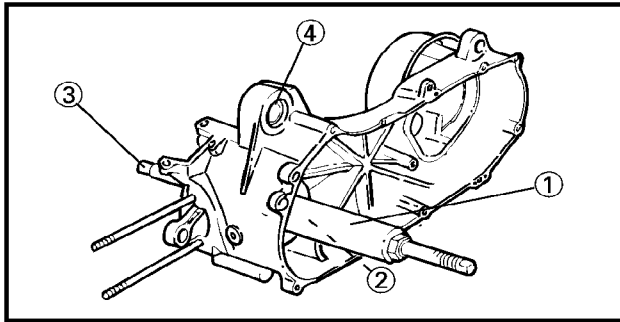

**CRANKSHAFT INSTALLATION**

1. Attach:
  - Crankshaft Installing Tool

	Crankshaft installation set ①
	YU-90050
	Crankshaft installer adapter (M10) ②
	YU-90062



2. Install:
  - Crankshaft ③  
(to the crankcase ④)

**CAUTION:**

To avoid scratching the crankshaft and to ease the installation procedure, lubricate the oil seal lips with grease and each bearing with engine oil.

**NOTE:**

Hold the connecting rod at top dead center (TDC) with one hand while turning the nut of the crankshaft installing tool with the other. Turn the crankshaft installing tool until the crankshaft assembly bottoms against the bearing.

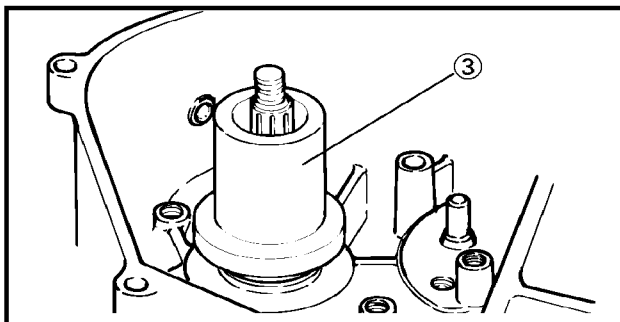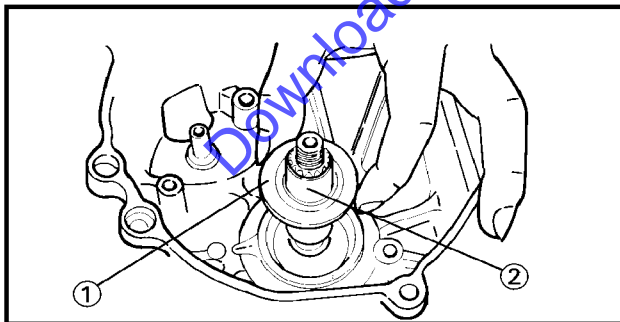


3. Install:
  - Oil seal ① **New**
  - Apply lithium soap base grease onto the oil seal lip.  
Use the guide ② and seal driver ③ to install the oil seal

	Oil seal driver
	YM-1410
	Oil seal guide
	YM-1409



CARBURETION  
CARBURETOR

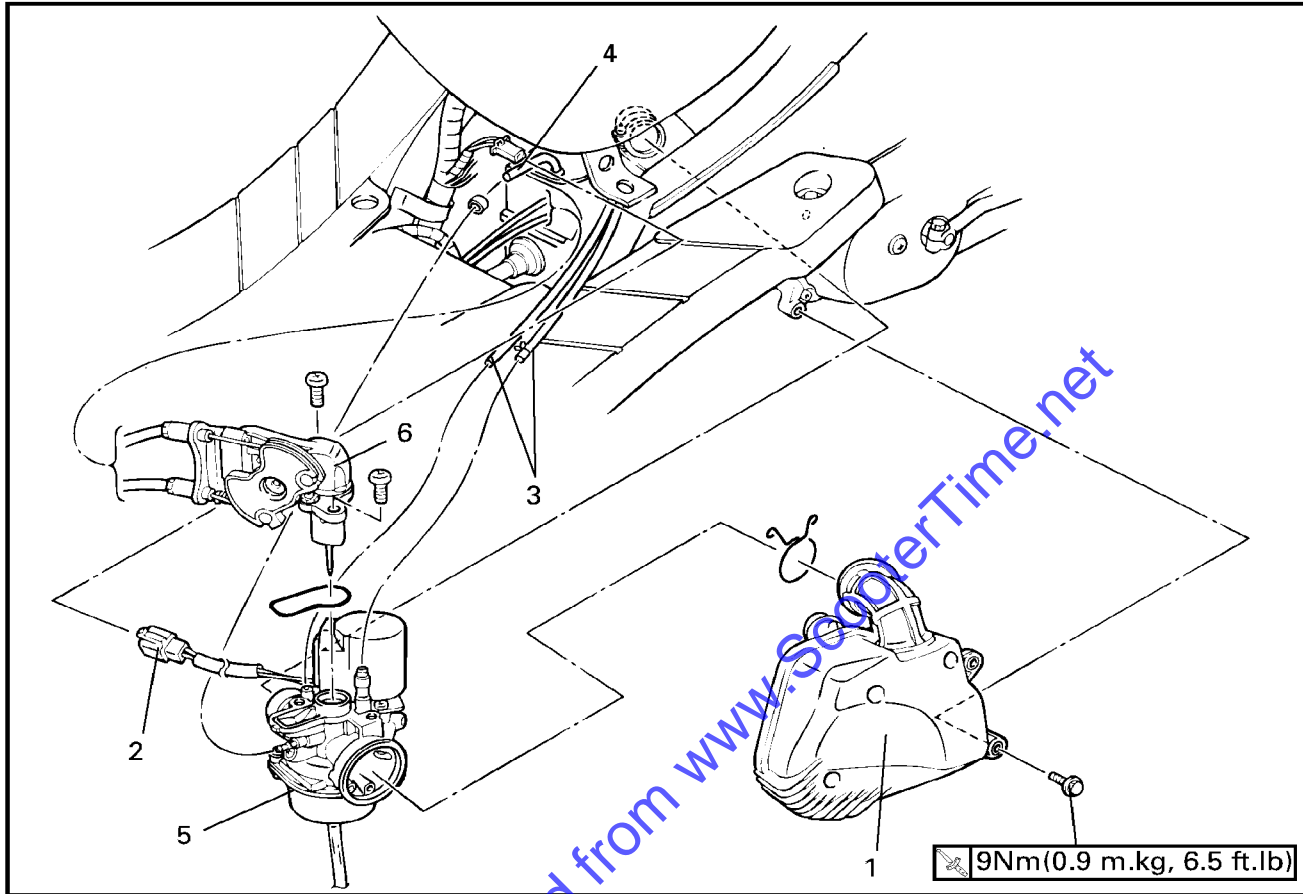


5

Order	Job name/Part name	Q'ty	Remarks
	Carburetor removal		Remove the parts in order.
	Battery box cover		Refer to "COVER AND PANEL" section in CHAPTER 3.
	Grip		
	End cover		
	Left/Right cover		
	Center cover		
1	Air cleaner case assembly	1	
2	Auto choke lead coupler	1	
3	Fuel hose/vacuum hose	1	
4	Oil delivery pipe assembly	1	
5	Carburetor	1	
6	Throttle cable	1	
			Reverse the removal procedure for installation.



CABURETOR DISASSEMBLY

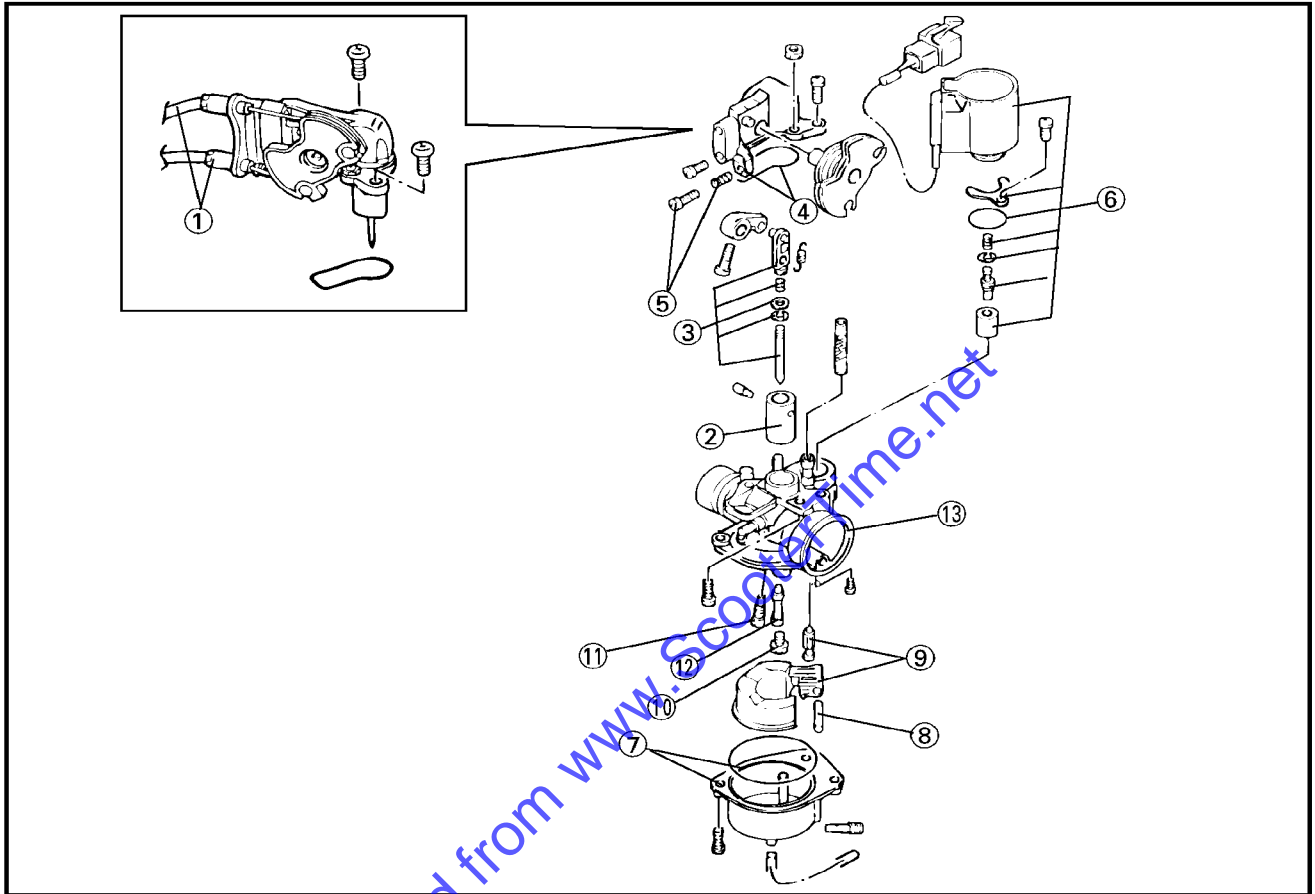


Order	Job name/Part name	Q'ty	Remarks
	Carburetor disassembly		Disassemble the parts in order.
①	Throttle cable	1	
②	Throttle valve	1	
③	Needle set	1	
④	Carburetor top cover/o-ring	1	
⑤	Throttle stop screw	1	
⑥	Auto choke unit assembly	1	
⑦	Float chamber/Seal ring	1/1	
⑧	Float pin	1	
⑨	Float/Needle valve	1	
⑩	Main jet	1	
⑪	Pilot jet	1	
⑫	Main nozzle	1	
⑬	Carburetor body	1	
			Reverse the removal procedure for installation.



**CARBURETOR INSPECTION**

1. Check:
  - Carburetor body
  - Float chamber
  - Jet housing
 Cracks/damage → Replace.

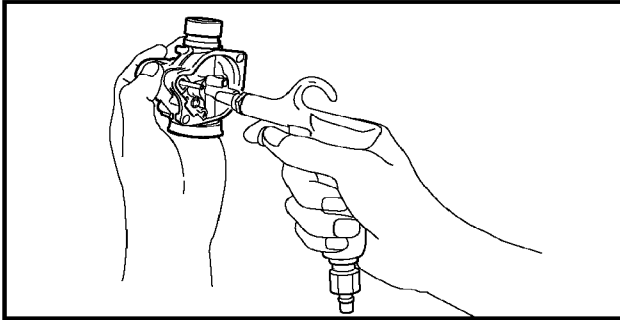


2. Check:
  - Fuel passages
 Obstruction → Clean.

\*\*\*\*\*

- a. Wash the carburetor in a petroleum-based solvent. Do not use any caustic carburetor cleaning solution.
- b. Blow out all of the passages and jets with compressed air.


\*\*\*\*\*

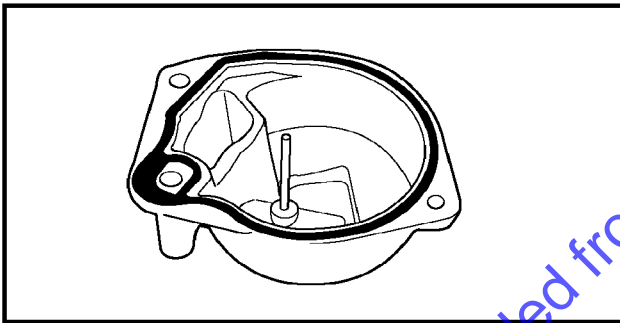


3. Check:
  - Float chamber body
 Dirt → Clean.

4. Check:
  - Float chamber rubber gasket
 Cracks/damage/wear → Replace.


5. Check:
  - Float
 Damage → Replace.

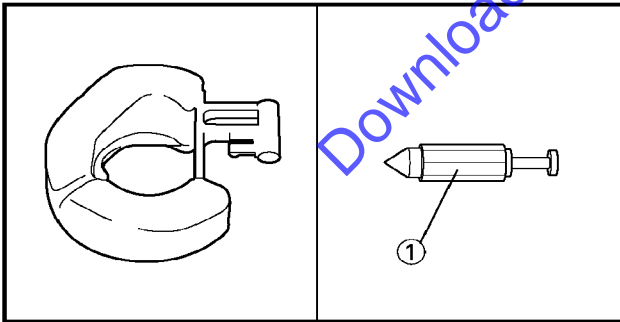

6. Check:
  - Needle valve ①
 Damage/obstruction/wear → Replace the needle valve.

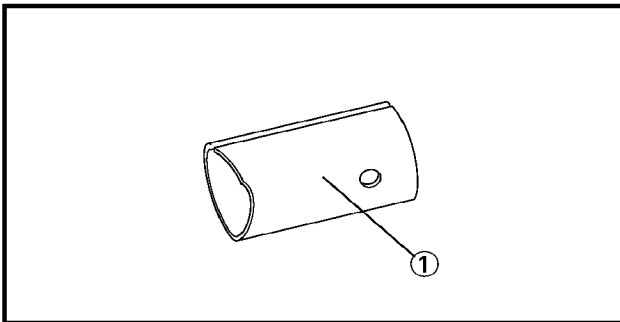

7. Check:
  - Throttle valve ①
 Damage/scratches/wear → Replace.

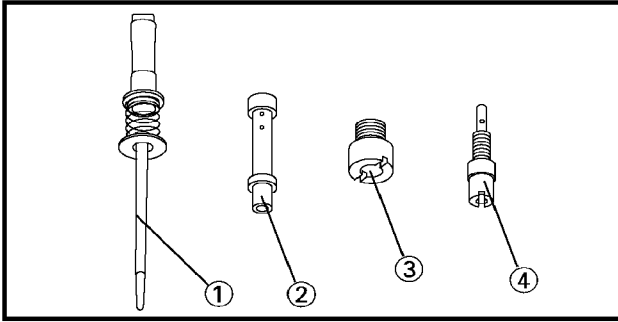


8. Check:

- Jet needle kit ①
- Main nozzle ②
- Main jet ③
- Pilot jet ④

Bends/damage/wear → Replace.

Obstruction → Clean.

Blow out the jets with compressed air.

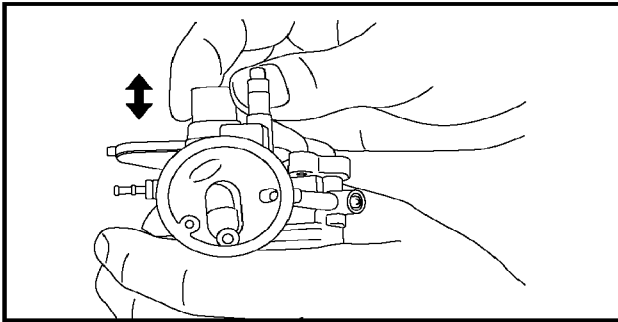

9. Check:

- Throttle valve movement

Insert the throttle valve into the carburetor

Body and move it up and down.

Tightness → Replace the piston valve.


10. Check:

- Vacuum hose
- Fuel hose

Cracks/damage/wear → Replace.

Obstruction → Clean.

Blow out the hoses with compressed air.

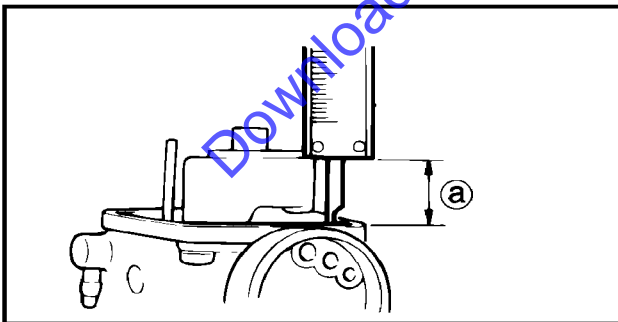

11. Measure:

- Float height @

Out of specification → Inspect needle valve, float and valve seat.

	<p>Float height: 15 ~ 17 mm (0.59 ~ 0.67 in)</p>
--	--

\*\*\*\*\*

**Float height measurement steps:**

- Install the needle valve, float and float pin to the carburetor body.
- Hold the carburetor in an upside down position.
- Measure the distance between the mating surface of the float chamber (gasket removed) and top of the float using a gauge.

**NOTE:** \_\_\_\_\_

The float arm should be resting on the needle valve, but not compressing the needle valve.

---

- If the float height is not within specification, inspect the needle valve, float and valve seat.
- If it is worn, replace it.

\*\*\*\*\*

**NOTE:** \_\_\_\_\_

The float height is properly adjusted at the Yamaha factory. Never attempt to adjust it.

---


**CARBURETOR ASSEMBLY**

To assemble the carburetor, reverse the disassembly procedures.


Note the following points.

**CAUTION:** \_\_\_\_\_

- Before reassembling, wash all parts in clean gasoline.
  - Always use a new gasket.
-

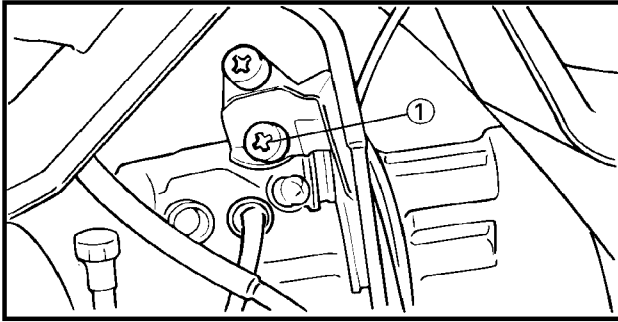


1. Install:
  - Throttle cable ①

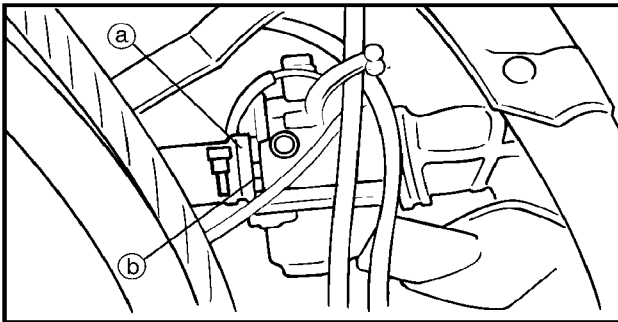

2. Install:
  - Carburetor assembly

**NOTE:** \_\_\_\_\_  
Align the projection (a) with the projections (b).  
\_\_\_\_\_

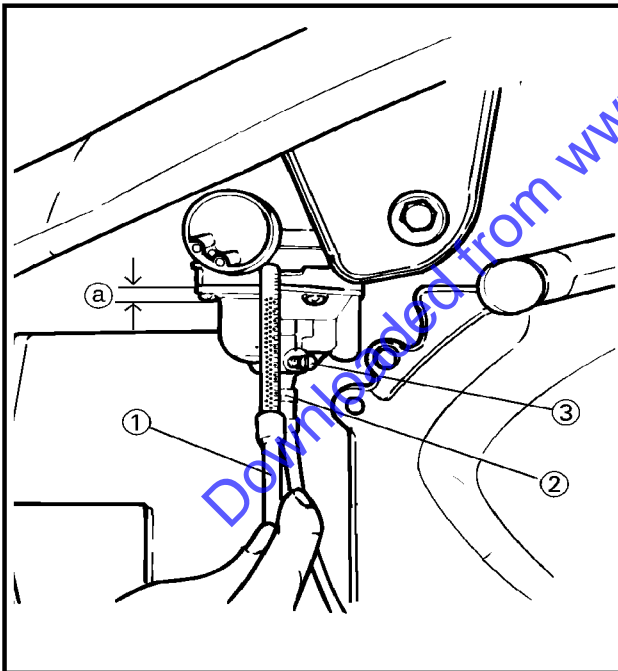

**FUEL LEVEL ADJUSTMENT**

1. Measure:
  - Fuel level (a)
 Out of specifications → Adjust.

	Fuel level (a): 3.0~4.0 mm (0.12~0.16 in) (Below the float chamber line)
--	--

\*\*\*\*\*

**Measurement steps:**

- Place the scooter on a level surface.
- Use a garage jack under the engine to ensure that the carburetor is positioned vertically.
- Connect the fuel level gauge ① to the drain pipe ②.



	Fuel level gauge: YM-01312-A
--	---------------------------------

- Loosen the drain screw ③.
- Measure the fuel level (a) with the gauge.
- If the fuel level is incorrect, adjust the fuel level:
  - Remove the float chamber float and the needle valve.
  - Inspect the needle valve.
  - If it is worn, replace it.



- Install the carburetor.
- Recheck the fuel level.

\*\*\*\*\*

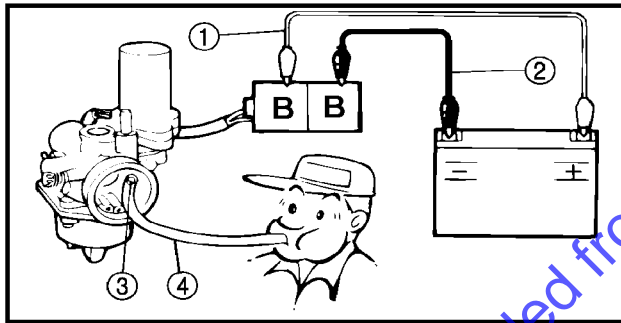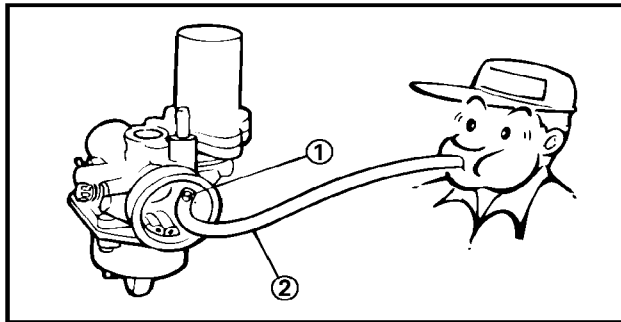

**AUTO CHOKE INSPECTION**

(Ambient temperature lower than 45°C)

1. Remove:
  - Carburetor
2. Inspect:
  - Autochoke unit

Connect a suitable hose ② to the starter ①, and blow it with the mouth etc.  
Possible → Good condition.  
Impossible → Replace auto choke unit.
3. Inspect:
  - Auto choke unit (with battery)

\*\*\*\*\*

**Inspection and adjustment steps:**

- Connect auto choke unit leads to the 12 V battery for 5 minutes.  
Black terminal → 12 V battery (+) ①  
Black terminal → 12 V battery (-) ②
- Connect a suitable hose ④ to the starter ③, and blow it with the mouth etc.  
Possible → Replace auto choke unit.  
Impossible → Good condition.

\*\*\*\*\*

Downloaded from www.SecretTime.net



**FUEL COCK INSPECTION**

1. Stop the engine.
2. Remove:
  - Rear carrier
  - Tail cover
  - Left side cover
  - Battery box cover
 Refer to "COVER AND PANEL" section in chapter 3.
3. Inspect:
  - Fuel cock


\*\*\*\*\*

**Fuel cock inspection steps:**

- Disconnect the fuel hose ①.
- Place the receptacle under the fuel hose end.
- If fuel stops flowing out in a few seconds, the fuel cock is in good condition. If not, clean or replace the fuel cock.
- Disconnect the vacuum hose ② and breathe in the vacuum hose with the mouth etc. for vacuum .
- If fuel flows out of the fuel hose under vacuum and stops under non-vacuum, the fuel cock is in good condition. If not, clean or replace the vacuum hose, fuel hose and fuel cock.


\*\*\*\*\*

4. Install:
  - Battery box cover
  - Left side cover
  - Tail cover
  - Rear carrier

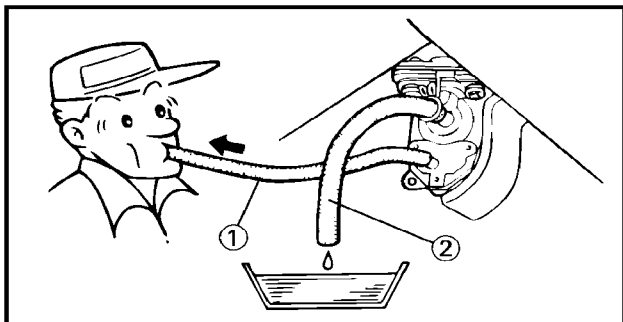

Downloaded from www.Science4me.net


**CHASSIS**  
**FRONT WHEEL AND BRAKE DISC**

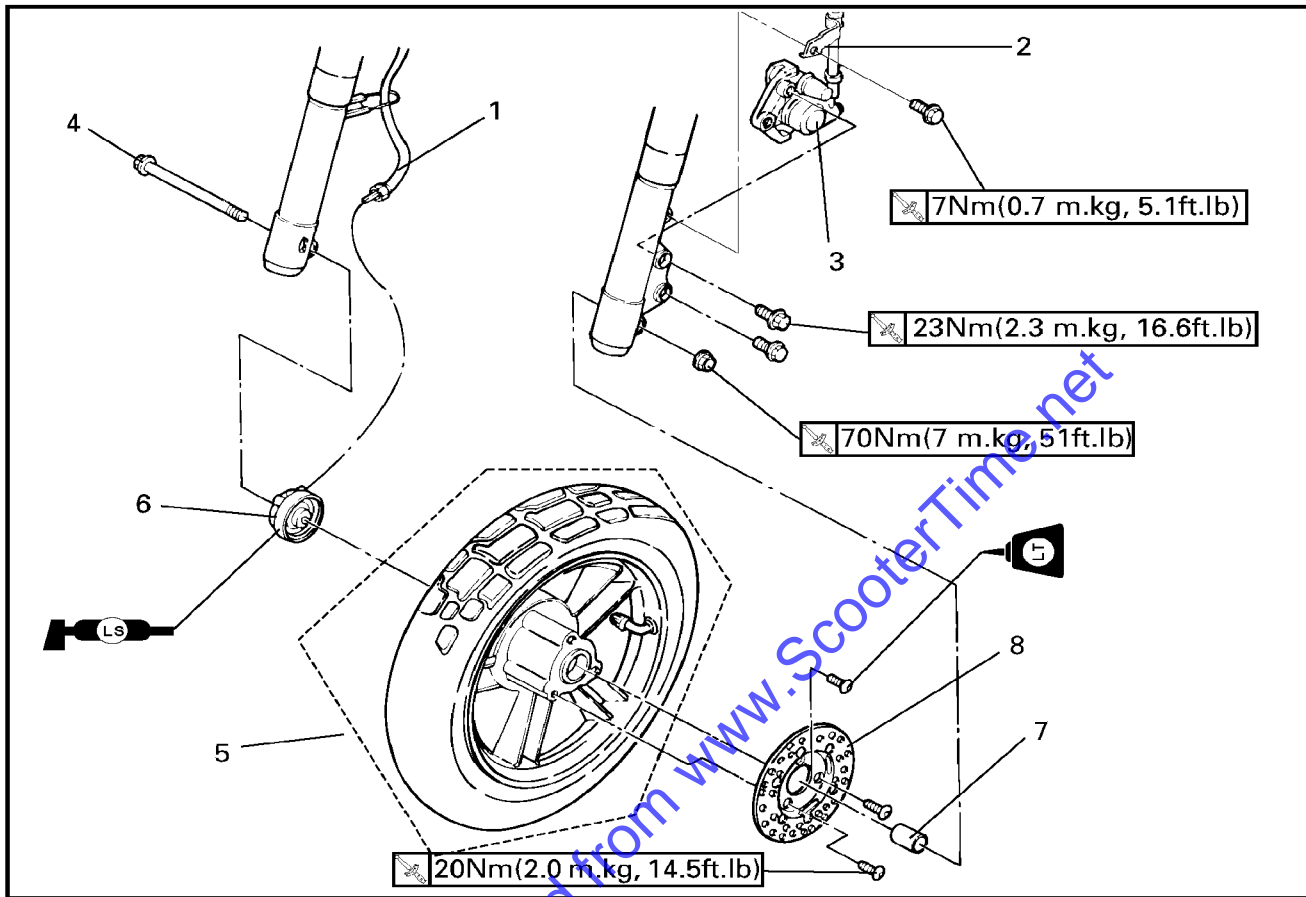


6

Order	Job name/Part name	Q'ty	Remarks
	Front wheel and brake disc removal		Remove the parts in order. <b>⚠ WARNING</b> <b>Securely support the scooter so there is no danger of it falling over.</b>
1	Speedometer cable	1	Refer to "FRONT WHEEL INSTALLATION" section.
2	Front brake hose holder	1	
3	Brake caliper	1	
4	Wheel axle	1	
5	Front wheel assembly	1	
6	Gear unit assembly	1	
7	Collar	1	Refer to "FRONT WHEEL ASSEMBLY" section.
8	Brake disc	1	Reverse the removal procedure for installation.

FRONT WHEEL DISASSEMBLY

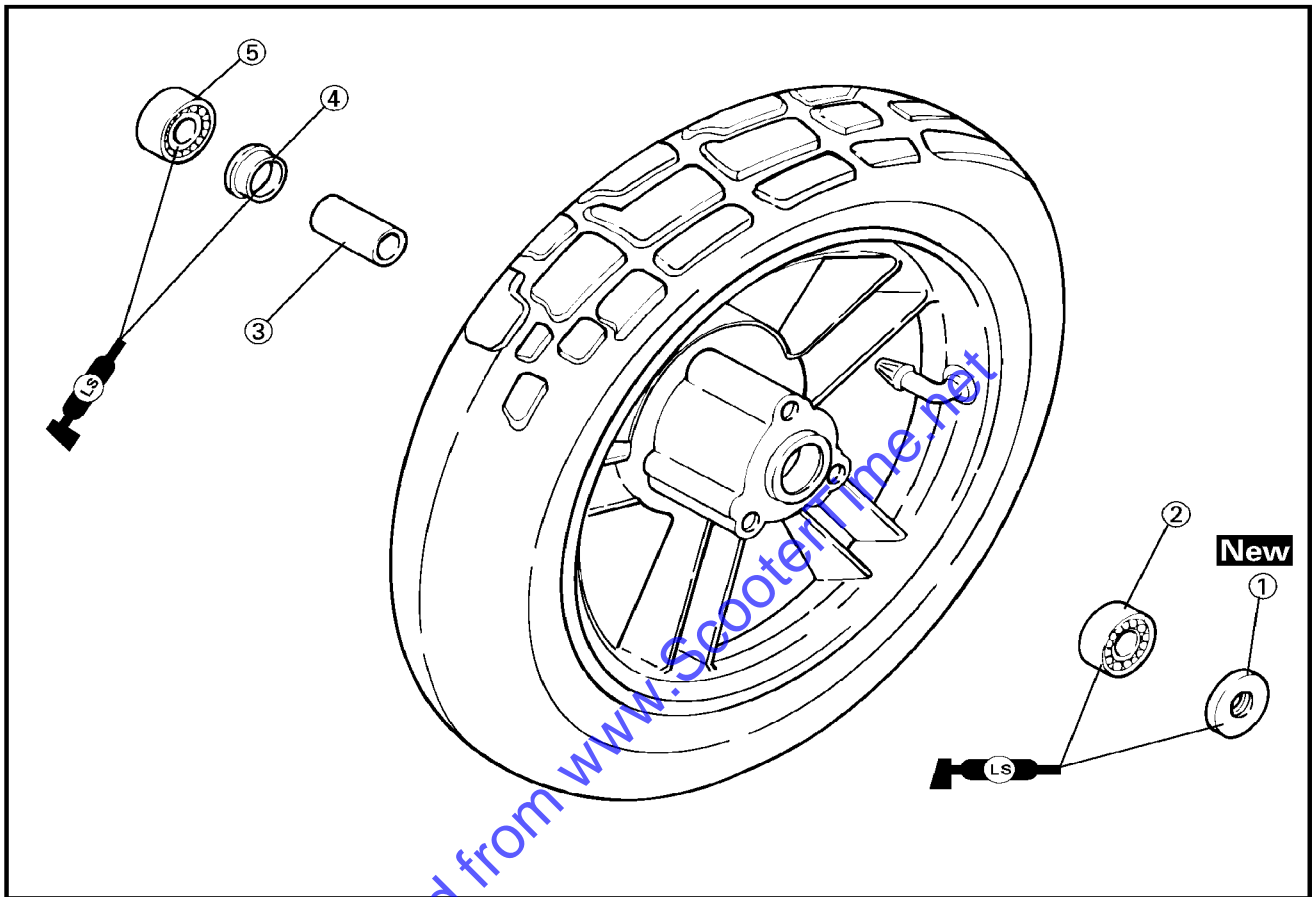

Order	Job name/Part name	Q'ty	Remarks
	Front wheel disassembly		Remove the parts in order.
①	Oil seal	1	Refer to "FRONT WHEEL DISASSEMBLY/ASSEMBLY" section.
②	Bearing	1	
③	Collar	1	
④	Spacer	1	
⑤	Bearing	1	
			Reverse the removal procedure for installation.

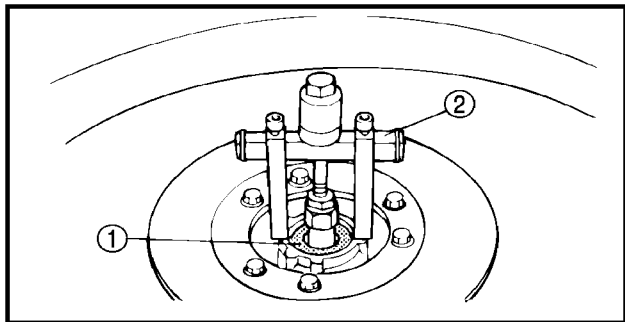

YP .....

**FRONT WHEEL DISASSEMBLY**

1. Remove:
  - Bearing ①
  - Spacer
 Remove the bearing using a general bearing puller ②.

**CAUTION:** \_\_\_\_\_

Handle the wheel with care not to damage the brake disc. If the brake disc is damaged, replace.


YP700020


**FRONT WHEEL INSPECTION**

1. Inspect:
  - Front wheel axle  
(by rolling it on a flat surface)  
Bends → Replace.


**⚠ WARNING** \_\_\_\_\_


Do not attempt to straighten a bent wheel axle.

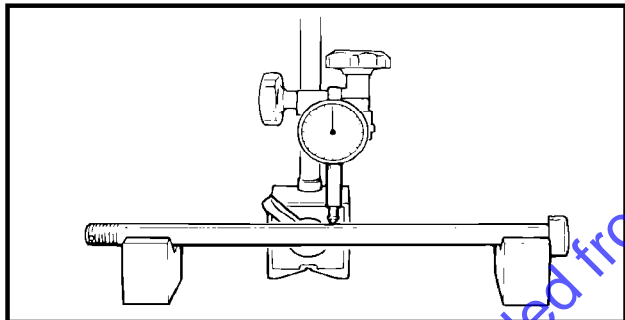


	Wheel axle bending limit: 0.25 mm (0.0098 in)
---	--





2. Inspect:
  - Front tire  
Wear/damage → Replace.  
Refer to "TIRE INSPECTION" in CHAPTER 3.
  - Front wheel  
Refer to "WHEEL INSPECTION" in CHAPTER 3.
3. Measure:
  - Front wheel runout  
Over the specified limits → Replace.

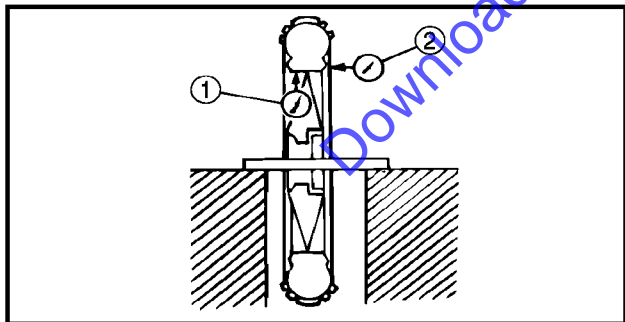

	Front wheel runout limits: Radial ①: 1.0 mm (0.04 in) Lateral ②: 1.0 mm (0.04 in)
---	---

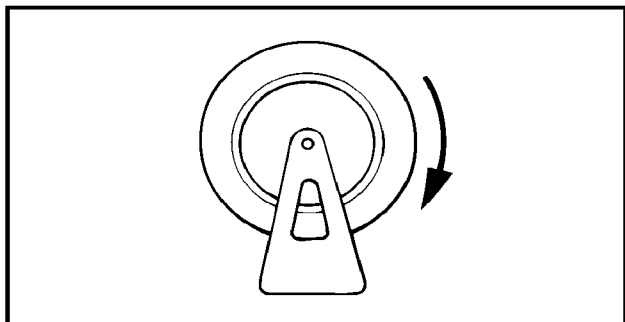

4. Inspect:
  - Front wheel bearings  
Bearings allow free play in the wheel hub or the wheel does not turn smoothly → Replace.
  - Oil seals  
Wear / damage → Replace.

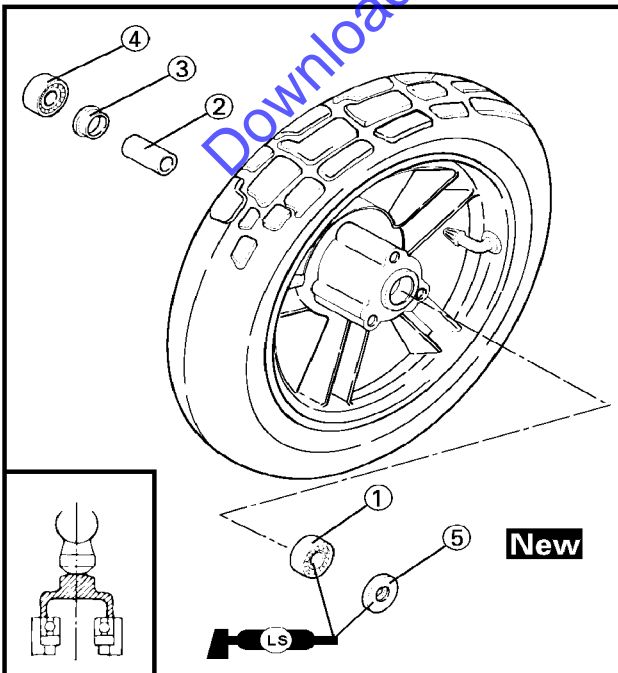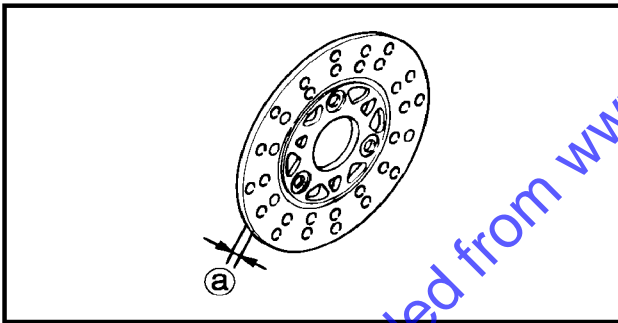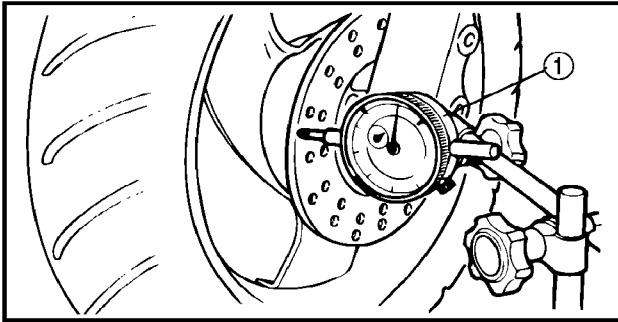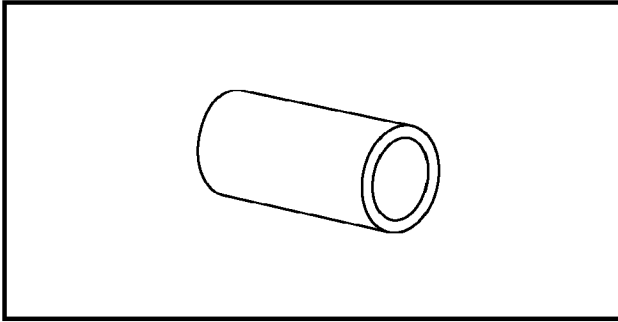

4. Inspect:


- Collar  
Grooved wear → Replace the collar and the oil seal as a set.

YP.....

**BRAKE DISC INSPECTION**

1. Measure:


- Brake disc deflection ①

	Maximum deflection: 0.15 mm (0.0059 in)
---	--

Out of specification → Replace.

2. Measure:

- Brake disc thickness ②

	Brake disc thickness: 4.0 mm (0.16 in)
	Minimum thickness: 3.5 mm (0.14 in)

Out of specification → Replace.

YP.....

**FRONT WHEEL ASSEMBLY**

1. Install:


- Bearing ①
- Collar ②
- Spacer ③
- Bearing ④
- Oil seal ⑤


**NOTE:**

- Apply the lithium soap base grease on the bearing and oil seal lip when installing.
- Use a socket that matches the outside diameter of the race of the bearing.
- Always use a new oil seal.
- Install the oil seal with its manufacturer's marks or numbers facing outward.

**CAUTION:**

Do not strike the inner race of balls of the bearing. Contact should be made only with the outer race.

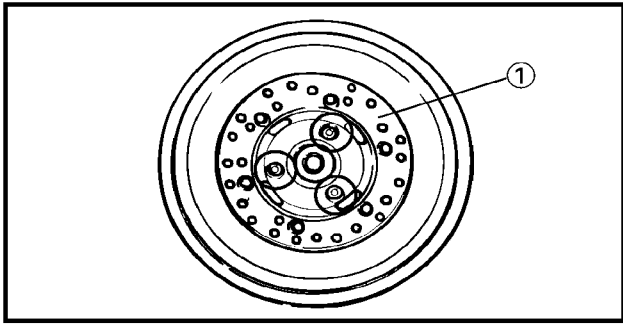

2. Install:
- Brake disc ①  20 Nm(2.0 m.kg, 14 ft.lb)

**NOTE:** \_\_\_\_\_  
Tighten the bolts (brake disc) in stage using a crisscross pattern.  
\_\_\_\_\_


EB700030


**FRONT WHEEL INSTALLATION**

Reverse the "REMOVAL" procedure.

Note the following points.


1. Lubricate:
  - Front wheel axle
  - Bearings
  - Oil seal (lips)
  - Drive/driven gear (speedometer)

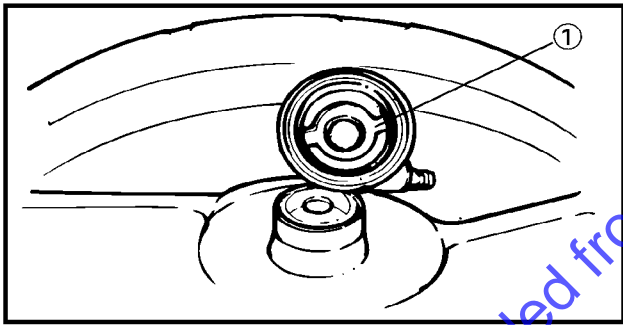

 Recommended lubricant:  
Lithium soap base grease

2. Install:
  - Speedometer gear unit ①


**NOTE:** \_\_\_\_\_  
Make sure that the wheel hub and the speedometer gear unit are installed with the three projections meshed into the two slots.  
\_\_\_\_\_

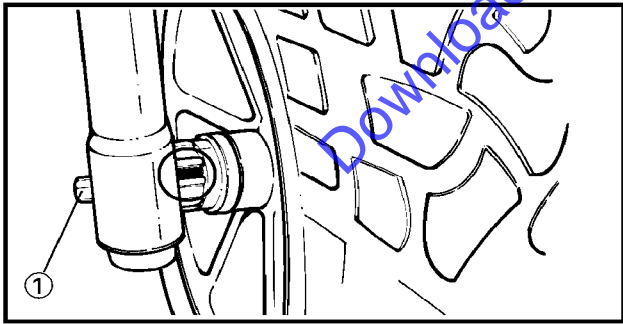

3. Install:
  - Front wheel

**NOTE:** \_\_\_\_\_  
Make sure that the slot in the speedometer gear unit fits over the stopper on the front fork outer tube.  
\_\_\_\_\_

4. Tighten:
  - Front wheel axle ①
  - Axle nut (front wheel axle)

 70 Nm(7.0 m.kg, 51 ft.lb)

**CAUTION:** \_\_\_\_\_  
**Before tightening the axle nut, stroke the front fork several times to check for proper fork operation.**  
\_\_\_\_\_





**WARNING** \_\_\_\_\_  
**Make sure that the brake hose is routed properly.**  
\_\_\_\_\_

YP700040

**WHEEL STATIC BALANCE ADJUSTMENT**

**NOTE:** \_\_\_\_\_

- After replacing the tire and/or rim, the wheel static balance should be adjusted.
- Adjust the front wheel static balance with the brake disc installed.

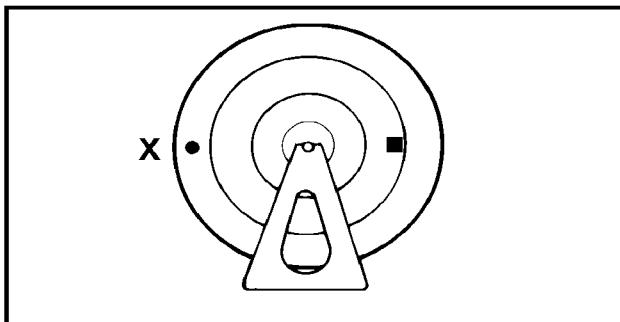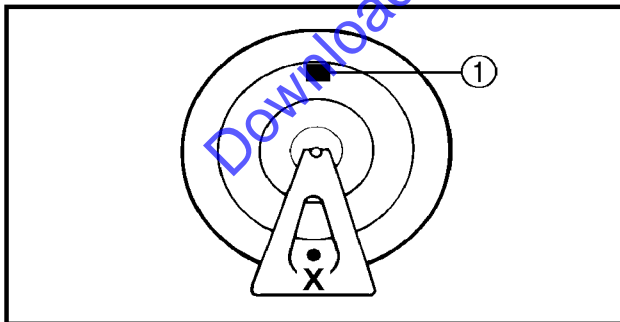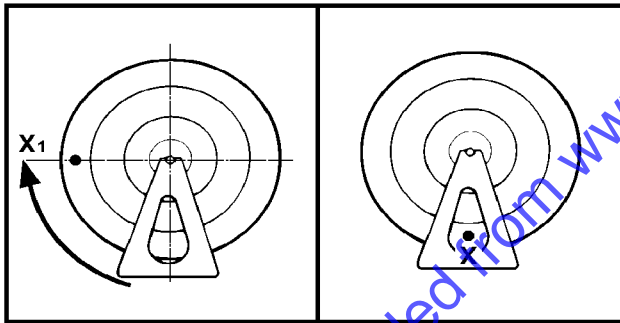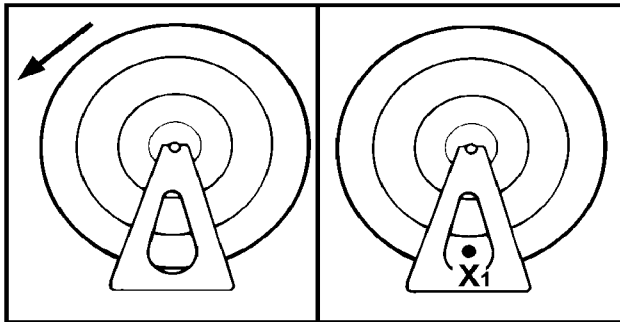

1. Remove:
  - Balancing weight
2. Set:
  - Wheel  
(on a suitable stand)
3. Find:
  - Heavy spot

\*\*\*\*\*

**Procedure:**

- a. Spin the wheel and wait for it to rest.
- b. Put an "X1" mark on the wheel's bottom spot.
- c. Turn the wheel so that the "X1" mark is 90° up.
- d. Release the wheel and wait for it to rest. Put an "X2" mark on the wheel's bottom spot.
- e. Repeat the above b., c., and d. several times until all marks come to the same spot.
- f. This spot is the wheel's heavy spot "X".

\*\*\*\*\*

4. Adjust:
  - Wheel static balance

\*\*\*\*\*

**Adjusting steps:**


- Install a balancing weight ① on the rim exactly opposite to the heavy spot "X".

**NOTE:** \_\_\_\_\_

Start with the smallest weight.

- Turn the wheel so that the heavy spot is 90° up.
- Check that the heavy spot is at rest there. If not, try another weight until the wheel is balanced.

\*\*\*\*\*

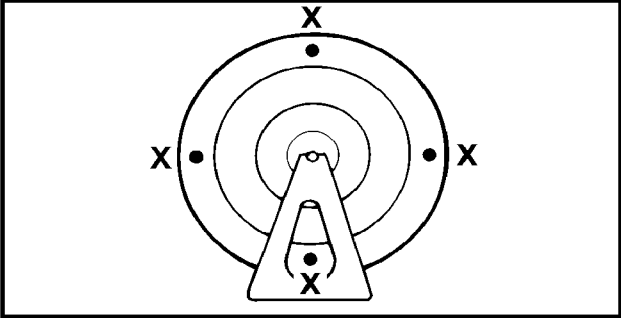

5. Check:

- Wheel static balance

\*\*\*\*\*

Checking steps:


- Turn the wheel so that it comes to each point as shown.
- Check that the wheel is at rest at each point. If not, readjust the front wheel static balance.

\*\*\*\*\*

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)



**FRONT BRAKE**  
**BRAKE PAD**



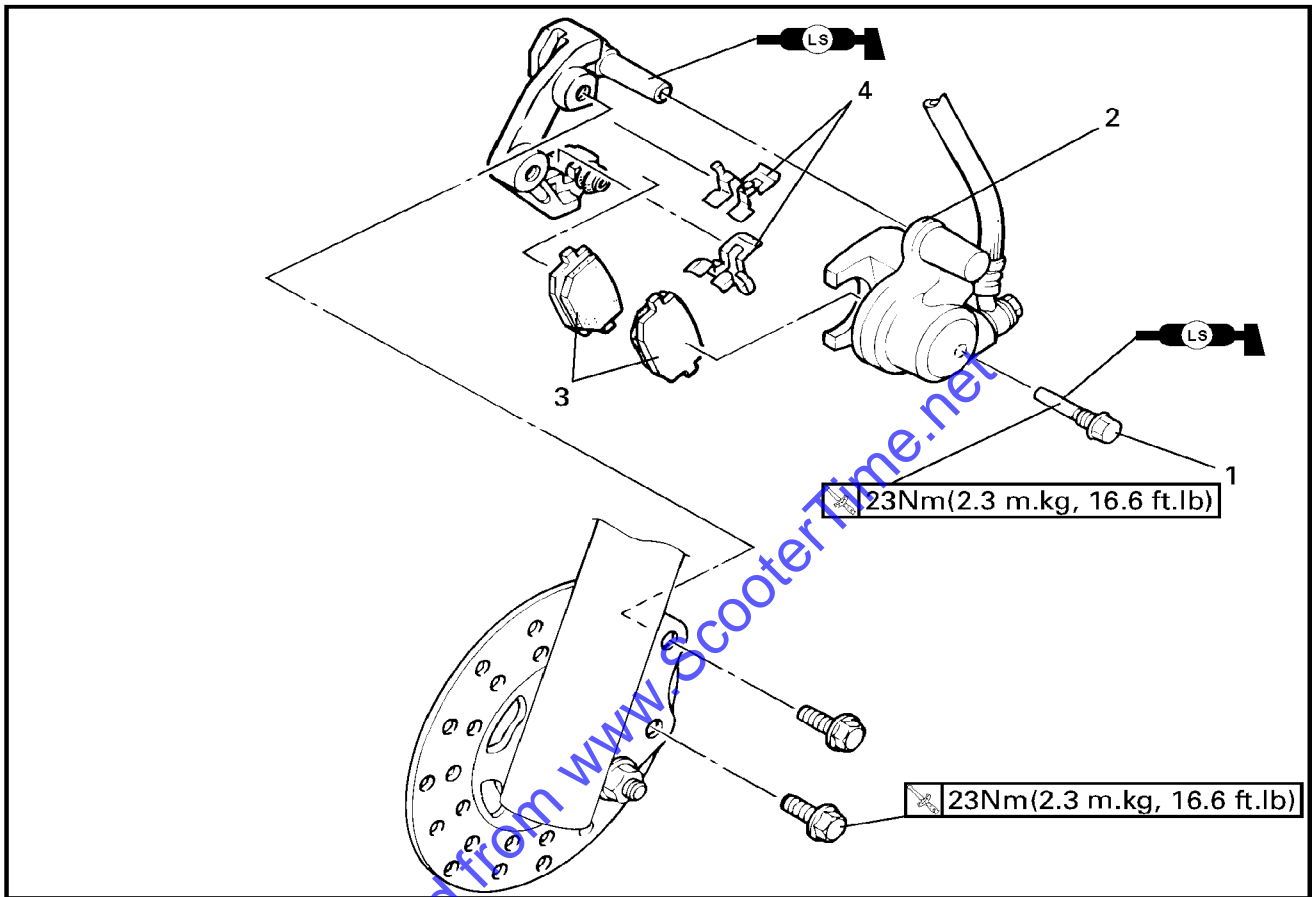


Order	Job name/Part name	Q'ty	Remarks
	Brake pad removal		Remove the parts in order.
1	Caliper support bolt	1	Refer to " BRAKE PAD REPLACEMENT " section .
2	Caliper	1	
3	Brake pad	2	
4	Pad spring	2	
			Reverse the removal procedure for installation.

**CAUTION:**

Disc brake components rarely require disassembly. **DO NOT:**

- Disassembly components unless absolutely necessary.
- Use solvents in internal brake component.
- Use contaminated brake fluid for cleaning.
- Use only clean fluid.
- Allow brake fluid to come in contact with the eyes otherwise eye injury may occur.
- Allow brake fluid to contact painted surfaces or plastic parts otherwise damage may occur.
- Disconnect any hydraulic connection otherwise the entire system must be disassembled, drained, cleaned, and then properly filled and bled after reassembly.

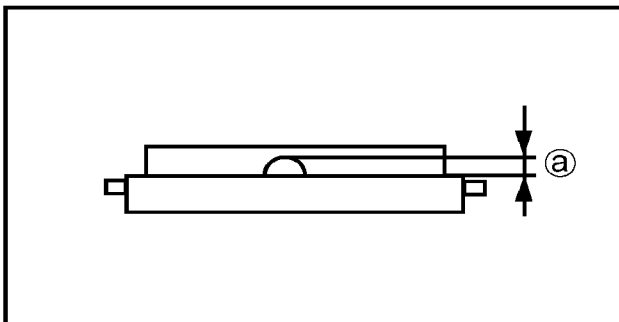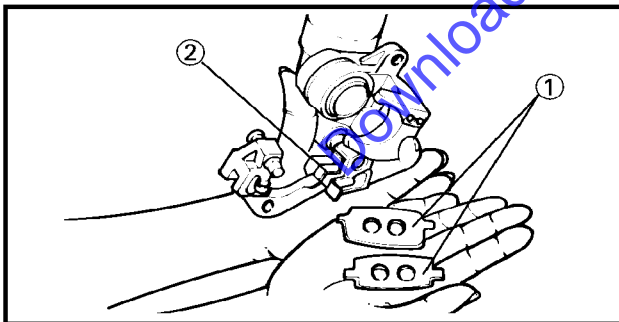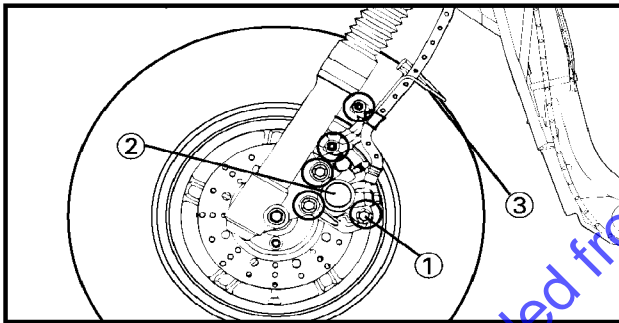**BRAKE PAD REPLACEMENT****NOTE:**

It is not necessary to disassemble the brake caliper and brake hose to replace the brake pads.






1. Loosen:
  - Retaining bolt ①
2. Remove:
  - Brake caliper ②
  - Holder (brake hose) ③
3. Remove:
  - Retaining bolt
  - Pads ①
  - Pad spring ②

**NOTE:**

- Replace the pad spring if the pad replacement is required.
- Replace the pads as a set if either is found to be worn to the wear limit.



Wear limit (a):  
0.8 mm (0.03 in)

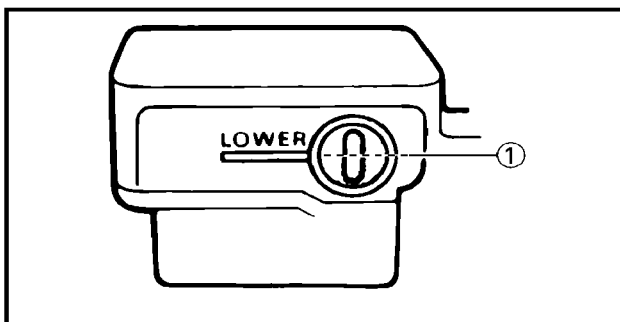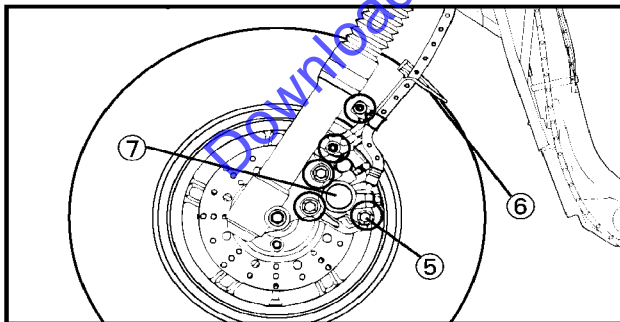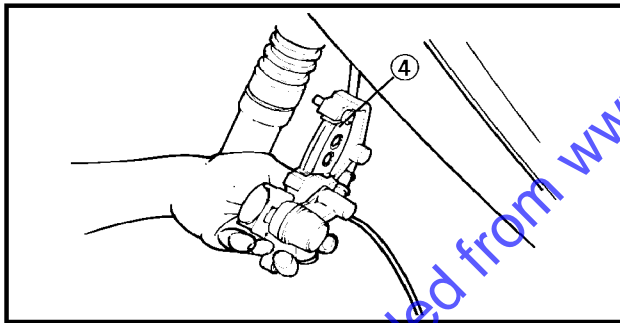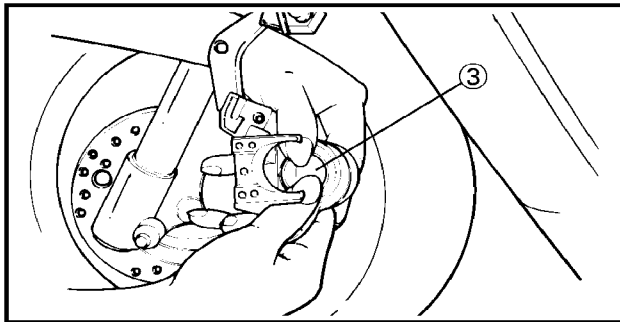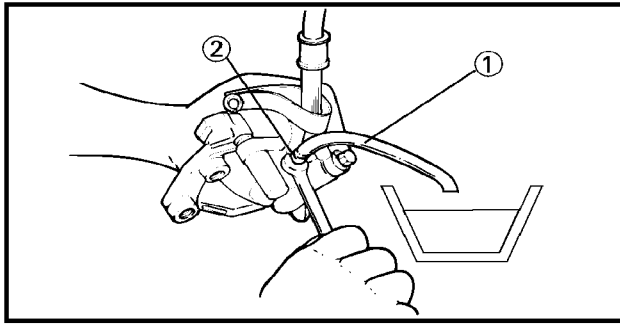


4. Install:

- Pad springs
- Brake pads (new)


\*\*\*\*\*

Installation steps:


- Connect a suitable hose (1) tightly to the caliper bleed screw (2). Then, place the other end of this hose into an open container.
- Loosen the caliper bleed screw and push the piston (3) into the caliper by your finger.
- Tighten the caliper bleed screw.

 6 Nm (0.6 m.kg, 4.3 ft.lb)


- Install the pad spring (new) and brake pad (new) (4)
- Tighten retaining bolt (5)

 23 Nm (2.3 m.kg, 16.6 ft.lb)

- Install brake hose holder (6)

 7 Nm (0.7 m.kg, 5.15 ft.lb)

- Install caliper (7)

 23 Nm (2.3 m.kg, 16.6 ft.lb)

\*\*\*\*\*

5. Inspect:


- Brake fluid level  
Refer to the "BRAKE FLUID INSPECTION" section in the CHAPTER 3.
- ① "LOWER" level line



6. Check:
  - Brake lever operation  
A softy or spongy feeling Bleed→brake system.  
Refer to " AIR BLEEDING " section in the CHAPTER 3.


Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

MASTER CYLINDER

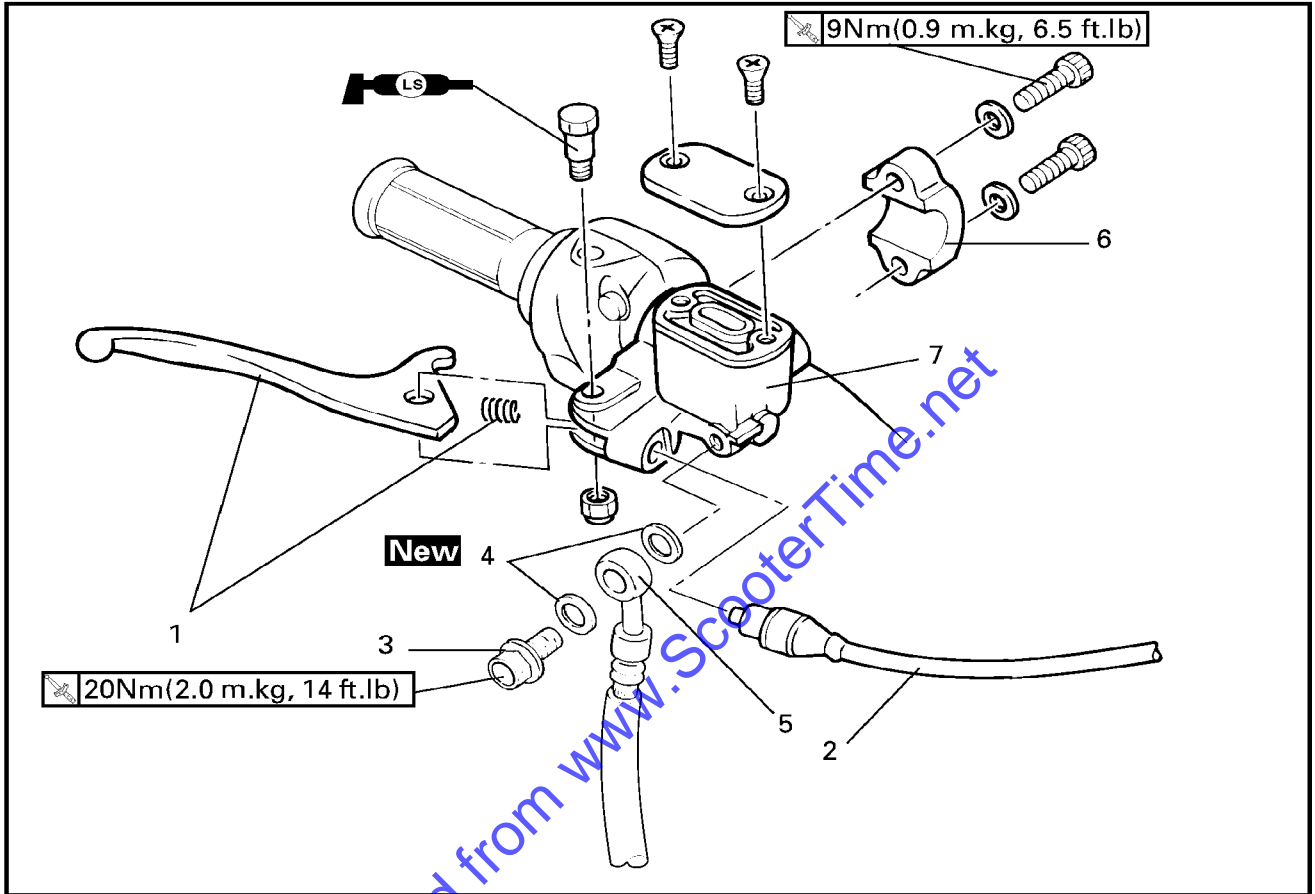


Order	Job name/Part name	Q'ty	Remarks
	Master cylinder removal Drain the brake fluid		Remove the parts in order. Refer to "BRAKE FLUID REPLACEMENT" section in CHAPTER 3.
1	Brake lever/compression spring	1/1	Refer to "MASTER CYLINDER INSTALLATION" section.
2	Brake switch	1	
3	Union bolt	1	
4	Copper washer	2	
5	Brake hose	1	
6	Master cylinder bracket	1	
7	Master cylinder	1	
			Reverse the removal procedure for installation.

MASTER CYLINDER DISASSEMBLY

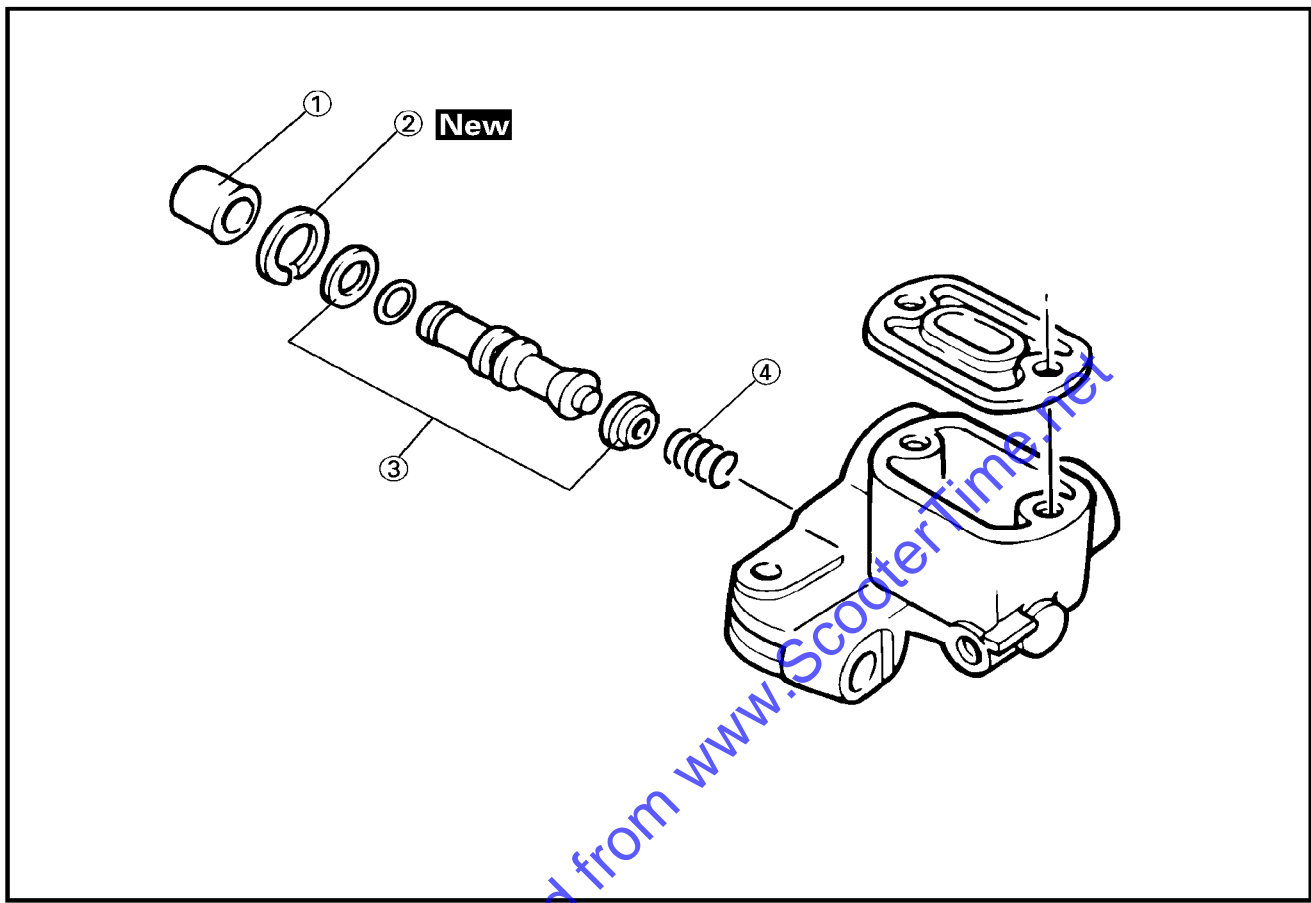

6


Order	Job name/Part name	Q'ty	Remarks
	Master cylinder disassembly		Remove the parts in order.
①	Master cylinder boot	1	Refer to "MASTER CYLINDER ASSEMBLY" section.
②	Circlip	1	
③	Master cylinder kit	1	
④	Spring	1	
			Reverse the disassembly procedure for assembly.

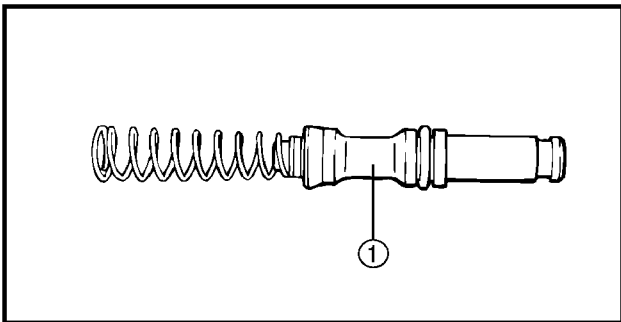


YP702040

**MASTER CYLINDER INSPECTION**

1. Inspect:
  - Master cylinder kit ①  
Wear/scratches→Replace the master cylinder assembly.
  - Master cylinder boot  
Cracks/damage→Replace.

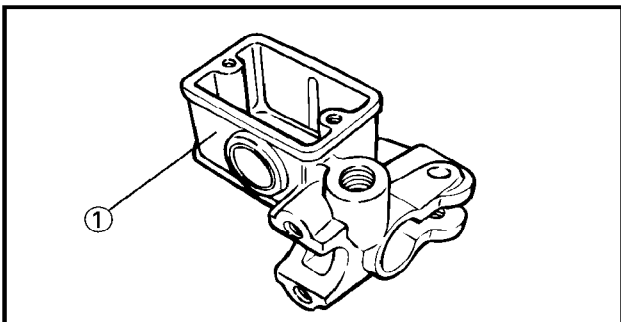

2. Inspect:
  - Master cylinder ①
  - Scratches/wear/damage→Replace the master cylinder assembly.

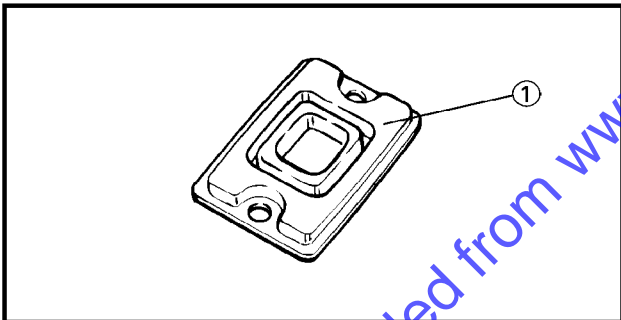


3. Inspect:
  - Diaphragm ①  
Wear/damage→Replace.

YP.....


**MASTER CYLINDER ASSEMBLY**

**⚠ WARNING**


- All internal brake components should be cleaned and lubricated with new brake fluid only before installation.


	Recommended brake fluid: DOT #4(or DOT #3)
---	---

- Replace the piston seals and dust seals whenever a master cylinder is disassembled.

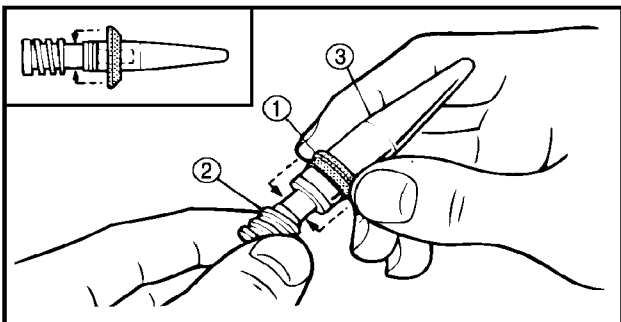


1. Install:
  - Cylinder cup ①
  - Master cylinder piston ②  
Install cylinder cup ① by using cylinder cup installer ③.


	Cylinder cup installer set: 90890-01996
---	--

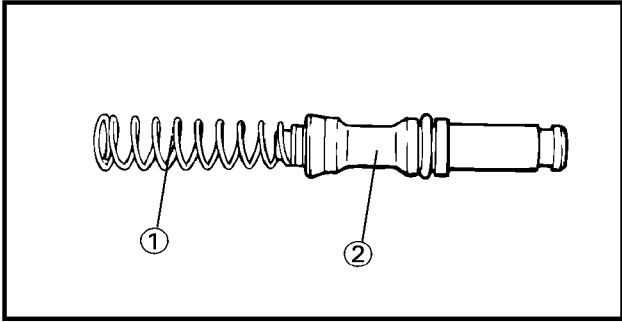

2. Install:
- Spring ①  
Install the spring with its smaller diameter to the master cylinder piston.
  - Master cylinder kit ②

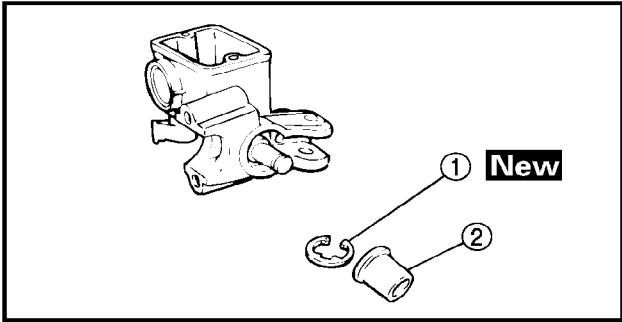


3. Install:
- Circlip ① **New**  
Install the circlip securely into the master cylinder groove.
  - Master cylinder boot ②

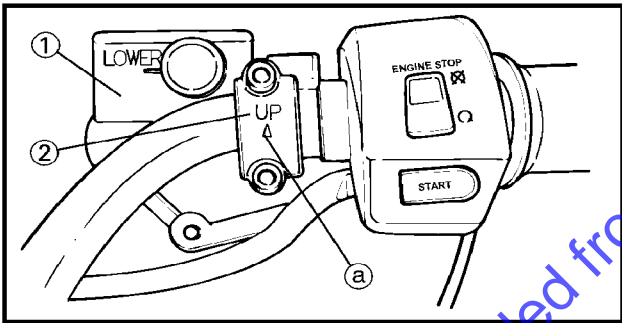

YP....


**MASTER CYLINDER INSTALLATION**

1. Install:
- Master cylinder ①
  - Master cylinder bracket ②

 9 Nm (0.9 m.kg, 6.5 ft.lb)

**CAUTION:** \_\_\_\_\_

- Install the master cylinder bracket ② with the "UP" mark (a) facing upward.
- Align the end of the holder with the punch mark b on the handle bar.

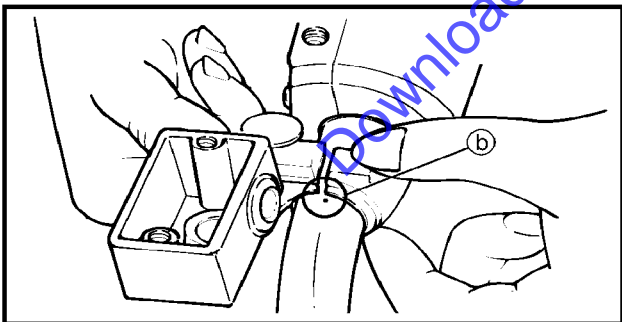





2. Air bleed:
  - Brake system  
Refer to "AIR BLEEDING" section in CHAPTER 3.


**⚠ WARNING**

- **Use only designated quality brake fluid:**  
Otherwise, the rubber seals may deteriorate, causing leakage and poor brake performance.
- **Refill with the same type of brake fluid:**  
Mixing fluids may result in a harmful chemical reaction and lead to poor performance.
- **Be careful that water does not enter the system:**  
Water significantly lowers the boiling point of the fluid and may result in vapor lock.

3. Inspect:
  - Brake operation


Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

CALIPER

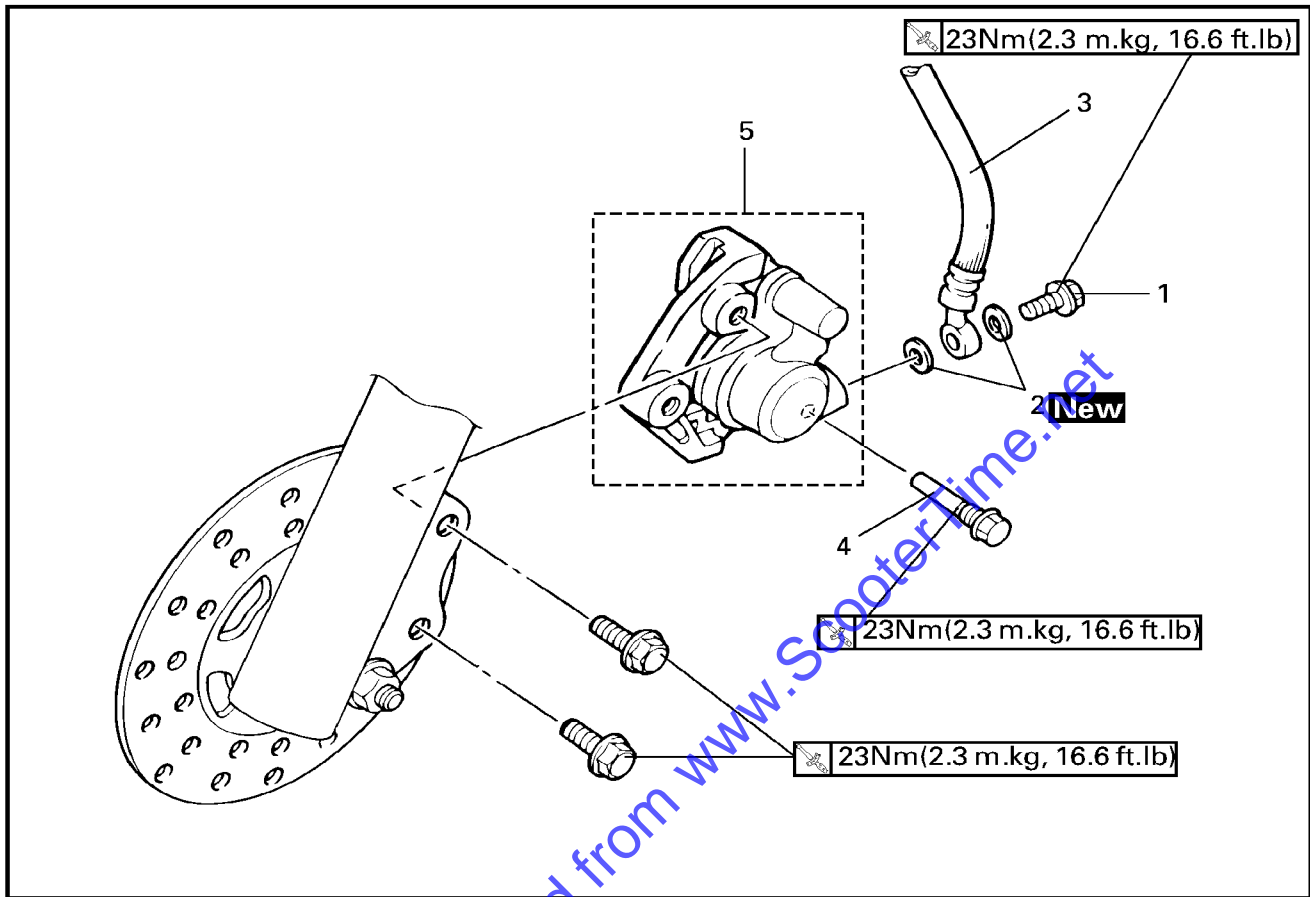


Order	Job name/Part name	Q'ty	Remarks
	Caliper removal Drain the brake fluid		Remove the parts in order. Refer to "BRAKE FLUID REPLACEMENT" section in CHAPTER 3.
1	Union bolt	1	Refer to "CALIPER INSTALLATION" section.
2	Copper washer	2	
3	Brake hose	1	
4	Caliper support bolt	1	
5	Caliper assembly	1	
			Reverse the removal procedure for installation.

CALIPER DISASSEMBLY

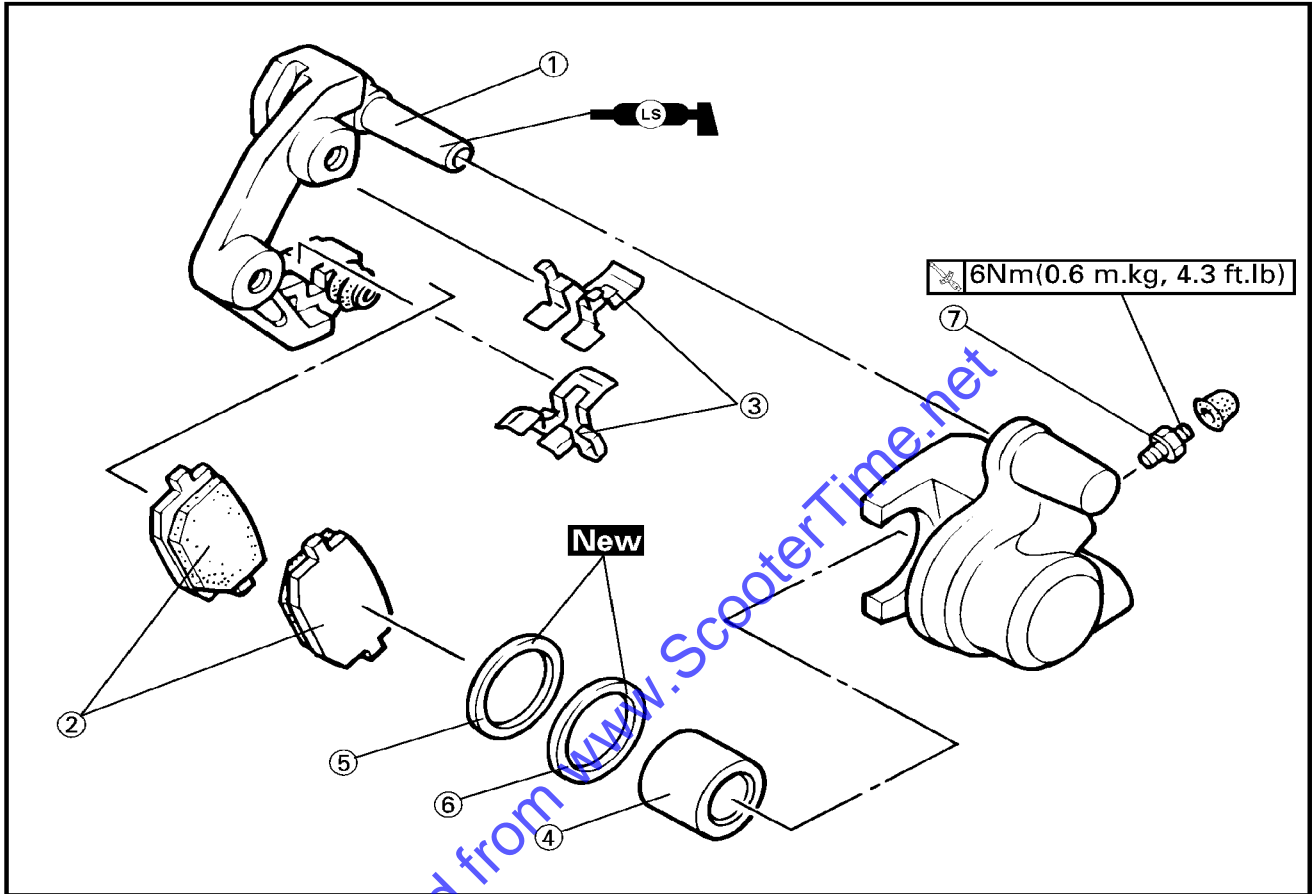

Order	Job name/Part name	Q'ty	Remarks
	Caliper disassembly		Remove the parts in order.
①	Caliper bracket	1	Refer to "BRAKE CALIPER DISASSEMBLY/ASSEMBLY" section.
②	Brake pad	2	
③	Pad spring	2	
④	Caliper piston	1	
⑤	Dust seal	1	
⑥	Piston seal	1	
⑦	Bleed screw	1	
			Reverse the disassembly procedure for assembly.

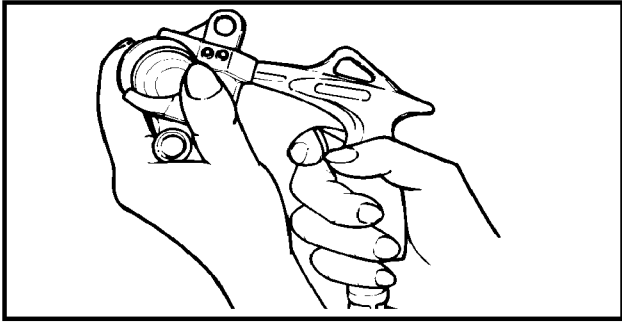

YP702020

**BRAKE CALIPER DISASSEMBLY**

**NOTE:** \_\_\_\_\_

Before disassembling either brake caliper, drain the brake fluid from the brake hose, master cylinder, brake caliper and reservoir tank.

1. Remove:
- Brake caliper piston

\*\*\*\*\*

Removal steps:

- Blow compressed air into the hose joint opening to force out the caliper piston from the brake caliper body.


**⚠ WARNING** \_\_\_\_\_

- Never try to pry out the caliper piston.
- Cover the caliper piston with a rag. Be careful not to get injured when the piston is expelled from the master cylinder.

**CAUTION:** \_\_\_\_\_

Carefully remove the caliper piston to prevent damage.

\*\*\*\*\*

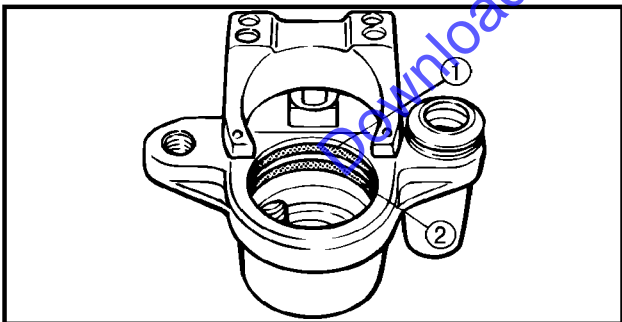


2. Remove:
- Dust seal ①
  - Piston seal ②

When removing, push the seals by your finger.

**CAUTION:** \_\_\_\_\_

- Do not use a sharp instrument. Remove seals by your finger.
- Do not re-use removed parts.

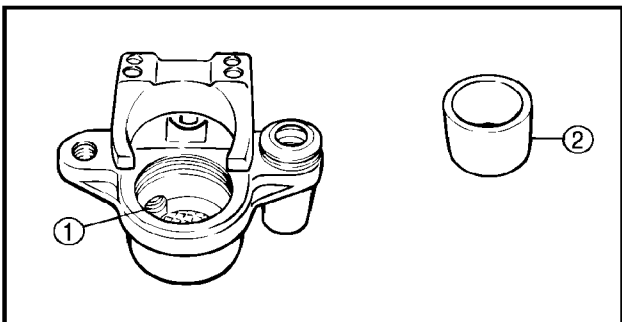

YP...

**CALIPER INSPECTION**

1. Inspect:
- Caliper cylinder ①
  - Caliper piston ②

Scratches, wear → Replace caliper assembly.

EB702050

**BRAKE CALIPER ASSEMBLY**




**⚠ WARNING**

- All internal brake components should be cleaned and lubricated with new brake fluid only before installation.



Recommended brake fluid:  
DOT #4(or DOT #3)

- Replace the caliper piston seals whenever a brake caliper is disassembled.

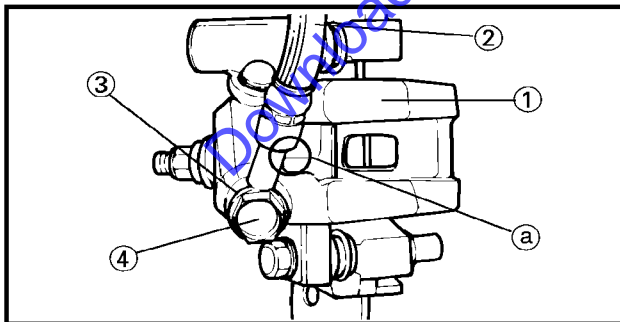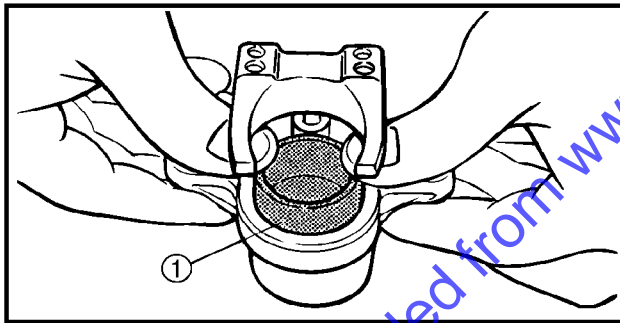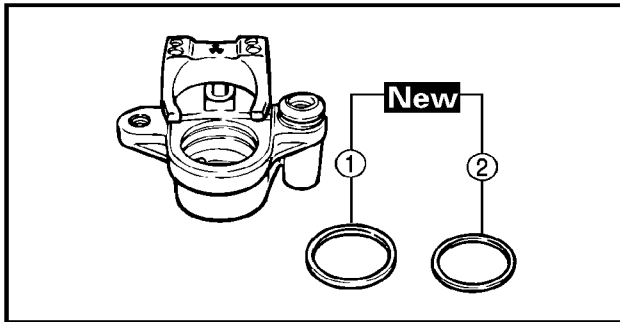

1. Install:

- Piston seal ① **New**
- Dust seal ② **New**

2. Install:

- Caliper piston ①  
Apply brake fluid to the outer surface and install.



**CAUTION:**

- Do not force.
- Use care to prevent damage on caliper piston.

YP.....

**BRAKE CALIPER INSTALLATION**

1. Install:


- Caliper ①
- Caliper support bolt  23Nm(2.3m.kg, 16.6ft.lb)
- Brake hose ②
- Copper washer ③ **New**
- Union bolt ④  25Nm(2.5 m.kg,18ft.lb)

**CAUTION:**

When installing the brake hose to the caliper, lightly touch the brake hose with the stopper ① on the caliper.


REAR WHEEL AND REAR BRAKE

REAR WHEEL

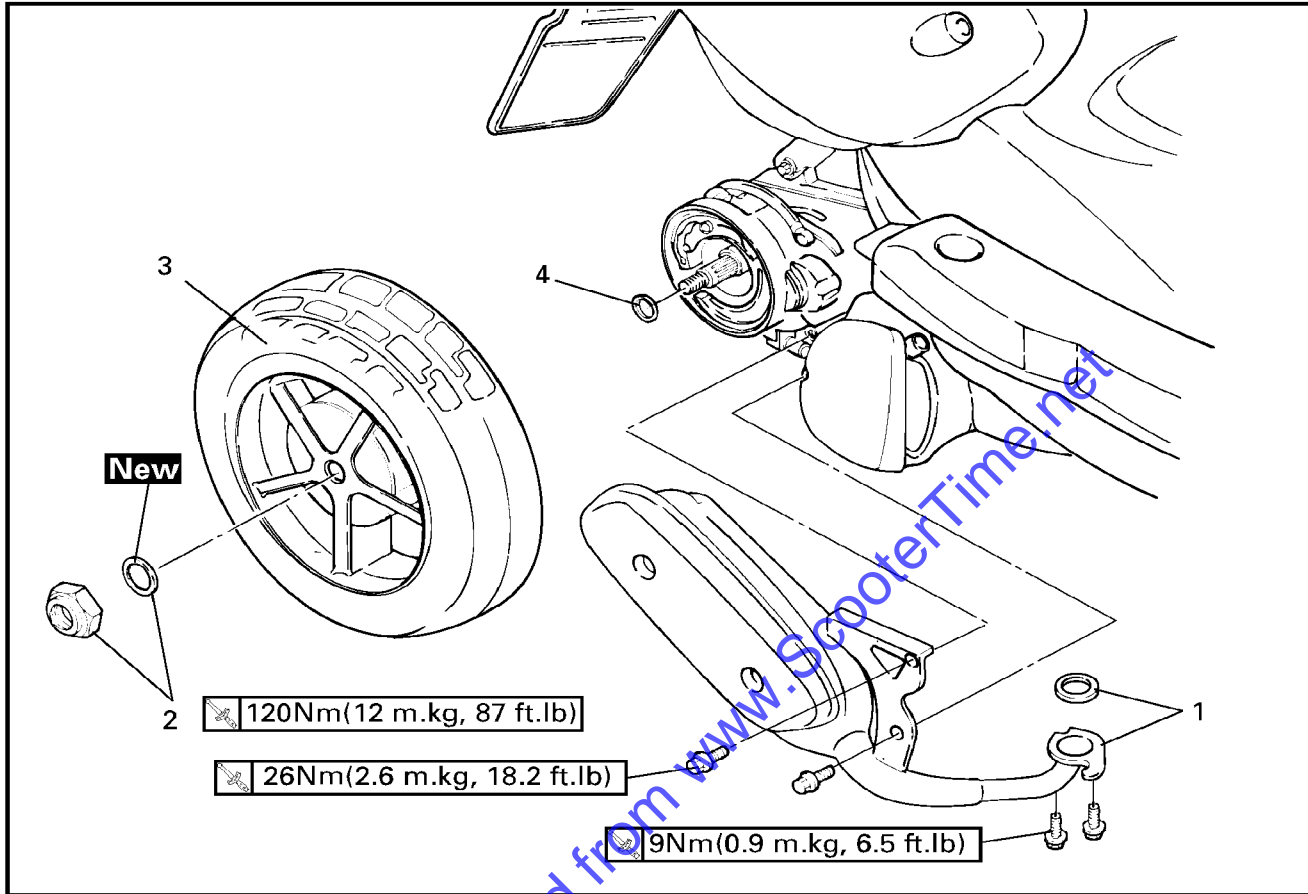

Order	Job name/Part name	Q'ty	Remarks
	Rear wheel and rear brake removal		Remove the parts in order. <b>NOTE:</b> Place the scooter on a suitable stand so that the rear wheel is elevated.
1	Muffler assembly/Gasket	1/1	
2	Nut/Plain washer	1	
3	Rear wheel assembly	1	
4	Plain washer	1	
			Reverse the disassembly procedure for installation.

REAR BRAKE

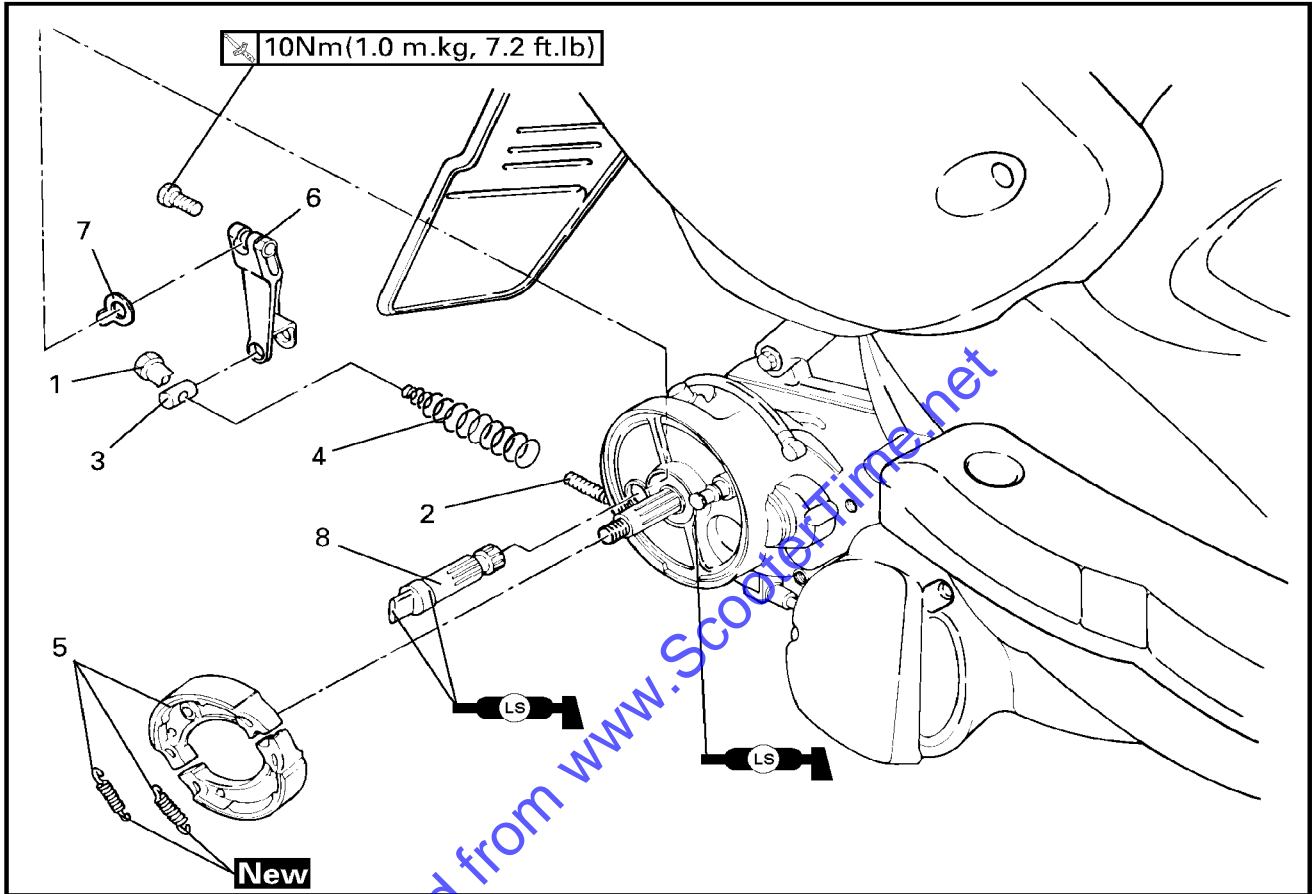

Order	Job name/Part name	Q'ty	Remarks
1	Adjuster	1	Reverse the removal procedure for installation.
2	Brake cable	1	
3	Pin	1	
4	Return spring	1	
5	Brake shoe	1	
6	Camshaft lever	1	
7	Wear indicator	1	
8	Brake camshaft	1	

EB701020

**REAR WHEEL INSPECTION**

1. Inspect:
  - Rear wheel axle
  - Rear wheel
  - Rear wheel bearings
  - Oil seals
 Refer to "FRONT WHEEL".
2. Measure:
  - Rear wheel runout
 Refer to "FRONT WHEEL".


EB701021

**REAR BRAKE INSPECTION**


1. Inspect:
  - Brake lining surface
 Glazed areas → Polish.  
 Use coarse sand paper.

**NOTE:** \_\_\_\_\_

After polishing, wipe the polished particles with a cloth.

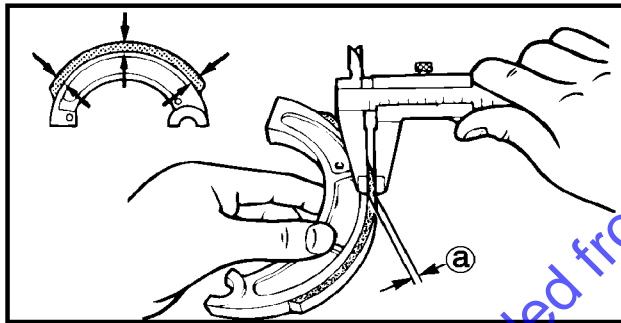


2. Measure:
  - Brake lining thickness (a)

	Brake lining thickness (a) :
	Standard: 4 mm (0.16 in)
	Limit: 2 mm (0.08 in)


Out of specification → Replace.  
 Measuring points " ↑ "

**NOTE:** \_\_\_\_\_

Replace the brake shoes as a set, if either is worn to the wear limit.

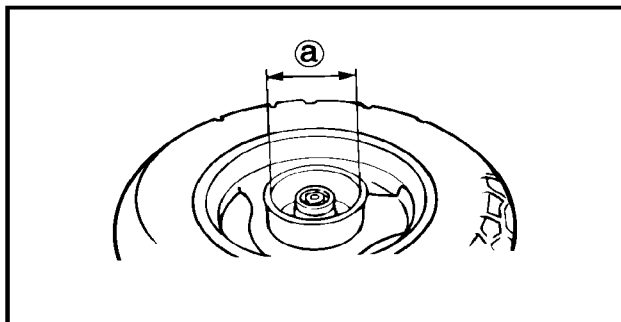

3. Measure:
  - Brake drum inside diameter (a)
 Out of specification → Replace the wheel.


	Brake drum inside diameter:
	Standard: 130 mm (5.12 in)
	Limit: 131 mm (5.16 in)



4. Inspect:
  - Brake drum inner surface
  - Oil/scratches→Repair.
  - Oil  
Use a rag soaked in lacquer thinner or solvent.
  - Scratches  
Use an emery cloth (lightly and evenly polishing)
5. Inspect:
  - Cam shaft face.  
Wear→Replace.

**⚠ WARNING**

When inspecting the brake lining, do not spill oil or grease on the brake lining.

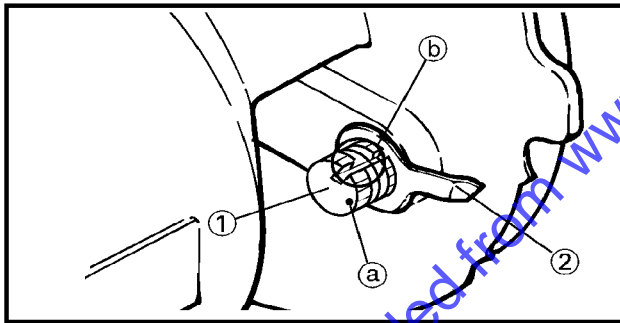

**REAR BRAKE INSTALLATION**


1. Install:
  - Camshaft ①
  - Indicator plate ②


\*\*\*\*\*

Installation steps:

- Set the camshaft with its punched mark (a) facing the direction as shown.
- Align the projection (b) on the indicator plate with the camshaft notch and install.
- Check the proper position of the brake shoe.

\*\*\*\*\*

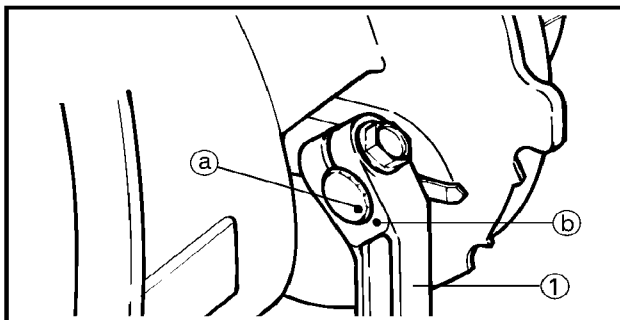


2. Install:
  - Camshaft lever ①  10Nm(1.0 m.kg, 7.2ft.lb)

**NOTE:**


Set the camshaft with its punched mark (a) facing the direction on the cam shaft lever (b).

**HANDLEBAR**  
HANDLEBAR


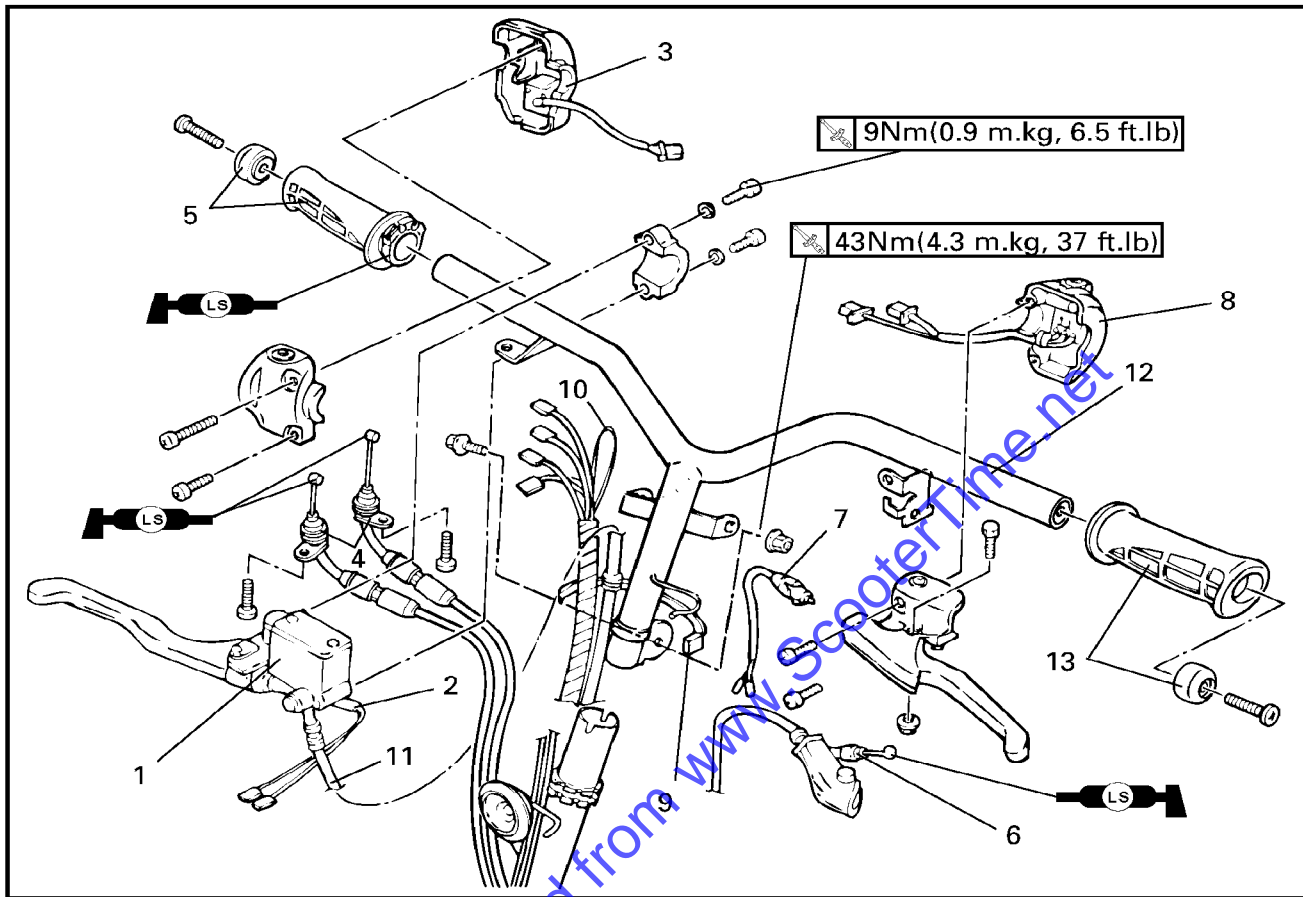


6

Order	Job name/Part name	Q'ty	Remarks
	Handlebar removal		Remove the parts in order.
	Left/Right bake mirror		Refer to "COVERS AND PANEL" IN CHAPTER 3.
	Front protector bar		
	Upper cover		
	Front/Rear handlebar cover		
	Left/Right flasher		
1	Brake master cylinder	1	
2	Front brake switch	1	
3	Handlebar switch (Right)	1	
4	Throttle cable	1	
5	Right grip	1/1	
6	Brake cable	1	
7	Rear brake switch	1	
8	Handlebar switch (Left)	1	
9	Bind	1	

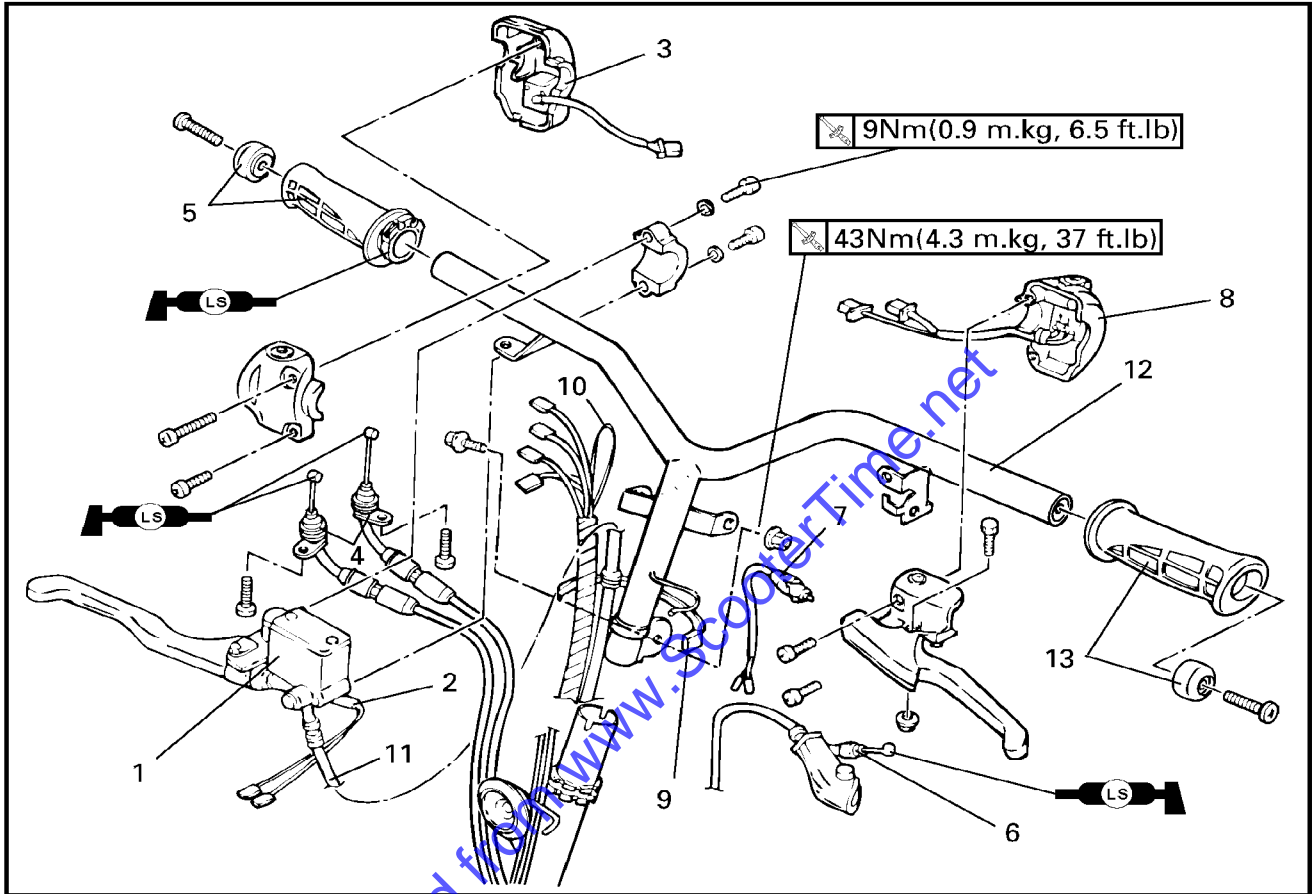

Order	Job name/Part name	Q'ty	Remarks
10	Wire harness strap	1	Reverse the removal procedure for installation.
11	Brake hose	1	
12	Handlebar comp.	1	
13	Left grip	1/1	

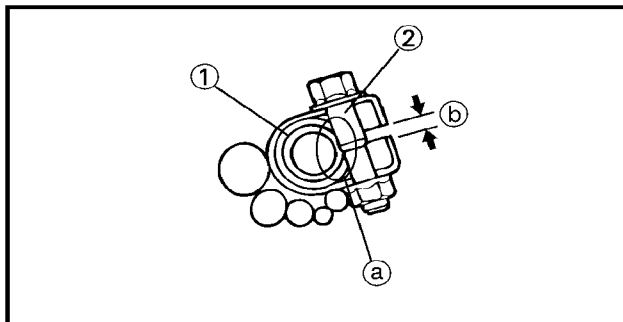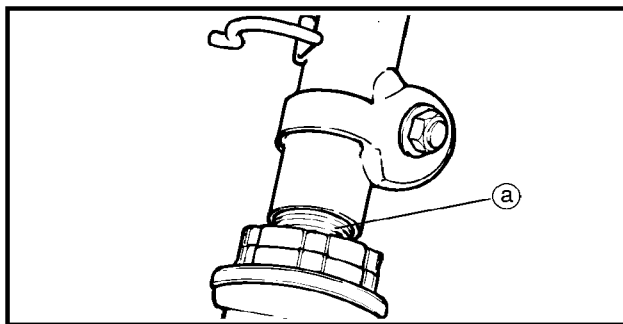

## HANDLEBAR INSTALLATION

- Clean:
  - Steering shaft (a)

**⚠ WARNING**

Proper cables and leads routing is essential to issue safe scooter operation.

- Install:
  - Handlebar (1)
  - Bolt (2)
  - Nut

13Nm (4.3 m.kg, 37ft.lb)

## NOTE:

Match the bolt (2) on to the steering column (a).

**CAUTION:**


There must be a space b after tightening bolt (2).

- Install:
  - Band

## NOTE:

Clamp the wire harness.


- Apply:
  - Lithium soap base grease (to throttle cable end and handlebar right end).

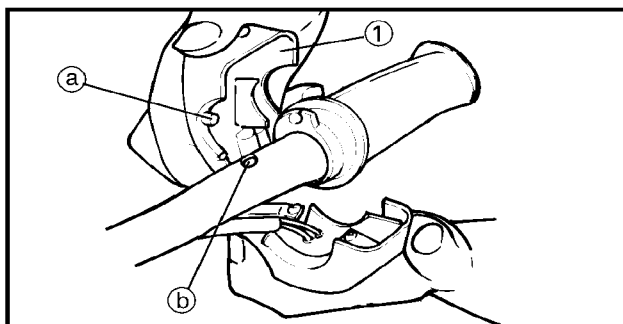

- Install:
  - Handlebar switch (right) (1)


## NOTE:

Insert the projection (a) into the hole (b) on the handlebar comp.

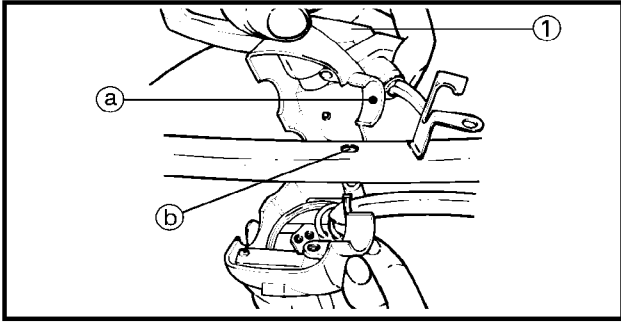

6. Install:  
● Handlebar switch (left) ①

**NOTE:** \_\_\_\_\_  
Insert the projection (a) into the hole (b) on the handlebar comp.  
\_\_\_\_\_

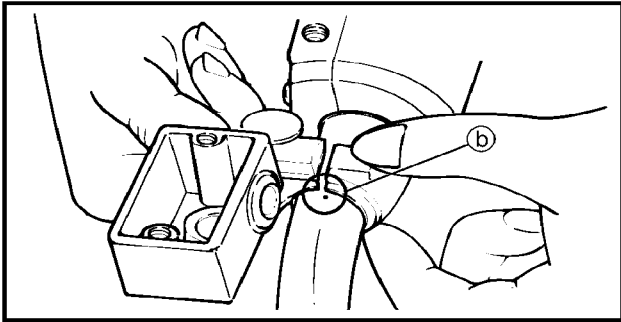


7. Install:  
● Master cylinder

**NOTE:** \_\_\_\_\_  
Match the slot with the punched mark (b) on the handlebar comp.  
\_\_\_\_\_

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)





STEERING

STEERING

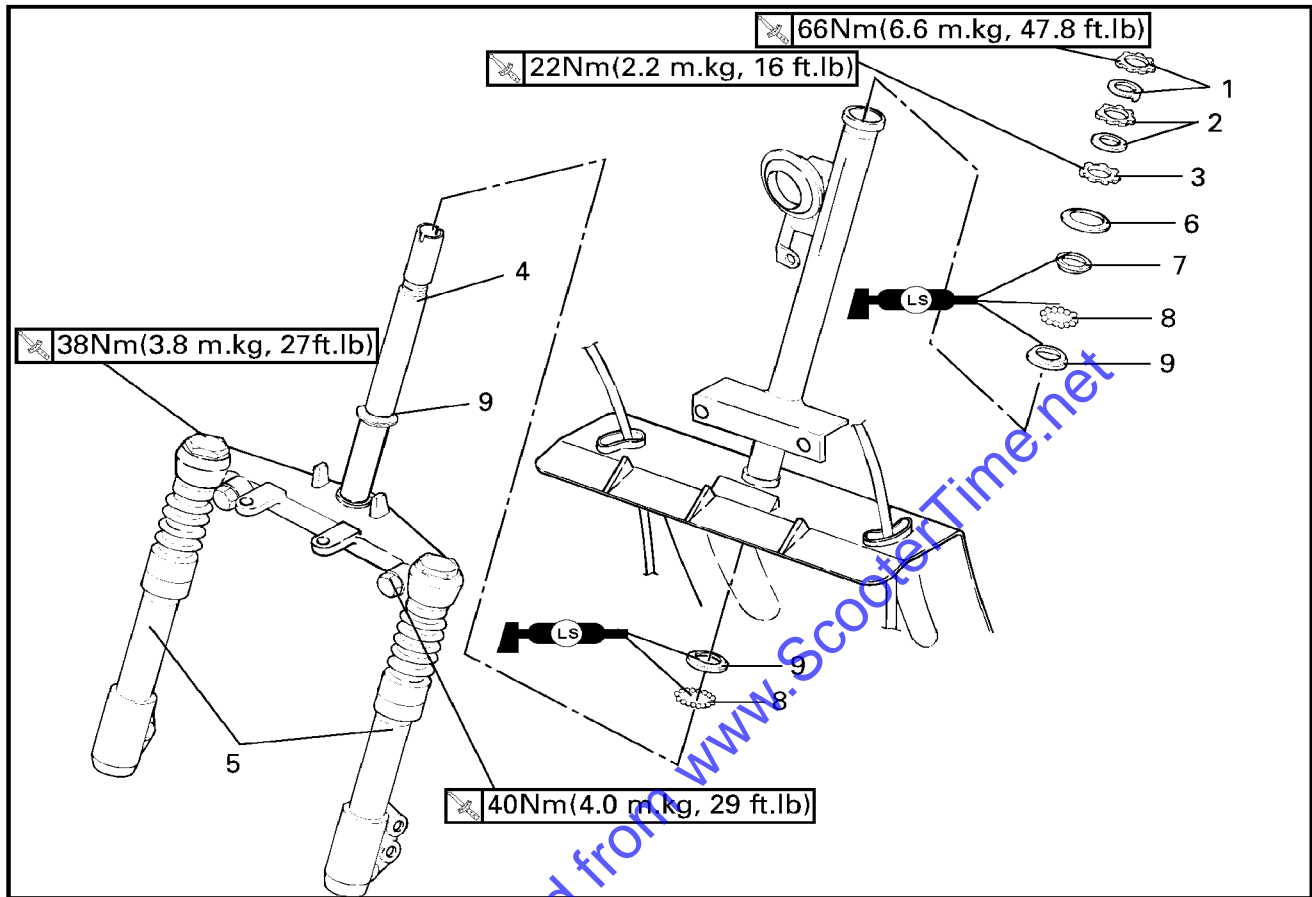

6

Order	Job name/Part name	Q'ty	Remarks
	Steering removal		Remove the parts in order
	Handlebar		Refer to "HANDLEBAR" section.
	Front wheel		Refer to "FRONT WHEEL AND BRAKE DISC" section
1	Ring nut 1/ Special washer	1/1	Refer to "STEERING REMOVAL/INSTALLATION" section.
2	Ring nut 2/ Rubber washer	1/1	
3	Ring nut 3	1	
4	Under bracket	1	
5	Front fork (Left/Right)	1/1	
6	Bearing cover	1	
7	Ball race	1	
8	Ball (Upper/Lower)	22/19	
9	Ball race	3	
			Reverse the removal procedure for installation.

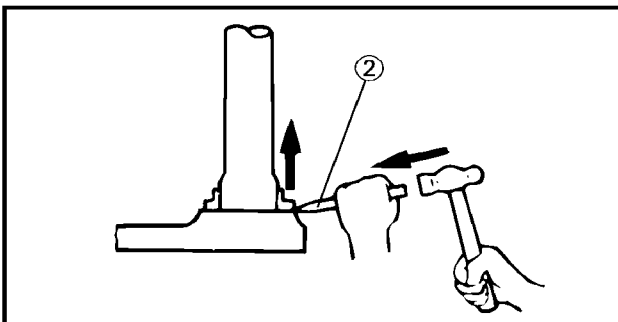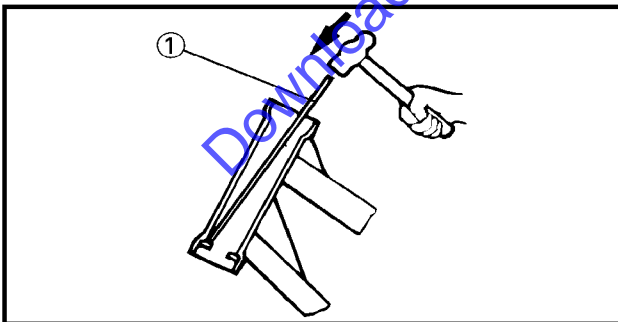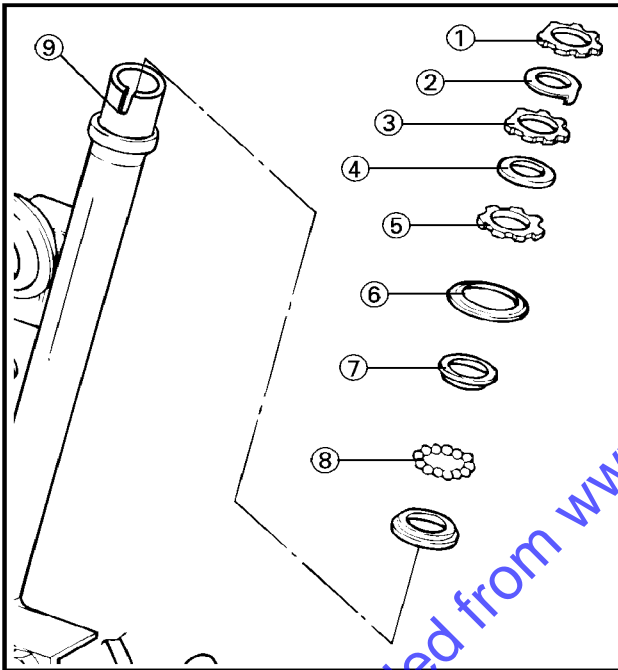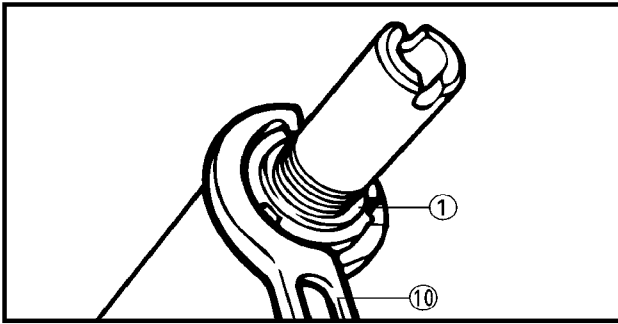

**STEERING REMOVAL**

**⚠ WARNING**

- Securely support the scooter so that there is no danger of it falling over.
- Stand the scooter on a level surface.

1. Removal:

- Ring nut 1 ①
- Special washer ②
- Ring nut 2 ③
- Rubber washer ④
- Ring nut 3 ⑤
- Bearing cover ⑥
- Ball race ⑦
- Ball ⑧
- Front fork assembly ⑨

**NOTE:**

- Remove the ring nuts by steering nut wrench.

	Steering nut wrench ⑩ YU-33975
--	-----------------------------------

- Hold the lower bracket by hand, then remove by using the steering nut wrench ⑩.
- Do not loss the balls (Upper: 22 pcs, Lower: 19 pcs).

2. Remove

- Front fork assembly  
Refer to "FRONT FORK" section.

3. Remove

- Ball race

\*\*\*\*\*

**Ball race replacement steps:**


- Remove the ball races on the head pipe using long rod ① and the hammer as shown.
- Remove the ball races on the under bracket using the floor chisel ② and the hammer as shown.

\*\*\*\*\*

**STEERING INSPECTION**

1. Wash the bearing races with a solvent.
2. Inspect:
  - Ball race
  - Ball
 Pitting/Damage → Replace.


**NOTE:** \_\_\_\_\_  
 Always replace bearings and races as set.

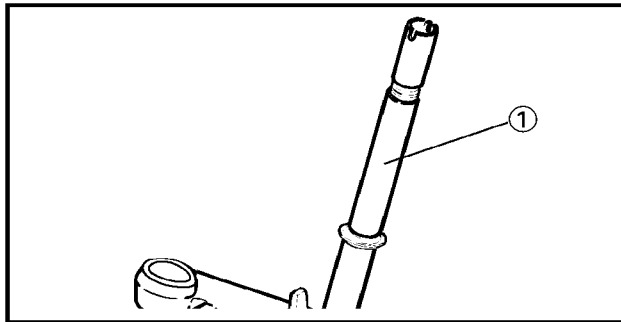

3. Inspect:
  - Under bracket ①
 Crack/Bend/Damage → Replace.

**⚠ WARNING** \_\_\_\_\_

**Do not attempt to straighten a bent under bracket as this may dangerously weaken the under bracket.**

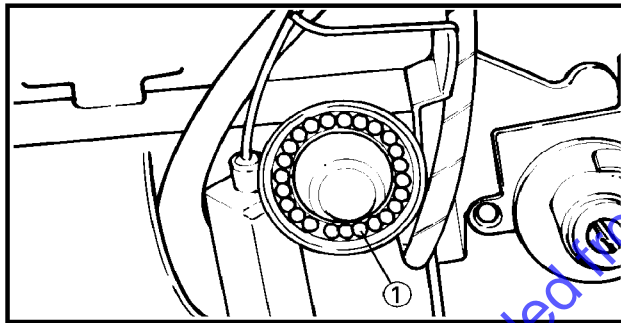


**STEERING INSTALLATION**

1. Install:
  - Ball ①


**NOTE:** \_\_\_\_\_  
 Upper.....22 pcs  
 Lower..... 19 pcs

2. Lubricate
  - Ball
  - Ball race

 Lithium soap base grease


Downloaded from www.ScooterTime.net



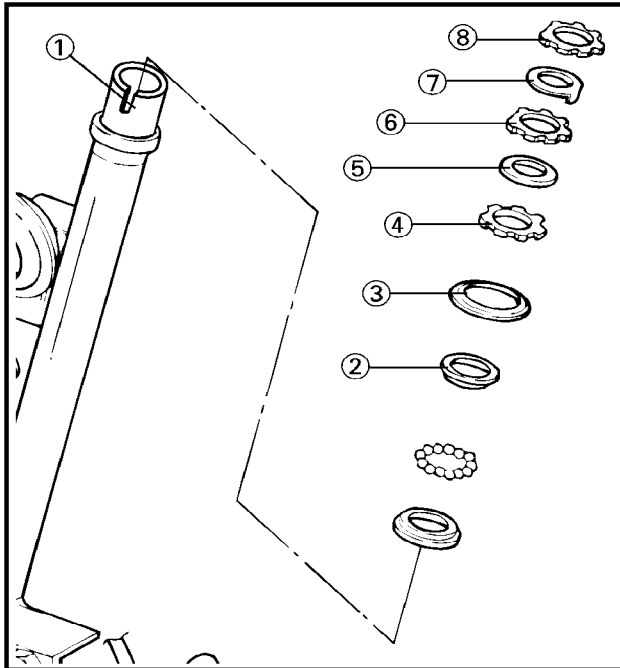


3. Install:
- Front fork assembly ①
  - Ball race (Upper) ②
  - Bearing cover ③
  - Ring nut 3 ④
  - Rubber washer ⑤
  - Ring nut 2 ⑥
  - Special washer ⑦
  - Ring nut 1 ⑧

**NOTE:** \_\_\_\_\_  
 Securely support the steering shaft so that there is no danger of it falling down.  
 \_\_\_\_\_

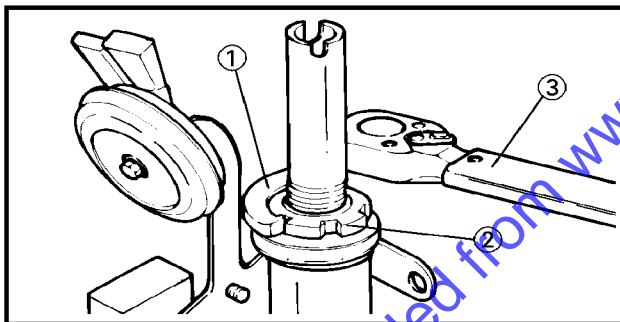

4. Tighten:
- Ring nuts
- \*\*\*\*\*
- Tighten steps:
- Tighten the ring nut 3 ② using the ring nut wrench ①

 22 Nm (2.2 m.kg, 16 ft.lb)




Steering nut wrench:  
YU-33975

**NOTE:** \_\_\_\_\_  
 Set the torque wrench ③ to ring nut wrench ① so that they form right angle.  
 \_\_\_\_\_

**⚠ WARNING** \_\_\_\_\_

**Do not over-tightening.**  
 \_\_\_\_\_

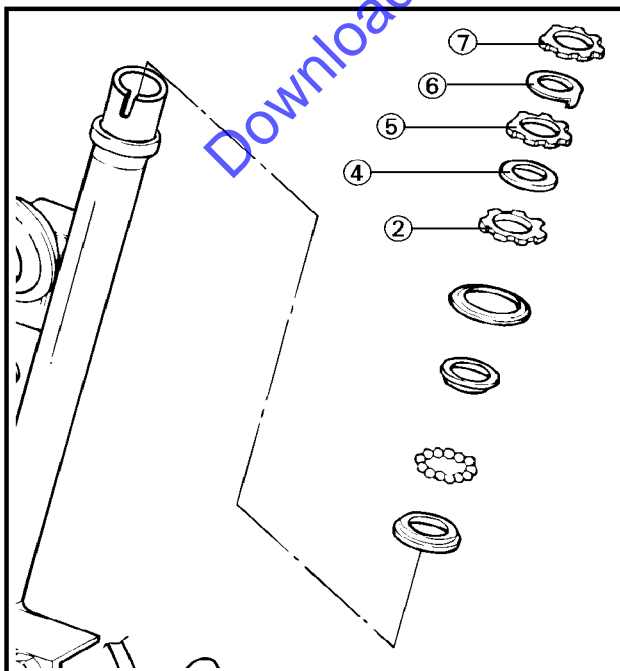

- Loosen the ring nut 3 ② 1/4 turn.
- Check the front fork by turning it lock to lock. If there is any binding, remove the front fork assembly and inspect the steering ball bearings and ball races.
- Install rubber washer ④ and ring nut 2 ⑤, then turn the ring nut 2 until it contacts with rubber washer.

**CAUTION:** \_\_\_\_\_


Slots on the ring nut 2 and ring nut 3 should be align. If not, turn the ring nut 2 towards tighten direction until slots alignment.

- Install special washer ⑥

**NOTE:** \_\_\_\_\_

Insert the projections of the special washer into the slots.


- Install ring nut 1 ⑦ and tighten.

 66Nm (6.6 m.kg, 47.8 ft.lb)

\*\*\*\*\*


Downloaded from www.ScooterTime.net

**FRONT FORK**  
FRONT FORK

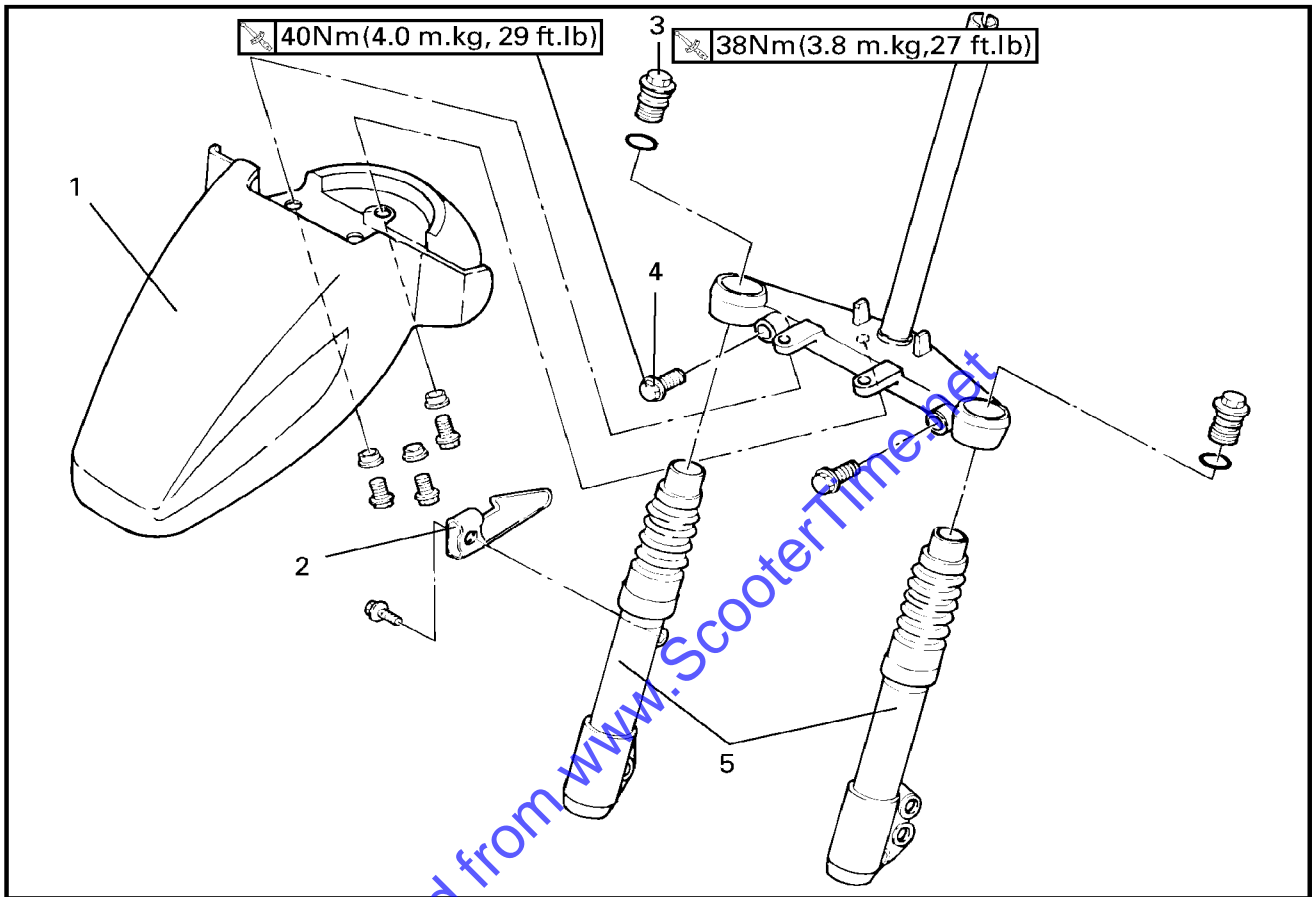




Order	Job name/Part name	Q'ty	Remarks
	Front fork removal		Remove the parts in order. Refer to "Steering" section.  Refer to "FRONT FORK REMOVAL/INSTALLATION" section.  Reverse the removal procedure for installation.
1	Steering Under fender	1	
2	Speedometer cable holder	1	
3	Cap bolt	2	
4	Pinch bolt	2	
5	Front fork	2	

FRONT FORK DISASSEMBLY

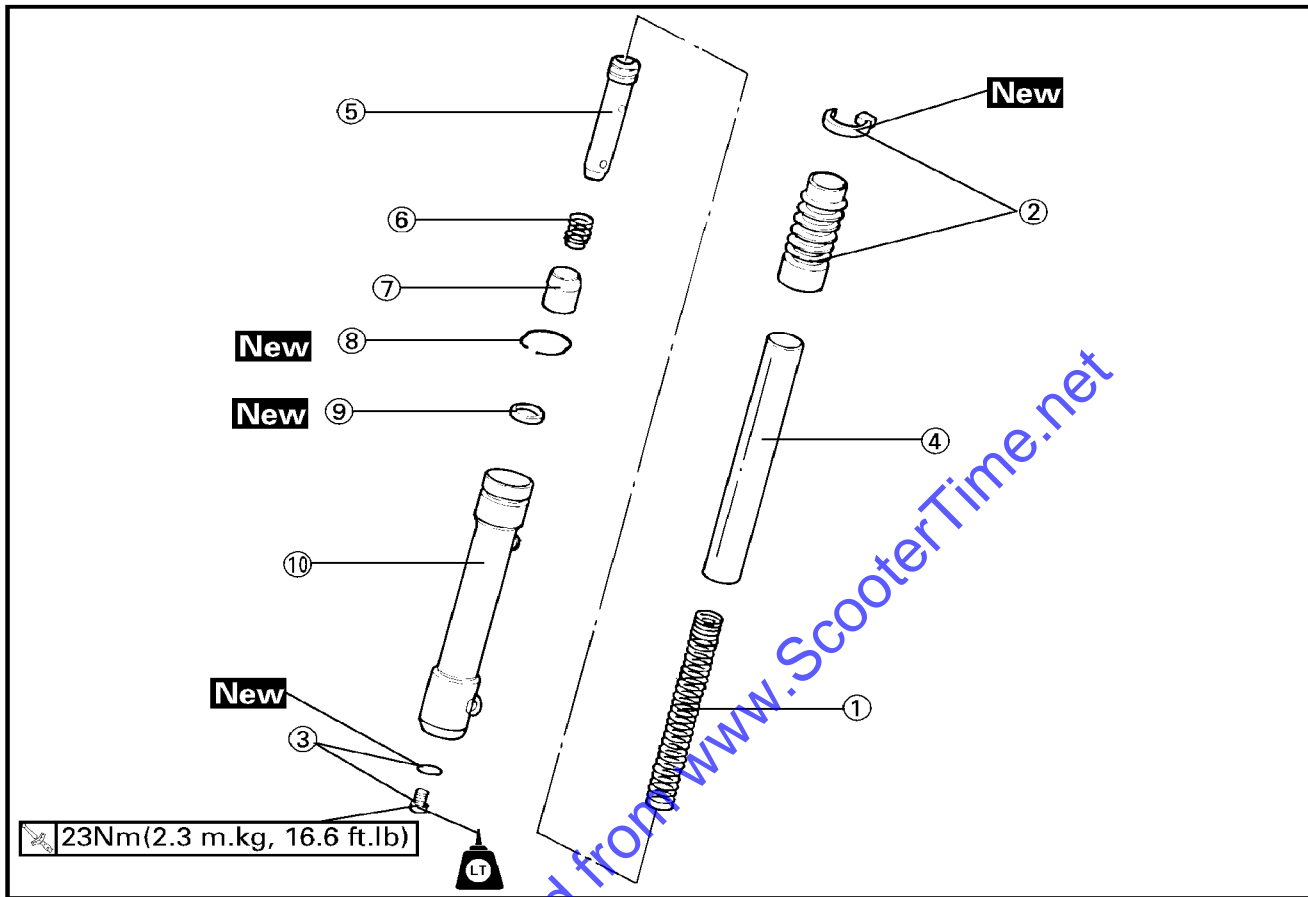

6

Order	Job name/Part name	Q'ty	Remarks
①	Front fork disassembly Fork spring	1	Remove the parts in order. Refer to "FRONT FORK REMOVAL/INSTALLATION" section.  Refer to "FRONT FORK DISASSEMBLY/ASSEMBLY" section.  Reverse the disassembly procedure for assembly.
②	Band/Front fork boot	1	
③	Bolt/Copper washer	1/1	
④	Inner tube	1	
⑤	Damper rod	1/1	
⑥	Rebound spring	1	
⑦	Oil lock piece	1/1	
⑧	Oil seal clip	1	
⑨	Oil seal	1	
⑩	Outer tube	1	

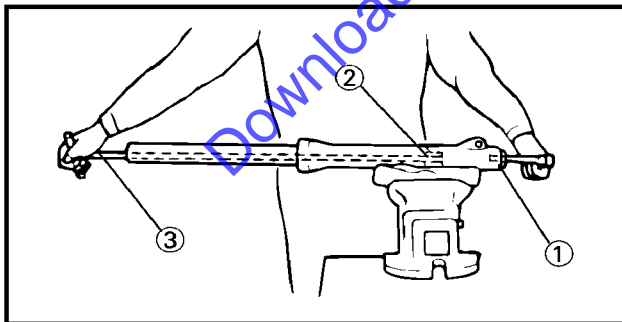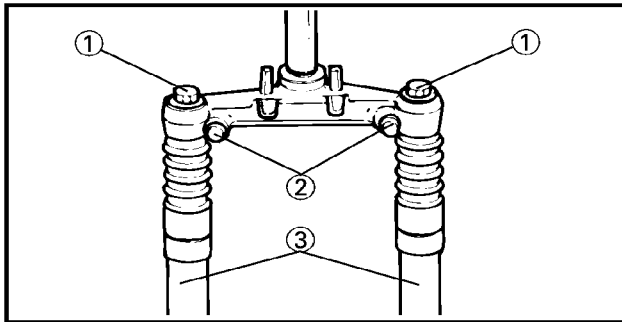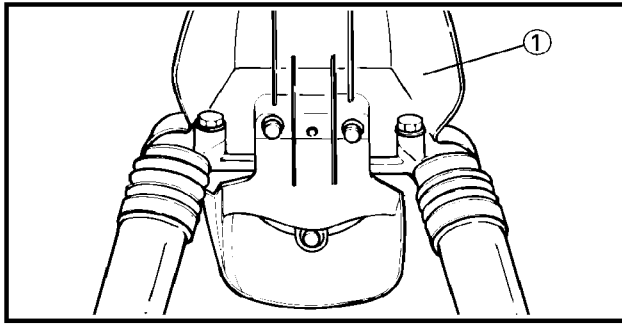

YP.....

**FRONT FORK REMOVAL**

**⚠ WARNING**

- Securely support the scooter so there is no danger of it falling over.
- Stand the scooter on a level surface.
- Stand the scooter on its centerstand.

1. Remove:
  - Under fender ①

2. Remove:
  - Cap bolt ①
  - Pinch bolt ②

**⚠ WARNING**

Fork spring will jump out after removing cap bolt.

3. Remove:
  - Front fork (Left/Right) ③


YP703020

**FRONT FORK DISASSEMBLY**


1. Remove:
  - Bolt (damper rod) ①
 Loosen the bolt (damper rod) ① while holding the damper rod with T-handle ③ and holder ②.



T-handle  
YM-1326  
Holder  
YM-01300-1

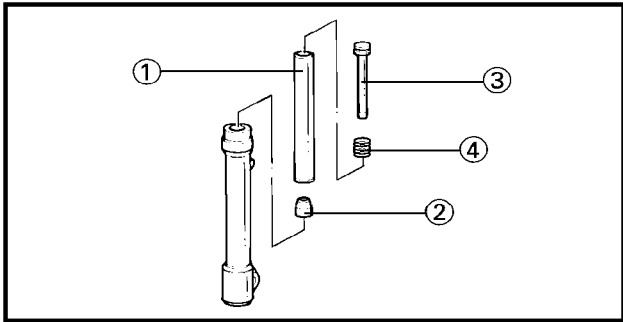


2. Remove:
- Inner tube ①
  - Oil lock pice ②
  - Damper rod ③
  - Rebound spring ④

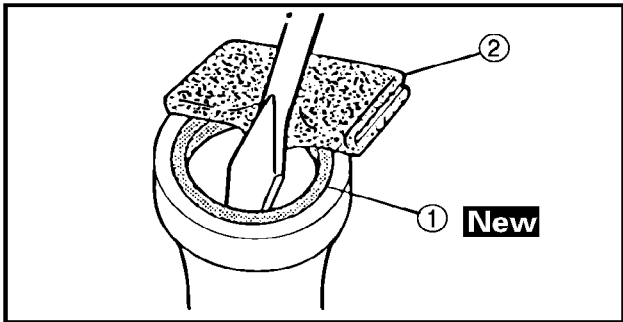

3. Remove:
- Oil seal ① **New**

**CAUTION:** \_\_\_\_\_  
**Never reuse the oil seal.** \_\_\_\_\_


② Rag

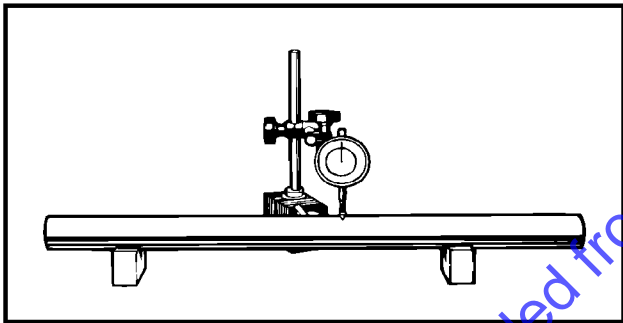

YP703030

**FRONT FORK INSPECTION**


1. Inspect:
- Inner tube bending

	Inner tube bending limit: 0.2 mm(0.008 in)
---	---

Scratches/bends/damage→Replace.

**⚠ WARNING** \_\_\_\_\_

**Do not attempt to straighten a bent inner tube as this may dangerously weaken the tube.**

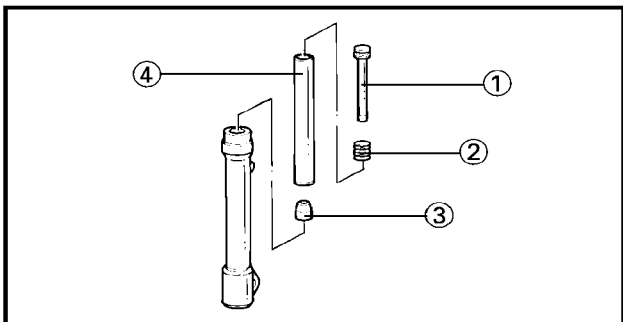


YP.....


**FRONT FORK ASSEMBLY**

Reverse the "DISASSEMBLY" procedure.  
 Note the following points.


1. Install:
- Damper rod ①
  - Rebound spring ②
  - Oil lock piece ③
  - Inner tube ④

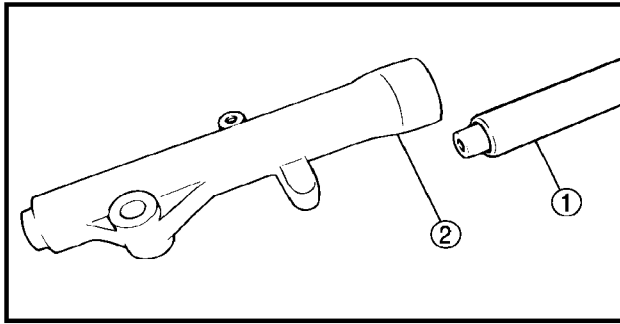


2. Install:
- Inner tube ①
  - Into outer tube ②.

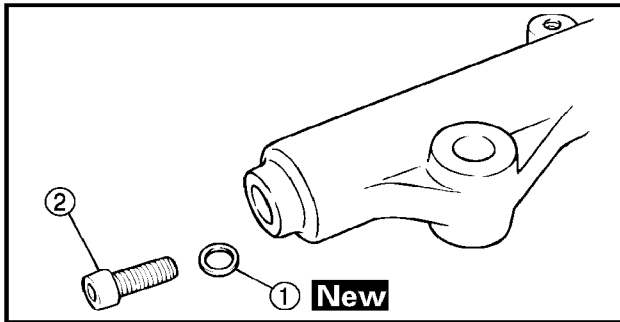


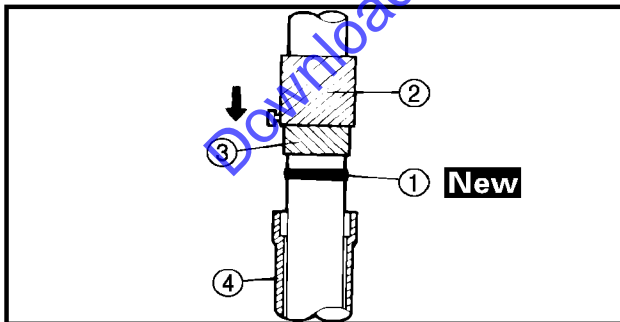
3. Install:
- Plain washer ① **New**
  - Bolt (damper rod) ②

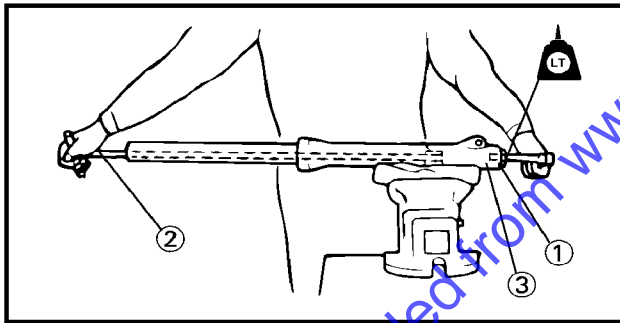

4. Tighten:
- Bolt (damper rod) ①
- NOTE:**  23Nm(2.3 m.kg, 16.6ft.lb)

Tighten the damper rod bolt ① while holding the damper rod with a T-handle ② and holder ③.

	T-handle YM-01326-A
	Holder YM-01300-1




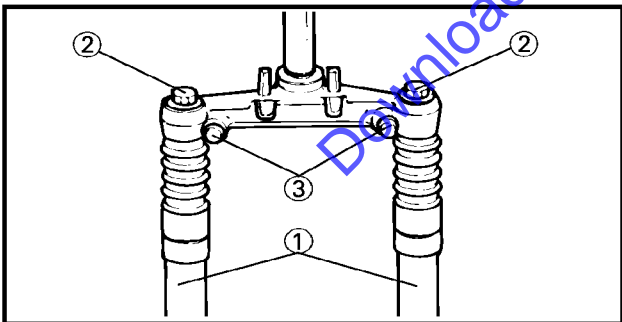
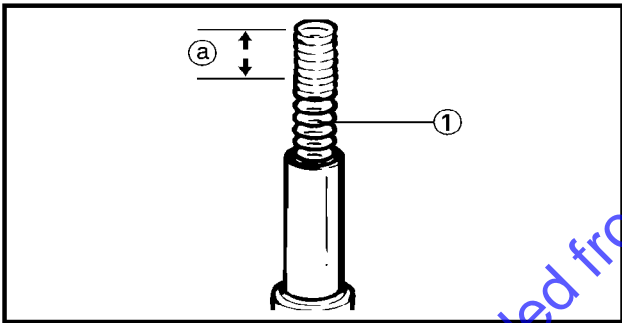
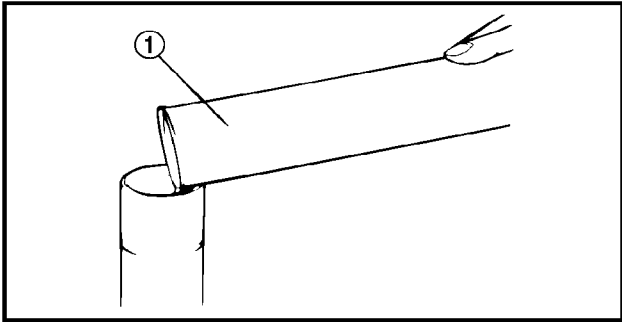
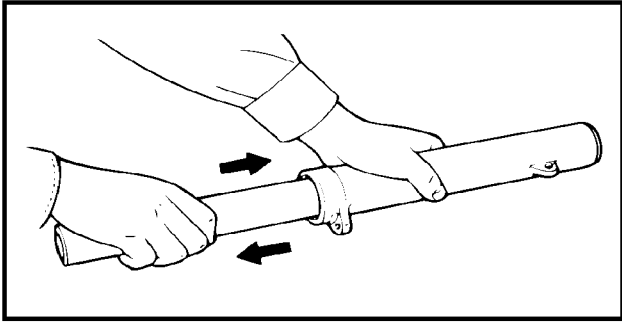
5. Install:
- Oil seal ① **New**
  - Retaining clip ②
  - Use the fork seal driver weight ③ and the attachment ④.

- NOTE:**
- Before installing the oil seal ①, apply lithium soap base grease onto the oil seal lips.
  - Adjust the retaining clip so that it fits into the outer tube groove.

**CAUTION:**


Make sure that the oil seal numbered side faces upward.

	Fork seal driver weight: YM-33963
	Attachment: YM-01400



6. Inspect:
- Inner tube operation  
Unsmooth operation → Disassembly and recheck.

7. Fill:
- Fork oil ①

	Oil quantity:
	88 cc
	Recommended oil:
Fork oil 10 W or equivalent	

8. After filling up, slowly pump the fork up and down to distribute the fork oil.

9. Install:
- Front fork spring ①

- NOTE:**
- Install the fork spring with its smaller pitch @ upward .
  - Before installing the cap bolt, apply grease to the O-ring.
  - Temporarily tighten the cap bolt.

EB703050

**FRONT FORK INSTALLATION**



Reverse the "REMOVAL" procedure.

Note the following points.

1. Install:
- Front fork ①

- NOTE:**
- Apply grease onto cap bolt O-ring before installing cap bolt.

2. Tighten:
- Cap bolts ②
  - Pinch bolts ③


	38Nm(3.8 m.kg, 27 ft.lb)
	40Nm(4.0 m.kg, 29 ft.lb)




ELECTRICAL

ELECTRICAL COMPONENTS

- ① Main switch
- ② Flasher relay
- ③ Oil level gauge
- ④ C.D.I. UNIT
- ⑤ Fuel level gauge
- ⑥ Starter relay
- ⑦ Fuse
- ⑧ Battery
- ⑨ Ignition coil
- ⑩ Rectifier/Regulator
- ⑪ Horn

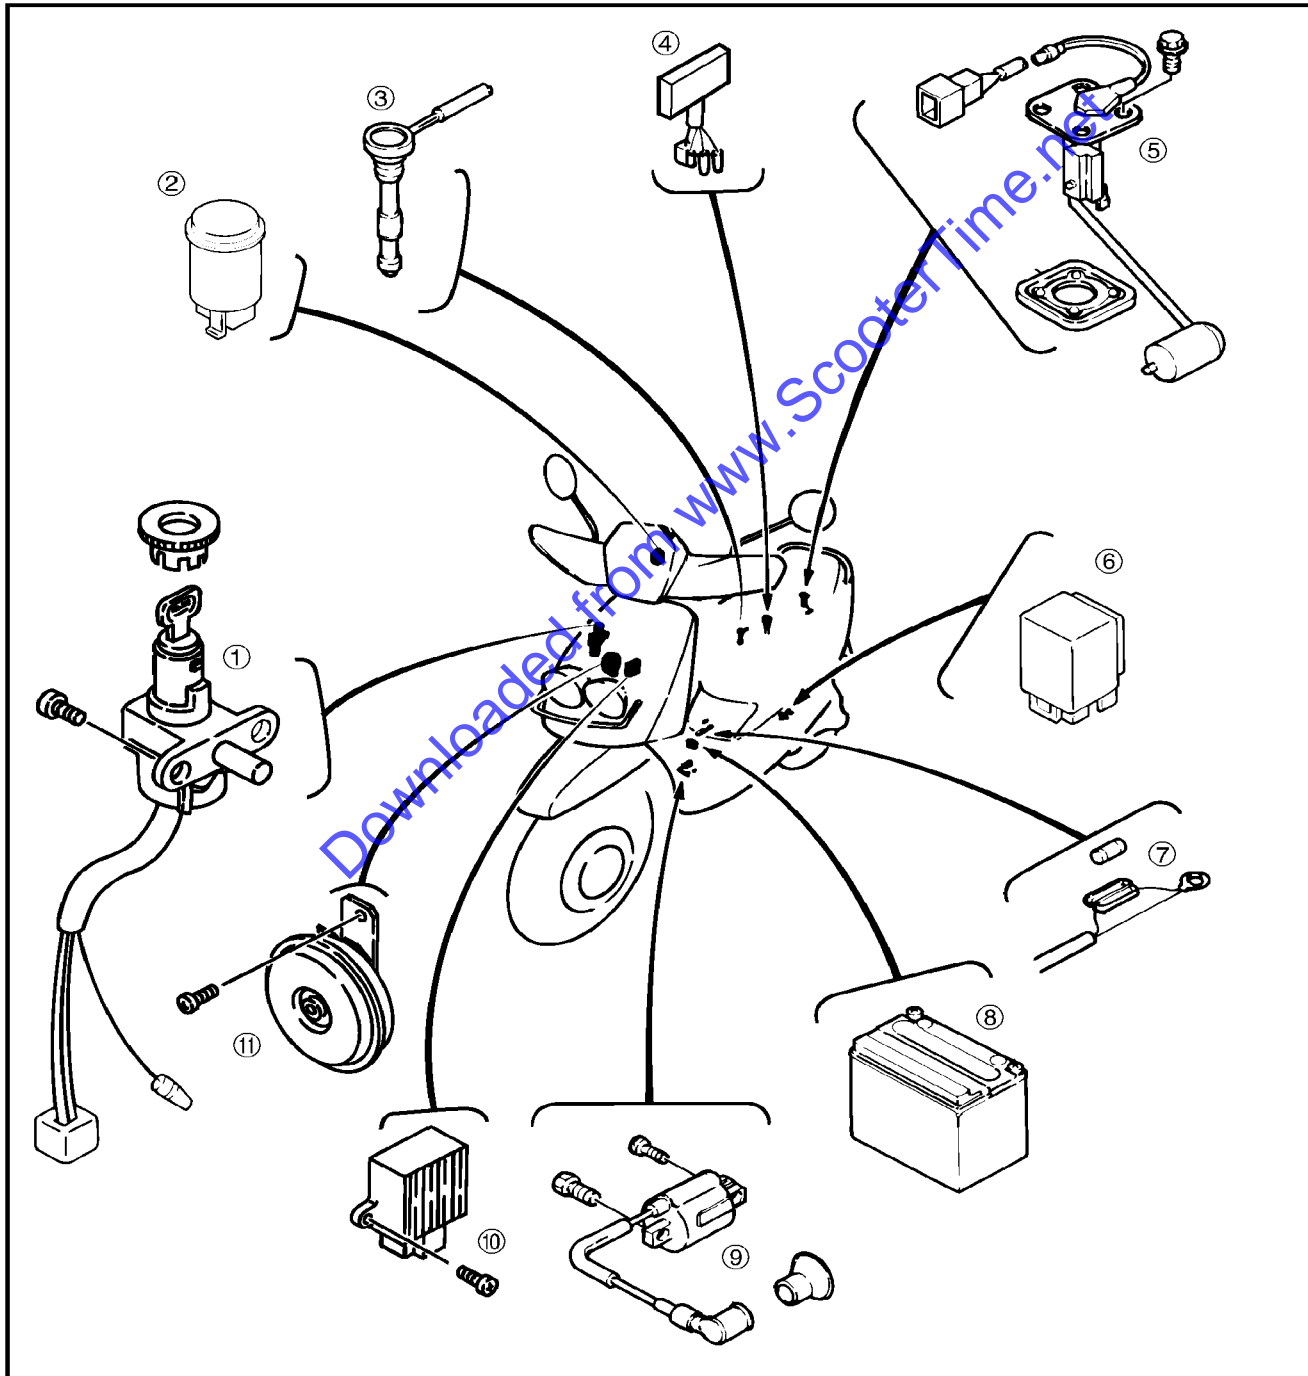



CIRCUIT DIAGRAM

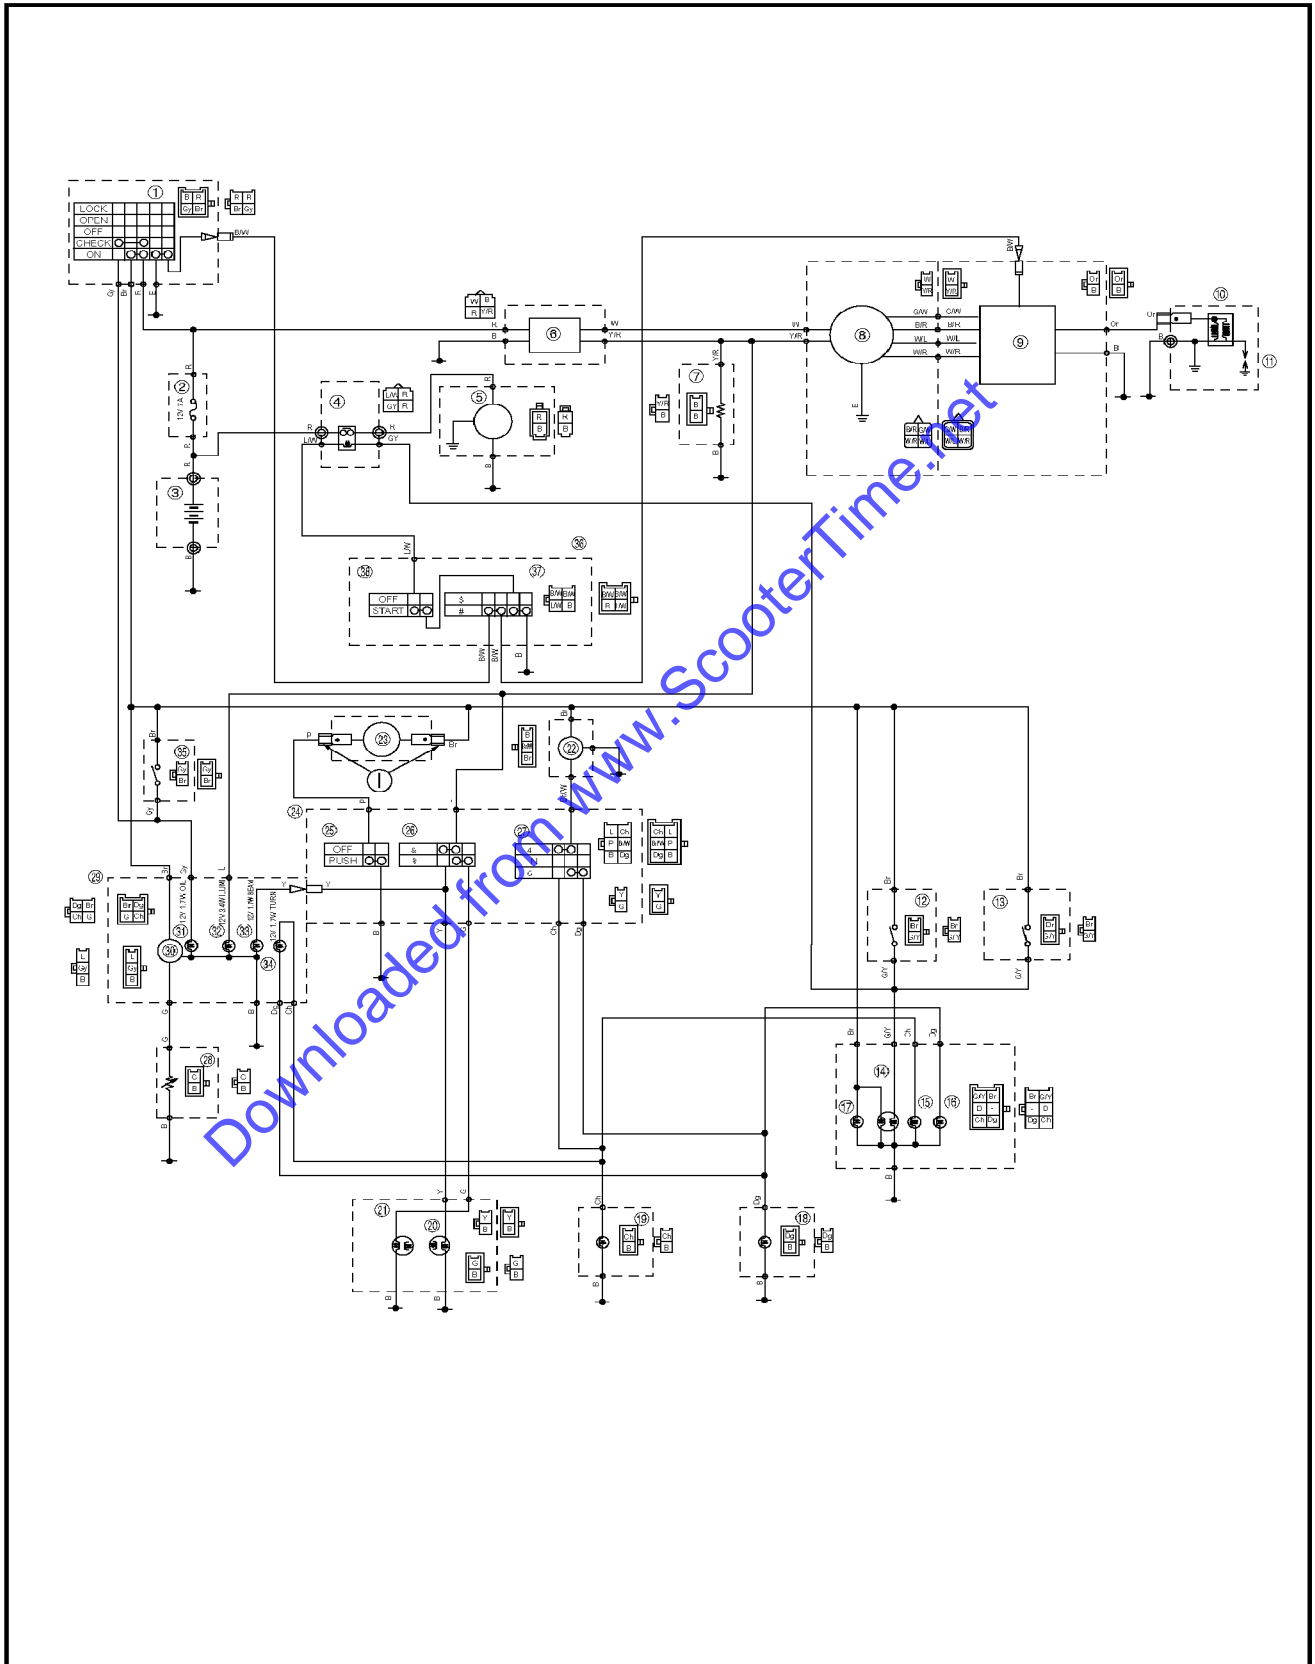

- ① Main switch
- ② Main fuse
- ③ Battery
- ④ Starter relay
- ⑤ Starter motor
- ⑥ Rectifier regulator
- ⑦ Auto choke
- ⑧ C.D.I. magneto
- ⑨ C.D.I. unit
- ⑩ Ignition coil
- ⑪ Spark plug
- ⑫ Rear brake switch
- ⑬ Front brake switch
- ⑭ Tail/Brake light
- ⑮ Rear flasher light(left)
- ⑯ Rear flasher light(right)
- ⑰ Licence light
- ⑱ Front flasher light(right)
- ⑲ Front flasher light(left)
- ⑳ Head light(for high beam)
- ㉑ Head light(for low beam)
- ㉒ Flasher relay
- ㉓ Horn
- ㉔ Handlebar switch (left)
- ㉕ Horn switch
- ㉖ Dimmer switch
- ㉗ Turn switch
- ㉘ Fuel sender
- ㉙ Meter
- ㉚ Fuel gauge
- ㉛ Oil indicator light
- ㉜ Meter light
- ㉝ High beam indicator light
- ㉞ Turn indicator light
- ㉟ Oil level gauge
- ㊱ Handlebar switch (right)
- ㊲ Starter switch
- ㊳ Engine stop switch

**COLOR CODE**

B	Black	Gy	Gray	L/R	Blue/ Red
Br	Brown	Y	Yellow	R/B	Red/Black
Ch	Chocolate	W	White	R/Y	Red/Yellow
Dg	Dark Green	B/R	Black/Red	R/W	Red/white
G	Green	Br/W	Brown/White	Y/R	Yellow/White
L	Blue	G/R	Green/Red	W/G	White/Green
Or	Orange	G/Y	Green/Yellow	G/W	Green/White
Sb	Sky blue	L/B	Blue/Black	W/R	White/Red
P	Pink	L/Y	Blue/Yellow	L/G	Blue/Green
R	Red	L/W	Blue/White		

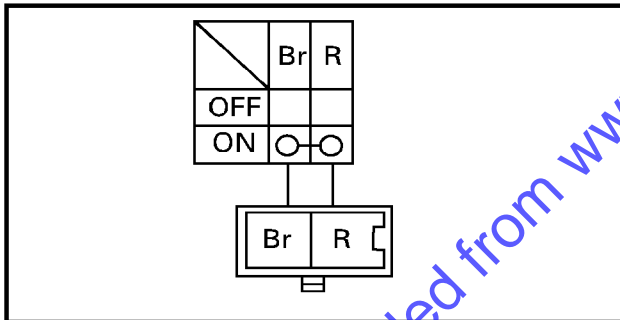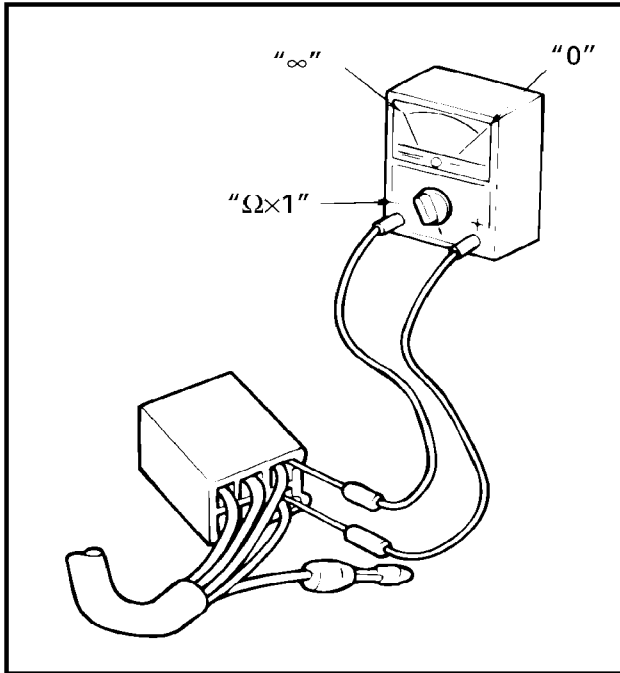


YP-N

**CHECKING SWITCHES**

**CHECKING STEPS**

Using pocket tester, check switches for continuity between their terminals to determine whether they are correctly connected. Replace the switch component if any of the combinations does not produce the correct reading.

	Pocket tester: YU-03112
---	----------------------------

**NOTE:**

- Turn the switch to the "ON", "OFF" positions several times
- Adjust the pocket tester to correct "0" position before checking switches.
- Set the pocket tester selector to "×1"Ω.

**SWITCH CONNECTION AS SHOWN IN THIS MANUAL**

This manual contains connection charts, like the one shown on the left, showing the terminal connections of switches (e.g. the main switch, handlebar switch, brake switch, lighting switch etc.)

The column on the extreme left indicates the different switch positions, the top line indicates the colors of the leads connected to the terminals on the switch.

"○—○" indicates terminals between which there is continuity, i.e. a closed circuit, in the given switch position.

In this chart:

"Br and R" have continuity with the switch in the "ON" position.



Downloaded from www.ScotTime.net

SWITCH POSITION AND TERMINAL CONNECTION


Before checking a switch refer to the checking switches as shown in the left page and check for the correct terminal connections (closed circuit) according to the color combinations shown in the chart. Poor connection, fault → Repair or replace.

**Main switch**


	Gy	Br	R	B	B/W
LOCK					
OPEN					
OFF					
*	○		○		
ON		○	○	○	○

**Rear brake switch**

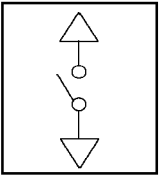

**Front brake switch**

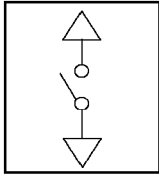

**Horn switch**

	P	B
Release		
Push in	○	○

Ch	L
Br/W	P
Dg	B

**Dimmer switch**

	G	L	Y
		○	○
	○	○	

**Turn switch**

	Ch	Br/W	Dg
←	○	○	
-			
→		○	○



**Start switch**

	L/W	L/G
Release		
Push in	○	○

**Engine stop switch**

	B/W	B/W	L/G	B
OFF				
RUN	○	○	○	○

**Fuse**

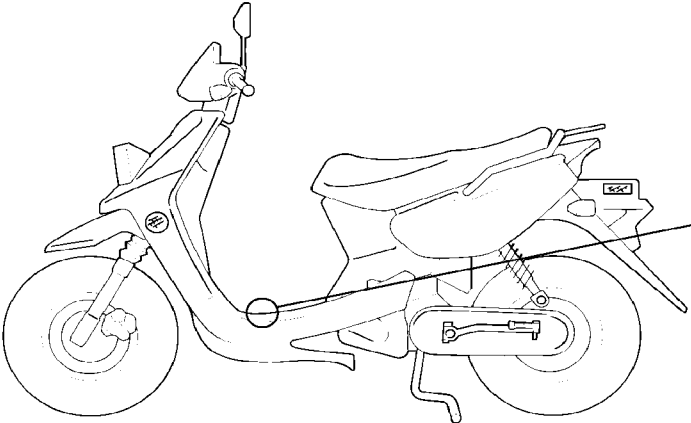Downloaded from www.ScooterTime.net



EAS00733



## CHECKING THE BULBS AND BULB SOCKETS

Check each bulb and bulb socket for damage or wear, proper connections, and also for continuity between the terminals.

Damage/wear → Repair or replace the bulb, bulb socket or both.

Improperly connected → Properly connect.


No continuity → Repair or replace the bulb, bulb socket or both.

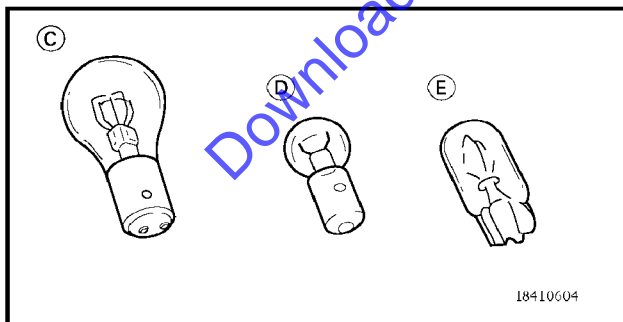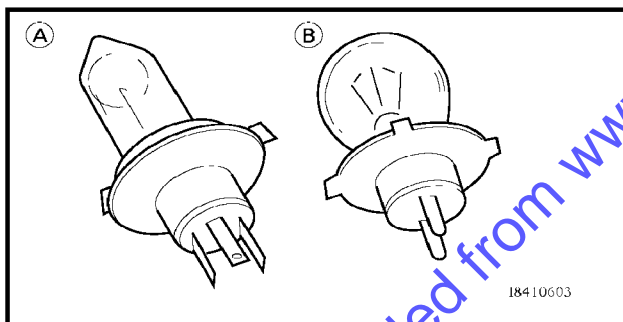

### TYPES OF BULBS

The bulbs used on this scooter are shown in the illustration on the left.

- Bulbs (A) and (B) are used for the headlights and usually use a bulb holder that must be detached before removing the bulb. The majority of these types of bulbs can be removed from their respective socket by turning them counterclockwise.
- Bulbs (C) are used for turn signal and tail/brake lights and can be removed from the socket by pushing and turning the bulb counterclockwise.
- Bulbs (D) and (E) are used for meter and indicator lights and can be removed from their respective socket by carefully pulling them out.



**CHECKING THE CONDITION OF THE BULBS**

The following procedure applies to all of the bulbs.

1. Remove:
  - bulb

**⚠ WARNING**

Since the headlight bulb gets extremely hot, keep flammable products and your hands away from the bulb until it has cooled down.

**CAUTION:**

- Be sure to hold the socket firmly when removing the bulb. Never pull the lead, otherwise it may be pulled out of the terminal in the coupler.
- Avoid touching the glass part of the headlight bulb to keep it free from oil, otherwise the transparency of the glass, the life of the bulb, and the luminous flux will be adversely affected. If the headlight bulb gets soiled, thoroughly clean it with a cloth moistened with alcohol or lacquer thinner.

2. Check:
  - bulb (for continuity)  
(with the pocket tester)  
No continuity → Replace.



Pocket tester  
YU-03112


**NOTE:**

Before checking for continuity, set the pocket tester to "0" and to the " $\Omega \times 1$ " range.

\*\*\*\*\*


- a. Connect the positive tester probe to terminal ① and the negative tester probe to terminal ②, and check the continuity.
- b. Connect the positive tester probe to terminal 1 and the negative tester probe to terminal ③, and check the continuity.
- c. If either of the readings indicate no continuity, replace the bulb.

\*\*\*\*\*

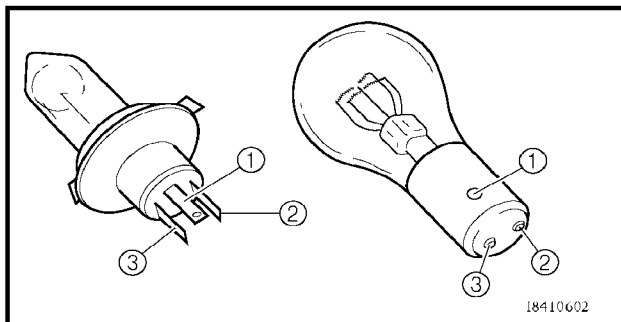

18410602

Downloaded from www.SchoolTime.net



**CHECKING THE CONDITION OF THE BULB SOCKETS**

The following procedure applies to all of the bulb sockets.

1. Check:
  - bulb socket (for continuity)  
(with the pocket tester)
 No continuity → Replace.



Pocket tester  
YU-03112

**NOTE:**

Check each bulb socket for continuity in the same manner as described in the bulb section; however, note the following.

\*\*\*\*\*


- a. Install a good bulb into the bulb socket.
- b. Connect the pocket tester probes to the respective leads of the bulb socket.
- c. Check the bulb socket for continuity. If any of the readings indicate no continuity, replace the bulb socket.


\*\*\*\*\*

Downloaded from www.ScopedTime.net



# IGNITION SYSTEM CIRCUIT DIAGRAM

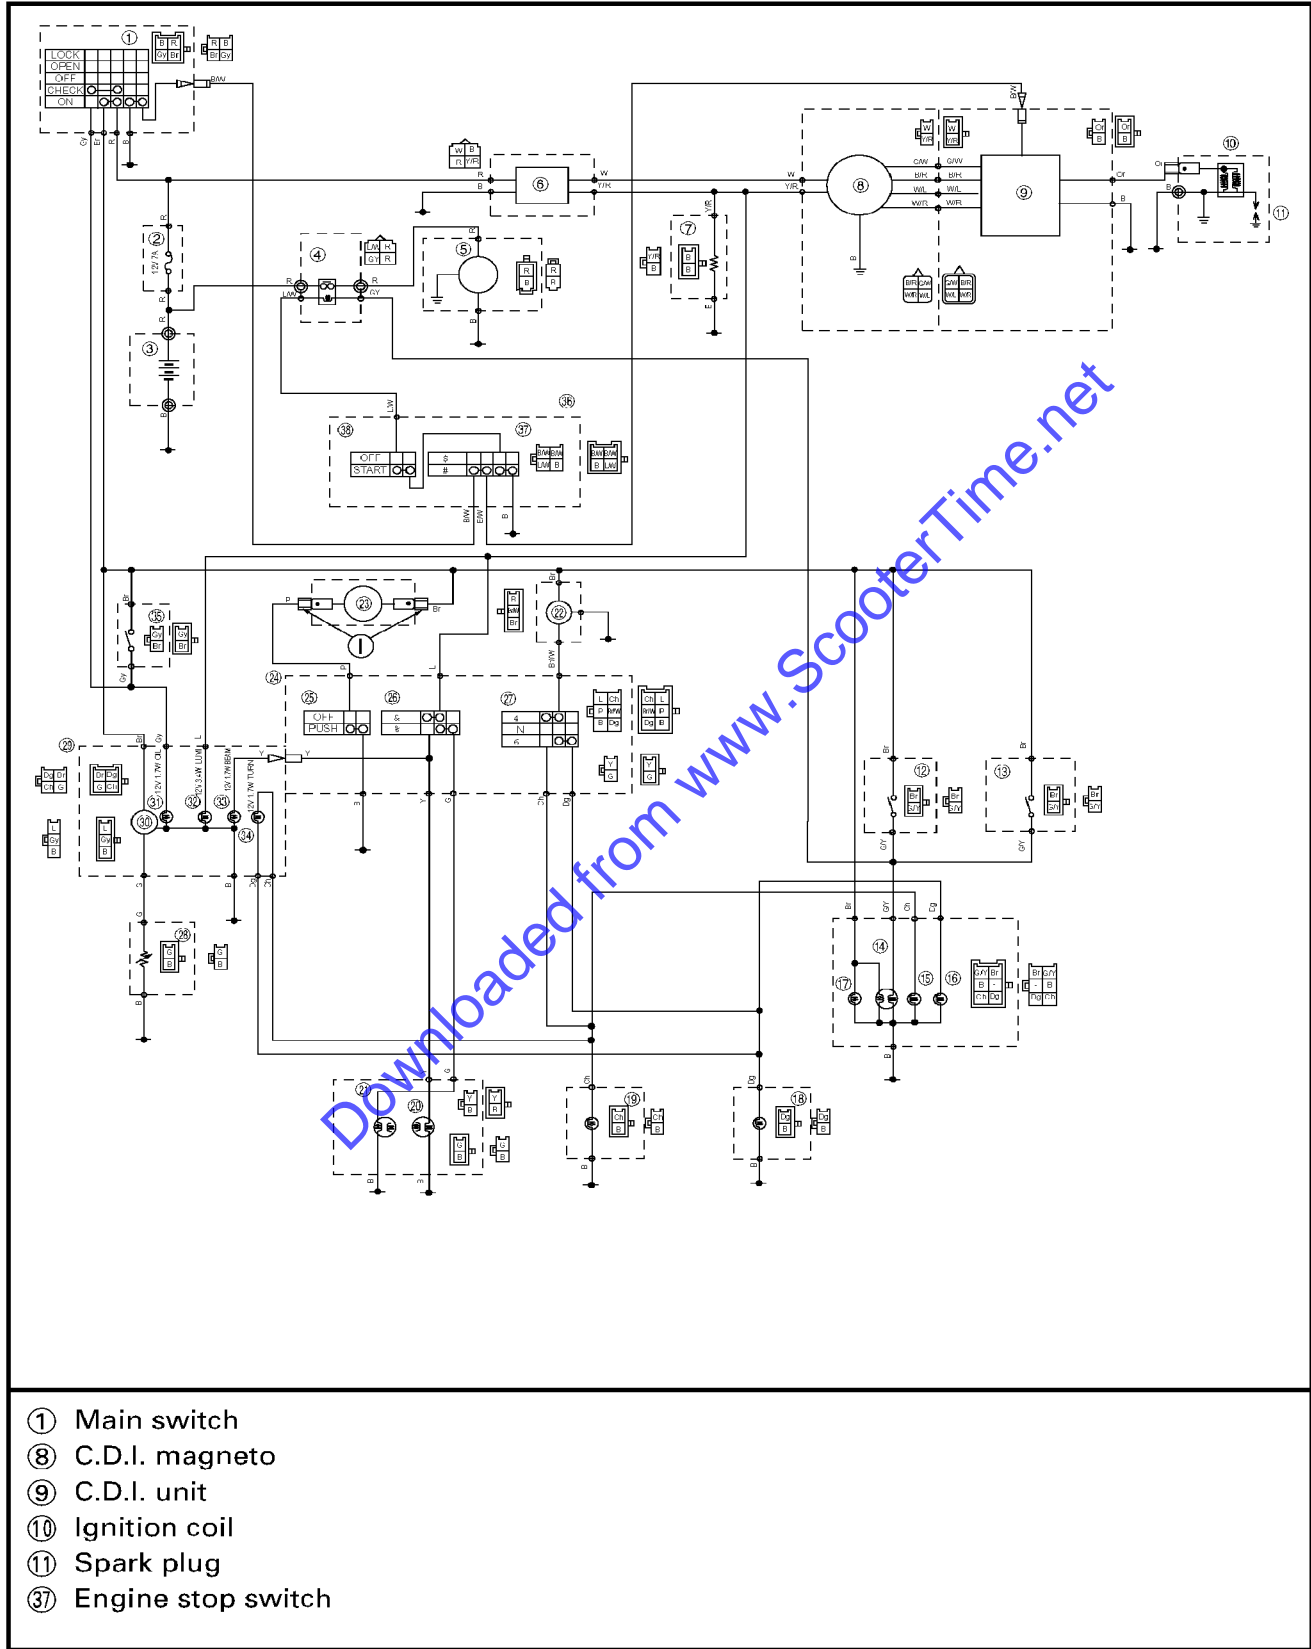



TROUBLESHOOTING

**IF IGNITION SYSTEM SHOULD BECOME INOPERATIVE  
(NO SPARK OR INTERMITTENT SPARK)**

**NOTE:**

- Remove the following parts before troubleshooting.
 

1) Battery box cover	4) Tail cover
2) Center cowling	5) Side cover (right)
3) Rear carrier	6) Handlebar cover (front)
- Use the following special tools in this troubleshooting.

Dynamic spark tester:  
YM-34487

Pocket tester:  
YU-03112

**1. Spark plug**

- Check the spark plug condition.
- Check the spark plug type.
- Check the spark plug gap.  
Refer to the "SPARK PLUG INSPECTION" section in the CHAPTER 3.

Standard spark plug:  
BPR7HS (NGK)

Spark plug gap:  
0.6~0.7 mm(0.02~0.03 in)


INCORRECT




Spark plug is faulty, replace it or repair plug gap.

**2. Ignition spark gap**

- Disconnect the spark plug cap from spark plug.
- Connect the dynamic spark tester ① as shown.
- ② Spark plug cap
- Check the ignition spark gap ①a.
- Start engine, and increase spark gap until misfire occurs.

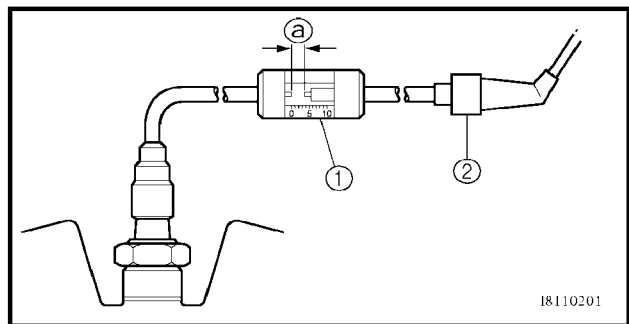

MEETS SPECIFICATION

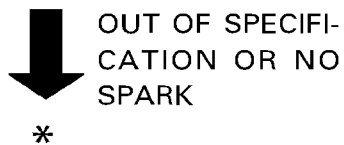


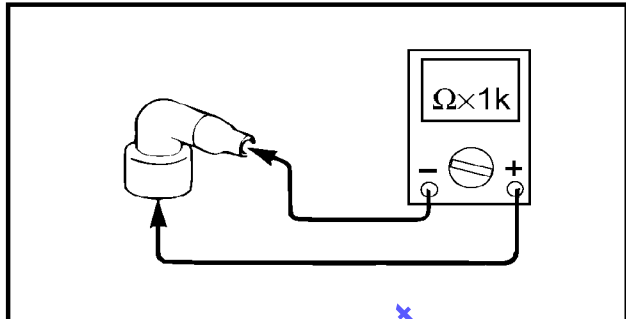
Ignition system is good.



**3. Spark plug cap resistance**

- Remove the spark plug cap.
- Connect the pocket tester ( $\Omega \times 1k$ ) to the spark plug cap.
- Check the spark plug cap for specified resistance.

 Spark plug cap resistance:  
5k $\Omega$  at 20°C (68°F)



OUT OF SPECIFICATION


 MEETS SPECIFICATION

**4. Ignition coil resistance**

- Disconnect the ignition coil leads from the ignition coil.
- Connect the pocket tester ( $\Omega \times 1$ ) to the ignition coil.

Ignition coil:  
Tester (+) lead → Terminal ①  
Tester (-) lead → Coil base ②


- Check the primary coil for specification resistance.

 Primary coil resistance:  
0.32~0.48  $\Omega$  at 20°C (68°F)



- Connect the pocket tester ( $\Omega \times 1k$ ) to the ignition coil.

Tester (+) lead → Spark plug lead ①  
Tester (-) lead → Coil base ②


- Check the secondary coil for specified resistance.

 Secondary coil resistance:  
5.68 ~ 8.52 k $\Omega$  at 20°C (68°F)  
(Spark plug lead - Coil base)



Replace spark plug cap.

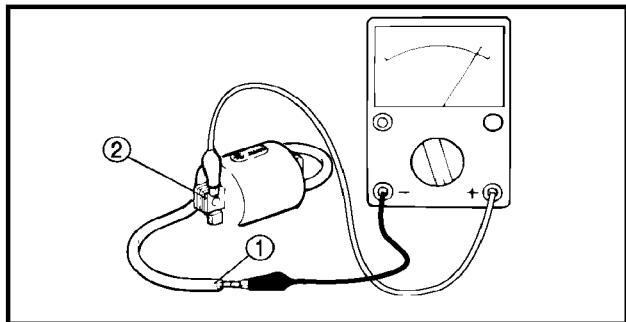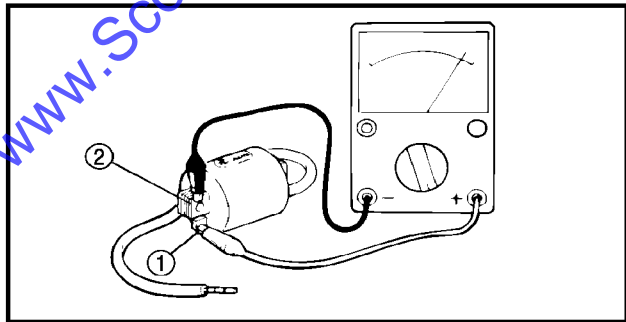

OUT OF SPECIFICATION

 BOTH MEET SPECIFICATIONS

Ignition coil is faulty, replace it.




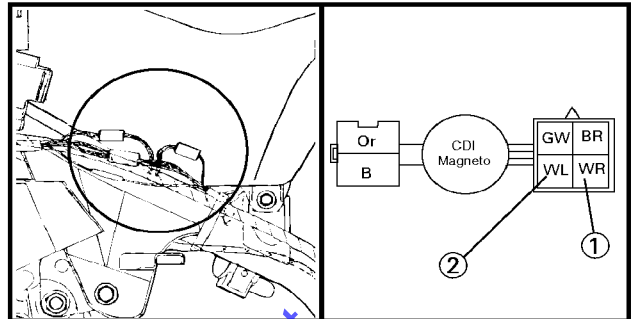
**5. Pickup coil resistance**

- Disconnect the pickup coil coupler from the wireharness.
- Connect the pocket tester ( $\Omega \times 100$ ) to the pickup coil terminal.

Tester (+) lead → White/Red lead ①  
 Tester (-) lead → White/Blue lead ②

- Check the pickup coil for specified resistance.

 Pickup coil resistance:  
 248 ~ 372  $\Omega$  at 20°C (68°F)  
 (White/Red-White/Blue)



OUT OF SPECIFICATION

MEET SPECIFICATION


Pickup coil is faulty, replace it.


**6. Source resistance**

- Disconnect the source coil coupler from the wireharness.
- Connect the pocket tester ( $\Omega \times 100$ ) to the source coil terminal.

Tester (+) lead → Black/Red lead ①  
 Tester (-) lead → Green/White lead ②

- Check the source coil for specified resistance.

 Source coil resistance:  
 640 ~ 960  $\Omega$  at 20°C (68°F)  
 (Black/Red - Green/White)

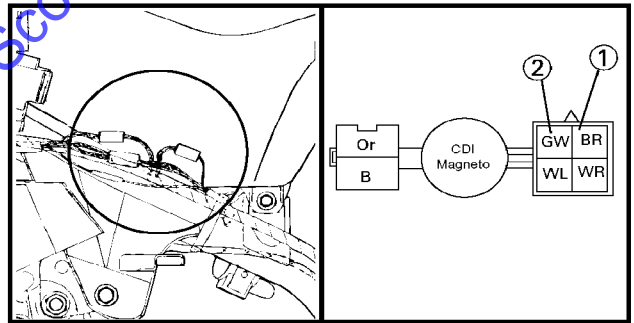

OUT OF SPECIFICATION

MEET SPECIFICATION

Source coil is faulty, replace it.



**7. Main switch**  
 Refer to "CHECKING SWITCHES" section.

NO CONTINUITY

CONTINUITY

\*

Main switch is faulty, replace it.



8. Engine stop switch  
Refer to "CHECKING SWITCHES" section.

NO CONTINUITY

Engine stop switch is faulty, replace it.



CONTINUITY

9. Wiring connection  
Check the entire ignition system for connections.  
Refer to the "WIRING DIAGRAM" section.

POOR CONNECTION

Correct.




CORRECT

Replace CDI unit.

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)





TROUBLESHOOTING

THE BATTERY IS NOT CHARGED.

NOTE:

- Remove the following parts before troubleshooting.
  - 1) Front protector bar
  - 2) Upper cover
  - 3) Rear carrier
  - 4) Tail cover
  - 5) Right side cover
- Use the following special tool (s) in this troubleshooting.

	Inductive tachometer: YU-8036-A
--	------------------------------------

	Pocket tester: YU-03112
--	----------------------------

1. Fuse (main)
<ul style="list-style-type: none"> <li>Remove the fuse.</li> <li>Connect the pocket tester (<math>\Omega \times 1</math>) to the fuse.</li> <li>Check the fuse for continuity.</li> </ul>

NO CONTINUITY

Fuse is faulty, replace it.
-----------------------------




2. Battery
<ul style="list-style-type: none"> <li>Check the battery condition</li> <li>Refer to the "BATTERY INSPECTION" section in the CHAPTER 3.</li> </ul>
Open circuit voltage: 12.8V or more at 20°C (68°F)



INCORRECT

<ul style="list-style-type: none"> <li>Clean battery terminals.</li> <li>Recharge or replace battery.</li> </ul>
--



\*

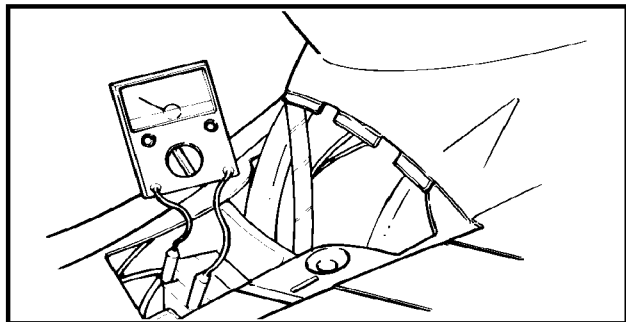




**3. Charging voltage**

- Connect the inductive tachometer to the spark plug lead.
- Connect the pocket tester (DC20V) to the battery.


Tester (+) lead → Battery (+) terminal  
Tester (-) lead → Battery (-) terminal

- Start the engine and accelerate to about 5,000 r/min.
- Check charging voltage.

 Charging voltage:  
13 ~ 14 V at 4,000 r/min

**NOTE:** \_\_\_\_\_  
Use a full charged battery.  
\_\_\_\_\_

MEETS SPECIFICATION



Charging circuit is good.


OUT OF SPECIFICATION

**4. Charging coil and lighting coil resistance**

- Disconnect the charging coil coupler from the wireharness.
- Connect the pocket tester " $\Omega \times 1$ " to the charging coils.
- Measure the charging coil and lighting coil resistance.

Charging coil resistance:  
Tester (+) lead → White lead ①  
Tester (-) lead → Earth


Lighting coil resistance:  
Tester (+) lead → Yellow/Red ②  
Tester (-) lead → Earth

 Charging coil resistance:  
0.48~0.72  $\Omega$  at 20°C (68°F)  
Lighting coil resistance:  
0.4~0.6  $\Omega$  at 20°C (68°F)

OUT OF SPECIFICATION





Charging coil is faulty, replace it.

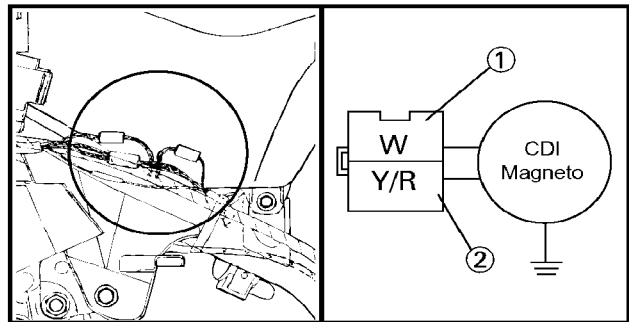

MEET SPECIFICATION

\*





5. Wiring connection  
Check the entire ignition system for connections.  
Refer to the "WIRING DIAGRAM" section.

POOR CONNECTION




OK


Correct.

Replace rectifier regulator.


Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)



**ELECTRIC STARTING SYSTEM  
CIRCUIT DIAGRAM**

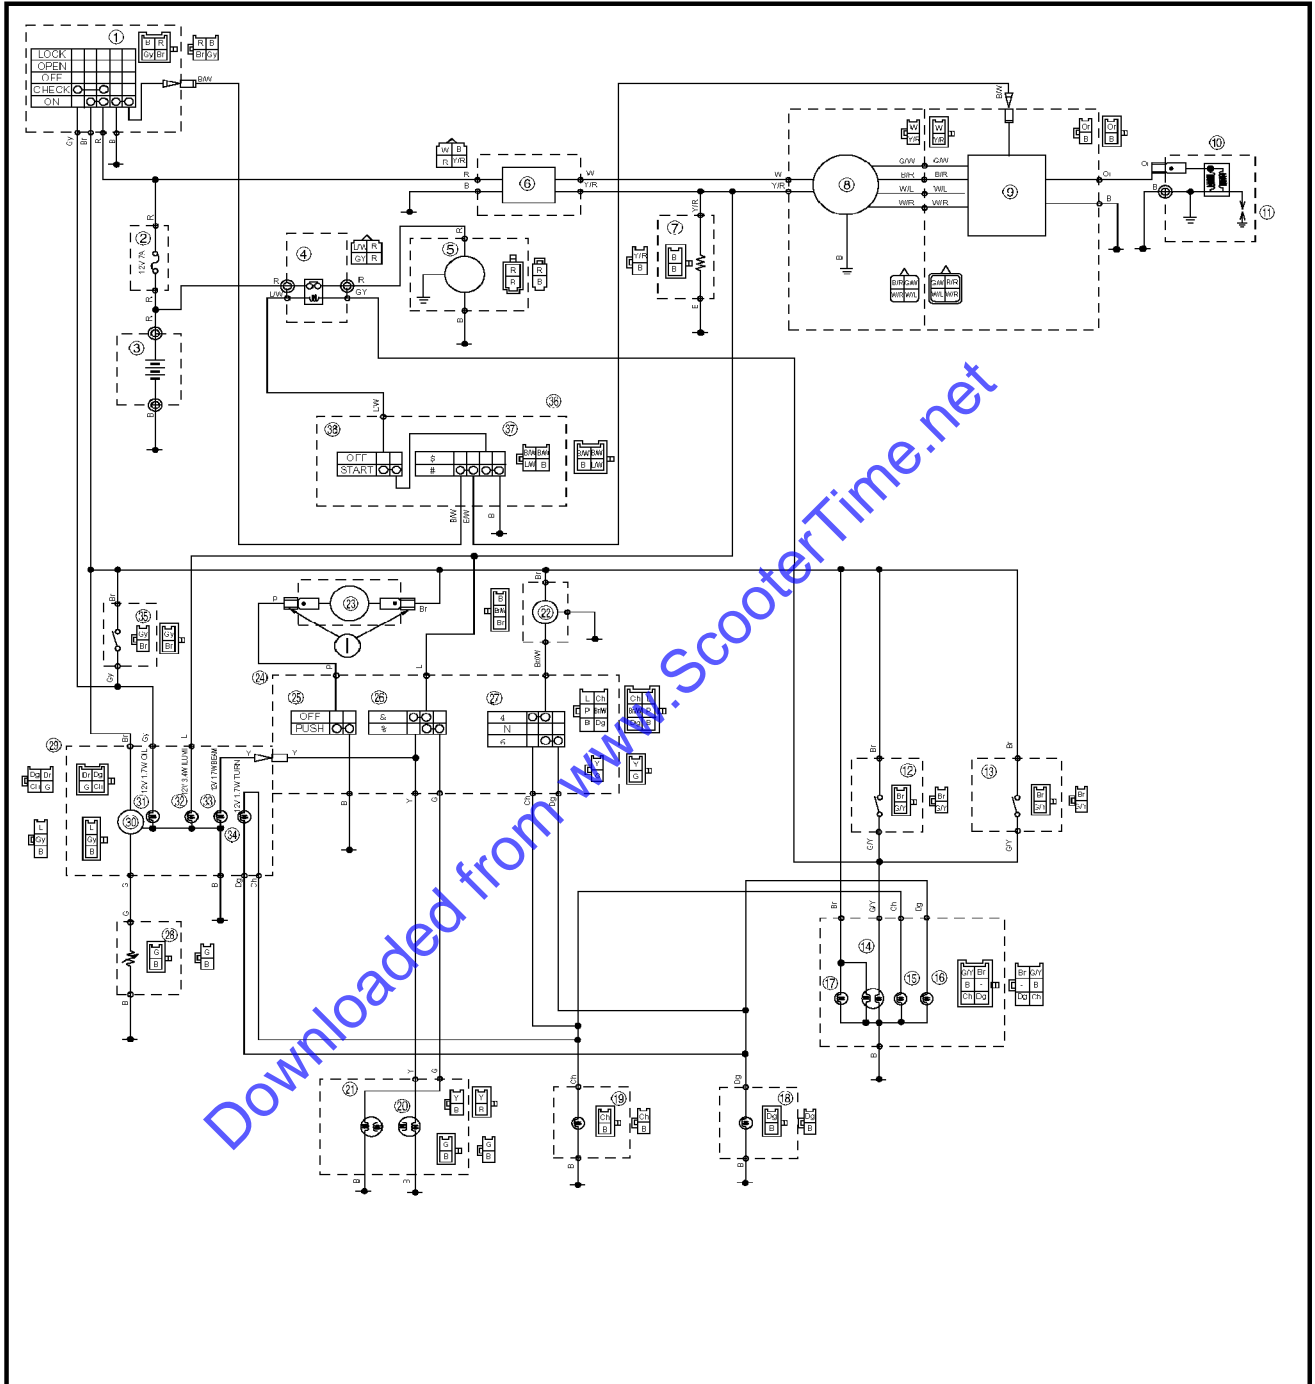

- |                     |                      |
|---------------------|----------------------|
| ① Main switch       | ⑬ Front brake switch |
| ② Main fuse         | ⑳ Engine stop switch |
| ③ Battery           | ㉑ Starter switch     |
| ④ Starter relay     |                      |
| ⑤ Starter motor     |                      |
| ⑫ Rear brake switch |                      |




### TROUBLESHOOTING

#### STARTER MOTOR DOES NOT OPERATE.


**NOTE:**

- Remove the following parts before troubleshooting.
 

1) Battery box cover	4) Side covers (left and right)
2) Rear carrier	5) Trunk
3) Tail cover	6) Handlebar cover (front)
- Use the following special tool in this troubleshooting.



Pocket tester:  
YU-03112

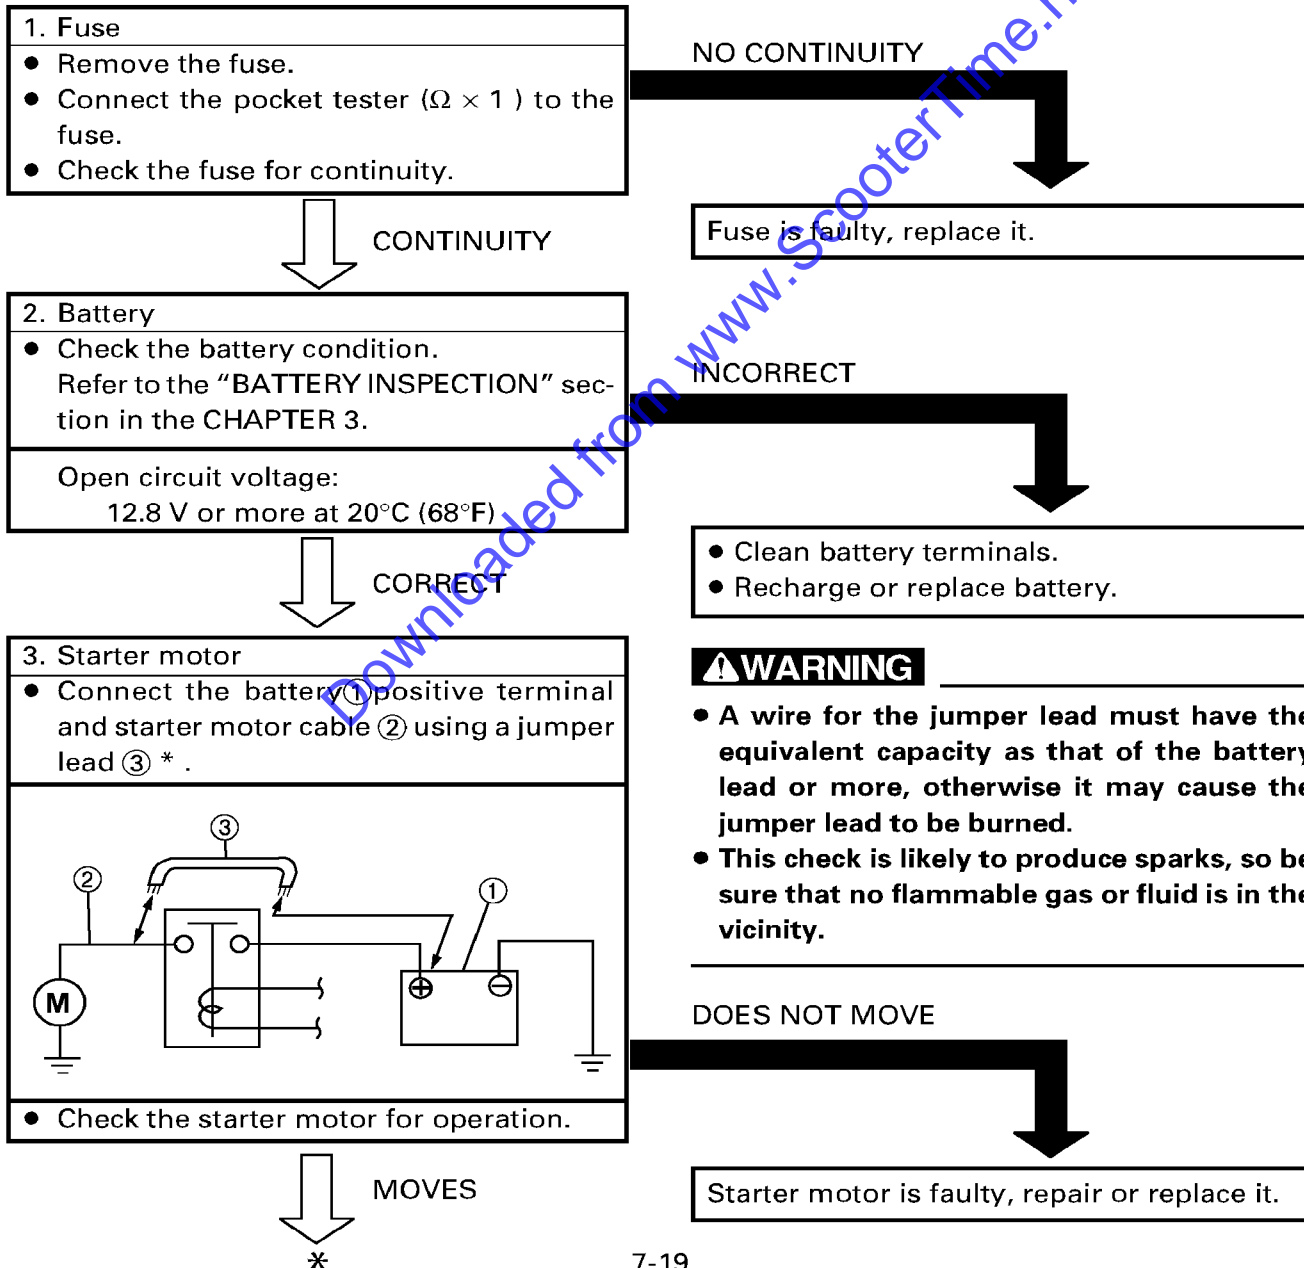




**4. Starter relay**

- Disconnect the relay unit coupler from the wire harness.
- Connect the pocket tester ( $\Omega \times 1$ ) and battery (12V) to the relay unit coupler terminals.

Battery (+) lead → Blue/White terminal ①  
 Battery (-) lead → Green/Yellow terminal ②

- Check the starter relay for continuity.

Tester (+) lead → ③ terminal  
 Tester (-) lead → ④ terminal

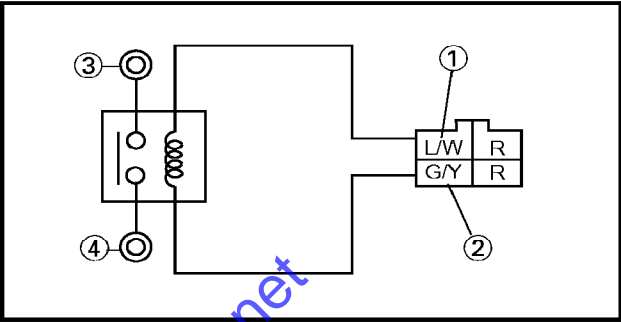


CONTINUITY

NO CONTINUITY

Replace the starter relay.

**5. Main switch**  
 Refer to "CHECKING SWITCHS" section.



CONTINUITY

NO CONTINUITY

Main switch is faulty, replace it.

**6. "START" switch**  
 Refer to "CHECKING SWITCHS" section.



CONTINUITY

NO CONTINUITY

"START" switch is faulty, replace handlebar switch (right).

**7. Engine stop switch**  
 Refer to "CHECKING SWITCHS" section.




CONTINUITY

Engine stop switch is faulty, replace it.




Downloaded from www.ScooterTime.net



\*  
↓ CONTINUITY

**8. Brake switches (front and rear)**

- Disconnect the brake switch leads from the wire harness.
- Connect the pocket tester ( $\Omega \times 1$ ) to the brake switch leads.

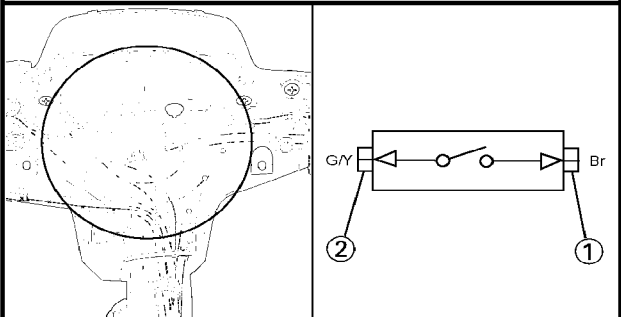

- Check the brake switch for continuity

Switch Position	Good condition	Bad condition		
Brake is applied	○	×	×	○
Brake is not applied	×	○	×	○

○:Continuity      ×:No continuity

↓ GOOD CONDITION


**9. Wiring connection**

- Check the entire electrical starting system for connections. Refer to "WIRING DIAGRAM" section.


Downloaded from www.ScooterTime.net

BAD CONDITION  
↓  
Replace brake switch(es).


POOR CONNECTION  
↓  
Correct.




STARTER MOTOR

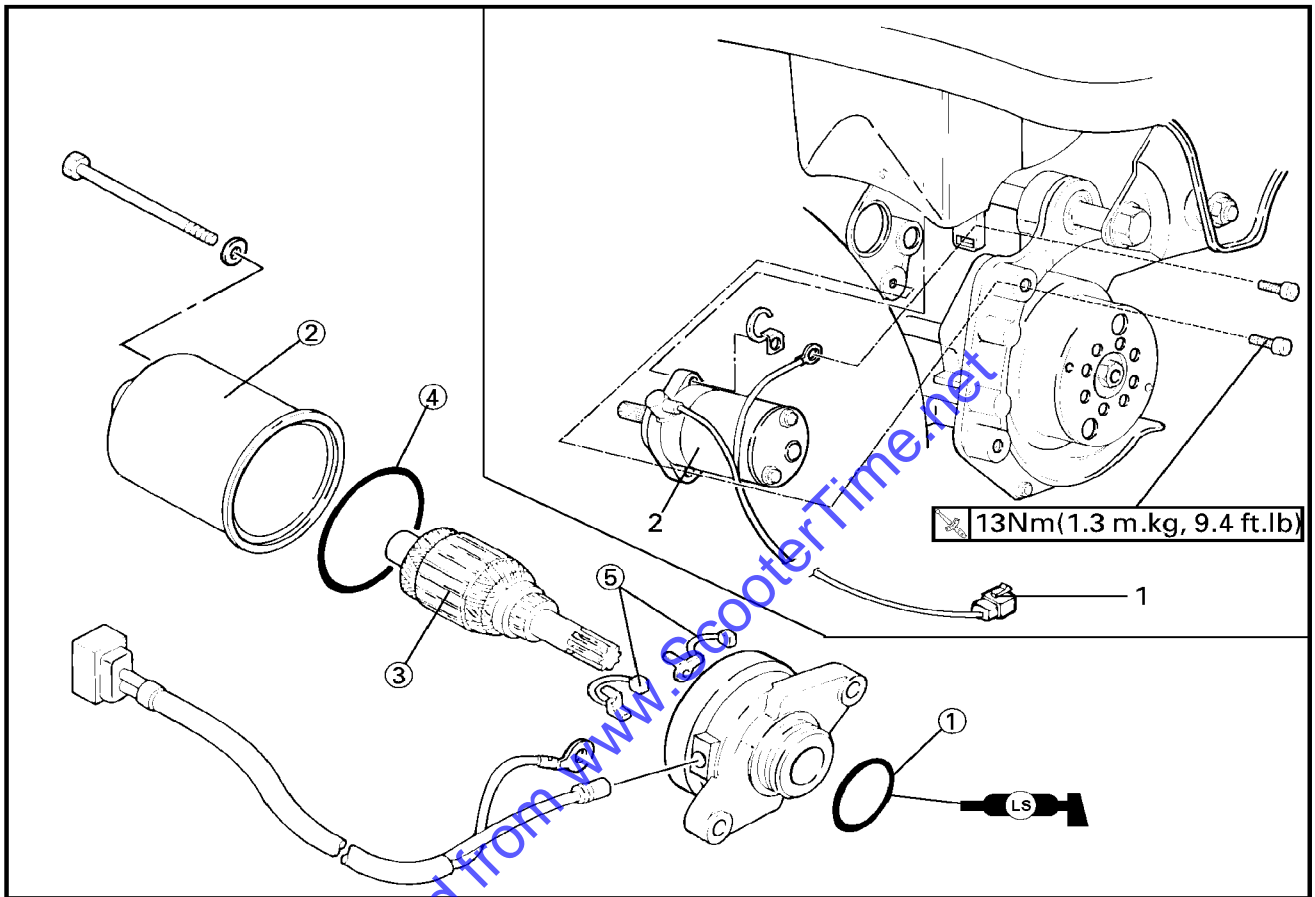





Order	Job name/Part name	Q'ty	Remarks
	Starter motor removal		Remove the parts in order.
	Rear carrier		Refer to "COVER PANEL" section in CHAPTER 3.  Refer to "REAR WHEEL AND REAR BRAKE" section in CHAPTER 6. Refer to "ENGINE REMOVAL" section chapter 4.
	Tail cover		
	Battery box cover		
	Left/Right side cover		
	Center cowling		
	Muffler		
	Rear wheel		
	Air shroud 3		
1	Starter motor coupler	2	
2	Starter motor	1	Reverse the removal procedure for installation.



STARTER MOTOR DISASSEMBLY

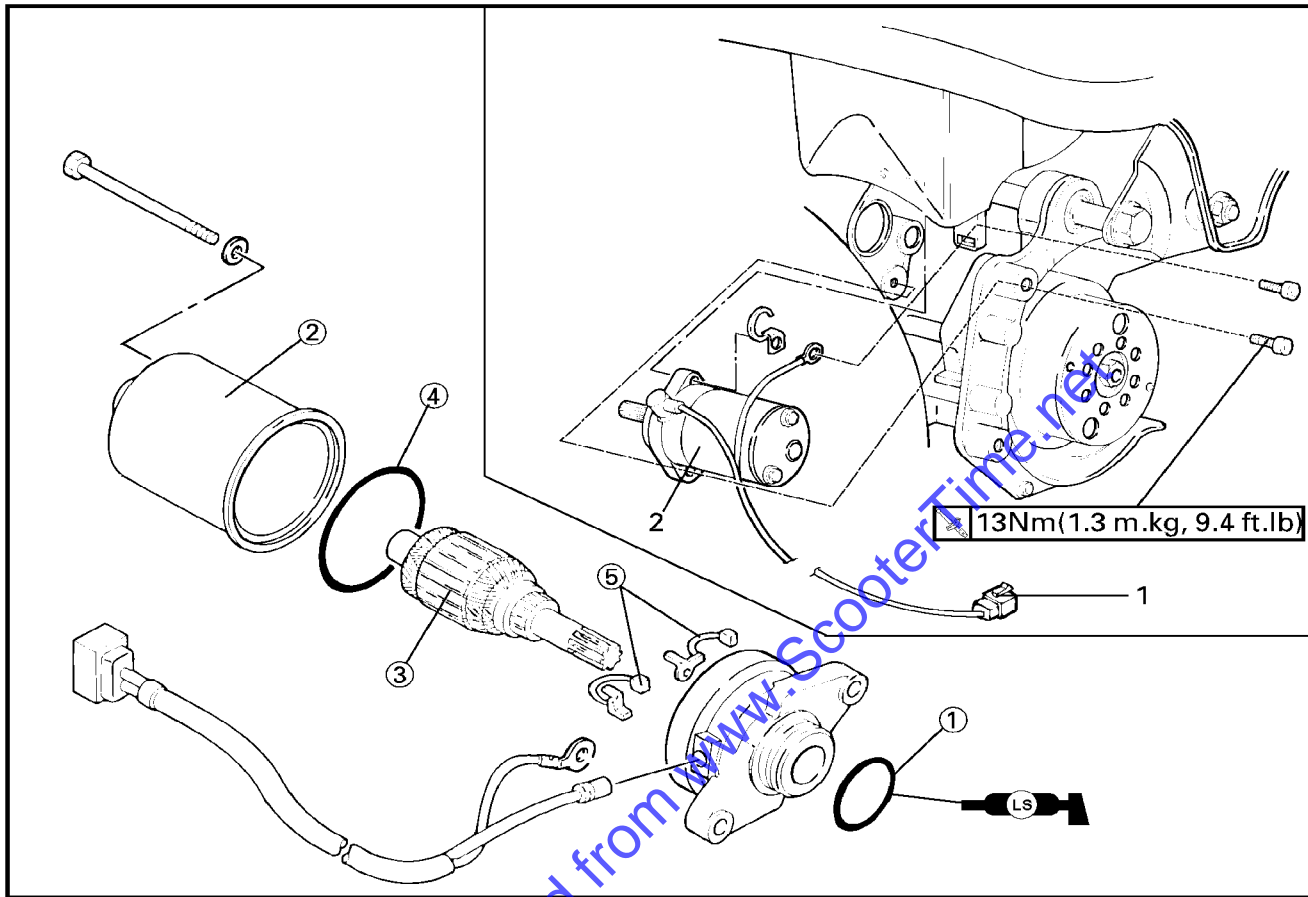

Order	Job name/Part name	Q'ty	Remarks
	Starter motor disassembly		Disassembly the parts in order.
①	O-ring	1	Refer to "Starter motor assembly"
②	Rear bracket	1	
③	Armature ass'y	1	
④	Ring	1	
⑤	Brush holder set	1	
			Reverse the disassembly procedure for assembly.

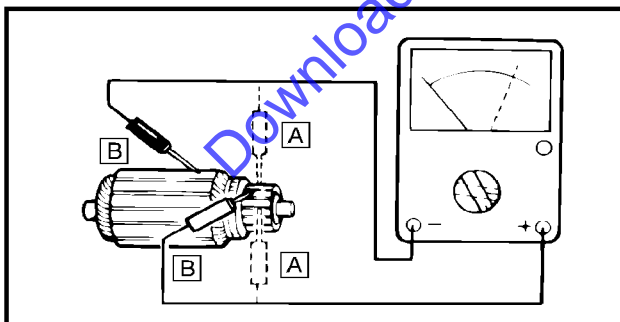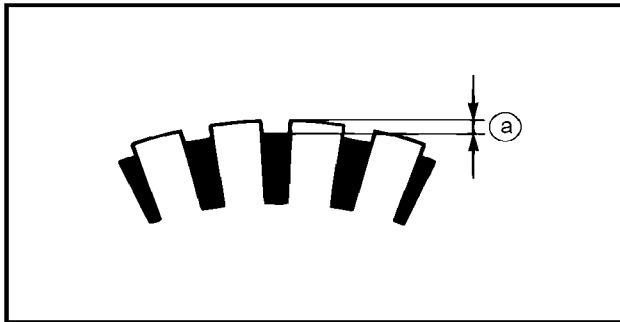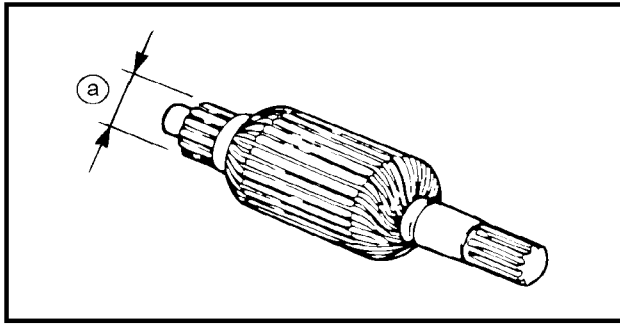

YP803034

**INSPECTION AND REPAIR**

1. Inspect:
  - Commutator  
Dirt→Clean it with #600 grit sandpaper.
2. Measure:
  - Commutator diameter (a)

	Commutator wear limit: 15.1 mm (0.59 in)
--	---

Out of specification→Replace the starter motor

3. Measure:
  - Mica undercut (a)

	Mica undercut: 1.05 mm (0.04 in)
--	-------------------------------------

Out of specification→Scrape the mica to the proper value (a hacksaw blade can be ground to fit).



**NOTE:** \_\_\_\_\_  
The mica insulation of the commutator must be undercut to ensure proper operation of commutator.

4. Inspect:
  - Armature coil resistances (installation/continuity)  
Defects→Replace the starter motor.  
If commutator is dirty, clean it with sandpaper.

	Good condition	Bad condition		
		○	×	×
A	○	○	×	×
B	×	○	×	○

O: Continuity  
x: No continuity  
Bad condition→Replace.



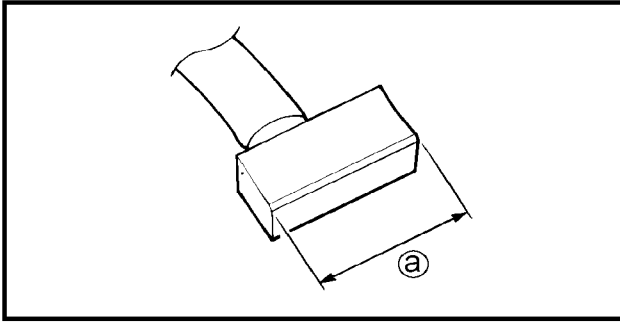

5. Measure:

- Brush length (a)  
Out of specification → Replace.




Brush length wear limit  
3.0 mm (0.012 in)


6. Measure:

- Brush spring force  
Fatigue/out of specification → Replace as a set.

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)



**LIGHTING SYSTEM  
CIRCUIT DIAGRAM**

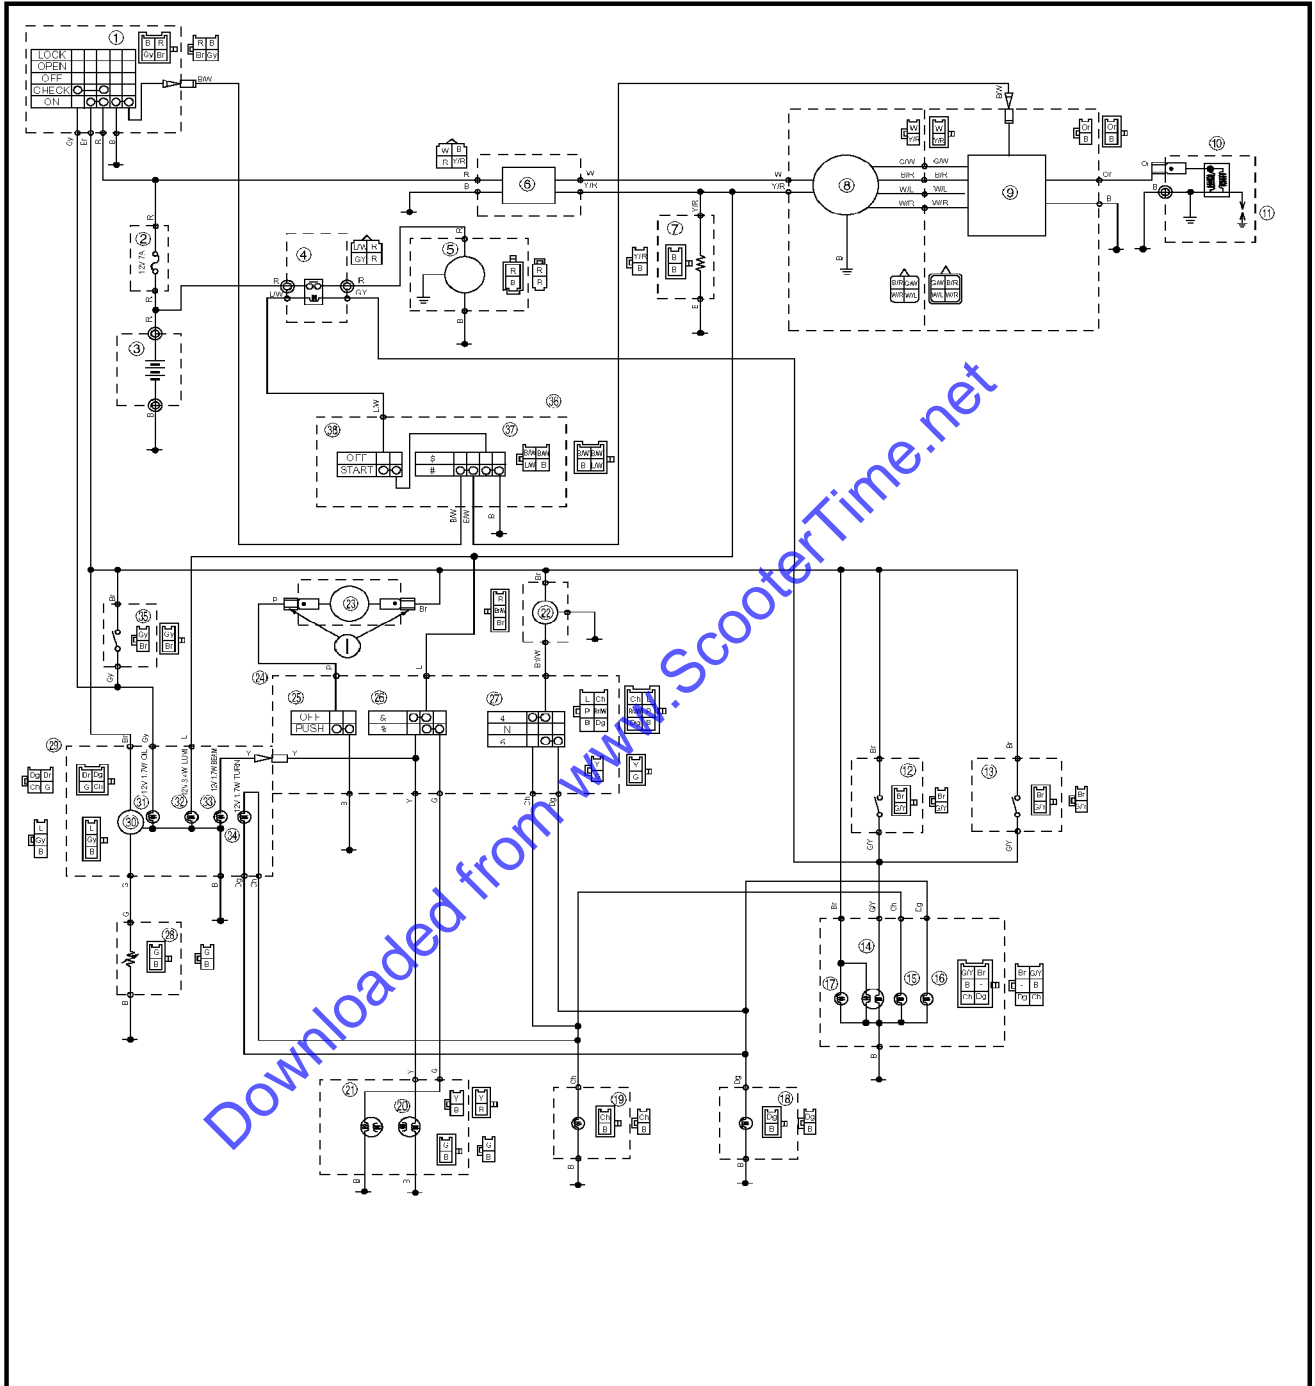

- |                  |                             |
|------------------|-----------------------------|
| ① Main switch    | ⑳ Head light(for high beam) |
| ② Fuse           | ㉑ Head light(for low beam)  |
| ③ Battery        | ㉒ Light dimmer switch       |
| ⑧ C.D.I. magneto | ㉓ Meter light               |
| ⑭ Tail light     | ㉔ High beam indicator light |
| ⑰ Licence light  |                             |



YP805010

**TROUBLESHOOTING**

**IF THE HEADLIGHT, HIGH BEAM INDICATOR LIGHT, TAILLIGHT AND/OR METER LIGHT FAIL TO COME ON.**

Procedure


Check:

1. Lights switch
2. Dimmer switch
3. Wiring connection (entire lighting system)


**NOTE:**

- Remove the following parts before troubleshooting.
  - 1) Front handlebar cover
  - 2) Rear carrier
  - 3) Right side cover
- Use the special tools specified in the troubleshooting section.

**Pocket tester:**  
YU-03112

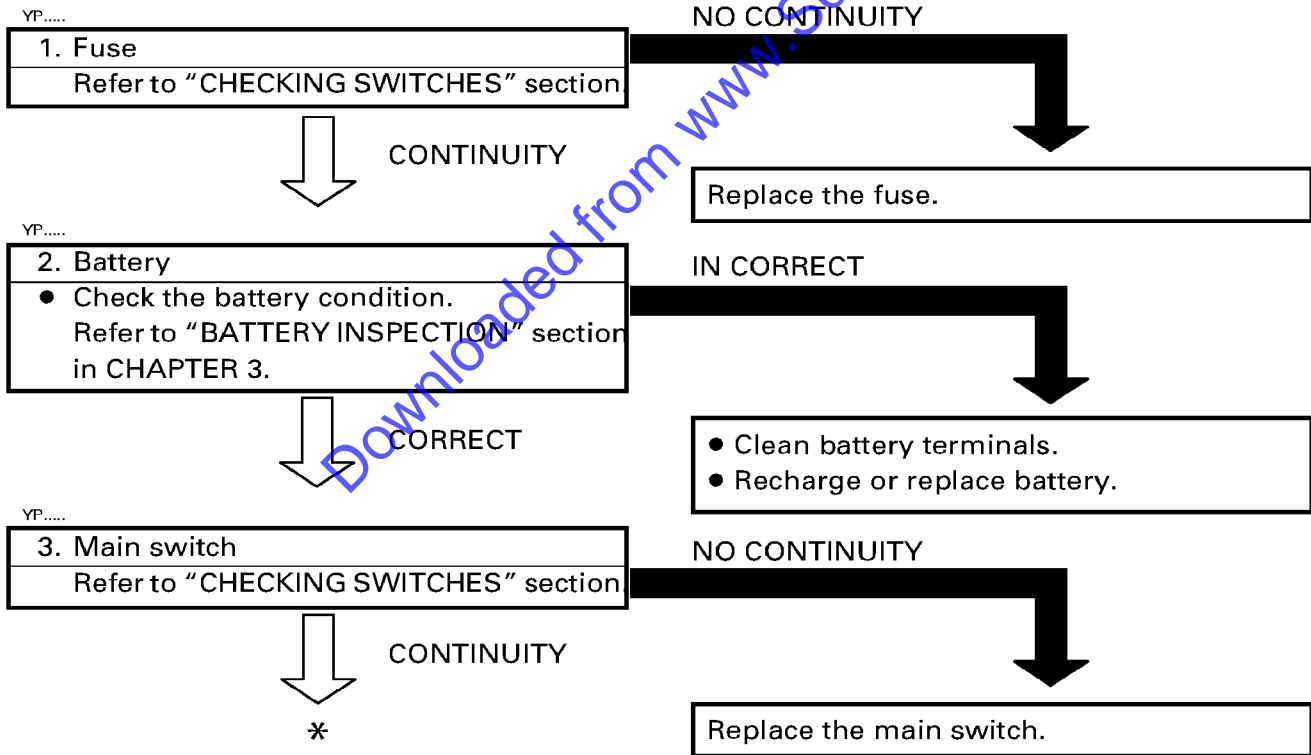

7

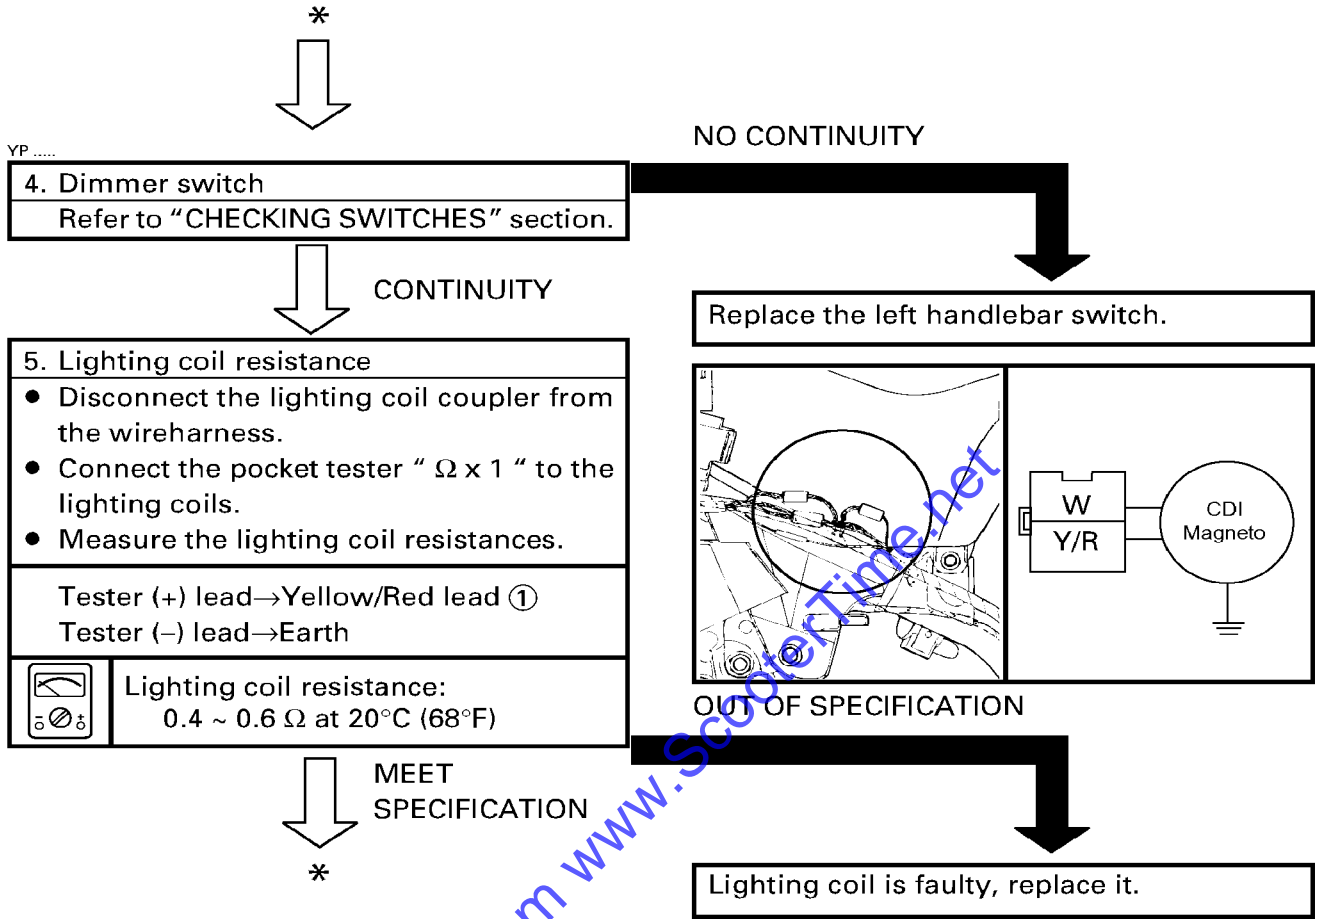


Downloaded from www.ScotTime.net



YP.....  
**6. Wiring connection**  
 • Check the connections of the entire lighting system.  
 Refer to "WIRING DIAGRAM".

POOR CONNECTIONS

Correct.



Check the condition of each of the lighting system's circuits.  
 Refer to "LIGHTING SYSTEM CHECK"

YP805020

**LIGHTING SYSTEM CHECK**

1. If the headlight and the high beam indicator light fail to come on.

**1. Bulb and bulb socket**  
 Refer to "CHECKING SWITCHES" section.

NO CONTINUITY

Replace the bulb and/or bulb socket.





**2. Voltage**  
 • Connect the pocket tester (DC20V) to the headlight and high beam indicator light couplers.


**A** When the dimmer switch is on low beam.  
**B** When dimmer switch is on high beam.

**Headlight(low beam):**  
 Tester (+) lead → Green ① lead  
 Tester (-) lead → Black ② lead

**Headlight(high beam):**  
 Tester (+) lead → Yellow ③ lead  
 Tester (-) lead → Black ④ lead

**High beam indicator light:**  
 Tester (+) lead → Yellow ⑤ lead  
 Tester (-) lead → Black ⑥ lead

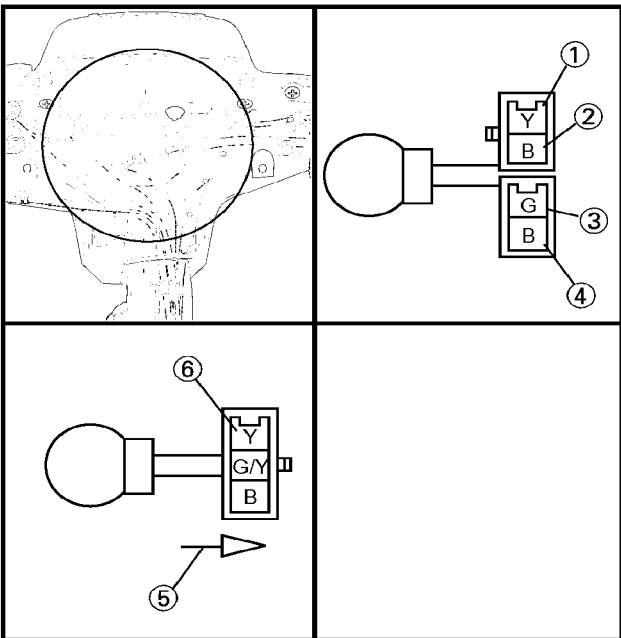



\*



- Turn the main switch to on.
- Start the engine.
- Turn the dimmer switch to low beam or high beam.
- Check for voltage (12V) on the lead at bulb socket connectors.

OUT OF SPECIFICATION



The wiring circuit from the main switch to bulb socket connector is faulty. Repair.



MEETS SPECIFICATION

This circuit is not faulty.

YP805021

2. If the meter light fails to come on.

1. Bulb and bulb socket  
Refer to "CHECKING SWITCHES" section.

NO CONTINUITY



Replace the bulb and/or bulb socket.



CONTINUITY

2. Voltage

- Connect the pocket tester (DC20V) to the bulb socket coupler.

Tester (+) lead → Blue terminal ①  
Tester (-) lead → Black terminal ②

- Turn the main switch to on.
- Start the engine.
- Check the voltage (12V) of the leads on the bulb socket connector.

OUT OF SPECIFICATION





The wiring circuit from main switch to bulb socket is faulty. Repair.



MEETS SPECIFICATION

This circuit is not faulty.



3. Licence light does not come on.

1. Bulb and bulb socket

- Check the bulb and bulb socket for continuity

NO CONTINUITY



Bulb and/or bulb socket are faulty, replace.




CONTINUITY

2. Voltage

- Connect the pocket tester (DC20V) to the bulb socket connector.

Tester (+) lead → Brown ① lead.  
Tester (-) lead → Black ② lead.

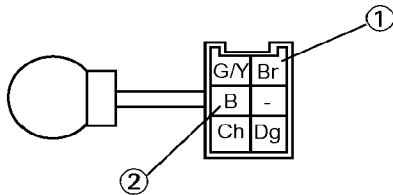

- Turn the main switch to on.
- Check the voltage (12V) on the "Brown" lead at the bulb socket connector.

OUT OF SPECIFICATION




Wiring circuit from main switch to bulb socket connector is faulty. Repair.



MEETS SPECIFICATION (12V)

This circuit is not faulty.

Downloaded from www.ScooterTime.net



YP805022

3. The taillight fails to come on.

1. Bulb and bulb socket  
 Refer to "CHECKING SWITCHES" section.


CONTINUITY

NO CONTINUITY

Replace the bulb and/or bulb socket.

2. Voltage  
 • Connect the pocket tester (DC20V) to the bulb socket connector.

Tester (+) lead →  
 Brown terminal ①  
 Tester (-) lead →  
 Black terminal ②

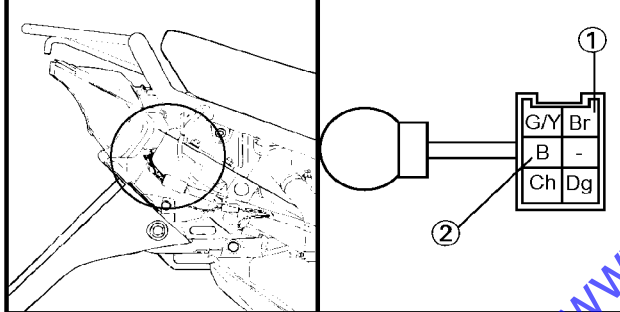

• Turn the main switch to on.  
 • Check the voltage (12V) on the bulb socket connector.

MEE TS  
 SPECIFICATION

OUT OF SPECIFICATION


The wiring circuit from main switch to bulb connector is faulty. Repair.

This circuit is not faulty.

Downloaded from www.ScooterTime.net




**SIGNAL SYSTEM  
CIRCUIT DIAGRAM**

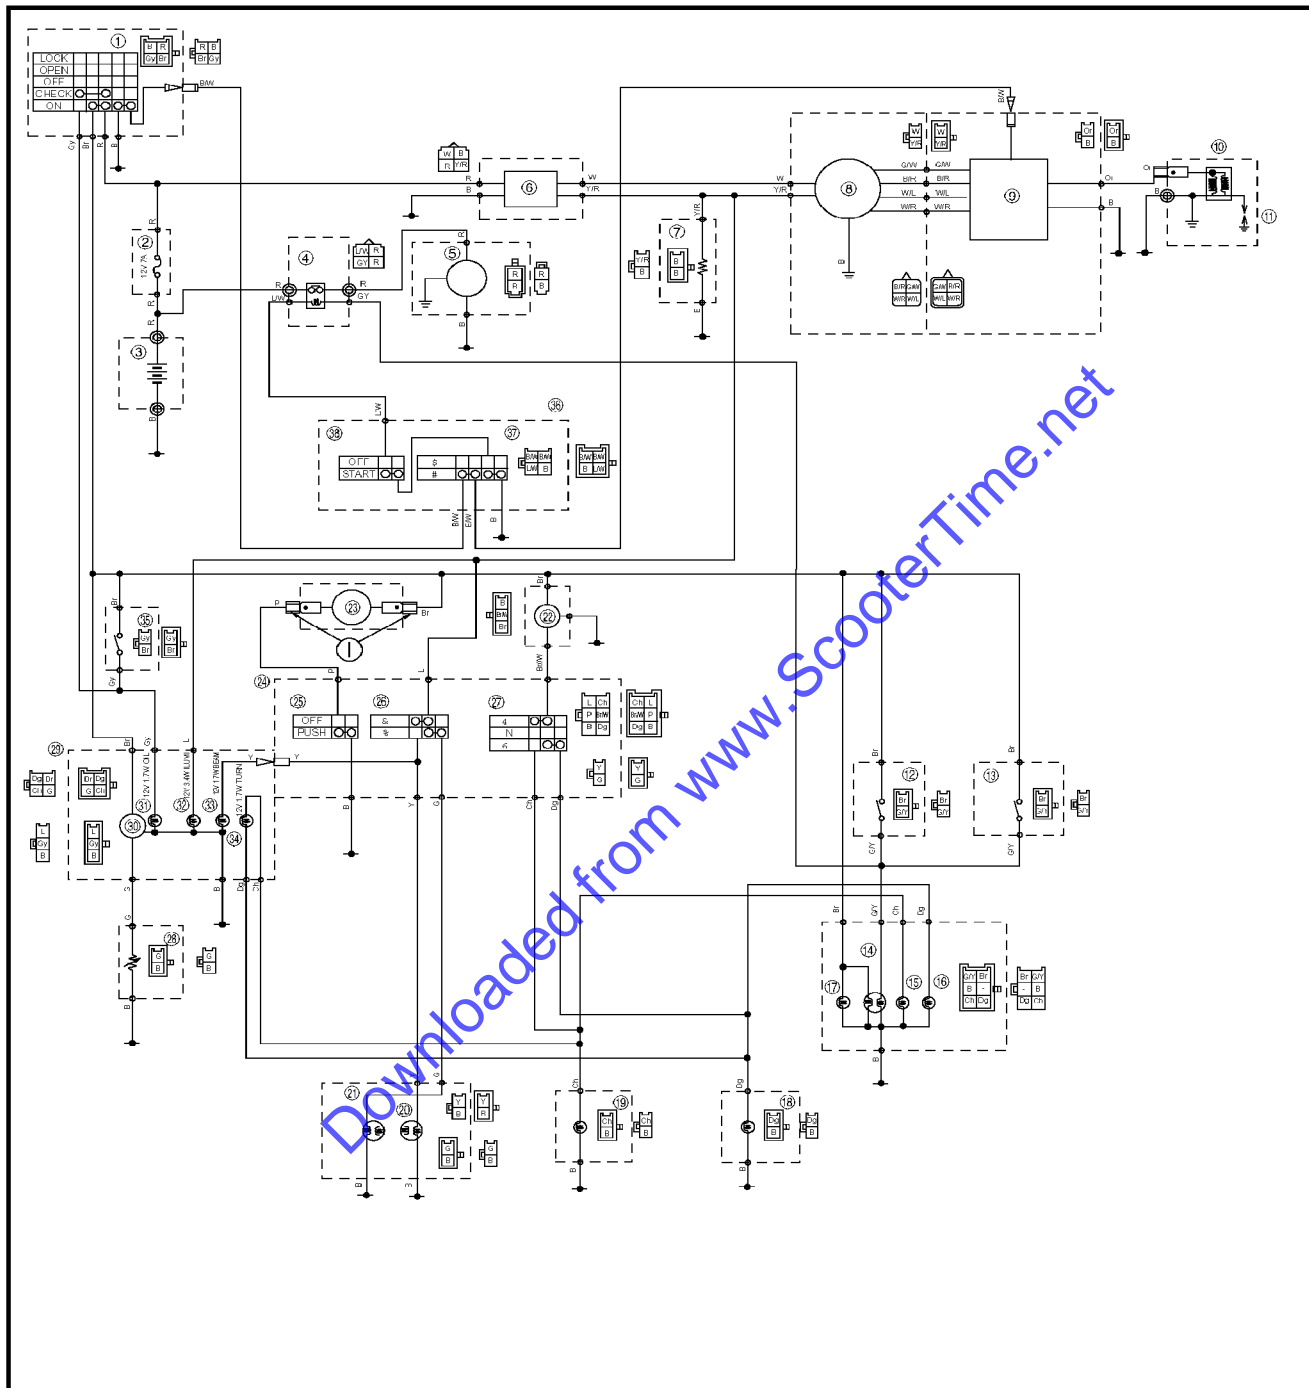

Downloaded from www.ScooterTime.net

- |   |   |   |
|---|---|---|
| <p>① Main switch</p> <p>② Main fuse</p> <p>③ Battery</p> <p>⑫ Rear brake switch</p> <p>⑬ Front brake switch</p> <p>⑭ Brake light</p> <p>⑮ Rear flasher light(right)</p> | <p>⑯ Rear flasher light(left)</p> <p>⑰ Front flasher light(right)</p> <p>⑱ Front flasher light(left)</p> <p>⑳ Fuel sender</p> <p>㉑ Fuel meter</p> <p>㉒ Oil indicator light</p> <p>㉓ Turn indicator light</p> <p>㉔ Oil level gauge</p> | <p>㉕ Turn switch</p> <p>㉖ Fuel sender</p> <p>㉗ Fuel meter</p> <p>㉘ Oil indicator light</p> <p>㉙ Turn indicator light</p> <p>㉚ Oil level gauge</p> |
|---|---|---|



YP806010

**TROUBLESHOOTING**

**IF THE FLASHER LIGHT, BRAKE LIGHT AND/OR INDICATOR LIGHT FAIL TO COME ON. IF THE HORN FAILS TO SOUND.**

Procedure

Check:

- |  |   |
|--|---|
| <ol style="list-style-type: none"> <li>1. Fuse (Main)</li> <li>2. Battery</li> </ol> | <ol style="list-style-type: none"> <li>3. Main switch</li> <li>4. Wiring connection (entire signal system)</li> </ol> |
|--|---|

**NOTE:**

- Remove the following parts before troubleshooting.
 

<ol style="list-style-type: none"> <li>1) Battery box cover</li> <li>2) Front protector bar</li> <li>3) Upper cover</li> <li>4) Rear carrier</li> </ol>	<ol style="list-style-type: none"> <li>5) Tail cover</li> <li>6) Side covers(Left/Right)</li> <li>7) Center cover</li> </ol>
---	--
- Use the special tools in the troubleshooting section .


	Pocket tester: YU-03112
--	----------------------------

YP.....

**1. Fuse**  
Refer to "CHECKING SWITCHES" section.



NO CONTINUITY

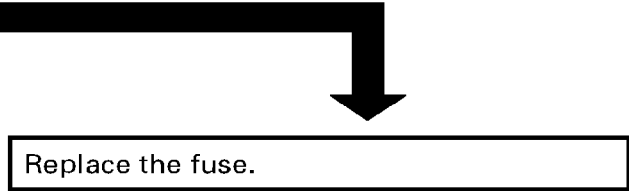


YP.....

**2. Battery**

- Check the battery condition.  
Refer to "BATTERY INSPECTION" section in CHAPTER 3.




IN CORRECT

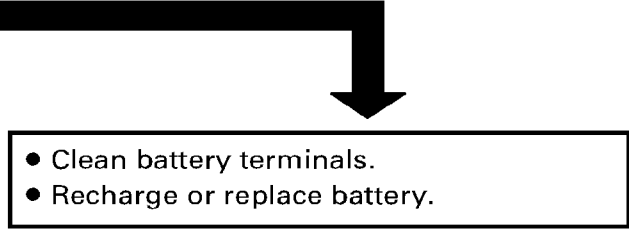


YP.....


**3. Main switch**  
Refer to "CHECKING SWITCHES" section.

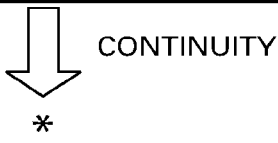

NO CONTINUITY

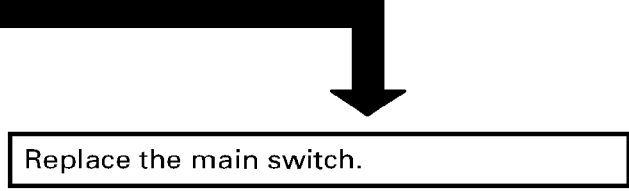

Downloaded from www.ScooterTime.net



YP.....

**4. Wireharness**  
● Check the connections of the entire signal system.  
Refer to "CIRCUIT SYSTEM WIRING DIAGRAM" section.

POOR CONNECTION




Correct.



CONTINUITY

Check condition of each of the signal system's circuits.  
Refer to "SIGNAL SYSTEM CHECK" section.

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)



YP806020

**SIGNAL SYSTEM CHECK**

1. If the horn fails to sound.

1. HORN switch  
Refer to "CHECKING SWITCHES" section.

NO CONTINUITY

CONTINUITY


Replace the left handlebar switch.

2. Voltage

- Connect the pocket tester (DC20V) to the horn lead.

Tester (+) lead → Brown terminal ①.  
Tester (-) lead → Frame ground

- Turn the main switch to on.
- Check for voltage (12V) on the "Brown" lead at the horn terminal.

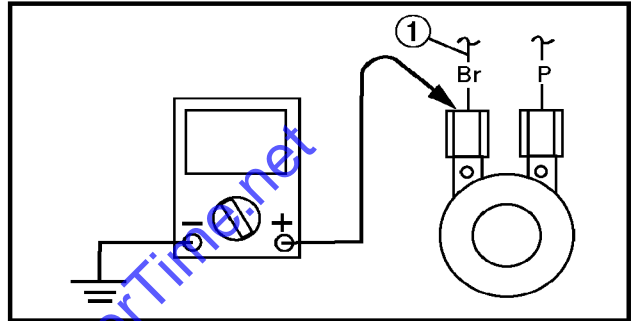

OUT OF SPECIFICATION

MEETS SPECIFICATION


The wiring circuit from the main switch to the horn is faulty. Repair.

3. Horn

- Connect the pocket tester (DC20V) to the horn at the "Pink" terminal.

Tester (+) lead → Pink ① terminal.  
Tester (-) lead → Frame ground

- Turn the main switch to on.
- Check for voltage on the "Pink" lead at the horn terminal.

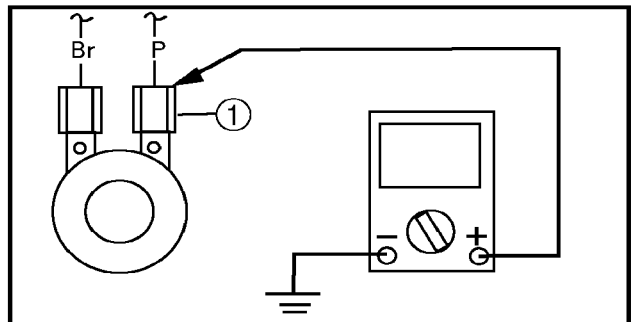


NO CONTINUITY

CONTINUITY

Adjust or replace horn.

Replace the horn.

Downloaded from www.ScooterTime.net



YP806022

2. If the brake light fails to come on:

1. Bulb and bulb socket  
Refer to "CHECKING SWITCHES" section.

NO CONTINUITY



CONTINUITY

Replace the bulb and/or bulb socket.

2. Brake switch (Front/Rear)  
Refer to "CHECKING SWITCHES" section.


NO CONTINUITY



CONTINUITY

Replace brake switch.

3. Voltage  
• Connect the pocket tester (DC20V) to the bulb socket connector.  
Tester (+) lead → Green/Yellow terminal ①  
Tester (-) lead → Black terminal ②

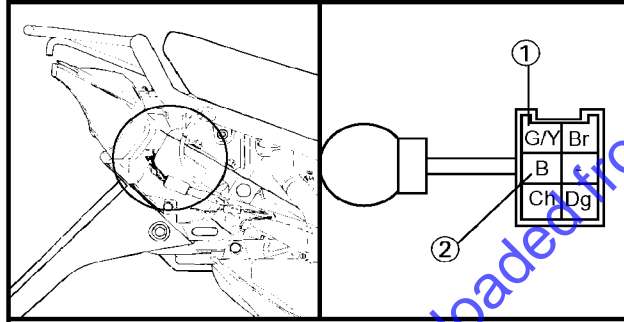

• Turn the main switch to on.  
• The brake lever is pulled in.  
• Check for voltage (12V) of the "Green/Yellow" lead on the bulb socket connector.


OUT OF SPECIFICATION



MEETS SPECIFICATION

This circuit is not faulty.

4. Wiring connection  
• Wiring circuit from the main switch to the bulb socket connector is faulty. Repair. Refer to "SIGNAL SYSTEM WIRING DIAGRAM" .



YP806023

3. If the flasher light and/or turn indicator light fails to blink.

1. Bulb and bulb socket  
Refer to "CHECKING SWITCHES" section.

NO CONTINUITY

Replace the bulb and/or bulb socket.

CONTINUITY

2. Turn switch  
Refer to "CHECKING SWITCHES" section.

NO CONTINUITY

Replace the left handlebar switch.

CONTINUITY

3. Voltage

- Connect the pocket tester (DC20V) to the flasher relay coupler.


Tester (+) lead → Brown lead ①.  
Tester (-) lead → Black lead ②

- Turn the main switch to on.
- Check for voltage (12V) of the "Brown" lead at the flasher relay terminal.

OUT OF SPECIFICATION

The wiring circuit from main switch to flasher relay connector is faulty. Repair.

MEETS SPECIFICATION


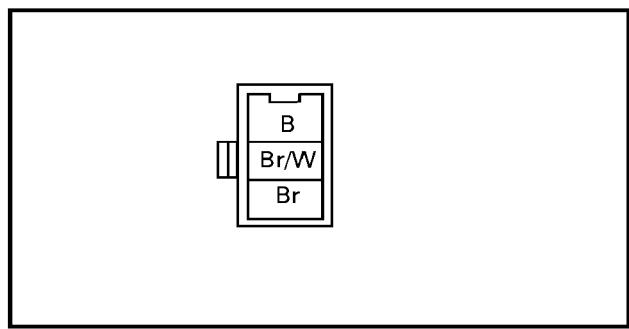


OUT OF SPECIFICATION

The flasher relay is faulty. Replace.

MEETS SPECIFICATION  
\*

Downloaded from www.ScooterTime.net




**5. Voltage**

- Connect the pocket tester (DC20V) to the bulb socket connector.

At flasher light (left)  
 Tester (+) lead → Chocolate lead ①  
 Tester (-) lead → Black terminal ③

At flasher light (right)  
 Tester (+) lead → Dark green lead ②  
 Tester (-) lead → Black terminal ③

- Turn the main switch to on.
- Turn the turn switch to left or right.
- Check for voltage (12V) on the "Chocolate" lead and "Dark green" at the flasher light terminal.

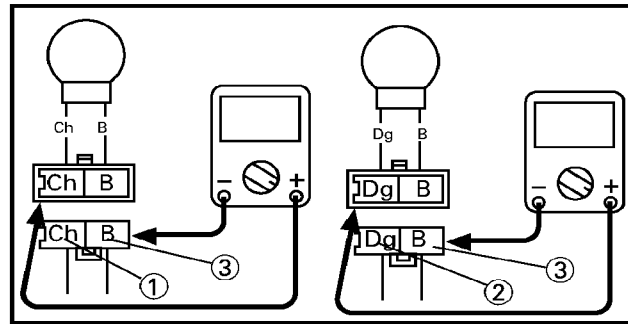

OUT OF SPECIFICATION

**6. Wiring connection**

- Wiring circuit from the turn switch to bulb socket connector is fault. Repair. Refer to "CIRCUIT DIAGRAM".

This circuit is not faulty.

4. "OIL" indicator light does not come on.

**1. Bulb and bulb socket**

- Check the bulb and bulb socket for continuity.

NO CONTINUITY

Replace bulb and/or bulb socket.

**2. Oil level switch**

- Remove the oil level switch from the oil tank.
- Connect the Pocket Tester ( $\Omega \times 1$ ) to the oil level switch.

Tester (+) Lead → Brown ①  
 Tester (-) Lead → Gray ②


- Check the oil level gauge for continuity.

Switch position	Good condition		Bad condition	
	○	×	○	×
A Upright position	×	○	×	○
B Upside down position	○	×	×	○


○: Continuity      ×: No continuity

BAD CONDITION


Replace oil level switch.



GOOD CONDITION



- 3. Voltage**
- Connect the Pocket Tester (DC20V) to the bulb socket connector.
- Tester (+) Lead → Gray lead ①  
 Tester (-) Lead → Black lead ②
- Turn the main switch to “\*”
  - Check for voltage (12V) on the “Gray” lead at bulb socket connector.

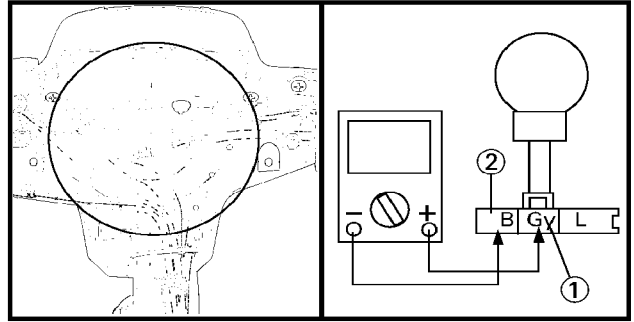

MEETS SPECIFICATION (12V)


This circuit is good.


OUT OF SPECIFICATION

- 4. Wiring connection**
- Check the entire signal system for connections. Refer to the “WIRING DIAGRAM” section.

YP806027

5. If the fuel gauge fails to operate.

- 1. Fuel sender**
- Remove the fuel sender from the fuel tank.
  - Disconnect the fuel sender coupler from the wireharness. Connect the pocket tester ( $\Omega \times 10$ ) to the fuel sender coupler lead.
- Tester (+) lead → Green terminal ①  
 Tester (-) lead → Black terminal ②
- Check the fuel sender for specified resistance.
- |  | Float position | Specified resistance |
|---|----------------|----------------------|
|   | UP ③           | 4~10 $\Omega$        |
|   | DOWN ④         | 90~100 $\Omega$      |

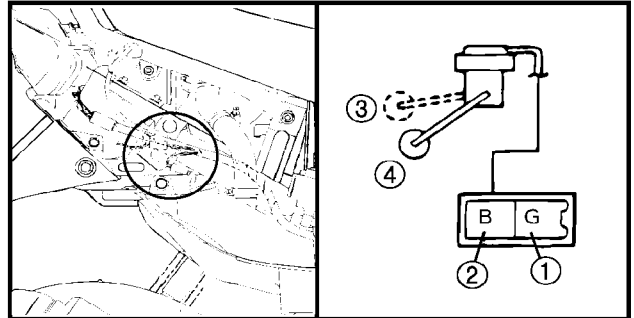

OUT OF SPECIFICATION

Replace the fuel sender.

BOTH MEET SPECIFICATION






**2. Voltage**

- Connect the pocket tester (DC20V) to the fuel gauge coupler.

Tester (+) lead → Brown terminal ①  
 Tester (-) lead → Frame ground

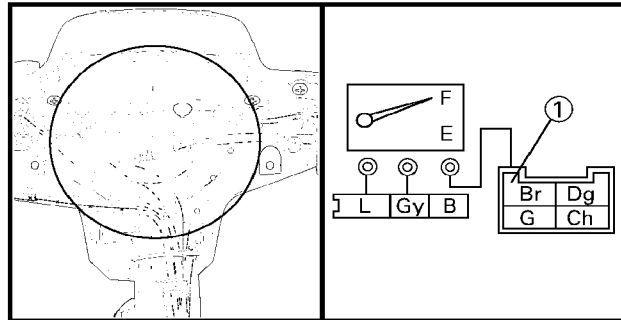


- Turn the main switch to "ON".
- Check for voltage (12V) of the "Brown" lead on the fuel sender lead.

OUT OF SPECIFICATION

MEETS SPECIFICATION

**3. Fuel gauge**

- Connect the fuel sender to wireharness.
- Move the float to "UP" ① or "DOWN" ②.

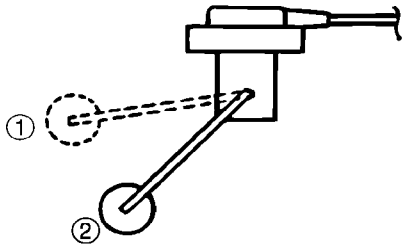

Check the connection of the entire signal system .  
 Refer to "CHECKING OF CONNECTIONS".  
 Refer to "CIRCUIT DIAGRAM".

**NOTE:** \_\_\_\_\_  
 Before reading the meter, stay put the float for more than three minutes respectively at "UP" or "DOWN".

- Turn the main switch to "ON".
- Check the fuel gauge needle moves "F" or "E".

DOES NOT MOVE


Float position	Needle moves
Float "UP" ①	"F"
Float "DOWN" ②	"E"

Replace the fuel gauge.


MOVES

This circuit is not faulty.

**AUTO CHOKE SYSTEM  
CIRCUIT DIAGRAM**

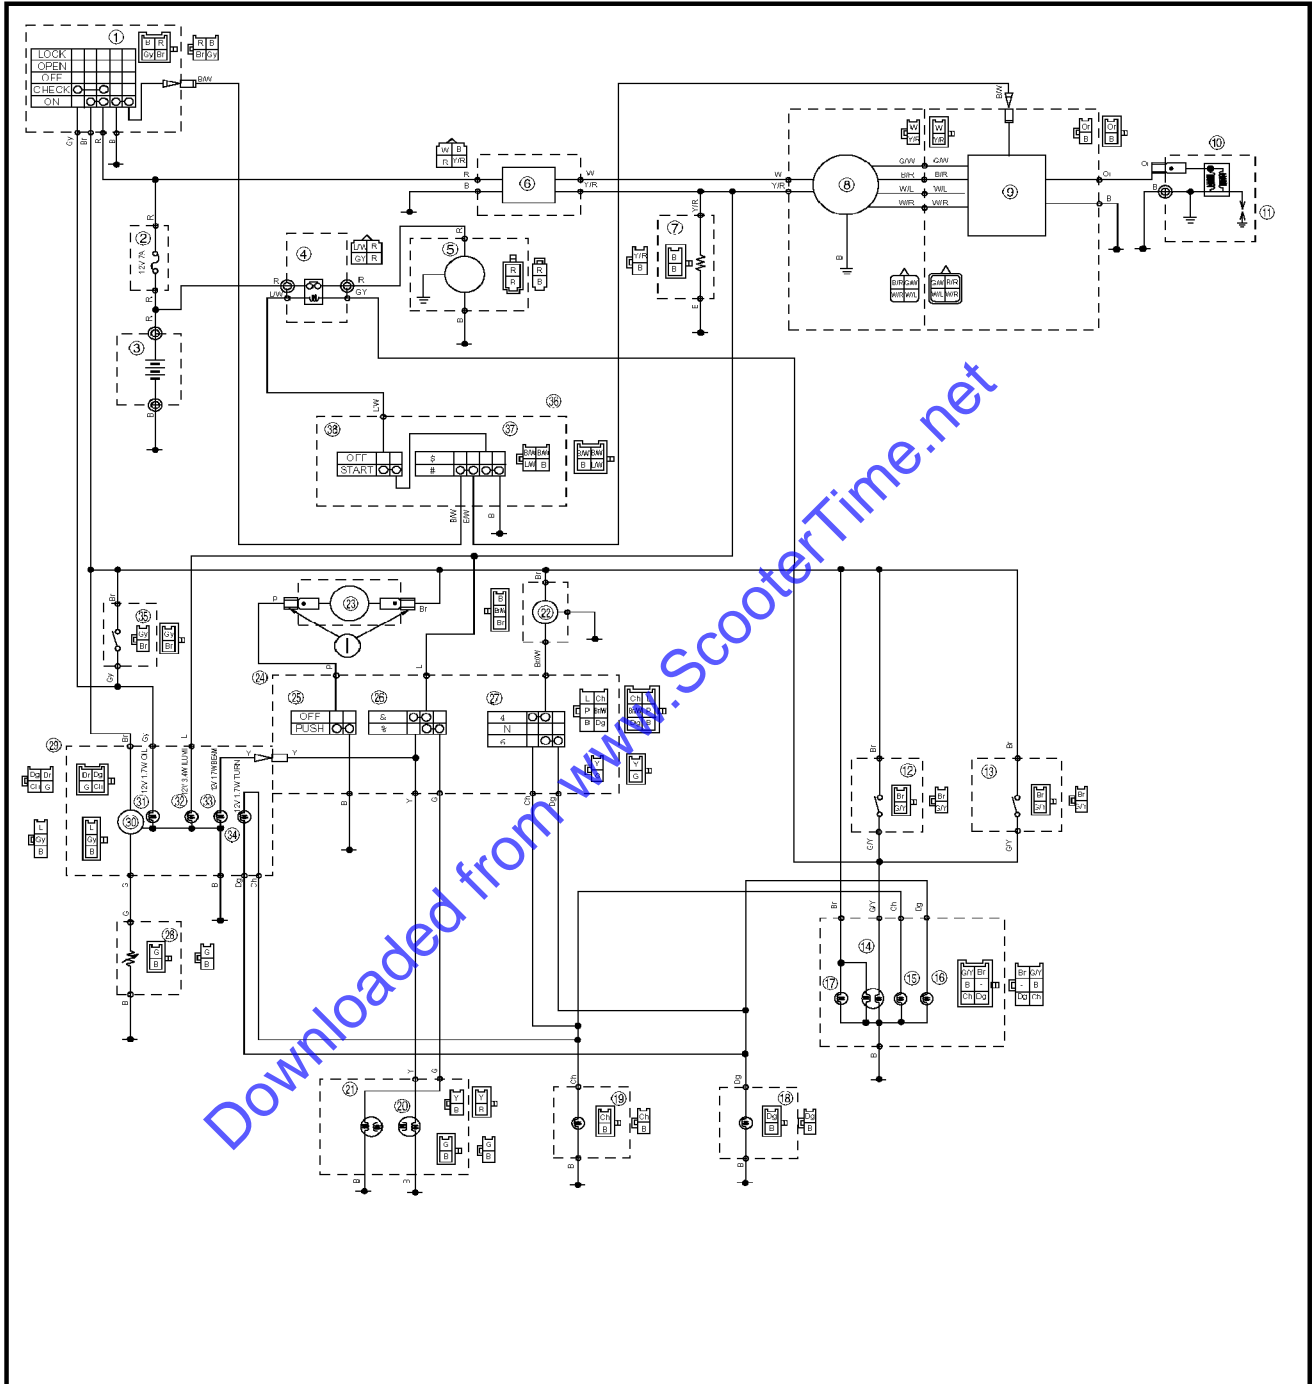

- ⑦ Auto choke
- ⑧ C.D.I. magneto



YP.....

**TROUBLESHOOTING**

**IF THE AUTO CHOKE FAILS TO OPERATE.**

Procedure

Check:

1. Lighting coil resistance
2. Auto choke unit resistance
3. Wiring connection (entire auto choke system)

**NOTE:**

- Remove the following parts before troubleshooting.
  1. Battery box cover
  2. Rear carrier
  3. Tail cover
  4. Right side cover
- Use the special tools specified in the troubleshooting section.

Pocket tester:  
YU-03112

**1. Lighting coil resistance**

- Disconnect the CDI magneto couple from wire harness.
- Connect the pocket tester ( $\Omega \times 1$ ) to the lighting coil coupler

Tester (+) Lead → Yellow/Red ① terminal  
Tester (-) Lead → Frame earth

② C.D.I. magneto



- Check the lighting coil for specified resistance

Lighting coil resistance  
0.4~0.6  $\Omega$  20°C (68°F)

↓ MEETS SPECIFICATION  
\*

OUT OF SPECIFICATION  
↓

Replace the lighting coil




YP...

- 2. Auto choke unit resistance**
- Disconnect the auto choke unit coupler from the wireharness.
  - Connect the pocket tester ( $\Omega \times 1$ ) to the auto choke unit coupler lead.

Tester (+) lead → Black terminal ①  
 Tester (-) lead → Black terminal ②





Auto choke unit resistance:  
 8~12 $\Omega$  at 20°C (68°F)



MEETS  
 SPECIFICATION

- 3. Wiring connection**
- Check the connection of the entire auto choke system.  
 Refer to "CIRCUIT DIAGRAM" section.

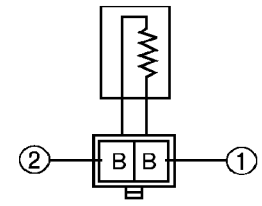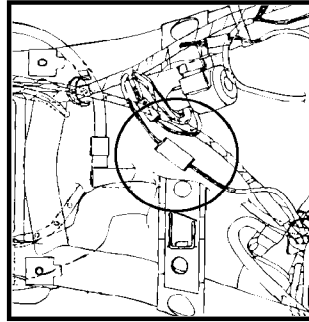

OUT OF SPECIFICATION

Replace the auto choke unit.

POOR CONNECTION

Correct.

Downloaded from www.ScooterTime.net

TROUBLESHOOTING

NOTE:

The following troubleshooting does not cover all the possible causes of trouble. It should be helpful, however, as a guide to troubleshooting. Refer to the relative procedure in this manual for inspection, adjustment and replacement of parts.

STARTING FAILURE/HARD STARTING

FUEL SYSTEM

PROBABLE CAUSE


Fuel tank	<ul style="list-style-type: none"> <li>• Empty</li> <li>• Clogged fuel filter</li> <li>• Deteriorated fuel or fuel containing water or foreign material</li> <li>• Clogged fuel tank cap</li> </ul>
Fuel cock	<ul style="list-style-type: none"> <li>• Clogged fuel hose</li> <li>• Clogged fuel cock</li> <li>• Faulty fuel cock operation</li> <li>• Broken or disconnected fuel cock</li> </ul>
Carburetor	<ul style="list-style-type: none"> <li>• Deteriorated fuel, fuel containing water or foreign material</li> <li>• Clogged pilot jet</li> <li>• Clogged pilot air passage</li> <li>• Sucked-in air</li> <li>• Deformed float</li> <li>• Groove-worn needle valve</li> <li>• Improperly sealed valve seat</li> <li>• Improperly adjusted fuel level</li> <li>• Improperly set pilot jet</li> <li>• Clogged starter jet</li> </ul>
Auto choke	<ul style="list-style-type: none"> <li>• Starter plunger malfunction</li> <li>• Wax malfunction</li> <li>• Faulty thermister</li> </ul>
Air cleaner	<ul style="list-style-type: none"> <li>• Clogged air filter</li> </ul>

# STARTING FAILURE/HARD STARTING




## IGNITION SYSTEM

## PROBABLE CAUSE

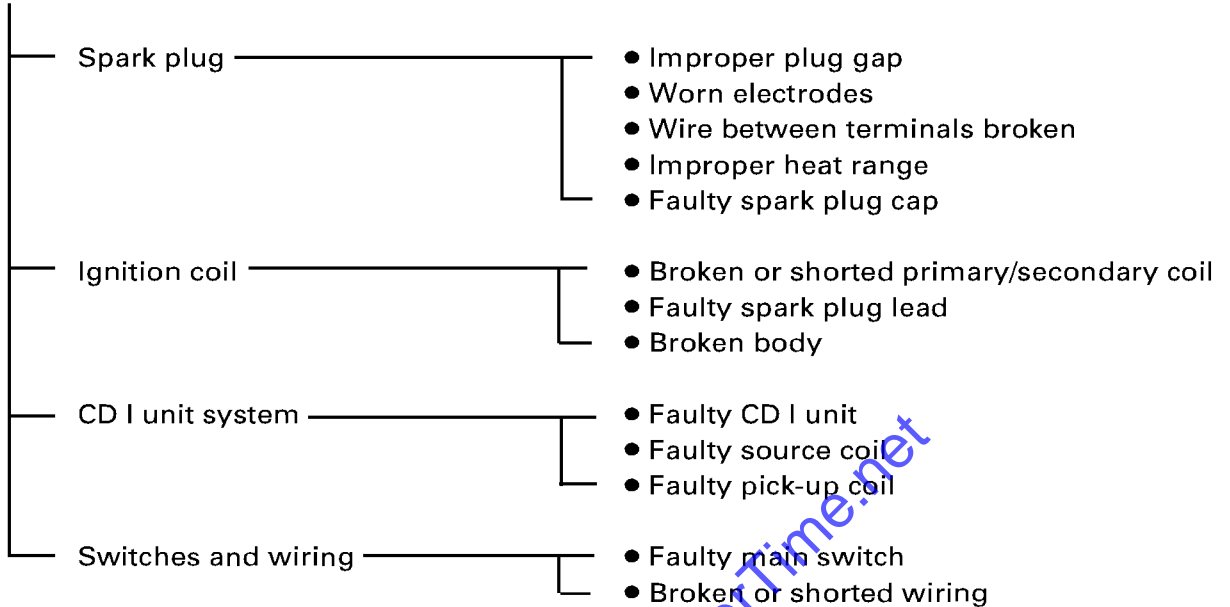

## COMPRESSION SYSTEM

## PROBABLE CAUSE

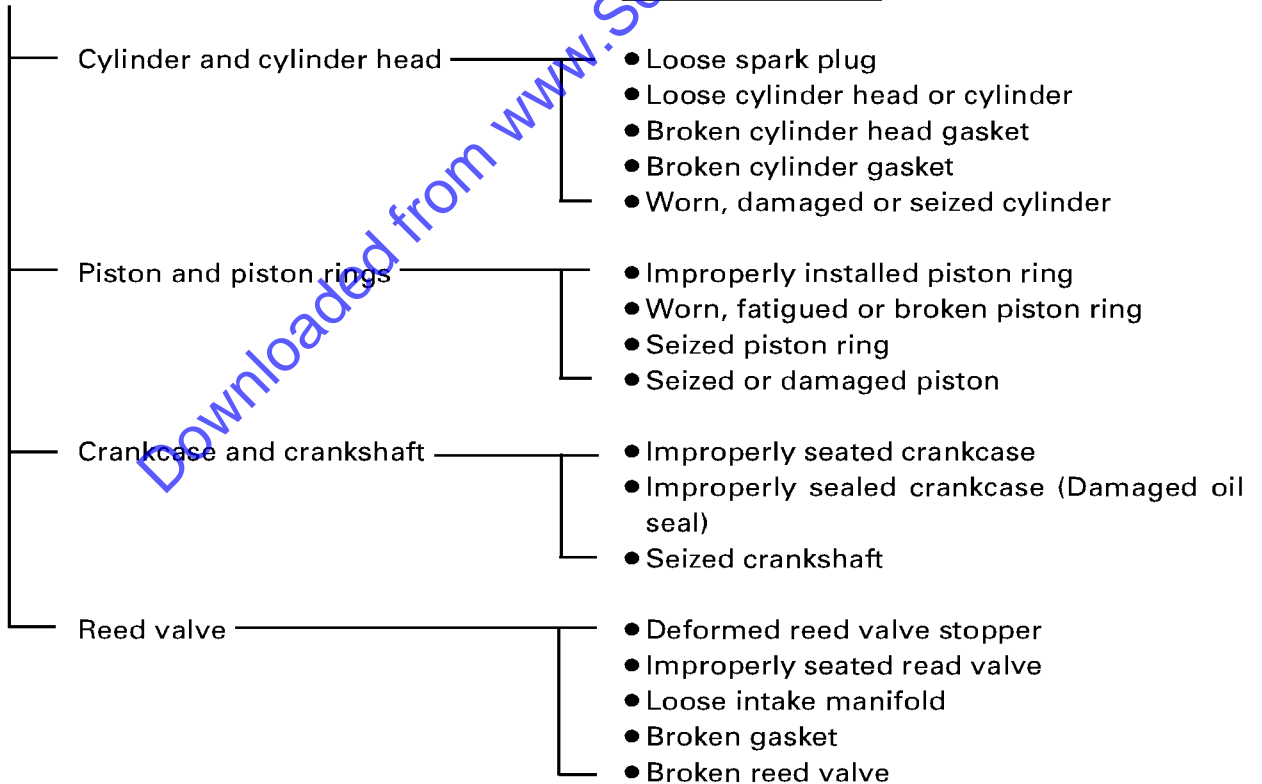


**POOR IDLE SPEED PERFORMANCE  
POOR MEDIUM AND HIGH SPEED PERFORMANCE**



**POOR IDLE SPEED PERFORMANCE**

**POOR IDLE SPEED PERFORMANCE**


**PROBABLE CAUSE**

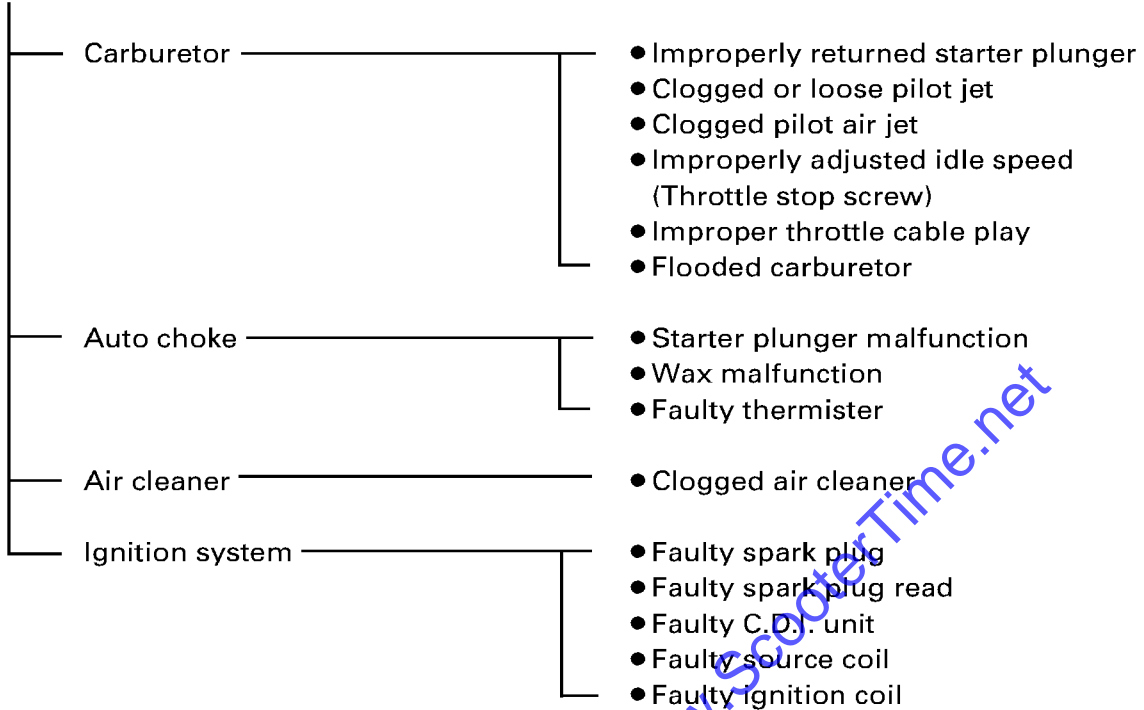

**POOR MEDIUM AND HIGH SPEED PERFORMANCE**

**POOR MEDIUM AND HIGH SPEED PERFORMANCE**

**PROBABLE CAUSE**

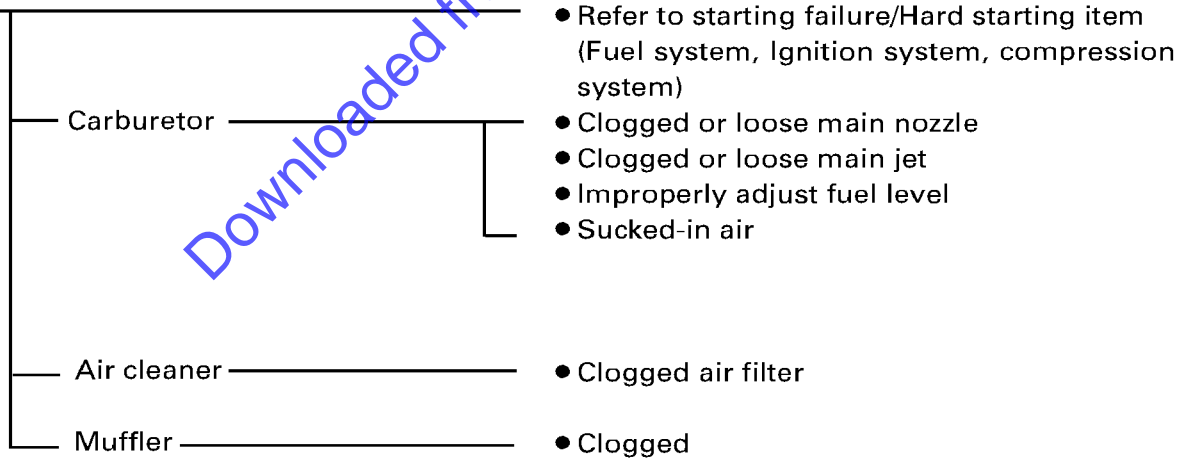

Downloaded from www.ScooterTime.net

**FULTY AUTOMATIC(V-BELT TYPE)**

**SCOOTER DOES NOT MOVE WHILE ENGINE IS OPERATING**

**PROBABLE CAUSE**

V-belt		● Worn, damaged or slipped V-belt
Cam, slider		● Worn, damaged
Compression spring		● Damaged
Transmission		● Damaged

**CLUTCH OUT FAILURE**

Clutch weight spring		● Damaged
Clutch shoe		● Pealed lining
Primary sheave		● Seized primary sliding sheave and collar

**POOR STANDING START(LOW CLIMBING ABILITY)**

**PROBABLE CAUSE**

V-belt		● Worn or slipped V-belt
Primary sheave		● Improper operation ● Damaged
Compression spring		● Damaged
Secondary sheave		● Improper operation ● Worn guide pin
Clutch shoe		● Plealed lining

**POOR ACCELERATION(POOR HIGH SPEED)**

**PROBABLE CAUSE**

V-belt		● Worn ● Greasy
Weight		● Worn ● Improper operation
Primary/ Secondary seave		● Worn



**OVER HEAT**

**OVER HEAT**

**PROBABLE CAUSE**

<p>Ignition system</p>	<ul style="list-style-type: none"> <li>● Improper plug gap</li> <li>● Improper spark plug heat range</li> <li>● Faulty C.D.I. unit</li> </ul>
<p>Fuel system</p>	<ul style="list-style-type: none"> <li>● Improper carburetor setting</li> <li>● Clogged air filter</li> </ul>
<p>Compression system</p>	<ul style="list-style-type: none"> <li>● Carbon accumulation of cylinder head</li> </ul>
<p>Muffler, Exhaust pipe</p>	<ul style="list-style-type: none"> <li>● Clogged</li> </ul>
<p>Oil pimp</p>	<ul style="list-style-type: none"> <li>● Faulty oil pump</li> <li>● Faulty oil quality</li> </ul>
<p>Brake</p>	<ul style="list-style-type: none"> <li>● Drag</li> </ul>
<p>Cooling system</p>	<ul style="list-style-type: none"> <li>● Fan damaged</li> </ul>

**POOR SPEED**

**POOR SPEED**

**PROBABLE CAUSE**


<p>Ignition system</p>	<ul style="list-style-type: none"> <li>● Faulty spark plug</li> <li>● Improper spark plug heat range</li> <li>● Faulty C.D.I. unit</li> <li>● Faulty source coil</li> </ul>
<p>Fuel system</p>	<ul style="list-style-type: none"> <li>● Clogged fuel tank cap</li> <li>● Clogged air filter</li> <li>● Clogged carburetor</li> </ul>
<p>Compression system</p>	<ul style="list-style-type: none"> <li>● Worn cylinder</li> <li>● Worn, fatigued or broken piston ring</li> <li>● Broken cylinder head gasket</li> <li>● Broken cylinder gasket</li> <li>● Carbon accumulation of cylinder head</li> </ul>
<p>Muffler, Exhaust pipe</p>	<ul style="list-style-type: none"> <li>● Clogged</li> </ul>
<p>Clutch</p>	<ul style="list-style-type: none"> <li>● Refer to "FAULTY AUTOMATIC"</li> </ul>
<p>Brake</p>	<ul style="list-style-type: none"> <li>● Drag</li> </ul>

Downloaded from www.ScooterTime.net

**IMPROPER KICKING**


**SLIPPING**

**PROBABLE CAUSE**

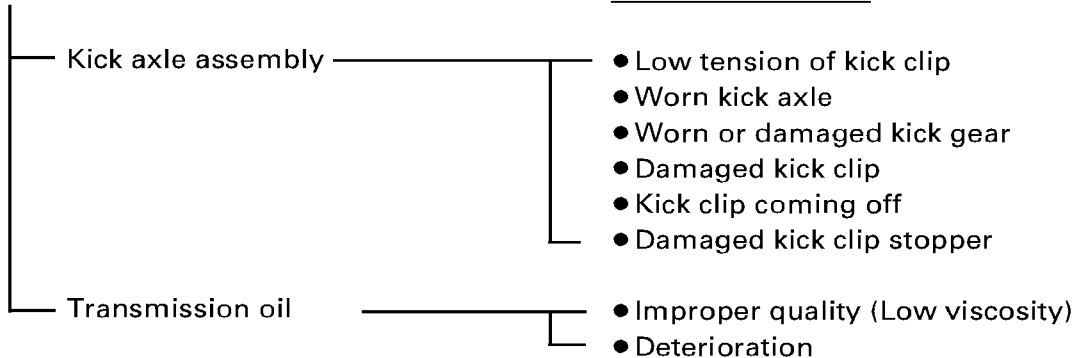


**HARD KICKING**

**PROBABLE CAUSE**

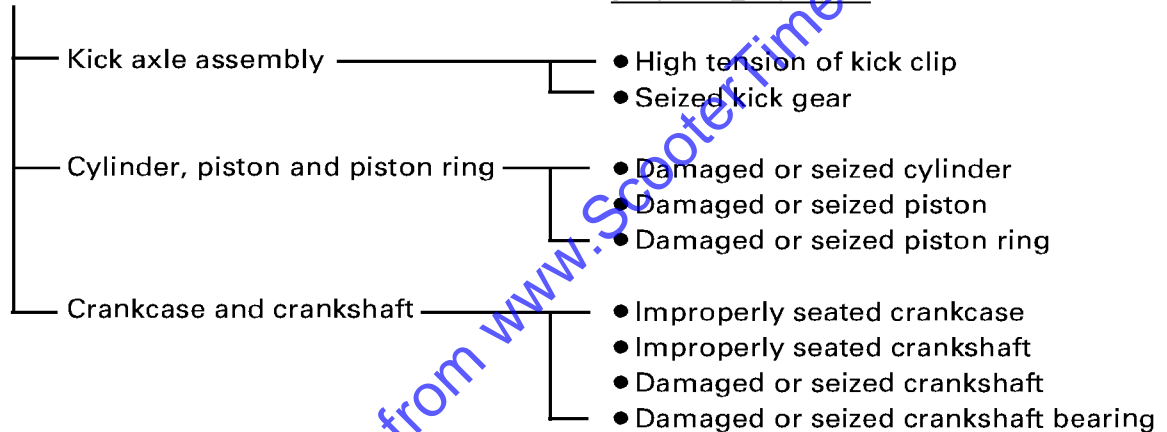

**KICK CRANK NOT RETURNING**

**PROBABLE CAUSE**

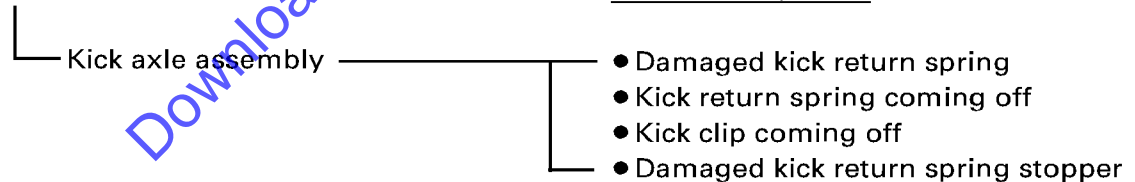

Downloaded from www.ScoterTime.net

**FAULTY BRAKE**

**POOR BRAKING EFFECT**

**PROBABLE CAUSE**

Drum brake

- Worn brake shoe
- Worn or rusty brake drum
- Improperly adjusted brake free play
- Improper brake cam lever position
- Improper brake shoe position
- Fatigue/Damaged return spring
- Oily or greasy brake shoe
- Oily or greasy brake drum
- Broken brake cable

Disc brake  
(Front)

- Worn brake pad
- Worn brake disc
- Air in brake fluid
- Leaking brake fluid
- Faulty master cylinder kit
- Faulty caliper seal kit
- Loose union bolt
- Broken brake hose
- Oily or greasy brake pad
- Oily or greasy brake disc

**MALFUNCTION**

**PROBABLE CAUSE**

- Bent, deformed or damaged inner tube
- Bent or deformed outer tube
- Damaged fork spring
- Worn or damaged slide metal
- Improper oil viscosity
- Improper oil level

Downloaded from www.ScoreTime.net

**INSTABLE HANDLING**


**INSTABLE HANDLING**

**PROBABLE CAUSE**

Handlebar		<ul style="list-style-type: none"> <li>● Improperly installed or bent</li> </ul>
Steering		<ul style="list-style-type: none"> <li>● Improperly installed steering column (Improperly tightened ringnut)</li> <li>● Bent steering column</li> <li>● Damaged ball bearing or bearing race</li> </ul>
Front forks		<ul style="list-style-type: none"> <li>● Broken spring</li> <li>● Bonded front forks</li> </ul>
Tires		<ul style="list-style-type: none"> <li>● Uneven tire pressures on both sides</li> <li>● Incorrect tire pressure</li> <li>● Unevenly worn tires</li> </ul>
Wheels		<ul style="list-style-type: none"> <li>● Damaged bearing</li> <li>● Bent or loose wheel axle</li> <li>● Excessive wheel run-out</li> </ul>
Frame		<ul style="list-style-type: none"> <li>● Twisted</li> <li>● Damaged head pipe</li> <li>● Improperly installed bearing race</li> </ul>
Engine bracket		<ul style="list-style-type: none"> <li>● Bent or damaged</li> </ul>
Rear shock absorber		<ul style="list-style-type: none"> <li>● Fatigued spring</li> <li>● Oil leakage</li> </ul>


Downloaded from www.ScopedTime.net

**FAULTY SIGNAL AND LIGHTING SYSTEM**

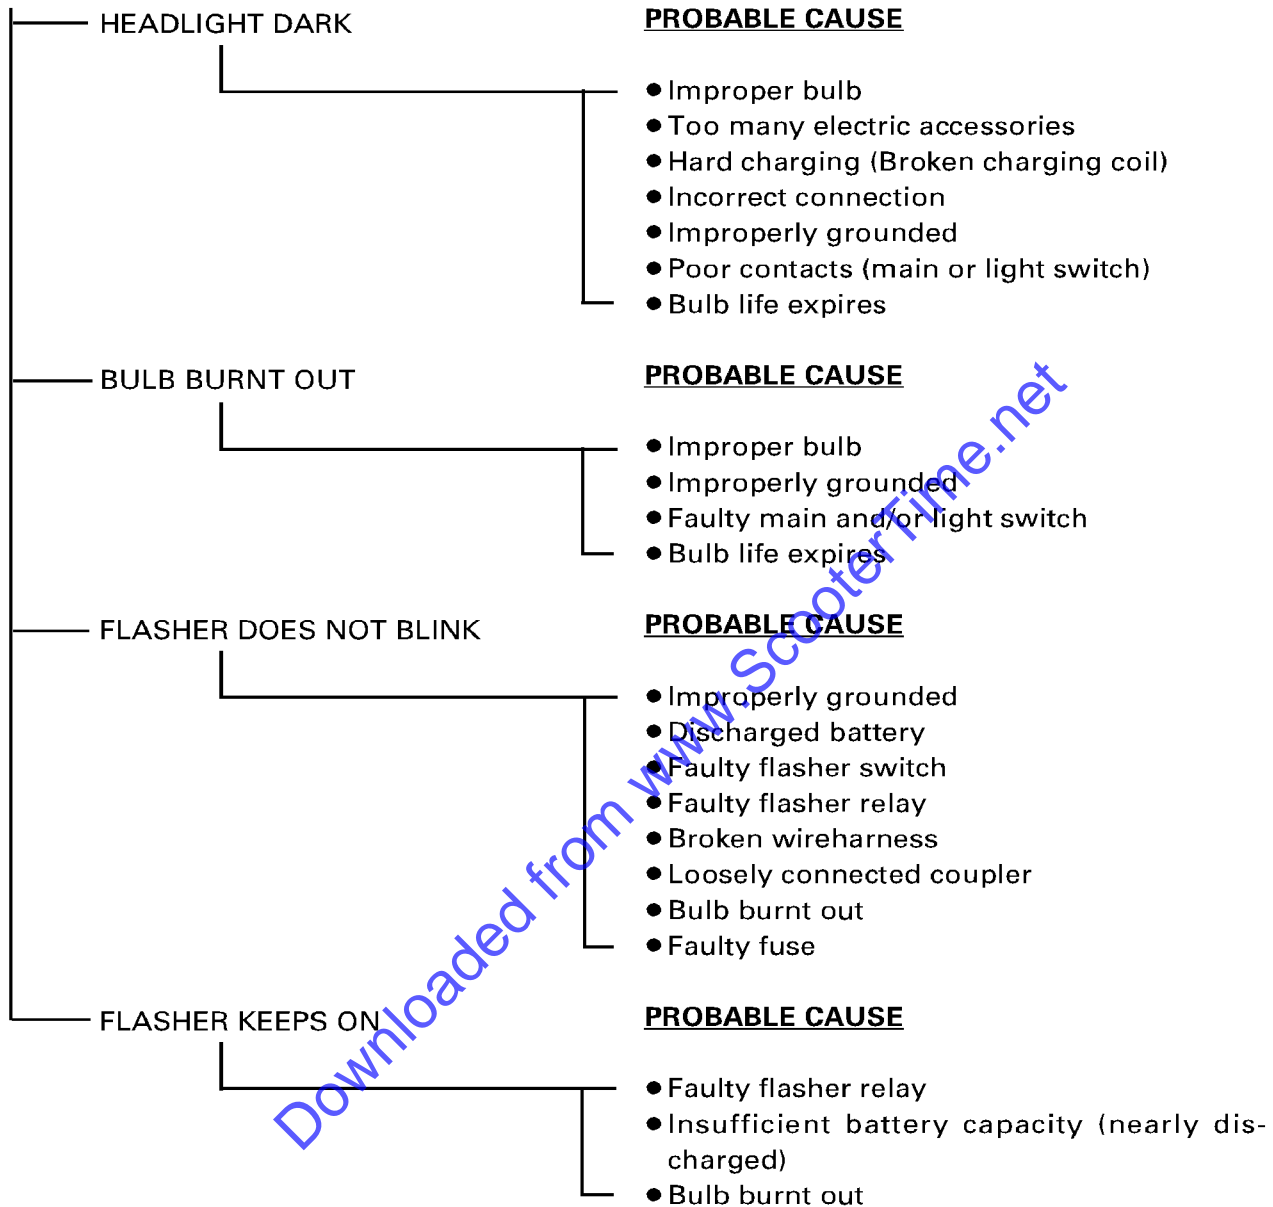

Downloaded from www.ScooterTime.net

# FAULTY SIGNAL AND LIGHTING SYSTEM

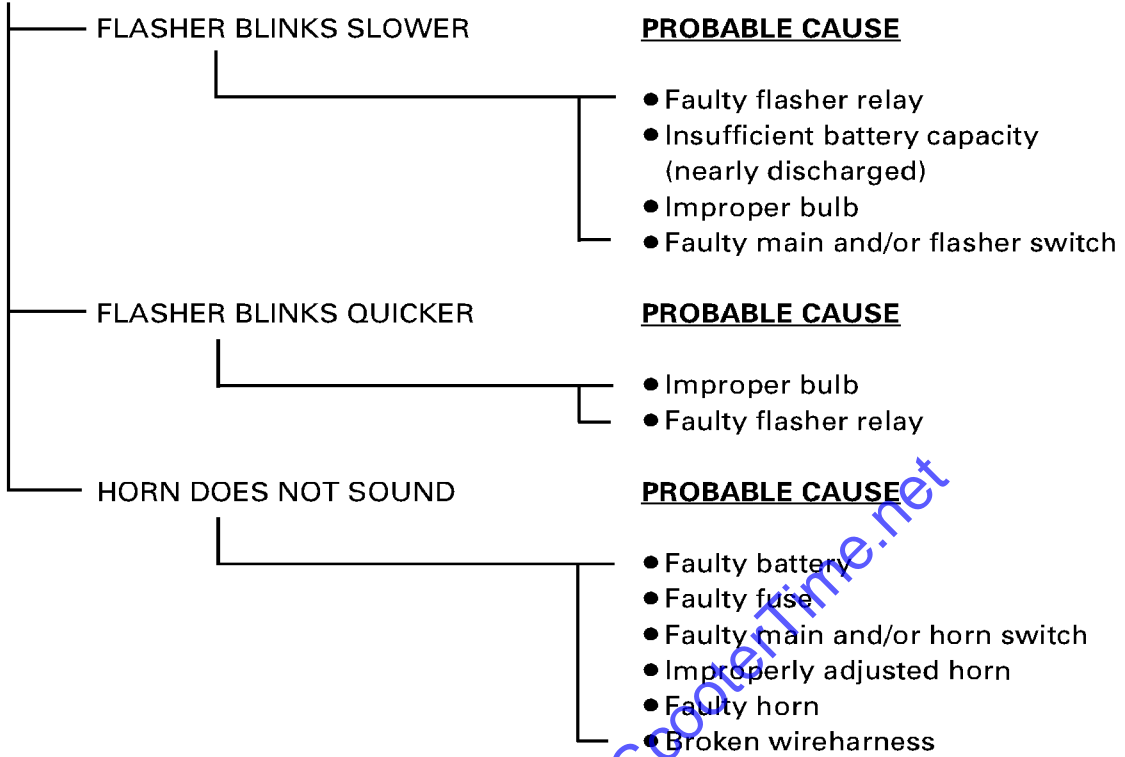


Downloaded from [www.ScooTime.net](http://www.ScooTime.net)

# WIRING DIAGRAM

B	Black
Br	Brown
Ch	Chocolate
Dg	Dark Green
G	Green
L	Blue
Or	Orange
Sb	Sky blue
P	Pink
R	Red
Gy	Gray
Y	Yellow
W	White
B/R	Black/Red
Br/w	Brown/White
G/R	Green/Red
G/Y	Green/Yellow
L/B	Blue/Black
L/Y	Blue/Yellow
L/W	Blue/White
L/R	Blue/Red
R/B	Red/Black
R/Y	Red/Yellow
R/W	Red/White
Y/R	Yellow/White
W/G	White/Green
G/W	Green/White
W/R	White/Red
L/G	Blue/Green

①	Main switch
②	Main fuse
③	Battery
④	Starter relay
⑤	Starter motor
⑥	Rectifier regulator
⑦	Auto choke
⑧	C.D.I. magneto
⑨	C.D.I. unit
⑩	Ignition
⑪	Spark plug
⑫	Front brake switch
⑬	Rear brake switch
⑭	Tail/Brake light
⑮	Front flasher light(right)
⑯	Front flasher light(left)
⑰	Head light
⑱	Flasher relay
⑲	Horn
⑳	Handlebar switch (left)
㉑	Horn switch
㉒	Dimmer switch
㉓	Turn switch
㉔	Fuel sender
㉕	Meter
㉖	Fuel gauge
㉗	Oil indicator light
㉘	Meter light
㉙	High beam indicator light
㉚	Turn indicator light
㉛	Oil level gauge
㉜	Handlebar switch (right)
㉝	Starter switch
㉞	Engine stop switch

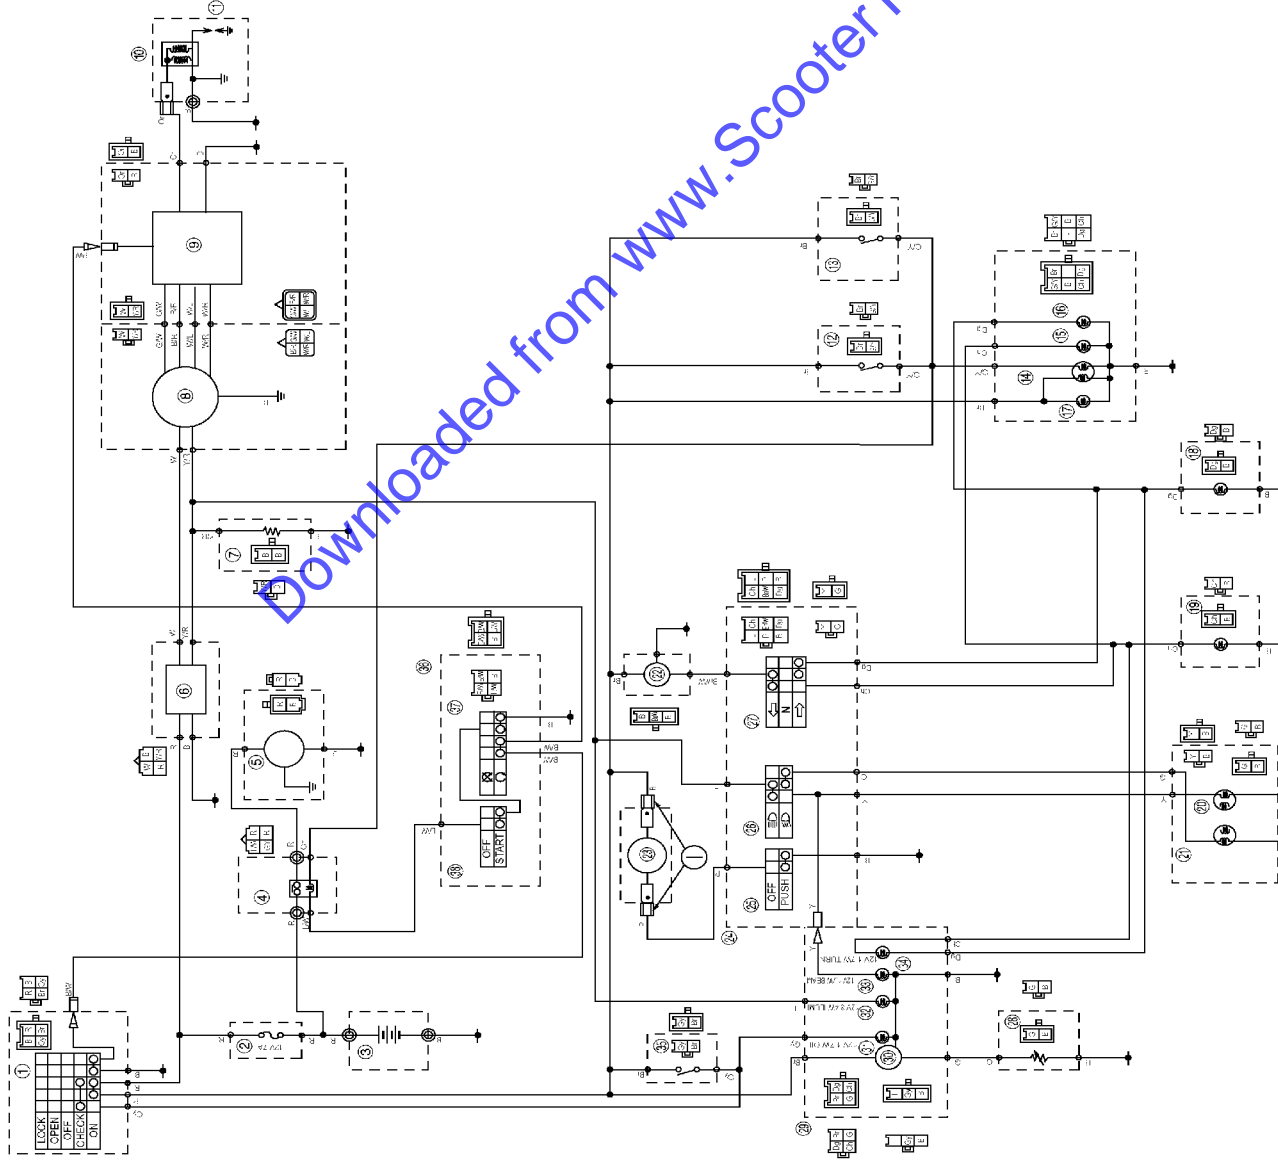

Downloaded from [www.ScooterTime.net](http://www.ScooterTime.net)

Yamaha Motor Canada Ltd.  
480 Gordon Baker Road  
Toronto, ON M2H 3B4