



Reference Series

7540a

7541a

4 CHANNEL POWER AMPLIFIER

SERVICE MANUAL



Infinity Systems, Inc.
250 Crossways Park Dr.
Woodbury, New York 11797

Rev1 3/2005

- CONTENTS -

SPECIFICATIONS	1
FEATURES/TEST CONDITIONS.....	2
CONTROLS/CONNECTIONS.....	3
INSTALLATION.....	5
BASIC TROUBLESHOOTING.....	6
TYPICAL SYSTEM WIRING.....	7
EXPLODED VIEW/PARTS LIST.....	8
MECHANICAL PARTS LIST.....	9
AMPLIFIER BLOCK DIAGRAM.....	10
P.C.B. DRAWINGS.....	11
ELECTRICAL PARTS LIST	15
REF 7541a ELECTRICAL PARTS LIST ADDENDUM.....	18
IC/TRANSISTOR PINOUTS.....	19
REF 7540a SCHEMATICS.....	22
REF 7541a SCHEMATICS.....	25
PACKING.....	28

Reference 7540a/7541a Specifications

Output Power: (14.4V supply)	111W RMS x 4 channels @ 4 ohms; ≤1% THD + N 139W RMS x 4 channels @ 2 ohms; ≤1% THD + N 278W RMS x 2 channels @ 4 ohms; ≤1% THD + N
Signal-to-noise ratio:	81dBA (reference 1W into 4 ohms)
Dynamic power:	164W @ 2 ohms
Effective damping factor:	6.315 @ 4 ohms
Frequency response:	10Hz – 100kHz (-3dB)
Maximum input signal:	5.5V
Maximum sensitivity:	Reference 7540a - 230mV Reference 7541a - 75mV
DC Offset	<50mV (-50%)
Output regulation:	.088dB @ 4 ohms
Idle Current	1.2A
Input Impedance	22kΩ
Max Current Draw	54A @ 4 ohms 83A @ 2 ohms
Dimensions:	12 x 15 x 2 11/16" (L x W x D) (305mm x 381mm x 68mm)
Fuses:	30A x 2

Infinity continually strives to update and improve existing products, as well as create new ones. The specifications and details in this and related JBL publications are therefore subject to change without notice.

features

- 4-Channel Operation
- Advanced MOSFET Oversized Floating Rail Power Supply
- Floating Ground Factory – Head – Unit Speaker – Level input
- Variable Input Sensitivity (250mV – 6V)
- Fully Complementary Output Stage with Class-AB Voltage Amplification
- Gold-plated Power, Input and Output Connectors
- 2-Ohm Stable (Stereo)

Test Conditions and Notes

- All tests to be done, unless otherwise specified, from 10Hz to 83KHz at 14.4V DC into 4 ohm loads and adjust the units gain so that with a .250 volt input signal the unit is at its maximum rated output. All measurements will be done using an Audio precision system one and the supply voltage.
- An A+ line voltage of 14.4V DC shall be applied to the unit under test for all measurements unless otherwise specified. The voltage applied to the unit shall be measured at the power connection on the Amplifier.
- Signal Source
Unless otherwise specified, all tests shall be conducted with the Audio Signal Generator output configured to be balanced, less than or equal to 50 ohm source impedance, and floating. The signal source "GND" shall be connected to the Amplifier PWR GND at the Amplifier.
- Output Load
Unless otherwise specified, all tests shall be conducted with 4 ohm resistive loads having less than 10% reactive components at any frequency below 83KHz. Each resistor shall have a value that remains within 1% while dissipating the rated output of the unit under test.
- Power Indicator Green LED steadily illuminates for normal operation. Illuminates up Red LED blinks when protection circuitry is engaged, and during power up.

POWER CONNECTIONS

The Reference amplifiers are capable of delivering high power levels, and require a reliable connection to the vehicle's electrical system in order to perform optimally. See Figure 1 for connection location. Please adhere to the following instructions carefully.

GROUND CONNECTION

Connect the amplifier's Ground (GND) terminal to a solid point on the vehicle's metal chassis, as close to the amplifier as possible. Refer to the chart below to determine minimum wire-gauge size. Sand away any paint from this location; use a star-type-lock washer to secure the connection.

POWER CONNECTION


Connect a wire (see chart at right for appropriate gauge) directly to the vehicle's positive battery terminal, and install an appropriate fuse holder within 18" of the battery terminal. Do not install the fuse at this time. Route the wire to the amplifier's location, and connect it to the amplifier's positive (+12V) terminal. Be sure to use appropriate grommets whenever routing wires through the firewall or other sheet metal. Failure to adequately protect the positive wire from potential damage may result in a vehicle fire. When you are done routing and connecting this wire to the battery and to the amplifier, you may install the fuse at the battery. The fuse value should be selected based on total amplifier-current draw; see chart at right.

REMOTE CONNECTION

Connect the amplifier's Remote (REMOTE) terminal to the source unit's Remote Turn-On lead using a minimum of 18-gauge wire. If your source unit does not have a remote turn-on connection, connect the amplifier's (REMOTE) terminal to the vehicle's accessory circuit.



Figure 1. Terminal-connection end plate.

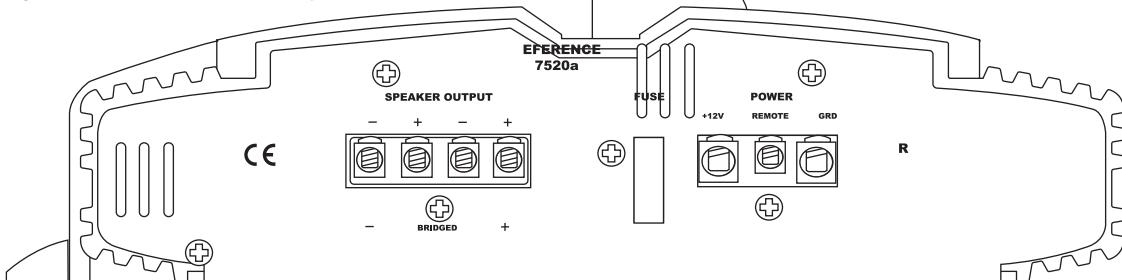

WIRE-GAUGE CHART

Amplifier Model	Maximum Current Draw	Minimum Wire Gauge
-----------------	----------------------	--------------------

7540a/7541a 85A #8 AWG

These recommendations assume 7' – 10' wire runs. If your installation differs markedly, you will need to adjust the wire gauge accordingly.

SPEAKER CONNECTIONS



Refer to the application guides on the pages that follow. Speaker connections should be made using a minimum of 16-gauge wire.

HIGH-LEVEL INPUT CONNECTIONS

The 7540a/7541a amplifiers are equipped with speaker-level inputs that allow you to add an amplifier to head units that do not have RCA line outputs. The speaker outputs for the source unit should be connected to the amplifier using the supplied connector (square four-wire plug). Remember to check for proper polarity.

NOTE: When using the low-level or high-level inputs, the AUX outputs can be used to pass a full-range line-level signal to another amplifier.

Figure 2. Speaker-level connector.

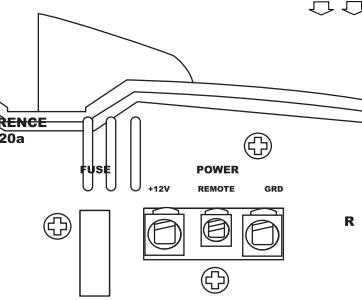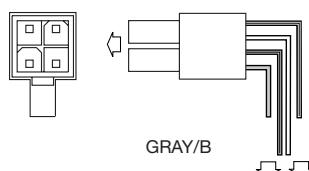

APPLICATIONS – 7540a/7541a

The 7540a/7541a can be set up for stereo 4-channel, 3-channel or bridged 2-channel operation, as shown in Figures 7 through 9.

NOTE: For simplicity, Figures 7 through 9 do not show power, remote and input connections.

NOTE: Minimum speaker impedance for stereo operation is 2 ohms. Minimum speaker impedance for bridged operation is 4 ohms.

NOTE: "Bass Boost" only affects rear channels.

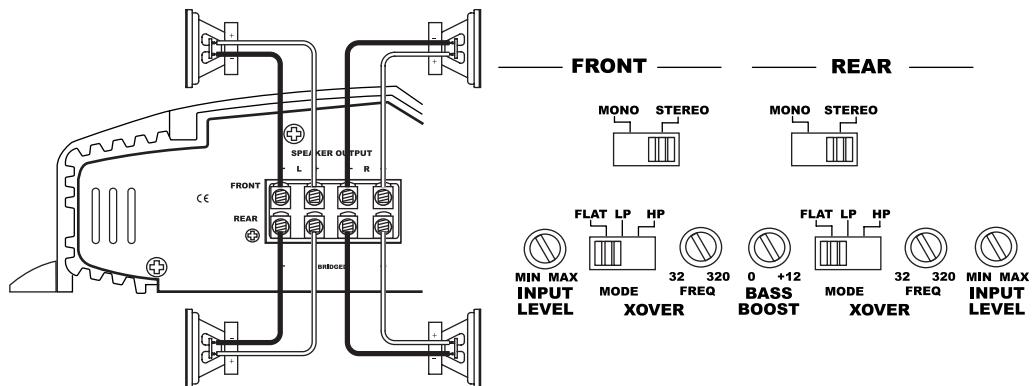


Figure 7. 7540a/7541a amplifier in 4-channel (stereo) operation to drive front and rear full-range speakers.

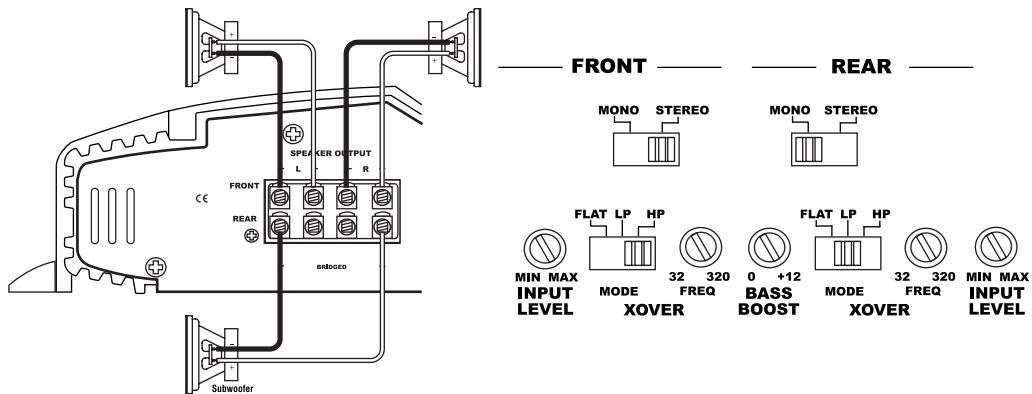


Figure 8. 7540a/7541a is set up for 3-channel operation to drive a set of full-range speakers and a subwoofer.

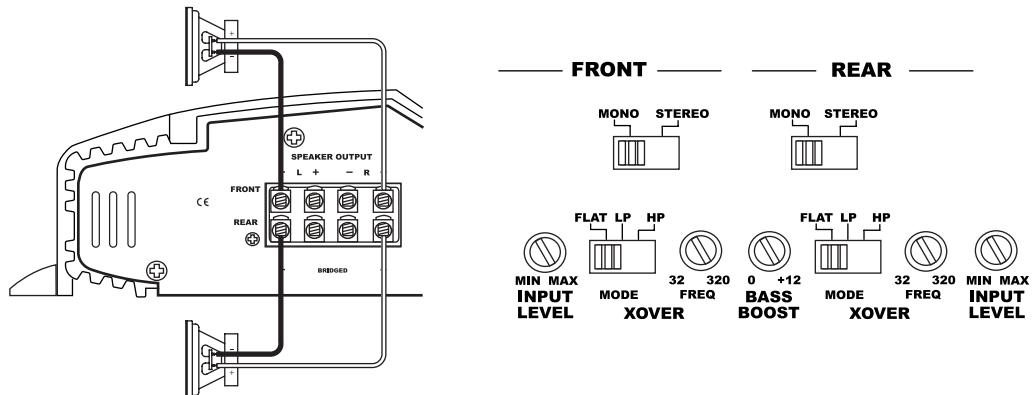


Figure 9. 7540a/7541a used in bridged 2-channel mode to drive a set of components or subwoofers.

INSTALLATION AND SETUP

SETTING THE CROSSOVER(S)

Determine your system plans and set the crossover-mode switch accordingly. If your system design does not include a subwoofer, set the crossover mode to FLAT and skip to "Setting Input Sensitivity."

MODE SWITCH

Flat: Allows a full-range signal through to the speakers; can be used with larger full-range speakers such as 6" x 9"s.

HP: Allows a high-pass signal through to the speakers; should be used with most loudspeakers (can protect your full-range speakers from being overdriven with low frequencies, one cause of speaker damage).

LP: Allows bass to pass through to the speakers; should be selected when powering subwoofers.

Initially set the crossover-frequency control midway. While listening to music, adjust the crossover for the least perceived distortion from the speakers, allowing them to reproduce as much bass as possible.

Systems using a separate subwoofer set the crossover mode to HP (high pass) for your full-range speakers. Adjust the crossover frequency to limit bass, and provide increased system volume with less distortion.

For subwoofers, choose the highest frequency that removes vocal information from the sound of the subwoofer.

If using the 7540a/7541a to drive a subwoofer(s), set the crossover mode to LP (low pass).

SETTING INPUT SENSITIVITY

1. Initially turn the INPUT LEVEL control(s) to minimum (counterclockwise).
2. Reconnect the (-) negative lead to the vehicle's battery. Apply power to the audio system and play a dynamic music track.
3. On the source unit, increase the volume control to 3/4 volume. Slowly increase the INPUT LEVEL control(s) toward three o'clock until you hear slight distortion in the music. Then reduce the INPUT LEVEL slightly until distortion is no longer heard.

NOTE: After the source unit is on, blue LEDs (on the top panel) will light, indicating the amplifier is on. If not, check the wiring, especially the remote connection from the source unit. Also refer to "Troubleshooting" on the page 6

AUX OUTPUT

Reference amplifiers are equipped with full-range outputs that can be used to connect additional amplifiers.

NOTE: When using the low- or high-level inputs, the AUX outputs can be used to pass a full-range line-level signal to another amplifier.

REMOTE LEVEL CONTROL (OPTIONAL)


All three Reference subwoofer amplifiers have inputs for an optional remote level control (100rc). This will allow the subwoofer level to be adjusted from the listening position. Connect the optional remote level control using the RJ-11 jack on the side of the amplifier. Install the control module in the front of the vehicle within easy reach of the driver. Both the underside of the dash and the center console are suitable locations. Refer to the mounting instructions accompanying the 100rc.

SETTING THE BASS BOOST

The 7540a/7541a are all equipped with a bass-boost control. This allows you to enhance the bass output of your system at 50Hz up to 12dB.

NOTE: Only rear channels of the 7540a/7541a are affected by the bass boost control.

Figure 13. Control end panel.

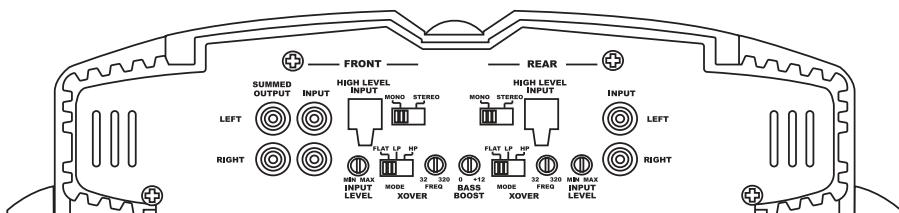

TROUBLESHOOTING

• **PROBLEM:**

No audio (POWER LED is off).

CAUSE and SOLUTION:

No voltage at BATT+ and/or REM terminals, or bad or no ground connection. Check voltages at amplifier terminals with VOM.

• **PROBLEM:**

No audio (PROTECT LED flashes every 4 seconds).

CAUSE and SOLUTION:

DC voltage on amplifier output. Amplifier may need service; see enclosed warranty card for service information.

• **PROBLEM:**

No audio (PROTECT LED is on).

CAUSE and SOLUTION:

Amplifier is overheated. Make sure amplifier cooling is not blocked at mounting location; verify that speaker-system impedance is within specified limits.

• **PROBLEM:**

No audio (PROTECT and POWER LEDs flash).

CAUSE and SOLUTION:

Voltage less than 9V on BATT+ connection. Check vehicle charging system.

• **PROBLEM:**

No audio (PROTECT LED is on).

CAUSE and SOLUTION:

Voltage greater than 16V or less than 8.5V on BATT+ connection. Check vehicle charging system.

• **PROBLEM:**

Distorted audio.

CAUSE and SOLUTION:

Input sensitivity is not set properly, or amplifier or source unit is defective. Check INPUT LEVEL setting, or check speaker wires for shorts or grounds.

• **PROBLEM:**

Distorted audio (PROTECT LED flashes).

CAUSE and SOLUTION:

Short circuit in speaker or wire. Remove speaker leads one at a time to locate shorted speaker or wire, then repair.

• **PROBLEM:**

Music lacks "punch."

CAUSE and SOLUTION:


Speakers are not connected properly. Check speaker connections for proper polarity.

STATUS LEDs


Clip: Indicates the amplifier is being overdriven, and your speakers may be in danger. This should blink only on musical peaks, and not be on constantly.

Power: Indicates the amplifier is on.

Protection: Refer to "Troubleshooting" for specific indications.

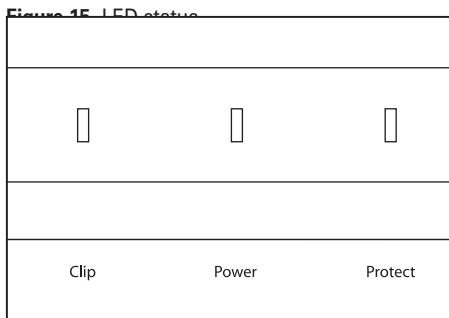

Typical System Configuration

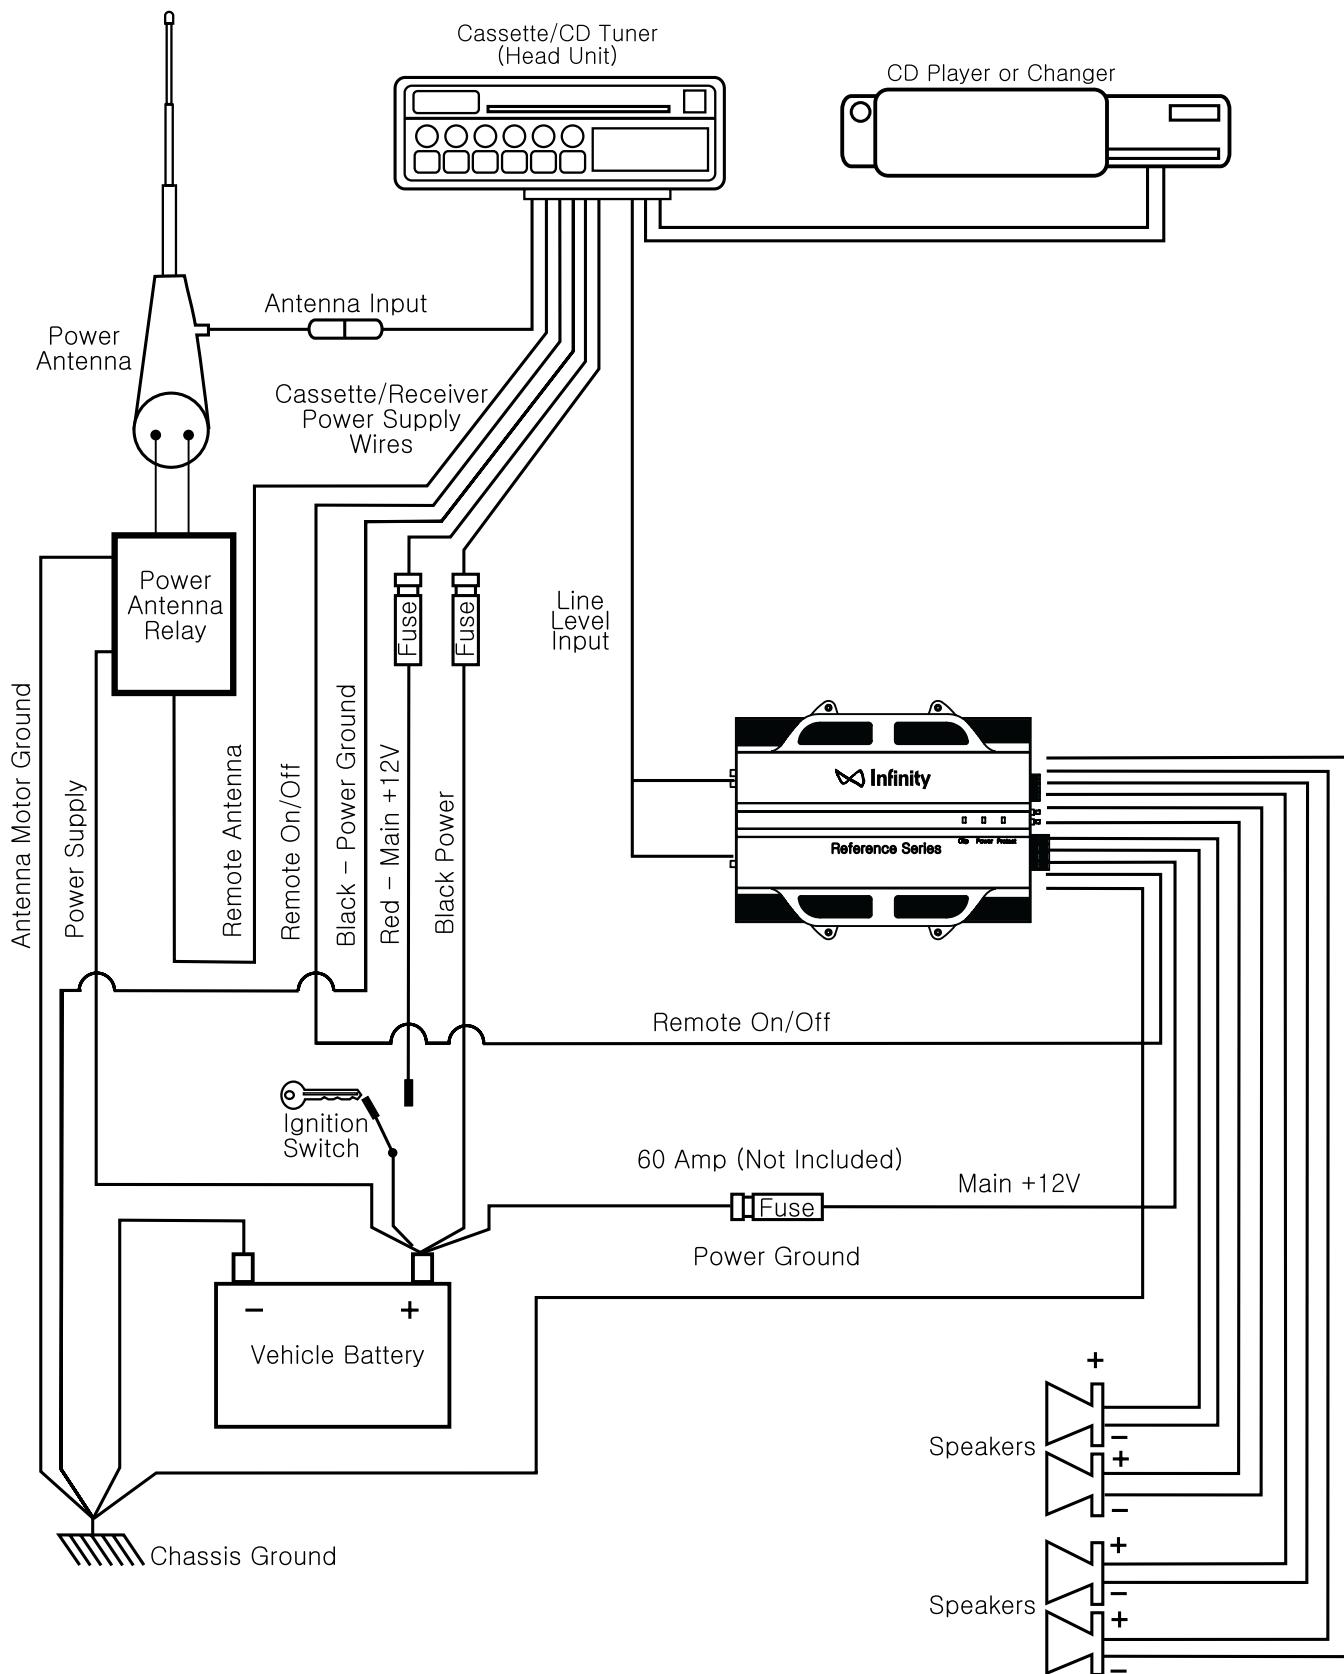

Exploded View


A

B

C


D

E

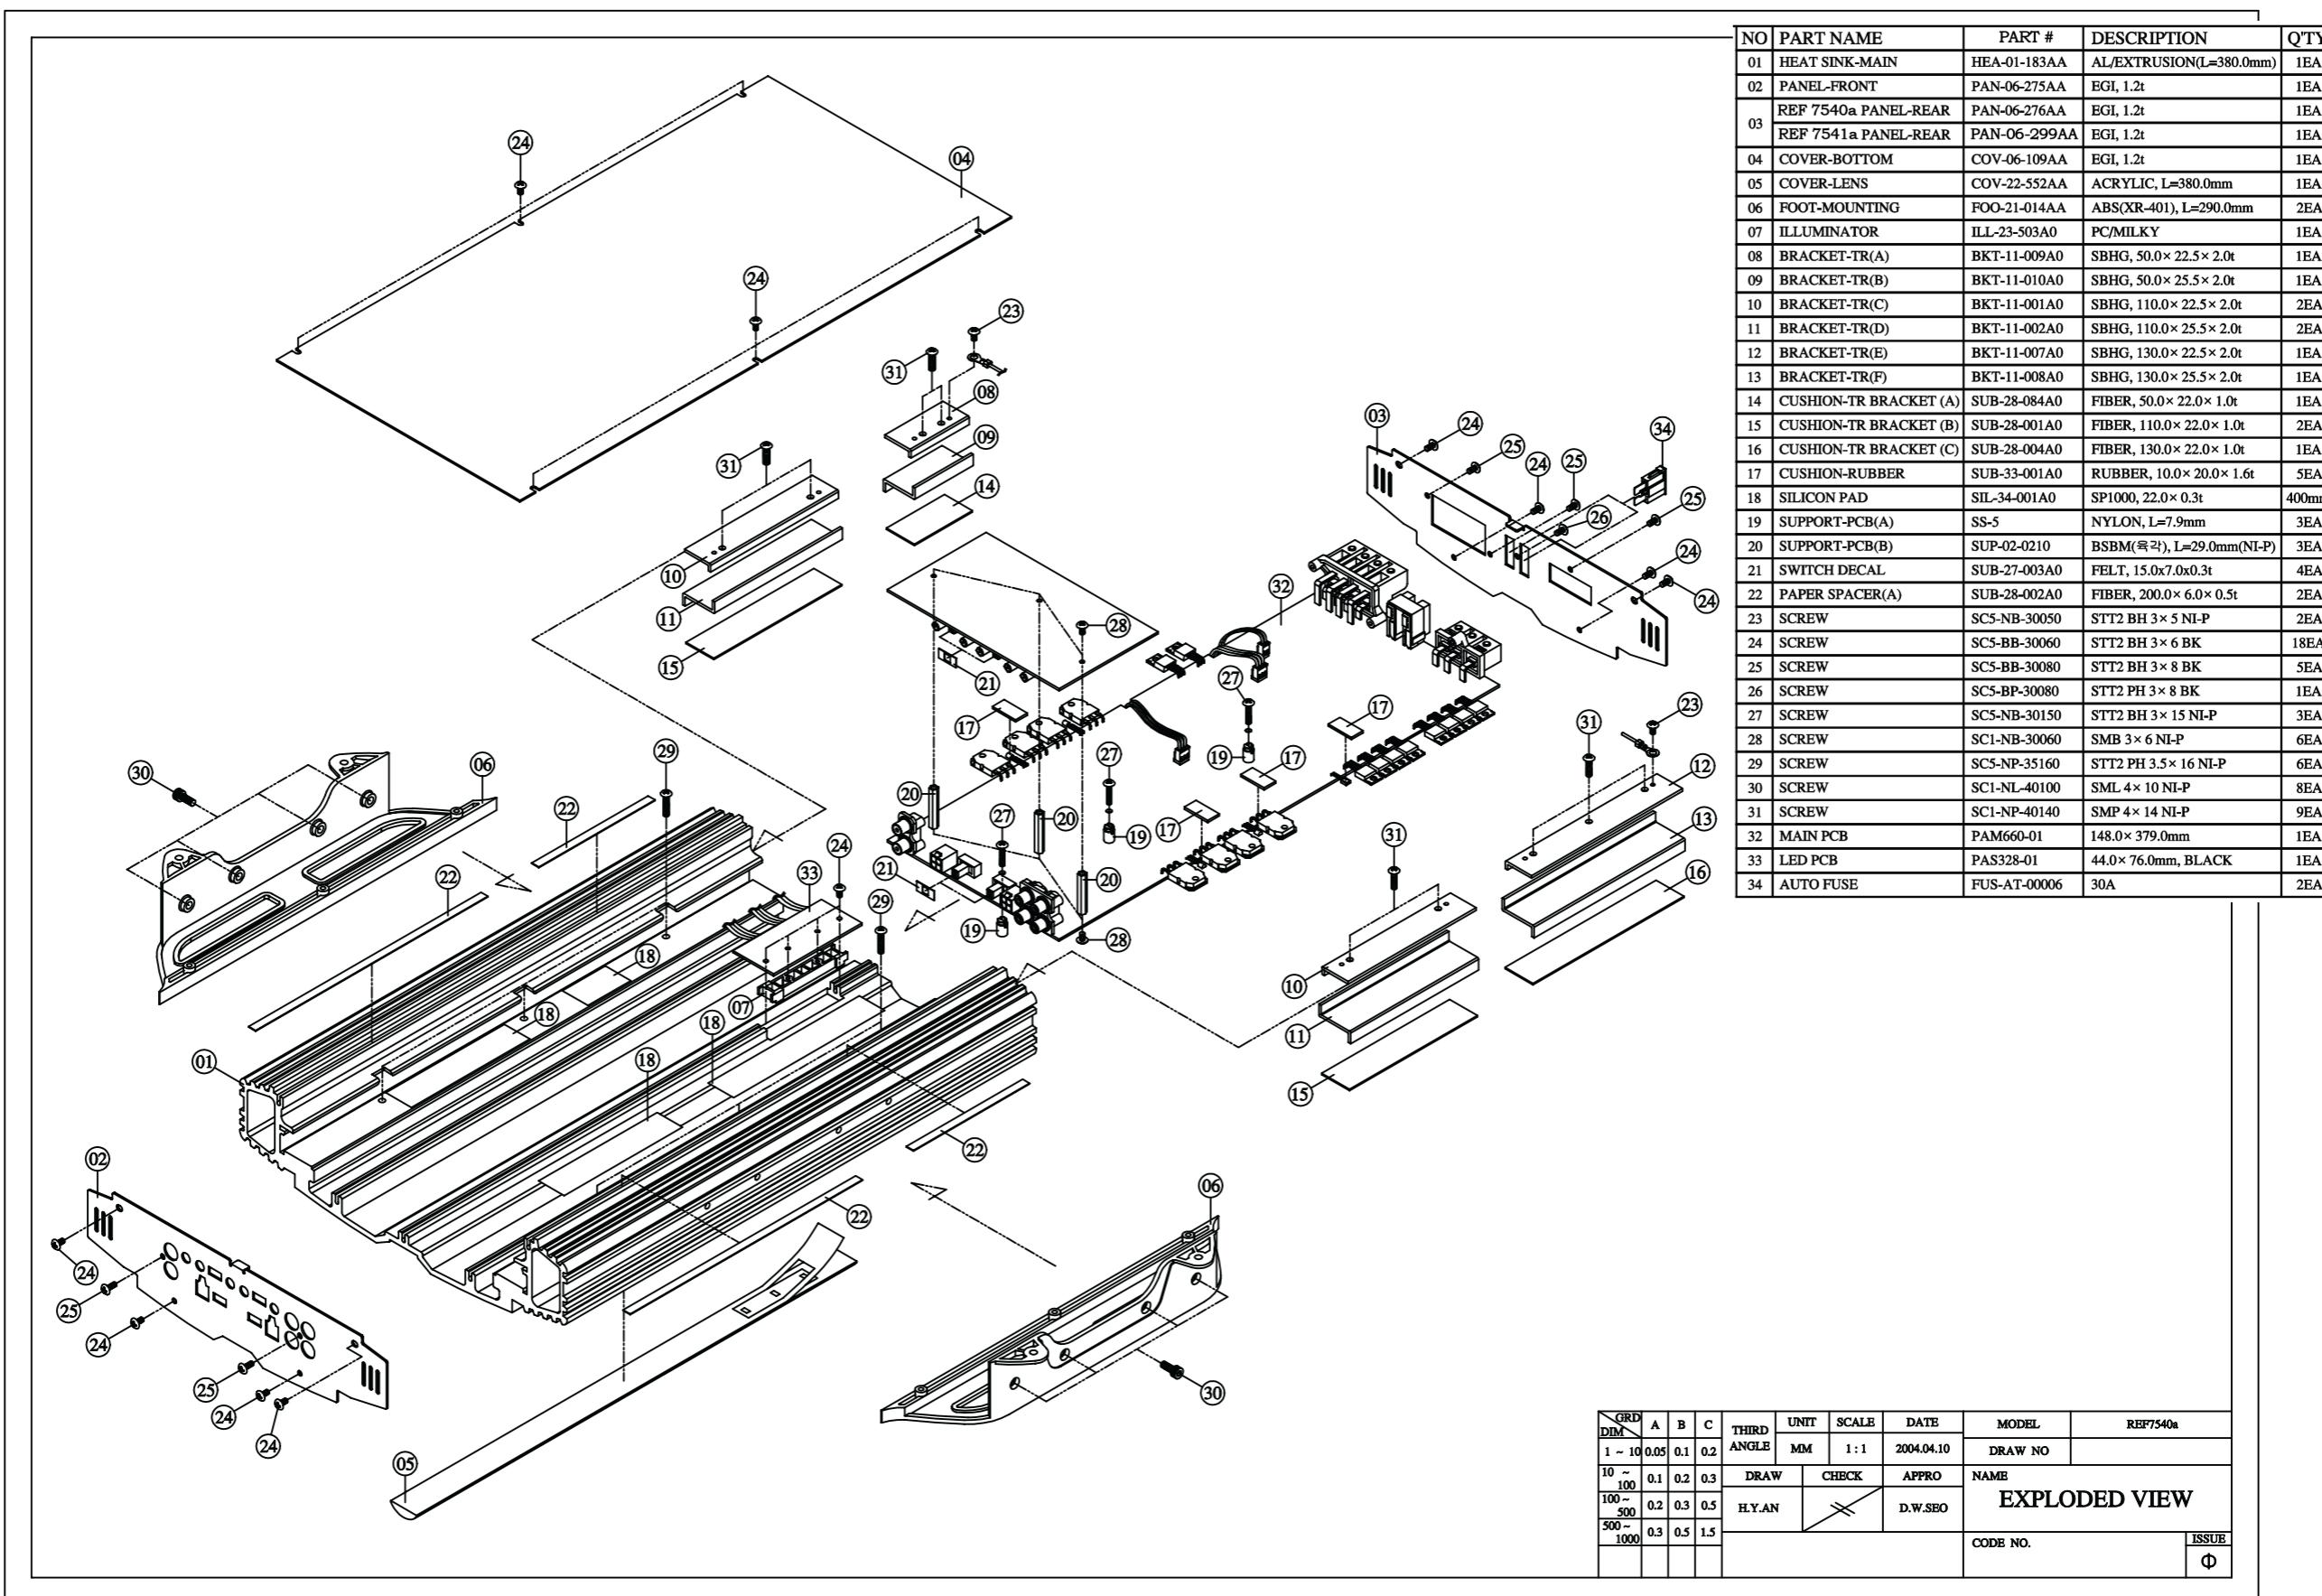


PART NO.	NOMENCLATURE	DESCRIPTION	MFR PARTS	Q'TY
HEA-01-183AA	HEAT SINK-MAIN	AL/EXTRUSION(L=380.0mm)	side:P432C sandton spray,top:silver spray/1 silk screen	1
PAN-06-275AA	PANEL-FRONT	EGI, 1.2t	P432C Painting & silk screen	1
PAN-06-276AA	REF 7540a PANEL-REAR	EGI, 1.2t	P432C Painting & silk screen	1
PAN-06-299AA	REF 7541a PANEL-REAR	EGI, 1.2t	P432C Painting & silk screen	1
COV-06-109AA	COVER-BOTTOM	EGI, 1.2t	P432C Painting	1
COV-22-552AA	COVER-LENS	ACRYLIC,(L=380mm)	SILKSCREEN,DUAL TAPE	1
FOO-21-014AA	FOOT-MOUNTING	ABS(XR-401),L=290mm	SILVER SPRAY	2
ILL-23-503A0	ILLUMINATOR	PC/MILKY		1
BKT-11-009A0	BRACKET-TR(A)	SBHG, 50.0x22.5x2.0t		1
BKT-11-010A0	BRACKET-TR(B)	SBHG, 50.0x25.5x2.0t		1
BKT-11-001A0	BRACKET-TR(C)	SBHG, 110.0x22.5x2.0t		2
BKT-11-002A0	BRACKET-TR(D)	SBHG, 110.0x25.5x2.0t		2
BKT-11-007A0	BRACKET-TR(E)	SBHG, 130.0x22.5x2.0t		1
BKT-11-008A0	BRACKET-TR(F)	SBHG, 130.0x25.5x2.0t		1
SUB-28-084A0	CUSHION-TR BRACKET(A)	FIBER, 50.0x22.0x1.0t		1
SUB-28-001A0	CUSHION-TR BRACKET(B)	FIBER, 110.0x22.0x1.0t		2
SUB-28-004A0	CUSHION-TR BRACKET(C)	FIBER, 130.0x22.0x1.0t		1
SUB-33-001A0	CUSHION-RUBBER	RUBBER, 10.0x20.0x1.6t		5
SIL-34-001A0	SILICON PAD	SP1000, 22.0x0.3t		400mm
SS-5	SUPPORT-PCB(A)	NYLON, L=7.9mm		3
SUP-02-0210	SUPPORT-PCB(B)	BSBM , L=29.0mm(NI-P)	SUB PCB	3
SUB-27-003A0	SWITCH DECAL	FELT, 15.0x7.0x0.3t		4
SUB-28-002A0	PAPER SPACER(A)	FIBER, 200.0x6.0x0.5t	COVER-BOTTOM	3
SUB-28-519A0	PAPER SPACER(B)	FIBER, 200.0x8.0x0.5t	TR	1
SUB-28-503A0	PAPER SPACER(C)	FIBER, 200.0x10.0x0.5t	FET	1
SC5-NB-30050	SCREW	STT2 BH 3x5 NI-P	GROUND WIRE	2
SC5-BB-30060	SCREW	STT2 BH 3x6 BK	PANEL/S+H/S(8),SUB/P+ILLUMINATOR(2),SUB/P+H/S(2),C/B+H	18
SC5-BB-30080	SCREW	STT2 BH 3x8 BK	RCA(2), TERMINAL(3)	5
SC5-BP-30080	SCREW	STT2 PH 3x8 BK	FUSE HOLDER	1
SC5-NB-30150	SCREW	STT2 BH 3x15 NI-P	PCB + HEAT SINK	3
SC1-NB-30060	SCREW	SMB 3x6 NI-P	SUB PCB	6
SC5-NP-35140	SCREW	STT2 PH 3.5x16 NI-P	FOOT/M+ H/SINK	6
SC1-NL-40100	SCREW	SML 4x10 NI-P	FOOT/M + H/SINK	8
SC1-NP-40140	SCREW	SMP 4x14 NI-P	BRACKET TR	9
SC4-NO-40250	SCREW	STT1 OH 4x25 NI-P	ACCESSORY	4


7540a/7541a BLOCK DIAGRAM

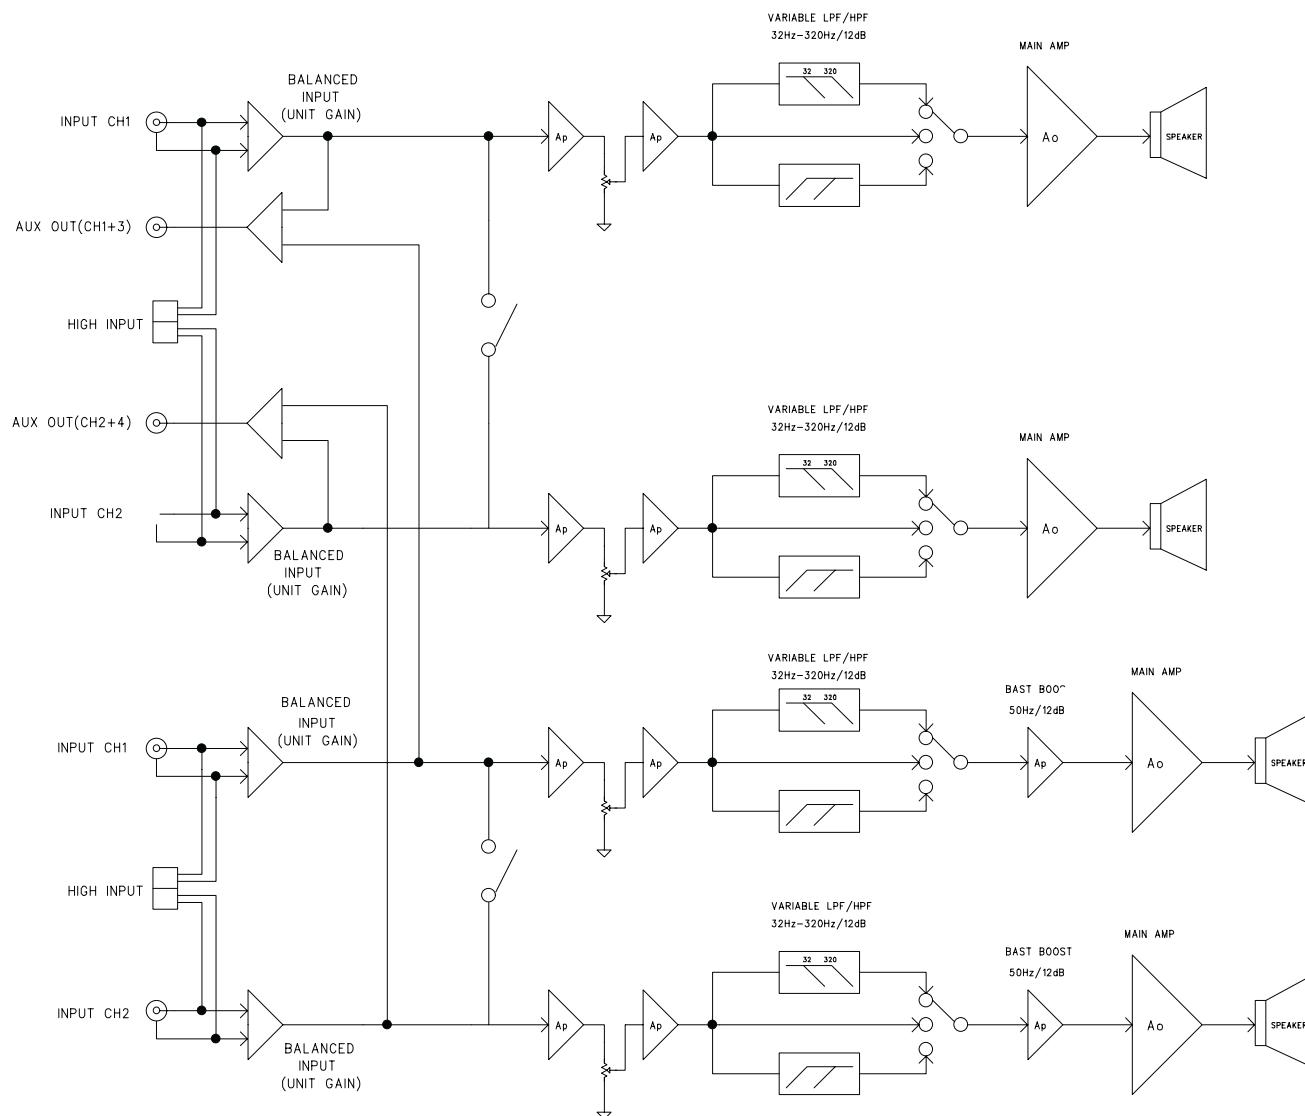

Printed Circuit Board (Top View)

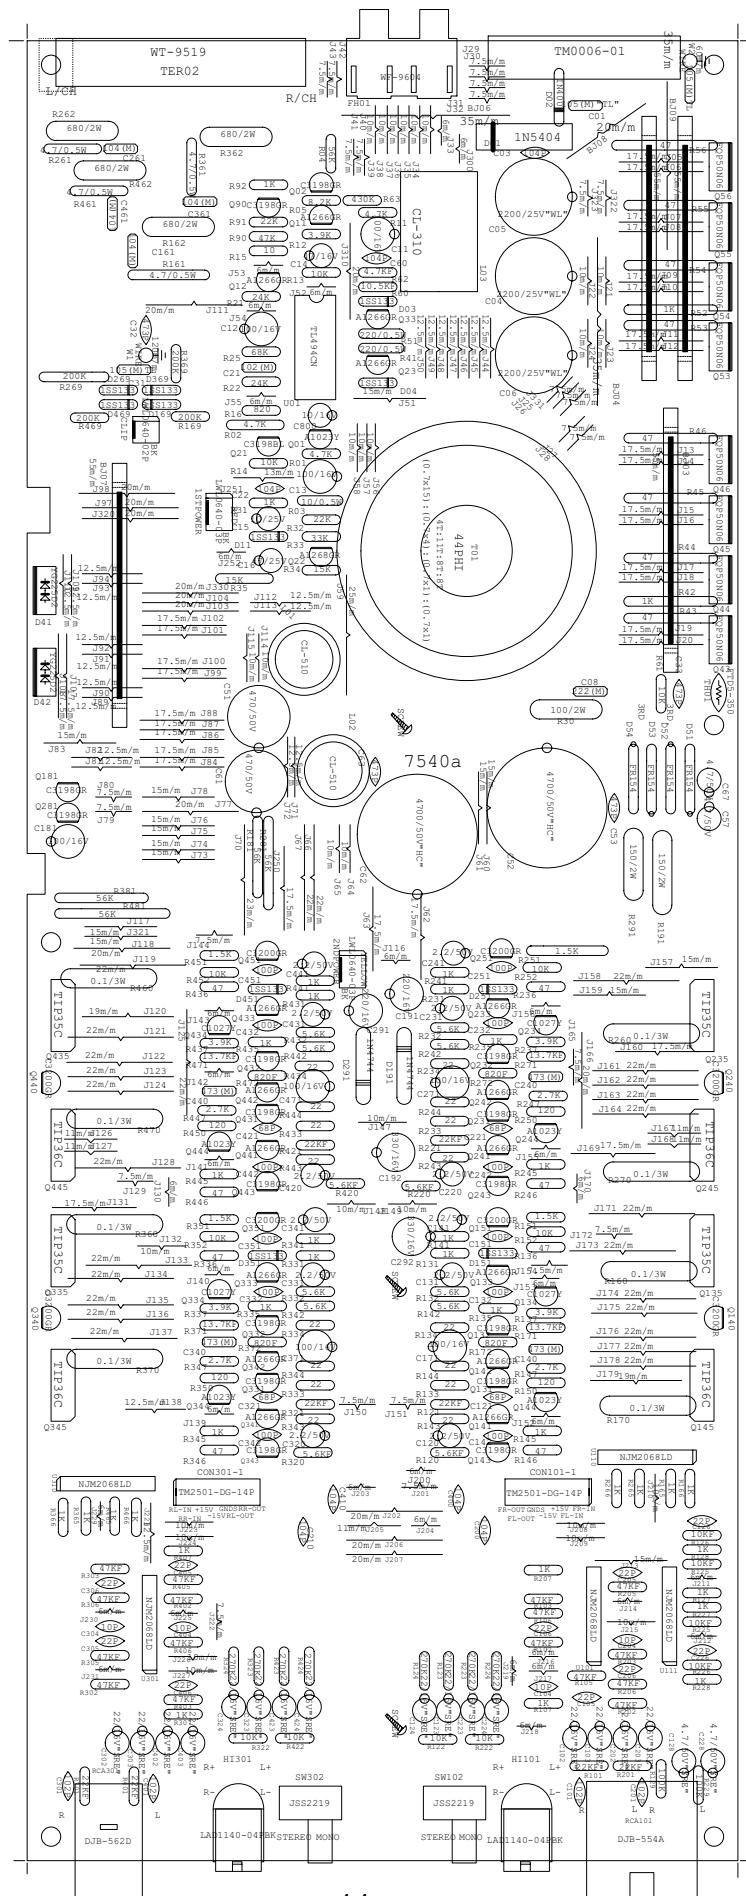



Printed Circuit Board (BOTTOM View)

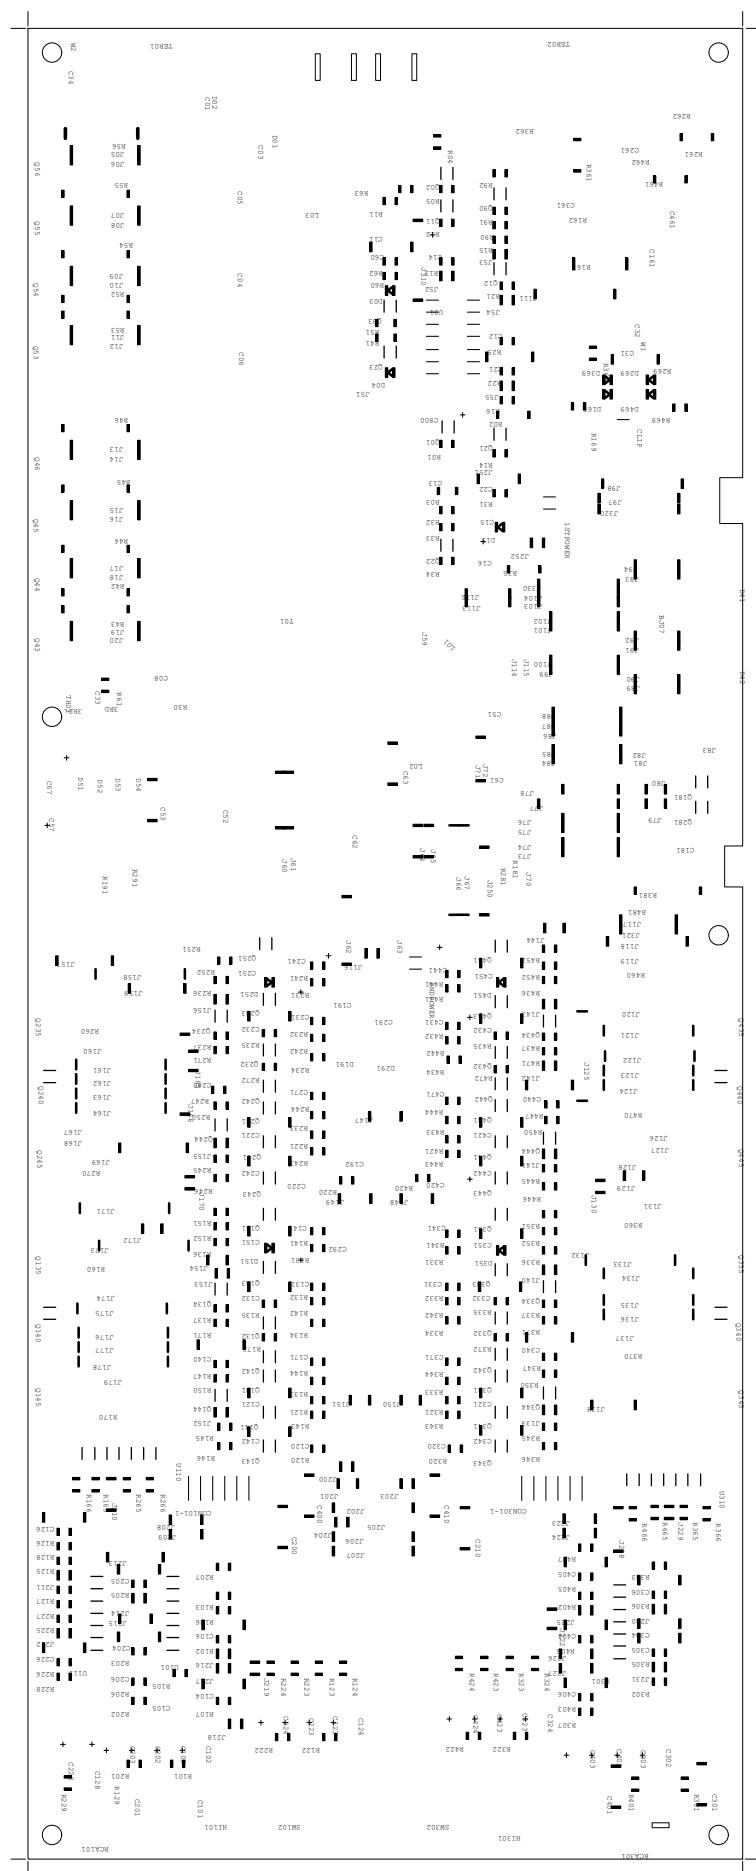

Power Amplifier



Printed Circuit Board (TOP/BOTTOM View)

PAS326-01

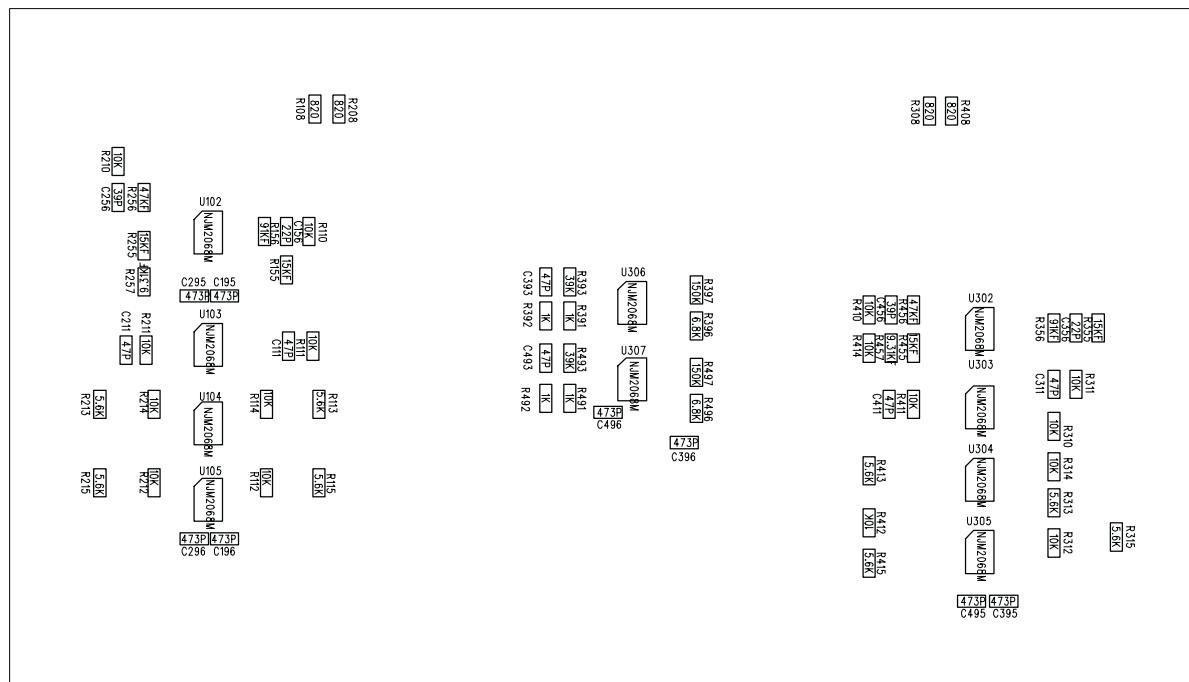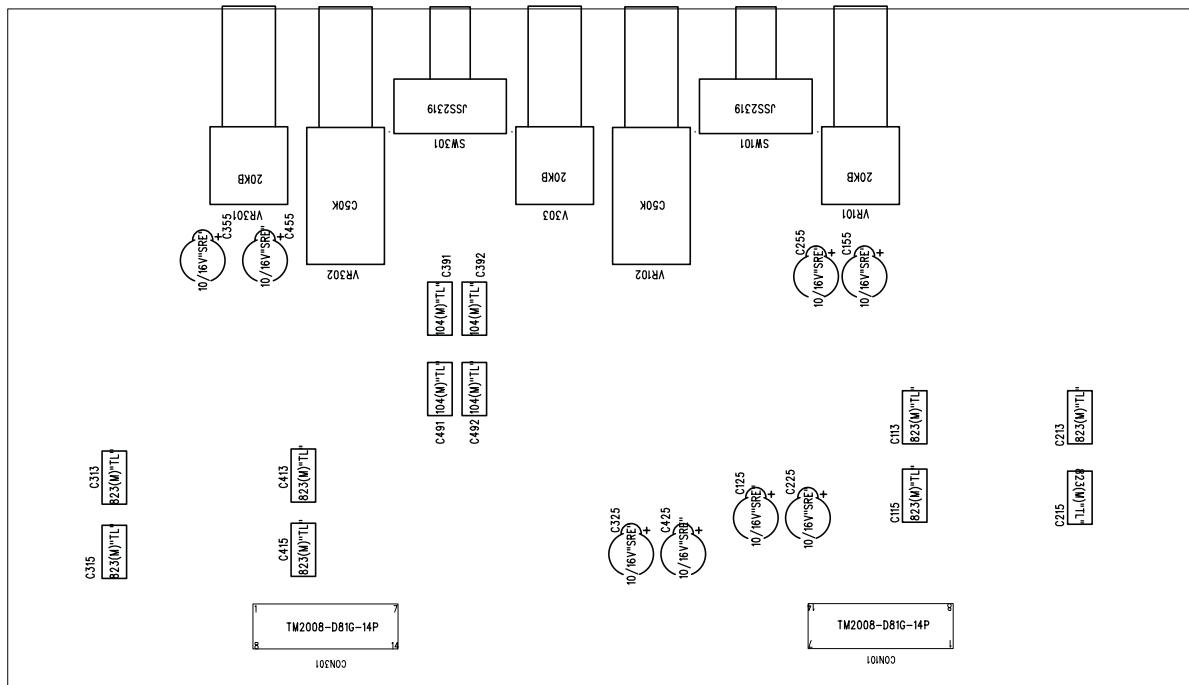

Printed Circuit Board (TOP/BOTTOM View)

PAS328-01

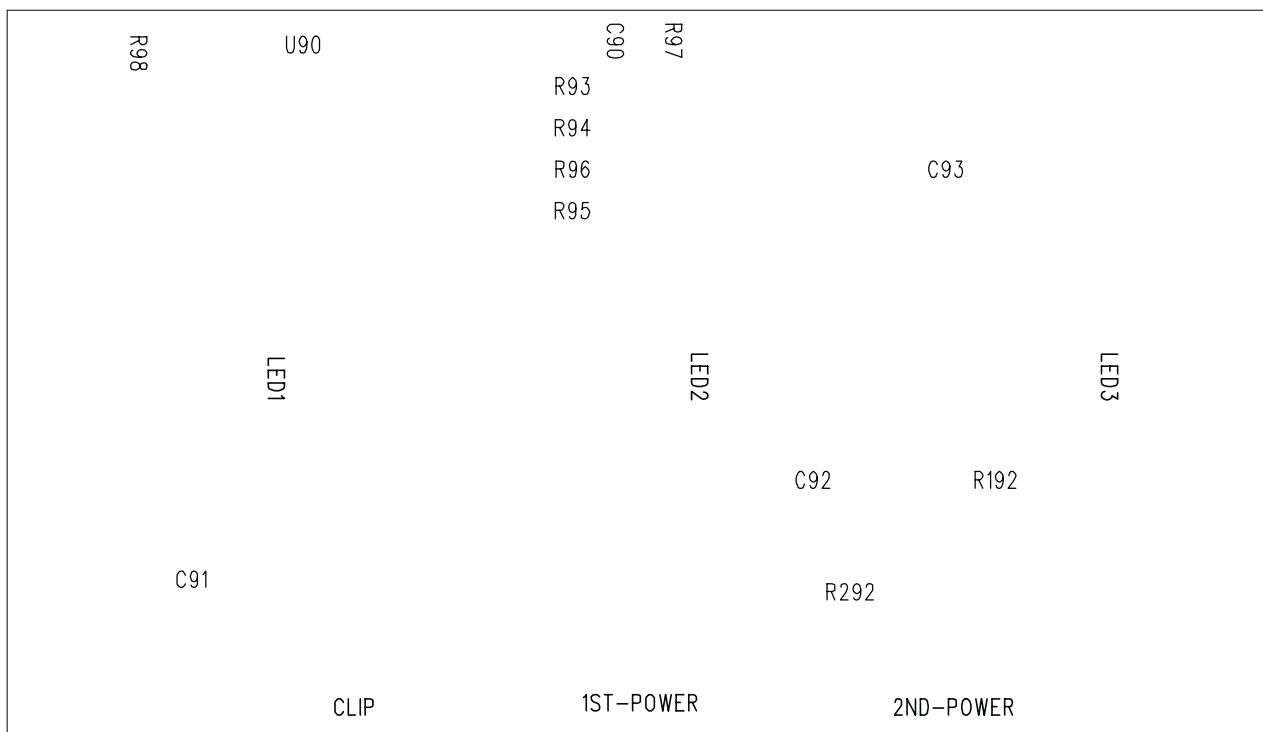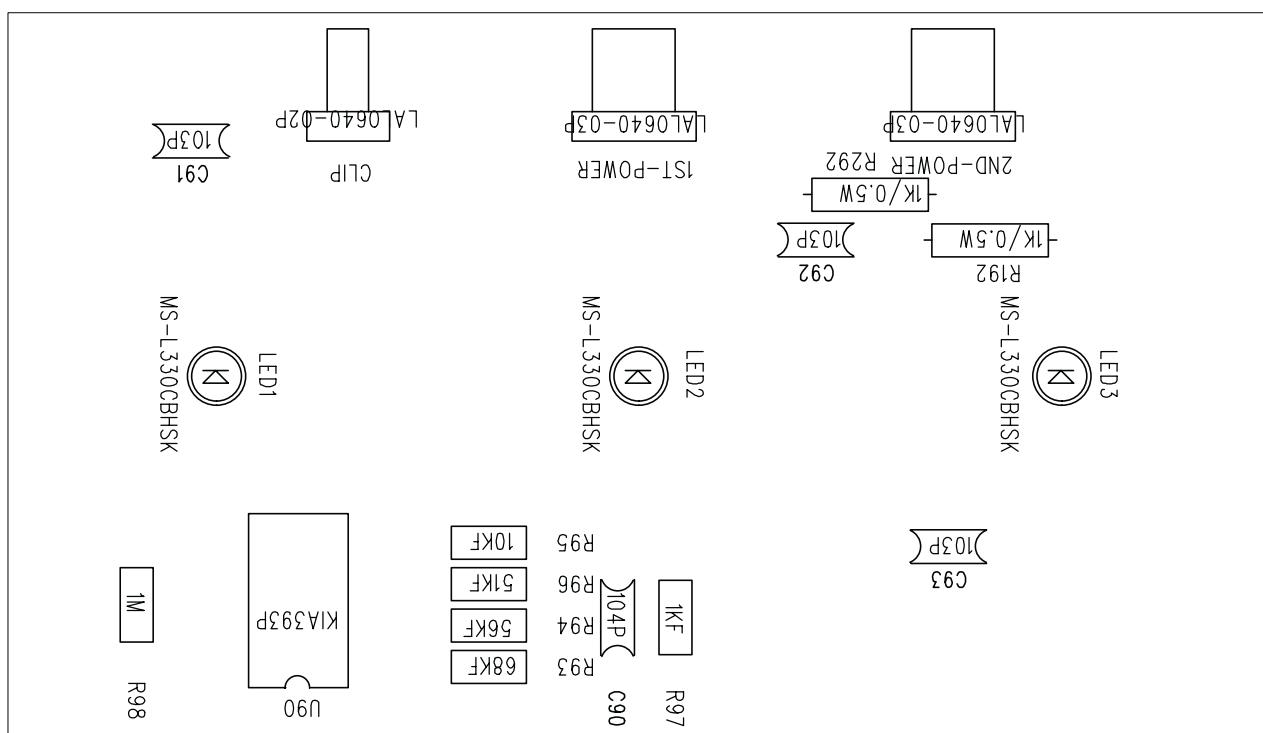

Electrical Parts List

PART NO.	NOMENCLATURE	DESCRIPTION	MFR PARTS	REF. NO	Q'TY
TRS-00-00087	TRANSISTOR	SMALL SIGNAL PNP	KTA1023Y	Q01,144,244,344,444	5
TRS-00-00088	TRANSISTOR	SMALL SIGNAL NPN	KTC1027Y	Q134,234,334,434	4
TRS-00-00091	TRANSISTOR	SMALL SIGNAL PNP	KTA1268GR	Q22	1
TRS-00-00111	TRANSISTOR	SMALL SIGNAL NPN	KTC3200GR	Q151,251,351,451	4
TRS-00-00110	TRANSISTOR	SMALL SIGNAL NPN	KTC3198GR	Q02,90,131,132,143,181,231,232,243,281 Q331,332,343,431,432,443	16
TRS-00-00090	TRANSISTOR	SMALL SIGNAL PNP	KTA1266GR	Q11,12,23,33,133,141,142,233,241,242 Q333,341,342,433,441,442	16
TRS-00-00109	TRANSISTOR	SMALL SIGNAL NPN	KTC3198BL	Q21	1
DIO-00-00108	DIODE	FAST RECOVERY	FR154	D51,52,53,54	4
DIO-00-00003	DIODE	RECTIFIER	IN4004	D02	1
DIO-00-00006	DIODE	SWITCHING SIGNAL	1SS133	D03,04,11,151,169,251,269,351,369,451 D469	11
RES-00-00586	RESISTOR	METAL FILM 1/5WF	820 OHM	R172,272,372,472	4
RES-00-00523	RESISTOR	METAL FILM 1/5WF	4.7K OHM	R62	1
RES-00-00545	RESISTOR	METAL FILM 1/5WF	5.6K OHM	R120,220,320,420	4
RES-00-00402	RESISTOR	METAL FILM 1/5WF	10K OHM	R125,126,225,226	4
RES-00-00399	RESISTOR	METAL FILM 1/5WF	10.5K OHM	R60	1
RES-00-00417	RESISTOR	METAL FILM 1/5WF	13.7K OHM	R171,271,371,471	4
RES-00-00467	RESISTOR	METAL FILM 1/5WF	22K OHM	R101,121,201,221,301,321,401,421	8
RES-00-00537	RESISTOR	METAL FILM 1/5WF	47K OHM	R102,103,105,106,202,203,205,206,302,303 R305,306,402,403,405,406	16
RES-00-00610	RESISTOR	CARBON FILM 1/5WJ	10 OHM	R15	1
RES-00-00660	RESISTOR	CARBON FILM 1/5WJ	22 OHM	R133,134,143,144,233,234,243,244,333,334 R343,344,433,434,443,444	16
RES-00-00716	RESISTOR	CARBON FILM 1/5WJ	47 OHM	R43,44,45,46,53,54,55,56,136,146 R236,246,336,346,436,446	16
RES-00-00615	RESISTOR	CARBON FILM 1/5WJ	120 OHM	R150,250,350,450	4
RES-00-00756	RESISTOR	CARBON FILM 1/5WJ	820 OHM	R16	1
RES-00-00633	RESISTOR	CARBON FILM 1/5WJ	1K OHM	R31,42,52,92,107,127,128,131,135,141 R145,165,166,207,227,228,231,235,241,245 R265,266,307,331,335,341,345,365,366,407 R431,435,441,445,465,466	36
RES-00-00598	RESISTOR	CARBON FILM 1/5WJ	1.5K OHM	R151,251,351,451	4
RES-00-00644	RESISTOR	CARBON FILM 1/5WJ	2.7K OHM	R147,247,347,447	4
RES-00-00676	RESISTOR	CARBON FILM 1/5WJ	3.9K OHM	R12,137,237,337,437	5
RES-00-00702	RESISTOR	CARBON FILM 1/5WJ	4.7K OHM	R01,02,11	3
RES-00-00720	RESISTOR	CARBON FILM 1/5WJ	5.6K OHM	R132,142,232,242,332,342,432,442	8
RES-00-00751	RESISTOR	CARBON FILM 1/5WJ	8.2K OHM	R05	1
RES-00-00608	RESISTOR	CARBON FILM 1/5WJ	10K OHM	R13,14,61,122,152,222,252,322,352,422 R452	11
RES-00-00623	RESISTOR	CARBON FILM 1/5WJ	15K OHM	R34,35	2
RES-00-00658	RESISTOR	CARBON FILM 1/5WJ	22K OHM	R32,91	2
RES-00-00663	RESISTOR	CARBON FILM 1/5WJ	24K OHM	R21,22	2
RES-00-00687	RESISTOR	CARBON FILM 1/5WJ	33K OHM	R33	1
RES-00-00714	RESISTOR	CARBON FILM 1/5WJ	47K OHM	R90	1
RES-00-00730	RESISTOR	CARBON FILM 1/5WJ	56K OHM	R04,181,281,381,481	5
RES-00-00742	RESISTOR	CARBON FILM 1/5WJ	68K OHM	R25	1
RES-00-00604	RESISTOR	CARBON FILM 1/5WJ	100K OHM	R129,229	2
RES-00-00647	RESISTOR	CARBON FILM 1/5WJ	200K OHM	R169,269,369,469	4
RES-00-00664	RESISTOR	CARBON FILM 1/5WJ	270K OHM	R123,124,223,224,323,324,423,424	8
RES-00-00706	RESISTOR	CARBON FILM 1/5WJ	430K OHM	R63	1
RES-00-00053	RESISTOR	METAL FILM 1/2WJ	4.7 OHM	R161,261,361,461	4
RES-00-00018	RESISTOR	METAL FILM 1/2WJ	10 OHM	R03	1
RES-00-00038	RESISTOR	METAL FILM 1/2WJ	220 OHM	R41,51	2
ELC-00-00223	CAPACITOR	ELECTROLYTIC "SMS"	2.2/50V	C120,131,141,220,231,241,320,331,341,420 C431,441	12
ELC-00-00229	CAPACITOR	ELECTROLYTIC "SMS"	4.7/50V	C57,67	2
ELC-00-00195	CAPACITOR	ELECTROLYTIC "SMS"	10/16V	C800	1
ELC-00-00203	CAPACITOR	ELECTROLYTIC "SMS"	10/25V	C15	1
ELC-00-00198	CAPACITOR	ELECTROLYTIC "SMS"	47/16V	C14	1
ELC-00-00205	CAPACITOR	ELECTROLYTIC "SMS"	47/25V	C16	1

Electrical Parts List cont'd

PART NO.	NOMENCLATURE	DESCRIPTION	MFR PARTS	REF. NO	Q'TY
ELC-00-00199	CAPACITOR	ELECTROLYTIC "SMS"	100/16V	C11,12,13,171,181,271,371,471	8
ELC-00-00200	CAPACITOR	ELECTROLYTIC "SMS"	220/16V	C191,291	2
ELC-00-00201	CAPACITOR	ELECTROLYTIC "SMS"	330/16V	C192,292	2
ELC-00-00250	CAPACITOR	ELECTROLYTIC "SRE"	4.7/50V	C128,228	2
ELC-00-00641	CAPACITOR	ELECTROLYTIC "SRE"	22/16V	C102,103,123,124,202,203,223,224,302,303 C323,324,402,403,423,424	16
MYC-00-00020	CAPACITOR	MYLAR 5% 100V	102(M) J	C21	1
MYC-00-00031	CAPACITOR	MYLAR 5% 100V	222(M) J	C08	1
MYC-00-00038	CAPACITOR	MYLAR 5% 100V	473(M) J	C140,240,340,440	4
MYC-00-00094	CAPACITOR	MYLAR 5% 100V	104(M) J	C161,261,361,461	4
MYC-00-00085	CAPACITOR	MYLAR 5% 63V "TL"	105(M) J	C01,31,34	3
CEC-00-00077	CAPACITOR	CERAMIC DISK 50V "NPO"	10P F	C104,204,304,404	4
CEC-00-00090	CAPACITOR	CERAMIC DISK 50V "NPO"	22P F	C105,106,126,205,206,226,305,306,405,406	10
CEC-00-00108	CAPACITOR	CERAMIC DISK 50V "NPO"	68P F	C121,221,321,421	4
CEC-00-00073	CAPACITOR	CERAMIC DISK 50V "NPO"	100P F	C132,142,151,232,242,251,332,342,351,432 C442,451	12
CEC-00-00074	CAPACITOR	CERAMIC DISK 50V	102P F	C101,201,301,401	4
CEC-00-00102	CAPACITOR	CERAMIC DISK 50V	473P F	C32,33,53,63	4
CEC-00-00076	CAPACITOR	CERAMIC DISK 50V	104P F	C03,22,60,200,210,400,410	7
JUP-00-00043	JUMPER	0OHM JUMPER	6m/m	J33,52,53,54,55,116,130,139,140,141 J142,143,152,153,155,156,170,200,203,204 J211,212,214,216,217,218,219,225,229,230 J231,252,300	33
JUP-00-00044	JUMPER	0OHM JUMPER	7.5m/m	J25,26,27,28,29,30,31,32,40,41 J42,43,79,80,129,144,150,151,154,165 J172,201,222,322,323,331	26
JUP-00-00045	JUMPER	0OHM JUMPER	10m/m	J21,22,23,24,34,35,36,37,38,39 J56,57,58,64,65,114,115,132,147,148 J149,208,209,210,215,223,224,226,227	29
JUP-00-00052	JUMPER	0OHM JUMPER	11m/m	J126,127,167,168,205	5
JUP-00-00046	JUMPER	0OHM JUMPER	12.5m/m	J44,45,46,47,48,49,50,71,72,81 J82,89,90,91,92,93,94,109,110,112 J113,138,228	23
JUP-00-00059	JUMPER	0OHM JUMPER	13m/m	J251	1
JUP-00-00047	JUMPER	0OHM JUMPER	15m/m	J51,60,61,73,74,75,76,78,83,117 J157,159,213,321	14
JUP-00-00048	JUMPER	0OHM JUMPER	17.5m/m	J05,06,07,08,09,10,11,12,13,14 J15,16,17,18,19,20,62,63,84,85 J86,87,88,99,100,101,102,107,108,131 J160,169,250	33
JUP-00-00074	JUMPER	0OHM JUMPER	19m/m	J120,179	2
JUP-00-00049	JUMPER	0OHM JUMPER	20m/m	J77,97,98,103,104,111,118,166,202,206 J207,310,320,330	14
JUP-00-00075	JUMPER	0OHM JUMPER	22m/m	J66,67,119,121,122,123,124,125,128,133 J134,135,136,137,158,161,162,163,164,171 J173,174,175,176,177,178	26
JUP-00-00076	JUMPER	0OHM JUMPER	23m/m	J70	1
JUP-00-00042	JUMPER	0OHM JUMPER	25m/m	J59	1
ICO-00-00022	I.C	P.W.M	TL494CN	U01	1
ICO-00-00112	I.C	DUAL OP AMP "SIP-08P"	NJM2068LD	U101,110,111,301,310	5
FET-00-00023	F.E.T	N-CH MOSFET	FQP50N06	Q43,44,45,46,53,54,55,56	8
TRS-00-00188	TRANSISTOR	AUDIO POWER NPN	TIP35C	Q135,235,335,435	4
TRS-00-00207	TRANSISTOR	AUDIO POWER PNP	TIP36C	Q145,245,345,445	4
TRS-00-00111	TRANSISTOR	SMALL SIGNAL NPN	KTC3200GR	Q140,240,340,440	4
DIO-00-00152	DIODE	FAST RECOVERY	YG225D2	D41,42	2
DIO-00-00048	DIODE	RECTIFIER	1N5404	D01	1
DIO-00-00206	DIODE	ZENER 1W 15V	1N4744A	D191,291	2
RES-00-01046	RESISTOR	MOR/S 2WJ	100 OHM (3.8x11m/m)	R30	1
RES-00-01264	RESISTOR	MOR/S 2WJ	150 OHM (3.8x11m/m)	R291	1
RES-00-01265	RESISTOR	MOR/S 2WJ	150 OHM (3.8x11m/m)	R191	1
RES-00-01041	RESISTOR	MOR/S 2WJ	680 OHM (3.8x11m/m)	R162,262,362,462	4
RES-00-00895	RESISTOR	WIRE WOUND 3WJ	0.1 OHM (5.5x15m/m)	R160,170,260,270,360,370,460,470	8

Electrical Parts List cont'd

PART NO.	NOMENCLATURE	DESCRIPTION	MFR PARTS	REF. NO	Q'TY
THS-00-00013	THERMISTOR	NTC RESISTOR	FTD5-350	TH01	1
ELC-00-00234	CAPACITOR	ELECTROLYTIC "SMS"	470/50V (12.5x20m/m)	C51,61	2
ELC-00-00727	CAPACITOR	ELECTROLYTIC "WL"	2200/25V (16x25m/m)	C04,05,06	3
ELC-00-00714	CAPACITOR	ELECTROLYTIC "HC/DL"	4700/50V (25x30m/m)	C52,62	2
COR-TF-00405	CORE		44PHI MAGNETICS	T01 , 4(0.7x15):11(0.7x4):8(0.7x1):8(0.7x1)	1
COI-00-00093	INDUCTOR	DRUM COIL	CL-510	L01,02	2
COI-00-00028	INDUCTOR	BAR COIL	CL-310	L03	1
SWI-00-00024	SWITCH	SLIDE SWITCH	JSS-2219	SW102,302	2
JAC-00-00043	RCA JACK	GOLD PLATED	DJB-554A	RCA101	1
JAC-00-00042	RCA JACK	GOLD PLATED	DJB-562D	RCA301	1
TER-00-00030	TERMINAL	GOLD PLATED	TM0006-01 (3P)	TER01	1
TER-00-00021	TERMINAL	GOLD PLATED 8P	WT-9519	TER02	1
JUP-00-00005	JUMPER	METAL JUMPER	55m/m	BJ01,02,03,07	4
JUP-00-00003	JUMPER	METAL JUMPER	35m/m	BJ04,06,09	3
JUP-00-00001	JUMPER	METAL JUMPER	20m/m	BJ08	1
HOD-00-00011	FUSE HOLDER		WF-9604	Fh01	1
CON-00-00002	WAFER		LWL0640-2P	CLIP	1
CON-00-00033	WAFER		LWL0640-3P	1ST POWER,2ND POWER	2
CON-00-00128	WAFER		LAD1140-04PBK	HI101,301	2
WIR-00-00208	WIRE ASS'Y	300m/m	CHD1140-04PBK	ACCESSORY	2
WIR-00-00015	WIRE	AWG #22 BK 3.2PHI RING LUG	60m/m	W2	1
WIR-00-00018	WIRE	AWG #22 BK 3.2PHI RING LUG	120m/m	W1	1
HED-00-00115	HEADER PIN SOCKET	TM2501-DG-14P	14P	CON101-1,301-1	2
TUB-00-00008	TEFLON TUBE	0.7PHI	10m/m	TH01,Q140,240,340,440	6
FUS-AT-00006	AUTO FUSE		30A	SET2+ACCESSORY2	4
ICO-00-00113	I.C	DUAL OP AMP "SOP-08"	NJM2068M	U102,103,104,105,302,303,304,305,306,307	10
RES-08-00239	RESISTOR	SMD 0805 1/10WF	9.31K OHM	R257,457	2
RES-08-00022	RESISTOR	SMD 0805 1/10WF	15K OHM	R155,255,355,455	4
RES-08-00088	RESISTOR	SMD 0805 1/10WF	47K OHM	R256,456	2
RES-08-00117	RESISTOR	SMD 0805 1/10WF	91K OHM	R156,356	2
RES-08-00225	RESISTOR	SMD 0805 1/10WJ	820 OHM	R108,208,308,408	4
RES-08-00148	RESISTOR	SMD 0805 1/10WJ	1K OHM	R391,392,491,492	4
RES-08-00201	RESISTOR	SMD 0805 1/10WJ	5.6K OHM	R113,115,213,215,313,315,413,415	8
RES-08-00210	RESISTOR	SMD 0805 1/10WJ	6.8K OHM	R396,496	2
RES-08-00132	RESISTOR	SMD 0805 1/10WJ	10K OHM	R110,111,112,114,210,211,212,214,310,311	16
				R312,314,410,411,412,414	
RES-08-00187	RESISTOR	SMD 0805 1/10WJ	39K OHM	R393,493	2
RES-08-00141	RESISTOR	SMD 0805 1/10WJ	150K OHM	R397,497	2
CEC-08-00023	CAPACITOR	SMD 0805	22pF	C156,356	2
CEC-08-00037	CAPACITOR	SMD 0805	39pF	C256,456	2
CEC-08-00042	CAPACITOR	SMD 0805	47pF	C111,211,311,393,411,493	6
CEC-08-00040	CAPACITOR	SMD 0805	473pF	C195,196,295,296,395,396,495,496	8
MYC-00-00157	CAPACITOR	MYLAR 5% 63V "TL"	823J	C113,115,213,215,313,315,413,415	8
MYC-00-00083	CAPACITOR	MYLAR 5% 63V "TL"	104J	C391,392,491,492	4
ELC-00-00241	CAPACITOR	ELECTROLYTIC"SRE"	10/16V	C125,155,225,255,325,355,425,455	8
SWI-00-00033	SWITCH	SLIDE SWITCH	JSS2319	SW101,301	2
VOL-00-00349	VOLUME	V9M(7x5) G3(PH2R)N 15S	3B20KBx2	VR101,301,303	3
VOL-00-00351	VOLUME	V9M(7x5) G(4R)(PH2R)N 15S	15C50KCx4	VR102,302	2
HED-00-00249	PIN CONNECTOR	TM2008-D76G-14P	14P	CON101,301	2
ICO-00-00095	I.C	COMPARATOR DIP-8P	KIA393P	U90	1
RES-00-00437	RESISTOR	METAL FILM 1/5WF	1K OHM	R97	1
RES-00-00402	RESISTOR	METAL FILM 1/5WF	10K OHM	R95	1
RES-00-00550	RESISTOR	METAL FILM 1/5WF	51K OHM	R96	1
RES-00-00556	RESISTOR	METAL FILM 1/5WF	56K OHM	R94	1
RES-00-00573	RESISTOR	METAL FILM 1/5WF	68K OHM	R93	1
RES-00-00635	RESISTOR	CARBON FILM 1/5WJ	1M OHM	R98	1
RES-00-00029	RESISTOR	METAL FILM 1/2WJ	1K OHM	R192,292	2
CEC-00-00005	CAPACITOR	CERAMIC TUBULAR 50V	103P	C91,92,93	3
CEC-00-00006	CAPACITOR	CERAMIC TUBULAR 50V	104P	C90	1
DIO-00-00321	LED	BLUE 3PHI	MS-L330CBHSK	LED1,2,3	3
CON-00-00139	WAFER		LAL0640-2P	CLIP	1
CON-00-00140	WAFER		LAL0640-3P	1ST POWER,2ND POWER	2
WIR-AS-00220	WIRE ASS'Y	BK,RED	CHL0640-2P(300m/m)	CLIP	1
WIR-AS-00218	WIRE ASS'Y	BK,RED,GREEN	CHL0640-3P(300m/m)	1ST POWER	1
WIR-AS-00219	WIRE ASS'Y	BK,YELLOW,GREEN	CHL0640-3P(300m/m)	2ND POWER	1


Reference 7541a Electrical Parts List Addendum

The following chart below represents the only electrical parts differences in 7540a and 7541a models:


MODEL	PART NAME	PART NUMBER	SPEC	DESIGNATOR
1	REF 7540a	RESISTOR	RES-00-00586	1/5WF 820 OHM
	REF 7541a	RESISTOR	RES-00-00437	1/5WF 1K OHM
2	REF 7540a	RESISTOR	RES-00-00417	1/5WF 13.7K OHM
	REF 7541a	RESISTOR	RES-00-00508	1/5WF 33K OHM
3	REF 7540a	RESISTOR	RES-08-00225	SMD 0805 1/10WJ 820 OHM
	REF 7541a	RESISTOR	RES-08-00242	SMD 0805 1/10WF 240 OHM

Integrated Circuit Diagrams

U01 (TL494CN) P.W.M IC

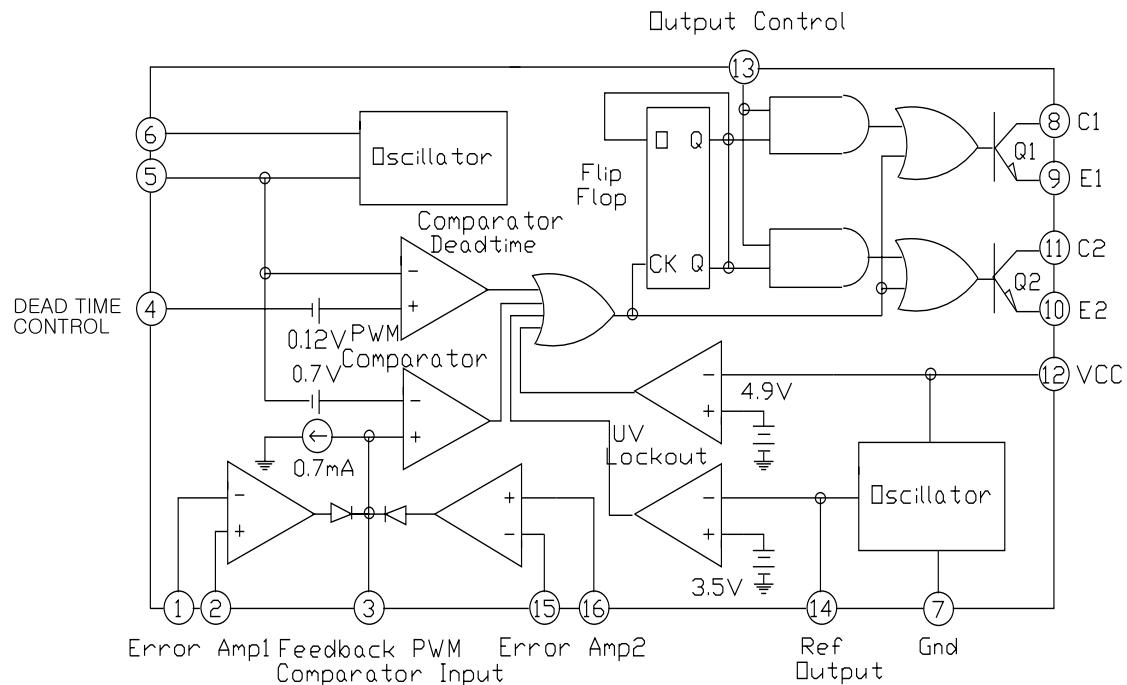


U101,110,111,301,310 (NJM2068LD) DUAL OP AMP

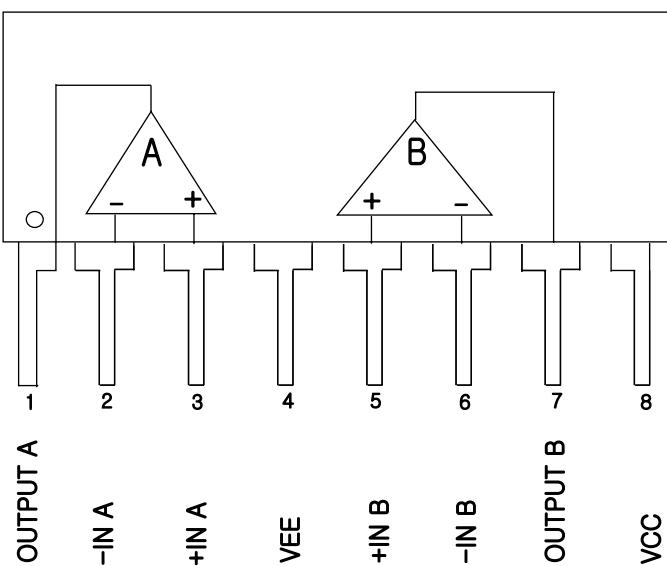






Integrated Circuit Diagrams

PAS326-01

U102,103,104,105,302,303,304,305,306,307 (NJM2068M) DUAL OP AMP

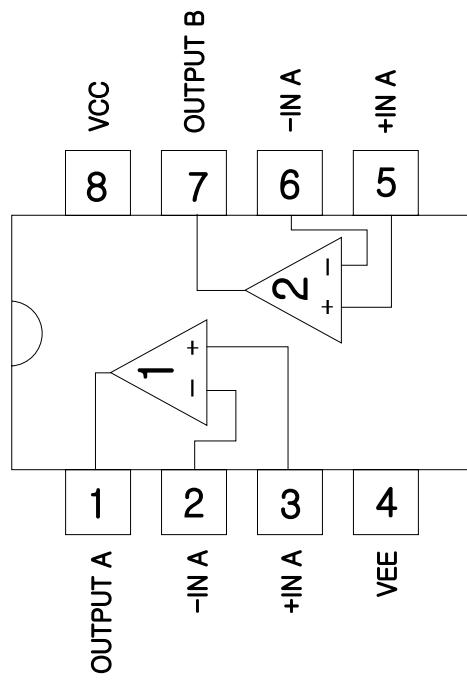



Transistor Diagrams

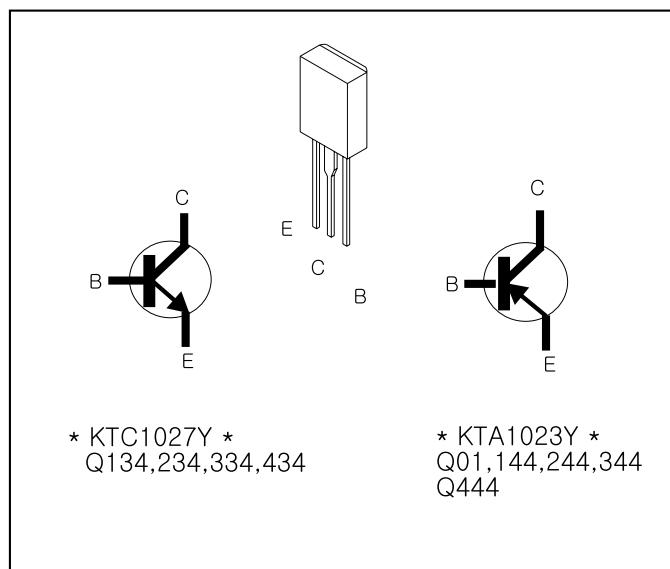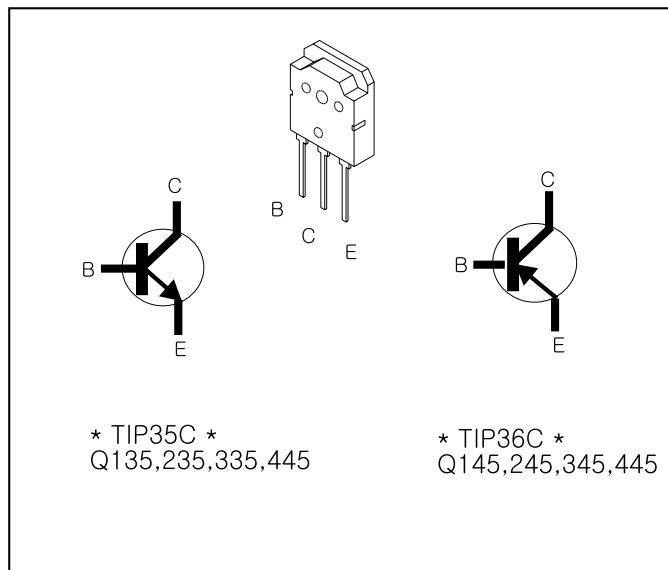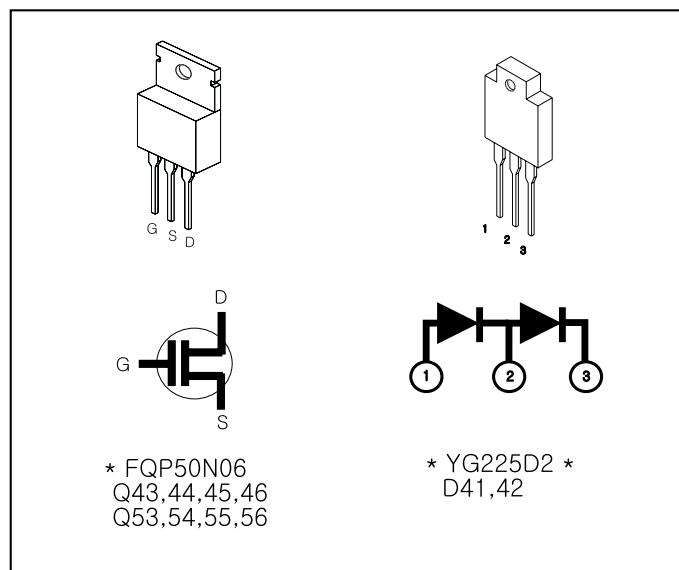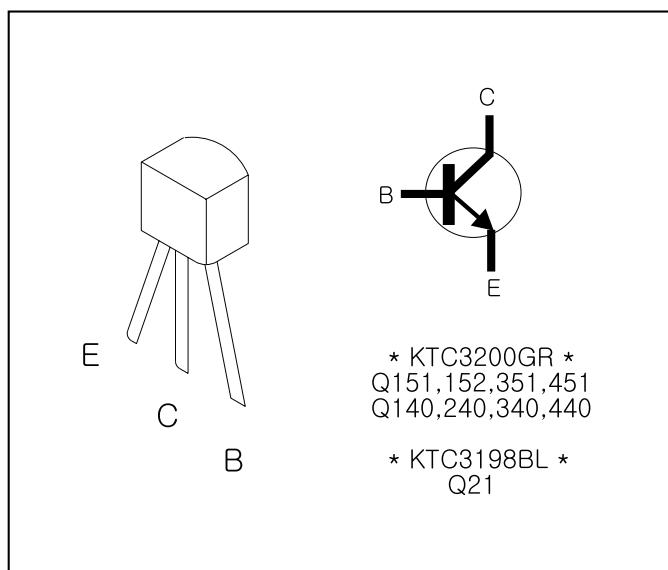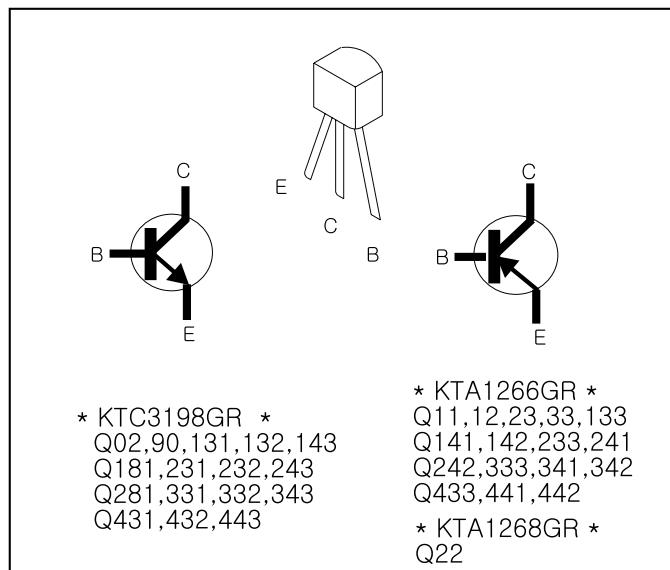

Power Supply (Sheet 1)

A

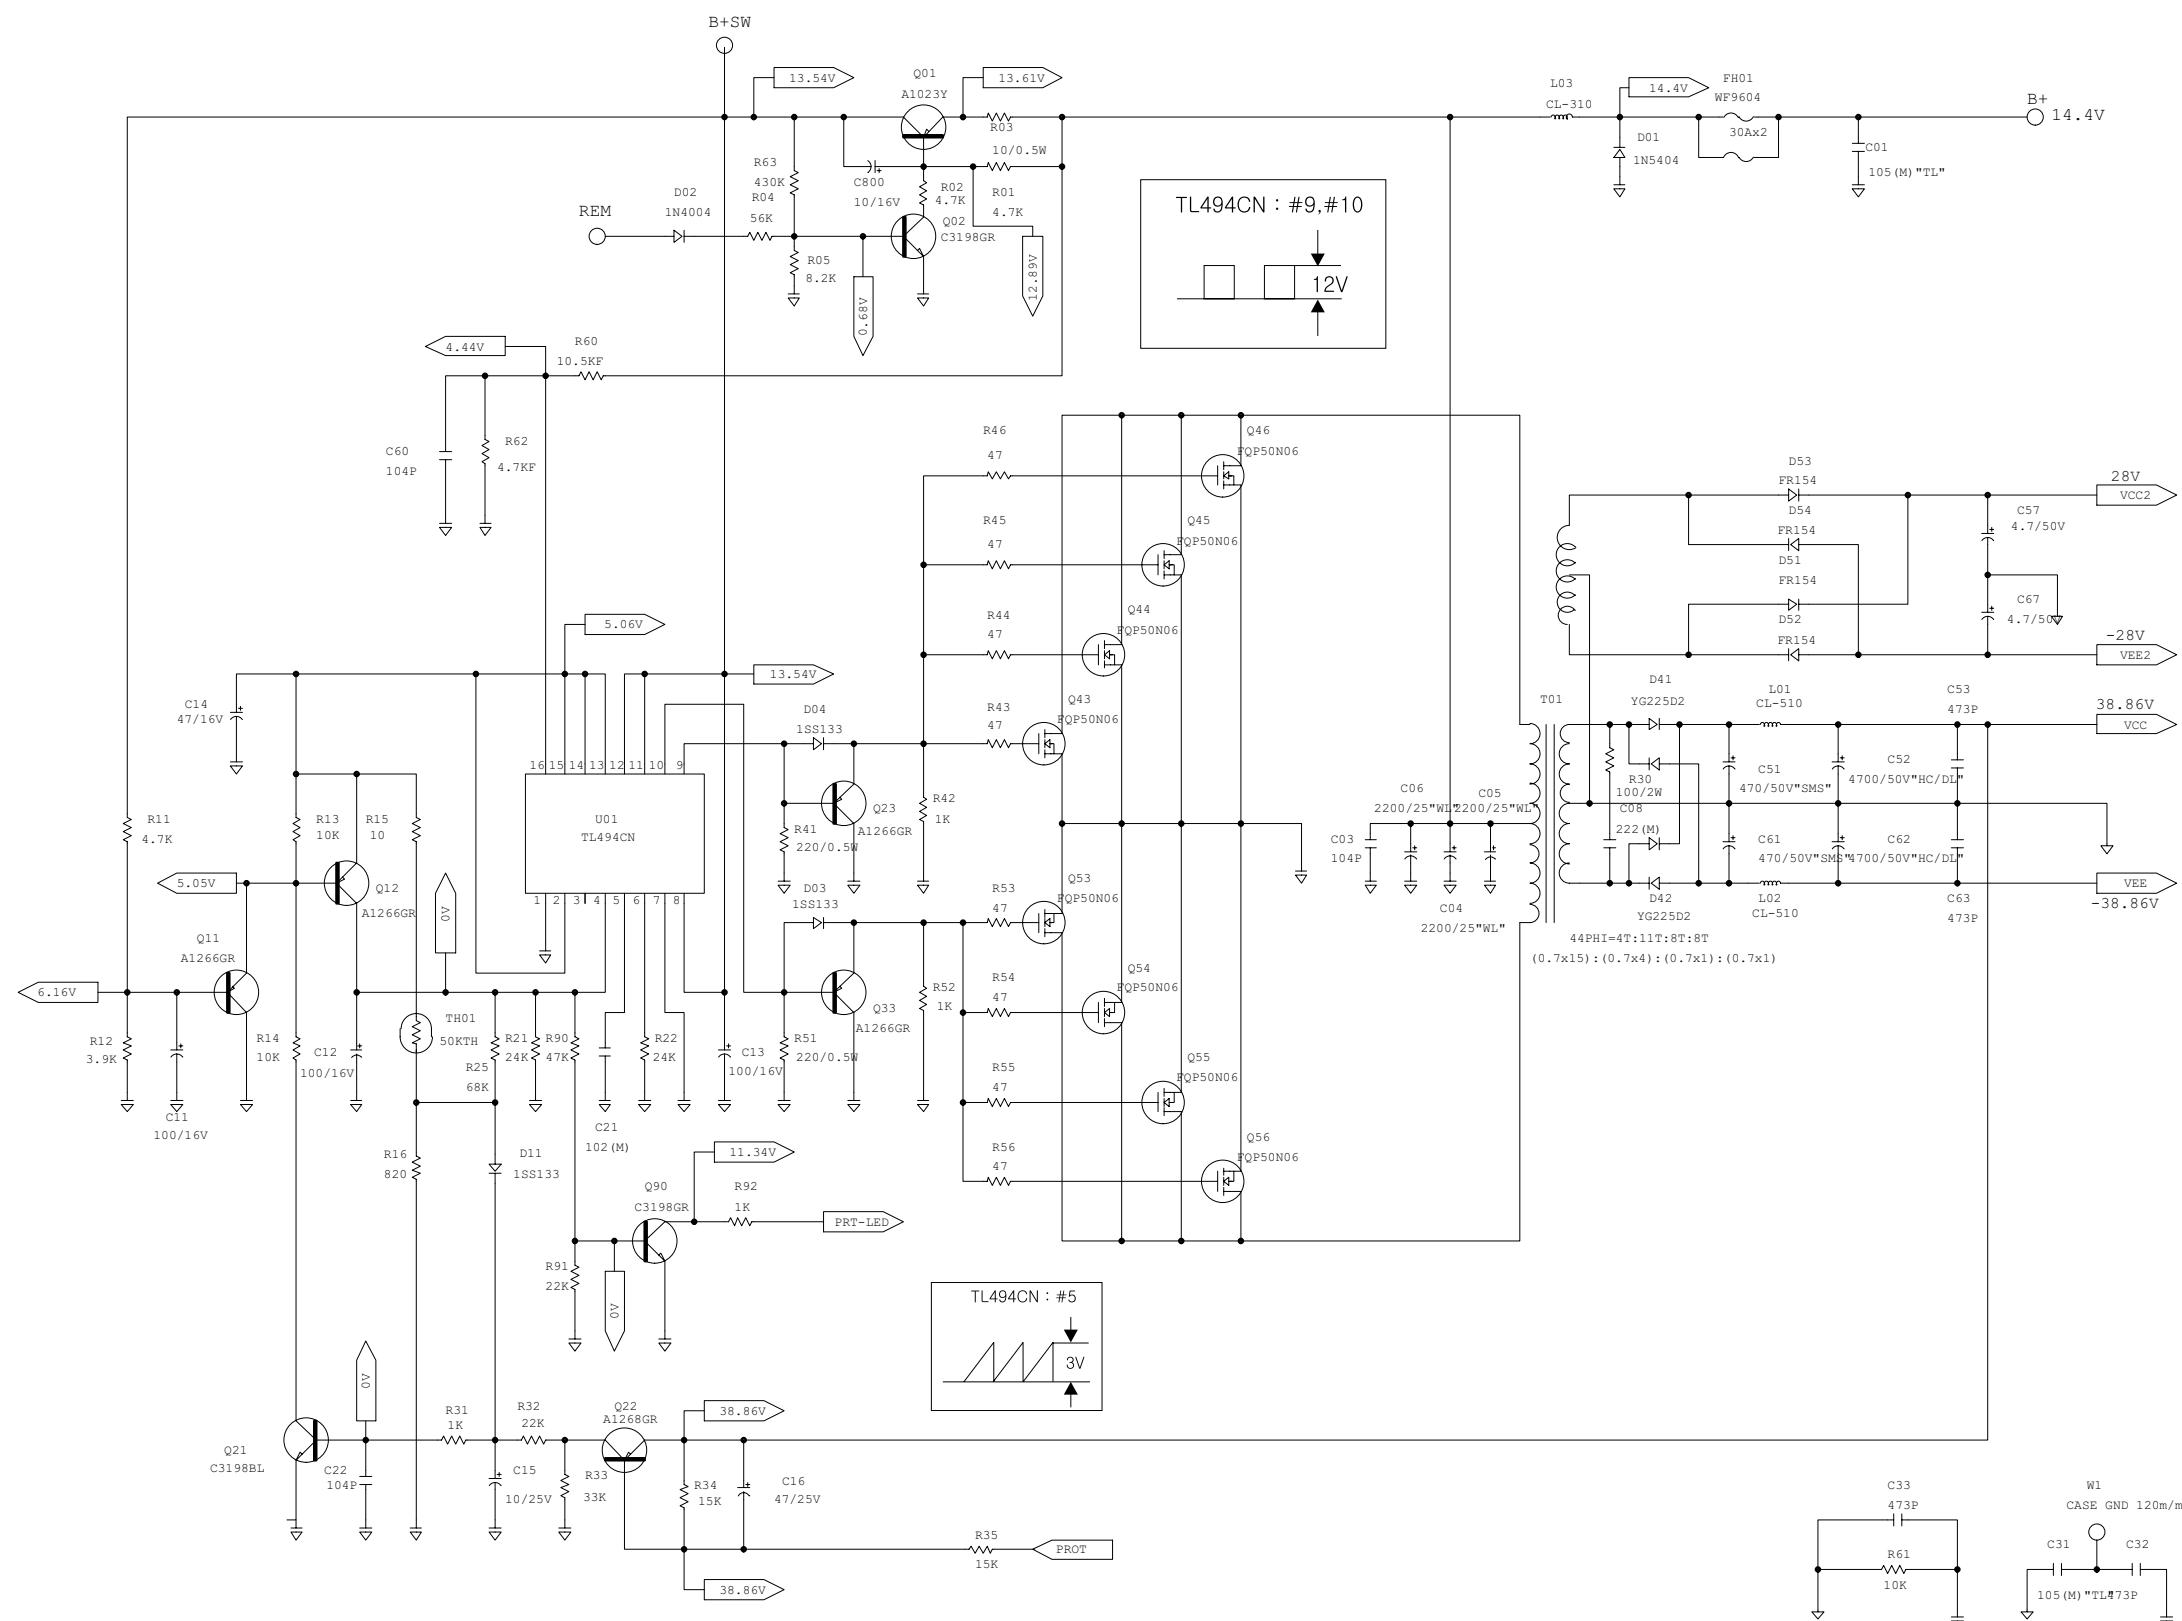

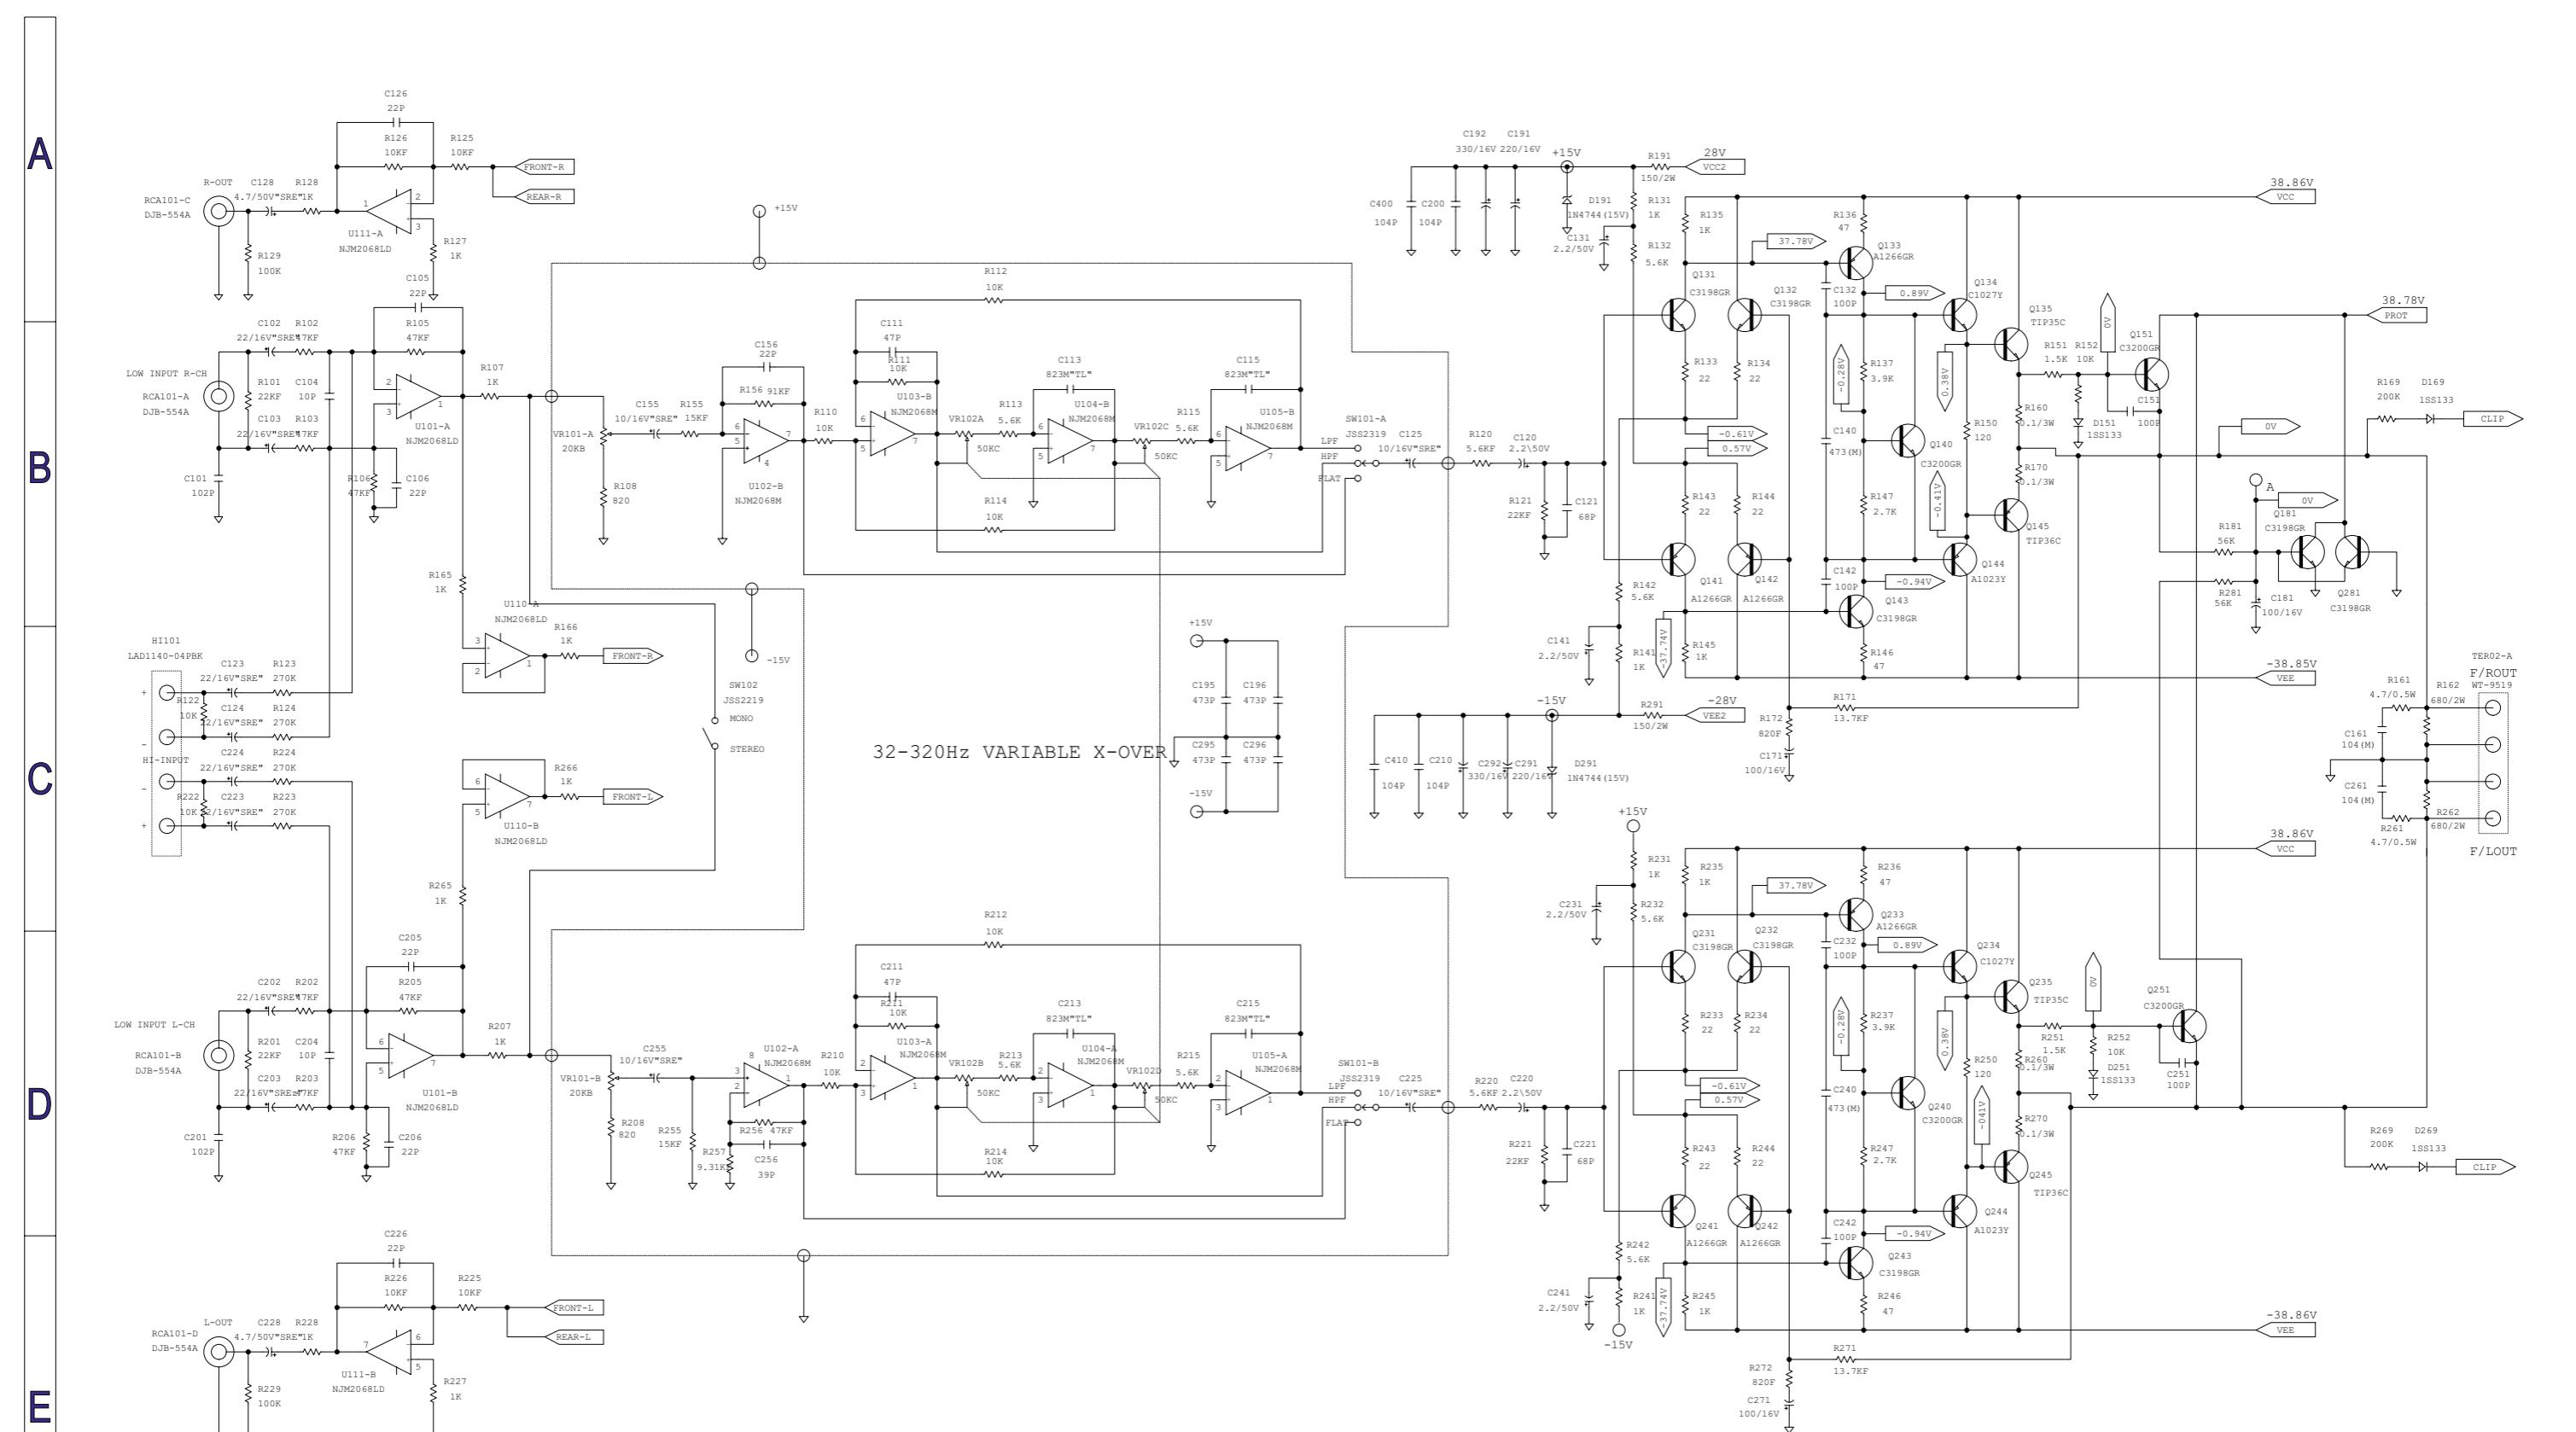

Power Amplifier (Sheet 3)


A

B



C

D


E

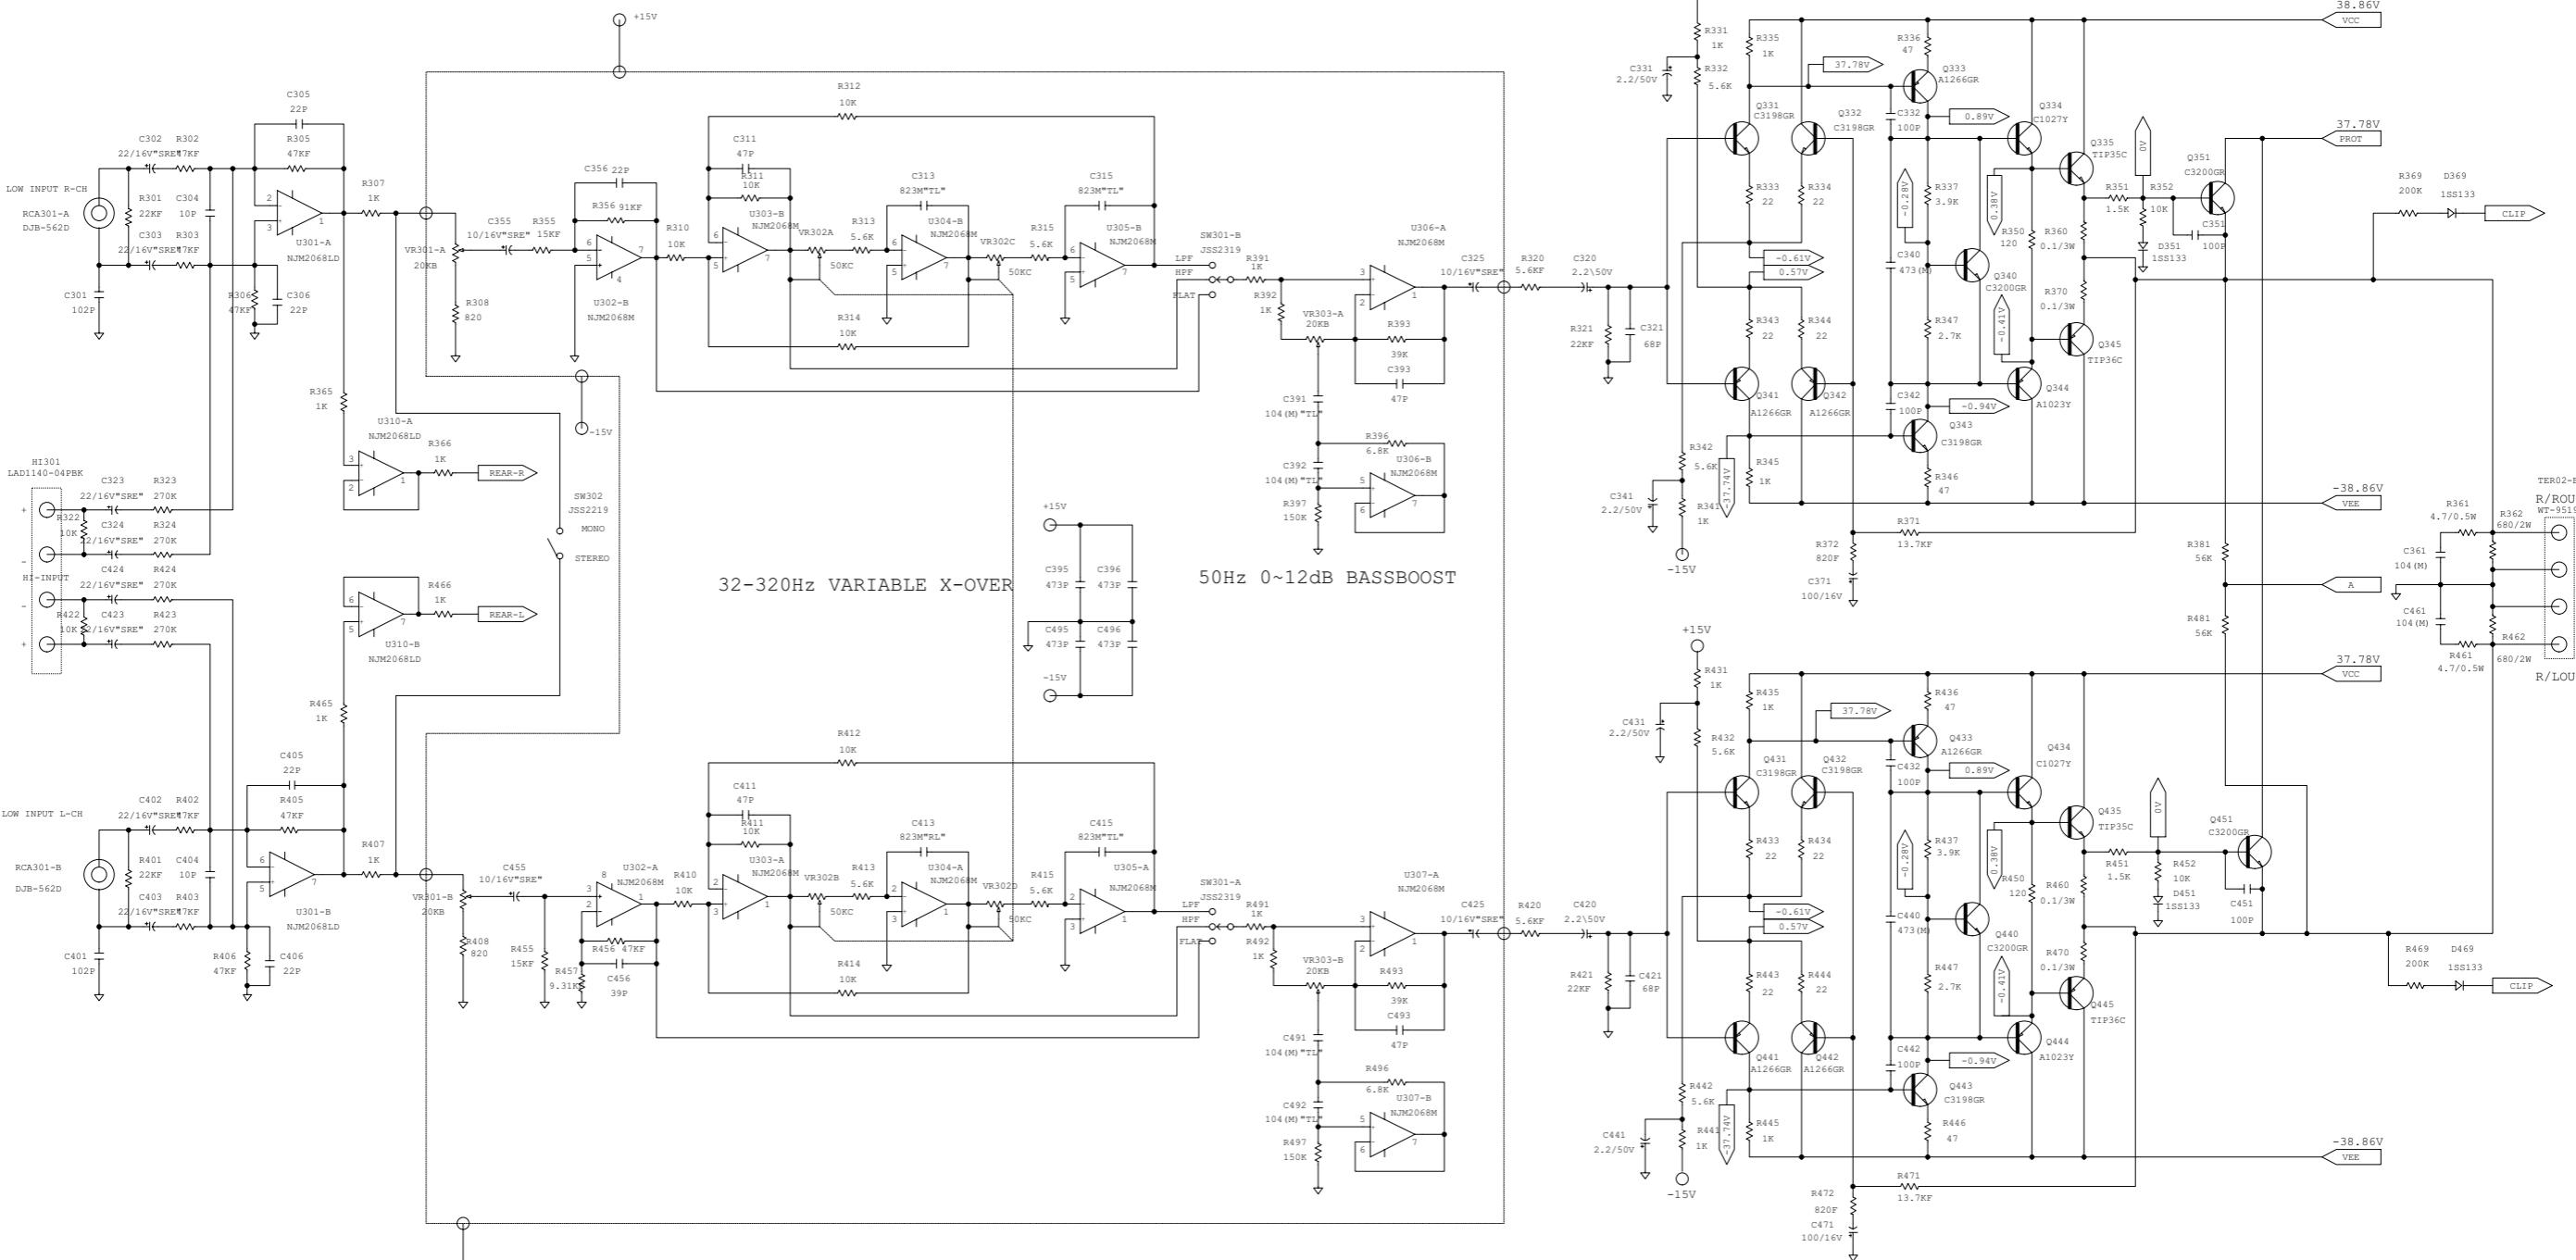


REF 7541a SCHEMATIC PAGE 1

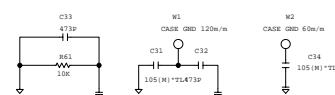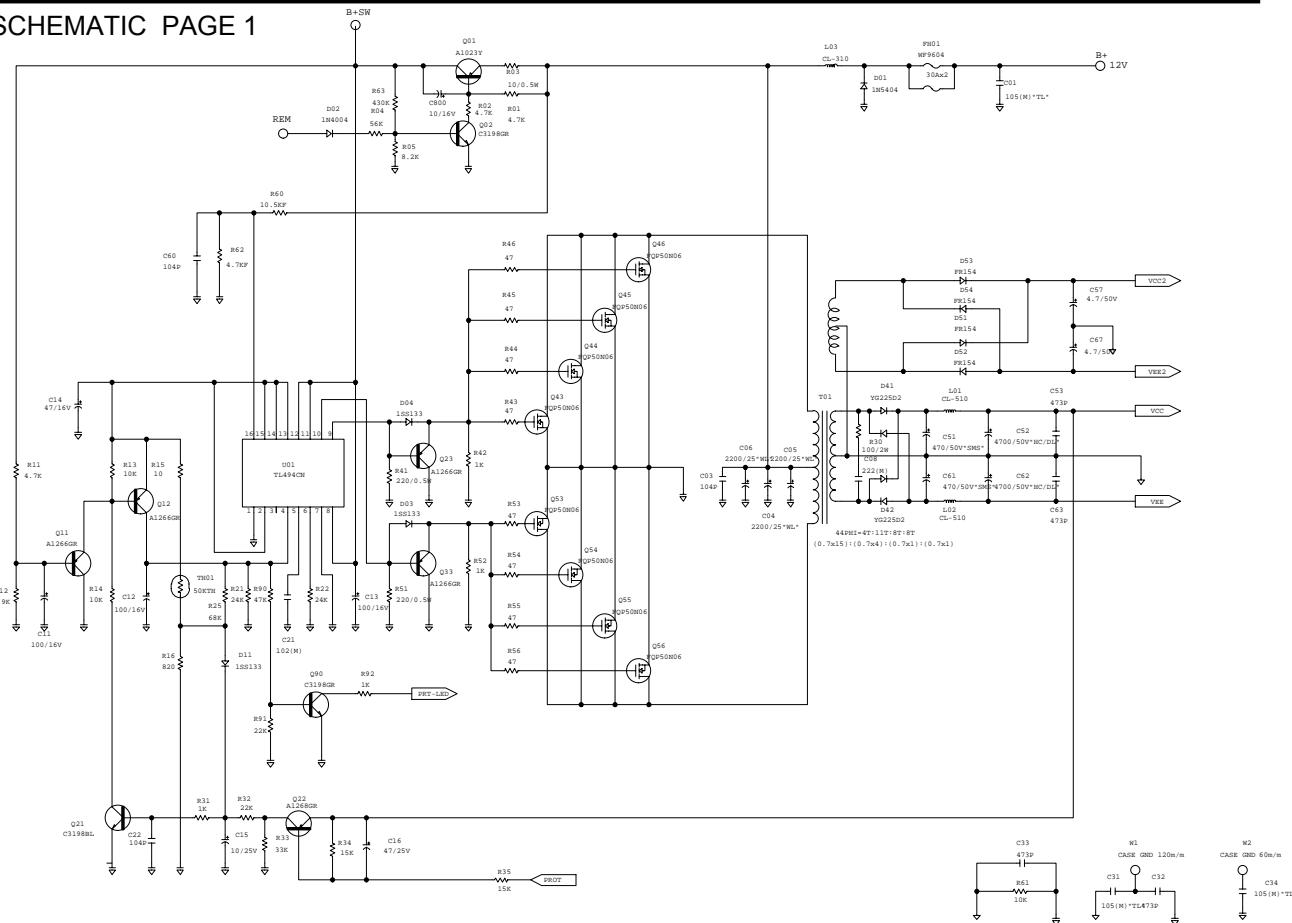

REF 7541a SCHEMATIC PAGE 2

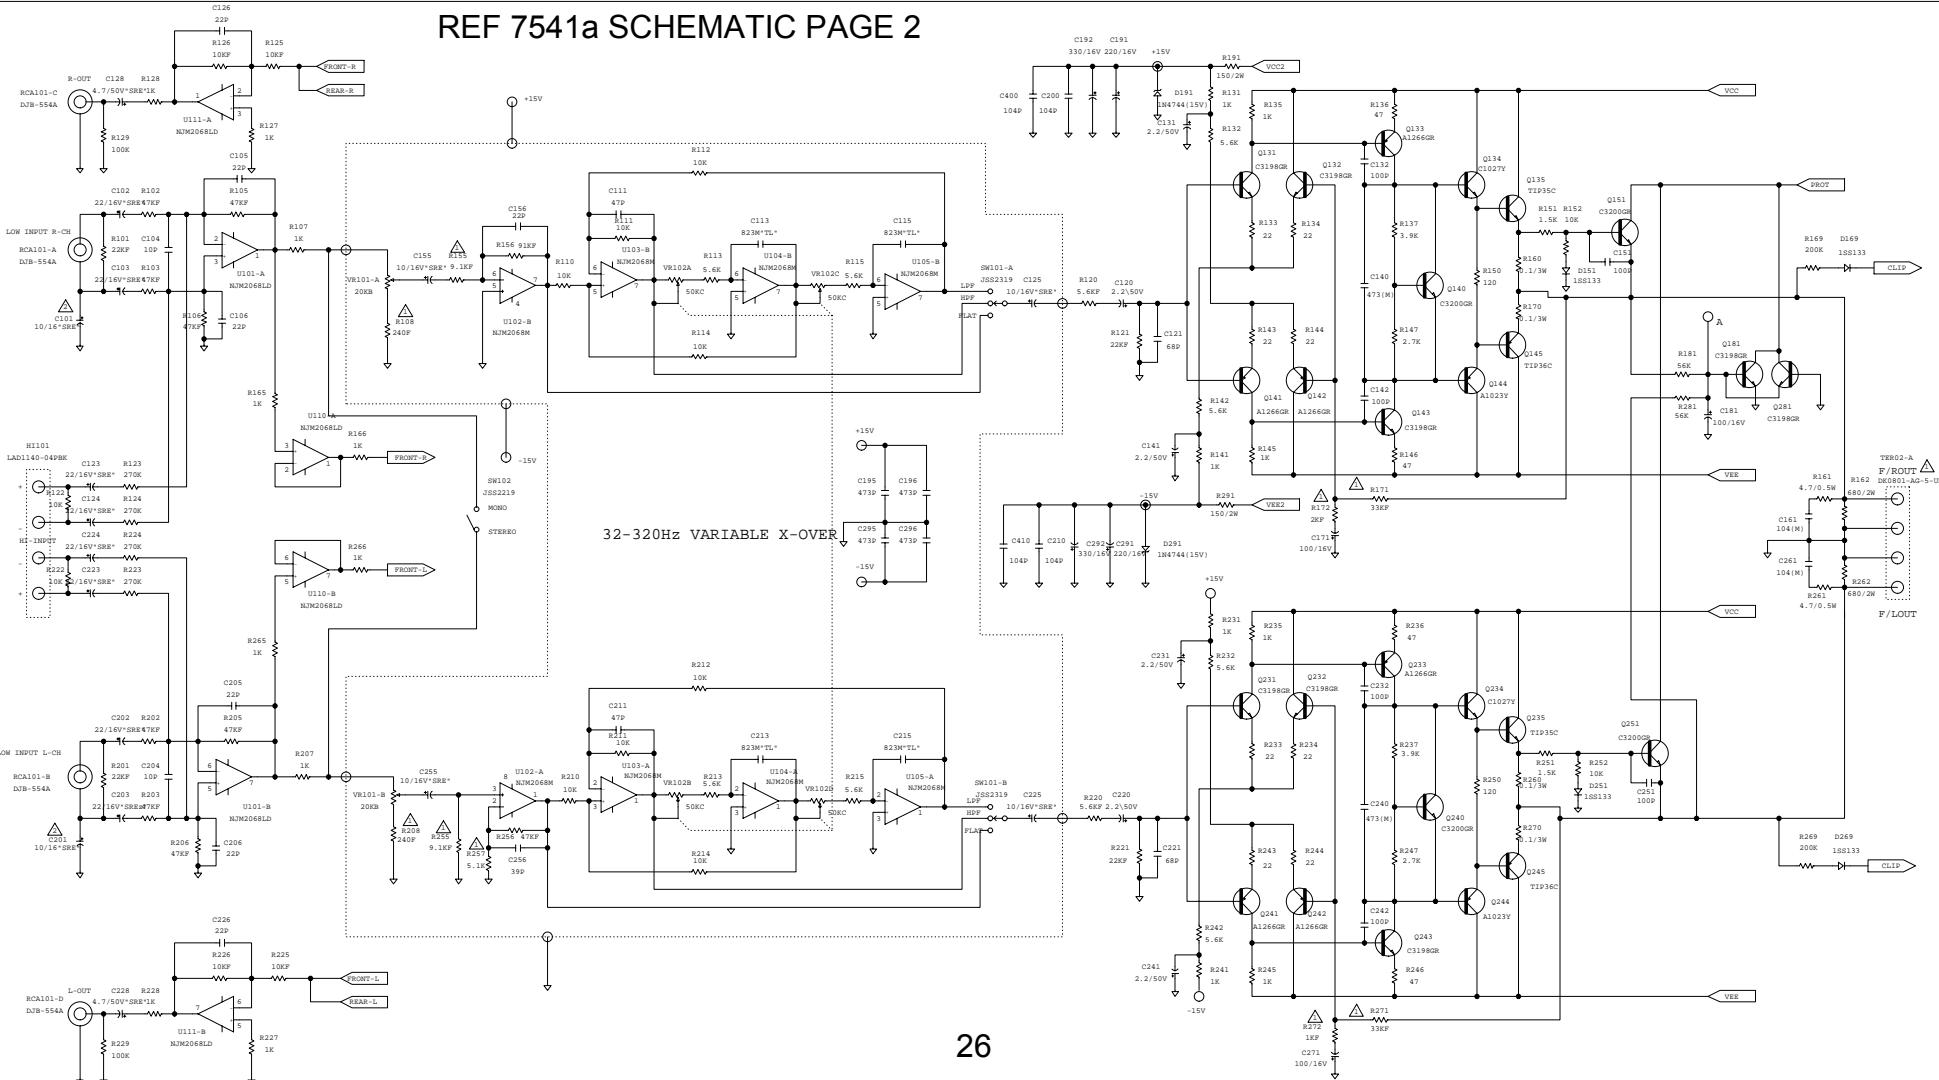

REF 7541a SCHEMATIC PAGE 3

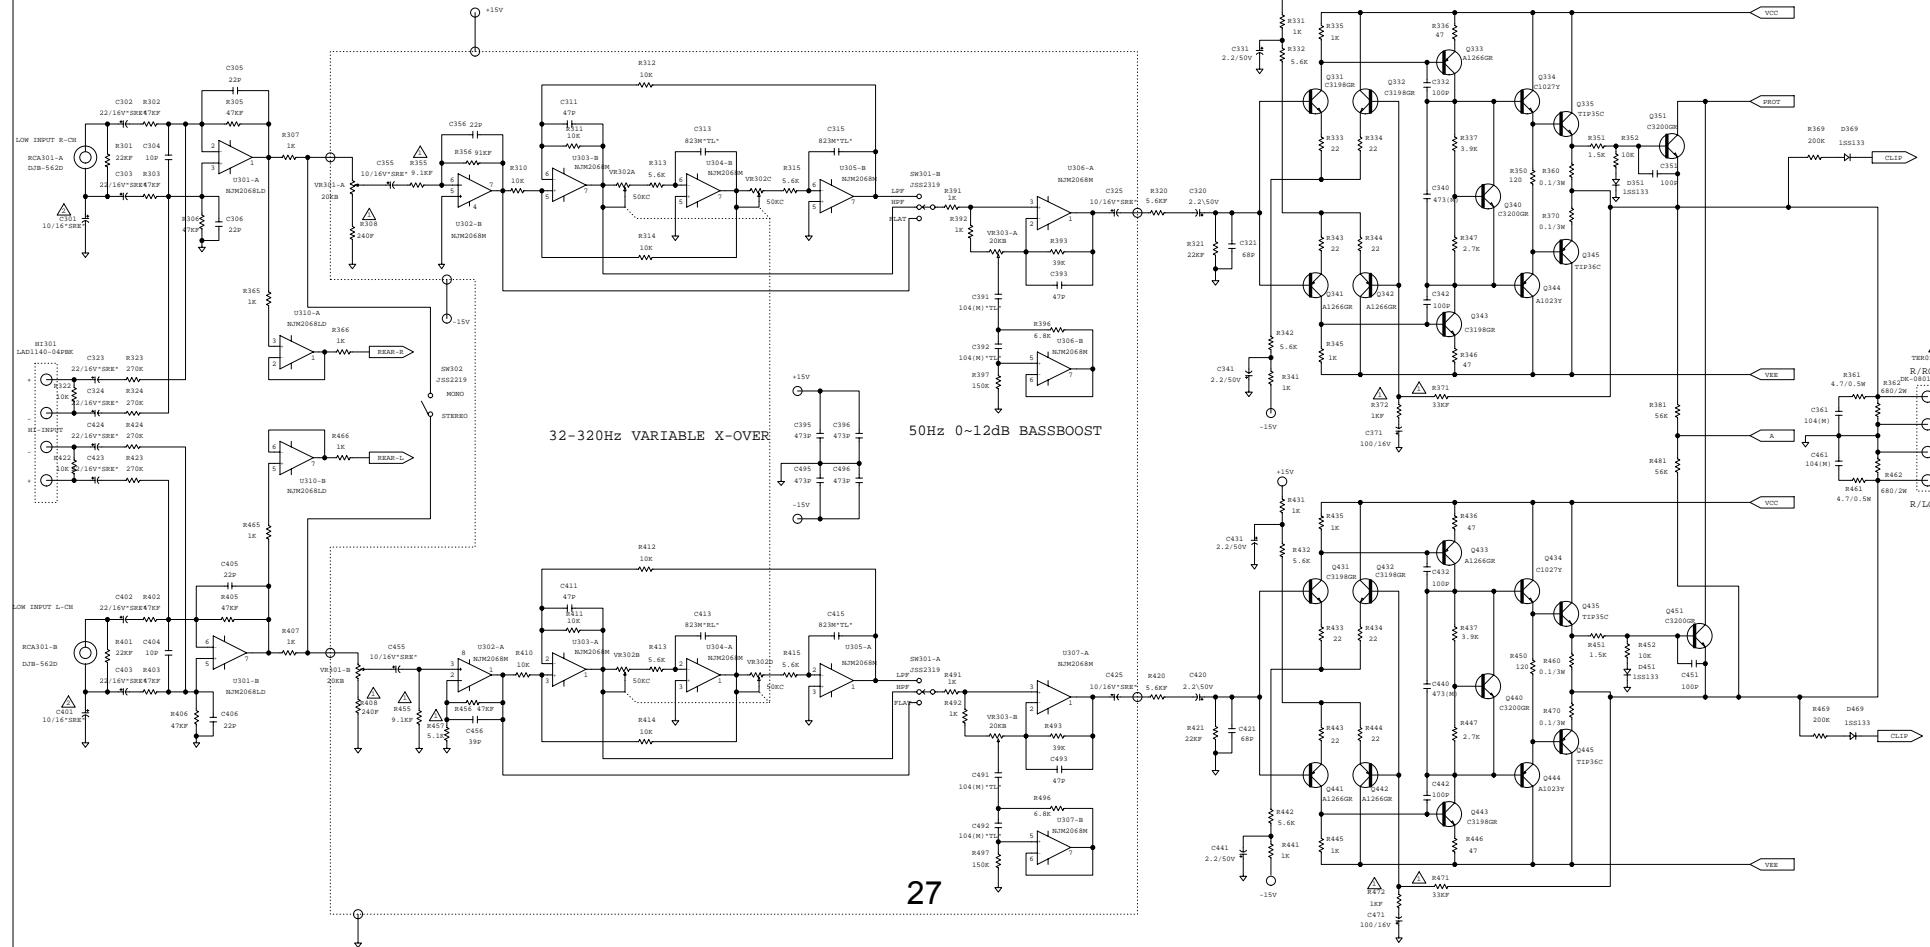

Packing Exploded View

